


CIM 2XX Modbus module

Installation and operating instructions

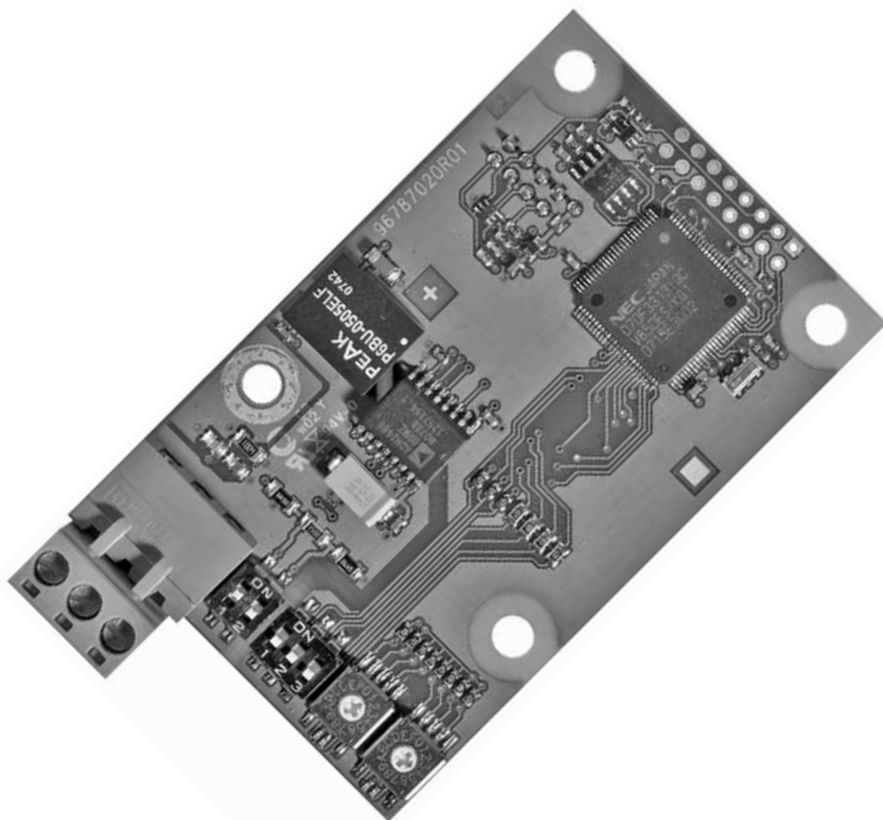

English (GB) Installation and operating instructions

Original installation and operating instructions.

CONTENTS

	Page
1. Symbols used in this document	2
2. Applications	2
2.1 CIM 2XX Modbus module	3
3. Installation	3
3.1 Connecting the Modbus	3
3.2 Setting the Modbus address	4
3.3 Termination resistor	5
3.4 Setting the parity	5
3.5 Setting the Modbus transmission speed	6
4. LEDs	6
5. Fault finding	7
6. Technical data	9
7. Service	9
7.1 Service documentation	9
8. Disposal	9

2. Applications

The CIM 2XX Modbus module (CIM = Communication Interface Module), which is a Modbus slave, enables data transmission between a Modbus RTU network and a Grundfos product.

The CIM 2XX is fitted in the product to be communicated with or in a CIU 2XX unit (CIU = Communication Interface Unit).

Retrofitting of the CIM 2XX is described in the installation and operating instructions of the Grundfos product.

Further information

For further information about configuration and functionality of the CIM 2XX, see the specific functional profile on the CD-ROM supplied with the product.

Warning



Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.

1. Symbols used in this document



Warning

If these safety instructions are not observed, it may result in personal injury!

Caution

If these safety instructions are not observed, it may result in malfunction or damage to the equipment!

Note

Notes or instructions that make the job easier and ensure safe operation.

2.1 CIM 2XX Modbus module

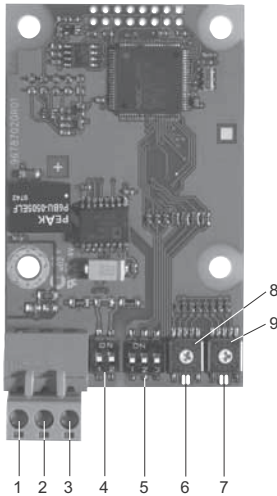


Fig. 1 CIM 2XX Modbus module

Pos.	Designation	Description
1	D1	Modbus terminal D1 (positive data signal)
2	D0	Modbus terminal D0 (negative data signal)
3	Common/GND	Modbus terminal Common/GND
4	SW1/SW2	On/off switches for termination resistor
5	SW3/SW4/SW5	Switches for selection of Modbus parity and transmission speed
6	LED1	Red/green status LED for Modbus communication
7	LED2	Red/green status LED for internal communication between the CIM 2XX and the Grundfos product
8	SW6	Hex switch for setting the Modbus address (four most significant bits)
9	SW7	Hex switch for setting the Modbus address (four least significant bits)

3. Installation



Warning
The CIM 2XX must only be connected to SELV or SELV-E circuits.

3.1 Connecting the Modbus

A screened, twisted-pair cable must be used. The cable screen must be connected to protective earth at both ends.

Recommended connection

Modbus terminal	Colour code	Data signal
D1	Yellow	Positive
D0	Brown	Negative
Common/GND	Grey	Common/GND

Fitting the cable

Procedure:

See fig. 3.

1. Connect the yellow conductor(s) to terminal D1 (pos. 1).
2. Connect the brown conductor(s) to terminal D0 (pos. 2).
3. Connect the grey conductor(s) to terminal Common/GND (pos. 3).
4. Connect the cable screens to earth via the earth clamp (pos. 4).

Note It is important to connect the screen to earth through the earth clamp and to connect the screen to earth in all units connected to the bus line.

Maximum cable length, see section [3.3 Termination resistor](#).

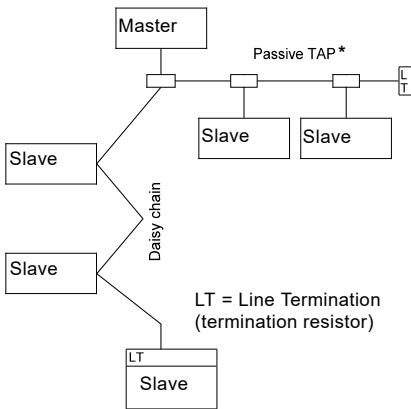


Fig. 2 Example of Modbus network with termination

* Hardware unit enabling connection to the Modbus network.

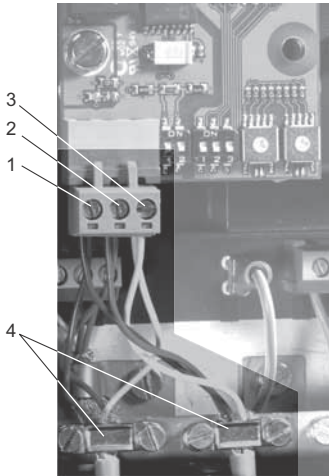


Fig. 3 Example of Modbus connection as daisy chain

Pos.	Description
1	Modbus terminal D1
2	Modbus terminal D0
3	Modbus terminal Common/GND
4	Earth clamp

3.2 Setting the Modbus address

The CIM 2XX Modbus module has two hexadecimal rotary switches for setting the Modbus address. The two switches are used for setting the four most significant bits (SW6) and the four least significant bits (SW7), respectively. See fig. 4.

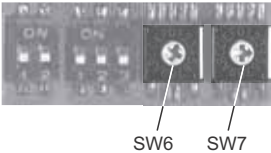


Fig. 4 Setting the Modbus address

The table below shows examples of Modbus address settings.

For a complete overview of Modbus addresses, see the table on page 10.

Note The Modbus address must be set decimally from 1 to 247.

Modbus address	SW6	SW7
8	0	8
20	1	4
31	1	F
247	F	7

3.3 Termination resistor

The termination resistor is fitted on the CIM 2XX Modbus module and has a value of 150 Ω. The CIM 2XX has a DIP switch with two switches (SW1 and SW2) for cutting the termination resistor in and out. Figure 5 shows the DIP switches in cut-out state.

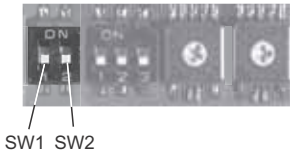


Fig. 5 Cutting the termination resistor in and out

DIP switch settings

Status	SW1	SW2
Cut-in	ON	ON
	OFF	OFF
Cut-out	ON	OFF
	OFF	ON

Cable length

bits/s	Maximum cable length	
	Terminated cable	Unterminated cable
	[m/ft]	[m/ft]
1200-9600	1200/4000	1200/4000
19200	1200/4000	500/1700
38400	1200/4000	250/800

To ensure a stable and reliable communication, it is important that only the termination resistor of the first and last unit in the Modbus network is cut in. See fig. 2.

Note

3.4 Setting the parity

The parity can be set either manually by using SW3 or via software-defined settings.

Manual setting of parity and stop bit

Default byte format (11 bits):

- 1 start bit
- 8 data bits (least significant bit sent first)
- 1 parity bit (even parity)
- 1 stop bit.

See fig. 6.

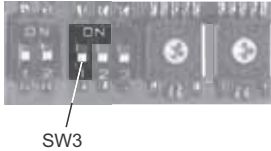


Fig. 6 Parity

DIP switch settings

Parity	SW3
Even parity, 1 stop bit [default]	OFF
No parity, 2 stop bits	ON

Software-defined parity and stop bit

When SW4 and SW5 are set to "software-defined", the value in holding registers at addresses 00009 and 00010 will override the setting of SW3. See figs 6 and 7.

Software-defined parity	Set register value 00009
No parity [default]	0
Even parity	1
Odd parity	2

Software-defined stop bit	Set register value 00010
1 stop bit [default]	1
2 stop bits	2

Before the parity and stop bit can be set via software-defined settings, SW4 and SW5 must be set to ON.

Note

TM04 1701 0908

TM04 1709 0908

3.5 Setting the Modbus transmission speed

The transmission speed must be set correctly before the CIM 2XX Modbus module is ready to communicate with the Modbus network. See fig. 7.

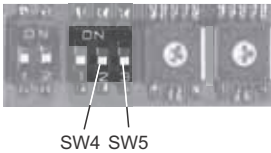


Fig. 7 Modbus transmission speed

DIP switch settings

Transmission speed [bits/s]	SW4	SW5
9600	OFF	ON
19200	OFF	OFF
38400	ON	OFF
Software-defined	ON	ON

Software-defined

When SW4 and SW5 are set to "software-defined", writing a value to the holding register at address 00004 will set a new transmission speed.

Use the following values for software-defined transmission speeds:

Software-defined transmission speed	Set register value 00004
1200 bits/s	0
2400 bits/s	1
4800 bits/s	2
9600 bits/s	3
19200 bits/s	4
38400 bits/s	5

Note When software-defined transmission speed is enabled (ON), software-defined parity and stop bit are also enabled.

4. LEDs

The CIM 2XX Modbus module has two LEDs. See fig. 1.

- Red/green status LED (LED1) for Modbus communication
- Red/green status LED (LED2) for internal communication between the CIM 2XX and the Grundfos product.

LED1

Status	Description
Off.	No Modbus communication.
Flashing green.	Modbus communication active.
Flashing red.	Fault in the Modbus communication.
Permanently red.	Fault in the CIM 2XX Modbus configuration.

LED2

Status	Description
Off.	The CIM 2XX has been switched off.
Flashing red.	No internal communication between the CIM 2XX and the Grundfos product.
Permanently red.	The CIM 2XX does not support the Grundfos product connected.
Permanently green.	Internal communication between the CIM 2XX and the Grundfos product is OK.

Note During start-up, there may be a delay of up to 5 seconds before the LED2 status is updated.

TM04 1710 0908

5. Fault finding

Faults in a CIM 2XX Modbus module can be detected by observing the status of the two communication LEDs. See the table below.

CIM 2XX fitted in a Grundfos product

Fault (LED status)	Possible cause	Remedy
1. Both LEDs (LED1 and LED2) remain off when the power supply is connected.	a) The CIM 2XX is fitted incorrectly in the Grundfos product.	Check that the CIM 2XX is fitted/connected correctly.
	b) The CIM 2XX is defective.	Replace the CIM 2XX.
2. The LED for internal communication (LED2) is flashing red.	a) No internal communication between the CIM 2XX and the Grundfos product.	Check that the CIM 2XX is fitted correctly in the Grundfos product.
3. The LED for internal communication (LED2) is permanently red.	a) The CIM 2XX does not support the Grundfos product connected.	Contact the nearest Grundfos company.
4. The Modbus LED (LED1) is permanently red.	a) Fault in the CIM 2XX Modbus configuration.	- Check the transmission speed (switches SW4 and SW5). If the switches are set to "software-defined", an invalid value may have been set via Modbus. Try one of the preselected transmission speeds, e.g. 19200 bits/s. - Check that the Modbus address (switches SW6 and SW7) has a valid value [1-247].
5. The Modbus LED (LED1) is flashing red.	a) Fault in the Modbus communication (fault in parity or cyclic redundancy check).	- Check the transmission speed (switches SW4 and SW5). See section 3.5. - Check the parity setting (switch SW3). See section 3.4. - Check the cable connection between the CIM 2XX and the Modbus network. - Check the termination resistor settings (switches SW1 and SW2). See section 3.3.

CIM 2XX fitted in the CIU 2XX

Fault (LED status)	Possible cause	Remedy
1. Both LEDs (LED1 and LED2) remain off when the power supply is connected.	a) The CIU 2XX is defective.	Replace the CIU 2XX.
2. The LED for internal communication (LED2) is flashing red.	a) No internal communication between the CIU 2XX and the Grundfos product.	• Check the cable connection between the Grundfos product and the CIU 2XX. • Check that the individual conductors have been fitted correctly. • Check the power supply to the Grundfos product.
3. The LED for internal communication (LED2) is permanently red.	a) The CIU 2XX does not support the Grundfos product connected.	Contact the nearest Grundfos company.
4. The Modbus LED (LED1) is permanently red.	a) Fault in the CIM 2XX Modbus configuration.	• Check the transmission speed (switches SW4 and SW5). If the switches are set to "software-defined", an invalid value may have been set via Modbus. Try one of the preselected transmission speeds, e.g. 19200 bits/s. • Check that the Modbus address (switches SW6 and SW7) has a valid value [1-247].
5. The Modbus LED (LED1) is flashing red.	a) Fault in the Modbus communication (fault in parity or cyclic redundancy check).	• Check the transmission speed (switches SW4 and SW5). See section 3.5. • Check the parity setting (switch SW3). See section 3.4. • Check the cable connection between the CIM 2XX and the Modbus network. • Check the termination resistor settings (switches SW1 and SW2). See section 3.3.

6. Technical data

Transceiver	RS-485
Cable	Screened, twisted-pair Min. 0.25 mm ² Min. 23 AWG
Maximum cable length	1200 m 4000 ft
Transmission speed	1200-38400 bits/s
Maximum number of Modbus units per segment	32
Protocol	Modbus RTU
Supply voltage	5 VDC $\pm$ 5 %, I _{max.} 200 mA
Storage temperature	-25 °C to +70 °C -13 °F to +158 °F

7. Service

7.1 Service documentation

Service documentation is available on www.grundfos.com > International website > Grundfos Product Center > Service.

If you have any questions, please contact the nearest Grundfos company or service workshop.

8. Disposal

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.



The crossed-out wheeled bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local

waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

Appendix

Modbus addresses

Modbus Address	SW 6	SW 7	Modbus Address	SW 6	SW 7	Modbus Address	SW 6	SW 7	Modbus Address	SW 6	SW 7	Modbus Address	SW 6	SW 7
1	0	1	51	3	3	101	6	5	151	9	7	201	C	9
2	0	2	52	3	4	102	6	6	152	9	8	202	C	A
3	0	3	53	3	5	103	6	7	153	9	9	203	C	B
4	0	4	54	3	6	104	6	8	154	9	A	204	C	C
5	0	5	55	3	7	105	6	9	155	9	B	205	C	D
6	0	6	56	3	8	106	6	A	156	9	C	206	C	E
7	0	7	57	3	9	107	6	B	157	9	D	207	C	F
8	0	8	58	3	A	108	6	C	158	9	E	208	D	0
9	0	9	59	3	B	109	6	D	159	9	F	209	D	1
10	0	A	60	3	C	110	6	E	160	A	0	210	D	2
11	0	B	61	3	D	111	6	F	161	A	1	211	D	3
12	0	C	62	3	E	112	7	0	162	A	2	212	D	4
13	0	D	63	3	F	113	7	1	163	A	3	213	D	5
14	0	E	64	4	0	114	7	2	164	A	4	214	D	6
15	0	F	65	4	1	115	7	3	165	A	5	215	D	7
16	1	0	66	4	2	116	7	4	166	A	6	216	D	8
17	1	1	67	4	3	117	7	5	167	A	7	217	D	9
18	1	2	68	4	4	118	7	6	168	A	8	218	D	A
19	1	3	69	4	5	119	7	7	169	A	9	219	D	B
20	1	4	70	4	6	120	7	8	170	A	A	220	D	C
21	1	5	71	4	7	121	7	9	171	A	B	221	D	D
22	1	6	72	4	8	122	7	A	172	A	C	222	D	E
23	1	7	73	4	9	123	7	B	173	A	D	223	D	F
24	1	8	74	4	A	124	7	C	174	A	E	224	E	0
25	1	9	75	4	B	125	7	D	175	B	F	225	E	1
26	1	A	76	4	C	126	7	E	176	B	0	226	E	2
27	1	B	77	4	D	127	7	F	177	B	1	227	E	3
28	1	C	78	4	E	128	8	0	178	B	2	228	E	4
29	1	D	79	4	F	129	8	1	179	B	3	229	E	5
30	1	E	80	5	0	130	8	2	180	B	4	230	E	6
31	1	F	81	5	1	131	8	3	181	B	5	231	E	7
32	2	0	82	5	2	132	8	4	182	B	6	232	E	8
33	2	1	83	5	3	133	8	5	183	B	7	233	E	9
34	2	2	84	5	4	134	8	6	184	B	8	234	E	A
35	2	3	85	5	5	135	8	7	185	B	9	235	E	B
36	2	4	86	5	6	136	8	8	186	B	A	236	E	C
37	2	5	87	5	7	137	8	9	187	B	B	237	E	D
38	2	6	88	5	8	138	8	A	188	B	C	238	E	E
39	2	7	89	5	9	139	8	B	189	B	D	239	E	F
40	2	8	90	5	A	140	8	C	190	B	E	240	F	0
41	2	9	91	5	B	141	8	D	191	B	F	241	F	1
42	2	A	92	5	C	142	8	E	192	C	0	242	F	2
43	2	B	93	5	D	143	8	F	193	C	1	243	F	3
44	2	C	94	5	E	144	9	0	194	C	2	244	F	4
45	2	D	95	5	F	145	9	1	195	C	3	245	F	5
46	2	E	96	6	0	146	9	2	196	C	4	246	F	6
47	2	F	97	6	1	147	9	3	197	C	5	247	F	7
48	3	0	98	6	2	148	9	4	198	C	6			
49	3	1	99	6	3	149	9	5	199	C	7			
50	3	2	100	6	4	150	9	6	200	C	8			

It is very important to ensure that two devices do not have the same address on the network. If two devices have the same address, the result will be an abnormal behaviour of the whole serial bus.

Caution

Declaration of conformity

GB: EU declaration of conformity

We, Grundfos, declare under our sole responsibility that the products CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, to which the declaration below relates, are in conformity with the Council Directives listed below on the approximation of the laws of the EU member states.

CZ: Prohlášení o shodě EU

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobky CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, u kterých se toto prohlášení vztahuje, jsou v souladu s níže uvedenými ustanoveními směrnice Rady pro sblížení právních předpisů členských států Evropského společenství.

DK: EU-overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produkterne CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU som erklæringen nedenfor omhandler, er i overensstemmelse med Rådets direktiver der er nævnt nedenfor, om indbyrdes tilnærmelse til EU-medlemsstaternes lovgivning.

ES: Declaración de conformidad de la UE

Grundfos declara, bajo su exclusiva responsabilidad, que los productos CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU a los que hace referencia la siguiente declaración cumplen lo establecido por las siguientes Directivas del Consejo sobre la aproximación de las legislaciones de los Estados miembros de la UE.

FR: Déclaration de conformité UE

Nous, Grundfos, déclarons sous notre seule responsabilité, que les produits CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, auxquels se réfère cette déclaration, sont conformes aux Directives du Conseil concernant le rapprochement des législations des États membres UE relatives aux normes énoncées ci-dessous.

HR: EU deklaracija sukladnosti

Mi, Grundfos, izjavljujemo s punom odgovornošću da su proizvodi CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, na koja se izjava odnosi u nastavku, u skladu s direktivama Vijeća dolje navedene o usklađivanju zakona država članica EU-a.

IT: Dichiarazione di conformità UE

Grundfos dichiara sotto la sua esclusiva responsabilità che i prodotti CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, ai quali si riferisce questa dichiarazione, sono conformi alle seguenti direttive del Consiglio riguardanti il riavvicinamento delle legislazioni degli Stati membri UE.

LV: ES atbilstības deklarācija

Sabiedrība Grundfos ar pilnu atbildību paziņo, ka produkti CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, uz kuru attiecas tālāk redzamā deklarācija, atbilst tālāk norādītajām Padomes direktīvām par EK/ES dalībvalstu normatīvo aktu tuvināšanu.

PL: Deklaracja zgodności UE

My, Grundfos, oświadczamy z pełną odpowiedzialnością, że nasze produkty CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, których deklaracja niniejsza dotyczy, są zgodne z następującymi dyrektywami Rady w sprawie zbliżenia przepisów prawnych państw członkowskich.

RO: Declarația de conformitate UE

Noi Grundfos declarăm pe propria răspundere că produsele CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, la care se referă această declarație, sunt în conformitate cu Directivele de Consiliu specificate mai jos privind armonizarea legilor statelor membre UE.

RU: Декларация о соответствии нормам ЕС

Мы, компания Grundfos, со всей ответственностью заявляем, что изделия CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, к которым относится нижеприведенная декларация, соответствующим нижеприведенным Директивам Совета Евросоюза о тождественности законов стран-членов ЕС.

SI: Izjava o skladnosti EU

V Grundfosu s polno odgovornostjo izjavljamo, da je izdelek CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, na katerega se spodnja izjava nanaša, v skladu s spodnjimi direktivami Sveta o približevanju zakonodaje za izenačevanje pravnih predpisov držav članic EU.

BG: Декларация за съответствие на ЕО

Ние, фирма Grundfos, заявяваме с пълна отговорност, че продуктите CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, за които се отнася настоящата декларация, отговарят на следните директиви на Съвета за уеднавяване на правните разпоредби на държавите-членки на ЕО.

DE: EU-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass die Produkte CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, auf die sich diese Erklärung beziehen, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EU-Mitgliedsstaaten übereinstimmen.

EE: EÜ vastavusdeklaratsioon

Meie, Grundfos, kinnitame ja kanname ainusikulist vastutust selle eest, et toode CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, mille kohta all olev deklaratsioon käib, on kooskõlas Nõukogu Direktiividega, mis on nimetatud all pool vastavalt vastutetud õigusaktidele ühtlustamise kohta EÜ liikmesriikides.

FI: EU-vaatimusten mukaisuusvakuutus

Grundfos vakuuttaa omalla vastuullaan, että tuotteet CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, joita tämä vakuutus koskee, ovat EU:n jäsenvaltioiden lainsäädännön lähentämiseen tähtäviin Euroopan neuvoston direktiivien vaatimusten mukaisia seuraavasti.

GR: Δήλωση συμμόρφωσης ΕΕ

Εμείς, η Grundfos, δηλώνουμε με αποκλειστικά δική μας ευθύνη ότι τα προϊόντα CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, στα οποία αναφέρεται η παρακάτω δήλωση, συμμορφώνονται με τις παρακάτω Οδηγίες του Συμβουλίου περί προσέγγισης των νομοθεσιών των κρατών μελών της ΕΕ.

HU: EU megfelelőségi nyilatkozat

Mi, a Grundfos vállalat, teljes felelősséggel kijelentjük, hogy a(z) CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU termékek, amelyek az alábbi nyilatkozat vonatkozik, megfelelnek az Európai Unió tagállamainak jogi irányelveit összehangoló tanács alábbi előírásainak.

LT: ES atitikties deklaracija

Mes, Grundfos, su visa atsakomybe pareiškiame, kad produktai CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, kuriems skirta ši deklaracija, atitinka Žemiau nurodytas Tarybos Direktivas dėl ES šalių narių įstatymų suderinimo.

NL: EU-conformiteitsverklaring

Wij, Grundfos, verklaren geheel onder eigen verantwoordelijkheid dat de producten CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, waarop de onderstaande verklaring betrekking heeft, in overeenstemming zijn met de onderstaande Richtlijnen van de Raad inzake de onderlinge aanpassing van de wetgeving van de EU-lidstaten.

PT: Declaração de conformidade UE

A Grundfos declara sob sua única responsabilidade que os produtos CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, aos quais diz respeito a declaração abaixo, estão em conformidade com as Directivas do Conselho sobre a aproximação das legislações dos Estados Membros da UE.

RS: Deklaracija o usklađenosti EU

Mi, kompanija Grundfos, izjavljujemo pod punom vlastitom odgovornošću da je proizvod CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, na koji se odnosi deklaracija ispod, u skladu sa dole prikazanim direktivama Saveta za usklađivanje zakona država članica EU.

SE: EU-försäkran om överensstämmelse

Vi, Grundfos, försäkrar under ansvar att produkterna CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, som omfattas av nedanstående försäkran, är i överensstämmelse med de rättsdirektiv om inbördes närmande till EU-medlemsstaternas lagstiftning som listas nedan.

SK: ES vyhlásenie o zhode

My, spoločnosť Grundfos, vyhlasujeme na svoju plnú zodpovednosť, že produkty CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, na ktoré sa vyhlásenie uvedené nižšie vzťahuje, sú v súlade s ustanoveniami nižšie uvedených smerníc Rady pre zblíženie právnych predpisov členských štátov EÚ.

TR: AB uygunluk bildirgesi

Grundfos olarak, aşağıdaki bildirim konusu olan CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU ürünlerinin, AB Üye ülkelerinin direktiflerini yakınlaştırmasıyla ilgili durumun aşağıdaki KONSEY Direktifleriyle uyumlu olduğunu ve bununla ilgili olarak tüm sorumluluğuna bize ait olduğunu beyan ederiz.

CN: 欧盟符合性声明

我们，格兰富，在我们的全权责任下声明，产品 CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU，即该合格证书所指定之产品，欧盟使其成员国法律趋于一致的以下理事会指令。

KO: EU 적합성 선언

Grundfos는 아래의 선언과 관련된 CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU 제품이 EU 회원국 법률에 기반하여 아래의 아시아 지침을 준수할을 단독 책임 하에 선언합니다.

ID: Deklarasi kesesuaian Uni Eropa

Kami, Grundfos, menyatakan dengan tanggung jawab kami sendiri bahwa produk CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, yang berkaitan dengan pernyataan ini, sesuai dengan Petunjuk Dewan berikut ini serta sedapat mungkin sesuai dengan hukum negara-negara anggota Uni Eropa.

MK: Декларација за сообразност на ЕУ

Ние, Grundfos, изјавуваме под целосна одговорност дека произведите CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, на кои се однесува допунаведената декларација, се во согласност со овие директиви на Советот за приближување на законите на земјите-членки на ЕУ.

NO: EUs samsvarsærklæring

Vi, Grundfos, erklærer under vårt eneansvar at produktene CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU som denne erklæringen gjelder, er i samsvar med styrets direktiver om tilnærming av forordninger i EU-landene.

TH: คำประกาศความสอดคล้องตามมาตรฐาน EU

เราในฐานะของบริษั Grundfos ขอประกาศภายใต้ความรับผิดชอบของเราแต่เพียงผู้เดียวว่าผลิตภัณฑ์ CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU ซึ่งเกี่ยวข้องกับคำประกาศนี้ มีความสอดคล้องกับระเบียบค่าส่งตามรายการการค้าในของสภาราชชาติว่าด้วยค่าประมาตามกฎหมายของรัฐที่เป็นสมาชิก EU

VI: Tuyên bố tuân thủ EU

Chúng tôi, Grundfos, tuyên bố trong phạm vi trách nhiệm duy nhất của mình rằng sản phẩm CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU mà tuyên bố dưới đây có liên quan tuân thủ các Chỉ thị Hội đồng sau về việc áp dụng luật pháp của các nước thành viên EU.

UA: Декларація відповідності директивам ЕУ

Ми, компанія Grundfos, під нашу одноосібну відповідальність заявляємо, що вироби CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, до яких відносяться нижченаведена декларація, відповідають директивам ЕУ, переліченим нижче, щодо totoжності законів країн-членів ЄС.

JP: EU 適合宣言

Grundfos は、その責任の下に、CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx、CIU 製品が EU 加盟諸国の法規に関連する、以下の評議会指令に適合していることを宣言します。

BS: Izjava o usklađenosti EU

Mi, kompanija Grundfos, izjavljujemo pod vlastitom odgovornošću da je proizvod CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, na koji se odnosi izjava ispod, u skladu sa niže prikazanim direktivama Vijeća o usklađivanju zakona država članica EU.

KZ: Сәйкестік жөніндегі ЕО декларациясы

Біз, Grundfos, ЕО мүше елдерінің заңдарына жақын төменде көрсетілген Кеңес директиваларына сәйкес төмендегі декларацияға қатысты CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU өнімдері біздің жеке жауапкершілігімізде екенін мәлімдейміз.

MY: Perisytiharan keakuran EU

Kami, Grundfos, mengisytiharkan di bawah tanggungjawab kami semata-mata bahawa produk CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, yang berkaitan dengan perisytiharan di bawah, akur dengan Perintah Majlis yang disenaraikan di bawah ini tentang penghampiran undang-undang negara ahli EU.

إقرار مطابقة EU :AR

نحن نحن، جروندفوس، بمقتضى مسؤوليتنا الفردية بأن المنتجين CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU، اللذين يختص بهما الإقرار أدناه، يكونان مطابقين لتوجيهات المجلس المذكورة أدناه بشأن الترتيب بين قوانين الدول أعضاء المجموعة الأوروبية/الاتحاد الأوروبي (EU).

TW: EU 合格聲明

基蘭富根據我們唯一的責任，茲聲明與以下聲明相關之 CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU 產品，符合下列近似 EU 會員國法律之議會指令。

AL: Deklara e konformitetit të BE

Ne, Grundfos, deklarojmë vetëm nën përgjegjësinë tonë se produktet CIM 05x, CIM 1xx, CIM 2xx, CIM 3xx, CIU, me të cilat lidhet kjo deklarata, janë në pajtueshmëri me direktivat e Këshillit të renditura më poshtë për përfaqësimin e ligjeve të shteteve anëtare të BE-së.

- Low Voltage Directive (2014/35/EU).
Standard used:
EN 61010-1:2010
- EMC Directive (2014/30/EU).
Standard used:
EN 61326-1:2013
- RoHS 2 Directive (2011/65/EU and 2015/863/EU).

This EU declaration of conformity is only valid when published as part of the Grundfos installation and operating instructions (publication numbers 96846334 1119, 96846335 1119, 96846336 1119, 96846337 0516, 97532865 1119, 98353942 0516).

Bjerringbro, 1/11/2019

A. Windfeld

Anne Katrine Windfeld
Senior Manager
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Person authorised to compile the technical file and empowered to sign the EU declaration of conformity.

中国 RoHS

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴联苯醚 (PBDE)
印刷电路板	X	O	O	O	O	O
紧固件	X	O	O	O	O	O
本表格依据 SJ/T 11364 的规定编制 O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。 X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 该规定的限量要求。  该产品环保使用期限为 10 年，标识如左图所示。 此环保期限只适用于产品在安装与使用说明书中所规定的条件下工作						

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tel.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56, БЦ
«Порт»
Тел.: +375 17 397 397 3
+375 17 397 397 4
Факс: +375 17 397 397 1
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo
Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztocna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

COLOMBIA

GRUNDFOS Colombia S.A.S.
Km 1.5 vía Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Phone: +57(1)-2913444
Telefax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

GRUNDFOS Sales Czechia and Slovakia s.r.o.

Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private
Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku,
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romanian@grundfos.ro

Russia

ООО Грундфос Россия
ул. Школьная, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 8811
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

Grundfos (PTY) Ltd.
16 Lascelles Drive, Meadowbrook Estate
1609 Germiston, Johannesburg
Tel.: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentecilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloe Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс.: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
9300 Loiret Blvd.
Lenexa, Kansas 66219
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The
Representative Office of Grundfos
Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150 3291
Факс: (+998) 71 150 3292

Addresses Revised 31.03.2020

96846335 05.2020
ECM: 1286110

Trademarks displayed in this material, including but not limited to Grundfos, the Grundfos logo and "be think innovate" are registered trademarks owned by The Grundfos Group. All rights reserved.
© 2020 Grundfos Holding A/S, all rights reserved.