

AMD Mixer

50/60 Hz

Installation and operating instructions



English (GB) Installation and operating instructions

Original installation and operating instructions

CONTENTS

	Page
1. Symbols used in this document	2
2. General description	2
2.1 Applications	3
3. Type key and nameplate	3
3.1 Type key	3
3.2 Nameplate	4
4. General safety instructions	4
5. Storage	4
6. Installation	5
6.1 Positioning	5
6.2 Installation instructions	5
7. Electrical connection	6
7.1 Motor protection	6
7.2 Direction of rotation	6
8. Startup	6
9. Service	6
9.1 Spare parts	6
9.2 Contaminated mixer	7
9.3 Service chart	7
9.4 Oil in shaft seal housing	7
10. Fault finding	8
10.1 Fault finding chart	8
11. Service kits	9
12. Technical data	9
12.1 Sound pressure level	9
13. Disposal	9



Warning
Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.

1. Symbols used in this document



Warning
If these safety instructions are not observed, it may result in personal injury.




Caution
If these safety instructions are not observed, it may result in malfunction or damage to the equipment.



Note
Notes or instructions that make the job easier and ensure safe operation.

2. General description

This booklet includes instructions for installation, operation and maintenance of the Grundfos AMD mixer series for pumping station pits and wastewater tanks. The mixers are designed for applications involving the mixing, i.e. the homogenization and suspension, of liquids of low to medium viscosity, less than or equal to 500 mPas.

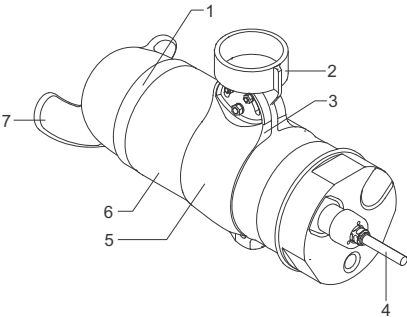

TM06 1028 1116

Fig. 1 AMD mixer

Pos.	Description
1	Seal cover
2	Mounting bracket, 2" thread
3	Mounting clamp
4	Power supply cable
5	Nameplate
6	Motor
7	Propeller

2.1 Applications

AMD is designed for the following applications:

- solids suspension and flushing in pumping stations
- mixing in small tanks, approximately Ø3500, 2 x 4 m or 3 x 3 m.

In order not to overload the mixer and expose it to corrosion, observe the following liquid limitations.

Liquid temperature	5-40 °C
pH value	4-10
Maximum dynamic viscosity	500 mPas
Maximum density	1060 kg/m ³
Chloride content	Less than or equal to 1000 mg/l, for stainless steel 1.4401
Dry solids content	Maximum 6 %

3. Type key and nameplate

3.1 Type key

Code	Example	A	M	D	07.	18.	.1430	.T	5.	0B	A.
A	Type range										
M	Version: Mixer										
D	Drive: Direct										
05	Power output, P2 [kW] x 10: 0.5 kW										
07	0.7 kW										
08	0.8 kW										
16	Propeller diameter [cm]: 16 cm										
18	18 cm										
1430	Propeller speed [min ⁻¹]: Propeller speed										
T	Installation method: 2" thread connection										
5	Frequency: 50 Hz										
6	60 Hz										
0B	Voltage: 3 x 400-415 V, Y										
0H	3 x 460 V, Y										
0K	3 x 380 V DOL										
[]	Version: First generation										
A	Second generation										
B	Third generation										
[.]	Customising: Pump in standard range										
Z	Custom-built pump										

3.2 Nameplate

You can identify the mixer by means of the nameplate on the mounting clamp. Use the details on the nameplate for ordering of spare parts.

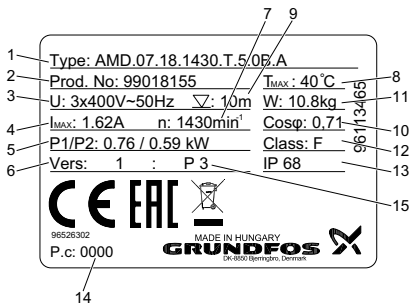


Fig. 2 Nameplate

Pos.	Description
1	Type designation
2	Product number
3	Supply voltage and frequency
4	Maximum current
5	Motor power input and output
6	Version number
7	Rated speed
8	Maximum liquid temperature
9	Maximum installation depth
10	Power factor
11	Net weight
12	Insulation class
13	Enclosure class
14	Production code
15	Place of production

Fix the additional nameplate supplied with the mixer in a visible position at the installation site.

4. General safety instructions

Follow these safety instructions as well as the instructions in each individual section when transporting, storing, handling and operating the mixer.



Warning
The mixer must be installed, connected, started up and serviced by qualified persons.



Warning
Beware of rotating parts.



Warning
Make sure that persons cannot accidentally fall into the pit or tank, for instance by installing a cover or railing.

Maintenance, service and repairs

The mixer must only be dismantled by Grundfos or an authorised service workshop. This also applies to the cable entry.

Use only components produced by Grundfos for repair purposes.

5. Storage

Store the mixer in a dry location in which the temperature is not subject to major fluctuations.

6. Installation

Install the mixer horizontally. The maximum permissible inclination angle is plus-minus 40 °.

Only lift the mixer in the suspension point.

Lifting equipment and a chain or wire designed for lifting and lowering the mixer into the pit or tank are available as accessories. Do not use the equipment as universal lifting equipment.

Caution

Never hang the mixer by the power supply cable.

6.1 Positioning

Correct positioning of the mixer is essential to ensure trouble-free operation and long life.

Observe the following guidelines:

- The mixer must always be completely submerged.
- The mixer must be placed in such a way that a good mixing of the liquid in the entire pit or tank is obtained. If more mixers are installed in the same pit or tank, the mixers must not generate opposite flows.
- The distance between the propeller tip and the pit or tank bottom and walls must be at least 10-20 cm.
- The distance between the propeller tip and the surface of the liquid must be at least 10 cm.

6.2 Installation instructions

You can mount the mixer in different ways, depending on the accessories:

- mounting bracket and tube for suspended mounting, fig. 3
- mounting bracket for wall mounting, fig. 3
- fixation base for bottom mounting, fig. 3
- motor bracket for mounting on column profile, fig. 4.

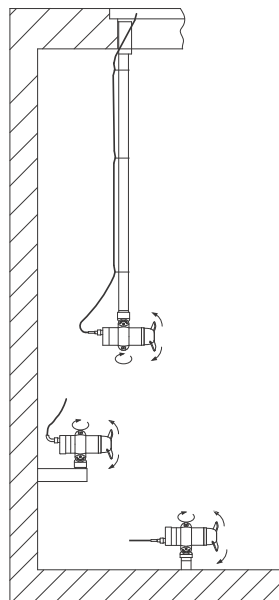


Fig. 3 Suspended mounting, wall mounting and bottom mounting

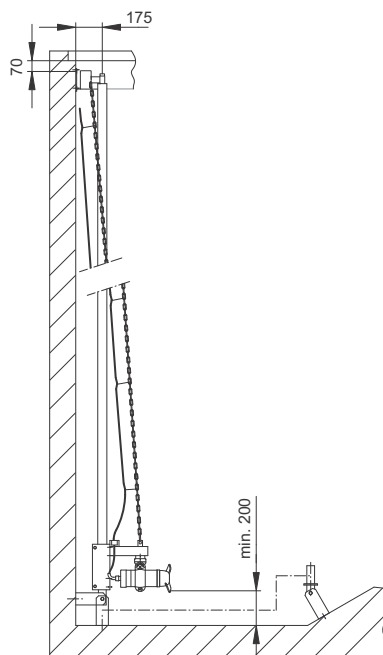


Fig. 4 Mounting on column profile

TM06 6343 1116

TM06 6344 1116

7. Electrical connection

All electrical connections must be carried out by a qualified electrician in accordance with local regulations.

Observe all currently valid national and local regulations relating to safety and accident prevention.

Warning



Before making any electrical connections, make sure that the fuses have been removed or the mains switch has been switched off. Make sure that the power supply cannot be accidentally switched on.

The mixer must be connected to an external mains switch with a minimum contact gap of 3 mm in all poles.

The supply voltage and frequency are marked on the nameplate. Make sure that the mixer is suitable for the power supply available at the installation site.

The mixer is supplied complete with a mains supply cable of 10 metres.

Caution

The motor is not designed for operation via a frequency converter.

7.1 Motor protection

The motor is protected against overheating by a thermal switch.

When the maximum winding temperature is reached, the switch will open the circuit and stop the motor.

When the windings have cooled to normal temperature, the switch will close the circuit and the motor will restart automatically, depending on the installation.

Caution

The motor must be protected against overload via an external motor-protective circuit breaker. The circuit breaker setting must not exceed the rated motor current.

Caution

Fasten the power supply cable so that it cannot fall down and be caught in the propeller during operation and so that it is not exposed to constant vibrations involving the risk of damage.

7.2 Direction of rotation

When you have carried out the electrical connections, make sure that the mixer propeller is rotating in the correct direction. When viewed from the propeller end, it must rotate clockwise.

If the propeller rotates in the wrong direction, interchange two phases of the mains supply, L1, L2, L3.

8. Startup

Before startup

- Make sure that the propeller is rotating in the correct direction. See section [7.2 Direction of rotation](#).
- Make sure that the mixer is completely submerged in the liquid to be mixed.

Caution

The mixer must always be submerged during operation.

- Make sure that the motor cable is thoroughly fixed and cannot get caught in the propeller.
- Make sure that there are no solid objects in the pit or tank.
- Make sure that no persons can fall into the pit or tank.

Caution

If the mixer has not been used for a long period, make sure that the propeller can rotate freely. If not, check the shaft seal.

The mixer motor and the shaft seal housing are filled with oil. It is not necessary to check the oil level before startup.

9. Service

Warning

Before starting any work on the mixer, make sure that the fuses have been removed or the mains switch has been switched off. Make sure that the power supply cannot be accidentally switched on.



The built-in thermal switch cuts in automatically when the motor has cooled to normal temperature.

All rotating parts must have stopped moving.

Before starting any work on a mixer used to handle liquids which could constitute a hazard to health, carry out thorough cleaning and venting of mixer, pit or tank according to local regulations.

9.1 Spare parts

Always replace damaged mixer parts with new approved parts. Do not recondition motor parts by machining, retapping, welding, etc.

9.2 Contaminated mixer

Caution

If a mixer has been used for a liquid which is injurious to health or toxic, it will be classified as contaminated.

If you request Grundfos to service the mixer, contact Grundfos with details about the liquid before returning the mixer. Otherwise Grundfos can refuse to accept the mixer for service.

Any application for service, no matter to whom you send it, must include details about the liquid if the mixer has been used for liquids which are injurious to health or toxic.

Costs of returning the mixer must be paid by the customer.

9.3 Service chart

Component	Service instructions	Lubrication	Inspection
Motor	Keep the motor housing clean; otherwise cooling is affected. The motor housing cannot be dismantled.		The motor is filled with dielectric oil. Oil level check and oil change are not required.
Power supply cable			Check the power supply cable twice a year for surface damage, strain, kinks, etc. If damaged, the cable must be replaced by Grundfos.
Shaft seal housing		Change the oil after 5000 operating hours or at least every second year.	
Propeller			Check the propeller blades regularly for wear and tear. Remove any material wound around the blades, such as ropes, threads, etc. which may cause uneven running and oscillation of the installation. In case of strong turbulence, cleaning is absolutely necessary. If the propeller is damaged, replace it.
Lifting and safety wire	Regular oiling or greasing increases the life of the wire.		Check the wire regularly and always before using the winch. Replace the wire, if required.
Screws	Check the fixing screws every time the pit or tank is empty.		

9.4 Oil in shaft seal housing

Oil quality

Ambient temperature	0-40 °C
Type	SHELL Ondina X420
Quantity	0.078 litres

10. Fault finding



Warning

Before starting any work on the mixer, make sure that the fuses have been removed or the mains switch has been switched off. Make sure that the power supply cannot be accidentally switched on.

All rotating parts must have stopped moving.

10.1 Fault finding chart

Fault	Cause	Remedy
1. The mixer does not start.	a) No power supply or supply failure.	Check the electrical installation. Call in an electrician.
	b) The power supply cable is faulty.	Call in an electrician.
	c) The control system is faulty.	Call in an electrician.
	d) The propeller is not free to rotate.	Clean the propeller blades and check manually that the propeller can rotate freely.
	e) The stator windings are faulty.	Contact Grundfos.
	f) The motor has cut out because of overheating.	Wait until the motor has cooled and attempt to restart the mixer.
	g) Different phase voltages.	Call in an electrician.
	h) The motor-protective circuit breaker is set too low or is faulty.	Check the motor-protective circuit breaker. Set the circuit breaker to the rated current. See section 7.1 Motor protection .
	i) There is humidity in the motor.	Contact Grundfos.
2. The mixer starts but stops immediately.	a) The stator windings are faulty.	Contact Grundfos.
	b) Different phase voltages.	Call in an electrician.
	c) The motor-protective circuit breaker is set too low or is faulty.	Check the motor-protective circuit breaker. Set the circuit breaker to the rated current. See section 7.1 Motor protection .
	d) There is humidity in the motor.	Contact Grundfos.
3. No or inadequate circulation produced even if the motor is running.	a) The propeller rotates in the wrong direction.	Interchange two phases of the mains supply.
	b) The mixer runs on two phases.	Replace the faulty fuses. Call in an electrician. Check the electrical connections.
	c) The internal parts are worn.	Contact Grundfos.
	d) The propeller blades are dirty or damaged.	Clean the blades and inspect for any wear.
4. The mixer runs unevenly and is noisy.	a) The internal parts are worn.	Contact Grundfos.
	b) The propeller blades are dirty or damaged.	Clean the blades and inspect for any wear.
	c) Oscillations caused by the installation.	Check the installation design.

Fault	Cause	Remedy
5. High current and power consumption.	a) Wrong voltage supply or power supply failure.	Check the electrical installation. Call in an electrician.
	b) The power supply cable is faulty.	Call in an electrician.
	c) The control system is faulty.	Call in an electrician.
	d) The propeller is not free to rotate.	Clean the propeller blades and check manually that the propeller can rotate freely.
	e) The stator windings are faulty.	Contact Grundfos.
	f) The mixer runs on two phases.	Replace the faulty fuses. Call in an electrician. Check the electrical connections.
	g) The internal parts are worn.	Contact Grundfos.

11. Service kits

For service kits, please refer to the Service kit catalogue or Grundfos Product Center www.grundfos.com.

12. Technical data

Voltage tolerance	Plus-minus 10 % of nameplate value
Enclosure class	IP68
Insulation class	F
Maximum installation depth	10 m below liquid level
Maximum number of starts	15 per hour
Power supply cable length	10 m, standard
Weight	10.5 kg

The mixer is designed for intermittent operation, S3.

Dimensional sketch

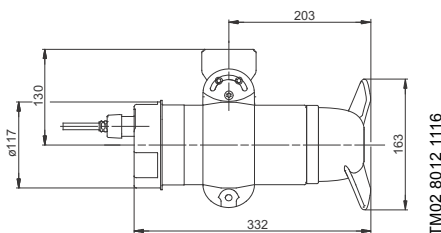


Fig. 5 Dimensions of AMD.05.16, 50 Hz, and AMD.08.16, 60 Hz

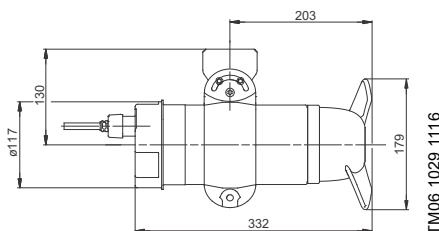


Fig. 6 Dimensions of AMD.07.18, 50 Hz

12.1 Sound pressure level

The sound pressure level of the mixer is lower than the limiting values stated in the EC Council Directive 2006/42/EC relating to machinery.

13. Disposal

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.



The crossed-out wheellie bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

See also end-of-life information at www.grundfos.com/product-recycling.

Declaration of conformity

GB: EC/EU declaration of conformity

We, Grundfos, declare under our sole responsibility that the products AMD.05, AMD.07, AMD.08, to which the declaration below relates, are in conformity with the Council Directives listed below on the approximation of the laws of the EC/EU member states.

DE: EG-/EU-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass die Produkte AMD.05, AMD.07, AMD.08, auf die sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EG-/EU-Mitgliedsstaaten übereinstimmen.

ES: Declaración de conformidad de la CE/UE

Grundfos declara, bajo su exclusiva responsabilidad, que los productos AMD.05, AMD.07, AMD.08 a los que hace referencia la siguiente declaración cumplen lo establecido por las siguientes Directivas del Consejo sobre la aproximación de las legislaciones de los Estados miembros de la CE/UE.

FR: Déclaration de conformité CE/UE

Nous, Grundfos, déclarons sous notre seule responsabilité, que les produits AMD.05, AMD.07, AMD.08, auxquels se réfère cette déclaration, sont conformes aux Directives du Conseil concernant le rapprochement des législations des États membres CE/UE relatives aux normes énoncées ci-dessous.

HR: EC/EU deklaracija sukladnosti

Mi, Grundfos, izjavljujemo s punom odgovornošću da su proizvodi AMD.05, AMD.07, AMD.08, na koja se izjava odnosi u nastavku, u skladu s dolje navedenim direktivama Vijeća o usklađivanju zakona država članica EC/EU-a.

LT: EB/ES atitikties deklaracija

Mes, Grundfos, su visa atsakomybe pareiškiamo, kad produktai AMD.05, AMD.07, AMD.08, kuriems skirta ši deklaracija, atitinka žemiau nurodytas Tarybos Direktyvas dėl EB/ES šalių narių įstatymų suderinimo.

RU: Декларация о соответствии нормам ЕЭС/ЕС

Мы, компания Grundfos, со всей ответственностью заявляем, что изделия AMD.05, AMD.07, AMD.08, к которым относится нижеприведённая декларация, соответствуют нижеприведённым Директивам Совета Евросоюза о тождественности законов стран-членов ЕЭС/ЕС.

TR: EC/AB uygunluk bildirgesi

Grundfos olarak, aşağıdaki bildirim konusu olan AMD.05, AMD.07, AMD.08 ürünlerinin, EC/AB Üye ülkelerinin direktiflerinin yakınlştırılmasıyla ilgili durumun aşağıdaki Konsey Direktifleriyle uyumlu olduğunu ve bununla ilgili olarak tüm sorumluluğun bize ait olduğunu beyan ederiz.

AR: إقرار مطابقة الاتحاد الأوروبي (EC/EU)

نقرر نحن، جروندفوس، بمقتضى مسؤوليتنا القديية بأن المنتجين اللذين يختص بهما الإقرار أدناه، يكونان AMD.05، AMD.07، AMD.08، مطابقين لتوجيهات المجلس المذكورة أدناه بشأن القدييد بين قوانين الدول أعضاء الاتحاد الأوروبي (EC/EU).

CZ: Prohlášení o shodě EU

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobky AMD.05, AMD.07, AMD.08, na které se toto prohlášení vztahuje, jsou v souladu s níže uvedenými ustanoveními směrnice Rady pro sblížení právních předpisů členských států Evropského společenství.

DK: EF-/EU-overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produkterne AMD.05, AMD.07, AMD.08 som erklæringen nedenfor omhandler, er i overensstemmelse med Rådets direktiver der er nævnt nedenfor, om indbyrdes tilnærmelse til EF-/EU-medlemsstaternes lovgivning.

FI: EY-/EU-vaatimustenmukaisuusvakuutus

Grundfos vakuuttaa omalla vastuullaan, että tuotteet AMD.05, AMD.07, AMD.08, joita tämä vakuutus koskee, ovat EY-/EU:n jäsenvaltioiden lainsäädännön lähentämiseen tähtäävien Euroopan neuvoston direktiivien vaatimusten mukaisia seuraavasti.

GR: Δήλωση συμμόρφωσης ΕΚ/ΕΕ

Εμείς, η Grundfos, δηλώνουμε με αποκλειστικά δική μας ευθύνη ότι τα προϊόντα AMD.05, AMD.07, AMD.08, στα οποία αναφέρεται η παρακάτω δήλωση, συμμορφώνονται με τις παρακάτω Οδηγίες του Συμβουλίου περί προσέγγισης των νομοθεσιών των κρατών μελών της ΕΚ/ΕΕ.

IT: Dichiarazione di conformità CE/UE

Grundfos dichiara sotto la sua esclusiva responsabilità che i prodotti AMD.05, AMD.07, AMD.08, ai quali si riferisce questa dichiarazione, sono conformi alle seguenti direttive del Consiglio riguardanti il riavvicinamento delle legislazioni degli Stati membri CE/UE.

PT: Declaração de conformidade CE/UE

A Grundfos declara sob sua única responsabilidade que os produtos AMD.05, AMD.07, AMD.08, aos quais diz respeito a declaração abaixo, estão em conformidade com as Directivas do Conselho sobre a aproximação das legislações dos Estados Membros da CE/UE.

SE: EG-/EU-försäkran om överensstämmelse

Vi, Grundfos, försäkrar under ansvar att produkterna AMD.05, AMD.07, AMD.08, som omfattas av nedanstående försäkran, är i överensstämmelse med de rådsdirektiv om inbördes närmande till EG-/EU-medlemsstaternas lagstiftning som listas nedan.


CN: 欧盟符合性声明

我们，格兰富，在我们的全权责任下声明，产品 AMD.05, AMD.07, AMD.08 系列，其制造和性能完全符合以下所列欧盟委员会指令。

- Machinery Directive (2006/42/EC)
Standards used: EN 60204-1:2006 + A1:2009 and
ISO 12100:2010
- Applies from 22. 07. 2019
RoHS Directives (2011/65/EU and 2015/863/EU)
Standard used: EN 50581:2012

This EC/EU declaration of conformity is only valid when published as part of the Grundfos installation and operating instructions (publication number 96526302).

Székesfehérvár 10 May 2018



Róbert Kis
Product Group Manager
GRUNDFOS Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Person authorised to compile the technical file and
empowered to sign the EU declaration of conformity.

Руководство по эксплуатации ЕАС

RU

AMD.07

Руководство по эксплуатации

Руководство по эксплуатации на данное изделие является составным и включает в себя несколько частей:

Часть 1: настоящее «Руководство по эксплуатации».

Часть 2: электронная часть «Паспорт. Руководство по монтажу и эксплуатации» размещенная на сайте компании Грундфос:

<http://net.grundfos.com/qri/98905100>

Часть 3: информация о сроке изготовления, размещенная на фирменной табличке изделия.

Сведения о сертификации:

Насосы типа AMD.07 сертифицированы на соответствие требованиям Технических регламентов Таможенного союза: ТР ТС 004/2011 «О безопасности низковольтного оборудования»; ТР ТС 010/2011 «О безопасности машин и оборудования»; ТР ТС 020/2011 «Электромагнитная совместимость технических средств».

Сертификат соответствия:

№ TC RU C-DK.АИ30.В.01119, срок действия до 20.11.2019 г.

Выдан:

Органом по сертификации продукции «ИВАНОВО-СЕРТИФИКАТ» ООО «Ивановский Фонд Сертификации». Адрес: 153032, Российская Федерация, г. Иваново, ул. Станкостроителей, д.1.



KZ

AMD.07

Пайдалану бойынша нұсқаулық

Атаулы өнімге арналған пайдалану бойынша нұсқаулық құрамалы болып келеді және келесі бөлімдерден тұрады:

1 бөлім: атаулы «Пайдалану бойынша нұсқаулық»

2 бөлім: Грундфос компаниясының сайтында орналасқан электронды бөлім «Төлқұжат, Құрастыру және пайдалану бойынша нұсқаулық»:

<http://net.grundfos.com/qri/98905100>

3 бөлім: өнімнің фирмалық тақташасында орналасқан шығарылған уақыты жөніндегі мәлімет.

Сертификаттау туралы ақпарат:

AMD 07 типті сорғылары «Төмен вольтты жабдықтардың қауіпсіздігі туралы» (ТР ТС 004/2011), «Машиналар және жабдықтар қауіпсіздігі туралы» (ТР ТС 010/2011) «Техникалық заттардың электрлі магниттік сәйкестілігі» (ТР ТС 020/2011) Кеден Одағының техникалық регламенттерінің талаптарына сәйкес сертификатталды.

Сәйкестік сертификат:

№ TC RU C-DK.АИ30.В.01119, жарамдылық мерзімі 20.11.2019 жылға дейін.

«Иваново Сертификаттау Қоры» ЖШҚ «ИВАНОВО-СЕРТИФИКАТ» өнімді сертификациялау бойынша органымен берілген. Мекен-жайы: 153032, Ресей Федерациясы, Иванов облысы, Иваново қ., Станкостроителей көш., 1 үй.



KG

AMD.07

Пайдалануу боюнча колдонмо

Аталган жабдууну пайдалануу боюнча колдонмо курамдык жана өзүнө бир нече бөлүкчөнү камтыйт:

1-Бөлүк: «Пайдалануу боюнча колдонмо»

2-Бөлүк: «Паспорт. Пайдалануу жана монтаж боюнча колдонмо» электрондук бөлүгү Грундфос компаниянын сайтында жайгашкан:

<http://net.grundfos.com/qri/98905100>

3-Бөлүк: жабдуунун фирмалык тактасында жайгашкан даярдоо мөөнөтү тууралуу маалымат.



Шайкештик жөнүндө декларация

AMD.07 түрүндөгү соргучтар Бажы Биримдиктин Техникалык регламенттин талаптарына ылайыктуу тастыкталган: TP ТБ 004/2011 «Төмөн вольттук жабдуунун коопсуздугу жөнүндө»; TP ТБ 010/2011 «Жабдуу жана машиналардын коопсуздугу жөнүндө»; TP ТБ 020/2011 «Техникалык каражаттардын электрмагниттик шайкештиги».

Шайкештик сертификаты:

TC RU C-DK.АИ30.В.01119, 20.11.2019 ж. чейин жарамдуу.

Берилген:

«ИВАНОВО-СЕРТИФИКАТ» өндүрүмдү тастыктаган ЖЧК «Ивановский Фонд Сертификации» органы менен. Дареги: 153032, Орусия Федерациясы, Иваново ш., Станкостроители көч., ү.1.

ARM

AMD.07

Շահագործման ձեռնարկ

Տվյալ սարքավորման շահագործման ձեռնարկը բաղկացած է մի քանի մասերից.

Մաս 1. սույն «Շահագործման ձեռնարկ»:

Մաս 2. էլեկտրոնային մաս. այն է՝ «Անճաղգիր: Մանուալի և շահագործման ձեռնարկ» տեղադրված «Գրունդֆոս» ընկերության կայքում՝

<http://net.grundfos.com/qri/98905100>

Մաս 3. տեղեկության արտադրման ամսաթվի վերաբերյալ՝ նվազ սարքավորման պիտակի վրա:

Տեղեկություններ հավաստագրման մասին՝

AMD.07 տիպի պոմպերը սերտիֆիկացված են համաձայն Մախաչխե Միության տեխնիկական կանոնակարգի պահանջների՝ TP TC 004/2011 «Ցածրավոլտ սարքավորումների վերաբերյալ», TP TC 010/2011 «Մեխանիկական և սարքավորումների անվտանգության վերաբերյալ»; TP TC 020/2011 «Տեխնիկական միջոցների էլեկտրամագնիսական համատեղելիության վերաբերյալ»:

Համապատասխանության հավաստագիր՝

TC RU C-DK.АИ30.В.01119, գործողության ժամկետը մինչև՝ 20.11.2019թ.

Տրված է՝

«ԻՎԱՆՈՎ-ՍԵՐՏԻՖԻԿԱՏ» ապրանքների սերտիֆիկացման մարմնի կողմից:

«Իվանովսկի Սերտիֆիկացման կենտրոնում» ՍՊԸ:

Հասցե՝ 153032, Ռուսաստանի Դաշնություն, Գաղափ Իվանովա, Ստանկոստրոիտելների փողոց, տուն 1:



Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56, БЦ
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo
Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

COLOMBIA

GRUNDFOS Colombia S.A.S.
Km 1.5 vía Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Phone: +57(1)-2913444
Telefax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

GRUNDFOS Sales Czechia and Slovakia s.r.o.

Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private
Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku,
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava iela 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznań
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romanian@grundfos.ro

Russia

ООО Грундфос Россия
ул. Школьная, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-88-00 (495)
737-30-00
Факс (+7) 495 564 8811
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

Grundfos (PTY) Ltd.
16 Lascelles Drive, Meadowbrook Estate
1609 Germiston, Johannesburg
Tel.: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentecilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloe Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс.: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
9300 Loiret Blvd.
Lenexa, Kansas 66219
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The
Representative Office of Grundfos
Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150 3291
Факс: (+998) 71 150 3292

Addresses Revised 15.01.2019

96526302 0519
ECM: 1260889

Trademarks displayed in this material, including but not limited to Grundfos, the Grundfos logo and 'be think innovate' are registered trademarks owned by The Grundfos Group. All rights reserved.
© 2019 Grundfos Holding A/S, all rights reserved.