


I870102124

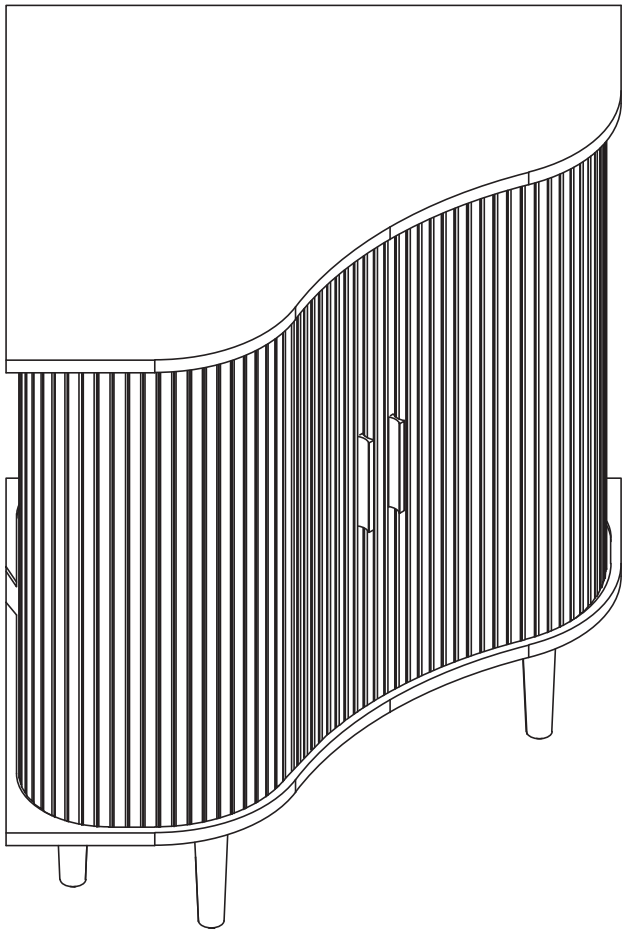

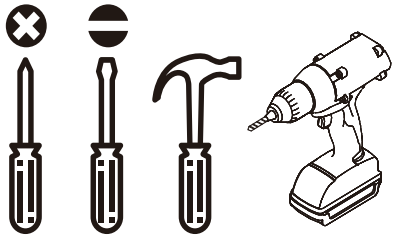

Tools required
(not included)

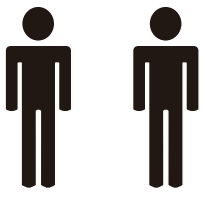

2 people for assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.


• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

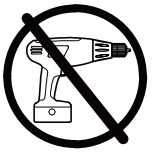

• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-


Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

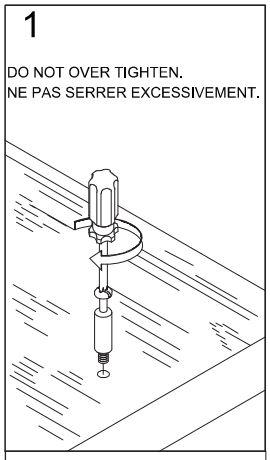

Step 2


Push the male camlock into the entry hole.

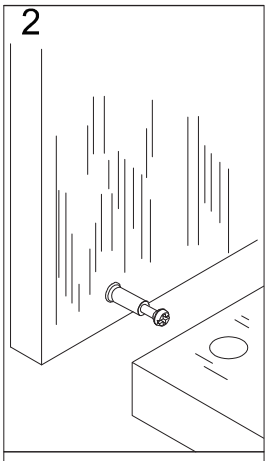

Step 3

Insert the femle camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

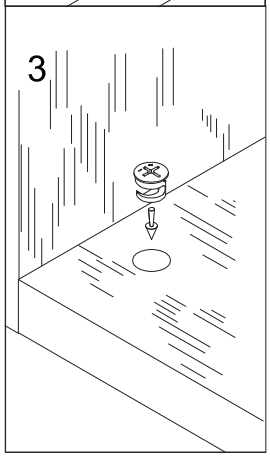


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

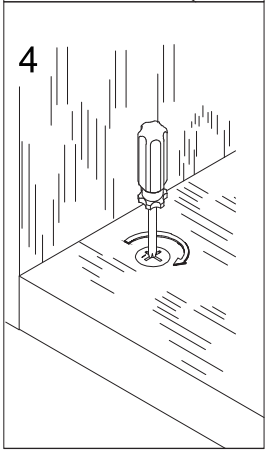

⚠WARNING






Children have died from furniture tipover.
To reduce the risk of furniture tipover:


·ALWAYS install tipover restraint provided.
·NEVER put a TV on this product.
·NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
·NEVER open more than one drawer at a time.
·Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!









2-Person Assembly








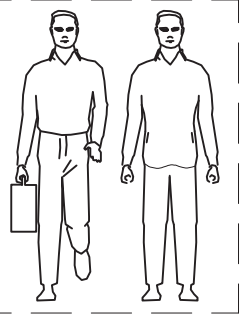


ASSEMBLY OVERVIEW

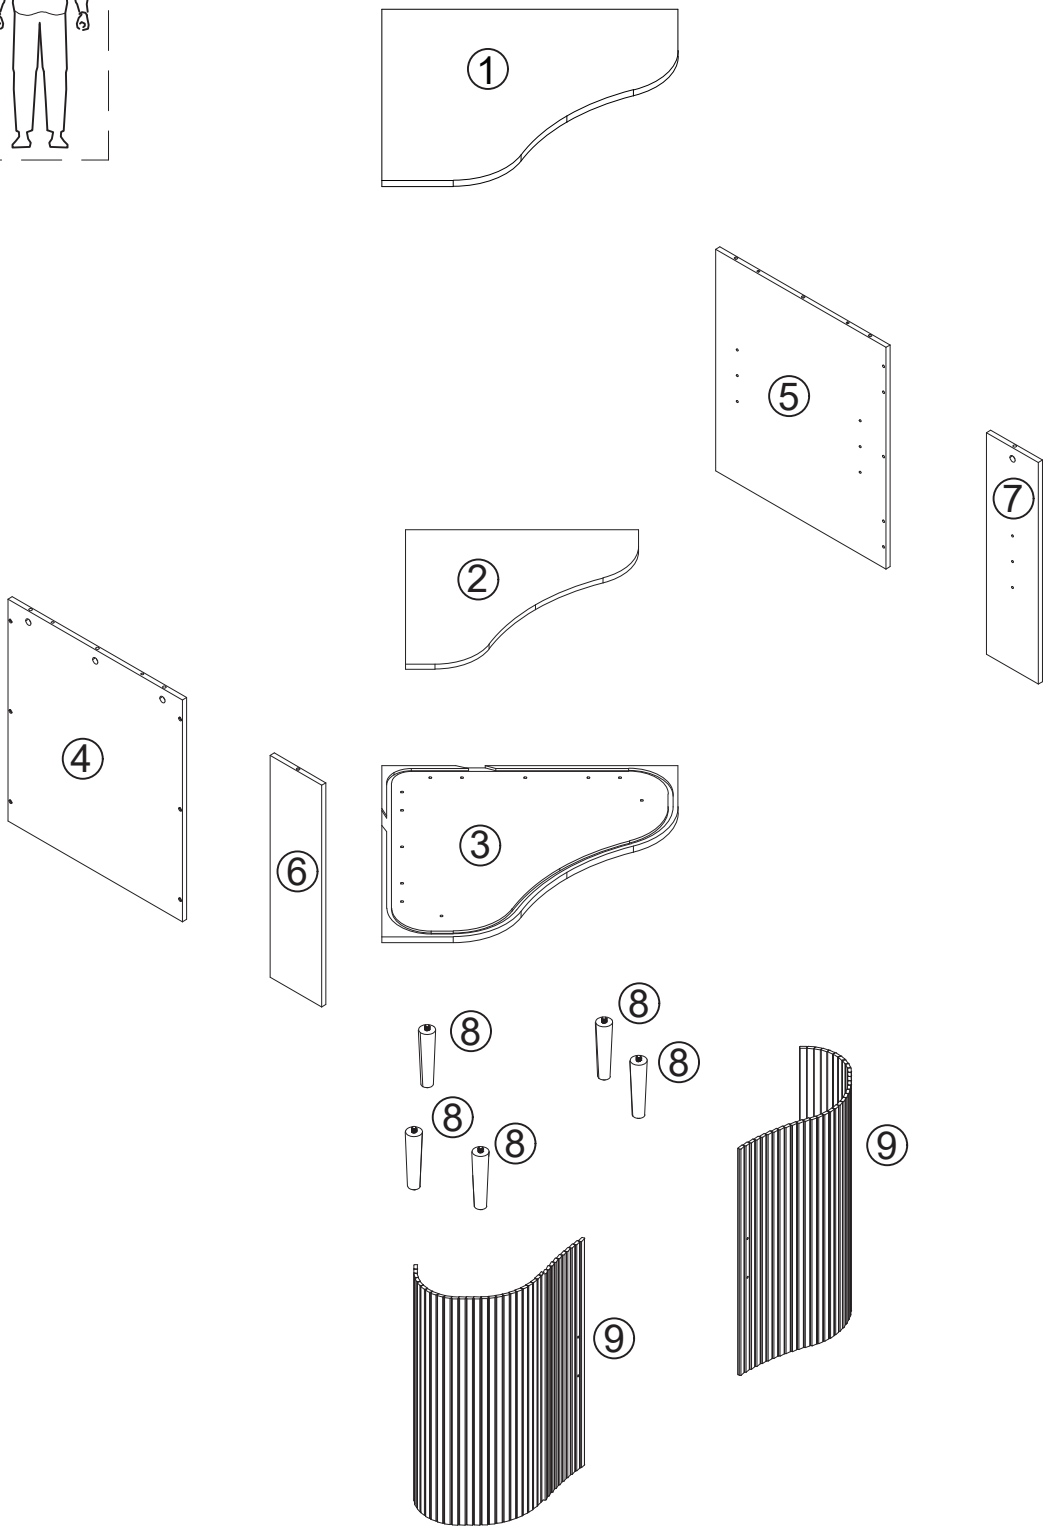


PART LIST

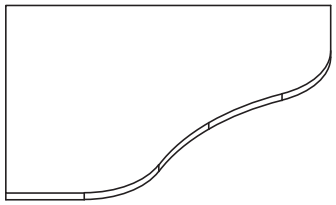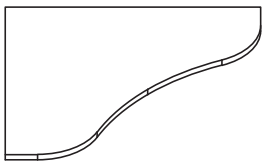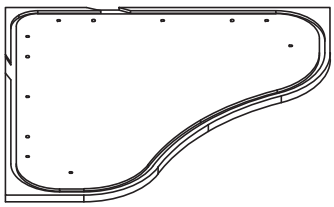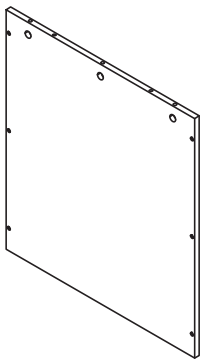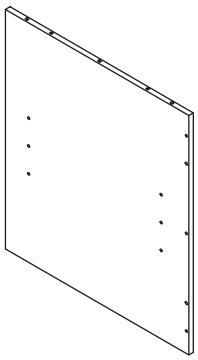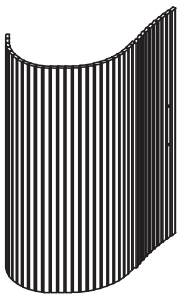① 1PC	② 1PC	③ 1PC
		
④ 1PC	⑤ 1PC	⑥ 1PC
		
⑦ 1PC	⑧ 5PCS	⑨ 2PCS
		

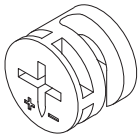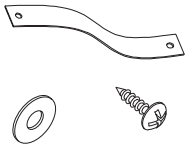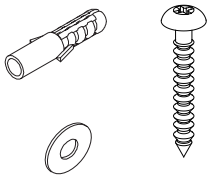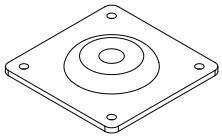A  ×2PCS	B  M6×35 ×8+1PCS	C  Ø6×30 ×14+1PCS	D  Ø15×10 ×8+1PCS
E  M4×40 17+1PCS	F  ×6+1PCS	G  ×2PCS	H  ×2PCS
I  ×5PCS	J  M4×12 ×20+2PCS	K  M4×14 ×4+1PCS	

Instructions For Fastening
CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

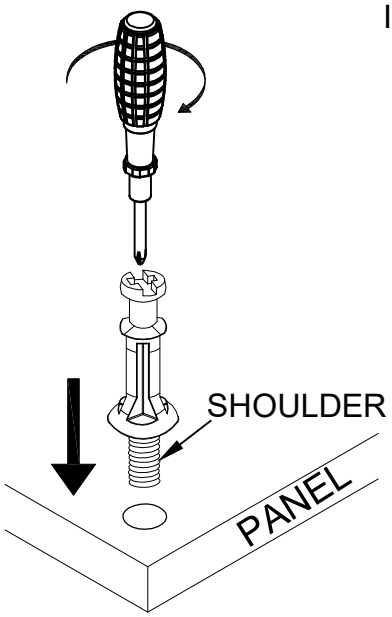

Place Cam-bolt on pre-drilled hole and screw in vertically

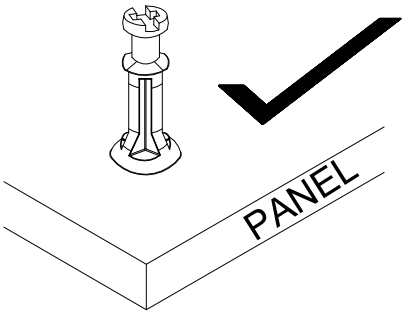


Shoulder is flushed (on the same level) with the panel.

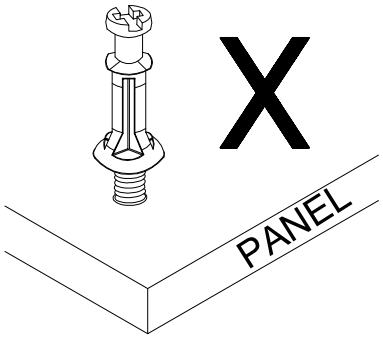


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

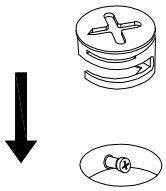


Insert Cam-lock with arrow align to Cam-bolt head

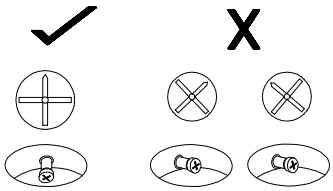

CORRECT WRONG


TIGHTENING CAM-LOCK

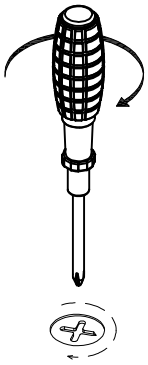

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


1

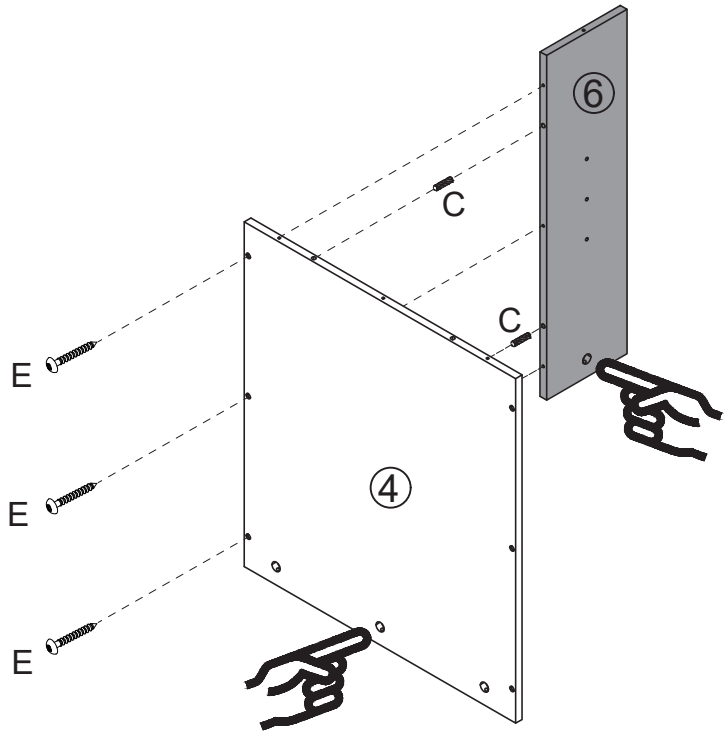

C.×2PCS

E.×3PCS


2

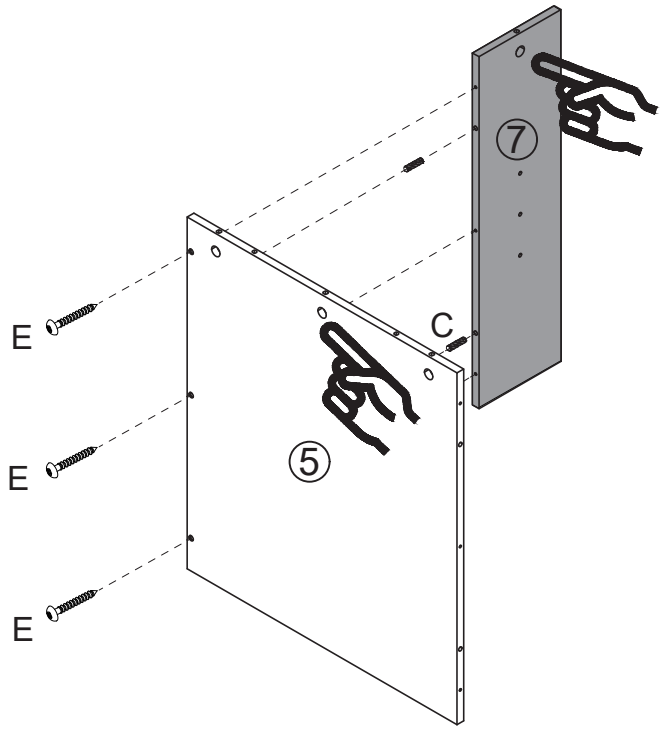

C.×2PCS

E.×3PCS


3

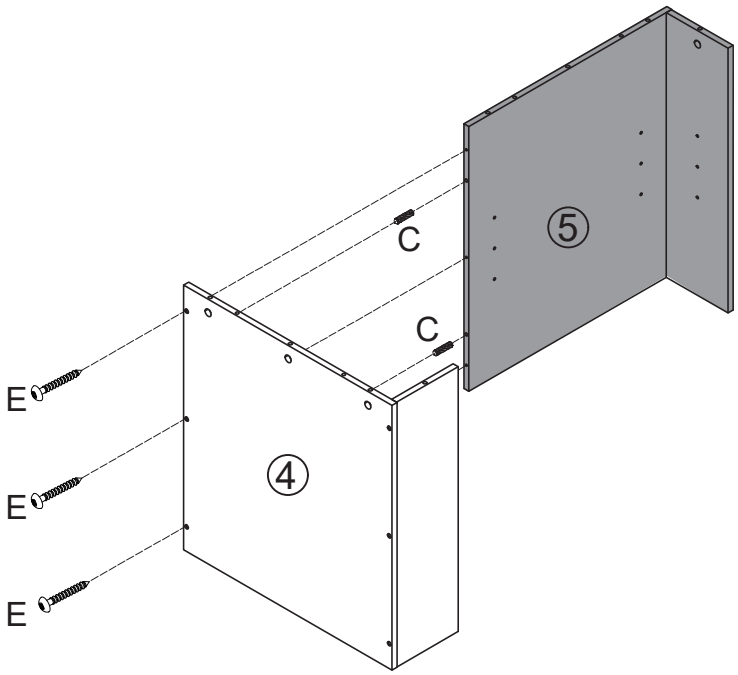

C.×2PCS

E.×3PCS


4

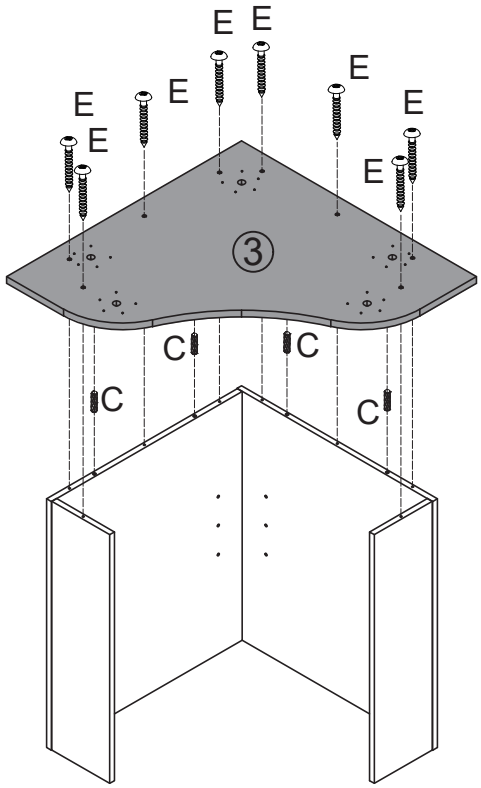

C.×4PCS

E.×8PCS


5

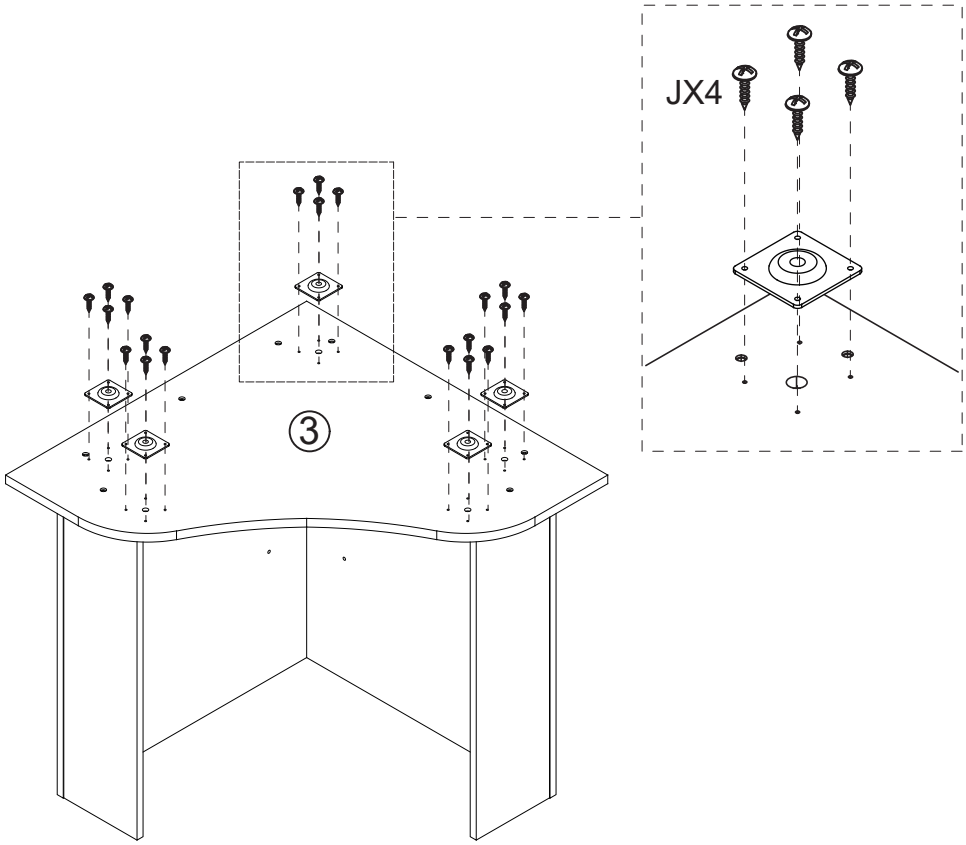


I.×5PCS

J.×20PCS

6

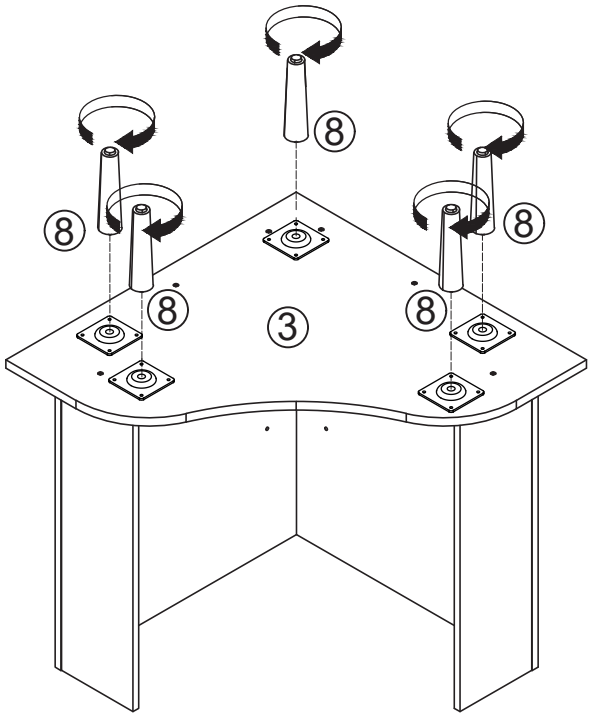


7

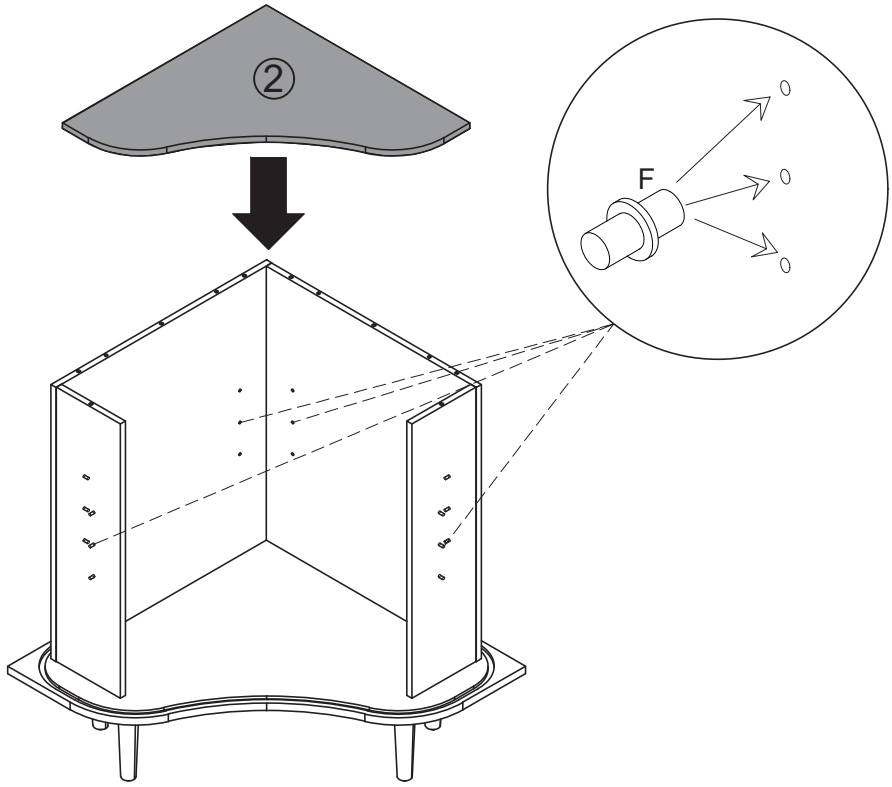


 F.×6PCS

8

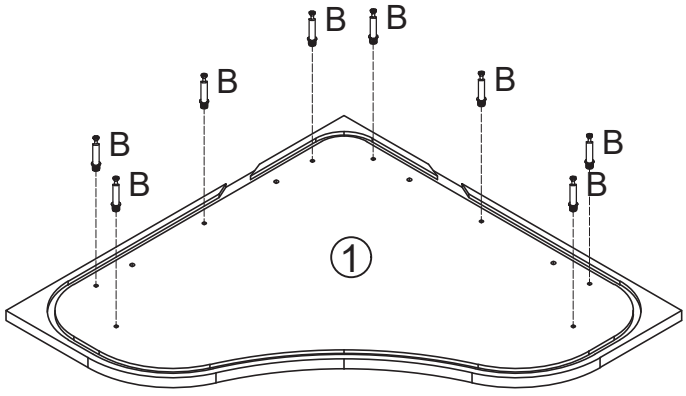

 B.×8PCS


9

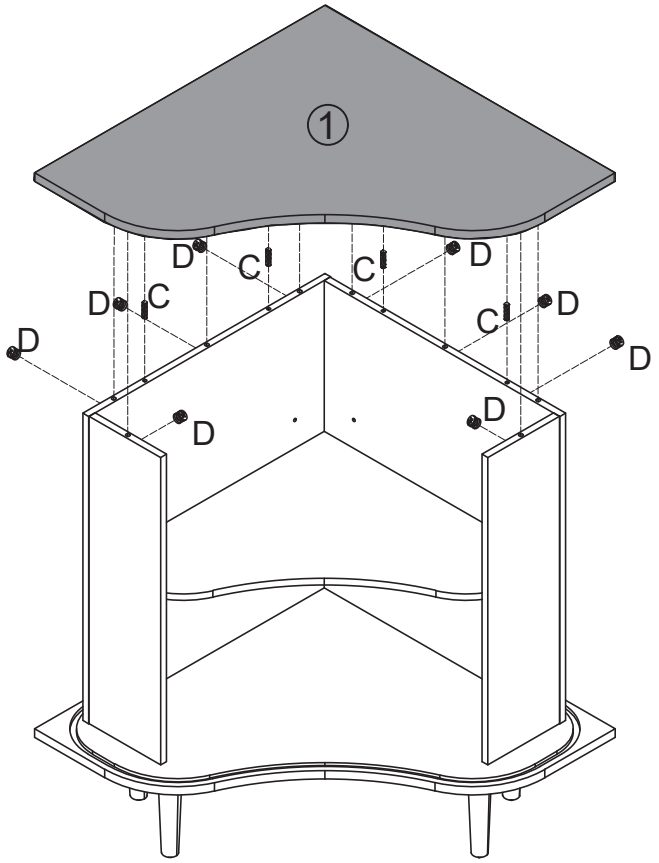

D.×8PCS

C.×4PCS

10

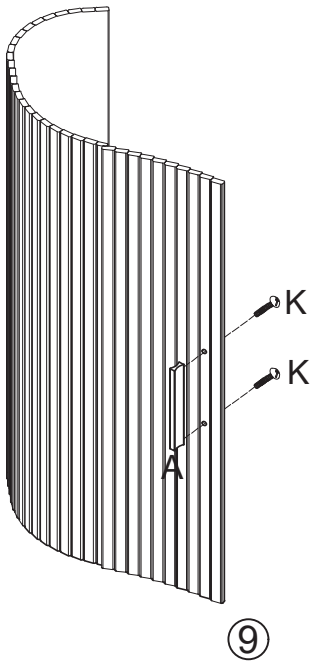


×2


A.×2PCS

K.×4PCS


11

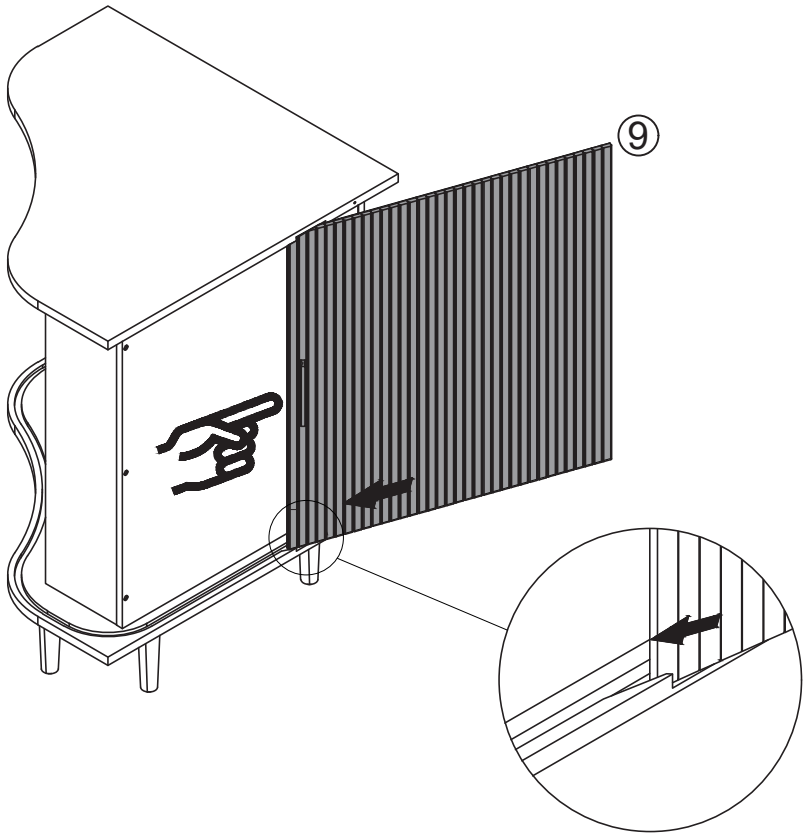

12

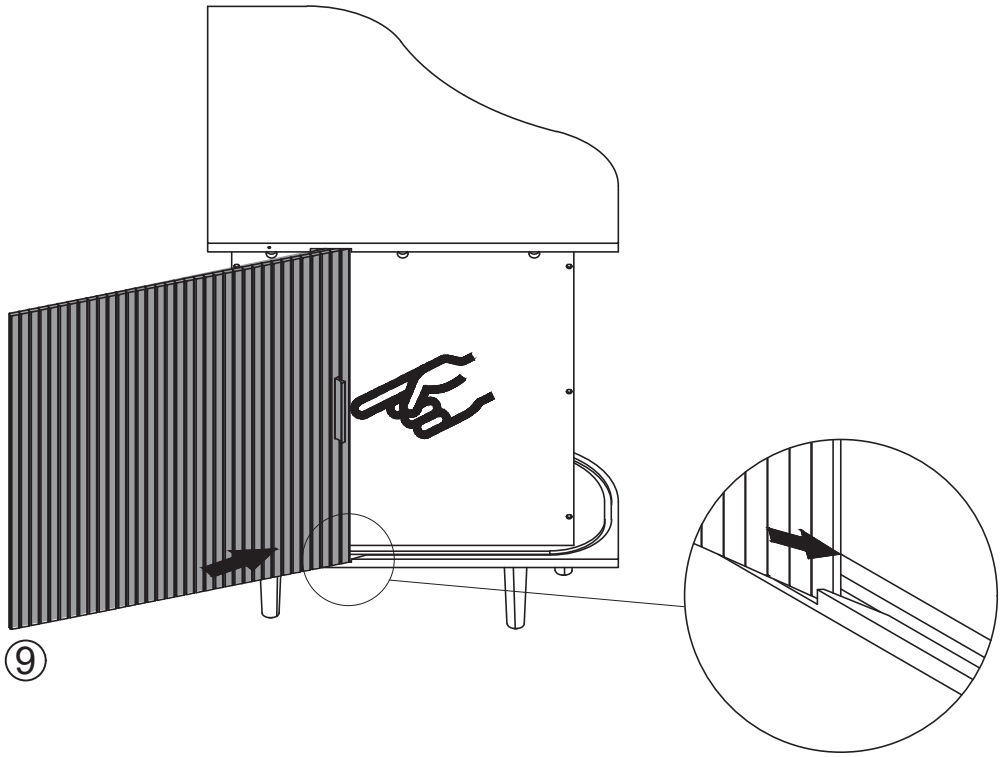


13

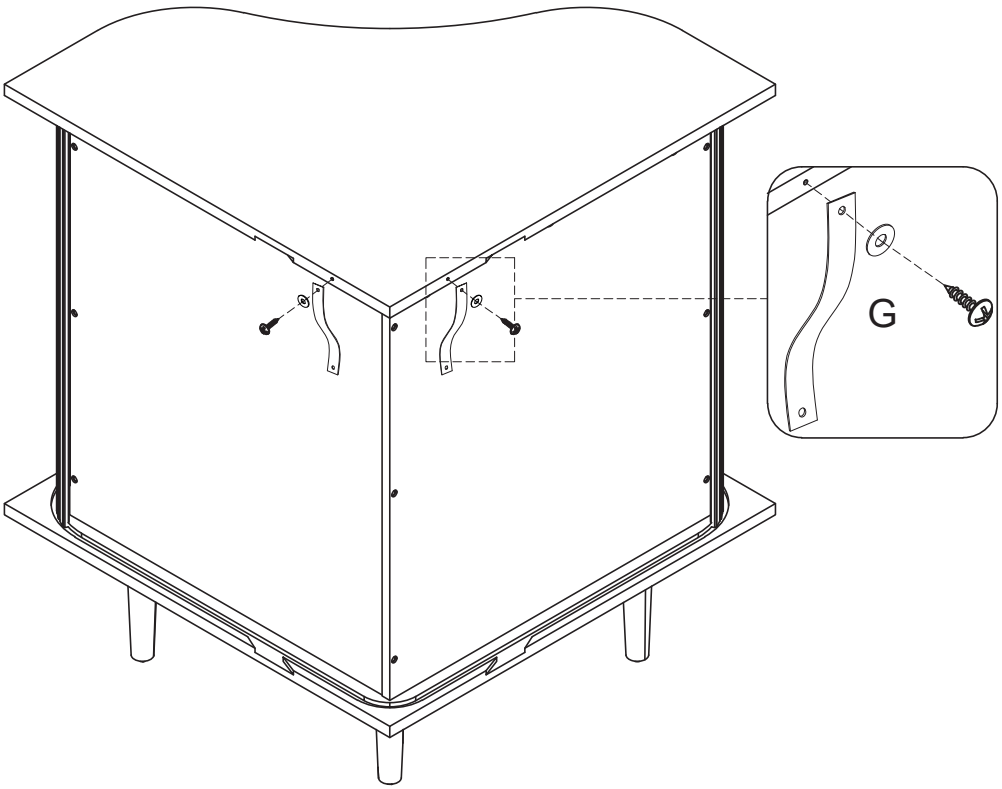




G.×2PCS

14

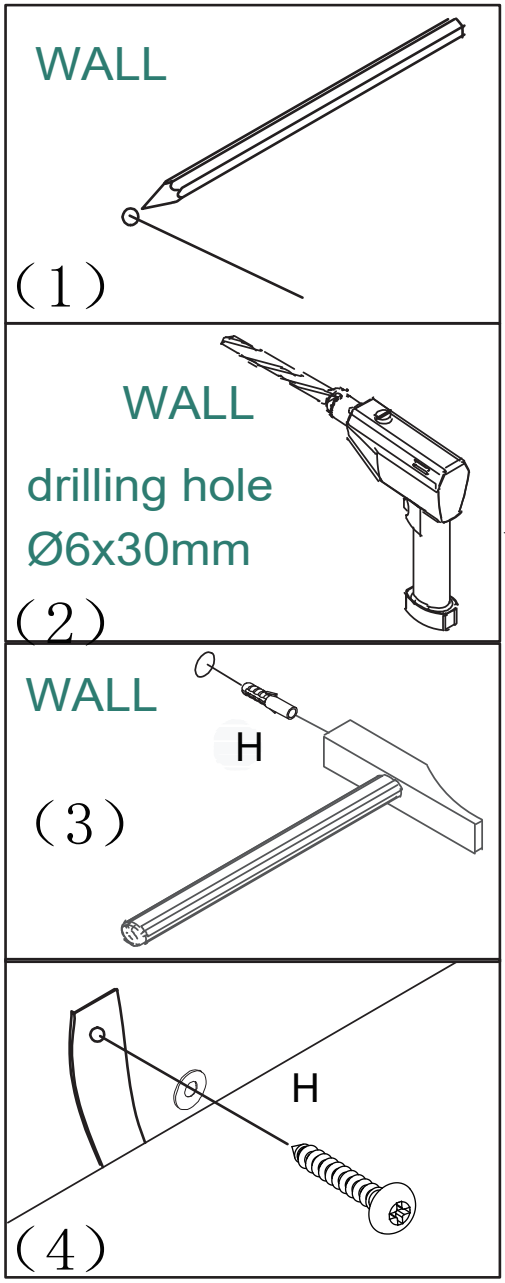

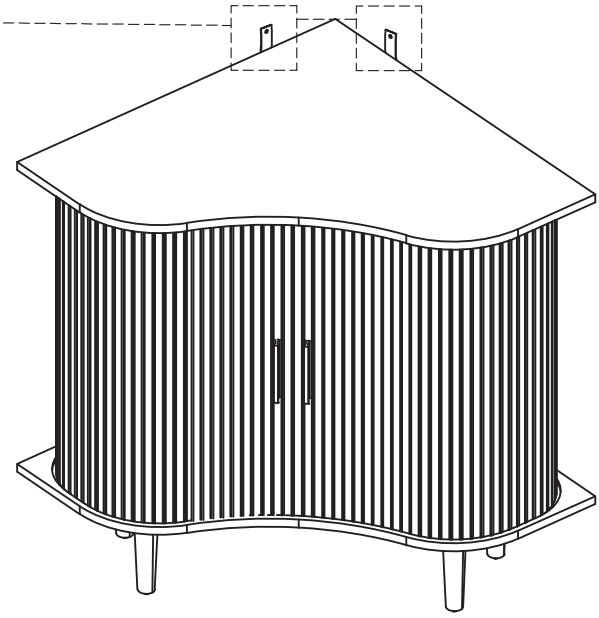

H.×2PCS