
256 OZ INSULATED COOLER BUCKET

Built for Cold. Ready for Adventure.

Thank you for purchasing our product. Before using the unit, please read this manual carefuly to ensure the best possible performance. Please store your instruction manual in a safe place for future reference.

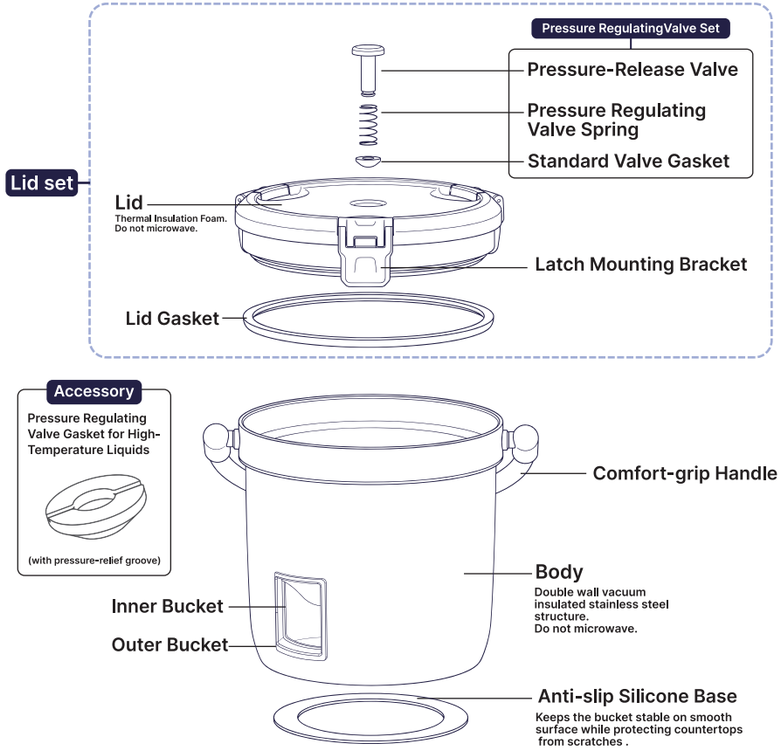


HOW TO USE

1. Open the Lid	Release all three locking latches and remove the lid.
2. Fill the Bucket	Do not fill above the maximum fill level. Leave approximately 1 cm / 0.4 in below the lid.
3. Close & Lock the Lid	Place the lid securely on the bucket and fasten all three locking latches.
4. Release Pressure Before Opening	Before opening the lid, press the pressure release valve to equalize internal pressure.

FOR HOT LIQUIDS

When using hot liquids, replace the Standard Valve Gasket with the supplied High-Temperature Valve Gasket (with pressure-relief groove).
Before opening the lid, always press the pressure-release valve to equalize internal pressure.

CAUTION: HOT CONTENTS MAY CAUSE BURNS.

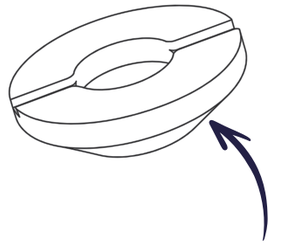

High-Temperature Pressure-Regulating Valve Gasket
(with pressure-relief groove)

CLEANING & CARE

Keep your cooler bucket clean and fresh for longer use.

CLEANING GUIDELINES

BEFORE FIRST USE:
Wash the lid components, gasket and interior thoroughly.

Wash after each use
with warm water, mild dish detergent and a soft sponge.

Rinse thoroughly and dry completely before storage.

Remove and clean the lid gasket and pressure-release valve components regularly.

Reinstall all removable parts securely before use.

AVOID

Do not use chlorine bleach, abrasive cleaners, steel wool or harsh chemicals.

Do not boil the product or soak the entire bucket in water.

Do not use a dishwasher or dish dryer.

Store clean and completely dry, away from excessive heat and humidity.

MAIN PARTS

Lid	3 Locking Latches
Lid Gasket	Comfort-Grip Handle
Pressure-Release Valve	Insulated Bucket Body
Standard Valve Gasket	Anti-Slip Silicone Base
High-Temperature Valve Gasket	

IMPORTANT
Inspect gaskets and pressure-release value components periodically. Replace them if damaged, deformed or deteriorated.

Keep this manual for future reference.


INSTALLATION & REMOVAL GUIDE

Simple diagrams for the removable lid components. Reinstall all parts securely before use


1.OPEN / CLOSE THE LID

OPEN THE LID

1. Release all three locking latches.



2. Lift and remove the lid.




3. LID HANGING HOOK
Hang on the rim.
Keeps the lid clean & within reach.




CLOSE THE LID


1. Place the lid securely on the bucket.



2. Hook and press down all three locking latches.




3. Make sure all three latches are securely locked.




IMPORTANT: Always keep the bucket upright when opening or closing the lid. Keep fingers clear of the latches when locking.

2.HOW TO INSTALL THE LID GASKET


1. **STEP 1**
Place the gasket on the lid.



2. **STEP 2**
Press the gasket evenly into the groove.



CORRECT
Gasket is fully seated and flat all around.



INCORRECT
Gasket is twisted, uneven, or not fully seated.



IMPORTANT: Make sure the gasket is fully seated, flat, and free of twists or gaps. Improper installation may cause leaks


3.HOW TO REMOVE / INSTALL THE PRESSURE-RELEASE VALVE

REMOVAL


1. Press and hold the pressure release valve.



2. Remove the valve gasket from underneath the lid.




3. Slowly remove the valve and spring.




INSTALLATION


1. Attach the spring to the valve and insert it through the lid.



2. Secure the valve gasket underneath the lid.



3. Press the valve 2–3 times to make sure it moves freely and is properly installed.



PARTS
- Pressure-Release Valve
- Valve Spring
- Standard Valve Gasket




IMPORTANT:
Make sure all parts are securely installed before use.Be careful not to lose the spring during removal.

FOR HOT LIQUIDS


4.REPLACE THE VALVE GASKET BEFORE USE

1. REMOVE

Press and hold the pressure release valve.




Remove the Standard Valve Gasket from underneath the lid.



2. REPLACE

Replace it with the supplied High-Temperature Valve Gasket.




STANDARD
Cold / Regular Contents


HIGH-TEMPERATURE
Hot Liquids

3. REINSTALL

Secure the High-Temperature Valve Gasket underneath the lid.



Press the pressure release valve 2–3 times to make sure it moves freely and is properly installed.



IMPORTANT
Use only ONE valve gasket at a time.

- For hot liquids, always replace the standard gasket with the supplied High-Temperature Valve Gasket (with pressure-relief groove).
- Make sure the gasket is fully seated before use.
- Using the wrong gasket or improper installation may caus

IMPORTANT SAFETY INFORMATION

Read all instructions before use. Keep for future reference.

DO NOT

- Do not use with dry ice.
- Do not use with carbonated beverages.
- Do not microwave.
- Do not place near open flames or other heat sources.
- Do not drop or subject the product to strong impact.

ALWAYS


- Do not fill above the MAX fill line. Leave approximately 1 cm (0.4 in) below the lid.
- Make sure the lid gasket and pressure-release valve components are properly installed before use.
- Secure all three locking latches before carrying or transporting.
- Keep upright during transport whenever possible.
- Keep out of reach of children when containing hot liquids.

PRESSURE WARNING

Hot liquids may create internal pressure. Always press the pressure-release valve before opening the lid.

Always press the pressure-release valve before opening the lid.

For hot liquids, use the supplied High-Temperature Valve Gasket with Pressure-Relief Groove.

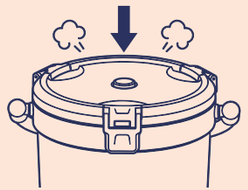

CAUTION: HOT CONTENTS MAY CAUSE BURNS.

MAXIMUM FILL GUIDE

Do not fill above the maximum fill level. Leave approximately 1 cm / 0.4 in below the lid.

