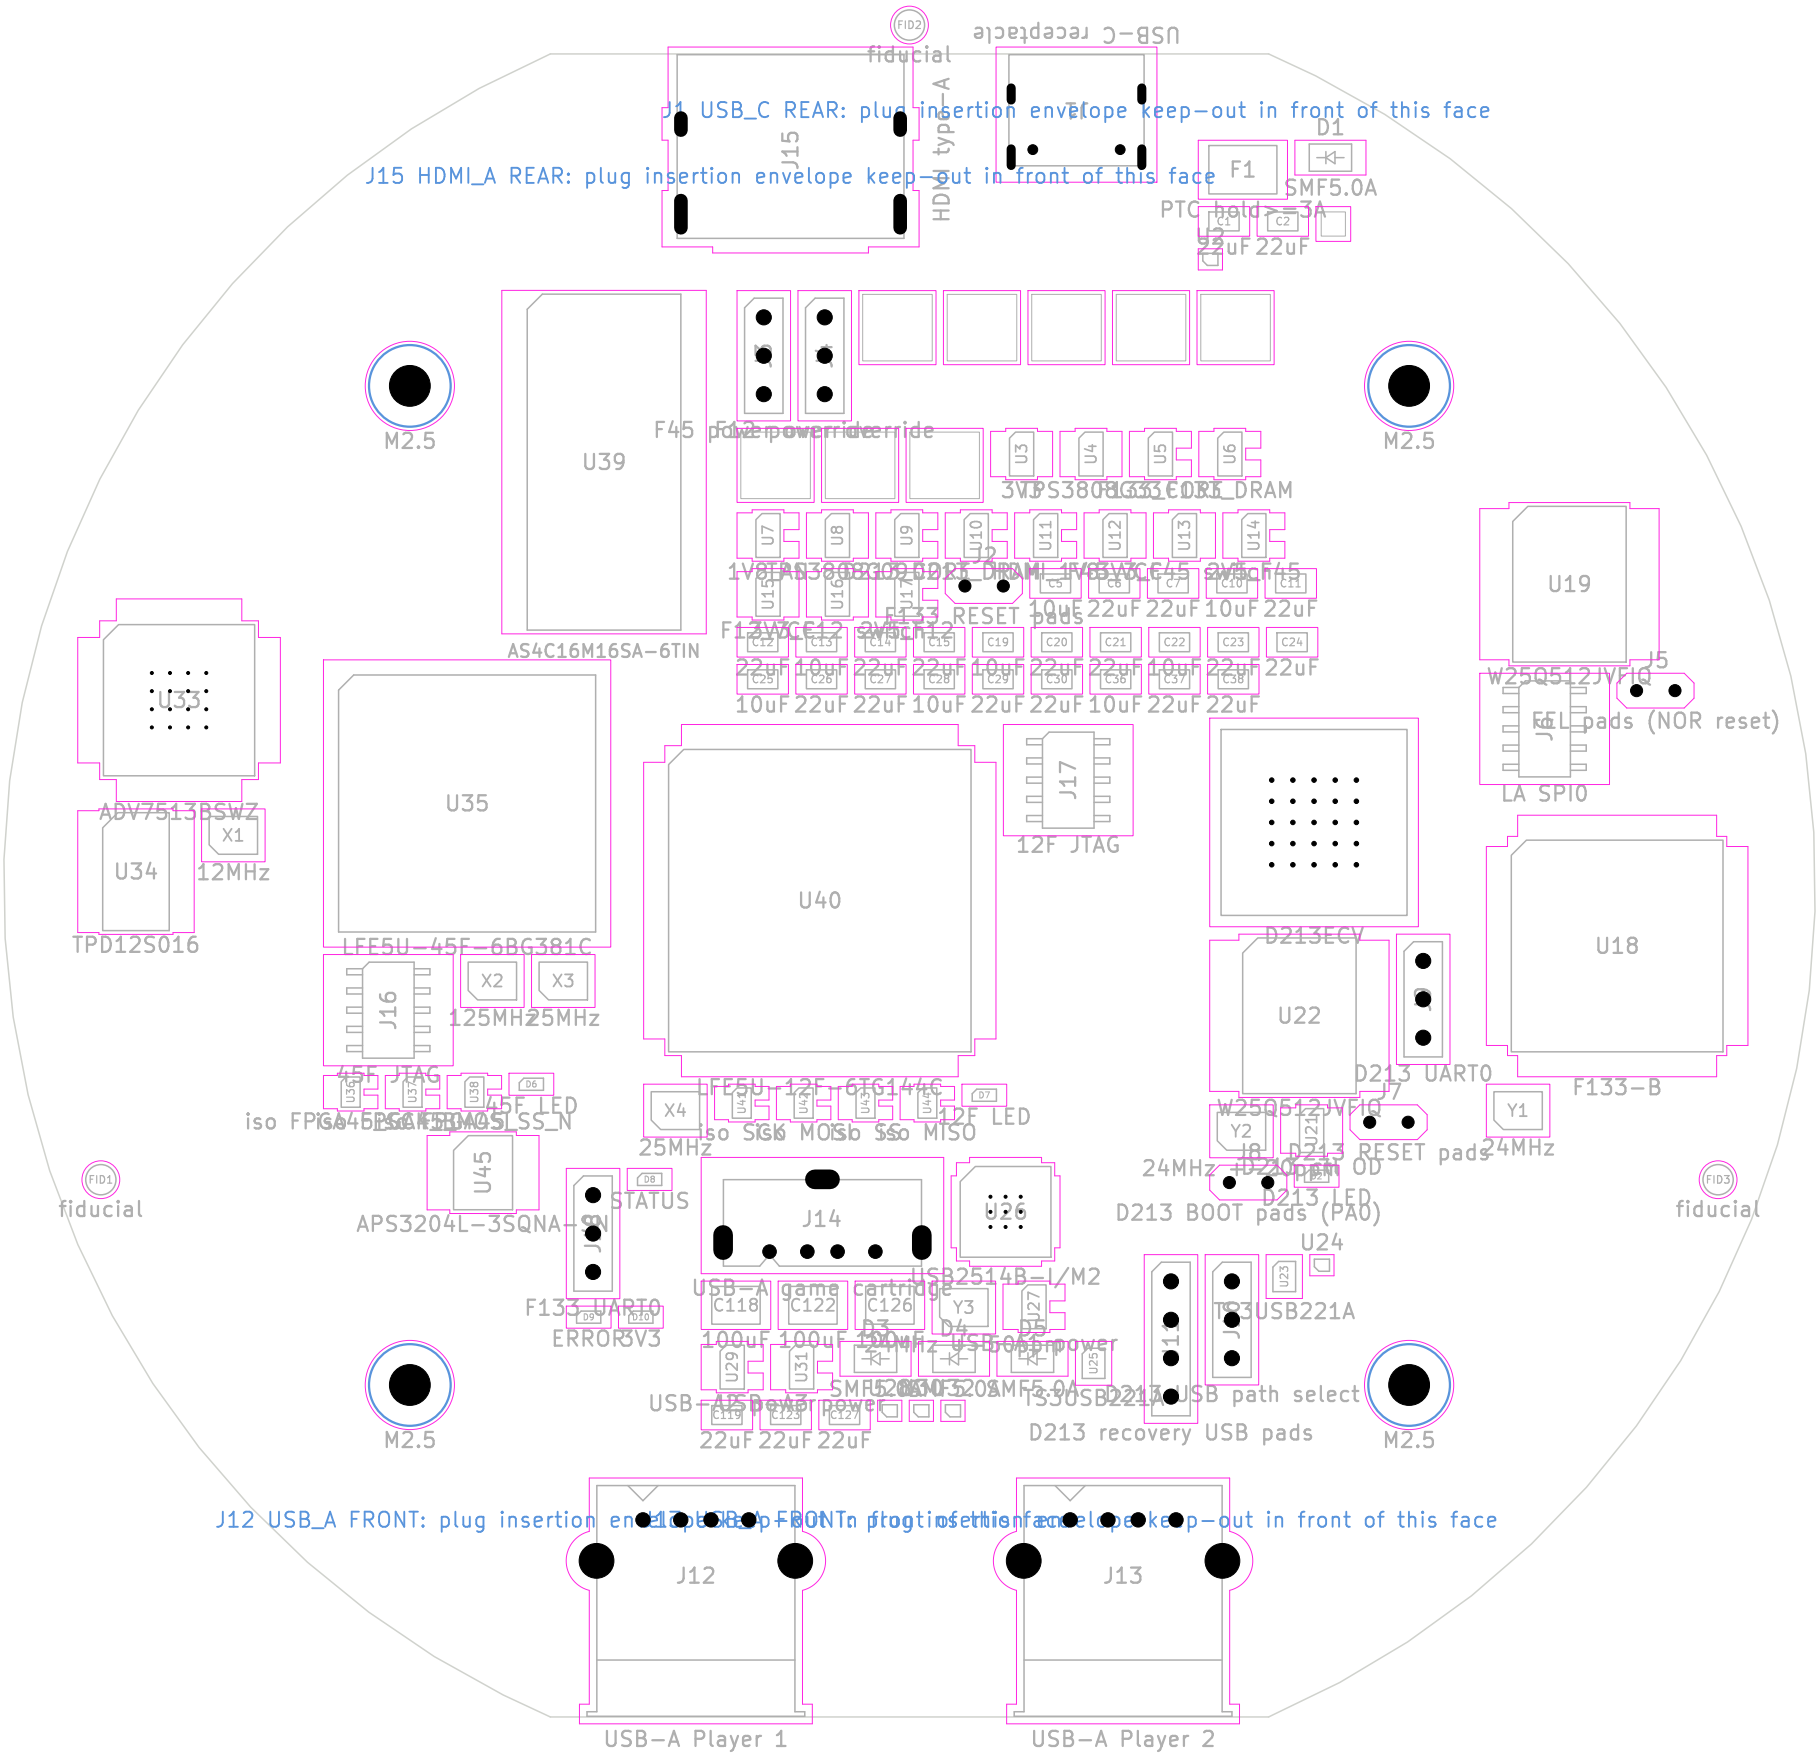
fiducial
USB-C receptacle
J1 USB_C REAR: plug insertion envelope keep-out in front of this face
J15
HDMI type-A
J15 HDMI_A REAR: plug insertion envelope keep-out in front of this face
F1
D1
SMF5.0A
PTC hold>=3A
22uF 22uF
M2.5
U39
AS4C16M16SA-6TIN
U3
U4
U5
U6
U7
U8
U9
U10
U11
U12
U13
U14
U15
U16
U17
J2
F133 RESET pads
C5
C6
C7
C10
C11
C12
C13
C14
C15
C19
C20
C21
C22
C23
C24
C25
C26
C27
C28
C29
C30
C36
C37
C38
10uF
22uF
U19
W25Q512JVFIQ
J5
FEL pads (NOR reset)
LA SPI0
U33
ADV7513BSWZ
U34
TPD12S016
X1
12MHz
U35
LFE5U-45F-6BG381C
U40
LFE5U-12F-6TG144C
J17
12F JTAG
D213ECV
U18
F133-B
U22
W25Q512JVFIQ
D213 UART0
J7
D213 RESET pads
Y1
24MHz
J16
45F JTAG
X2
125MHz
X3
25MHz
45F LED
X4
25MHz
U41
U42
U43
U44
D7
12F LED
iso MISO
U45
APS3204L-3SQNA-SN
D8
STATUS
J9
F133 UART0
D9
D10
ERROR
3V3
J14
USB-A game cartridge
U26
USB2514B-I/M2
Y2
24MHz
J8
D213 BOOT pads (PA0)
D213 LED
U24
U23
TS3USB221A
J11
J10
D213 USB path select
D213 recovery USB pads
C118
C122
C126
100uF
Y3
24MHz
U27
U29
U31
U25
D3
D4
D5
SMF5.0A
C119
C123
C127
22uF 22uF 22uF
J12 USB_A FRONT: plug insertion envelope keep-out in front of this face
J12
J13
USB-A Player 1
USB-A Player 2