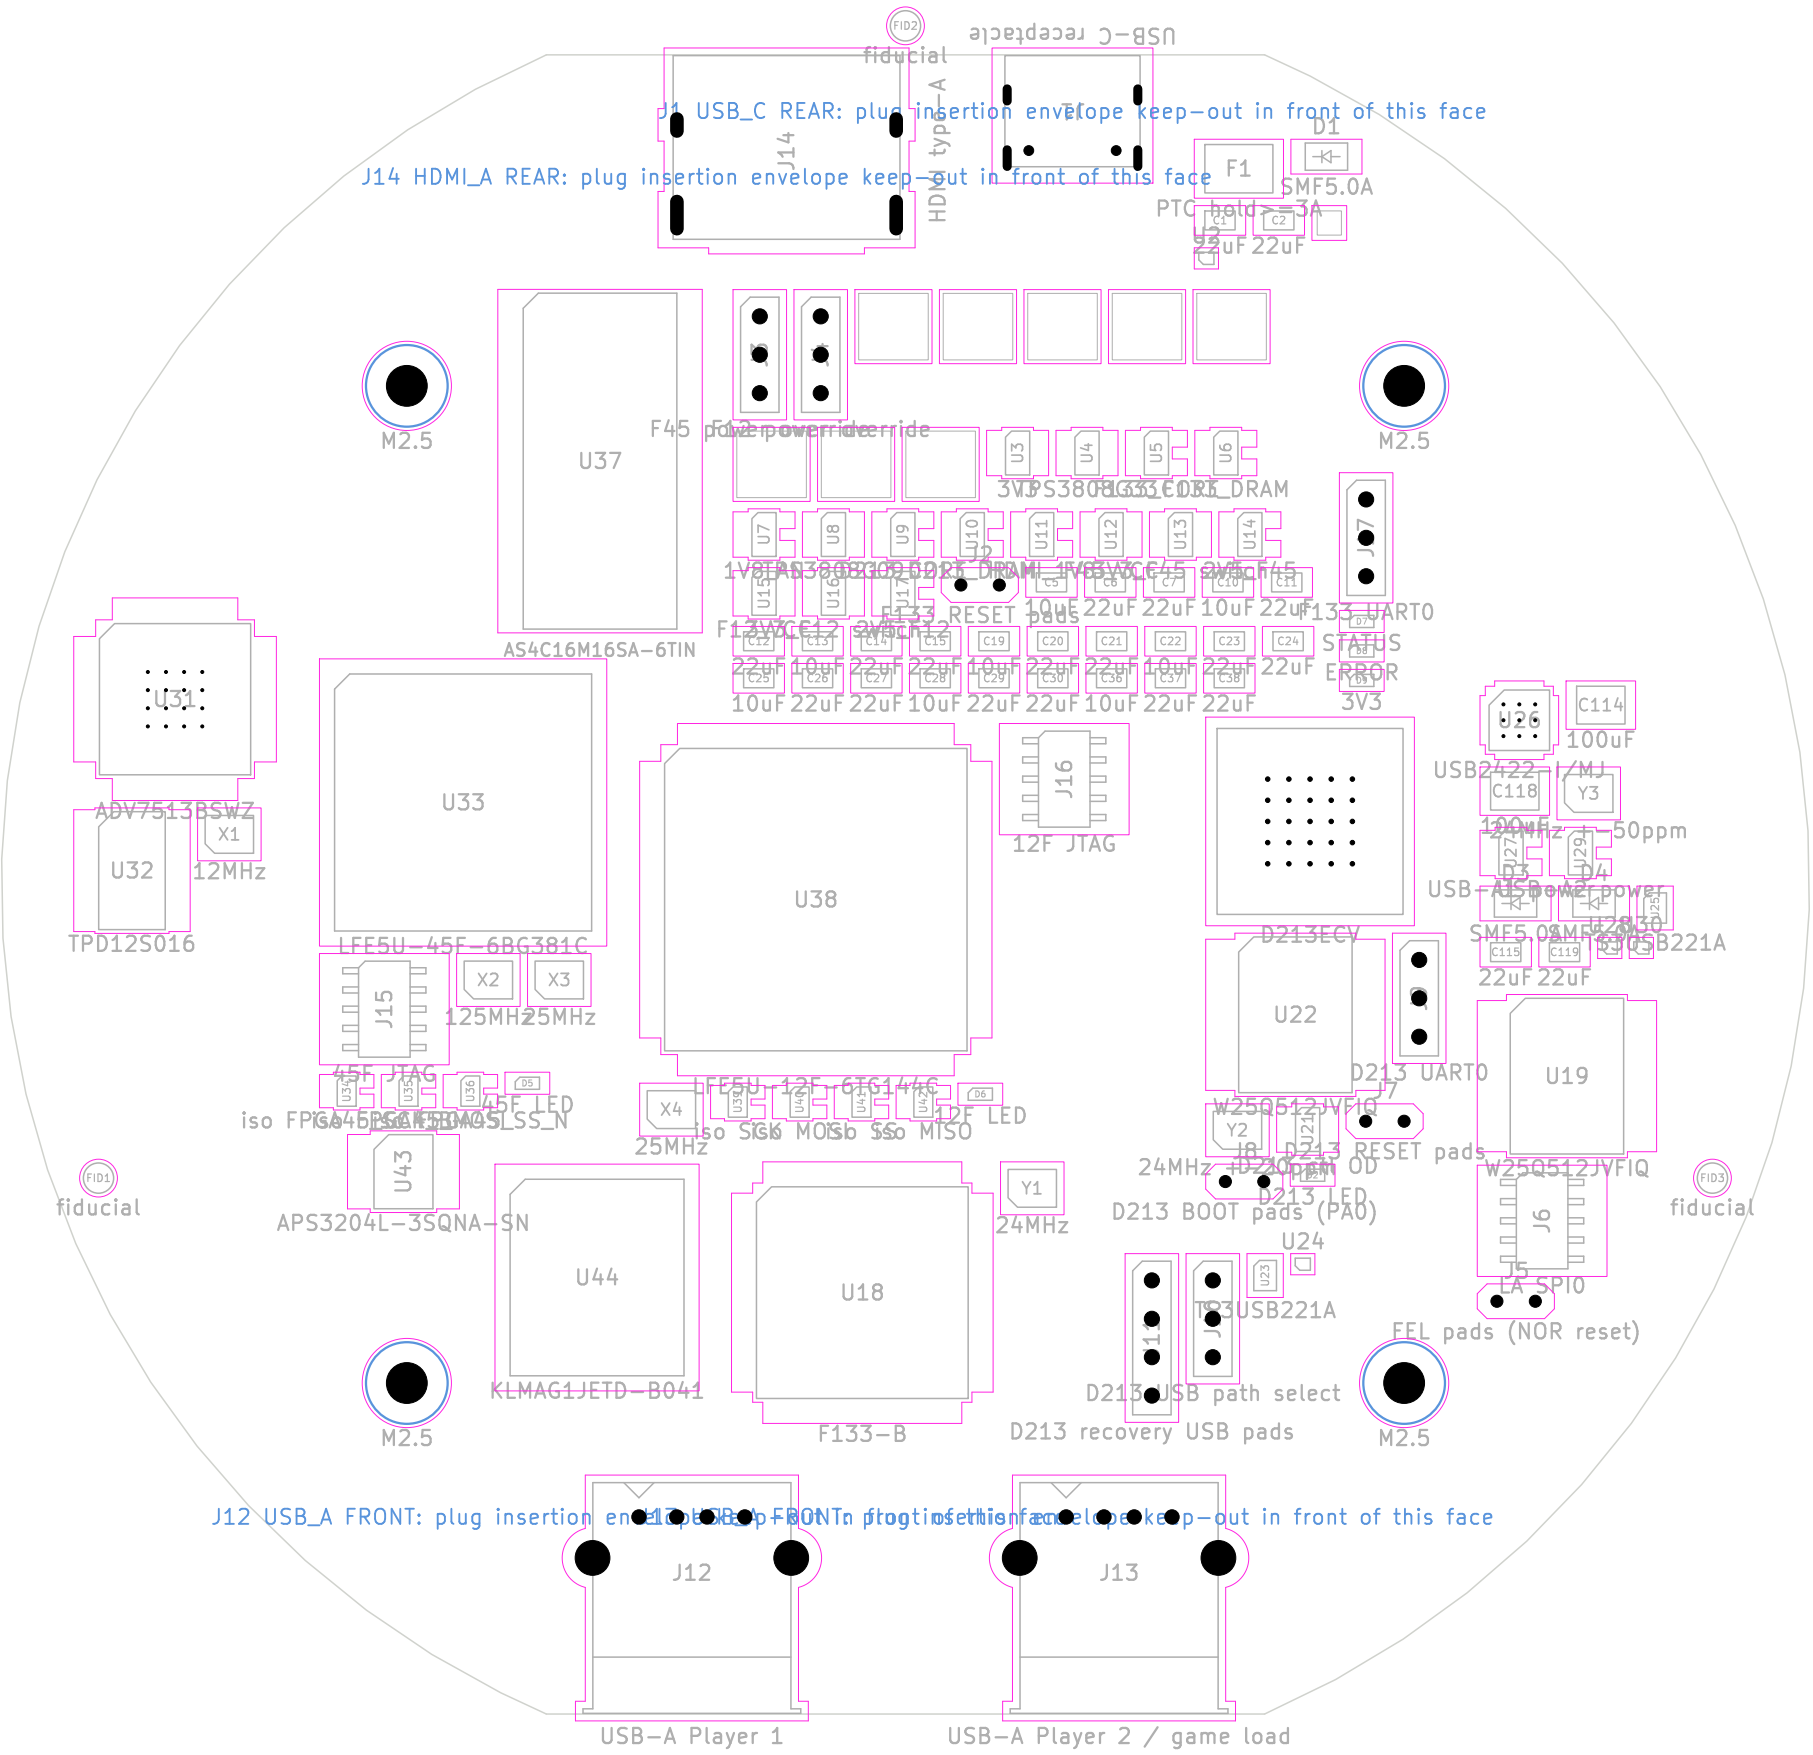
FID2
fiducial
USB-C receptacle
J1 USB_C REAR: plug insertion envelope keep-out in front of this face
J14 HDMI_A REAR: plug insertion envelope keep-out in front of this face
J14
HDMI type-A
F1
PTC hold>=3A
D1
SMF5.0A
C1
C2
22uF
22uF
M2.5
M2.5
U37
AS4C16M16SA-6TIN
F45 power override
F12 power override
U3
U4
U5
U6
U7
U8
U9
U10
U11
U12
U13
U14
U15
U16
U17
J2
F133 RESET pads
J7
F133 UART0
STATUS
ERROR
3V3
C5
C6
C7
C10
C11
C12
C13
C14
C15
C19
C20
C21
C22
C23
C24
C25
C26
C27
C28
C29
C30
C36
C37
C38
10uF
22uF
U41
ADV7513BSWZ
U32
TPD12S016
X1
12MHz
U33
LFE5U-45F-6BG381C
U38
LFE5U-12F-6TG144C
J16
12F JTAG
D213ECV
U26
USB2422-I/MJ
C114
100uF
C118
Y3
24MHz +-50ppm
U27
U29
D3
D4
USB-A1 power
USB-A2 power
SMF5.0A
U25
U28
U30
TS3USB221A
C115
C119
22uF
22uF
U19
W25Q512JVFIQ
FID3
fiducial
J6
J5
LA SPI0
FEL pads (NOR reset)
J15
45F JTAG
X2
125MHz
X3
25MHz
U34
U35
U36
D5
45F LED
iso FPGA45_SS_N
X4
25MHz
U39
U40
U41
U42
iso SCK
iso MOSI
iso SS
iso MISO
D6
12F LED
U22
W25Q512JVFIQ
D213 UART0
D213 RESET pads
Y2
24MHz
J8
D213 BOOT pads (PA0)
D213 LED
U24
U23
TS3USB221A
FID1
fiducial
U43
APS3204L-3SQNA-SN
U44
KLMAG1JETD-B041
U18
F133-B
Y1
24MHz
J11
D213 USB path select
D213 recovery USB pads
M2.5
M2.5
J12 USB_A FRONT: plug insertion envelope keep-out in front of this face
J13 USB_A FRONT: plug insertion envelope keep-out in front of this face
J12
J13
USB-A Player 1
USB-A Player 2 / game load