CALIBER MINING AND LOGISTICS LIMITED · PULSE-II · TRIPS & PRODUCTIVITY

Trip Timing & Gap Report

Operating manual

For site in-charges, MIS staff and reviewers · Matches the system as of 11 November 2026 · The picture uses sample data, not real records

1. What this report shows

Shows how long the trips of the saved Vehicle Log Books took, in two views: from loading to unloading of a trip, and from unloading to the loading of the next trip. Every time above 15 minutes is counted as a delay in one of three bands (15 to 20, 20 to 30 and 30+ minutes), by site, driver, door number and loading machine. A third view, All trip rows, lists every trip row with its times.

> **One row.** In the two delay views a row changes as you go step by step: one site, then one date and shift of that site, then one driver (or one door number or one loading machine) of that shift, then one delayed trip, then one trip row of the card. In All trip rows, one row is one trip row of one saved Vehicle Log Book. A trip row can hold more than one trip.


2. Open the report and choose what to see

In the left menu open **Reports** → **Trips & Productivity** → **Trip Timing & Gap Report**. Then set the selectors described below.

Selector or button	What it does
From / To	First and last date to include, by the Book Date of the log book. From starts on the 1st of the current month and To on today's date. Dates before 01-11-2026 cannot be chosen, From must not be after To, and the range can be at most 366 days. If the dates are not valid, the screen shows "Choose a valid date range of at most 366 days." and no data is loaded. Changing a date loads the data again.
Site	Keeps only the log books of one site. "All" keeps every site your login can see. Once a site is chosen, the Shift, Vehicle / equipment, Driver / operator and Work order lists show only that site's entries.
Shift	Keeps only the log books of the chosen shift. Every shift in the list belongs to one site, so shifts of the same name at two sites appear as separate entries. Choose Site first, then Shift.
Vehicle / equipment	Keeps only the log books of the chosen vehicle. It does not choose the loading equipment; use Loading equipment for that.
Driver / operator	Keeps only the log books saved in the name of the chosen person. The list has only the people found on the log books and scan cards of the chosen dates.
Work order	Keeps only the log books saved against the chosen work order. The list has only the work orders found on the log books and scan cards of the chosen dates.

Loading equipment	Keeps only the trip rows loaded by the chosen loading equipment. It changes the table and the "report rows" count only; the logbooks, assets and trips counts above the table do not change.

3. What is on the screen

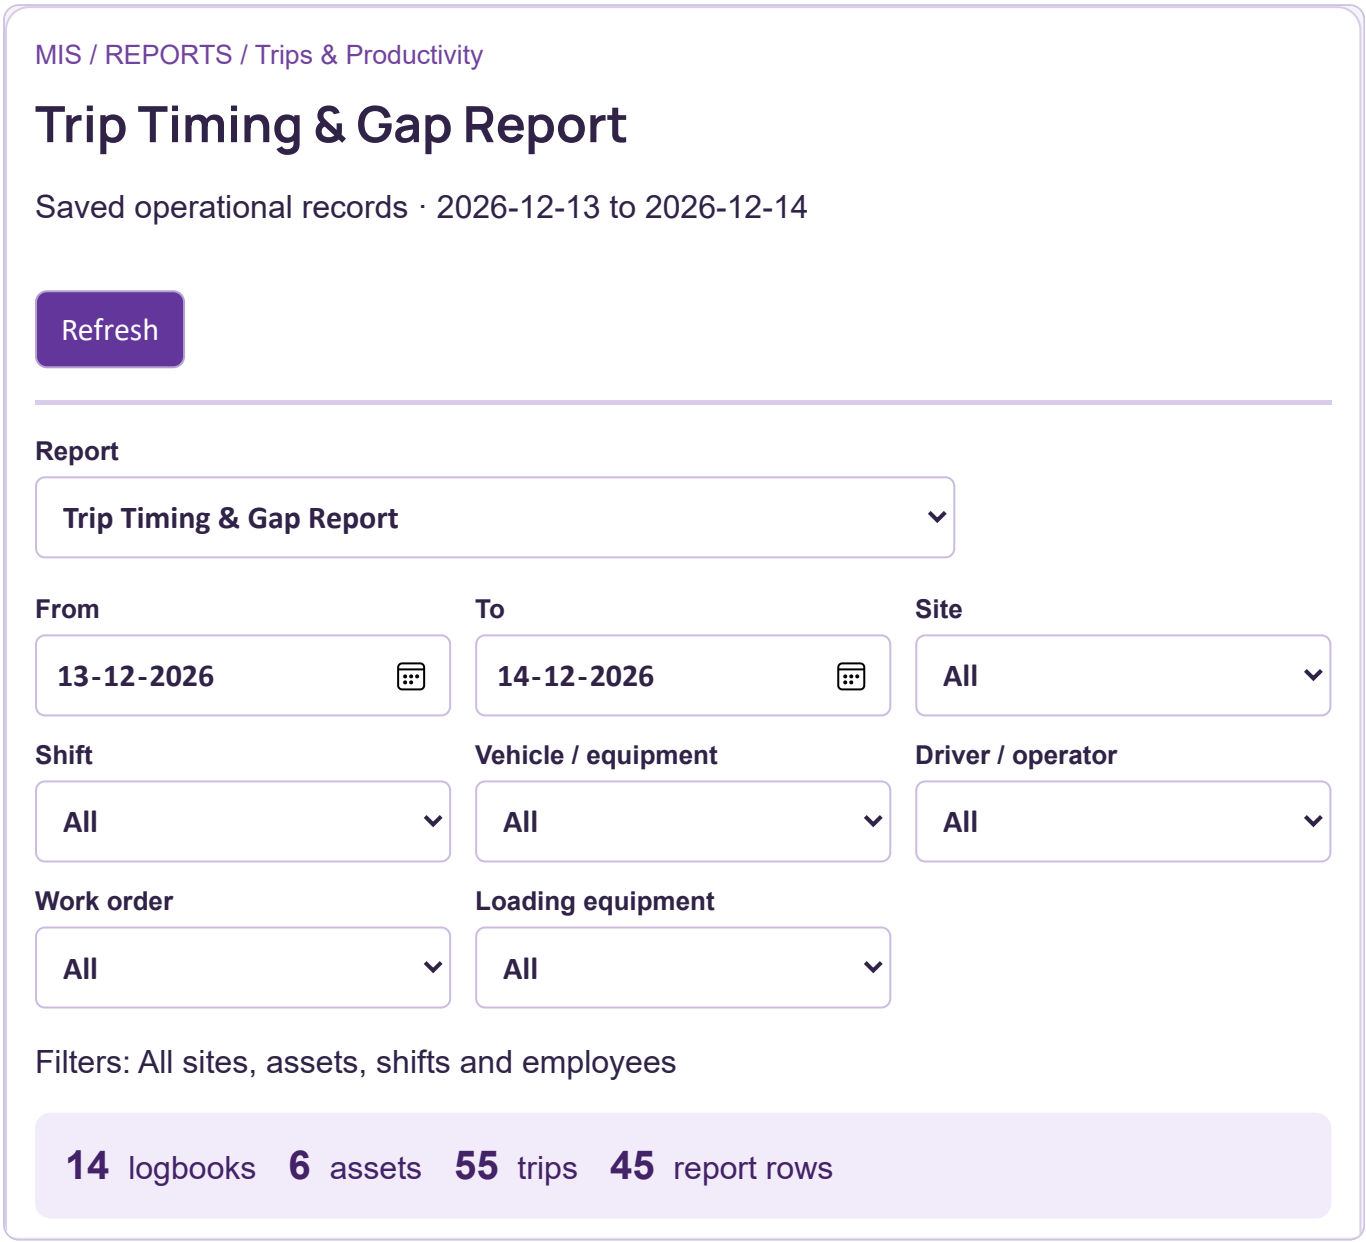

Picture 1. The report screen: selectors, totals and the table. *Sample data.*

On the screen	What it shows
Report	Drop-down at the top with every report, listed under its group. Choosing a name opens that report.
Saved operational records	Line under the report name. It repeats the From and To dates in use.
Refresh	Loads the saved log books again for the same dates. Press it when log books were saved or corrected after the report was opened. While data is loading the button cannot be pressed and "Loading complete report data…" is shown.

Filters:	One line listing the selectors that are set. With none set it reads "All sites, assets, shifts and employees". The line uses short names: site, shift, asset (Vehicle / equipment), employee (Driver / operator), workOrder and loading. For shift, asset and employee it shows the record number of the choice, not its name.
logbooks	Number of saved log books, VLB and ELB together, that match the dates and filters.
assets	Number of different vehicles and equipment on those log books.
trips	Total trips on those log books.
report rows	Number of rows in the table below.
Loading → Unloading	First view button. It counts the minutes from the loading time to the unloading time of the same trip row. The report opens on this view.
Unloading → next Loading	Second view button. It counts the minutes from the unloading time of one trip row to the loading time of the next trip row on the same card.
All trip rows	Third view button. It shows the plain list of every trip row with L. time, U. time, Elapsed (min) and GAP (min).
Step trail	Line under the view buttons, for example All sites › SITE › 05-11-26 · Shift 1 › DRIVER › book number. It shows where you are. Press an earlier name to go back to that step. The violet Back button at the start of this line, and the one beside Search this report, go back one step; while a step is open, the round back arrow at the top of the page does the same. Long column headings are written on two lines. Drag the right edge of a column heading to make the column wider or narrower, double-click the edge to fit it again; Reset table under Actions puts every column back.
Yellow line	One sentence above the table: how many of the timed trips (or gaps) were above 15 minutes, the percentage, the count in each band, and how many could not be judged.
Step 1 · All sites	One line per site and a last line ALL SITES. Press a site to open Step 2. Press a coloured number to open Step 2 with only the shifts that have that band.
Driver-wise / Door no.-wise / Loading machine-wise	Three buttons in Step 3. They show the same delays counted by driver, by vehicle door number or by loading machine.
Band buttons	All over 15 min, 15 to 20 min, 20 to 30 min and 30+ min, each with its count. In Step 2, Step 3 and Step 4 they keep only the chosen band. Press All over 15 min to see every band again.
Step 2	The chosen site date by date and shift by shift: one line per date and shift, newest first, and a last line ALL DATES. Press a line to open Step 3 for that shift. Press the last line to see the drivers for all the dates together.

Step 3	One line per driver (or door, or loading machine) of the chosen date and shift, the one with the most delays first, and a last line TOTAL. All the bands of a driver are on his one line, and the column "Also over 15 min in ..." adds his delays in the other view. Press a line to open Step 4. Press a coloured number to open Step 4 with that band only.
Step 4	Every delayed trip (or gap) behind the chosen line, newest first, with date, shift, book number, door number, trip serial, loading machine, the two times and the minutes. Press a line to open its card.
Step 5 · Trip card	Every trip row of that one Vehicle Log Book in order, with both timings side by side, so that a delay can be seen against the rest of the shift.
How this report counts	Press it to open the counting rules under the table.
Notice in All trip rows	"Elapsed times cover each recorded row. Rows may represent multiple trips; they are not individual trip cycle times. First-row gaps are unavailable." It says that Elapsed (min) is for the whole row, that a row can hold more than one trip, and that the first row of a log book has no gap.
No matching records or exceptions found.	Shown inside the table when nothing matches the dates and filters.

4. The columns

Column	Meaning
Date / Shift	Step 2. The Book Date and the shift saved on the cards. One line is one shift of one date at the chosen site.
Drivers with a delay	Delay views, Step 1. Number of different drivers of the site with at least one time above 15 minutes.
Trips timed / Gaps timed	Number of trip rows (or gaps) where both times are written and the time could be worked out. This is the base for the percentage.
Within 15 min	Times of 15 minutes or less. These are not delays.
15 to 20 min	Times of more than 15 and up to 20 minutes. Shown in yellow.
20 to 30 min	Times of more than 20 and up to 30 minutes. Shown in orange.
30+ min	Times of more than 30 minutes. Shown in red.
Total over 15 min	The three bands added together.
% over 15 min	Total over 15 min divided by Trips timed (or Gaps timed).
Longest (min)	The longest single time on that line, in minutes.
Also over 15 min in Unloading → next Loading / in Loading → Unloading	The number of delays the same line has in the other view. A driver who is late in both views shows both on his one line.
Not judged	Rows that could not be timed: a time is not written, the card was saved without trip times, or the time works out longer than a shift. They are never counted as delays.

Drivers on it / Vehicles loaded	Door no.-wise: number of drivers who drove that vehicle. Loading machine-wise: number of vehicles that machine loaded.
Minutes taken / Gap minutes	Step 4. The minutes of that delayed trip or gap, in the colour of its band.
Unloaded at (previous trip) / Loaded again at	Step 4 of Unloading → next Loading. The unloading time of the trip before, and the loading time of this trip.
Band	Step 4. The band of that row in words.
Loading → Unloading (min) / Unloading → this loading (min)	Step 5. Both timings of every trip row of the card. A time above 15 minutes is coloured.
Remark	Step 5. Says when a row is the first trip of the card (no gap before it) or why a row could not be judged.
Date	Book Date of the log book. On screen it shows as DD-MM-YY, for example 13-12-26.
Site	Site saved on the log book.
Book NO	Book number the system gave when the log book was saved. A number that begins with VLB_M is a typed entry; one that begins with VLB_S came from a scanned card.
Door NO	Door number of the vehicle, for example V9001.
Caliber ID	Employee ID of the driver on the log book, for example CMPL90001.
Employee	Name of the driver on the log book, for example SAMPLE DRIVER 01.
Shift	Shift name saved on the log book.
Tr.Sr.No	Serial number of the trip row. It is the serial saved with the row; if none was saved, it is the position of the row in the log book (1, 2, 3 and so on).
Equipment	Loading equipment written in the trip row.
Trips	Number of trips written in this trip row.
L. time	Loading time of the row in 24-hour time, for example 05:20. Blank if not saved.
U. time	Unloading time of the row in 24-hour time. Blank if not saved.
Elapsed (min)	Minutes from L. time to U. time of the same row. If U. time is earlier than L. time, it is taken as the next day. Blank if either time is missing or the log book was saved without trip times.
GAP (min)	Minutes from the U. time of the previous row of the same log book to the L. time of this row. Blank for the first row of every log book, when either of those two times is missing, and for log books saved without trip times.

5. Keep in mind

- 15 minutes or less is not a delay. Exactly 20 minutes falls in 15 to 20 min, and exactly 30 minutes falls in 20 to 30 min.

- The first trip of a card has no gap before it, so Unloading → next Loading has fewer rows than Loading → Unloading.
- A row with a time not written is shown under Not judged. It is not a delay and it is not in the percentage.
- Tea and meal breaks are not removed. A break between two trips shows as a gap in Unloading → next Loading.
- Times that cross 12 at night are counted forward: 23:55 to 00:07 is 12 minutes.
- A delay is counted against the driver named on the card and against the loading machine written on the row being loaded.
- In the delay views, Loading equipment keeps only the trip rows loaded by that machine. Step 5 always shows the whole card.
- A site written in different spellings on the cards (for example "Majri OB" and "majri ob") is shown as one site in the delay views.
- Only Vehicle Log Books are used. LMV log books and deleted log books are not shown.
- When Trips is more than 1, Elapsed (min) covers all the trips of that row together. It is not the time of one trip.
- GAP (min) is worked out inside one log book only. The gap between the last row of one log book and the first row of the next is not shown.
- GAP (min) is saved with the log book. When Loading equipment hides some rows, each gap still refers to the row just before it in the log book.
- The counts "logbooks", "assets" and "trips" above the table take all matching log books, VLB and ELB together. They do not change with Loading equipment.
- "Reset table" in the Actions menu of the table also puts From back to the 1st of the current month and To back to today's date.

6. Download, print and search

- Tables on this page have a **Generate** button: **Download as PDF**, **Download as Excel** or **Smart Print**. The file contains the whole table, not only the rows visible on screen.
- Type in **Search this report** to find a door number, driver or card inside a table.
- Press a column heading to sort by that column.
- If the page looks old after an update, press **Ctrl + F5** once.

7. Review checklist

Step	Do this
1	Set From and To, and choose Site if you want one site only.
2	Press Loading → Unloading. Read the yellow line, then the site lines.
3	Press a site. You get one line for every date and shift. Press the shift you want to check.
4	The driver with the most delays in that shift is on top, with all his bands on one line. Read the column "Also over 15 min in ..." to see his delays in the other view.
5	Press the driver. Note the Book no. and Tr.Sr.No of each delayed trip, and press the line to see the whole card.
6	Compare the loading and unloading times of doubtful rows with the paper trip card.

7	Press Unloading → next Loading and do the same. In Step 3 press Loading machine-wise: if many vehicles wait at the same machine, the delay is at the machine and not with one driver.
8	Look at Not judged. Get the missing times written on those cards so that they are counted next time.

> **This manual shows how to read and verify the report.** What action to take on its findings is as instructed by management.

8. Common questions

Question	Answer
How do I see one driver for the whole period, not one shift?	In Step 2 press the last line, ALL DATES. Step 3 then lists the drivers for all the dates and shifts together.
Why is Trips timed less than the trips of the driver?	Rows with a time not written, and cards saved without trip times, are under Not judged. Trips timed + Not judged = all his trip rows.
A long gap was the meal break. Is it still counted?	Yes. Breaks are not removed. Open the card in Step 5 and read the times to judge it.
Why does a driver appear under a loading machine that was slow?	The gap before a loading is counted against the loading machine written on that row. Use Loading machine-wise to see whether the wait repeats at one machine.
What does "longer than a shift" mean in Remark?	The two times give more than 12 hours, which happens when a time is written wrongly. The row is not judged; correct the card.
Why is GAP (min) blank on the first row of a log book?	A gap needs the unloading time of the row before it in the same log book. The first row has no row before it.
Why are L. time, U. time, Elapsed (min) and GAP (min) all blank for a log book?	That log book was saved without trip times. Only the loading equipment and the number of trips were entered.
Why is Elapsed (min) very large on a row?	Either the row holds several trips, or its U. time is earlier than its L. time and was taken as the next day. Check Trips and both times on the trip card.
Does one row mean one trip?	Not always. The Trips column shows how many trips the row holds.