CALIBER MINING AND LOGISTICS LIMITED · PULSE-II · TRIPS & PRODUCTIVITY

Loading Equipment-wise Report

Operating manual

For site in-charges, MIS staff and reviewers · Matches the system as of 13 November 2026 · The picture uses sample data, not real records

1. What this report shows

Shows what every loading machine of a site did in each shift: the trips it loaded, the share of the shift it worked, and how often and how long it stood idle between two loadings. A machine that did not run is shown in red when it was in BD and in brown when it had no hours and was not in BD. The same report is at the bottom of the Dashboard.

> **One row.** In Step 1 one row is one site. Pressing a row opens the next step: Step 2 has one row for each date and shift, Step 3 one row for each loading machine, Step 4 one row for each idle stop, and Step 5 shows the trip card of a tipper.


2. Open the report and choose what to see

In the left menu open **Reports** → **Trips & Productivity** → **Loading Equipment-wise Report**. Then set the selectors described below.

Selector or button	What it does
From / To	First and last date to include, by the Book Date of the log book. From starts on the 1st of the current month and To on today's date. Dates before 01-11-2026 cannot be chosen, From must not be after To, and the range can be at most 366 days. If the dates are not valid, the screen shows "Choose a valid date range of at most 366 days." and no data is loaded. Changing a date loads the data again.
Site	Keeps only the log books of one site. "All" keeps every site your login can see. Once a site is chosen, the Shift, Vehicle / equipment, Driver / operator and Work order lists show only that site's entries.
Shift	Keeps only the log books of the chosen shift. Every shift in the list belongs to one site, so shifts of the same name at two sites appear as separate entries. Choose Site first, then Shift.
Vehicle / equipment	Keeps only the log books of the chosen vehicle. It does not choose the loading equipment; use Loading equipment for that.
Driver / operator	Keeps only the log books saved in the name of the chosen person. The list has only the people found on the log books and scan cards of the chosen dates.
Work order	Keeps only the log books saved against the chosen work order. The list has only the work orders found on the log books and scan cards of the chosen dates.

Loading equipment	Keeps only the chosen loading machine in both views. The logbooks, assets and trips counts above the views do not change.

3. What is on the screen

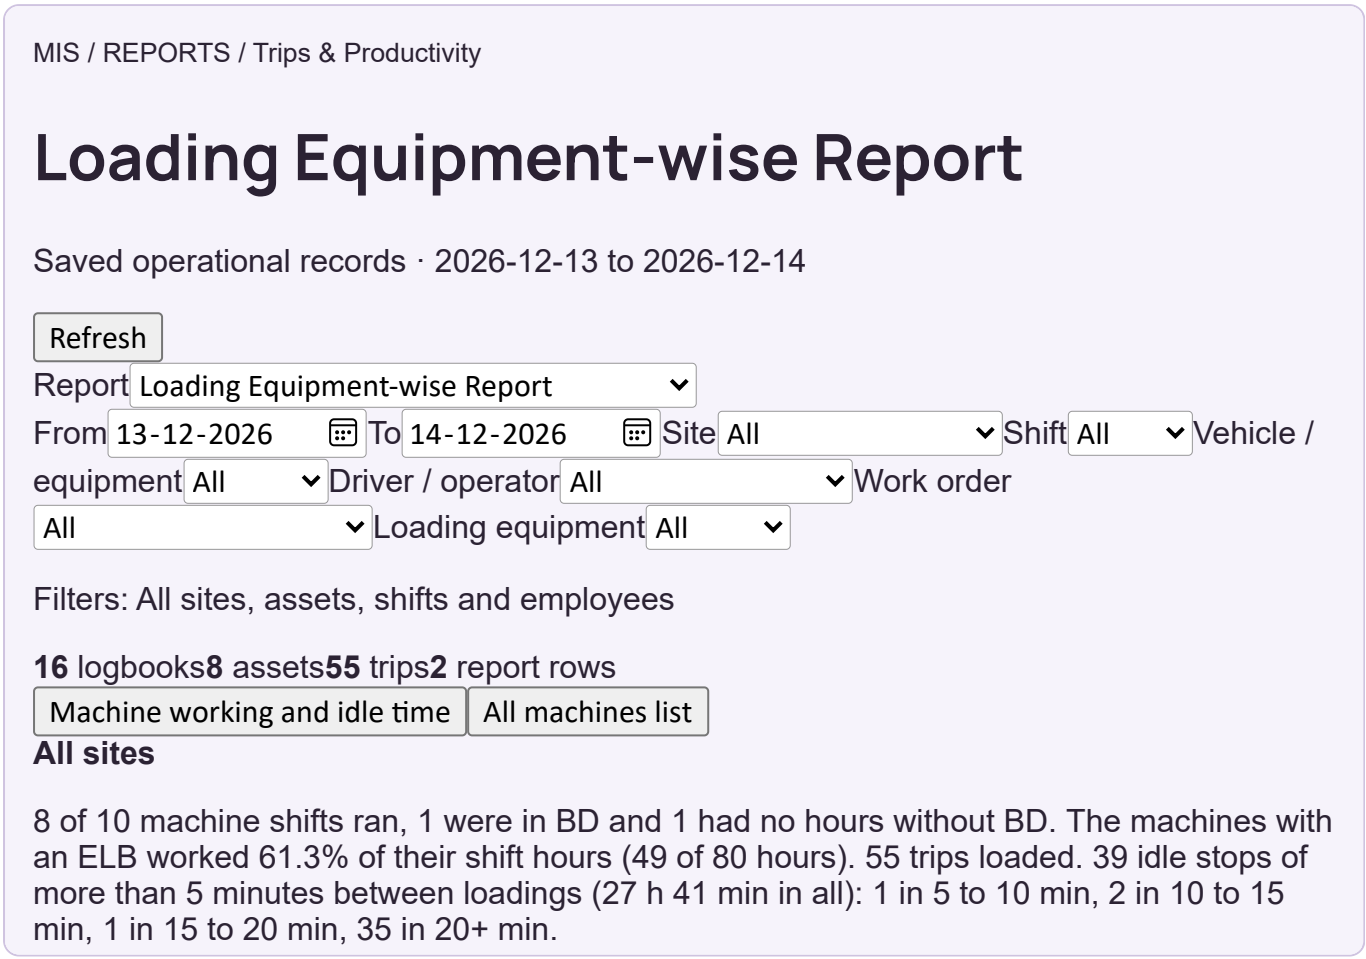

Picture 1. The report screen: selectors, totals and the table. *Sample data.*

On the screen	What it shows
Report	Drop-down at the top with every report, listed under its group. Choosing a name opens that report.
Saved operational records	Line under the report name. It repeats the From and To dates in use.
Refresh	Loads the saved log books again for the same dates. Press it when log books were saved or corrected after the report was opened. While data is loading the button cannot be pressed and "Loading complete report data…" is shown.
Filters:	One line listing the selectors that are set. With none set it reads "All sites, assets, shifts and employees". The line uses short names: site, shift, asset (Vehicle / equipment), employee (Driver / operator), workOrder and loading. For shift, asset and employee it shows the record number of the choice, not its name.
logbooks	Number of saved log books, VLB and ELB together, that match the dates and filters.
assets	Number of different vehicles and equipment on those log books.

trips	Total trips on those log books.
report rows	Number of rows in the "All machines list" view.
Machine working and idle time	The first view, open when the report opens. It goes down in five steps: all sites, one site date by date and shift by shift, the machines of one shift, the idle stops of one machine, and the trip card.
All machines list	The second view: the plain list of loading machines with their trips and vehicles, as this report was earlier.
All sites › site › date · Shift › Machine	The line of steps above the table shows where you are. Press an earlier step to go back to it. The violet Back button goes back one step.
Yellow summary line	One sentence above the table: how many machine shifts ran, how many were in BD, how many had no hours without BD, the share of shift hours worked, the trips loaded and the idle stops in each band.
All machines · In BD · No hours, not in BD · Idle 5 to 10 min …	Buttons above the table in Step 2 and Step 3, each with its count. Press one to keep only the lines that have such a machine or such a stop. Press "All machines" to see every line again.
Coloured numbers in the table	Yellow and orange numbers are idle stops in a band, a red number is machines in BD, a brown number is machines with no hours and not in BD. Pressing a coloured number opens the next step with only the lines behind that number.
Red line	In Step 3, a machine that did not run and was in BD: its ELB is saved as Breakdown or Maintenance, or Pulse shows breakdown for the whole shift.
Brown line	In Step 3, a machine that did not run and was not in BD: No operator, Not in use, no hours recorded, or no ELB entered for the shift.
Last line of a table (ALL SITES, ALL DATES, TOTAL)	The total of the lines above it. It stays at the foot of the table however the table is sorted. Pressing it opens the next step for all the lines together.
How this report counts	Press to open the rules of the report on the screen itself.
No loading machine in these dates and filters.	Shown when no loading machine matches the dates and filters.
Dashboard	The same report, with the same steps, is the last report at the bottom of the Dashboard. It keeps its own dates there.

4. The columns

Column	Meaning
Step 1 · Site	Site of the log books. All spellings of one site are shown as one site.
Step 1 · Machine shifts	Number of machine shifts in the line: one loading machine in one shift of one date counts as one.
Step 1 · Running	Machine shifts in which the machine loaded at least one trip or its ELB shows hours.
Step 1 · In BD	Machine shifts in which the machine did not run and was in BD. Shown in red.

Step 1 · No hours, not in BD	Machine shifts in which the machine did not run and was not in BD. Shown in brown.
Step 1 · Trips loaded	Trips of every tipper card row that names the machine, added up.
Step 1 · % of shift worked	Hours worked out of the hours of the shift. 8 hours worked in an 8-hour shift is 100%, 4 hours is 50%. On a line for many machines it is their hours worked together out of their shift hours together. A machine shift with no ELB is left out.
Step 1 · Hours worked	Working hours on the machine's ELB of the shift (closing HMR minus opening HMR), added up.
Step 1 · 5 to 10 min	Idle stops of more than 5 and up to 10 minutes between one loading and the next.
Step 1 · 10 to 15 min	Idle stops of more than 10 and up to 15 minutes.
Step 1 · 15 to 20 min	Idle stops of more than 15 and up to 20 minutes.
Step 1 · 20+ min	Idle stops of more than 20 minutes.
Step 1 · Total idle stops	All idle stops of more than 5 minutes: the four bands added up.
Step 1 · Total idle time	The minutes of all those stops added up, shown as hours and minutes. A dash when no machine in the line ran.
Step 1 · Longest idle (min)	The longest time between two loadings in the line, in minutes.
Step 1 · Shift hours	Hours of the shifts of the machine shifts that have an ELB, added up. This is what % of shift worked is measured against.
Step 1 · Hours in BD	Breakdown hours saved on the ELBs, taken from Pulse or entered by hand, added up.
Step 1 · Not judged	Trips that make no idle stop: the card was saved without times, the loading time is not written, or it falls far outside the shift. These trips are still counted in Trips loaded.
Step 2 · Date	Book Date of the cards, newest first. The last line reads ALL DATES.
Step 2 · Shift	Shift saved on the cards.
Step 2 · Entry stage	How far the batch of that shift has gone: "VLB still open" (tipper cards are still being entered), "VLB locked", "Batch closed", or "No batch". Idle time is complete only after the VLB is locked.
Step 2 · Machines	Number of loading machines in that shift.
Step 2 · Running to Not judged	The same columns as in Step 1, for that date and shift.
Step 3 · Door no.	Door number of the loading machine from the Equipment master. If the name on the cards matches no machine, it is shown as written.
Step 3 · Machine	Name of the machine from its ELB or the Equipment master.
Step 3 · Operator	Operator named on the machine's ELB of the shift.

Step 3 · Shifts	Shown only when the machines of all dates are opened together: the number of shifts in the line.
Step 3 · Status	Working, Working with part breakdown, "Working · ELB not entered" (it loaded trips but has no ELB), Breakdown or Maintenance (red line), No operator, Not in use, No hours recorded or ELB not entered (brown line).
Step 3 · Trips loaded to Longest idle (min)	The same columns as in Step 1, for that machine. The running machines come first with the most idle time on top, then the red lines, then the brown lines.
Step 3 · First loading	Time of the machine's first loading in the shift.
Step 3 · Last loading	Time of the machine's last loading in the shift.
Step 3 · Tippers loaded	Number of different tippers the machine loaded.
Step 3 · Shift hours, Hours in BD, Not judged	As in Step 1, for that machine.
Step 3 · Remark	Status reason or remark on the machine's ELB, for example the breakdown reason.
Step 4 · Idle stops · Date, Shift, Loading machine	Date, shift and machine of the stop.
Step 4 · Idle stops · Loaded at	Loading time of the tipper loaded before the stop.
Step 4 · Idle stops · Next loading at	Loading time of the tipper loaded after the stop.
Step 4 · Idle stops · Idle minutes	Minutes from "Loaded at" to "Next loading at", in the colour of its band.
Step 4 · Idle stops · Band	5 to 10 min, 10 to 15 min, 15 to 20 min or 20+ min.
Step 4 · Idle stops · Tipper loaded, Driver	Door number and driver of the tipper loaded before the stop.
Step 4 · Idle stops · Next tipper, Driver of next tipper	Door number and driver of the tipper loaded after the stop.
Step 4 · Idle stops · Book no. of next tipper	Book number of that tipper's card. Pressing the line opens this card in Step 5.
Step 4 · Shifts not worked · Date, Shift, Door no., Machine	Shown under the idle stops, or alone for a machine that did not run: one line for each shift in which it did not run.
Step 4 · Shifts not worked · Status, Reason	Status and reason saved on the machine's ELB. Red for in BD, brown for no hours and not in BD.
Step 4 · Shifts not worked · Hours worked, Hours in BD, ELB book no.	Figures and book number of that ELB. Blank when no ELB was entered.
Step 4 · Shifts not worked · Breakdown in Pulse	Breakdown requests of Pulse saved with the ELB: reference, description and from when to when.

Step 5 · Trip card · Tr.Sr.No, Loading machine, Trips, Loading time, Unloading time	Every trip row of the tipper card, as saved.
All machines list · Site	Site of the Vehicle Log Books that hold the trip rows.
All machines list · Equipment	Loading equipment written in the trip rows, for example TPC901.
All machines list · Trips	Total trips loaded by this equipment: the counted trips of all its trip rows, added up.
All machines list · Vehicles	Number of different vehicles that have a trip row with this equipment.

5. Keep in mind

- An idle stop is the time from one loading to the next loading by the same machine, across all the tippers it loaded in the shift. 5 minutes or less is normal working. Total idle time adds up every stop of more than 5 minutes in full, so it includes the time taken to load the next tipper.
- Until every tipper card of a shift is entered, a machine looks more idle than it was, because the loadings on the missing cards are not there. Look at Entry stage in Step 2: figures of a shift marked "VLB still open" will still change.
- Tea and meal breaks are not removed: each shows as one long stop. The wait before the first loading and after the last loading of the shift is not counted as a stop; First loading and Last loading show those times.
- Only loading machines are listed: excavators, loaders and shovels of the site, and any machine named on a tipper card in the chosen dates. Dozers, graders and drills are not listed.
- A machine with no ELB for the shift comes from the site machine list of the batch. It is listed only when Vehicle / equipment, Driver / operator and Work order are all at "All".
- A trip row with only an unloading time belongs to the shift that loaded it and is not counted again. Night shifts are followed through 12 at night.

6. Download, print and search

- Tables on this page have a **Generate** button: **Download as PDF**, **Download as Excel** or **Smart Print**. The file contains the whole table, not only the rows visible on screen.
- Type in **Search this report** to find a door number, driver or card inside a table.
- Press a column heading to sort by that column.
- If the page looks old after an update, press **Ctrl + F5** once.

7. Review checklist

Step	Do this
1	Set From and To to the period. In Step 1 read the yellow line and compare the sites: Running, In BD, No hours, % of shift worked and the idle bands.
2	Press a site. In Step 2 check Entry stage first; judge idle time only for shifts whose VLB is locked.
3	Press a shift. In Step 3 read the red lines (in BD) and the brown lines (no hours, not in BD) with their Remark, and check that each matches what happened at site.
4	For a running machine with many stops, press its line. In Step 4 look at the long stops, which tipper was loaded before and after, and press a line to see the trip card.

5	Compare Hours worked and % of shift worked with the machine's ELB. A machine marked "ELB not entered" needs its ELB to be entered.

> **This manual shows how to read and verify the report.** What action to take on its findings is as instructed by management.

8. Common questions

Question	Answer
Why does a machine show a lot of idle time although it worked the whole shift?	Either some tipper cards of that shift are not entered yet, so their loadings are missing, or the loading times on the cards are far apart. Check Entry stage in Step 2 and open the stops in Step 4 to see the cards.
When is a machine red and when is it brown?	Red: it did not run and its ELB is saved as Breakdown or Maintenance, or Pulse shows breakdown for the whole shift. Brown: it did not run and was not in BD, such as No operator, Not in use, no hours recorded, or no ELB entered.
How is % of shift worked worked out?	Hours worked on the ELB divided by the hours of the shift. 8 hours in an 8-hour shift is 100%; a machine in BD for the whole shift is 0%. A machine with no ELB shows a dash.
Where is the old list of loading machines?	Press "All machines list" above the table. It shows Site, Equipment, Trips and Vehicles as before.