CALIBER MINING AND LOGISTICS LIMITED · PULSE-II · TRIPS & PRODUCTIVITY

Trip Timing & Gap Report

Operating manual

For site in-charges, MIS staff and reviewers · Matches the system as of 9 November 2026 · The picture uses sample data, not real records

1. What this report shows

Lists every trip row of the saved Vehicle Log Books in the chosen dates, with its loading time, unloading time, the minutes taken and the gap before it. It is used to find long gaps between trips and rows with doubtful times.


> **One row.** One row is one trip row (one line of the trip table) of one saved Vehicle Log Book. A trip row can hold more than one trip.

2. Open the report and choose what to see

In the left menu open **Reports** → **Trips & Productivity** → **Trip Timing & Gap Report**. Then set the selectors described below.

Selector or button	What it does
From / To	First and last date to include, by the Book Date of the log book. Both start on today's date. Dates before 01-11-2026 cannot be chosen, From must not be after To, and the range can be at most 366 days. If the dates are not valid, the screen shows "Choose a valid date range of at most 366 days." and no data is loaded. Changing a date loads the data again.
Site	Keeps only the log books of one site. "All" keeps every site your login can see. Once a site is chosen, the Shift, Vehicle / equipment, Driver / operator and Work order lists show only that site's entries.
Shift	Keeps only the log books of the chosen shift. Every shift in the list belongs to one site, so shifts of the same name at two sites appear as separate entries. Choose Site first, then Shift.
Vehicle / equipment	Keeps only the log books of the chosen vehicle. It does not choose the loading equipment; use Loading equipment for that.
Driver / operator	Keeps only the log books saved in the name of the chosen person. The list has only the people found on the log books and scan cards of the chosen dates.
Work order	Keeps only the log books saved against the chosen work order. The list has only the work orders found on the log books and scan cards of the chosen dates.
Loading equipment	Keeps only the trip rows loaded by the chosen loading equipment. It changes the table and the "report rows" count only; the logbooks, assets and trips counts above the table do not change.

3. What is on the screen

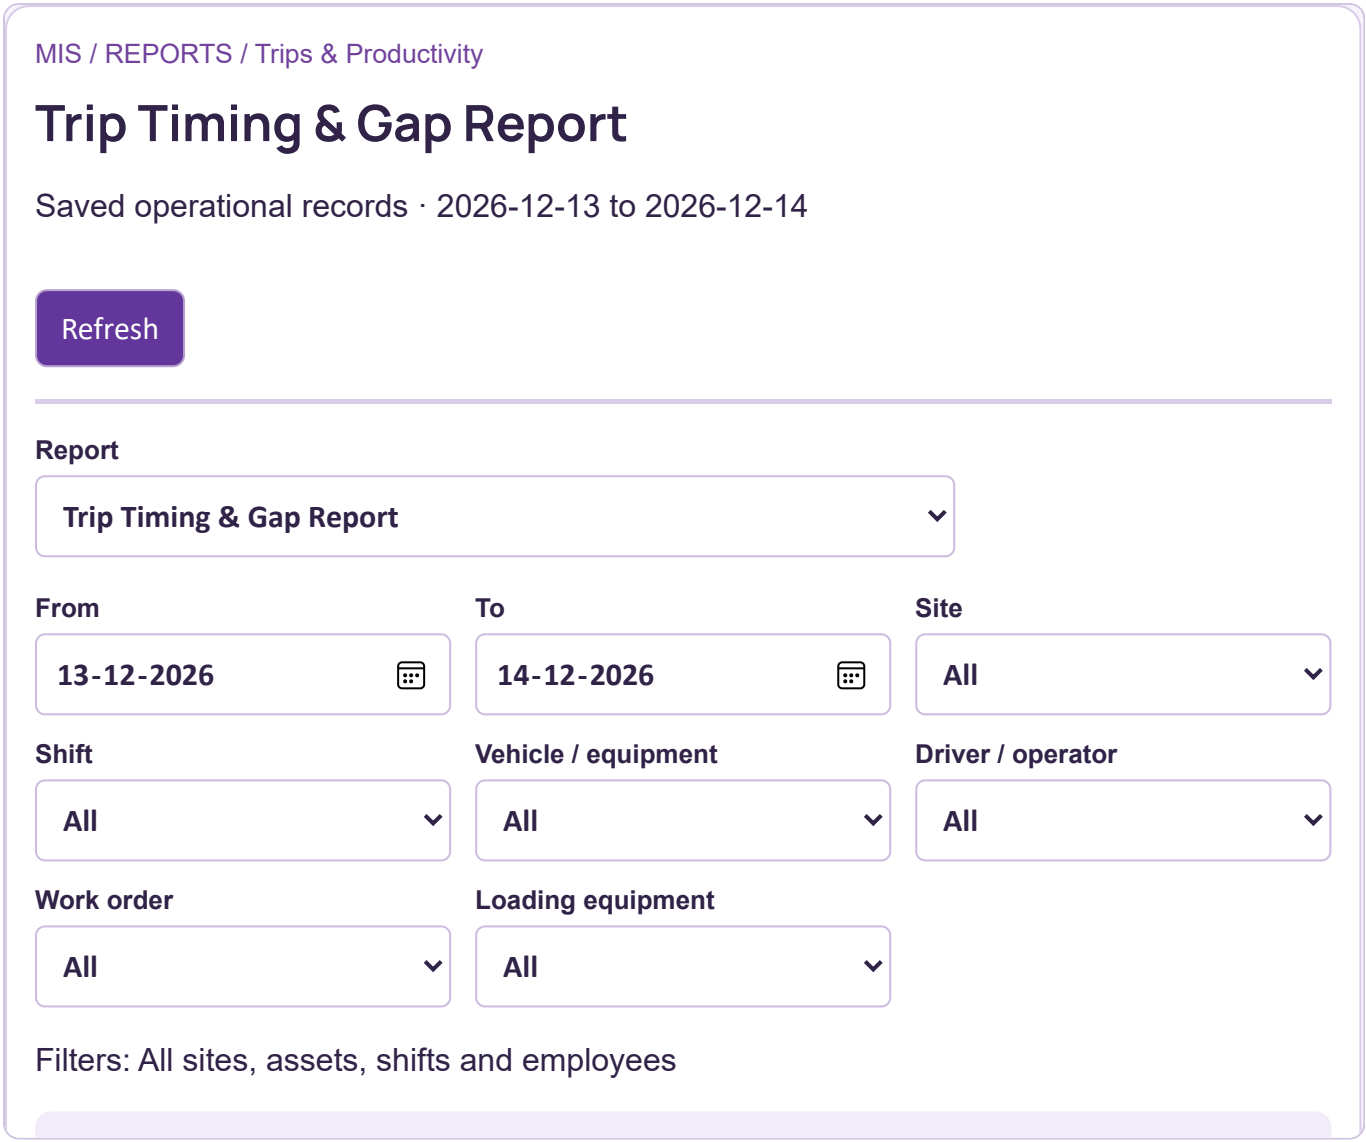

Picture 1. The report screen: selectors, totals and the table. *Sample data.*

On the screen	What it shows
Report	Drop-down at the top with every report, listed under its group. Choosing a name opens that report.
Saved operational records	Line under the report name. It repeats the From and To dates in use.
Refresh	Loads the saved log books again for the same dates. Press it when log books were saved or corrected after the report was opened. While data is loading the button cannot be pressed and "Loading complete report data…" is shown.
Filters:	One line listing the selectors that are set. With none set it reads "All sites, assets, shifts and employees". The line uses short names: site, shift, asset (Vehicle / equipment), employee (Driver / operator), workOrder and loading. For shift, asset and employee it shows the record number of the choice, not its name.
logbooks	Number of saved log books, VLB and ELB together, that match the dates and filters.

assets	Number of different vehicles and equipment on those log books.
trips	Total trips on those log books.
report rows	Number of rows in the table below.
Notice below the counts	"Elapsed times cover each recorded row. Rows may represent multiple trips; they are not individual trip cycle times. First-row gaps are unavailable." It says that Elapsed (min) is for the whole row, that a row can hold more than one trip, and that the first row of a log book has no gap.
No matching records or exceptions found.	Shown inside the table when nothing matches the dates and filters.

4. The columns

Column	Meaning
Date	Book Date of the log book. On screen it shows as DD-MM-YY, for example 13-12-26.
Site	Site saved on the log book.
Book NO	Book number the system gave when the log book was saved. A number that begins with VLB_M is a typed entry; one that begins with VLB_S came from a scanned card.
Door NO	Door number of the vehicle, for example V9001.
Caliber ID	Employee ID of the driver on the log book, for example CMPL90001.
Employee	Name of the driver on the log book, for example SAMPLE DRIVER 01.
Shift	Shift name saved on the log book.
Tr.Sr.No	Serial number of the trip row. It is the serial saved with the row; if none was saved, it is the position of the row in the log book (1, 2, 3 and so on).
Equipment	Loading equipment written in the trip row.
Trips	Number of trips written in this trip row.
L. time	Loading time of the row in 24-hour time, for example 05:20. Blank if not saved.
U. time	Unloading time of the row in 24-hour time. Blank if not saved.
Elapsed (min)	Minutes from L. time to U. time of the same row. If U. time is earlier than L. time, it is taken as the next day. Blank if either time is missing or the log book was saved without trip times.
GAP (min)	Minutes from the U. time of the previous row of the same log book to the L. time of this row. Blank for the first row of every log book, when either of those two times is missing, and for log books saved without trip times.

5. Keep in mind

- Only Vehicle Log Books are used. LMV log books and deleted log books are not shown.

- When Trips is more than 1, Elapsed (min) covers all the trips of that row together. It is not the time of one trip.
- GAP (min) is worked out inside one log book only. The gap between the last row of one log book and the first row of the next is not shown.
- GAP (min) is saved with the log book. When Loading equipment hides some rows, each gap still refers to the row just before it in the log book.
- The counts "logbooks", "assets" and "trips" above the table take all matching log books, VLB and ELB together. They do not change with Loading equipment.
- "Reset table" in the Actions menu of the table also puts From and To back to today's date.

6. Download, print and search

- Tables on this page have a **Generate** button: **Download as PDF**, **Download as Excel** or **Smart Print**. The file contains the whole table, not only the rows visible on screen.
- Type in **Search this report** to find a door number, driver or card inside a table.
- Press a column heading to sort by that column.
- If the page looks old after an update, press **Ctrl + F5** once.

7. Review checklist

Step	Do this
1	Set From and To to the day, choose Site, and if needed choose Vehicle / equipment or Loading equipment.
2	Press the GAP (min) heading to sort, so that the longest gaps come together. Note the Door NO, Book NO and Tr.Sr.No of each long gap.
3	Press the Elapsed (min) heading and look at the very long and very short rows. Read Trips first: a row with several trips takes longer.
4	Compare L. time and U. time of doubtful rows with the paper trip card.
5	For a long gap, look at the loading equipment of that shift in Reports → Utilisation & Exceptions → Breakdown & Idle Hours.

> **This manual shows how to read and verify the report.** What action to take on its findings is as instructed by management.

8. Common questions

Question	Answer
Why is GAP (min) blank on the first row of a log book?	A gap needs the unloading time of the row before it in the same log book. The first row has no row before it.
Why are L. time, U. time, Elapsed (min) and GAP (min) all blank for a log book?	That log book was saved without trip times. Only the loading equipment and the number of trips were entered.
Why is Elapsed (min) very large on a row?	Either the row holds several trips, or its U. time is earlier than its L. time and was taken as the next day. Check Trips and both times on the trip card.

Does one row mean one trip?	Not always. The Trips column shows how many trips the row holds.