

Get started with private mode

Setup and administration

NetApp April 13, 2023

This PDF was generated from https://docs.netapp.com/us-en/cloud-manager-setup-admin/task-quick-start-private-mode.html on April 13, 2023. Always check docs.netapp.com for the latest.

Table of Contents

Get started with private mode	
Quick start for BlueXP in private mode	
Prepare for deployment in private mode	
Deploy the Connector in private mode	
Log in to BlueXP (private mode)	
What you can do next (private mode)	

Get started with private mode

Quick start for BlueXP in private mode

Get started with BlueXP in private mode in a few steps.



Prepare for deployment

- a. Prepare a dedicated Linux host that meets requirements for CPU, RAM, disk space, Docker Engine, and more.
- b. Set up networking that provides access to the target networks.
- c. For cloud deployments, set up permissions in your cloud provider so that you can associate those permissions with the Connector after you install the software.

Learn how to prepare for deployment.



Deploy the Connector

- a. Install the Connector software on your own Linux host.
- b. Set up BlueXP by opening a web browser and entering the Linux host's IP address.
- c. For cloud deployments, provide BlueXP with the permissions that you previously set up.

Learn how to deploy the Connector.

Prepare for deployment in private mode

You should understand what's needed to get started with BlueXP in private mode so that you can prepare your environment.



If you want to use BlueXP in the AWS Commercial Cloud Services (C2S) environment then you should follow separate instructions that describe how to prepare, install the Connector, and launch Cloud Volumes ONTAP. Learn how to get started with Cloud Volumes ONTAP in the AWS C2S environment

Understand how private mode works

Before you get started, you should have an understanding of how BlueXP works in private mode.

For example, you should understand that you need to use the browser-based interface that is available locally from the BlueXP Connector that you need to install. You can't access BlueXP from the web-based console that's provided through the SaaS layer.

In addition, not all BlueXP services are available.

Learn how private mode works.

Review installation options

In private mode, you can install the Connector on premises or in the cloud by manually installing the Connector on your own Linux host.

If you want to create a Cloud Volumes ONTAP system in Google Cloud, then the Connector must be running in Google Cloud—it can't be running on premises.

Review host requirements

The Connector software must run on a host that meets specific operating system requirements, RAM requirements, port requirements, and so on.

Dedicated host

The Connector is not supported on a host that is shared with other applications. The host must be a dedicated host.

Supported operating systems

- CentOS 7.6, 7.7, 7.8, and 7.9
- Red Hat Enterprise Linux 7.6, 7.7, 7.8, 7.9, 8.6, and 8.7

The host must be registered with Red Hat Subscription Management. If it's not registered, the host can't access repositories to update required 3rd-party software during Connector installation.

The Connector is supported on English-language versions of these operating systems.

Hypervisor

A bare metal or hosted hypervisor that is certified to run CentOS or Red Hat Enterprise Linux is required. Red Hat Solution: Which hypervisors are certified to run Red Hat Enterprise Linux?

CPU

4 cores or 4 vCPUs

RAM

14 GB

AWS EC2 instance type

An instance type that meets the CPU and RAM requirements above. We recommend t3.xlarge.

Azure VM size

An instance type that meets the CPU and RAM requirements above. We recommend DS3 v2.

Google Cloud machine type

An instance type that meets the CPU and RAM requirements above. We recommend n2-standard-4.

The Connector is supported in Google Cloud on a VM instance with an OS that supports Shielded VM features

Disk space in /opt

100 GiB of space must be available

Disk space in /var

20 GiB of space must be available

Docker Engine

Docker Engine version 19.3.1 or later is required on the host before you install the Connector. View installation instructions

Prepare networking for the Connector

Set up your networking so the Connector can manage resources and processes within your public cloud environment. Other than having a virtual network and subnet for the Connector, you'll need to ensure that the following requirements are met.

Connections to target networks

The Connector must have a network connection to the location where you plan to manage storage. For example, the VPC or VNet where you plan to deploy Cloud Volumes ONTAP, or the data center where your onpremises ONTAP clusters reside.

Endpoints for day-to-day operations

The Connector contacts the following endpoints to deploy and manage Cloud Volumes ONTAP in your public cloud environment.

Endpoints	Purpose
AWS services (amazonaws.com): CloudFormation Elastic Compute Cloud (EC2) Identity and Access Management (IAM) Key Management Service (KMS) Security Token Service (STS) Simple Storage Service (S3)	To manage resources in AWS. The exact endpoint depends on the region in which you deploy the Connector. Refer to AWS documentation for details
https://management.azure.com https://login.microsoftonline.com https://blob.core.windows.net https://core.windows.net	To manage resources in Azure public regions.
https://management.azure.microsoft.scloud https://login.microsoftonline.microsoft.scloud https://blob.core.microsoft.scloud https://core.microsoft.scloud	To manage resources in the Azure IL6 region.
https://management.chinacloudapi.cn https://login.chinacloudapi.cn https://blob.core.chinacloudapi.cn https://core.chinacloudapi.cn	To manage resources in Azure China regions.

Endpoints	Purpose
https://www.googleapis.com/compute/v1/https://compute.googleapis.com/compute/v1 https://cloudresourcemanager.googleapis.com/v1/projects https://www.googleapis.com/compute/beta https://storage.googleapis.com/storage/v1 https://www.googleapis.com/storage/v1 https://iam.googleapis.com/v1 https://cloudkms.googleapis.com/v1 https://cloudkms.googleapis.com/v1 https://www.googleapis.com/deploymentmanager/v2/projects	To manage resources in Google Cloud.

Proxy server


If your organization requires deployment of a proxy server for outgoing internet traffic, obtain the following information about your HTTP or HTTPS proxy:

- IP address
- Credentials
- · HTTPS certificate

With private mode, the only time that BlueXP sends outbound traffic is to your cloud provider in order to create a Cloud Volumes ONTAP system.

Public IP address in Azure

If you want to use a public IP address with the Connector VM in Azure, the IP address must use a Basic SKU to ensure that BlueXP uses this public IP address.

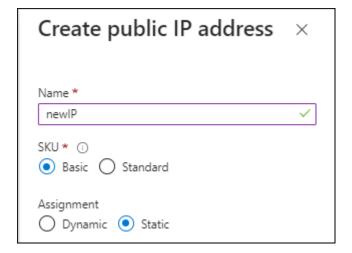

If you use a Standard SKU IP address instead, then BlueXP uses the *private* IP address of the Connector, instead of the public IP. If the machine that you're using to access the BlueXP Console doesn't have access to that private IP address, then actions from the BlueXP Console will fail.

Azure documentation: Public IP SKU

Ports

There's no incoming traffic to the Connector, unless you initiate it.

HTTP (80) and HTTPS (443) provide access to the BlueXP console. SSH (22) is only needed if you need to connect to the host for troubleshooting.

Inbound connections over port 3128 are required if you deploy Cloud Volumes ONTAP systems in a subnet where an outbound internet connection isn't available. If Cloud Volumes ONTAP systems don't have an outbound internet connection to send AutoSupport messages, BlueXP automatically configures those Cloud Volumes ONTAP systems to use a proxy server that's included with the Connector. The only requirement is to ensure that the Connector's security group allows inbound connections over port 3128. You'll need to open this port after you deploy the Connector.

Prepare cloud permissions

If you are planning to create Cloud Volumes ONTAP systems, then BlueXP requires permissions from your cloud provider. You need to set up permissions in your cloud provider and then associate those permission with the Connector instance after you install it.

To view the required steps, select the authentication option that you'd like to use for your cloud provider.

If you're going to install the Connector on premises, then you must provide permissions using AWS access keys or an Azure service principal. The other options are not supported.

AWS IAM role

Use an IAM role to provide the Connector with permissions. You'll need to manually attach the role to the EC2 instance for the Connector.

Steps

- 1. Log in to the AWS console and navigate to the IAM service.
- 2. Create a policy:
 - a. Click Policies > Create policy.
 - b. Select **JSON** and copy and paste the contents of the IAM policy for the Connector.
 - c. Finish the remaining steps to create the policy.
- 3. Create an IAM role:
 - a. Click Roles > Create role.
 - b. Select AWS service > EC2.
 - c. Add permissions by attaching the policy that you just created.
 - d. Finish the remaining steps to create the role.

Result

You now have an IAM role for the Connector EC2 instance.

AWS access key

Set up permissions and an access key for an IAM user. You'll need to provide BlueXP with the AWS access key after you install the Connector and set up BlueXP.

Steps

- 1. From the IAM console, create a policy:
 - a. Click Policies > Create policy.
 - b. Select **JSON** and copy and paste the contents of the IAM policy for the Connector.
 - c. Finish the remaining steps to create the policy.

Depending on the BlueXP services that you're planning to use, you might need to create a second policy.

For standard regions, the permissions are spread across two policies. Two policies are required due to a maximum character size limit for managed policies in AWS. Learn more about IAM policies for the Connector.

- 2. Attach the policies to an IAM user.
 - AWS Documentation: Creating IAM Roles
 - AWS Documentation: Adding and Removing IAM Policies
- 3. Ensure that the user has access keys that you can add to BlueXP after you install the Connector.

Result

The account now has the required permissions.

Azure role

Create an Azure custom role with the required permissions. You'll assign this role to the Connector VM.

Steps

1. Enable a system-assigned managed identity on the VM where you plan to install the Connector so that you can provide the required Azure permissions through a custom role.

Microsoft Azure documentation: Configure managed identities for Azure resources on a VM using the Azure portal

- 2. Copy the contents of the custom role permissions for the Connector and save them in a JSON file.
- 3. Modify the JSON file by adding Azure subscription IDs to the assignable scope.

You should add the ID for each Azure subscription from which users will create Cloud Volumes ONTAP systems.

Example

```
"AssignableScopes": [
"/subscriptions/d333af45-0d07-4154-943d-c25fbzzzzzzzz",
"/subscriptions/54b91999-b3e6-4599-908e-416e0zzzzzzzz",
"/subscriptions/398e471c-3b42-4ae7-9b59-ce5bbzzzzzzzz"
```

4. Use the JSON file to create a custom role in Azure.

The following steps describe how to create the role by using Bash in Azure Cloud Shell.

- a. Start Azure Cloud Shell and choose the Bash environment.
- b. Upload the JSON file.



c. Use the Azure CLI to create the custom role:

az role definition create --role-definition Connector Policy.json

Result

You should now have a custom role called BlueXP Operator that you can assign to the Connector virtual machine.

Azure service principal

Create and set up a service principal in Azure Active Directory and obtain the Azure credentials that BlueXP needs. You'll need to provide BlueXP with these credentials after you install the Connector and set up BlueXP.

Create an Azure Active Directory application for role-based access control

1. Ensure that you have permissions in Azure to create an Active Directory application and to assign the application to a role.

For details, refer to Microsoft Azure Documentation: Required permissions.

2. From the Azure portal, open the Azure Active Directory service.



- 3. In the menu, click App registrations.
- 4. Click New registration.
- 5. Specify details about the application:
 - Name: Enter a name for the application.
 - Account type: Select an account type (any will work with BlueXP).
 - · Redirect URI: You can leave this field blank.
- 6. Click Register.

You've created the AD application and service principal.

Assign the custom role to the application

- 1. From the Azure portal, open the **Subscriptions** service.
- 2. Select the subscription.
- 3. Click Access control (IAM) > Add > Add role assignment.
- 4. In the Role tab, select the BlueXP Operator role and click Next.

- 5. In the **Members** tab, complete the following steps:
 - a. Keep User, group, or service principal selected.
 - b. Click Select members.



c. Search for the name of the application.

Here's an example:



- d. Select the application and click **Select**.
- e. Click Next.
- 6. Click Review + assign.

The service principal now has the required Azure permissions to deploy the Connector.

If you want to deploy Cloud Volumes ONTAP from multiple Azure subscriptions, then you must bind the service principal to each of those subscriptions. BlueXP enables you to select the subscription that you want to use when deploying Cloud Volumes ONTAP.

Add Windows Azure Service Management API permissions

- 1. In the Azure Active Directory service, click App registrations and select the application.
- 2. Click API permissions > Add a permission.
- 3. Under Microsoft APIs, select Azure Service Management.

Request API permissions

Select an API

Microsoft APIs APIs my organization uses

n uses My APIs

Commonly used Microsoft APIs

Microsoft Graph

Take advantage of the tremendous amount of data in Office 365, Enterprise Mobility + Security, and Windows 10. Access Azure AD, Excel, Intune, Outlook/Exchange, OneDrive, OneNote, SharePoint, Planner, and more through a single endpoint.





Azure Batch

Schedule large-scale parallel and HPC applications in the cloud



Azure Data Catalog

Programmatic access to Data Catalog resources to register, annotate and search data assets



Azure Data Explorer

Perform ad-hoc queries on terabytes of data to build near real-time and complex analytics solutions



Azure Data Lake

Access to storage and compute for big data analytic scenarios



Azure DevOps

Integrate with Azure DevOps and Azure DevOps server



Azure Import/Export

Programmatic control of import/export jobs



Azure Key Vault

Manage your key vaults as well as the keys, secrets, and certificates within your Key Vaults



Azure Rights Management Services

Allow validated users to read and write protected content



Azure Service Management

Programmatic access to much of the functionality available through the Azure portal



Azure Storage

Secure, massively scalable object and data lake storage for unstructured and semi-structured data



Customer Insights

Create profile and interaction models for your products



Data Export Service for Microsoft Dynamics 365

Export data from Microsoft Dynamics CRM organization to an external destination

4. Click Access Azure Service Management as organization users and then click Add permissions.



Get the application ID and directory ID for the application

- 1. In the Azure Active Directory service, click App registrations and select the application.
- 2. Copy the Application (client) ID and the Directory (tenant) ID.



When you add the Azure account to BlueXP, you need to provide the application (client) ID and the directory (tenant) ID for the application. BlueXP uses the IDs to programmatically sign in.

Create a client secret

- 1. Open the Azure Active Directory service.
- 2. Click **App registrations** and select your application.
- 3. Click Certificates & secrets > New client secret.
- 4. Provide a description of the secret and a duration.
- 5. Click Add.
- 6. Copy the value of the client secret.



You now have a client secret that BlueXP can use it to authenticate with Azure AD.

Result

Your service principal is now setup and you should have copied the application (client) ID, the directory (tenant) ID, and the value of the client secret. You need to enter this information in BlueXP when you add an Azure account.

Google Cloud service account

Create a role and apply it to a service account that you'll use for the Connector VM instance.

Steps

- 1. Create a custom role in Google Cloud:
 - a. Create a YAML file that includes the permissions defined in the Connector policy for Google Cloud.
 - b. From Google Cloud, activate cloud shell.
 - c. Upload the YAML file that includes the required permissions for the Connector.
 - d. Create a custom role by using the gcloud iam roles create command.

The following example creates a role named "connector" at the project level:

```
gcloud iam roles create connector --project=myproject
--file=connector.yaml
```

Google Cloud docs: Creating and managing custom roles

- 2. Create a service account in Google Cloud:
 - a. From the IAM & Admin service, click Service Accounts > Create Service Account.
 - b. Enter service account details and click Create and Continue.
 - c. Select the role that you just created.
 - d. Finish the remaining steps to create the role.

Google Cloud docs: Creating a service account

Result

You now have a service account that you can assign to the Connector VM instance.

Enable Google Cloud APIs

Several APIs are required to deploy Cloud Volumes ONTAP in Google Cloud.

Step

- 1. Enable the following Google Cloud APIs in your project
 - Cloud Deployment Manager V2 API
 - · Cloud Logging API
 - Cloud Resource Manager API
 - Compute Engine API
 - · Identity and Access Management (IAM) API

Deploy the Connector in private mode

To set up BlueXP in private mode, you need to install the Connector, set up BlueXP by accessing the user interface that's running on the Connector, and then provide cloud permissions.

Install the Connector

Download the product installer from the NetApp Support Site and then manually install the Connector on your own Linux host.

If you want to use BlueXP in the AWS Commercial Cloud Services (C2S) environment then you should follow separate instructions to get started in that environment. Learn how to get started with Cloud Volumes ONTAP in the AWS C2S environment

Required privileges

Root privileges are required to install the Connector.

Steps

1. Verify that docker is enabled and running.

```
sudo systemctl enable docker && sudo systemctl start docker
```

2. Download the Connector software from the NetApp Support Site

Be sure to download the installer for restricted networks without internet access.

- 3. Copy the installer to the Linux host.
- 4. Assign permissions to run the script.

```
chmod +x /path/cloud-manager-connector-offline-<version>
```

Where <version> is the version of the Connector that you downloaded.

5. Run the installation script:

```
sudo /path/cloud-manager-connector-offline-<version>
```

Where <version> is the version of the Connector that you downloaded.

Result

The Connector software is installed. You can now set up BlueXP.


Set up BlueXP

When you access the BlueXP console for the first time, you'll be prompted to set up BlueXP.

Steps

1. Open a web browser and enter https://ipaddress where ipaddress is the IP address of the Linux host where you installed the Connector.

You should see the following screen.

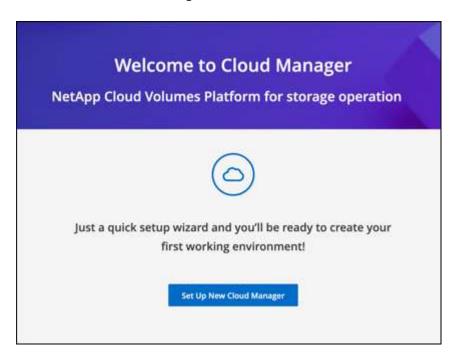

- 2. Click **Set Up New BlueXP** and follow the prompts to set up the system.
 - **System Details**: Enter a name for the Connector and your company name.



• Create Admin User: Create the admin user for the system.

This user account runs locally on the system. There's no connection to the auth0 service available through BlueXP.

- Review: Review the details, accept the license agreement, and then click Set Up.
- 3. Log in to BlueXP using the admin user that you just created.

Result

The Connector is now installed and set up.

When new versions of the Connector software are available, they'll be posted to the NetApp Support Site. Learn how to upgrade the Connector.

What's next?

Provide BlueXP with the permissions that you previously set up.

Provide permissions to BlueXP

If you want to create Cloud Volumes ONTAP working environments, you'll need to provide BlueXP with the cloud permissions that you previously set up.

Learn how to prepare cloud permissions.

AWS IAM role

Attach the IAM role that you previously created to the Connector EC2 instance.

Steps

- 1. Go to the Amazon EC2 console.
- Select Instances.
- 3. Select the Connector instance.
- 4. Select Actions > Security > Modify IAM role.
- 5. Select the IAM role and click **Update IAM role**.

Result

BlueXP now has the permissions that it needs to perform actions in AWS on your behalf.

AWS access key

Provide BlueXP with the AWS access key for an IAM user that has the required permissions.

Steps

1. In the upper right of the BlueXP console, click the Settings icon, and select Credentials.



- 2. Click **Add Credentials** and follow the steps in the wizard.
 - a. Credentials Location: Select Amazon Web Services > Connector.
 - b. Define Credentials: Enter an AWS access key and secret key.
 - c. **Marketplace Subscription**: Associate a Marketplace subscription with these credentials by subscribing now or by selecting an existing subscription.
 - d. Review: Confirm the details about the new credentials and click Add.

Result

BlueXP now has the permissions that it needs to perform actions in AWS on your behalf.

Azure role

Go to the Azure portal and assign the Azure custom role to the Connector virtual machine for one or more subscriptions.

Steps

- 1. From the Azure Portal, open the **Subscriptions** service and select your subscription.
- 2. Click Access control (IAM) > Add > Add role assignment.
- 3. In the Role tab, select the BlueXP Operator role and click Next.



BlueXP Operator is the default name provided in the BlueXP policy. If you chose a different name for the role, then select that name instead.

4. In the **Members** tab, complete the following steps:

- a. Assign access to a Managed identity.
- b. Click **Select members**, select the subscription in which the Connector virtual machine was created, choose **Virtual machine**, and then select the Connector virtual machine.
- c. Click Select.
- d. Click Next.
- e. Click Review + assign.
- f. If you want to deploy Cloud Volumes ONTAP from additional subscriptions, switch to that subscription and then repeat these steps.

Result

BlueXP now has the permissions that it needs to perform actions in Azure on your behalf.

Azure service principal

Provide BlueXP with the credentials for the Azure service principal that you previously setup.

Steps

1. In the upper right of the BlueXP console, click the Settings icon, and select Credentials.



- 2. Click **Add Credentials** and follow the steps in the wizard.
 - a. Credentials Location: Select Microsoft Azure > Connector.
 - b. **Define Credentials**: Enter information about the Azure Active Directory service principal that grants the required permissions:
 - Application (client) ID
 - Directory (tenant) ID
 - Client Secret
 - c. **Marketplace Subscription**: Associate a Marketplace subscription with these credentials by subscribing now or by selecting an existing subscription.
 - d. Review: Confirm the details about the new credentials and click Add.

Result

BlueXP now has the permissions that it needs to perform actions in Azure on your behalf.

Google Cloud service account

Associate the service account with the Connector VM.

Steps

1. Go to the Google Cloud portal and assign the service account to the Connector VM instance.

Google Cloud documentation: Changing the service account and access scopes for an instance

2. If you want to deploy Cloud Volumes ONTAP in other projects, grant access by adding the service account with the BlueXP role to that project. You'll need to repeat this step for each project.

Result

BlueXP now has the permissions that it needs to perform actions in Google Cloud on your behalf.

Log in to BlueXP (private mode)

When you use BlueXP in private mode, you'll need to log in to the BlueXP console from the user interface that runs locally on the Connector.

Log in options

Private mode supports local user management and access. Authentication is not provided through BlueXP's cloud service.

Steps

1. Open a web browser and enter the following URL:

https://ipaddress

ipaddress can be localhost, a private IP address, or a public IP address, depending on the configuration of the host where you installed the Connector. For example, you might need to enter a private IP address from a host that has a connection to the Connector host.

2. Enter your user name and password to log in.

Result

You're now logged in and can start using BlueXP to manage your hybrid multi-cloud infrastructure.

What you can do next (private mode)

After you get up and running with BlueXP in private mode, you can start using the BlueXP services that are supported with private mode.

For help, refer to the following documentation:

- Create Cloud Volumes ONTAP systems
- Discover on-premises ONTAP clusters
- · Replicate data
- Scan on-prem ONTAP volume data using Cloud Data Sense
- Back up on-prem ONTAP volume data to StorageGRID using Cloud Backup

Copyright information

Copyright © 2023 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at http://www.netapp.com/TM are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.