

zPSC Calibration and Test Manual

Michael Capotosto

May 2026

Contents

1	Introduction	1
2	Cable Assemblies and Harnesses	3
2.1	Overview	3
2.1.1	2-Channel DCCT Cable	3
2.1.2	4-Channel DCCT Cable	4
2.1.3	Power Supply Channels 1 through 4 ATE Interface Cables	4
2.1.4	SFP Transceivers	4
2.1.5	Other Miscellaneous Cables	5
3	ATE Connections	7
3.1	Overview	7
3.1.1	ATE Test Rack at NSLS-II	9
3.2	Connections	10
3.2.1	Current Measurement Loop/DMM Connection	12
4	zPSC Chassis Overview	13
4.1	Introduction	13
4.2	Front Panels (2- and 4-Channel PSCs)	13
4.3	Rear Panel - 2 Channel	13
4.4	Internal Component Layout - 2 Channel	14
4.4.1	Analog Board Components	15
4.5	Rear Panel - 4 Channel	16
4.6	Internal Component Layout - 4 Channel	16
4.6.1	Analog Board Components	17
5	EPICS Base and IOCs	19
5.1	Introduction	19
5.2	EPICS Installation Overview	19
5.3	Installing EPICS Base and Required Modules	19
5.4	Installing the ATE IOC	21
5.5	Installing the PSC IOC	22

6	CS-Studio - Phoebus	23
6.1	Introduction	23
6.2	Installing Phoebus	23
7	Networking	25
7.1	Overview	25
8	Installing and Configuring Minicom	27
8.1	Overview	27
8.2	Installation in a Linux environment	27
8.2.1	Installing Minicom	27
8.3	Configuring Minicom	28
8.4	Running Minicom	28
9	Python Installation and Configuration	29
9.1	Overview	29
9.2	Installing and Configuring Python, and the Python Environment	29
9.2.1	Installing Python	29
9.2.2	Python Package Management	29
10	Calibration and Test Script Installation	31
10.1	Overview	31
10.2	Cloning the Script Repository	31
10.3	Creating the Virtual Environment	31
10.4	Installing Dependencies	31
11	Configuring the Test and Calibration Scripts	33
11.1	Overview	33
11.2	The <code>common</code> Files Directory	33
11.2.1	EPICS Drivers	33
11.2.2	The <code>psc_models.py</code> Class	34
11.3	Calibration	34
11.3.1	The <code>initialize_qspi.py</code> Module	34
11.3.2	The <code>psc_calibration.py</code> Module	34
11.4	Functional Test	34
12	Initial Booting of the PSC and Configuration of the EEPROM	35
12.1	Overview	35
12.1.1	Creating the SD Card	35
12.1.2	Configuring the EEPROM	36
13	Running the Calibration and Test Script	41
13.1	Overview	41
13.2	Running the Script: Launcher Menu	41
13.2.1	Option 1: Initialize QSPI Only	43
13.2.2	Option 2: Calibrate Only	44

13.2.3 Option 3: Test Only	46
13.2.4 Option 4: Calibrate and Test	47
A Example Calibration Report	49
B Example Test Report	55

Chapter 1

Introduction

Chapter 2

Cable Assemblies and Harnesses

2.1 Overview

This chapter provides a brief overview of the makeup of various cable assemblies used in the sections to follow. Some cables are off-the-shelf cables with gender changers installed on one end. Others are made up of commercial cable assemblies with fly leads that must connect to breakout boards.

Some off the shelf fiber and network patch cables will be required.

2.1.1 2-Channel DCCT Cable

This cable consists of a Molex Micro-D15 cable, 72" long, fly lead, connecting to a Winford HD26 breakout board.

- 1x Molex 834229018 72" Micro-D15 Fly Lead Cable
- 1x Winford BRKEGD26HDF-T HD26F Breakout Board

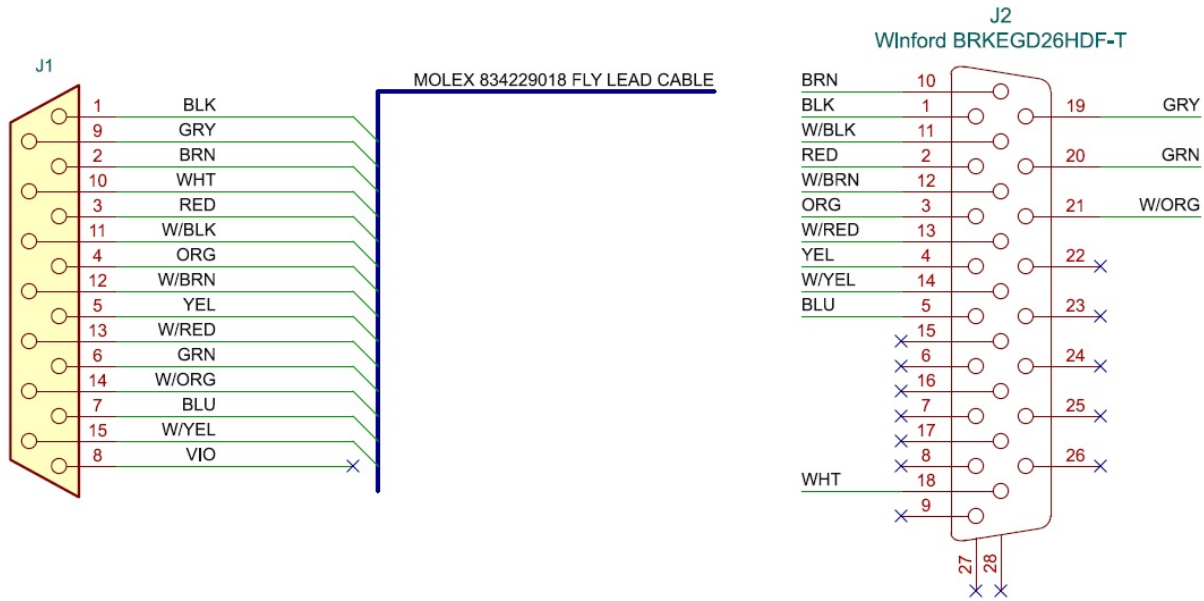


Figure 2.1: Pinout of 2-Channel microD15 to HD26 Cable

2.1.2 4-Channel DCCT Cable

This cable assembly consists of two parts:

- 1x Amphenol CS-DSDHD26MF0-005 1.52m HD26 M/F Cable
- 1x NorComp Inc. GCHDLP26F26F HD26 F/F Gender Changer

2.1.3 Power Supply Channels 1 through 4 ATE Interface Cables

This cable assembly consists of two parts:

- 4x Molex 83424-9062 Micro-D25 to DB25
- 4x L-com DGB25F DB25F/F Gender Changer

2.1.4 SFP Transceivers

Quantities depend on unit type and test workstation configuration. One SFP port is used for timing/event code tests on all units.

If testing FOFB, two more SFPs are required - the NSLS-II test stand uses one active copper and one fiber; though the simplest test setup would use two active copper SFPs.

- Fiber SFP: ATGBICS AFBR-57D7APZ-C or equivalent (8.5G+ SFP+, 850nm MM)
- Active Copper SFP: Finisar FCLF8522P2BTL or equivalent

2.1.5 Other Miscellaneous Cables

Other miscellaneous cables needed include:

- CAT6 Network cables
- OM3 LC/LC Duplex Fiber Patch Cables (e.g. FS.com SKU 40233)
- IEC C13 to NEMA 5-15P Power Cords
- Assorted discrete wires for DC power, signal, 16-18AWG

Chapter 3

ATE Connections

3.1 Overview

On initial setup, there are a few fixed connections that need to be made to the ATE:

- Current Shunt: Connect this to a resistance standard for calibrations, or to a wire loop if not being used for current measurement
- $\pm 15V$ Supply: Connect this to a split supply, draws less than 400mA under full load
- Network: Connect to the local test network
- SD Card must be configured once, but does not require any regular changes
- Jumpers: Install jumpers in J8-9, J12-13, J19-20, JJ23-24, J30-31, J34-35, J41-42, and J45-J46 for normal operations.

For every device under test:

- Channel 1, 2, 3, and 4 Power Supply Cables: These cables connect to each of the micro-D Power Supply I/O connectors on the rear of the PSC
- Tuning Boards: Tuning boards must be installed to match the loads being tested.
- DCCT Cable must be connected for every PSC. There are two cables - one for 4-Channel units, and another for 2-Channel units.


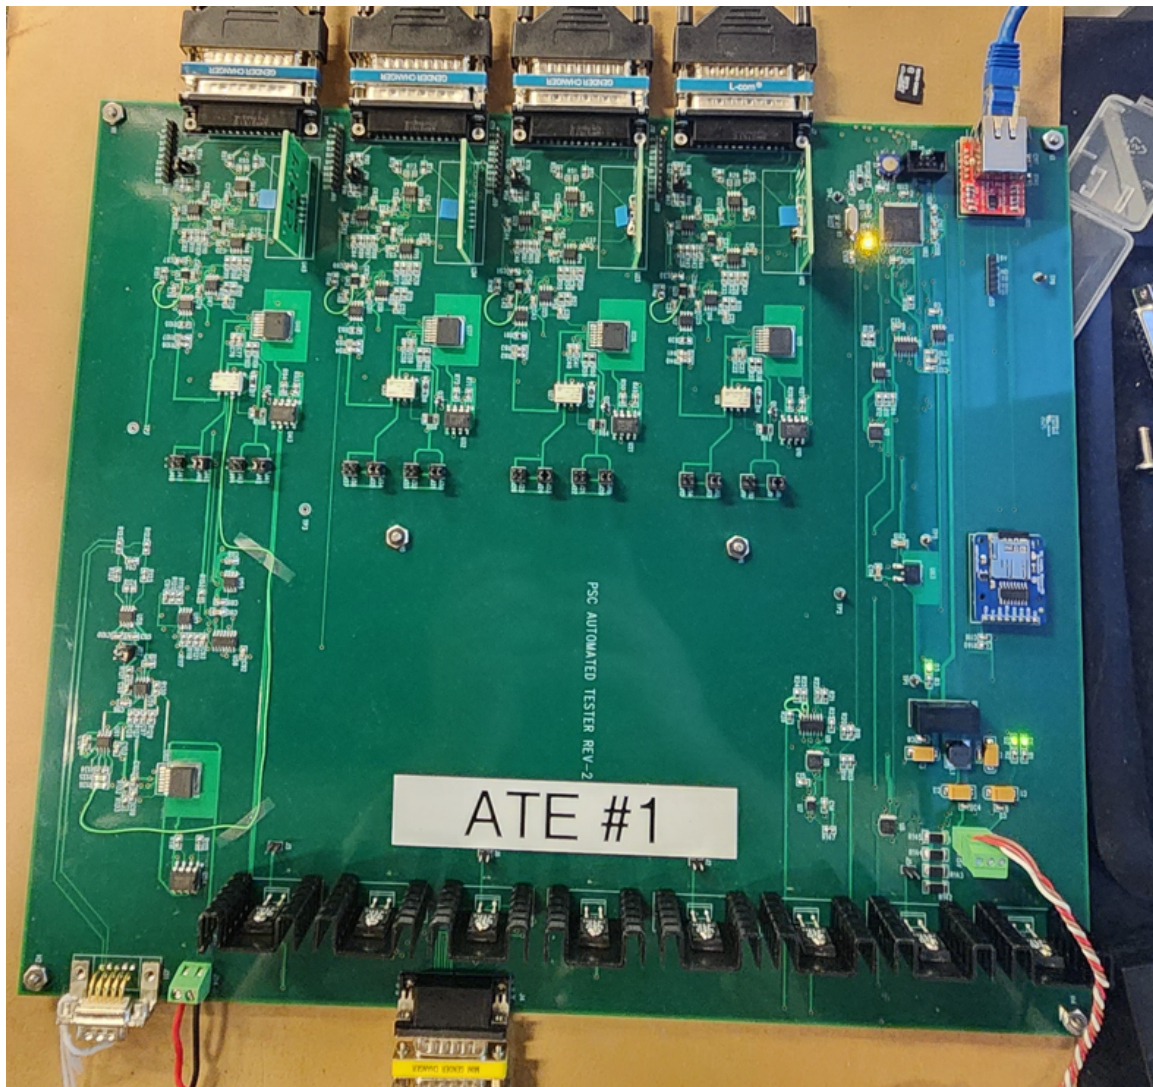


Figure 3.1: ATE #1

3.1.1 ATE Test Rack at NSLS-II

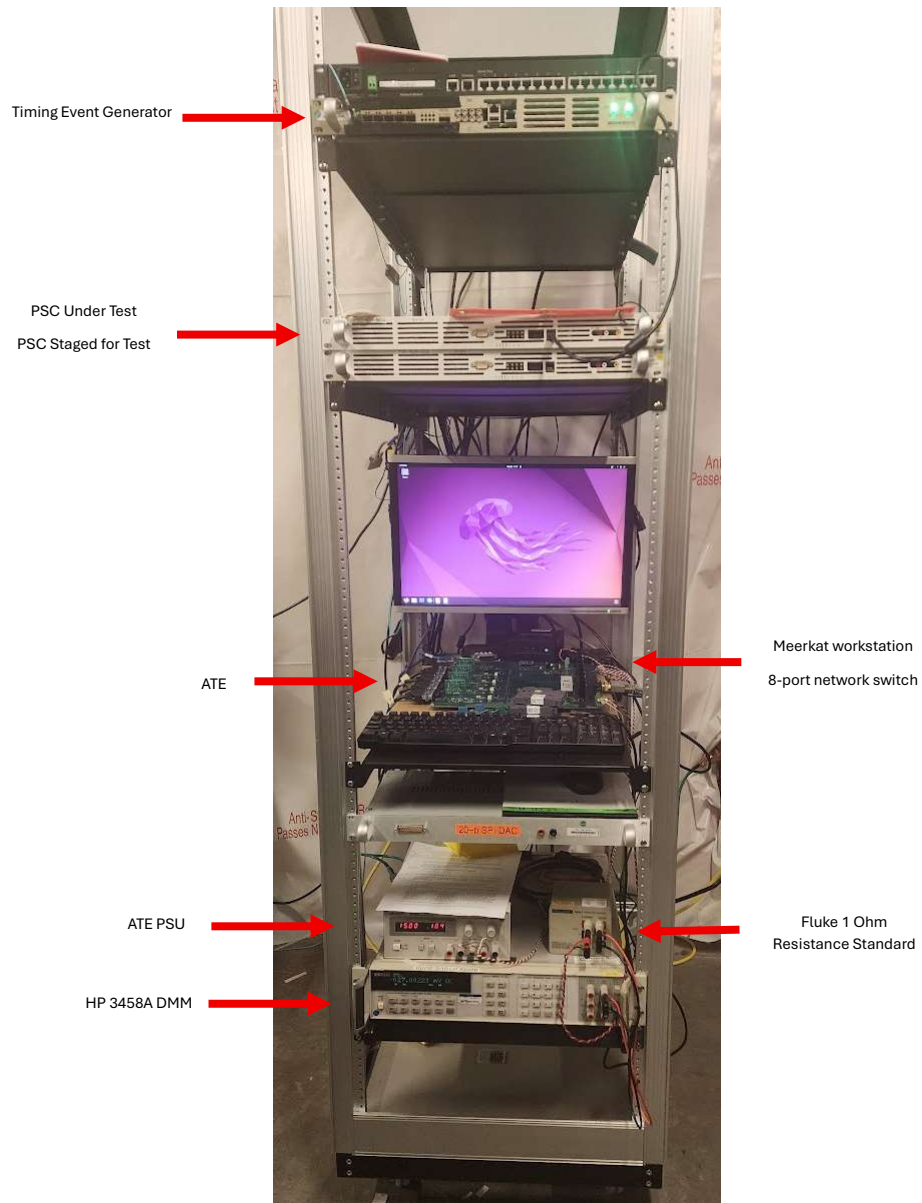

3.2 Connections

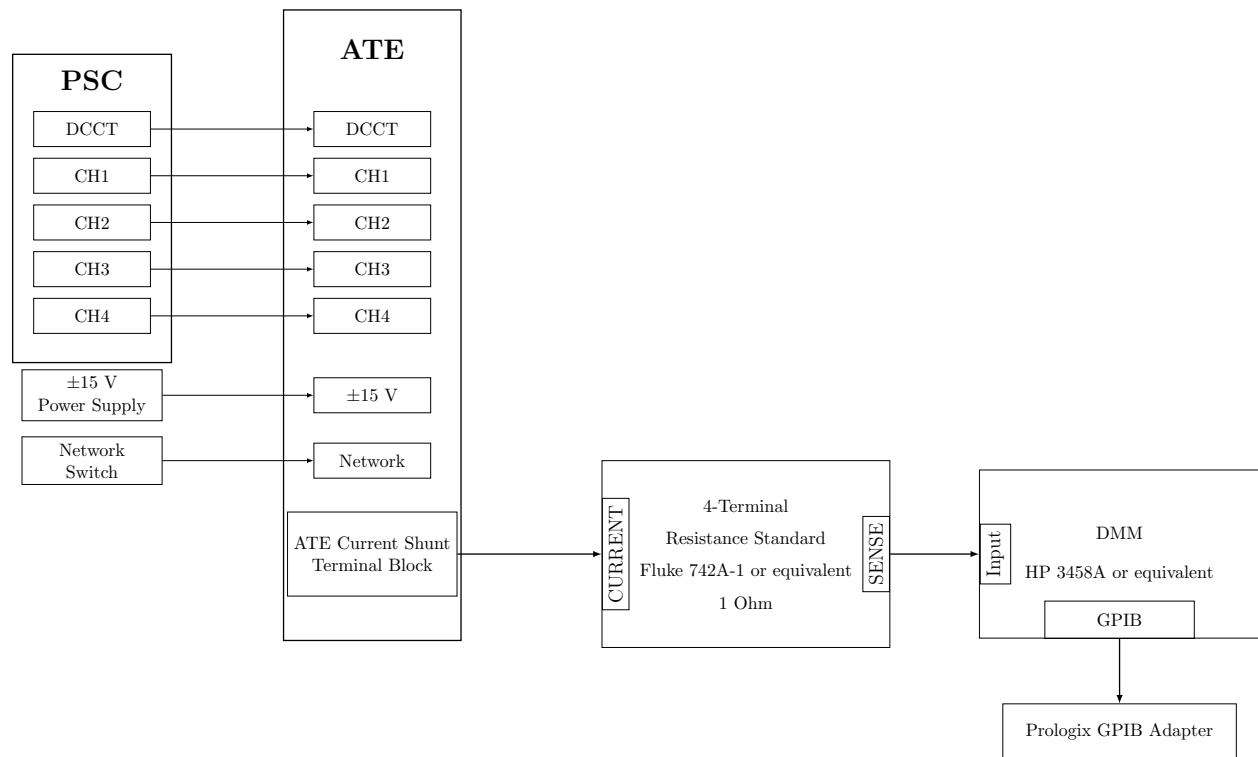


Figure 3.2: ATE Connection Block Diagram

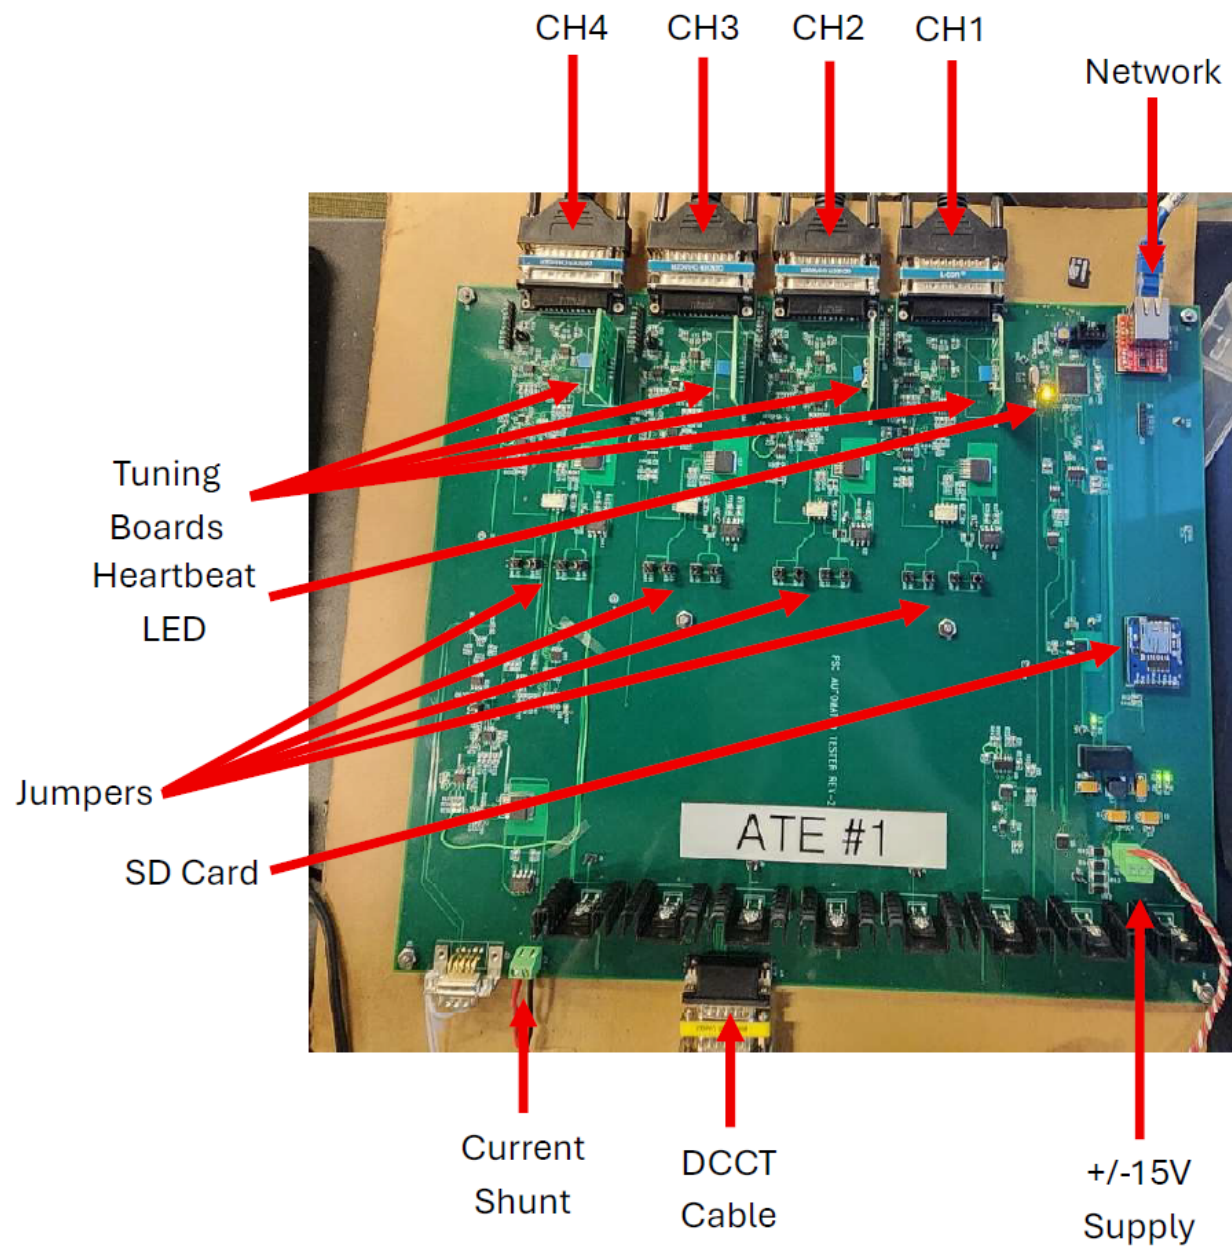


Figure 3.3: Annotated ATE Board

3.2.1 Current Measurement Loop/DMM Connection

The DMM is connected to the workstation via a GPIB adapter from Prologix. These are available in both USB and Ethernet forms.

If the DMM/Resistance standard is not used, a jumper must be connected across this terminal block on the ATE if CALDAC is to be used!

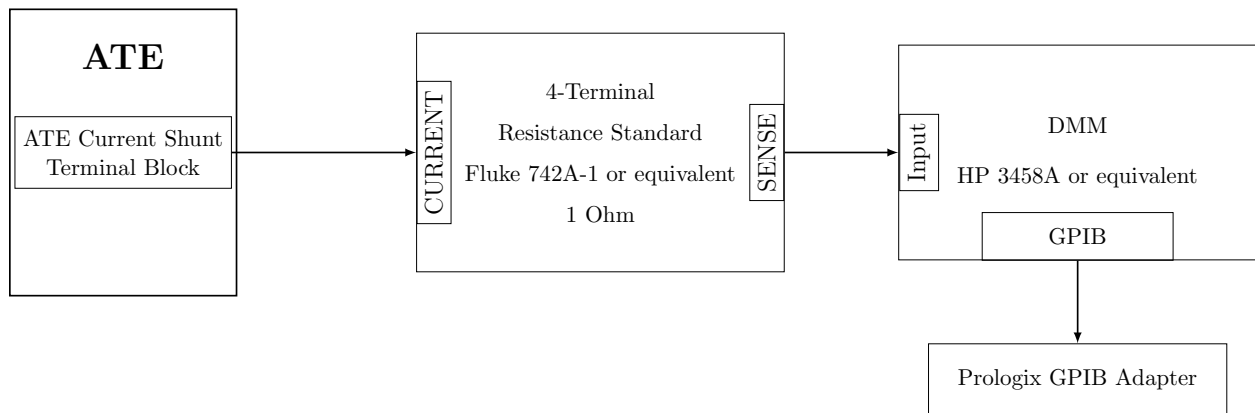


Figure 3.4: ATE → DMM Current Loop


Chapter 4

zPSC Chassis Overview


4.1 Introduction

4.2 Front Panels (2- and 4-Channel PSCs)


Both 2- and 4-Channel units share identical front panels:

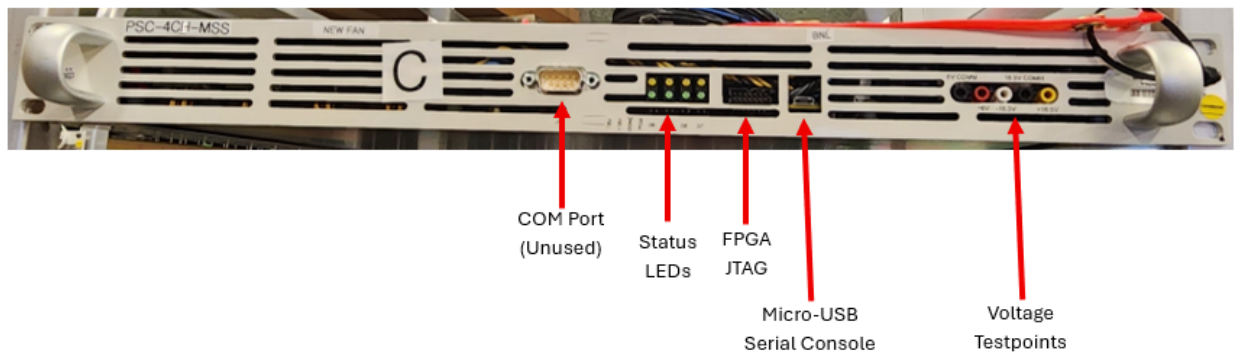


4.3 Rear Panel - 2 Channel

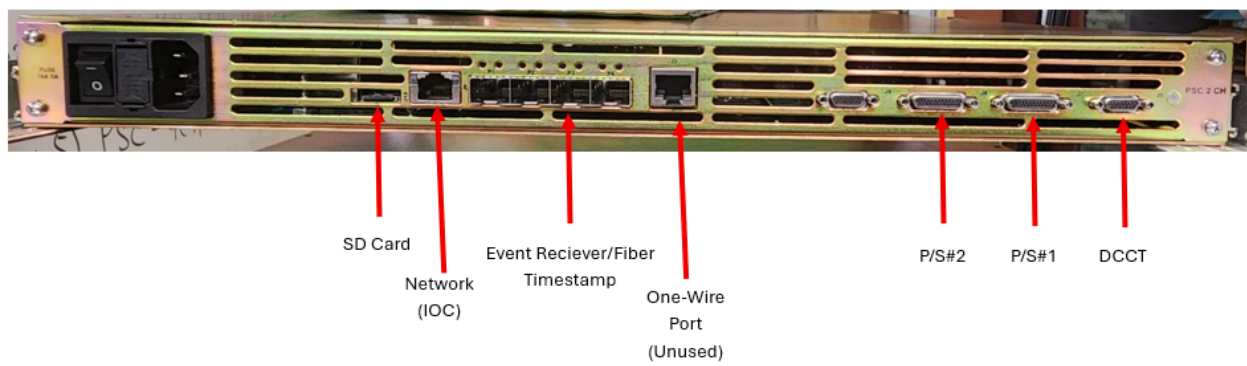


4.4 Internal Component Layout - 2 Channel

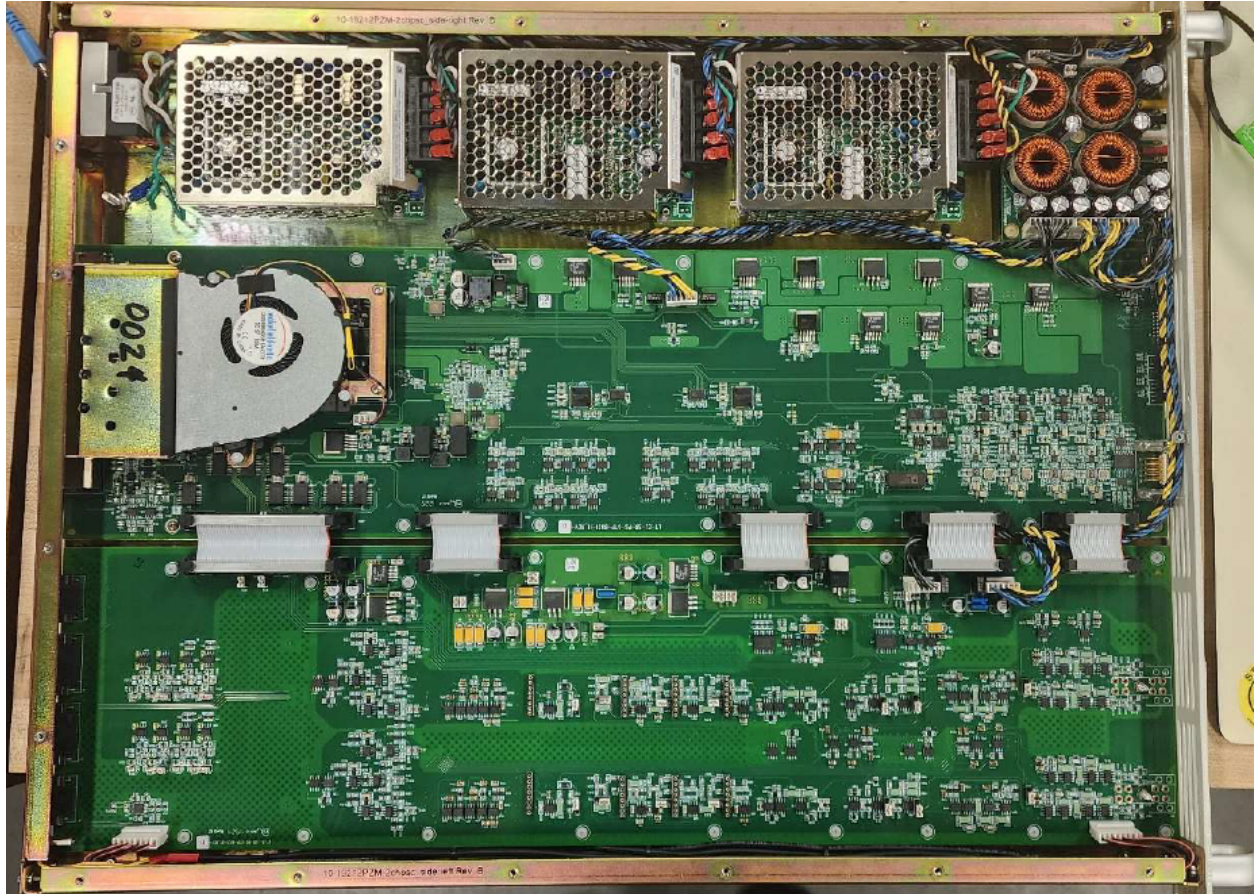


4.4.1 Analog Board Components

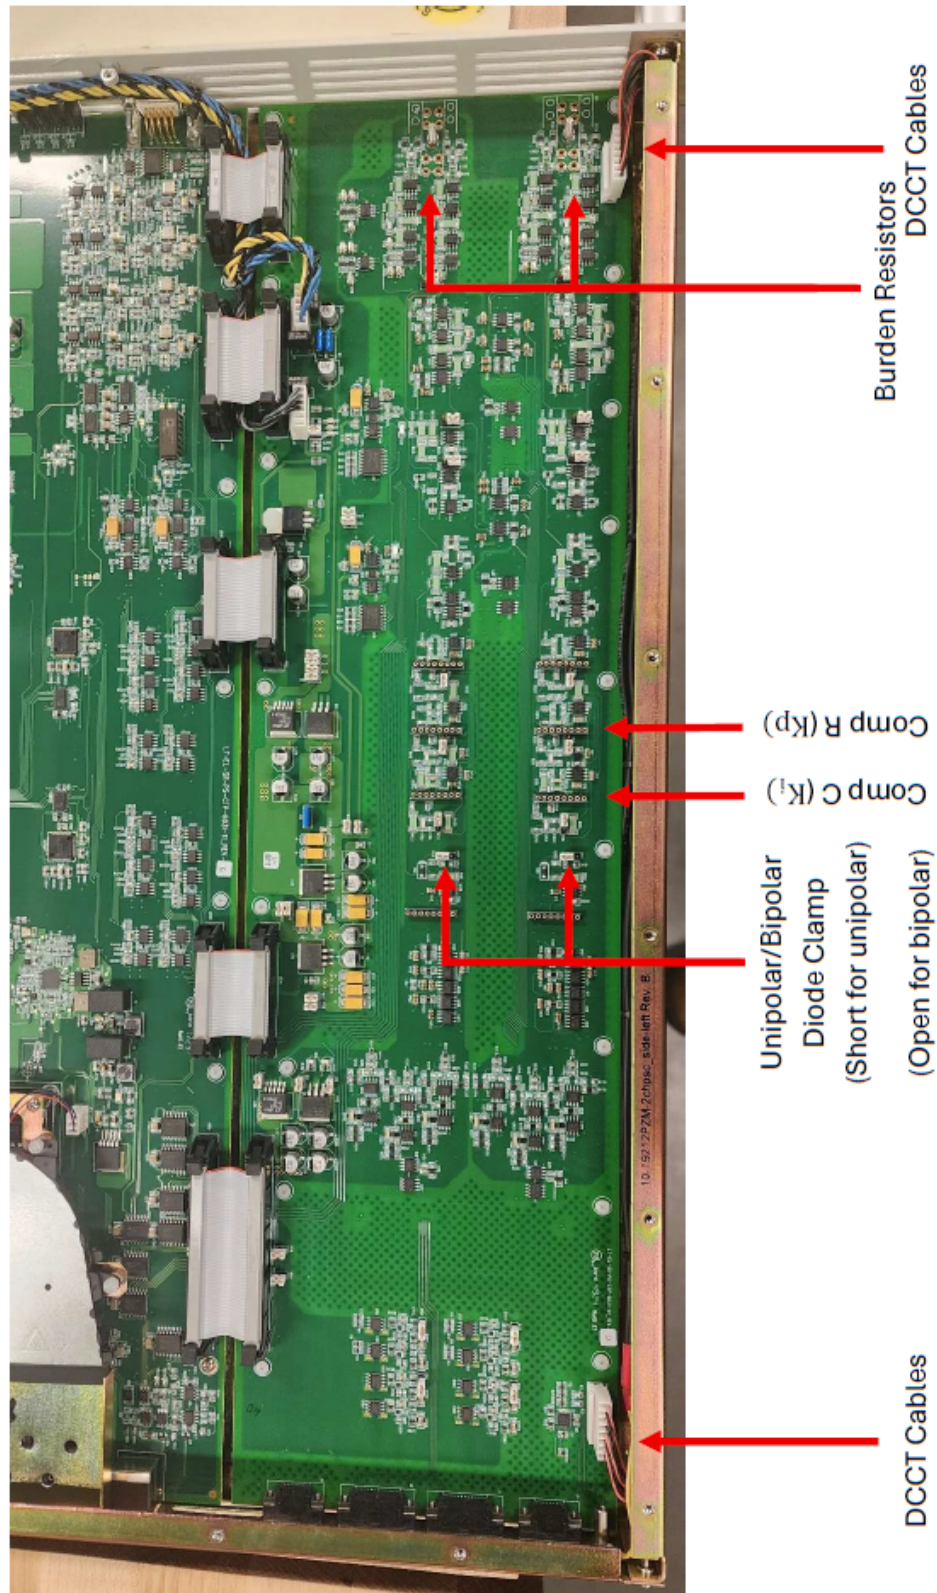


4.5 Rear Panel - 4 Channel

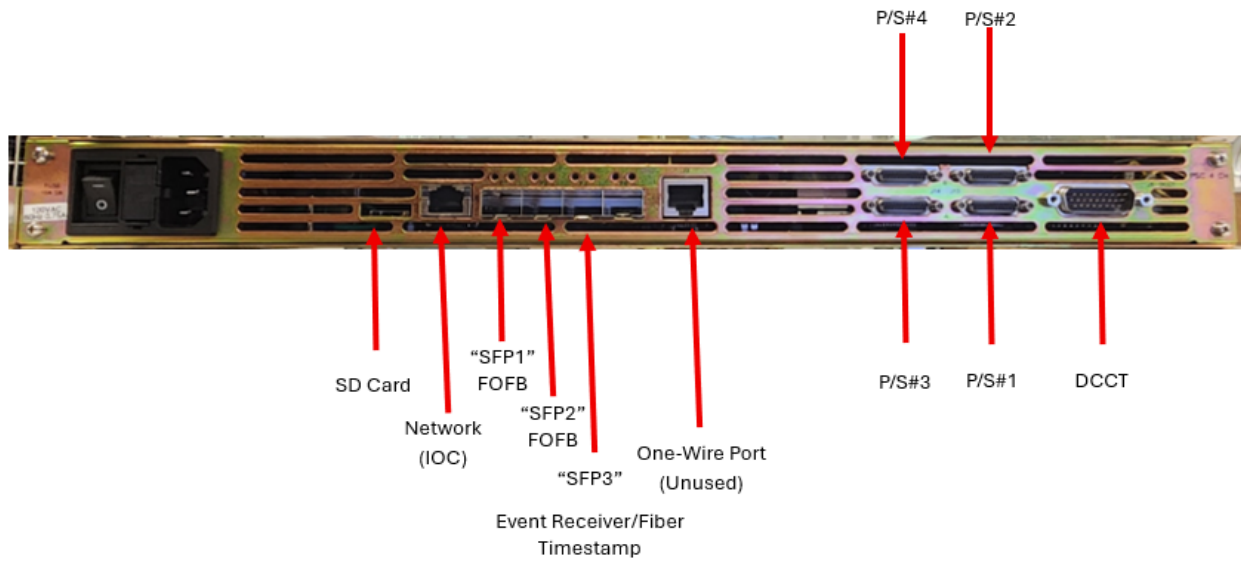

4.6 Internal Component Layout - 4 Channel

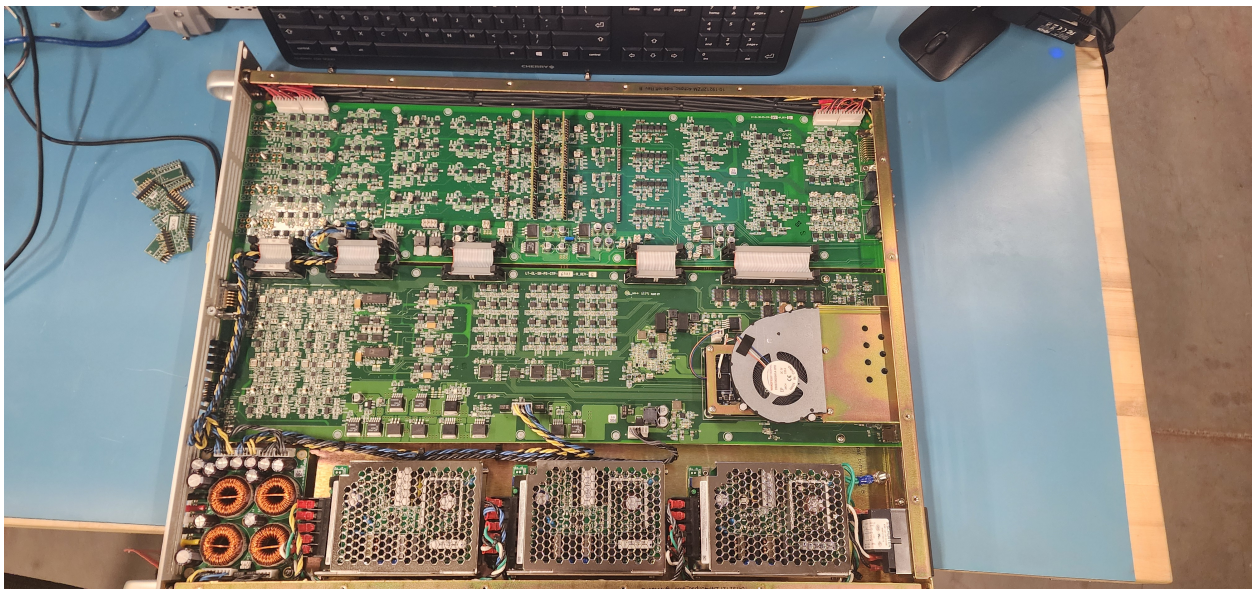

4.6.1 Analog Board Components

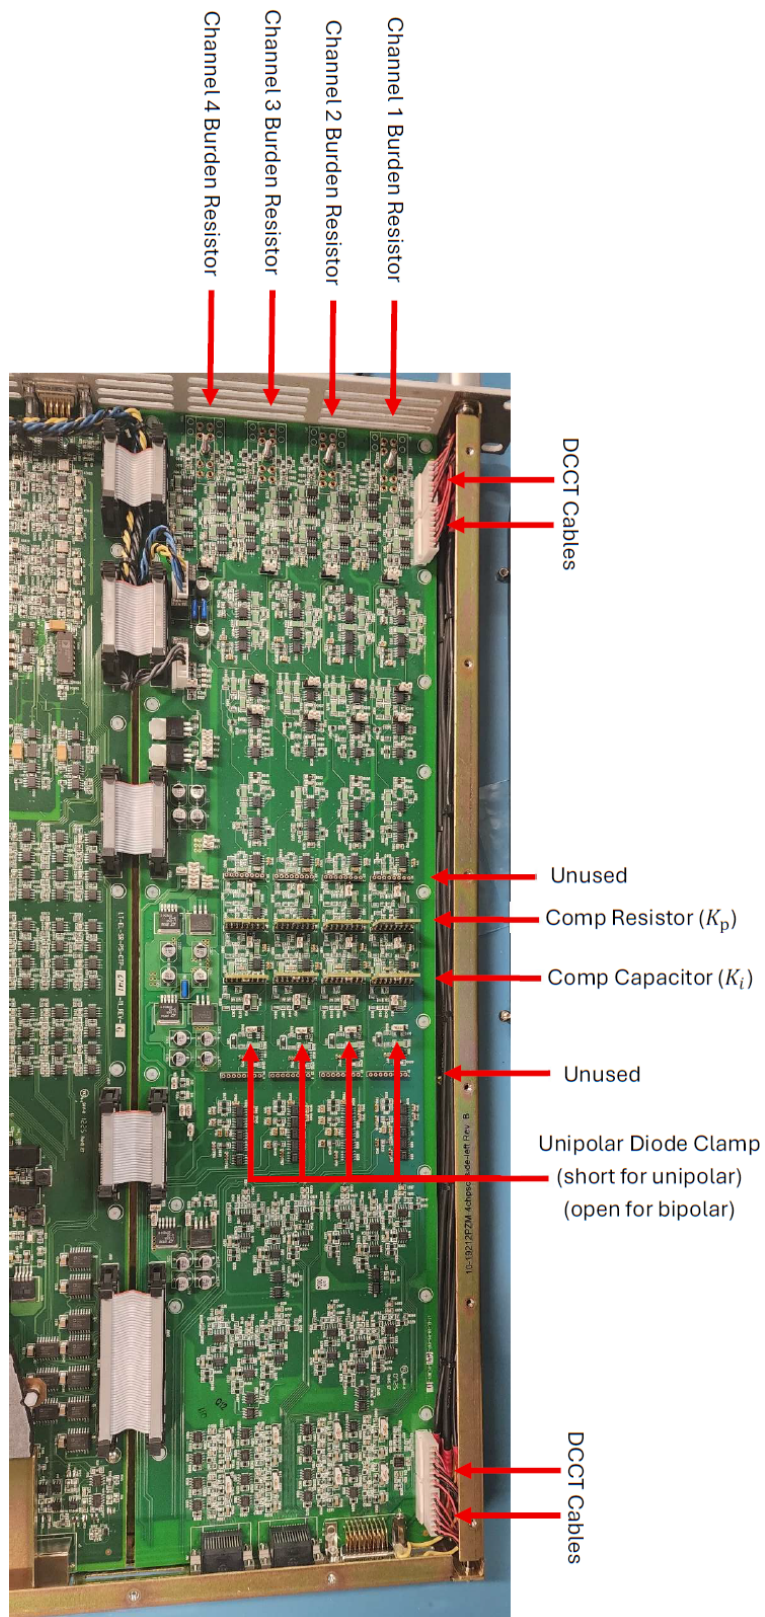

Chapter 5

EPICS Base and IOCs

5.1 Introduction

There are two IOCs associated with the calibration and test of the zPSC: The ATE IOC, and the zPSC IOC.

5.2 EPICS Installation Overview

EPICS installations performed by M. Capotosto loosely follow the below directory structure:

- `EPICS_BASE=/epics/base` or `/epics/base_[version]` or similar
- `SUPPORT=/epics/support` – or sometimes `MODULES` instead of `SUPPORT` is used.

Modules required for the ATE and PSC are installed here:

- `seq`: SNL-Sequencer
- `pscdrv`: Portable Streaming Controller Driver
- `asyn`: EPICS module for driver and device support
- `epics/iocs` - each IOC is cloned into this repository
- `epics/systemd-softioc` - This is an NSLS-II utility for managing IOCs as a system service

5.3 Installing EPICS Base and Required Modules

1. Install Dependencies for Build Install git, build-essential, and perl:

```
sudo apt -y install git build-essential perl libtirpc-dev re2c libevent-dev  
autoconf automake libtool pkg-config
```

2. Create the EPICS user group, and the empty EPICS directory:

```
sudo groupadd epics
sudo usermod -aG epics $USER
newgrp epics
sudo mkdir -p /epics
sudo chown $USER:epics /epics
sudo chmod 2775 /epics
```

3. EPICS Base is cloned into /epics/base via:

```
git clone --recursive -b 7.0
    https://github.com/epics-base/epics-base.git /epics/base
cd /epics/base
```

4. Build EPICS:

```
make clean
make
```

5. Create the remaining directory structure:

```
mkdir -p /epics/iocs /epics/modules
```

6. Clone asyn:

- (a) `cd /epics/modules`
- (b) `git clone https://github.com/epics-modules/asyn.git asyn`
- (c) `cd /epics/modules/asyn`
- (d) Set up required files in `configure/RELEASE`, `configure/RELEASE.LOCAL`
- (e) Build with `make clean`, and `make`

7. Clone Sequencer:

- (a) `cd /epics/modules`
- (b) `git clone https://github.com/epics-modules/sequencer.git seq`
- (c) `cd /epics/modules/seq`
- (d) Set up required files in `configure/RELEASE`, `configure/RELEASE.LOCAL`
- (e) Build with `make clean`, and `make`

8. Clone PSC Driver:

- (a) `cd /epics/modules`
- (b) `git clone https://github.com/mdaidsaver/pscdrv.git pscdrv`

- (c) `cd /epics/modules/pscdrv`
 - (d) Set up required files in `configure/RELEASE`, `configure/RELEASE.LOCAL`
 - (e) Build with `make clean`, and `make`
9. Clone Manage IOCs Utility:
- (a) `cd /epics`
 - (b) `git clone https://github.com/NSLS2/systemd-softioc.git`
 - (c) Navigate to the repo directory `cd systemd-softioc`
 - (d) Make the install script executable and run:


```
sudo chmod +x install.sh
sudo ./install.sh
sudo usermod -aG epics softioc
newgrp
sudo chown softioc:epics /epics/iocs
sudo chmod 2775 /epics/iocs
```

5.4 Installing the ATE IOC

1. Change to IOC directory `cd /epics/iocs`
2. Clone the repo:


```
git clone https://github.com/capotostobnl/ALSu-PSC-ATE-ioc.git PSCtest
```
3. `cd PSCtest`
4. `git switch Released,-UPC/BPC-Split-IOC-Ver-2`
5. Create the `RELEASE.local` file, `touch configure/RELEASE.local`
6. `echo -e "EPICS_BASE=/epics/base\nASYN=/epics/modules/asyn" > /epics/iocs/PSCtest/configure/RELEASE.local`
7. Build the IOC: `make clean`, `make`
8. Update the `st.cmd` file: `cd iocBoot/iocPSCtest`
 - (a) Edit the `st.cmd` file: `nano st.cmd`
 - (b) Update the `EPICS_BASE` variable if needed.
 - (c) Update the `IPPORT` to match the ATE. Repository has 10.69.26.4:5000 as default. Changing this later from the Phoebus/CSS panels may not work!
9. Find the next available port: `manage-iocs nextport`
10. Configure this in the config file: `nano config`

11. Set the NAME=PSCtest, PORT= your next port, USER=softioc, and HOST=\$HOSTNAME
12. Update the directory path in the root-level st.cmd to point to the right binaries
13. Enroll in manage-iocs as a service: `sudo manage-iocs install PSCtest`
14. Enable auto-start on boot: `sudo manage-iocs enable PSCtest`
15. Check the status, it should be running! `manage-iocs status`
16. And if you want other information on the ioc: `manage-iocs report`

5.5 Installing the PSC IOC

1. Change to IOC directory `cd /epics/iocs`
2. Clone the repo:
`git clone https://github.com/jamead/zpsc-ioc.git zpsc_ioc`
3. `cd zpsc_ioc`
4. Create the RELEASE.local file, touch `configure/RELEASE.local`
5. `echo -e "EPICS_BASE = /epics/base\nPSCDRV = /epics/modules/pscdrv\nSEQ = /epics/modules/seq" > /epics/iocs/zpsc_ioc/configure/RELEASE.local`
6. Build the IOC: `make clean, make`
7. Update the st.cmd file as needed: `cd iocBoot/ioczpsc`
8. Create the st.cmd file used by systemd-softioc:
`echo -e '#!/bin/bash\n\ncd "/epics/iocs/zpsc_ioc/iocBoot/ioczpsc"\n./st.cmd' > st.cmd`
9. Make the new st.cmd executable: `chmod +x st.cmd`
10. Find the next available port: `manage-iocs nextport`
11. Configure this in the config file: `nano config`
12. Set the NAME=zpsc_ioc, PORT= your next port, USER=softioc, and HOST=\$HOSTNAME
13. Update the directory path in the root-level st.cmd to the iocBoot/ioczpsc/st.cmd
14. Enroll in manage-iocs as a service: `sudo manage-iocs install zpsc_ioc`
15. Enable auto-start on boot: `sudo manage-iocs enable zpsc_ioc`
16. Check the status, it should be running! `manage-iocs status`
17. And if you want other information on the ioc: `manage-iocs report`

Chapter 6

CS-Studio - Phoebus

6.1 Introduction

CS-Studio Phoebus is installed using precompiled binaries. This application requires a Java runtime environment be installed.

The 'BOB' files - the user interface panels, are located in the IOC's directories, `/epics/iocs/PSCtest/gui` and `/epics/iocs/zpsc_ioc/gui`

Behavior of some features of Phoebus must be modified by the shell script used to launch Phoebus, an example is included with the below installation instructions to modify the behavior of the 'Home' button, used to bring up the custom 'PSC Launcher' panel using the Home button, instead of having to manually navigate to the file when needed.

6.2 Installing Phoebus

1. If not installed, install Java, e.g.:
`sudo apt update && sudo apt install openjdk-17-jdk`
2. Create the directory: `sudo mkdir /opt/phoebus`
`sudo chown $USER:epics /opt/phoebus`
`chmod 2775 /opt/phoebus`
3. Download Phoebus and extract to the `/opt/phoebus` directory
`https://github.com/ControlSystemStudio/phoebus/releases/download/v4.7.4/phoebus-4.7.4-linux.tar.gz`

```
cd /opt/phoebus
wget https://github.com/ControlSystemStudio/phoebus/releases/download/
v4.7.4/phoebus-4.7.4-linux.tar.gz
```

```
tar -xvzf phoebus-4.7.4-linux.tar.gz -C . --strip-components=1
```

4. Make the shell script executable: `chmod +x phoebus.sh`

5. Copy in necessary configuration changes from the template:

```
git clone
https://github.com/capotostobnl/Phoebus-ALSU.git /opt/phoebus/config
```

6. overwrite the defaults with the new template: `mv config/* .`

7. Update paths as necessary in the `settings.ini`

8. Alias Phoebus to run via command `run-phoebus`:

```
echo 'alias run-phoebus="/opt/phoebus/phoebus.sh"' >> ~/.bashrc
source ~/.bashrc
```

9. Now test! Try `run-phoebus` from a terminal, and then click the 'Home' button!

Chapter 7

Networking

7.1 Overview

The default configuration for these devices is to use static IP addresses on the 10.69.26.0/23 subnet. Deviating from this will require updates be made to the IOCs for the PSC and ATE, as well as changes to some parts of the calibration scripts, and, if applicable, the FOFB Test module of the functional test script set.

The network topology is generally as follows:

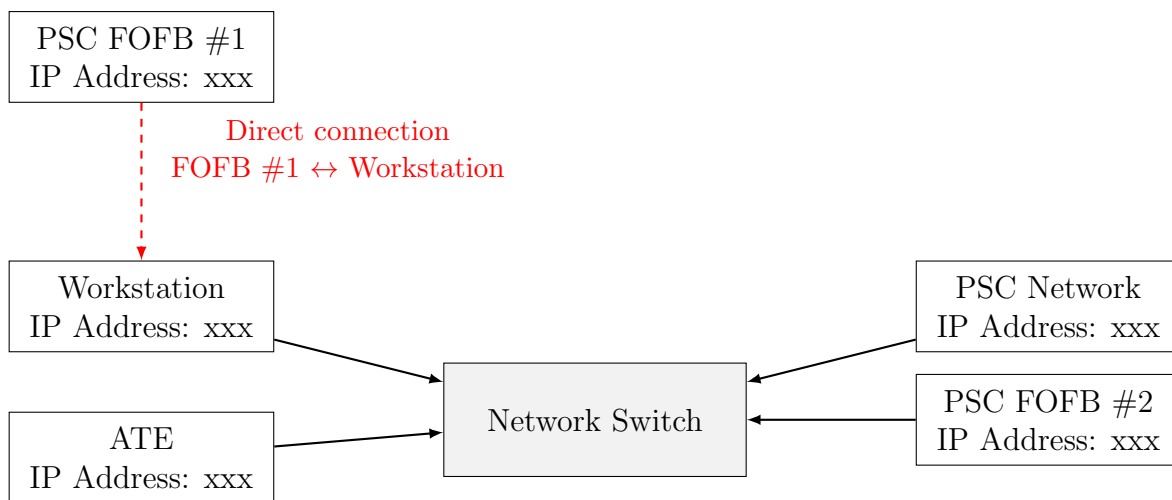


Figure 7.1: Network Topology with Clean FOFB Direct Link

Chapter 8

Installing and Configuring Minicom

8.1 Overview

Minicom is the serial terminal emulator of choice for NSLS-II, but many other options exist such as Teraterm for Windows, or PuTTY for cross platform.

8.2 Installation in a Linux environment

User Permissions

Access to the serial port by default requires privilege escalation. This issue can be sidestepped by adding the user accounts which need to access the serial ports to the dialout (or uucp for RHEL) user group.

This is also required later for use of the calibration script, if a USB-based GPIB adapter is used, otherwise those scripts must run as root, which can cause permissions issues with reports.

To add a user to the dialout group: `sudo usermod -aG dialout $USER`

Then to test: `newgrp dialout`, then `groups`. You should see dialout in your groups.

You may need to log out and log back in to ensure this persists in new terminal windows.

8.2.1 Installing Minicom

Installation of Minicom is simple, in a Debian-based distribution, use apt:

```
sudo apt-get update && sudo apt-get install -y minicom
```

8.3 Configuring Minicom

Create a default configuration if one does not exist for Minicom:

Open the a text file as root: `sudo nano /etc/minicom/minirc.dfl` and enter the following (One line per command, whitespace/tabs inside the line isn't critical)

```
pu baudrate      115200
pu bits          8
pu parity        N
pu stopbits      1
pu rtscts        No
pu xonxoff       No
```

This disables hardware and software flow control, and sets baud rate, parity, and stop bits.

8.4 Running Minicom

You are now ready to run Minicom. Find the PSC's serial port. With no PSC connected, you run: `ls /dev/`

Then plug in the PSC, and re-run the command; it should appear as a USB device, e.g. `ttyUSB2`. Search the list for which one new device will suddenly appear in the list.

Then: `minicom -D /dev/ttyUSB2`, replacing `ttyUSB2` with whatever your PSC's port is. A serial terminal should open; press return, and the PSC's menu should now print on the screen.

Chapter 9

Python Installation and Configuration

9.1 Overview

Python3 is required for the calibration and test scripts to be run for the PSCs. Below sections will describe the process for installing Python3, and handling package management and virtual environment management, if desired.

9.2 Installing and Configuring Python, and the Python Environment

9.2.1 Installing Python

Many downstream Debian-based distributions come bundled with Python3. If yours does not, install Python3 via: `sudo apt update && sudo apt install python3`

9.2.2 Python Package Management

Installing Pip

These scripts were written using Python3. It is assumed that Python3 is already installed on your workstation.

A Pip requirements file is included in the repository for ease of package management, but pip may not come bundled with the OS; to install Pip:

```
sudo apt install python3-pip
```

Installing Packages

Packages can be simply installed via pip now.

If within a virtual environment, use: `pip install -r requirements.txt`

If not using environments: `python3 -m pip install -r requirements.txt`

If you run into permissions issues: `python3 -m pip install --user -r requirements.txt`

Python Virtual Environments

It may be desirable to use a virtual environment, e.g., `venv` or `Conda`, especially if other scripts are used on this machine that may have overlapping or conflicting packages installed. My personal preference is for `venv`, however `Conda` is used by NSLS-II at the organizational level. `venv` is a simpler and light weight tool, if it is needed only for running Python projects.

`venv` can be installed with:

```
sudo apt install python3-venv
```

The environment can then be activated with `python3 -m venv my_venv_name`. You can then activate the environment with `source my_venv/bin/activate`.

Chapter 10

Calibration and Test Script Installation

10.1 Overview

The repository for the calibration and test scripts can be found at: https://github.com/capotostobnl/NSLS2_zPSC_Calibration_and_Test

Details regarding the use of the script will come in the following chapters on Calibration and on Functional Tests, though all scripts are launched from this one repository's 'launcher.py' script.

10.2 Cloning the Script Repository

1. Choose a location for the repo, and go there: `cd /`
2. Clone the repository: `git clone https://github.com/capotostobnl/NSLS2_zPSC_Calibration_and_Test`

10.3 Creating the Virtual Environment

If you choose to use a virtual environment, create it and then install the dependencies. If you choose to not use venv, you can skip to installing dependencies in the next section.

1. Navigate to the repository and then: `python3 -m venv .venv`
2. Activate the environment: `source .venv/bin/activate`

10.4 Installing Dependencies

Required Python modules can be installed via the requirements.txt from the repository via: `python3 -m pip install -r requirements.txt`

Chapter 11

Configuring the Test and Calibration Scripts

11.1 Overview

There are many places where changes may need to be made when bringing a new workstation up for the first time.

After initial configuration, no further changes should be required, with the exception of the `psc_models.py` class, which will be modified any time a new PSC is added, or a particular PSC's configuration requirements are changed.

11.2 The common Files Directory

This directory contains a number of modules which may need reconfiguration as outlined below.

Files in this directory may be used by both the Calibration side and the Test side of the script package.

11.2.1 EPICS Drivers

There are two modules, `ate_epics.py` and `psc_epics.py` which provide a library of function calls to read and write various EPICS PVs. As firmware and IOC changes are made, some changes may be required in these drivers to add new features, or fix features that are removed or break.

These two modules are little more than a pyepics wrapper.

11.2.2 The `initialize_dut.py` Utility

This is a small utility that collects information from the PSC EEPROM, generate the file-names, timestamps, and directory structures to be used during calibration and test.

11.2.3 The `psc_models.py` Class

11.3 Calibration

11.3.1 The `initialize_qspi.py` Module

11.3.2 The `psc_calibration.py` Module

11.4 Functional Test

Chapter 12

Initial Booting of the PSC and Configuration of the EEPROM

12.1 Overview

This section will discuss the steps required for the first time booting a new PSC, and initializing the EEPROM.

The EEPROM must be configured before many functions will work.

It is important to note that once the EEPROM is configured, many parameters of the PSC will still provide inconsistent or invalid data until the QSPI values are initialized properly via the scripts outlined in chapter 13.

12.1.1 Creating the SD Card

First, a new SD card must be generated and installed in the PSC. We have been using Microcenter 32GB microSD cards, though other brands and sizes may (or may not) work.

1. Download the BOOT.bin binaries from the git repository
For convenience, the latest stable version of firmware is located in the test script repository outlined in chapter 13.

Copy to your SD card this BOOT.bin

2. Create and Save the NET.CNF file to the SD card
A NET.CNF file is included in the repository as well, and can be used with no modifications so long as only one PSC is connected to the network at a time. Connecting more requires changing the static IP address set in this file for each PSC.
3. Eject the SD card, and install in the zPSC, it should now be ready to boot.

4. Turn on the PSC, it should boot, indicated by front panel LED D8 rapidly flashing. It may take 60 to 90 seconds for the PSC to connect to the network and ping, be patient. The PSC will take an extended amount of time to boot the RTOS if no ethernet cable is connected at all.

12.1.2 Configuring the EEPROM

Once the PSC has booted, we can proceed to writing the EEPROM configuration.

1. Connect the micro-USB cable to the front panel port of the PSC, and identify which serial port it appears as on your terminal.

You may need to do a directory list before and after plugging in, to see which serial device appears:

```
ls /dev
```

In this example, the PSC will appear as `/dev/ttyUSB2`.

```
capotosto@pstester2:~/MikeDevEnv/NSLS2_zPSC_Calibration_and_Test$ ls /dev
autofs          i2c-0      loop19      pps0         tty14      tty43      ttyS13      uinput
block           i2c-1      loop2       pps1         tty15      tty44      ttyS14      urandom
bsg             i2c-10     loop20      psaux        tty16      tty45      ttyS15      userfaultfd
btrfs-control  i2c-11     loop21      ptmx         tty17      tty46      ttyS16      userio
bus             i2c-12     loop22      ptp0         tty18      tty47      ttyS17      vcs
char            i2c-13     loop23      ptp1         tty19      tty48      ttyS18      vcs1
console         i2c-14     loop24      ptp2         tty2       tty49      ttyS19      vcs2
core            i2c-15     loop3       pts          tty20      tty5       ttyS2       vcs3
cpu             i2c-2      loop4       random       tty21      tty50      ttyS20      vcs4
cpu_dma_latency i2c-3      loop5       rfkill       tty22      tty51      ttyS21      vcs5
cuse            i2c-4      loop6       rtc          tty23      tty52      ttyS22      vcs6
disk            i2c-5      loop7       rtc0         tty24      tty53      ttyS23      vcsa
dma_heap        i2c-6      loop8       sda          tty25      tty54      ttyS24      vcsa1
dri             i2c-7      loop9       sdb          tty26      tty55      ttyS25      vcsa2
drm_dp_aux0     i2c-8      loop-control serial        tty27      tty56      ttyS26      vcsa3
drm_dp_aux1     i2c-9      mapper      sg0          tty28      tty57      ttyS27      vcsa4
drm_dp_aux2     initctl    mcelog      sg1          tty29      tty58      ttyS28      vcsa5
drm_dp_aux3     input      mei0        shm          tty3       tty59      ttyS29      vcsa6
ecryptfs        kmsg       mem         snapshot     tty30      tty6       ttyS3       vcsu
fb0             kvm        mqueue      snd          tty31      tty60      ttyS30      vcsu1
fd             log        mtd0        stderr       tty32      tty61      ttyS31      vcsu2
full           loop0      mtd0ro      stdin        tty33      tty62      ttyS4       vcsu3
fuse           loop1      net         stdout       tty34      tty63      ttyS5       vcsu4
gpiochip0       loop10     ng0n1       tpm0         tty35      tty7       ttyS6       vcsu5
gpiochip1       loop11     null        tpmrm0       tty36      tty8       ttyS7       vcsu6
gpiochip2       loop12     nvme0       tty          tty37      tty9       ttyS8       vfio
gpiochip3       loop13     nvme0n1     tty0         tty38      ttyprintk  ttyS9       vga_arbiter
hidraw0         loop14     nvme0n1p1   tty1         tty39      ttyS0       ttyUSB0     vhci
hidraw1         loop15     nvme0n1p2   tty10        tty4       ttyS1       ttyUSB1     vhost-net
hpet            loop16     nvram       tty11        tty40      ttyS10      ttyUSB2     vhost-vsock
hugepages       loop17     port        tty12        tty41      ttyS11      udmabuf     zero
hwrng           loop18     ppp         tty13        tty42      ttyS12      uhid        zfs
capotosto@pstester2:~/MikeDevEnv/NSLS2_zPSC_Calibration_and_Test$
```

2. Open Minicom using the port you determined: `minicom -D /dev/ttyUSB2`

```
Welcome to minicom 2.8

OPTIONS: I18n
Port /dev/ttyUSB2, 20:56:01

Press CTRL-A Z for help on special keys

Select an option:
A: Display PSC Settings
B: Set Number of Channels (2 or 4)
C: Set Resolution (High or Medium)
D: Set Bandwidth (Fast or Slow)
E: Set Polarity (Bipolar or Unipolar)
F: Set Ch3-Ch4 to Dual Mode
G: Set Main Dipole Mode
H: Display Snapshot Stats
I: Print FreeRTOS Stats
J: Dump EEPROM
K: Clear EEPROM
L: Test EEPROM
M: Dave Bergman Calibration Mode
Q: quit
```

3. Set Items B through E for a standard PSC, and F, G as needed.

```
Select an option:
A: Display PSC Settings
B: Set Number of Channels (2 or 4)
C: Set Resolution (High or Medium)
D: Set Bandwidth (Fast or Slow)
E: Set Polarity (Bipolar or Unipolar)
F: Set Ch3-Ch4 to Dual Mode
G: Set Main Dipole Mode
H: Display Snapshot Stats
I: Print FreeRTOS Stats
J: Dump EEPROM
K: Clear EEPROM
L: Test EEPROM
M: Dave Bergman Calibration Mode
Q: quit
B

Set Number of Channels of PSC: 0 = 2 Channel, 1 = 4 Channel  1
```

Figure 12.1: Setting B

```
Select an option:
A: Display PSC Settings
B: Set Number of Channels (2 or 4)
C: Set Resolution (High or Medium)
D: Set Bandwidth (Fast or Slow)
E: Set Polarity (Bipolar or Unipolar)
F: Set Ch3-Ch4 to Dual Mode
G: Set Main Dipole Mode
H: Display Snapshot Stats
I: Print FreeRTOS Stats
J: Dump EEPROM
K: Clear EEPROM
L: Test EEPROM
M: Dave Bergman Calibration Mode
Q: quit
C

Set Resolution of PSC: 0 = Medium (18bit), 1 = High (20bit) 1
```

Figure 12.2: Setting C

```
Select an option:
A: Display PSC Settings
B: Set Number of Channels (2 or 4)
C: Set Resolution (High or Medium)
D: Set Bandwidth (Fast or Slow)
E: Set Polarity (Bipolar or Unipolar)
F: Set Ch3-Ch4 to Dual Mode
G: Set Main Dipole Mode
H: Display Snapshot Stats
I: Print FreeRTOS Stats
J: Dump EEPROM
K: Clear EEPROM
L: Test EEPROM
M: Dave Bergman Calibration Mode
Q: quit
D

Set Bandwidth of PSC: 0 = Fast, 1 = Slow 1
```

Figure 12.3: Setting D


```
Select an option:
A:  Display PSC Settings
B:  Set Number of Channels (2 or 4)
C:  Set Resolution (High or Medium)
D:  Set Bandwidth (Fast or Slow)
E:  Set Polarity (Bipolar or Unipolar)
F:  Set Ch3-Ch4 to Dual Mode
G:  Set Main Dipole Mode
H:  Display Snapshot Stats
I:  Print FreeRTOS Stats
J:  Dump EEPROM
K:  Clear EEPROM
L:  Test EEPROM
M:  Dave Bergman Calibration Mode
Q:  quit
E

Set Polarity of PSC per channel
0 = Bipolar, 1 = Unipolar

Channel 0 polarity: 1
Channel 1 polarity: 1
Channel 2 polarity: 1
Channel 3 polarity: 1
Final polarity bitfield = 0xF
```

Figure 12.4: Setting E

4. Verify the settings with Option A:

```
Select an option:
A: Display PSC Settings
B: Set Number of Channels (2 or 4)
C: Set Resolution (High or Medium)
D: Set Bandwidth (Fast or Slow)
E: Set Polarity (Bipolar or Unipolar)
F: Set Ch3-Ch4 to Dual Mode
G: Set Main Dipole Mode
H: Display Snapshot Stats
I: Print FreeRTOS Stats
J: Dump EEPROM
K: Clear EEPROM
L: Test EEPROM
M: Dave Bergman Calibration Mode
Q: quit
A
Number of Channels: 4
Resolution: High
Bandwidth: Slow
Polarity Ch0: Bipolar
Polarity Ch1: Bipolar
Polarity Ch2: Bipolar
Polarity Ch3: Bipolar
Dual Mode is disabled for Ch3-Ch4
Main Dipole Mode is disabled
```

Figure 12.5: Setting A

5. If satisfied, it is now safe to unplug the USB cable, no further action is necessary. To exit Minicom, press `ctrl+a`, release, press `x`, release, and finally press `<return>` for 'Yes' to exit.

Chapter 13

Running the Calibration and Test Script

13.1 Overview

This section will describe how to run and use the Calibration and Test Script, assuming it is configured properly. The following chapters will go into detail on adding new PSC models, and specific details regarding the calibration side and test side of the scripts.

The EEPROM must be configured in the PSC prior to using any of these scripts. Failure to configure the EEPROM, or incorrectly configuring it, will cause issues with the script at even the first menu selection stages.

13.2 Running the Script: Launcher Menu

To run the script, simply execute the `launcher.py` script from the repository root directory:
`python3 launcher.py`
A menu will appear in your terminal.

```
o (.venv) PS C:\users\capotosto\Desktop\WSLS2_zPSC_Calibration_and_Test> python .\launcher.py

-----
Select Execution Mode:
1. Initialize QSPI Only
2. Calibrate Only
3. Test Only
4. Calibrate and Test
-----

Enter selection (1-4): █
```

Choose an option from the menu.**1. Initialize QSPI Only**

This option will set the QSPI parameters normally written at the end of calibration, so values such as OVP/OCP, scale factors, and such, will be written to the flash. All gains are written as 1.00, and all offsets written as 0.0. This will overwrite any values stored in QSPI!

This is especially useful for initial testing, where you may want to verify all channels work visually, before committing the time to calibrate and test.

2. Calibrate Only

This option will perform a calibration only, without any tests. This will write all QSPI values at the end of the calibration for each channel.

3. Test Only

This option will perform only the functional tests, without a calibration. This makes no changes to the QSPI.

4. Calibrate and Test

This option will run a full calibration, and immediately upon completion of the calibration, it will begin the functional test. This allows a calibration and test cycle to be started, and then left alone; so long as the calibration doesn't fail in a way that exits the script, the test can be left unattended for the duration and it will complete without any further user input once it has began (with the exception of the Fast Orbit Feedback Test, which requires a user password)

13.2.1 Option 1: Initialize QSPI Only

An example screenshot is provided below.

After selecting Menu Option 1, Initialize QSPI Only, the script will sweep the network to detect PSCs. If only one PSC pings, it'll automatically select this unit. If it times out, it'll prompt for the PV prefix of the PSC.

The script reads the EEPROM configuration, and trims the option list to those PSCs that match the EEPROM.

In this example, a 4Ch High-Stability Fast EIC PSC was being configured, so we chose Option 4. Each channel's QSPI was then written, and the script exited gracefully.

```
capotosto@pstester2:~/MikeDevEnv/NSLS2_zPSC_Calibration_and_Test$ python3 launcher.py
-----
Select Execution Mode:
1. Initialize QSPI Only
2. Calibrate Only
3. Test Only
4. Calibrate and Test
-----

Enter selection (1-4): 1

Enter PSC serial number: (Enter "H" for help):0001
Attempting to auto-detect PSCs
Network Sweep: Attempt 1 of 3...
[*] Success: Discovered PSC 2 at 10.69.26.31
pv_prefix = lab{2}

Reading EEPROM...
EEPROM # Of Channels: 4
EEPROM Resolution: HS (20bit)
EEPROM Bandwidth: F
EEPROM Polarity: Unipolar, Unipolar, Unipolar, Unipolar

Detected 4 channels. Showing 4-channel models:
-----
1) C29-ARI-SXN [C29-ARI-SXN]
2) 4Ch-MSS-ID_XYCorr (ARI/SXN Cell 29) [4Ch-MSS-ID_XYCorr]
3) 4CH-MSS-Cur_Strip (ARI/SXN Cell 29) [4CH-MSS-Cur_Strip]
4) 4CH-HSF-EIC [PSC-4CH-HSF-EIC]
5) 4CH-MSS-SR-SK [PSC-4CH-MSS-SR-SK]
-----

Enter Type (or 'q' to quit): 4
--> Selected: 4CH-HSF-EIC

QSPI Written
QSPI Written
QSPI Written
QSPI Written
capotosto@pstester2:~/MikeDevEnv/NSLS2_zPSC_Calibration_and_Test$
```

13.2.2 Option 2: Calibrate Only

An example screenshot is provided below.

After selecting Menu Option 2, Calibrate Only, the script will sweep the network to detect PSCs. If only one PSC pings, it'll automatically select this unit. If it times out, it'll prompt for the PV prefix of the PSC.

The script reads the EEPROM configuration, and trims the option list to those PSCs that match the EEPROM.

In this example, a 4Ch High-Stability Slow PSC was being calibrated, so we chose Option 5.

A few new prompts will appear:

1. How long do you want to sleep before beginning? (Minutes):
This is asking how long to delay the script's start. For example, if you want the script to wait 15 minutes for the unit to warm up and thermally stabilize, you can simply type 15 and hit **return**. The script will wait 15 minutes, and then start automatically.
2. Are the correct tuning boards installed in the ATE? <Y/N>:
This is a reminder to check and install the correct tuning boards in the ATE. This does not have any effect on the script's function - it does not perform any self tests or verification! It is simply a reminder. Incorrect tuning boards will cause the unit to behave unpredictably.
Install the correct tuning boards before proceeding.
3. Have you run the DMM Self-Calibration within the last 8 hours? <Y/N>:
This is another reminder prompt. If you haven't, simply perform the auto-cal on the DC Volts range before proceeding.
4. The calibration script will now take the reigns from here. No further user input is required, the calibration will run, printing results to the terminal as it progresses. Once it completes, it will automatically generate a report text file, timestamped with the model and serial number of the PSC in the filename, located in the `/cal_reports` directory.

```

capotosto@pstester2:~/MikeDevEnv/NSLS2_zPSC_Calibration_and_Test$ python3 launcher.py
-----
Select Execution Mode:
1. Initialize QSPI Only
2. Calibrate Only
3. Test Only
4. Calibrate and Test
-----

Enter selection (1-4): 2

Enter PSC serial number: (Enter "H" for help):2
Attempting to auto-detect PSCs
Network Sweep: Attempt 1 of 3...
[*] Success: Discovered PSC 2 at 10.69.26.31
pv_prefix = lab{2}

Reading EEPROM...
EEPROM # Of Channels: 4
EEPROM Resolution: HS (20bit)
EEPROM Bandwidth: S
EEPROM Polarity: Bipolar, Bipolar, Bipolar, Bipolar

Detected 4 channels. Showing 4-channel models:
-----
1) C29-ARI-SXN [C29-ARI-SXN]
2) 4Ch-MSS-ID_XYCorr (ARI/SXN Cell 29) [4Ch-MSS-ID_XYCorr]
3) 4CH-MSS-Cur_Strip (ARI/SXN Cell 29) [4CH-MSS-Cur_Strip]
4) 4CH-HSF-EIC [PSC-4CH-HSF-EIC]
5) NSLS-II_TEST_4-CH-SLOW__MSS/HSS [PSC-4-CH-SLOW__MSS/HSS]
6) NSLS-II_TEST_4-CH-FAST__MSF/HSF [PSC-4-CH-SLOW__MSF/HSF]
-----

Enter Type (or 'q' to quit): 5
--> Selected: NSLS-II_TEST_4-CH-SLOW__MSS/HSS

How long do you want to sleep before beginning? (Minutes): 0
Are the correct tuning boards installed in the ATE? <Y/N>: y
Have you run the DMM Self-Calibration within the last 8 hours? <Y/N>y
Sleeping 0 Minutes
Minutes remaining: 0.0
Time remaining: 00:00
Starting Calibration script...

-----

Calibrating PSC model NSLS-II_TEST_4-CH-SLOW__MSS/HSSSN0002

```

Figure 13.1: Menu to launch a Calibrate Only calibration of a PSC

13.2.3 Option 3: Test Only

An example screenshot is provided below.

After selecting Menu Option 3, Test Only, the script will sweep the network to detect PSCs. If only one PSC pings, it'll automatically select this unit. If it times out, it'll prompt for the PV prefix of the PSC.

The script reads the EEPROM configuration, and trims the option list to those PSCs that match the EEPROM.

In this example, a 4Ch High-Stability Slow PSC was being tested, so we chose Option 5.

A few new prompts will appear:

1. How long do you want to sleep before beginning? (Minutes):
This is asking how long to delay the script's start. For example, if you want the script to wait 15 minutes for the unit to warm up and thermally stabilize, you can simply type 15 and hit **return**. The script will wait 15 minutes, and then start automatically.
2. Are the correct tuning boards installed in the ATE? <Y/N>:
This is a reminder to check and install the correct tuning boards in the ATE. This does not have any effect on the script's function - it does not perform any self tests or verification! It is simply a reminder. Incorrect tuning boards will cause the unit to behave unpredictably.
Install the correct tuning boards before proceeding.
3. The functional test script will now take the reigns from here. No further user input is required, the functional tests will run, printing results to the terminal as it progresses. Once it completes, it will automatically generate a report PDF file, timestamped with the model and serial number of the PSC in the filename, located in the `/test_reports` directory.

There is one caveat - in that the Fast-bandwidth units will require one input from the user at the very end of the test. The user will be prompted for the SUDO password, as TCPDUMP requires root permission to sniff traffic. The script will pause while waiting for the password, before continuing. This last step requires less than 90 seconds to complete the test and generate the report once the password is entered.


```

capotosto@pstester2:~/MikeDevEnv/NSLS2_zPSC_Calibration_and_Test$ python3 launcher.py
-----
Select Execution Mode:
1. Initialize QSPI Only
2. Calibrate Only
3. Test Only
4. Calibrate and Test
-----

Enter selection (1-4): 3

Enter PSC serial number: (Enter "H" for help):2
Attempting to auto-detect PSCs
Network Sweep: Attempt 1 of 3...
[*] Success: Discovered PSC 2 at 10.69.26.31
pv_prefix = lab{2}

Reading EEPROM...
EEPROM # Of Channels: 4
EEPROM Resolution: HS (20bit)
EEPROM Bandwidth: S
EEPROM Polarity: Bipolar, Bipolar, Bipolar, Bipolar

Detected 4 channels. Showing 4-channel models:
-----
1) C29-ARI-SXN [C29-ARI-SXN]
2) 4Ch-MSS-ID_XYCorr (ARI/SXN Cell 29) [4Ch-MSS-ID_XYCorr]
3) 4CH-MSS-Cur_Strip (ARI/SXN Cell 29) [4CH-MSS-Cur_Strip]
4) 4CH-HSF-EIC [PSC-4CH-HSF-EIC]
5) NSLS-II_TEST_4-CH-SLOW__MSS/HSS [PSC-4-CH-SLOW__MSS/HSS]
6) NSLS-II_TEST_4-CH-FAST__MSF/HSF [PSC-4-CH-SLOW__MSF/HSF]
-----

Enter Type (or 'q' to quit): 5
--> Selected: NSLS-II_TEST_4-CH-SLOW__MSS/HSS

How long do you want to sleep before beginning? (Minutes): 0
Are the correct tuning boards installed in the ATE? <Y/N>: y
Sleeping 0 Minutes
Minutes remaining: 0.0
Time remaining: 00:00
Beginning functional test...

```

Figure 13.2: Menu to launch a Test Only test of a PSC

13.2.4 Option 4: Calibrate and Test

This option will have a menu identical to that of Option 2: Calibrate Only. This simply runs the calibration script, then on completion, runs the test script. No additional figures have been included for this.

Appendix A

Example Calibration Report

Report of Calibration
PSC PSC-4CH-HSF-EIC_S/N 0001
2026-05-19 14:08:16

Calibration Current standard: BNL PSC ATE S/N 001
Calibration Volt standard: HP 3458A-002 S/N 2823A 23647
Calibration Resistance standard: Fluke 742A-1 S/N 1063008
End Header

lab{2}Chan1
Burden resistor = 33.3333

Measuring initial gains and offsets

Itest	dacSP	dcct1	dcct2	dacRB	err
-1.002134	1.004211	-1.011351	-1.011165	1.001779	0.023016
-27.001049	27.014790	-26.827587	-26.827612	27.041689	0.052203

	dacSP	dcct1	dcct2	dacRB
Initial measured offsets:	-0.001627	-0.016258	-0.016064	0.000000
Initial measured gains:	1.000449	0.992974	0.992982	1.001128
Gain corrections:	1.000449	1.007076	1.007068	1.000000

Writing gain and offset corrections for dacSP, dcct1, and dcct2 to PSC

Measuring DAC readback gain and offset

DAC SP	DAC RB
1.000000	0.999602
27.000000	27.040516

Measured offset: -0.001971
Measured gain: 1.001574
Gain correction: 0.998429

Writing gain and offset constants for dacRB to PSC

Verification

Itest	dacSP	dcct1	dcct2	dacRB	err
-1.002083	1.001881	-1.002053	-1.002082	1.002442	0.007083
-27.000989	27.000880	-27.000942	-27.000990	27.001160	0.039925

	dacSP	dcct1	dcct2	dacRB
Final measured offsets:	0.000206	0.000029	0.000002	0.000572
Final measured gains:	1.000004	0.999999	1.000000	0.999989

	dacSP	dcct1	dcct2	dacRB
Final measured offsets mean:	-0.000061	-0.000069	-0.000082	0.000454
Final measured offsets stdev:	0.000333	0.000085	0.000065	0.000214
Final measured gains mean:	0.999997	0.999993	0.999994	0.999999
Final measured gains stdev:	0.000009	0.000007	0.000006	0.000006

Saving channel 1 calibration constants to qspi

lab{2}Chan2

Burden resistor = 33.3333

Measuring initial gains and offsets

Itest	dacSP	dcct1	dcct2	dacRB	err
-1.001896	1.005391	-1.013423	-1.010625	1.001104	-0.006992
-27.001133	27.010829	-26.821861	-26.799139	27.052780	0.013247

	dacSP	dcct1	dcct2	dacRB
Initial measured offsets:	-0.003256	-0.018880	-0.016849	0.000000
Initial measured gains:	1.000239	0.992661	0.991895	1.001778
Gain corrections:	1.000239	1.007393	1.008171	1.000000

Writing gain and offset corrections for dacSP, dcct1, and dcct2 to PSC

Measuring DAC readback gain and offset

DAC SP	DAC RB
1.000000	0.999262
27.000000	27.051821

Measured offset: -0.002759

Measured gain: 1.002021

Gain correction: 0.997983

Writing gain and offset constants for dacRB to PSC

Verification

Itest	dacSP	dcct1	dcct2	dacRB	err
-1.002069	1.001908	-1.002223	-1.002130	1.002042	-0.037007
-27.001283	27.001929	-27.001709	-27.001572	27.002224	0.044991

	dacSP	dcct1	dcct2	dacRB
Final measured offsets:	0.000192	-0.000143	-0.000052	0.000128
Final measured gains:	1.000031	1.000010	1.000009	1.000006

	dacSP	dcct1	dcct2	dacRB
Final measured offsets mean:	0.000065	-0.000055	-0.000032	-0.000442
Final measured offsets stdev:	0.000093	0.000066	0.000051	0.000311
Final measured gains mean:	1.000006	0.999993	0.999994	1.000005
Final measured gains stdev:	0.000015	0.000010	0.000010	0.000005

Saving channel 2 calibration constants to qspi

lab{2}Chan3

Burden resistor = 33.3333

Measuring initial gains and offsets

Itest	dacSP	dcct1	dcct2	dacRB	err
-1.001365	1.004346	-1.010886	-1.009898	1.003824	0.017980
-27.000641	27.000858	-26.807045	-26.813667	27.014460	0.049934

	dacSP	dcct1	dcct2	dacRB
Initial measured offsets:	-0.003087	-0.017343	-0.016062	0.000000
Initial measured gains:	0.999894	0.992188	0.992480	1.000543
Gain corrections:	0.999894	1.007874	1.007577	1.000000

Writing gain and offset corrections for dacSP, dcct1, and dcct2 to PSC

Measuring DAC readback gain and offset

DAC SP	DAC RB
1.000000	1.002393
27.000000	27.013741

Measured offset: 0.001956

Measured gain: 1.000436

Gain correction: 0.999564

Writing gain and offset constants for dacRB to PSC

Verification

Itest	dacSP	dcct1	dcct2	dacRB	err
-1.001401	1.001458	-1.001531	-1.001573	1.002080	0.006694
-27.000487	27.000075	-27.000189	-27.000257	27.000923	0.026097

	dacSP	dcct1	dcct2	dacRB
Final measured offsets:	-0.000075	-0.000147	-0.000188	0.000614
Final measured gains:	0.999982	0.999984	0.999985	1.000009

	dacSP	dcct1	dcct2	dacRB
Final measured offsets mean:	0.000022	-0.000128	-0.000140	0.000769
Final measured offsets stdev:	0.000177	0.000094	0.000082	0.000121
Final measured gains mean:	0.999991	0.999989	0.999989	1.000001
Final measured gains stdev:	0.000020	0.000008	0.000008	0.000013

Saving channel 3 calibration constants to qspi

lab{2}Chan4

Burden resistor = 33.3333

Measuring initial gains and offsets

Itest	dacSP	dcct1	dcct2	dacRB	err
-1.001620	1.004751	-1.011366	-1.010974	1.001680	0.017581
-27.000917	27.003424	-26.819748	-26.814087	27.035374	0.054696

	dacSP	dcct1	dcct2	dacRB
Initial measured offsets:	-0.003156	-0.017101	-0.016912	0.000000
Initial measured gains:	0.999976	0.992657	0.992454	1.001347
Gain corrections:	0.999976	1.007397	1.007603	1.000000

Writing gain and offset corrections for dacSP, dcct1, and dcct2 to PSC

Measuring DAC readback gain and offset

DAC SP	DAC RB
1.000000	1.000222
27.000000	27.034683

Measured offset: -0.001104

Measured gain: 1.001325

Gain correction: 0.998676

Writing gain and offset constants for dacRB to PSC

Verification

Itest	dacSP	dcct1	dcct2	dacRB	err
-1.001558	1.001739	-1.001855	-1.001890	1.001905	0.007935
-27.001001	27.000845	-27.000896	-27.000874	27.000404	0.040057

	dacSP	dcct1	dcct2	dacRB
Final measured offsets:	-0.000194	-0.000313	-0.000350	0.000189
Final measured gains:	0.999987	0.999985	0.999982	0.999977

	dacSP	dcct1	dcct2	dacRB
Final measured offsets mean:	0.000009	-0.000107	-0.000094	0.000065
Final measured offsets stdev:	0.000235	0.000187	0.000201	0.000217
Final measured gains mean:	0.999993	0.999989	0.999988	0.999994
Final measured gains stdev:	0.000006	0.000006	0.000005	0.000013

Saving channel 4 calibration constants to qspi


Test data reviewed by _____ Date_____

Appendix B

Example Test Report

PSC Functional Test Report


PSC Functional Test Results	
Power Supply Controller Configuration	
Description	PSC-4CH-HSF-EIC
Serial Number	0001
Number of Channels	4
Resolution	HS (20bit)
Bandwidth	F
Polarity	Bipolar

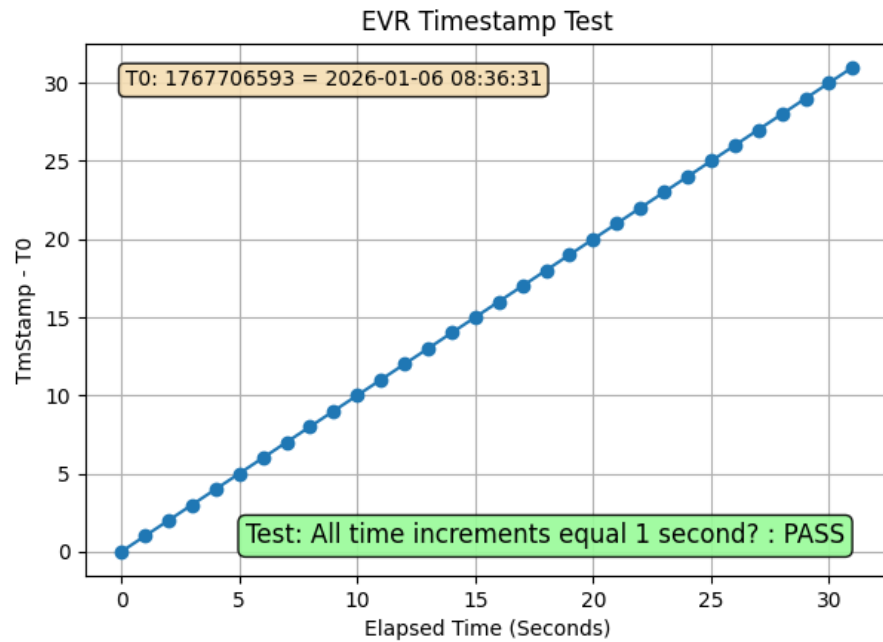


Channel 1

ATE Fault Tests for Channel 1	
Fault #1 Generated and Cleared	PASS
Fault #2 Generated and Cleared	PASS
Fault SPARE Generated and Cleared	PASS
Fault DCCT Generated and Cleared	PASS


Power Supply Regulation for Channel 1:

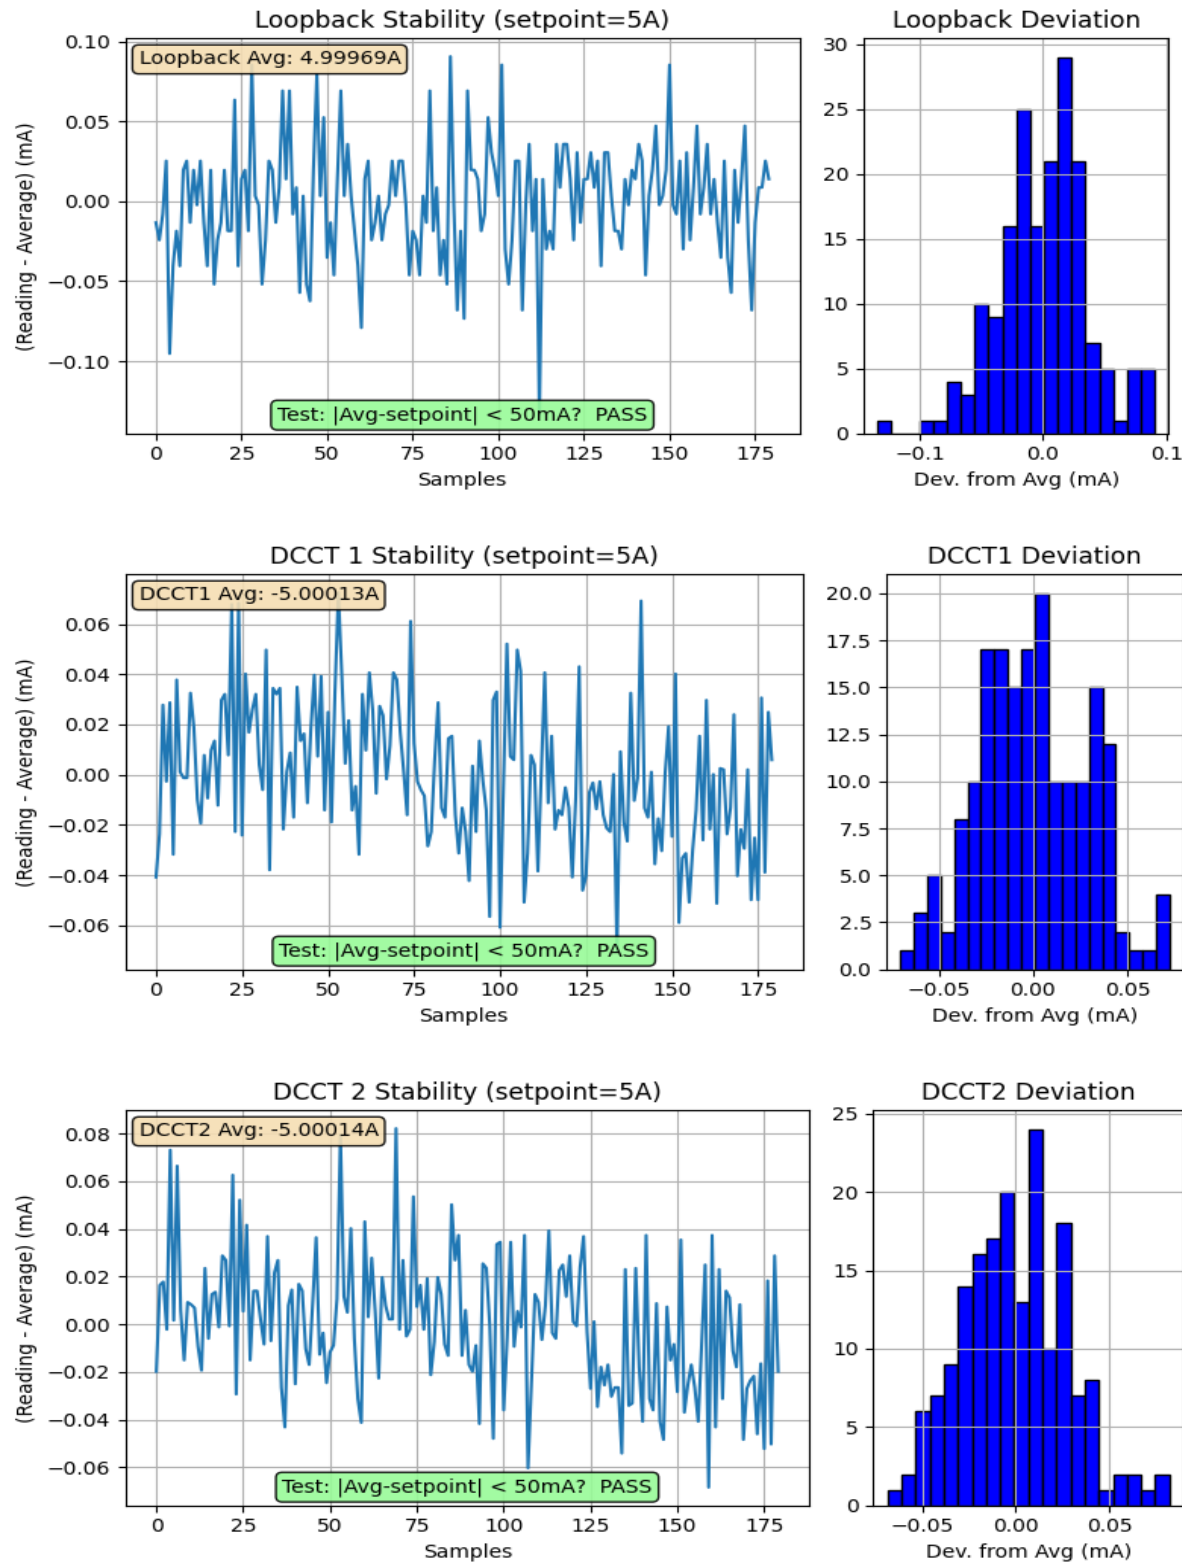


Jump Test Results: CH1

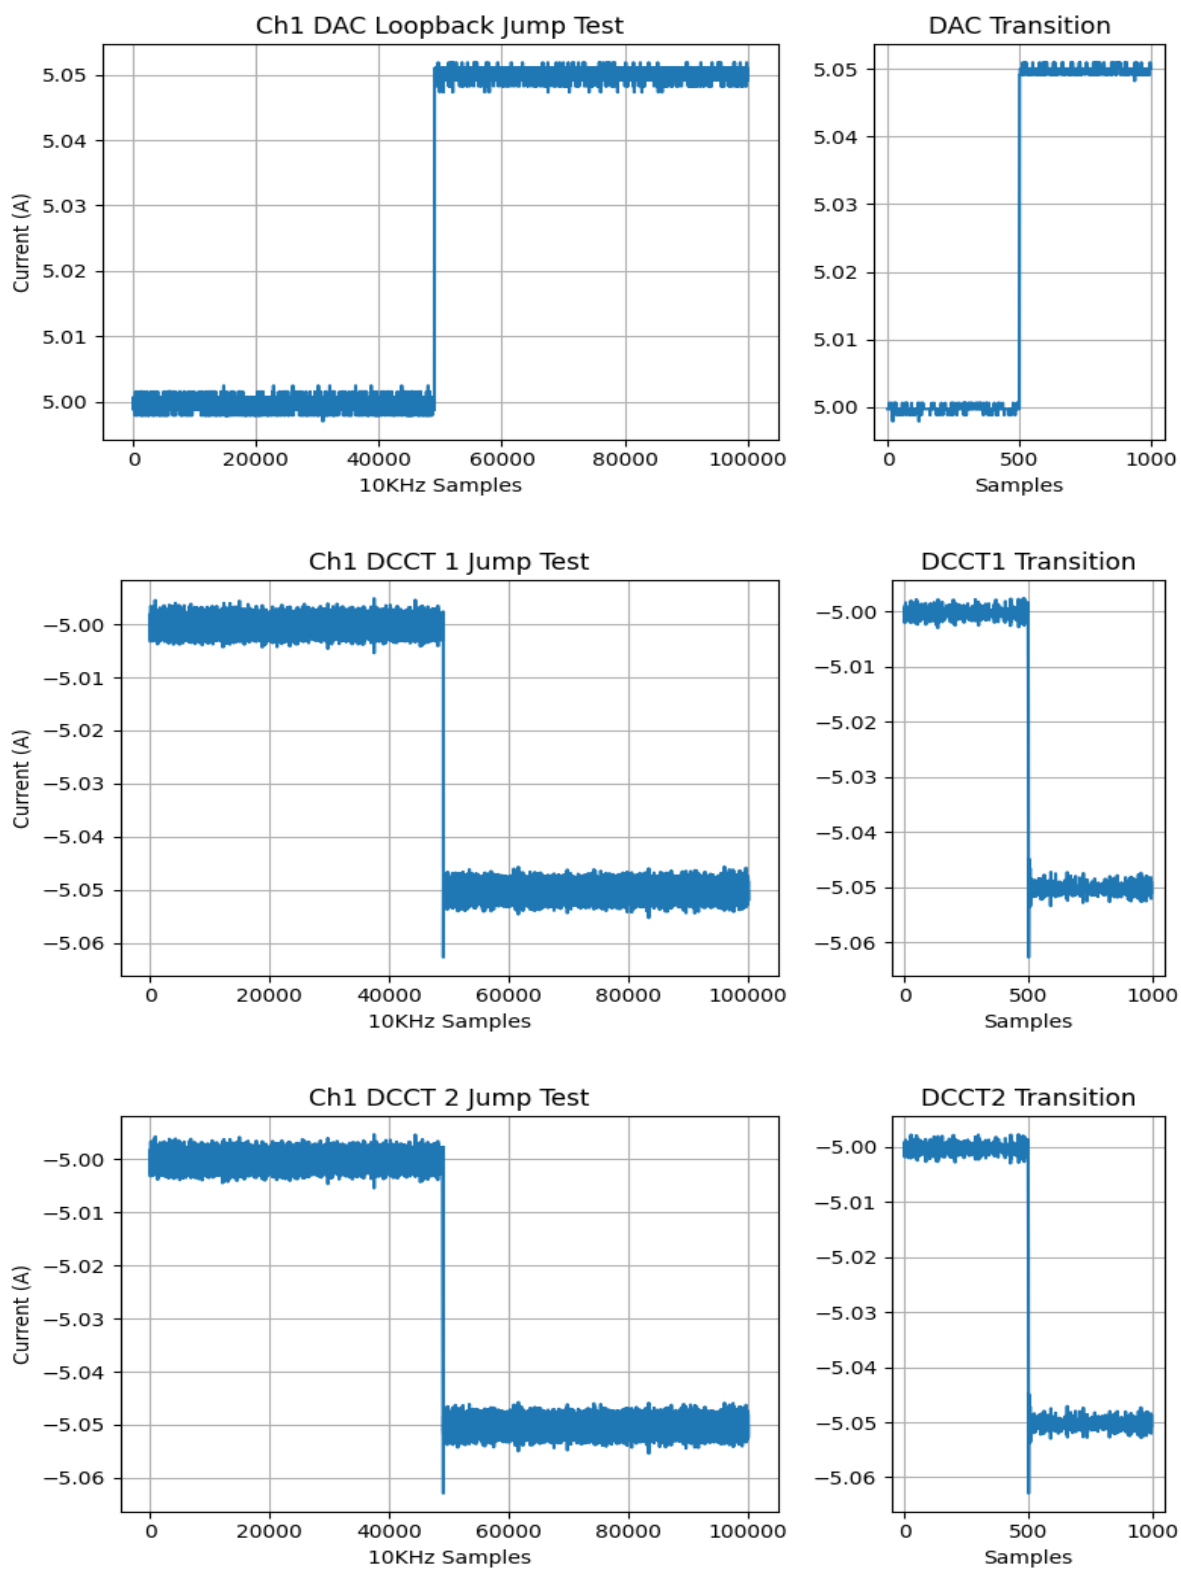


Jump Test Results: CH1

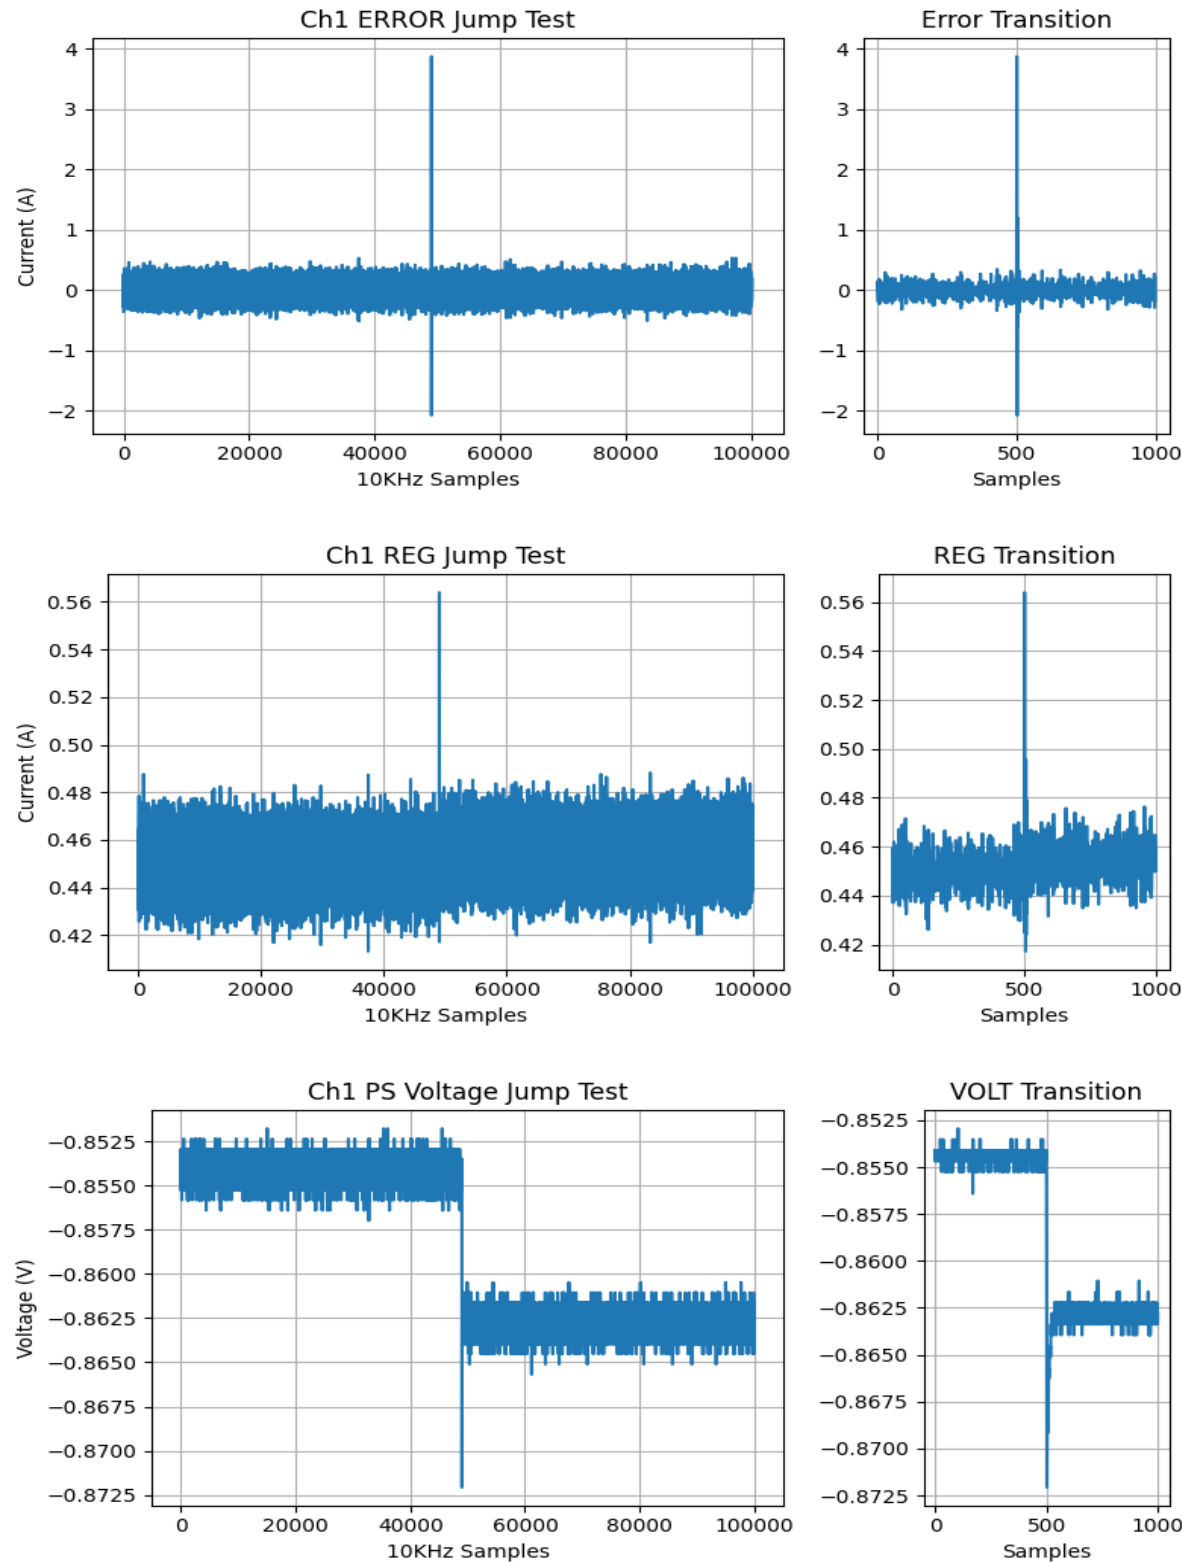




Jump Test Results: CH1

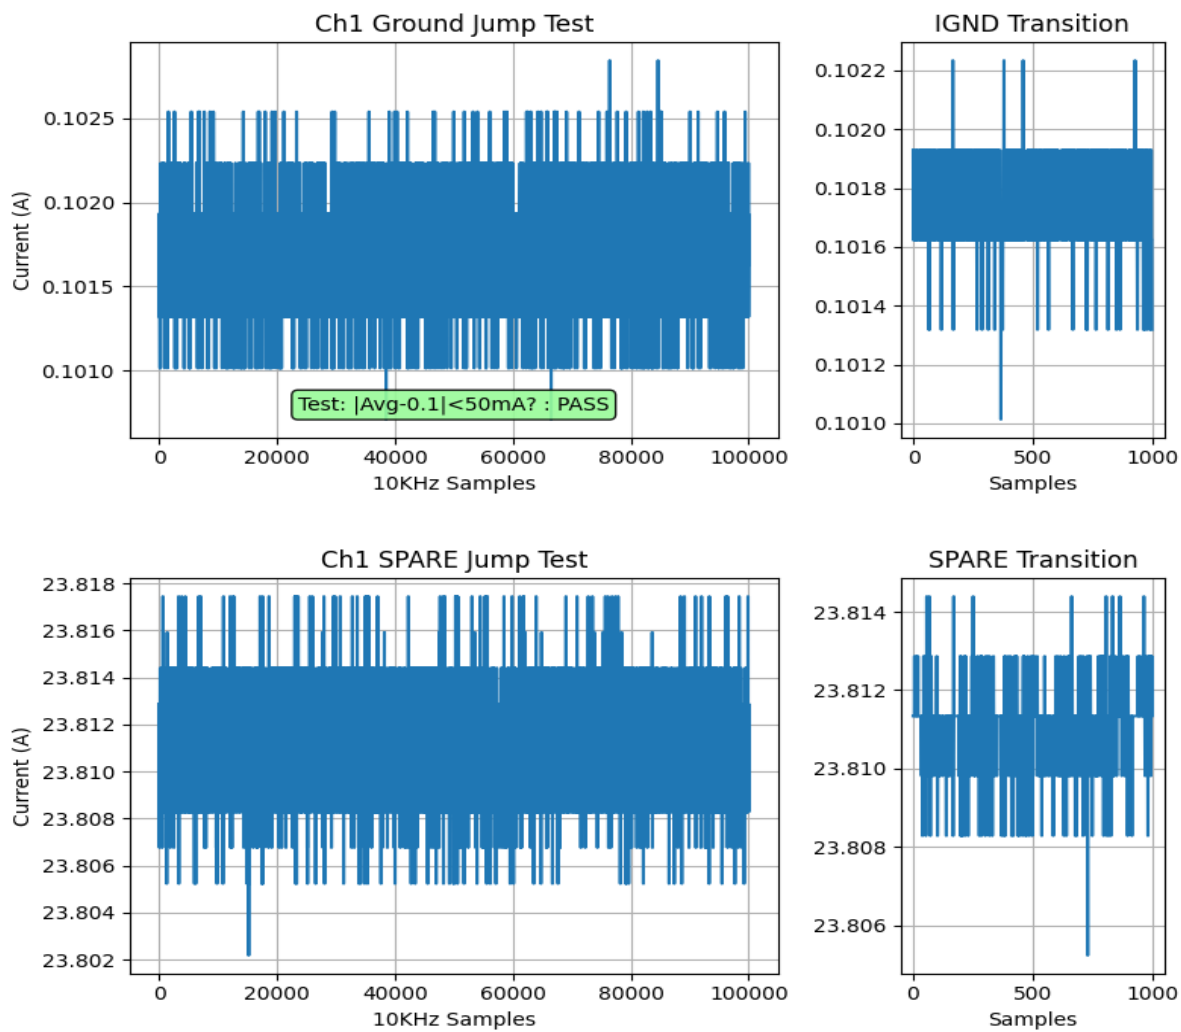



Smooth Test Results: CH1

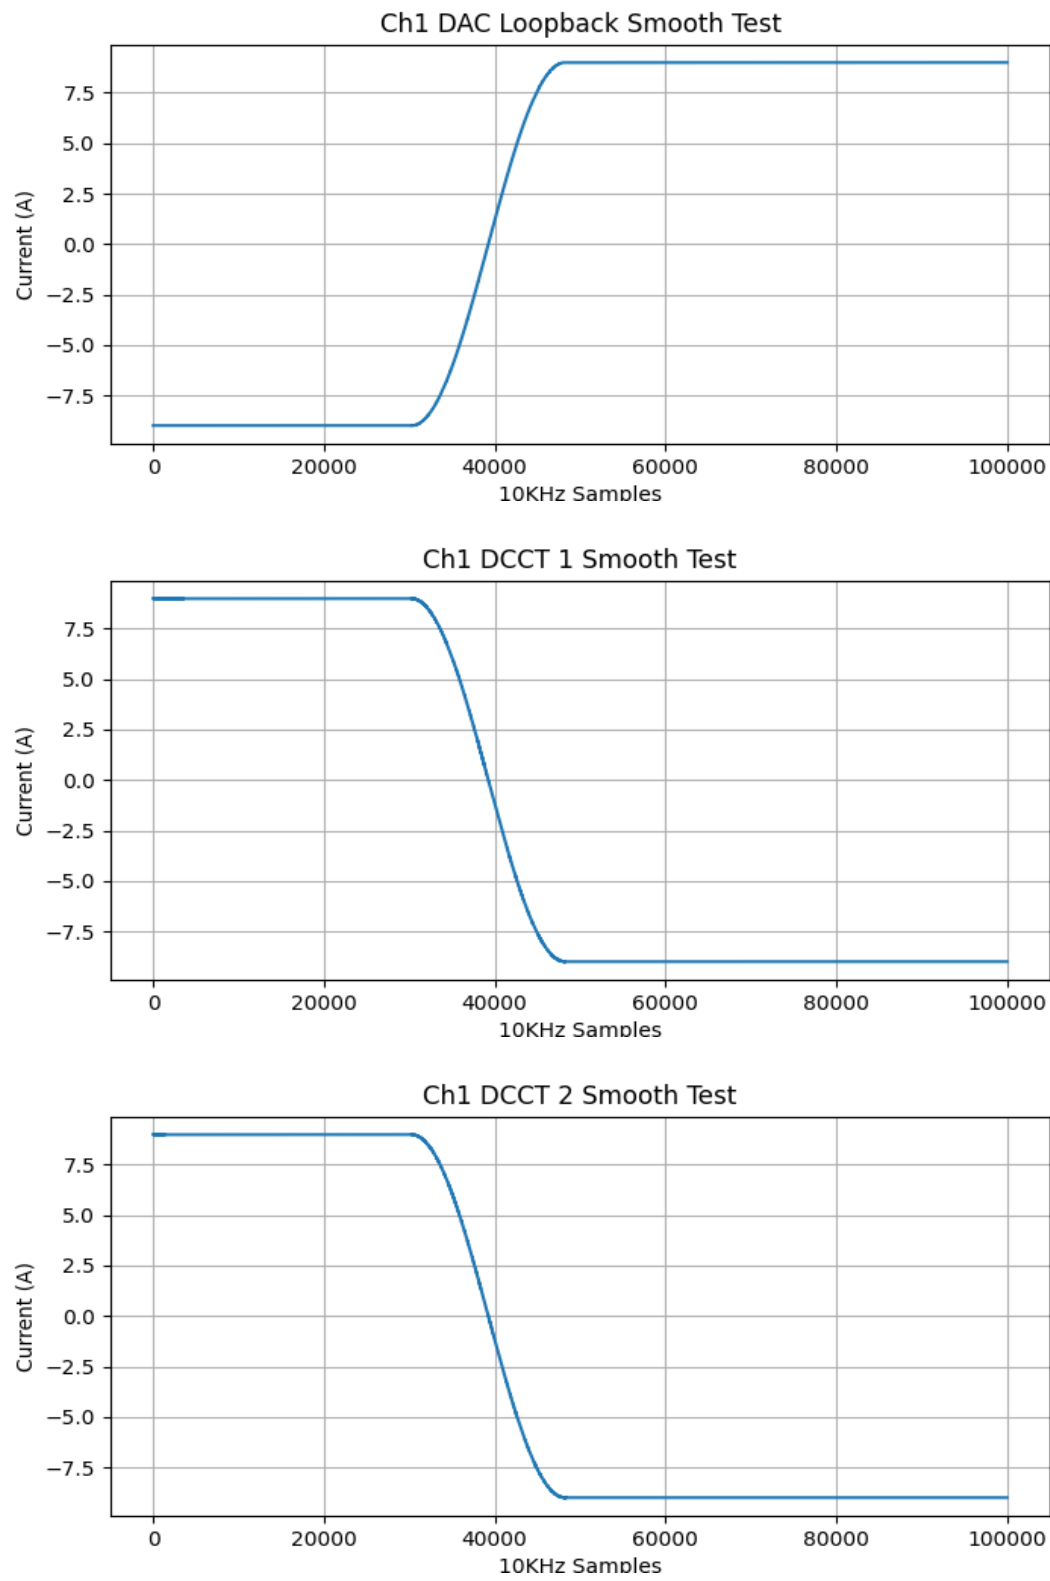

Smooth Test Results: CH1

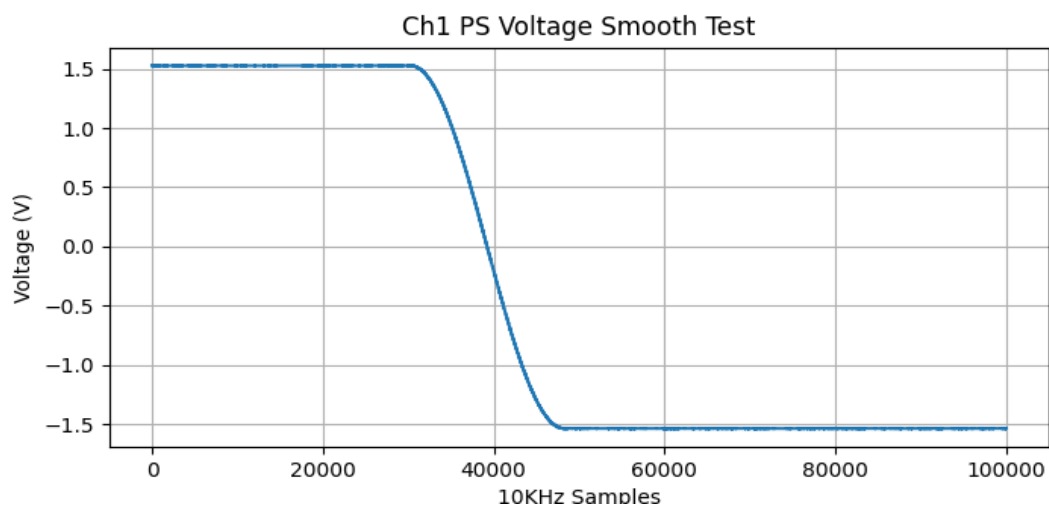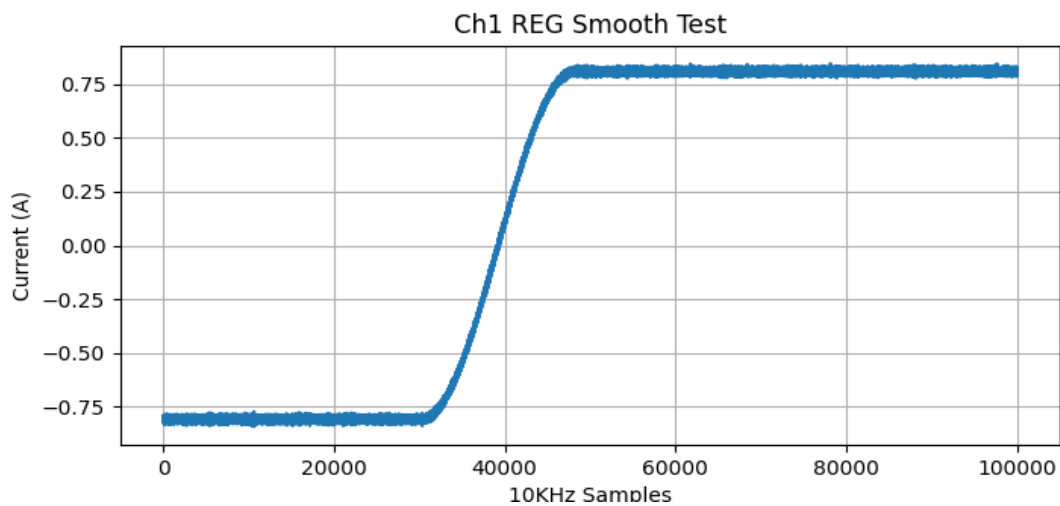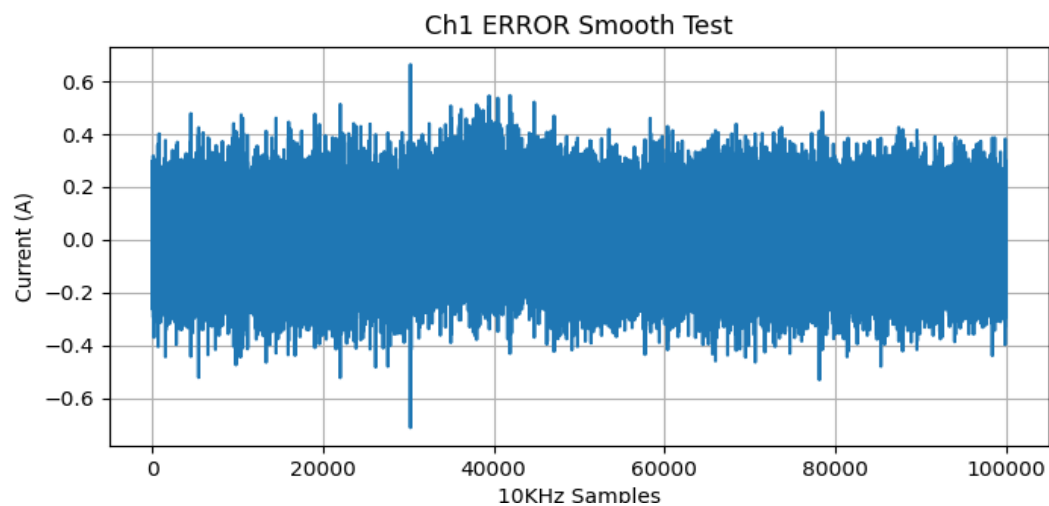


Smooth Test Results: CH1

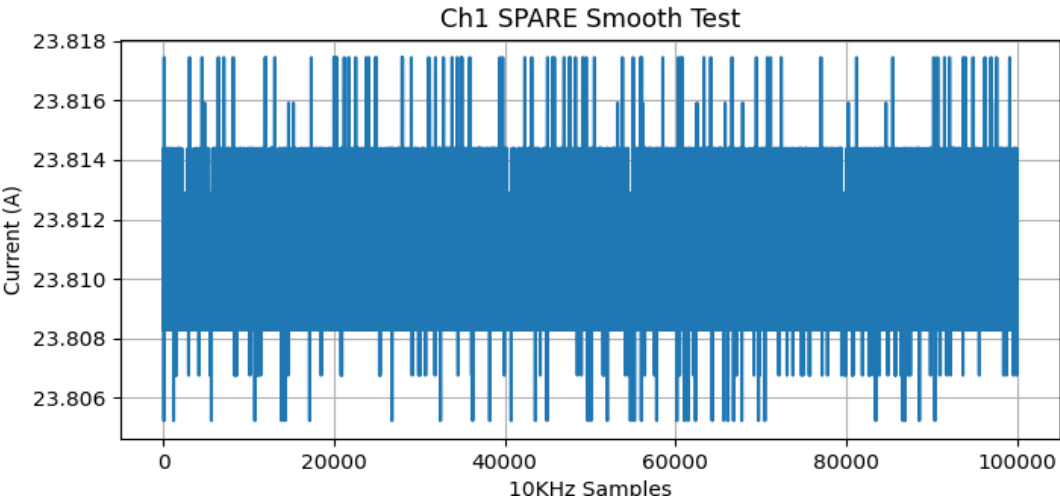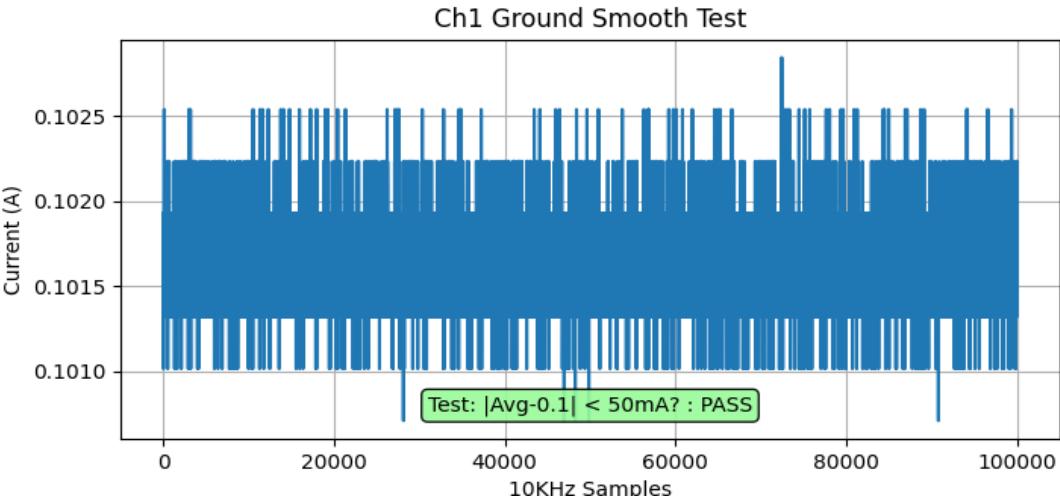


Channel 2

ATE Fault Tests for Channel 2	
Fault #1 Generated and Cleared	PASS
Fault #2 Generated and Cleared	PASS
Fault SPARE Generated and Cleared	PASS
Fault DCCT Generated and Cleared	PASS


Power Supply Regulation for Channel 2:

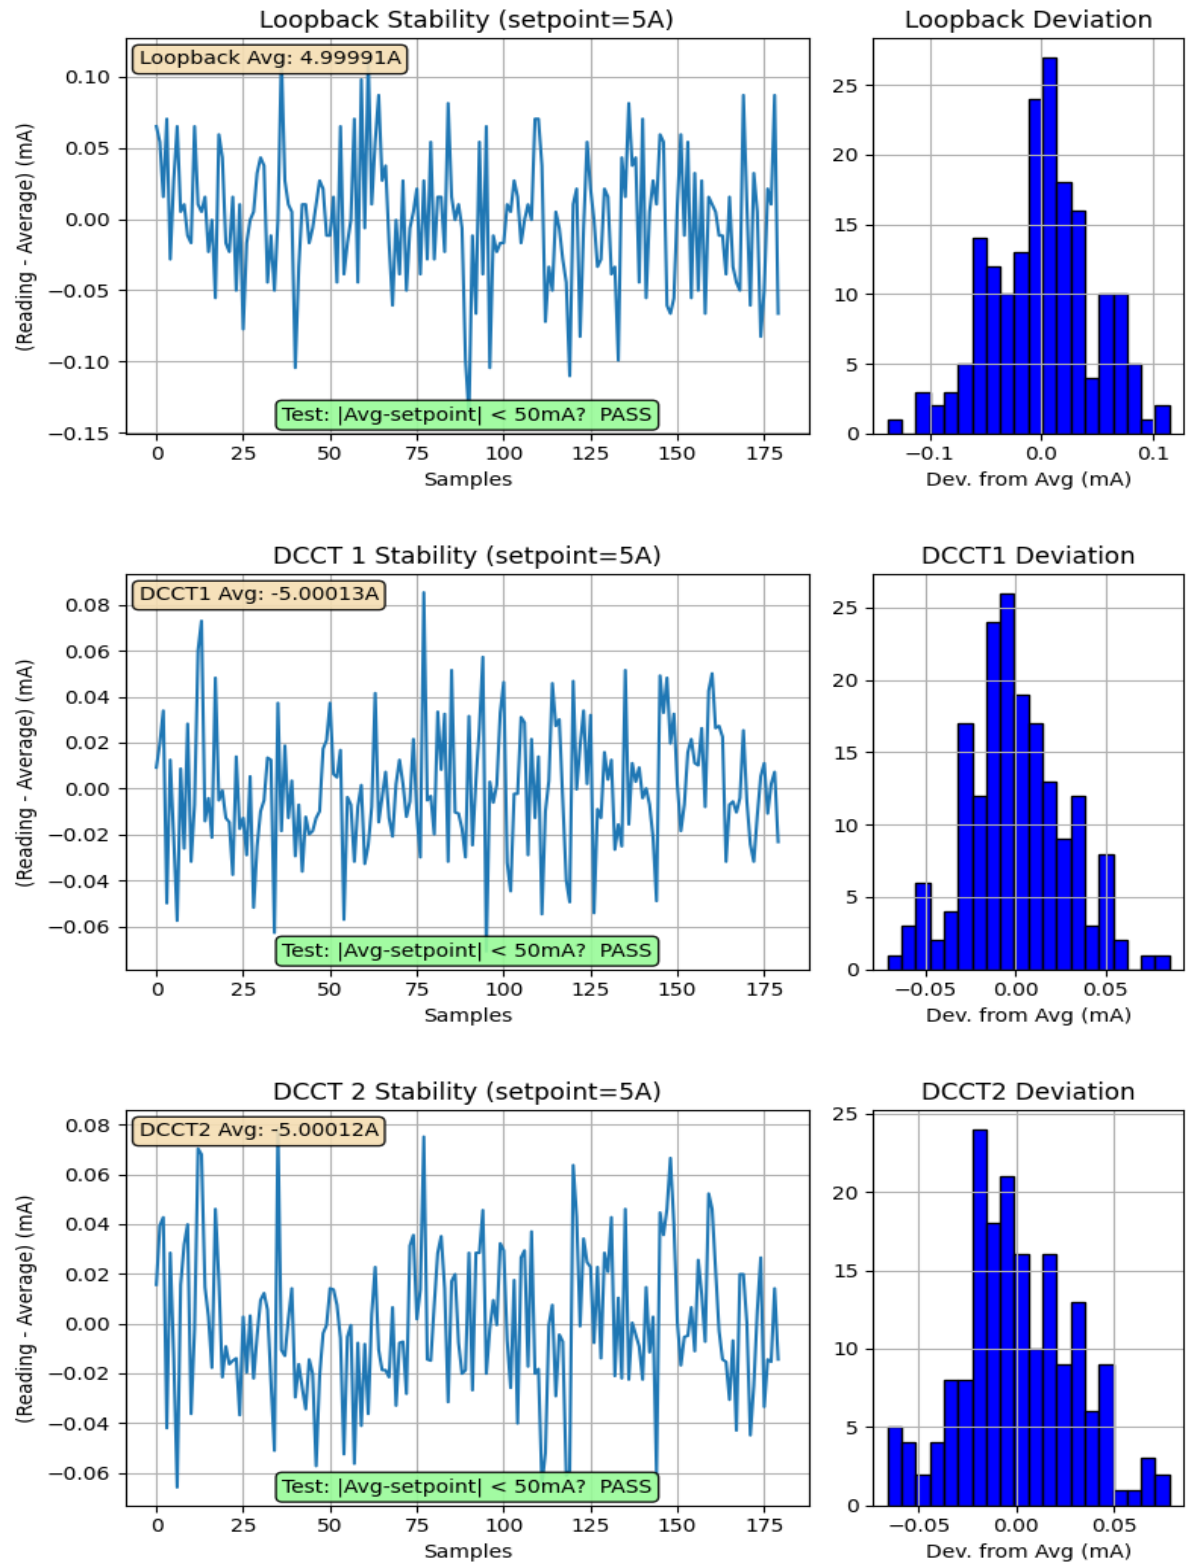


Jump Test Results: CH2

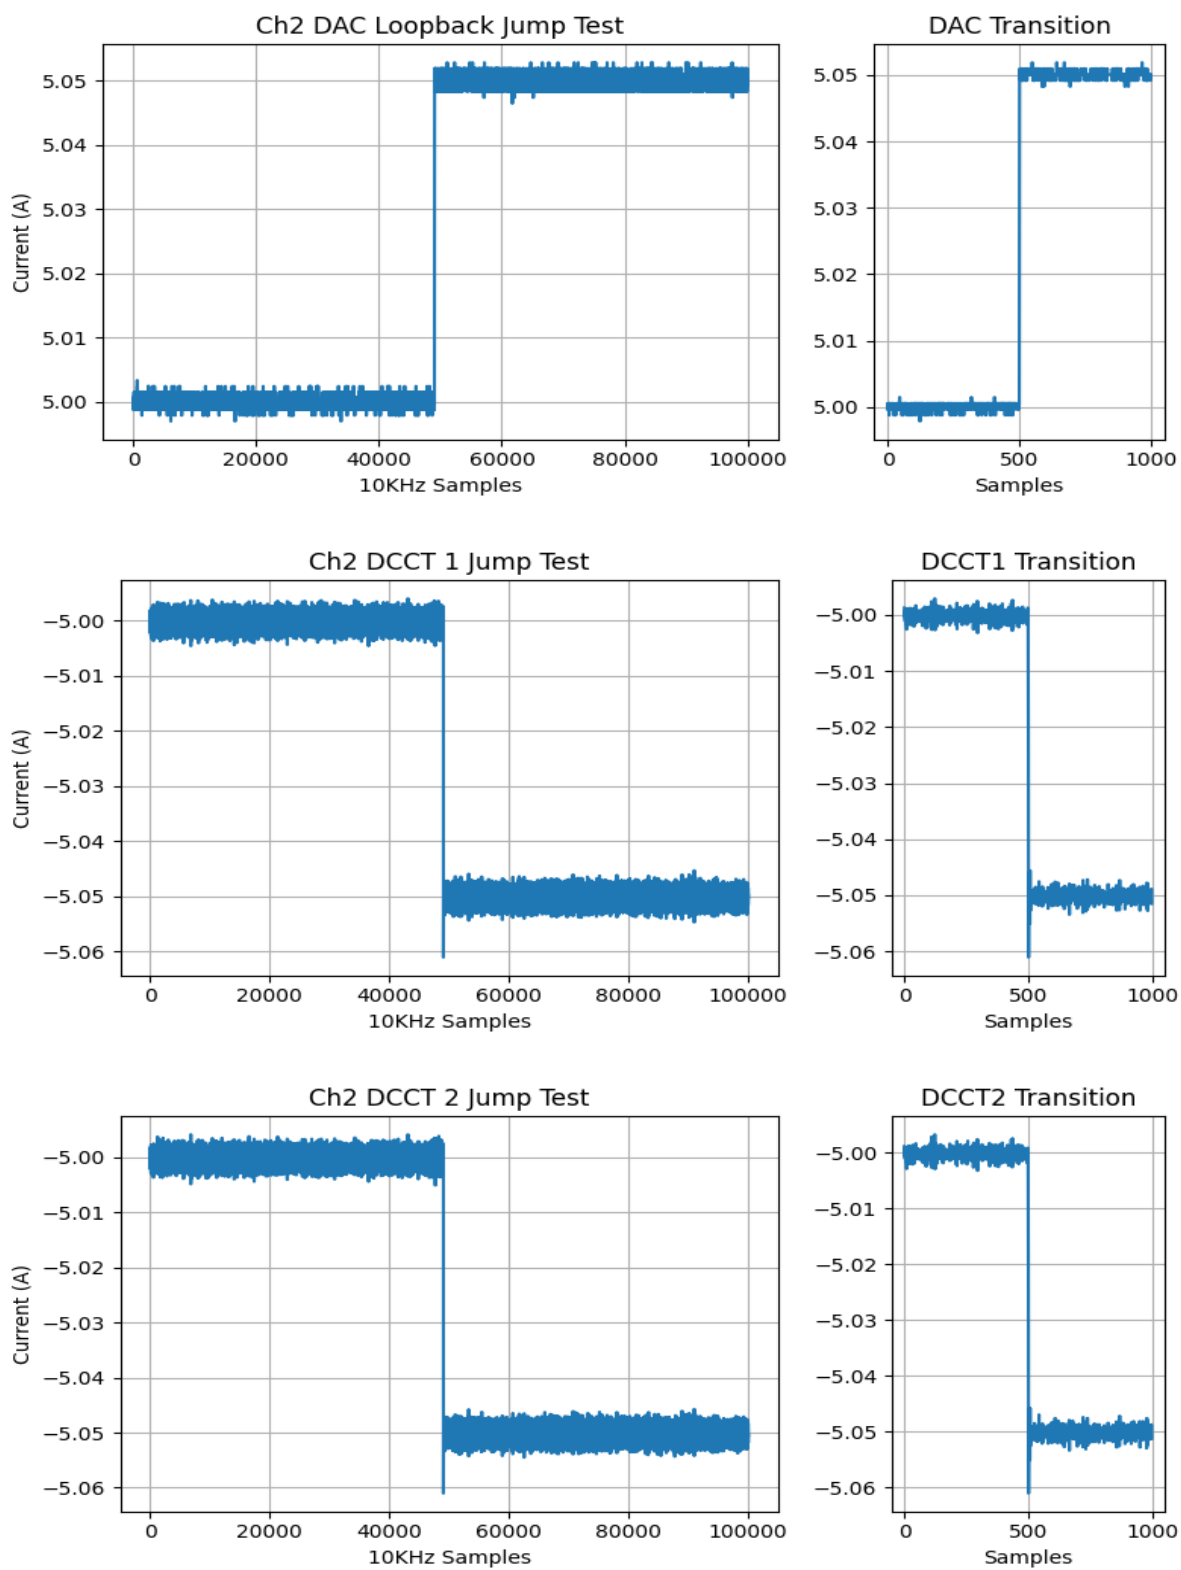


Jump Test Results: CH2

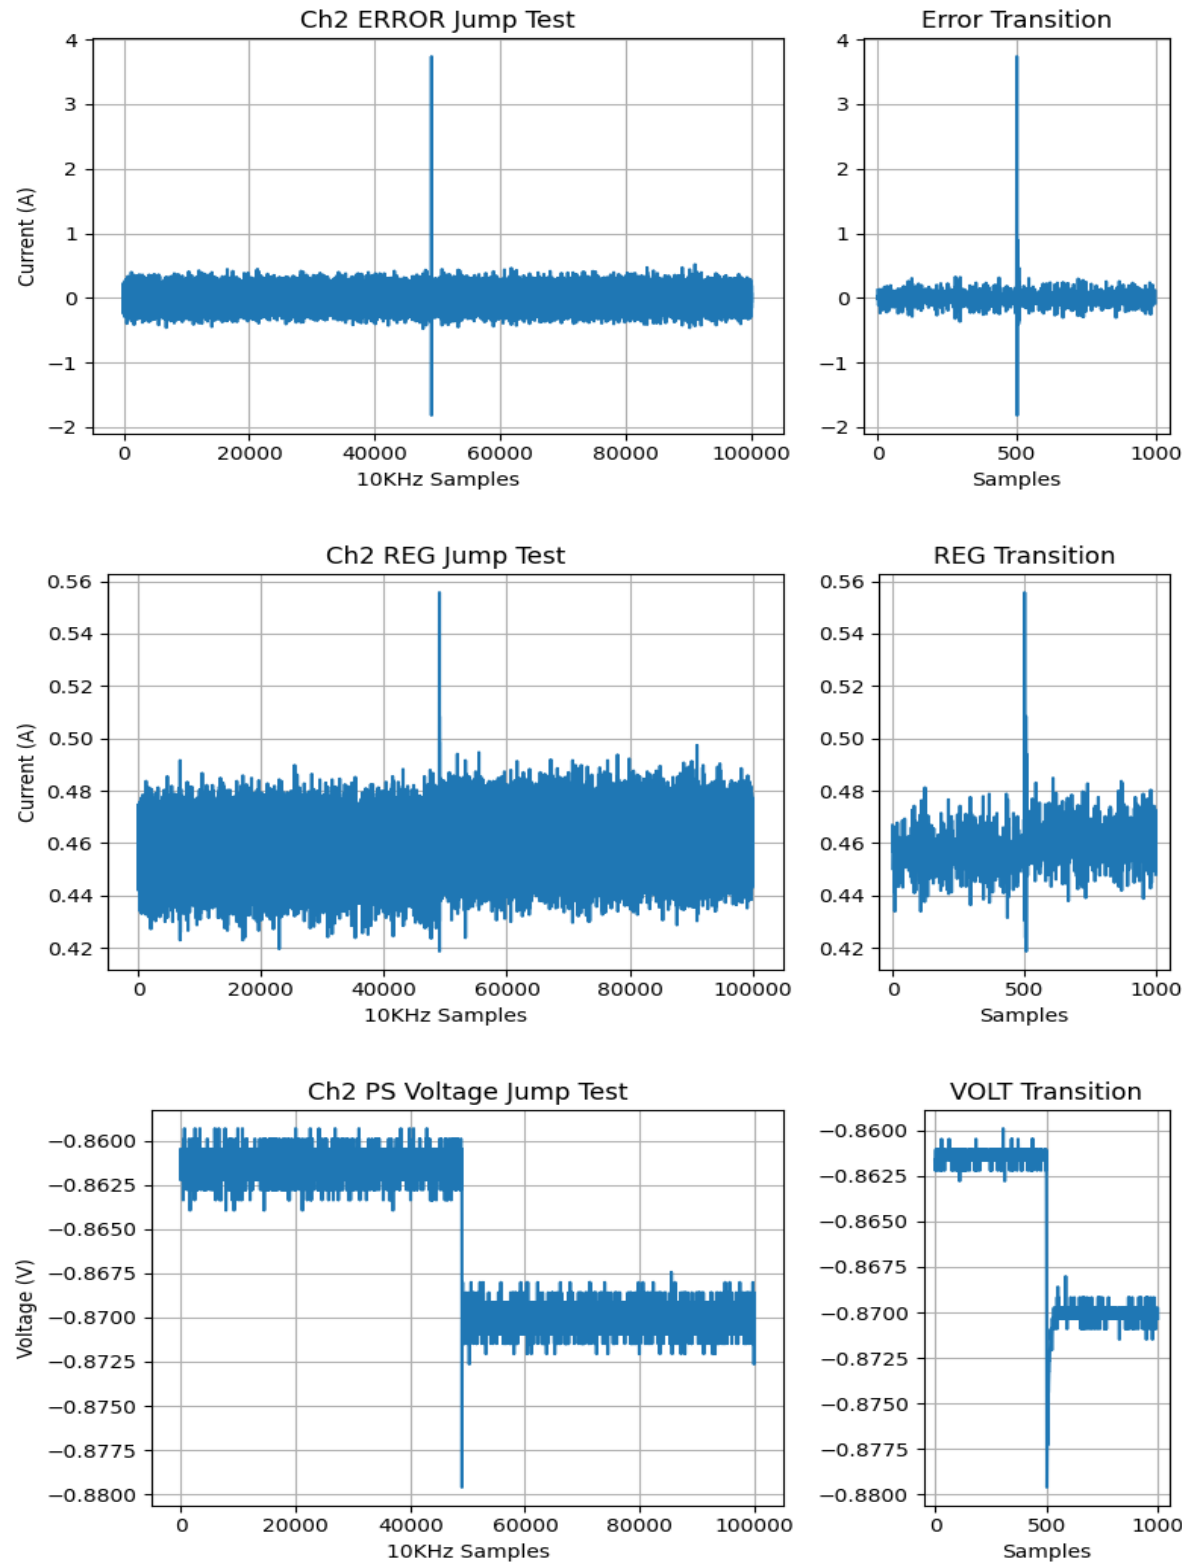




Jump Test Results: CH2

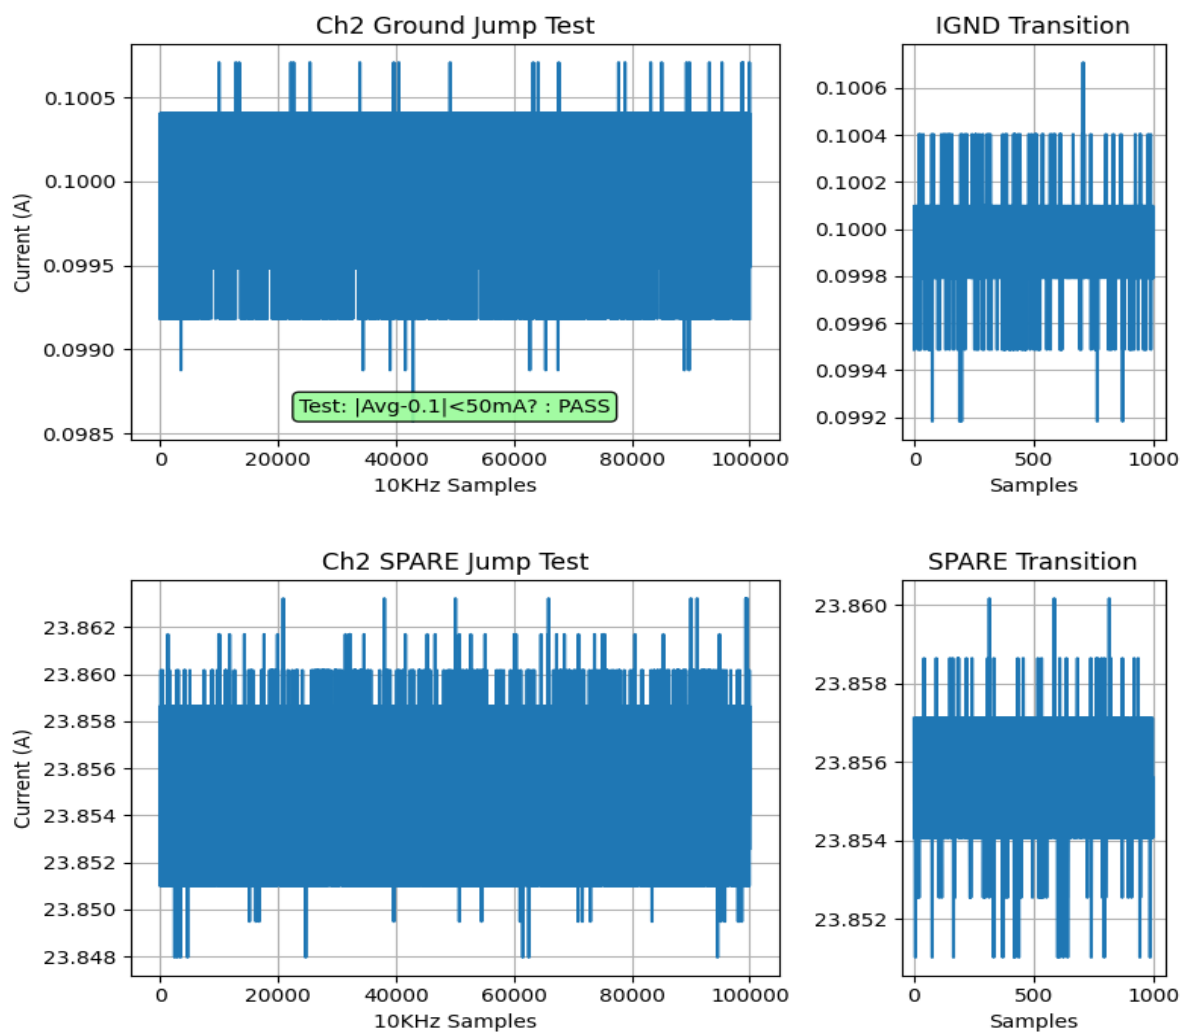



Smooth Test Results: CH2

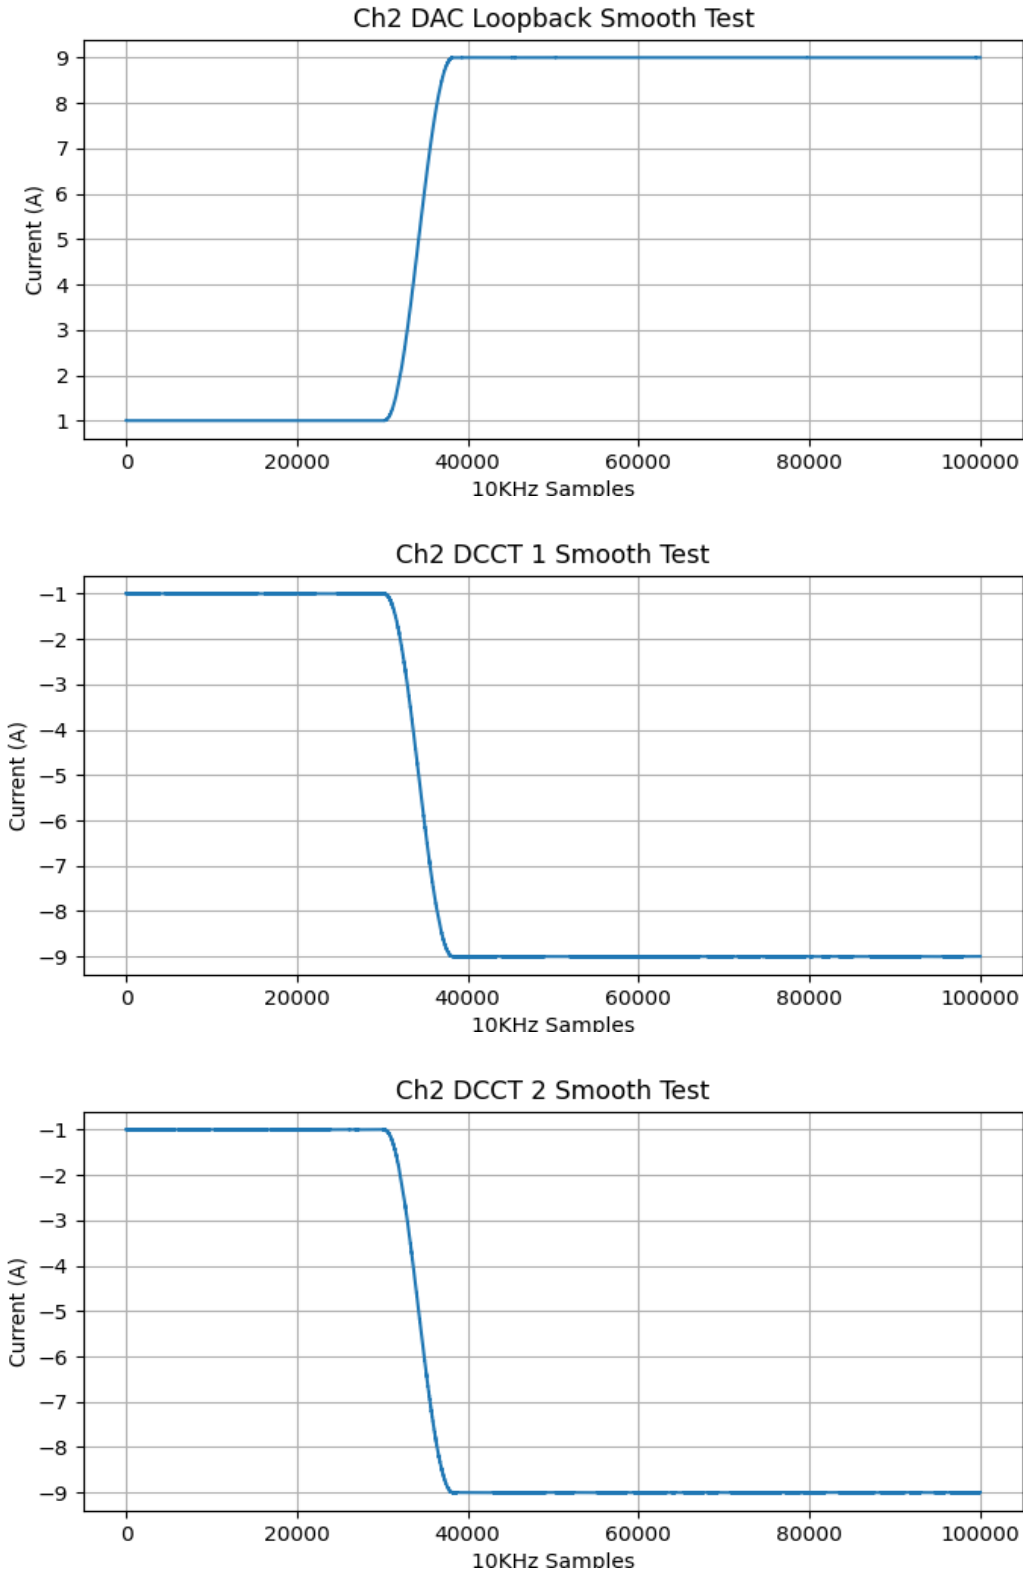

Smooth Test Results: CH2

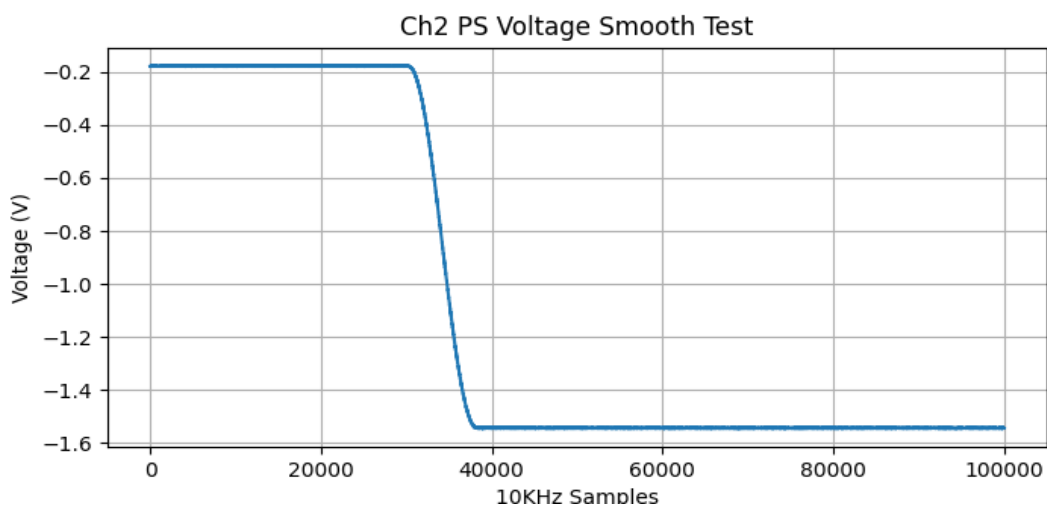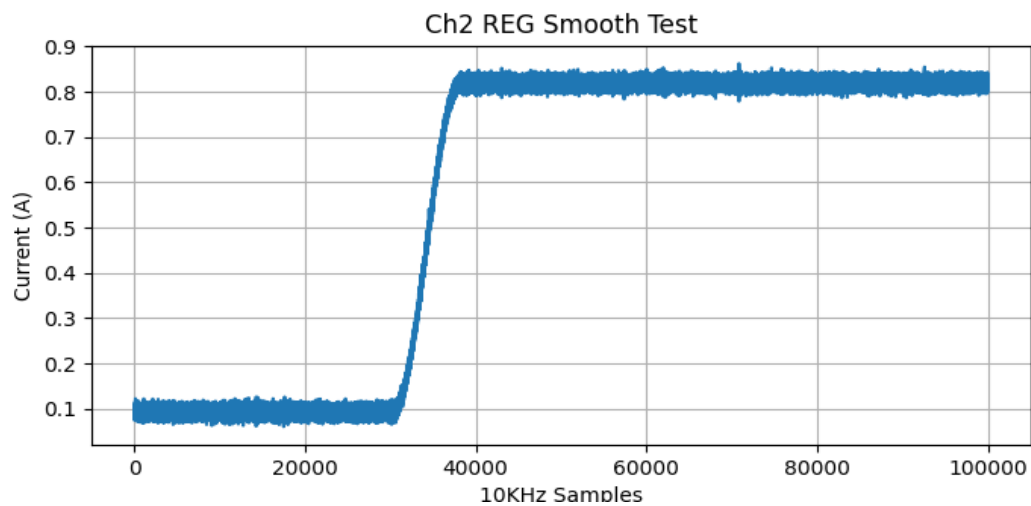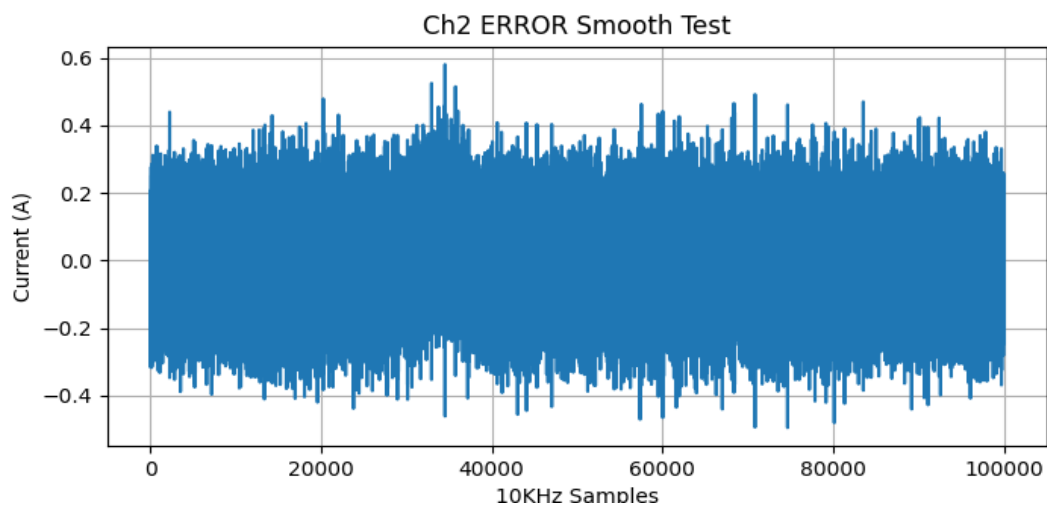


Smooth Test Results: CH2

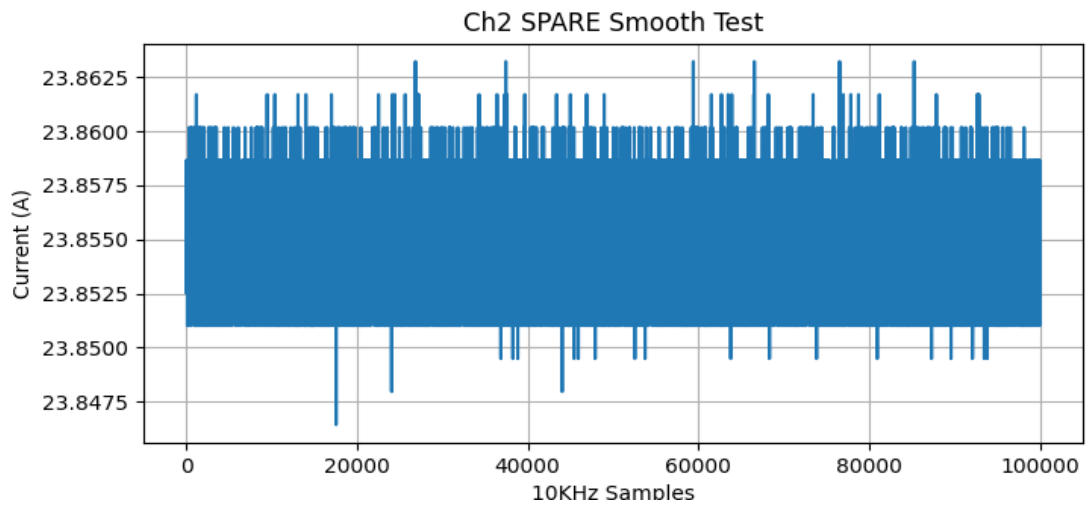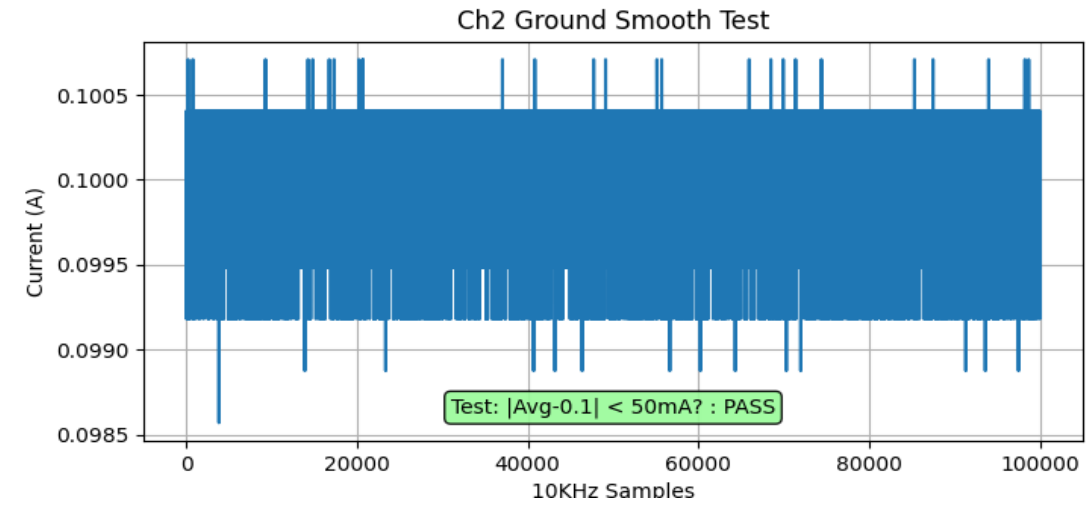


Channel 3

ATE Fault Tests for Channel 3	
Fault #1 Generated and Cleared	PASS
Fault #2 Generated and Cleared	PASS
Fault SPARE Generated and Cleared	PASS
Fault DCCT Generated and Cleared	PASS


Power Supply Regulation for Channel 3:

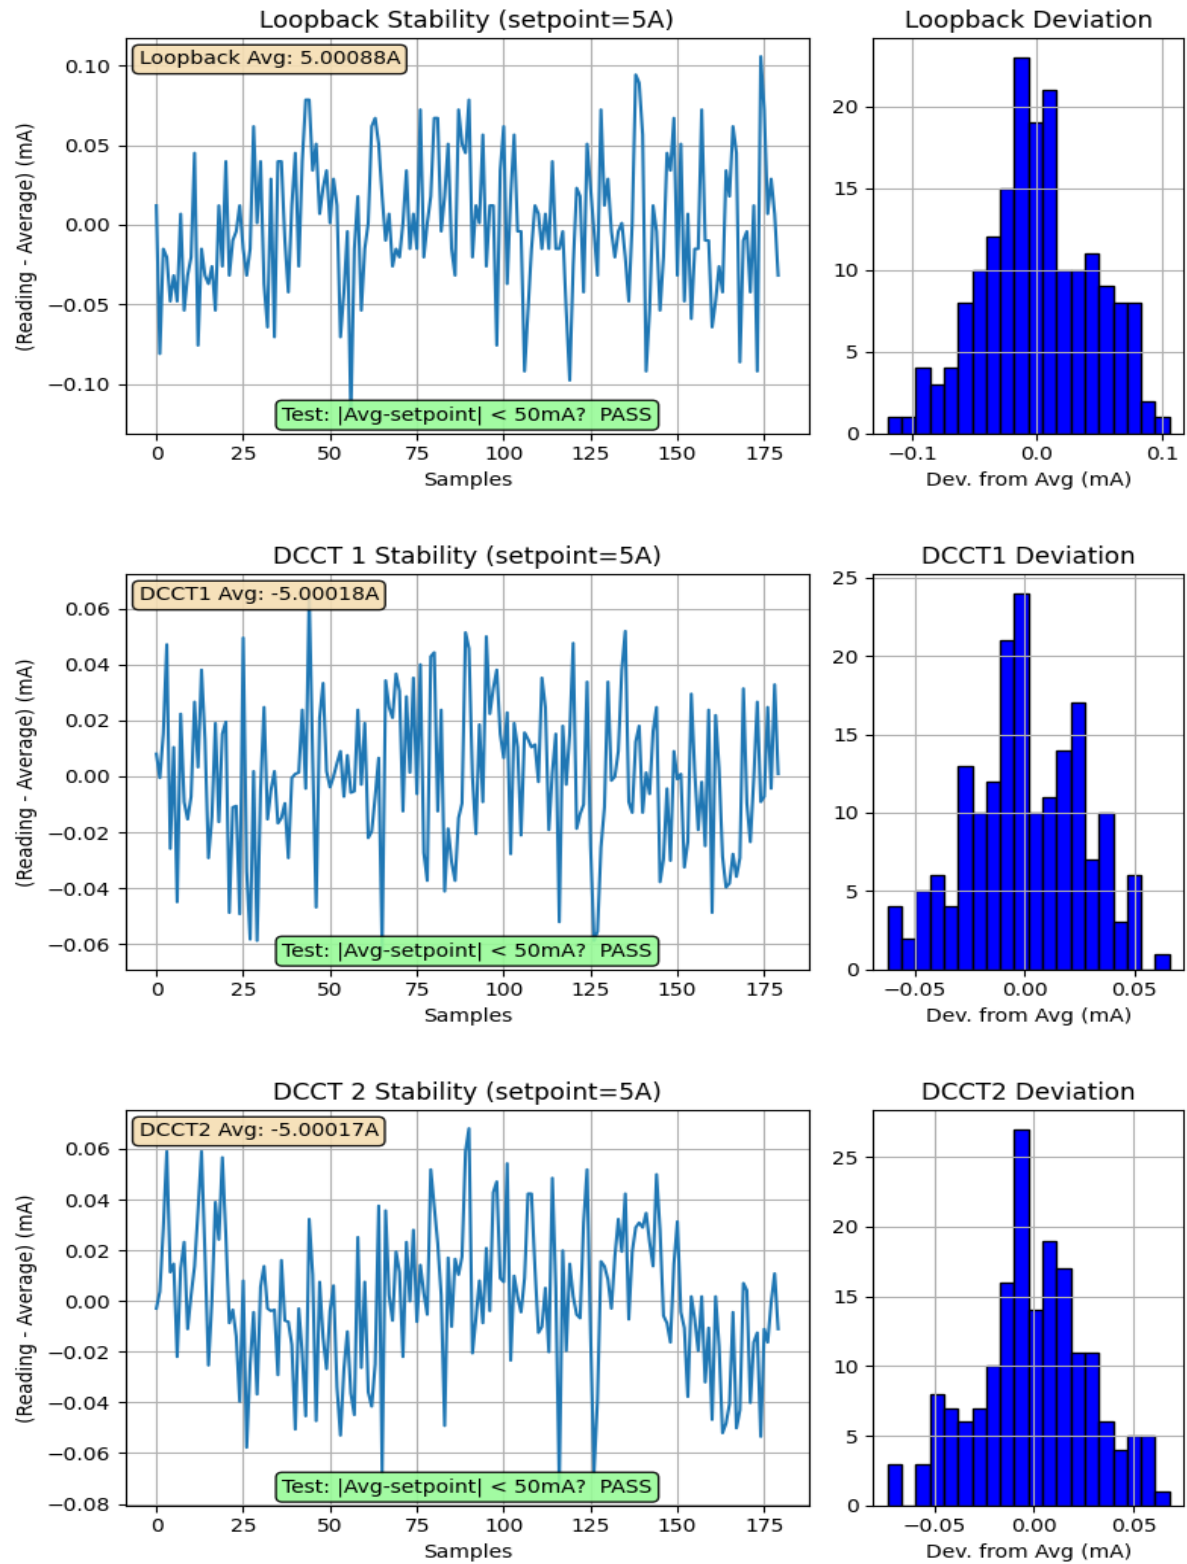


Jump Test Results: CH3

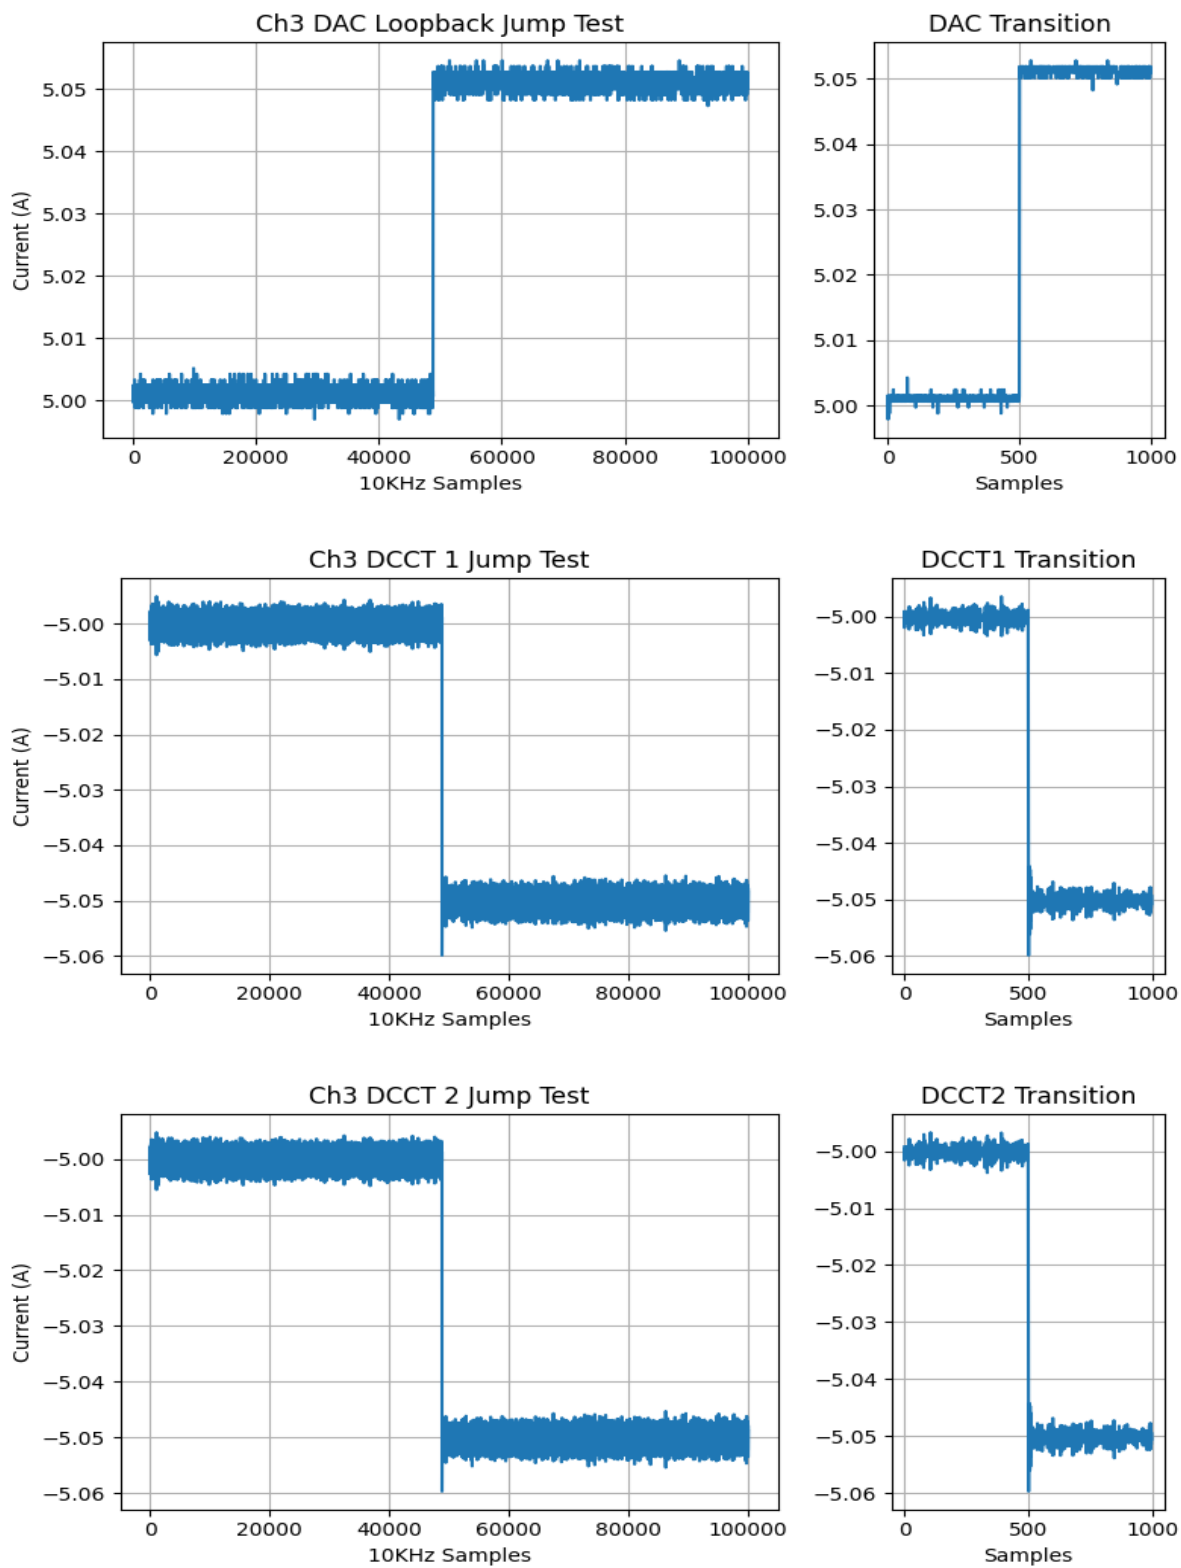


Jump Test Results: CH3

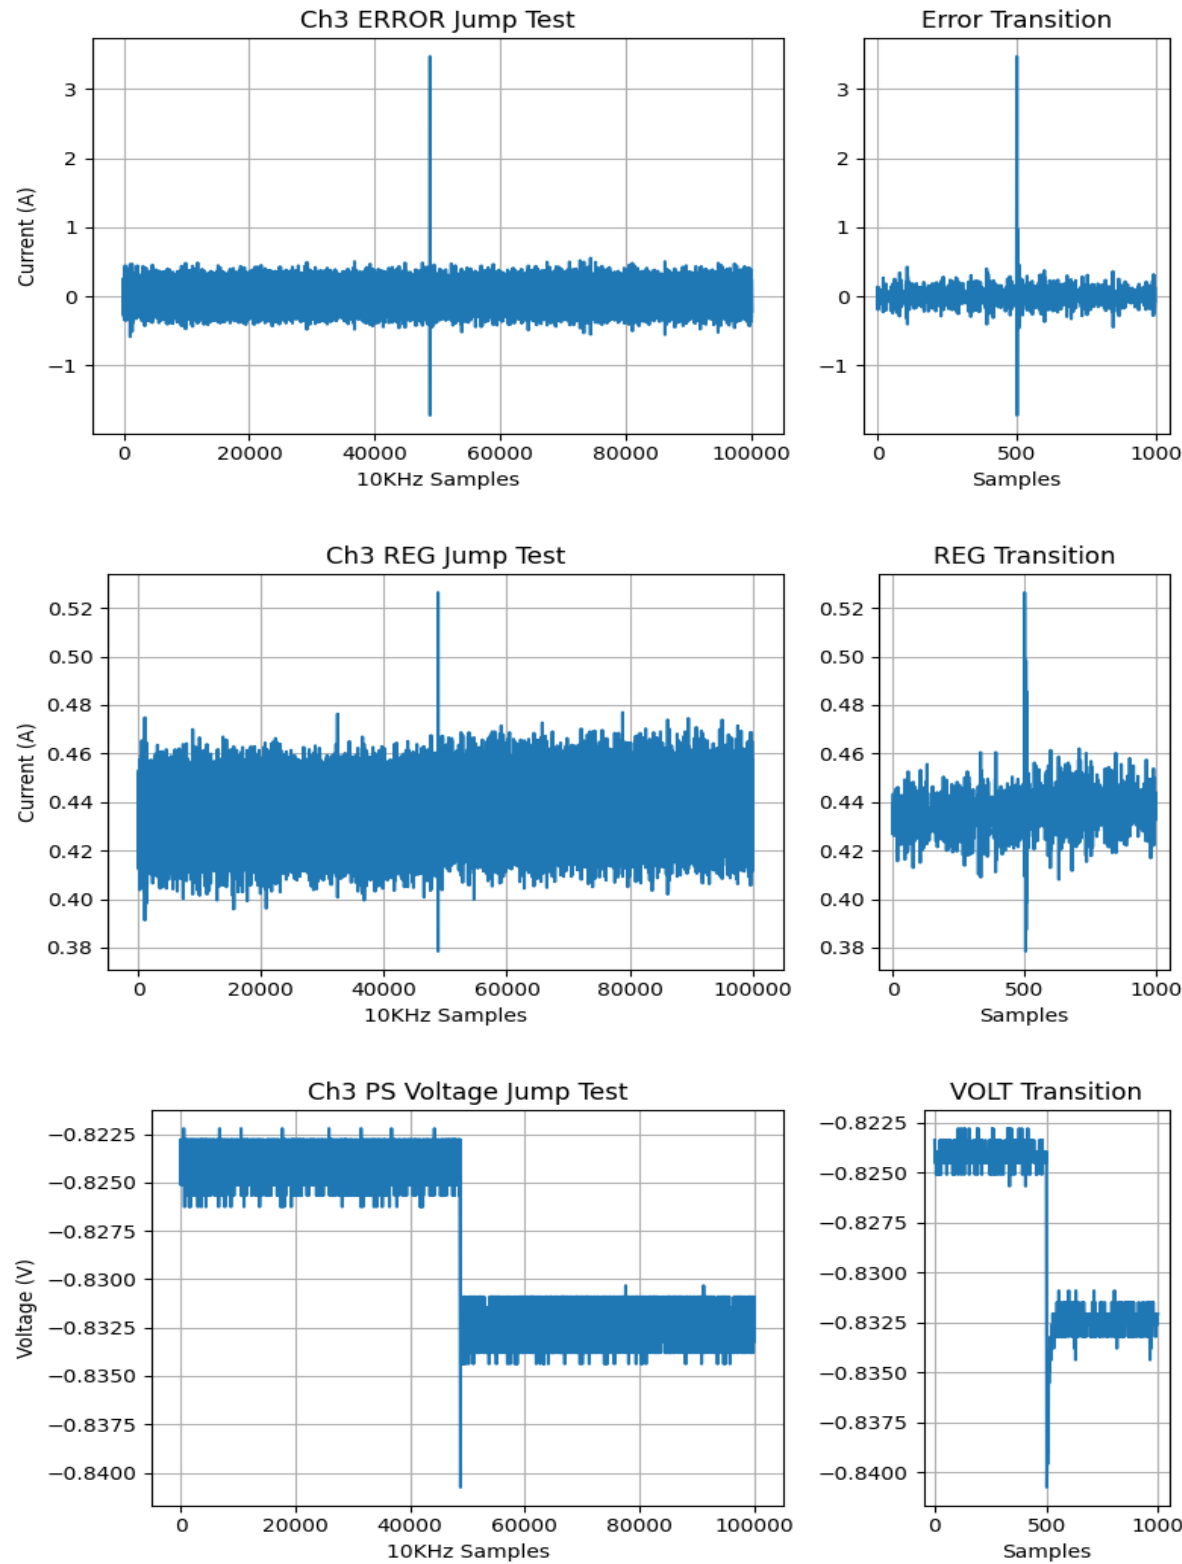




Jump Test Results: CH3

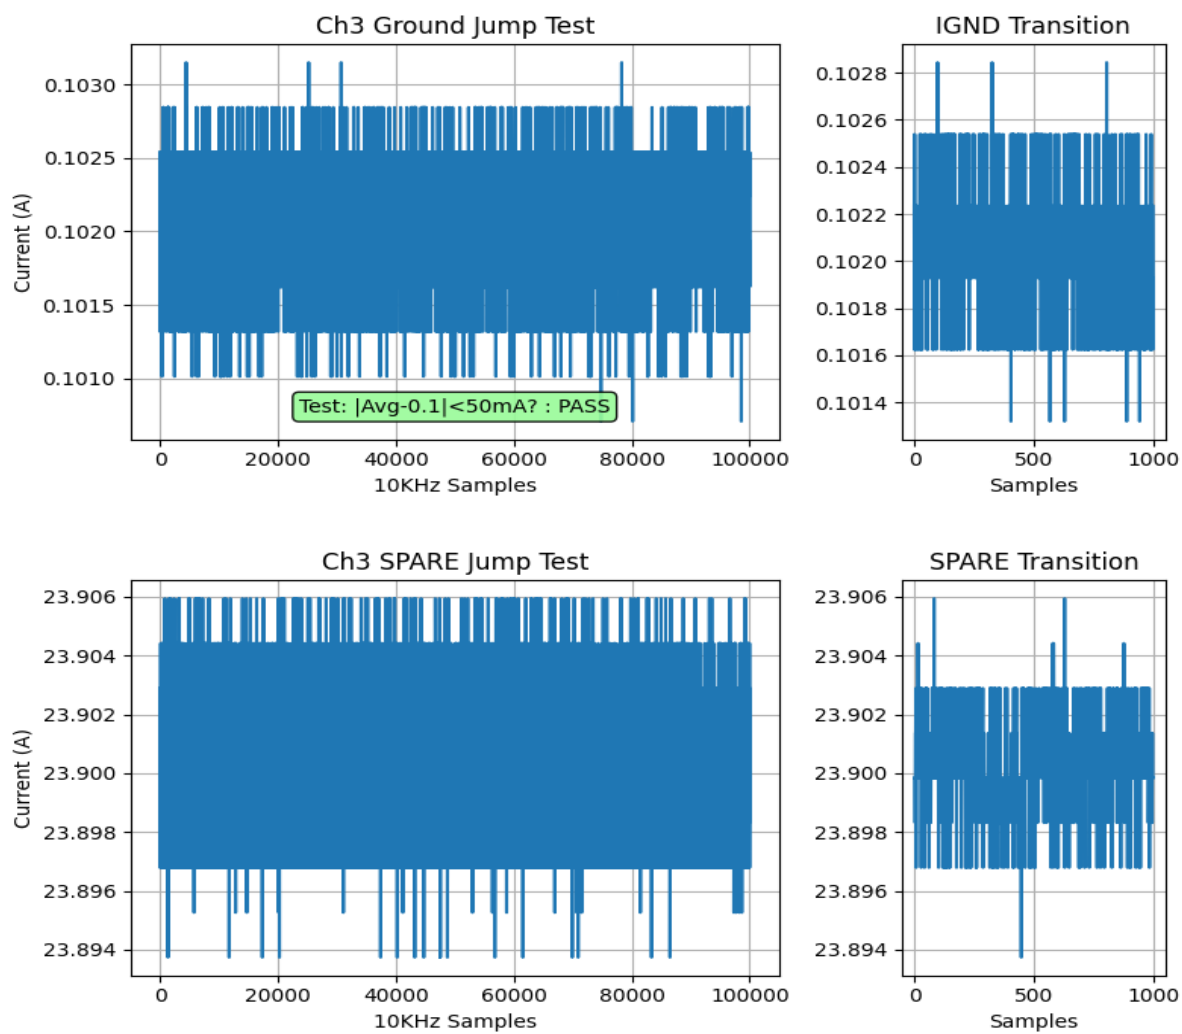



Smooth Test Results: CH3

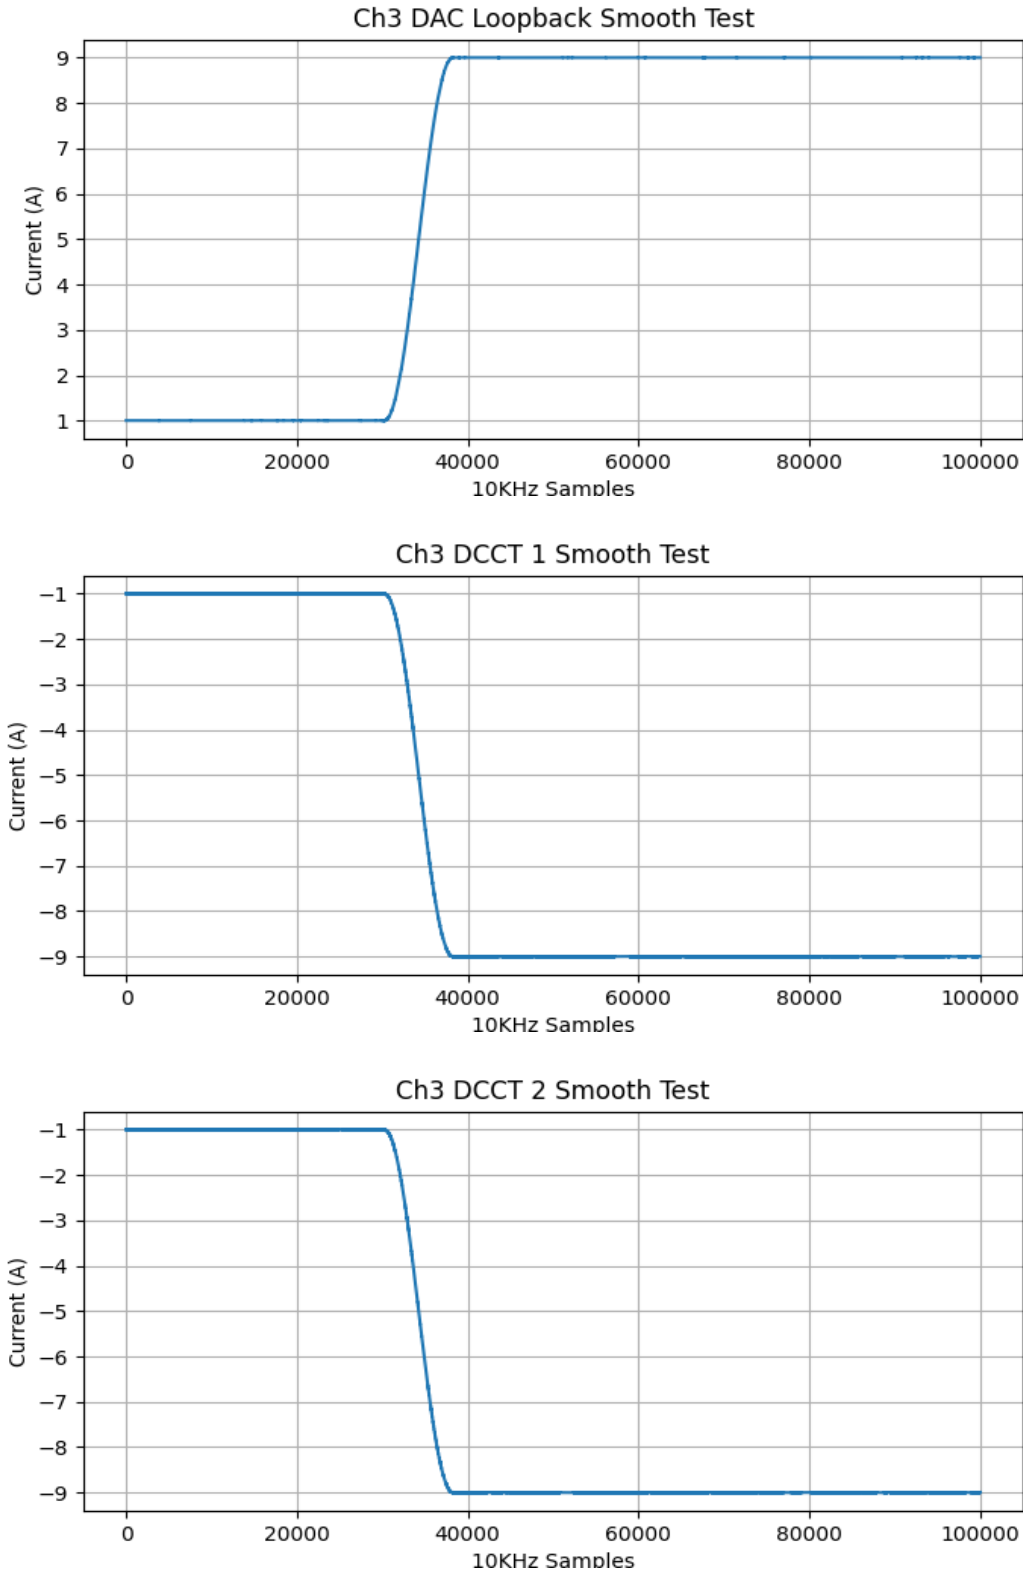

Smooth Test Results: CH3

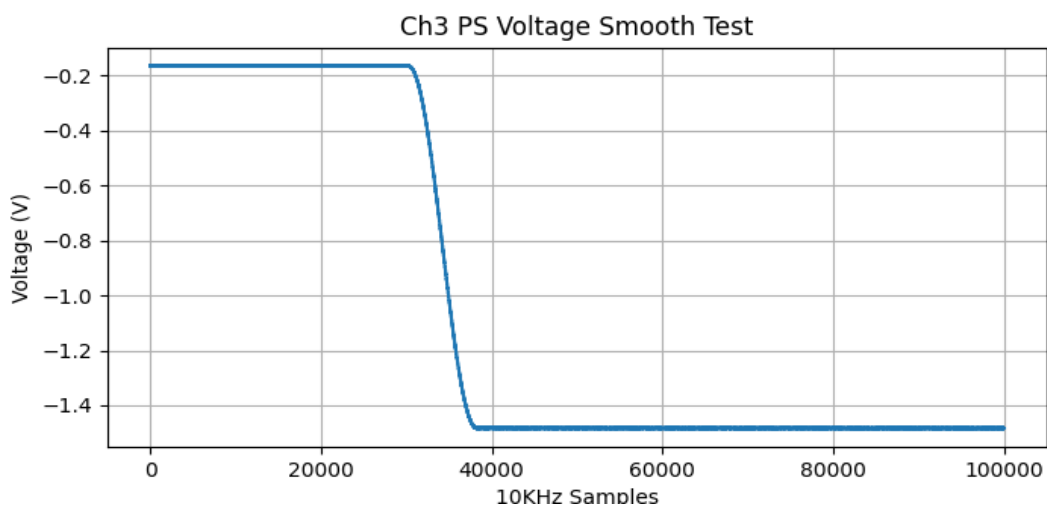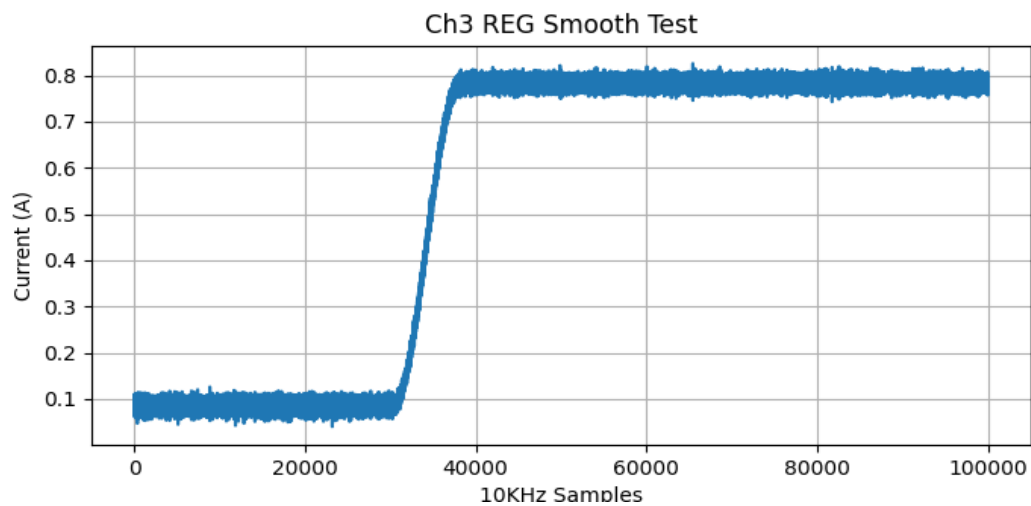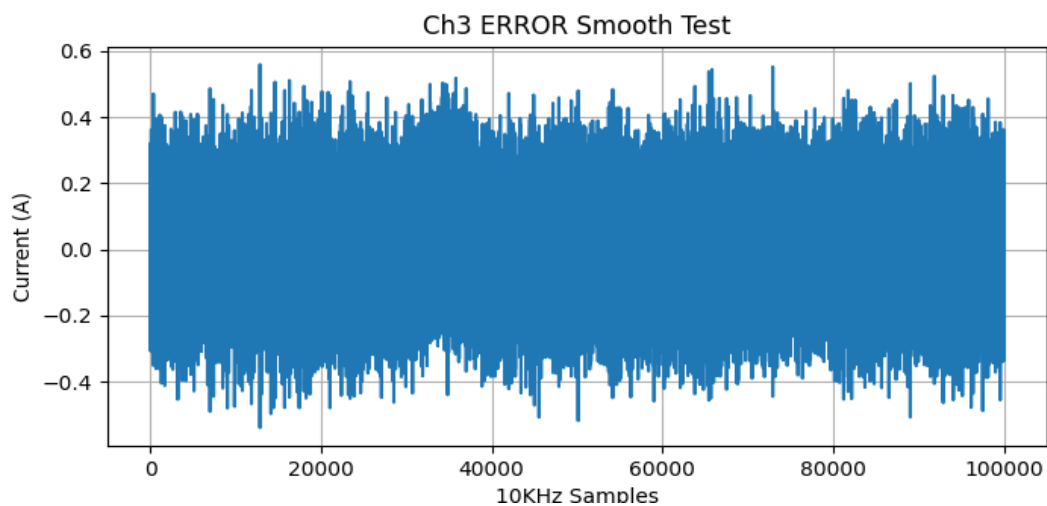


Smooth Test Results: CH3

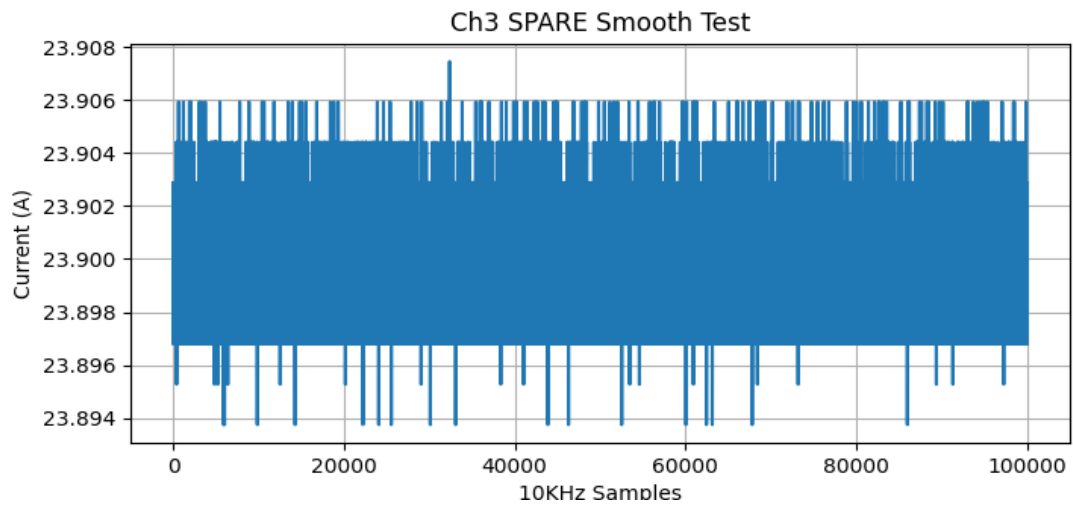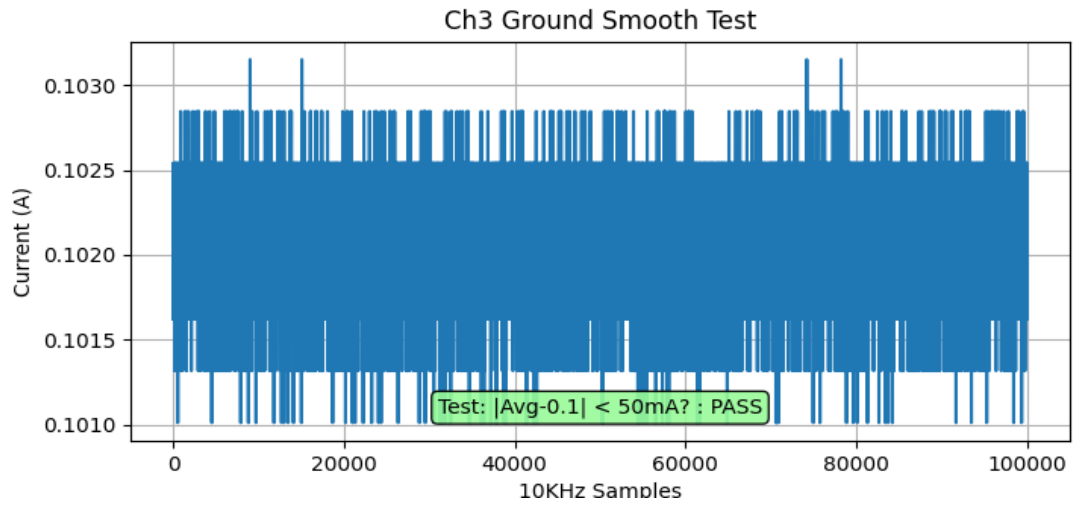


Channel 4

ATE Fault Tests for Channel 4	
Fault #1 Generated and Cleared	PASS
Fault #2 Generated and Cleared	PASS
Fault SPARE Generated and Cleared	PASS
Fault DCCT Generated and Cleared	PASS


Power Supply Regulation for Channel 4:

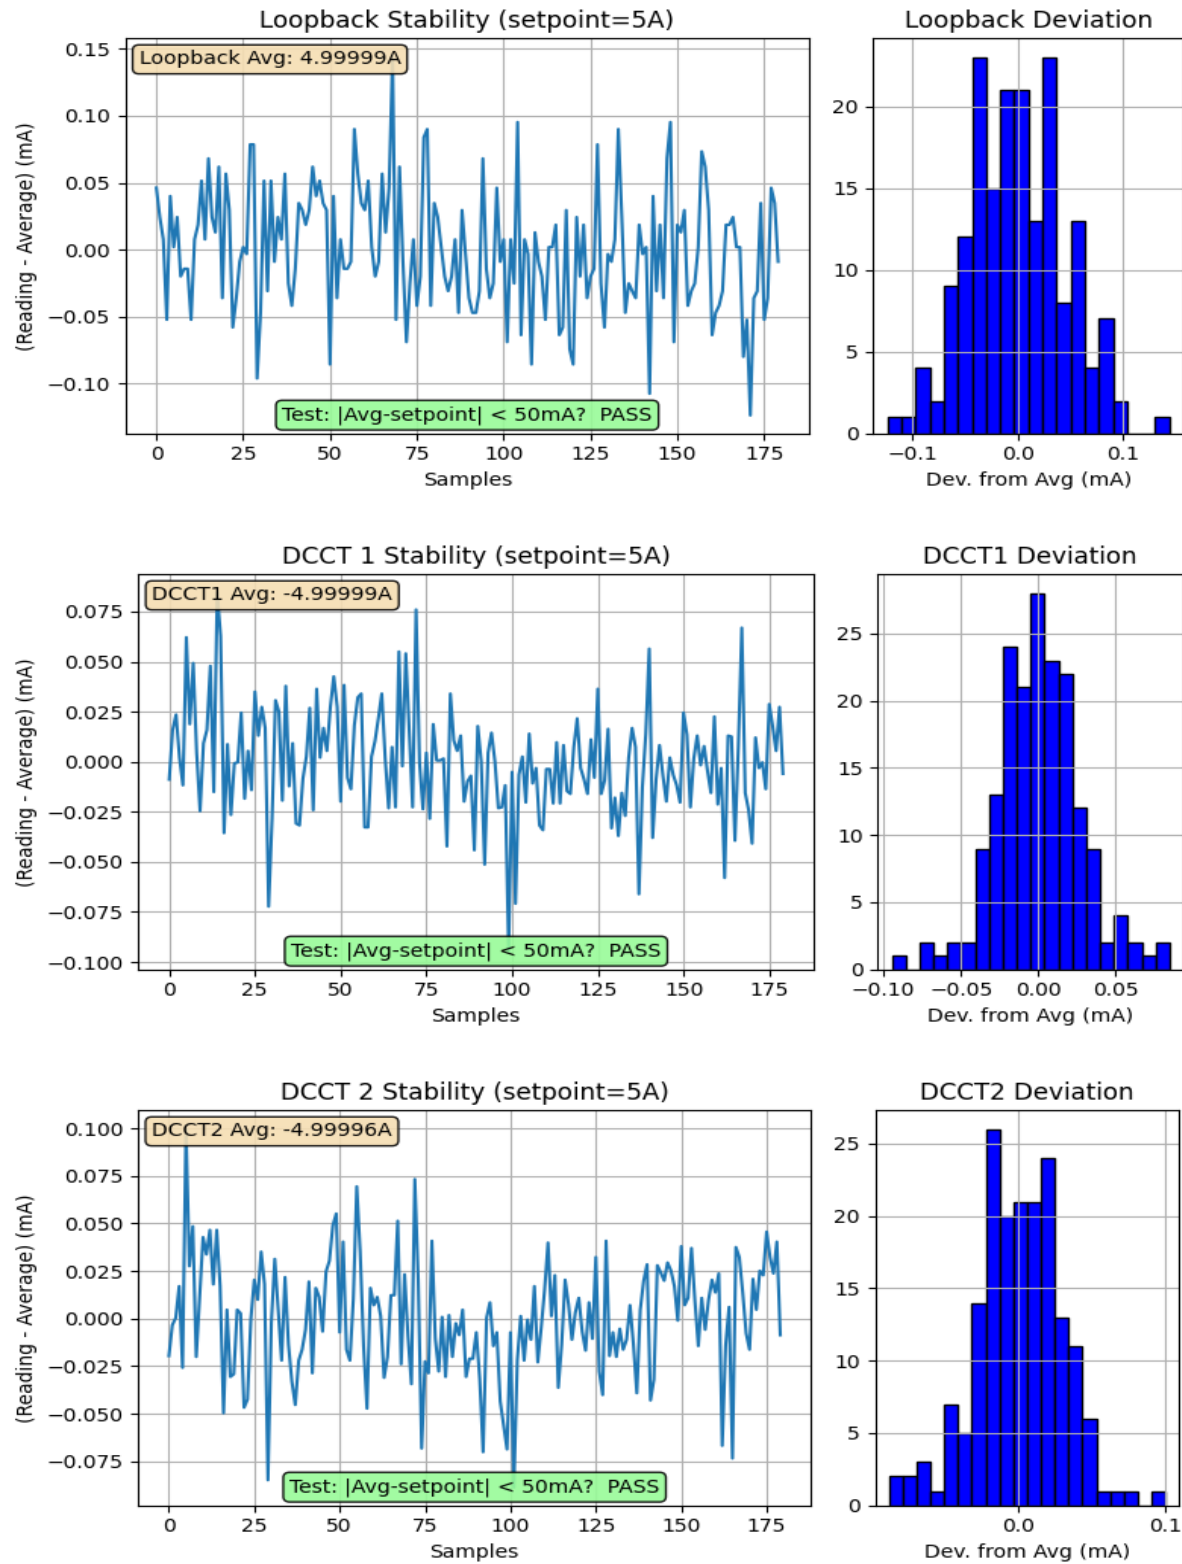


Jump Test Results: CH4

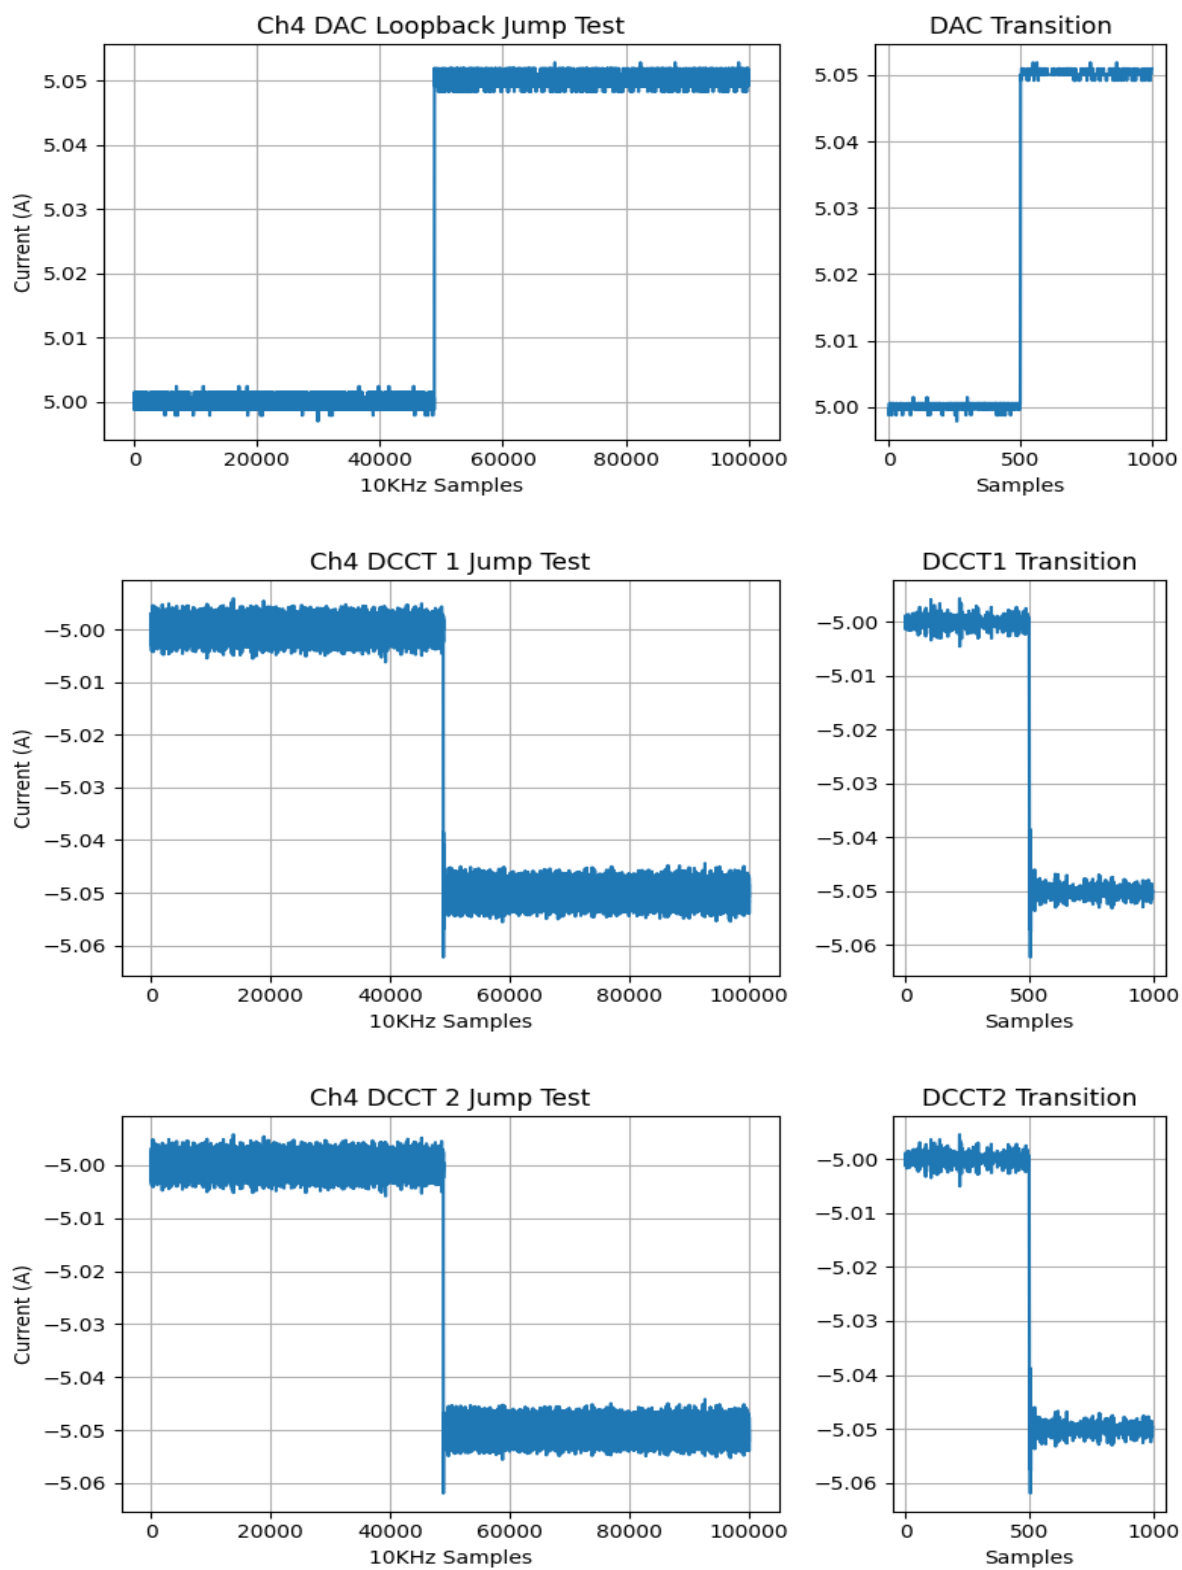


Jump Test Results: CH4

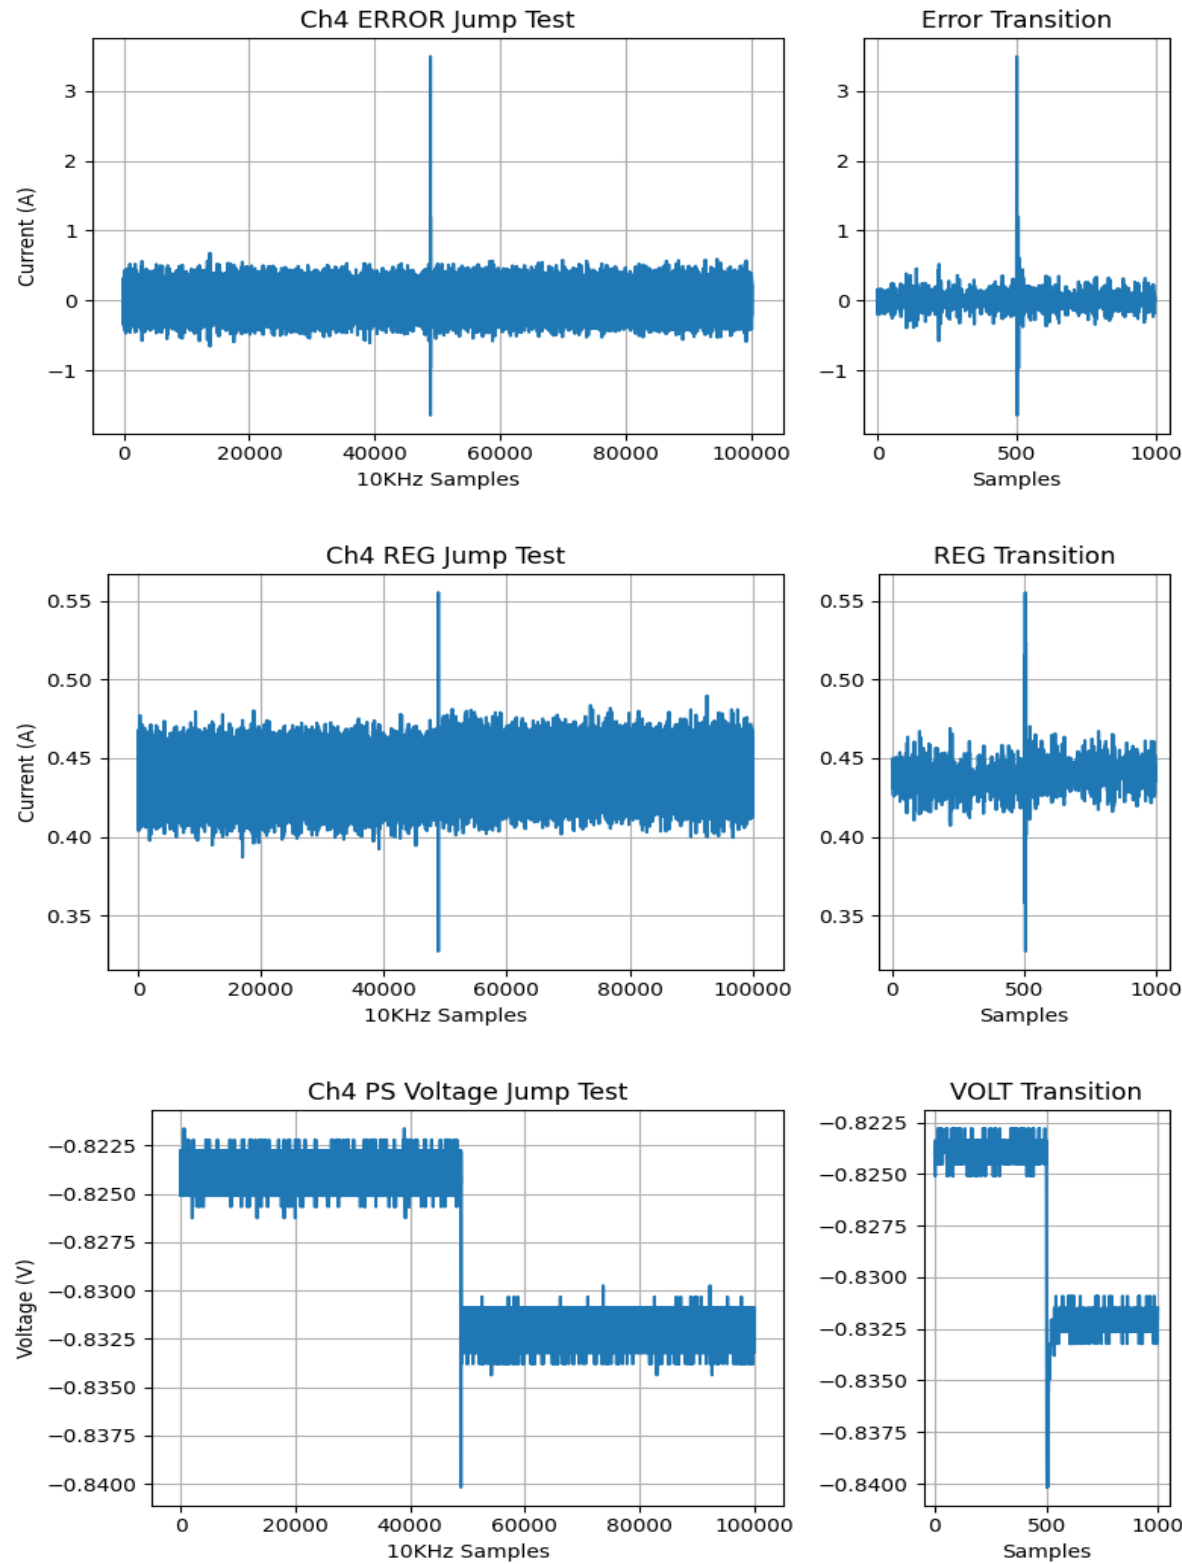




Jump Test Results: CH4

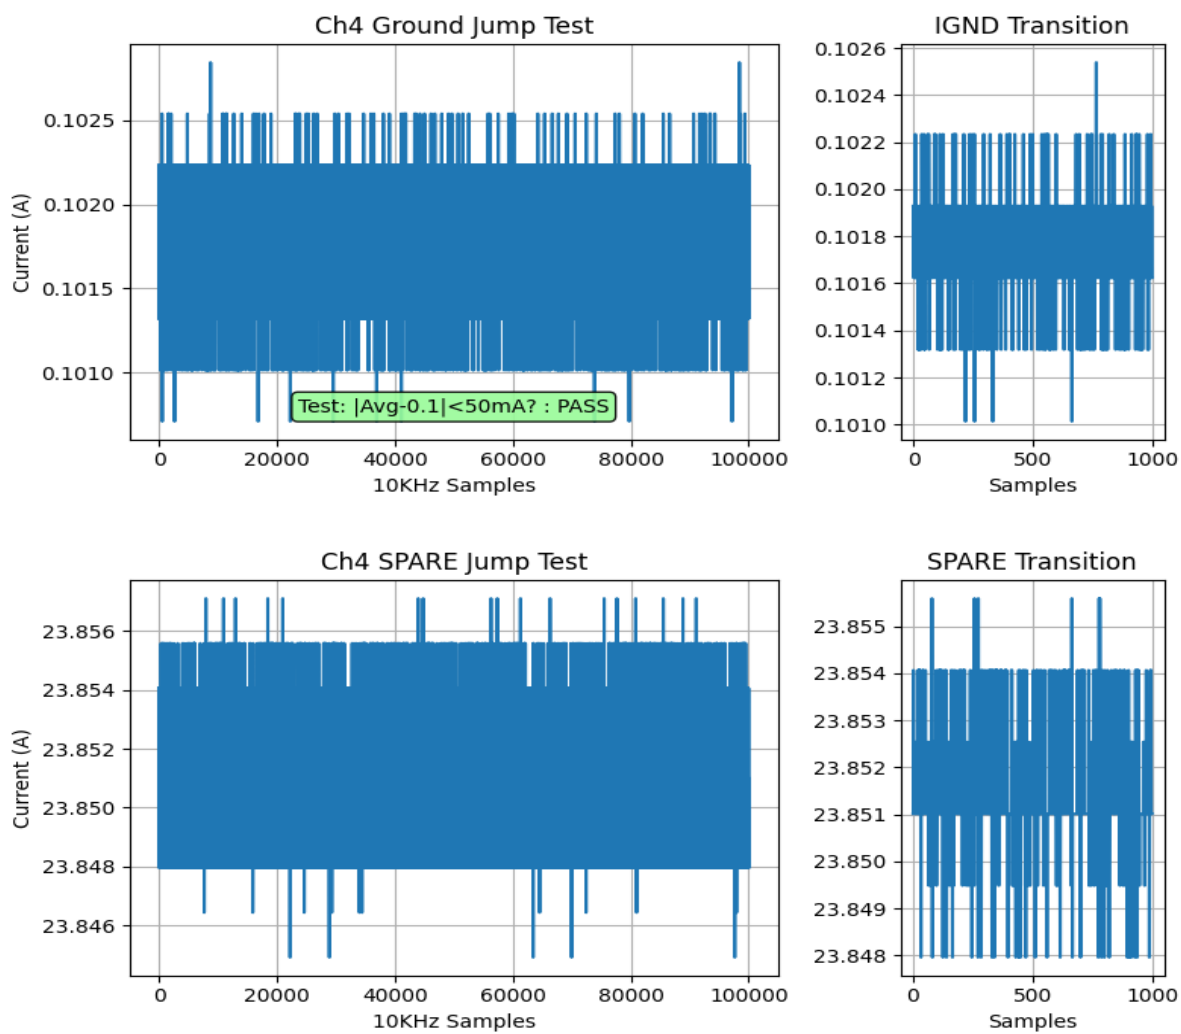


Smooth Test Results: CH4

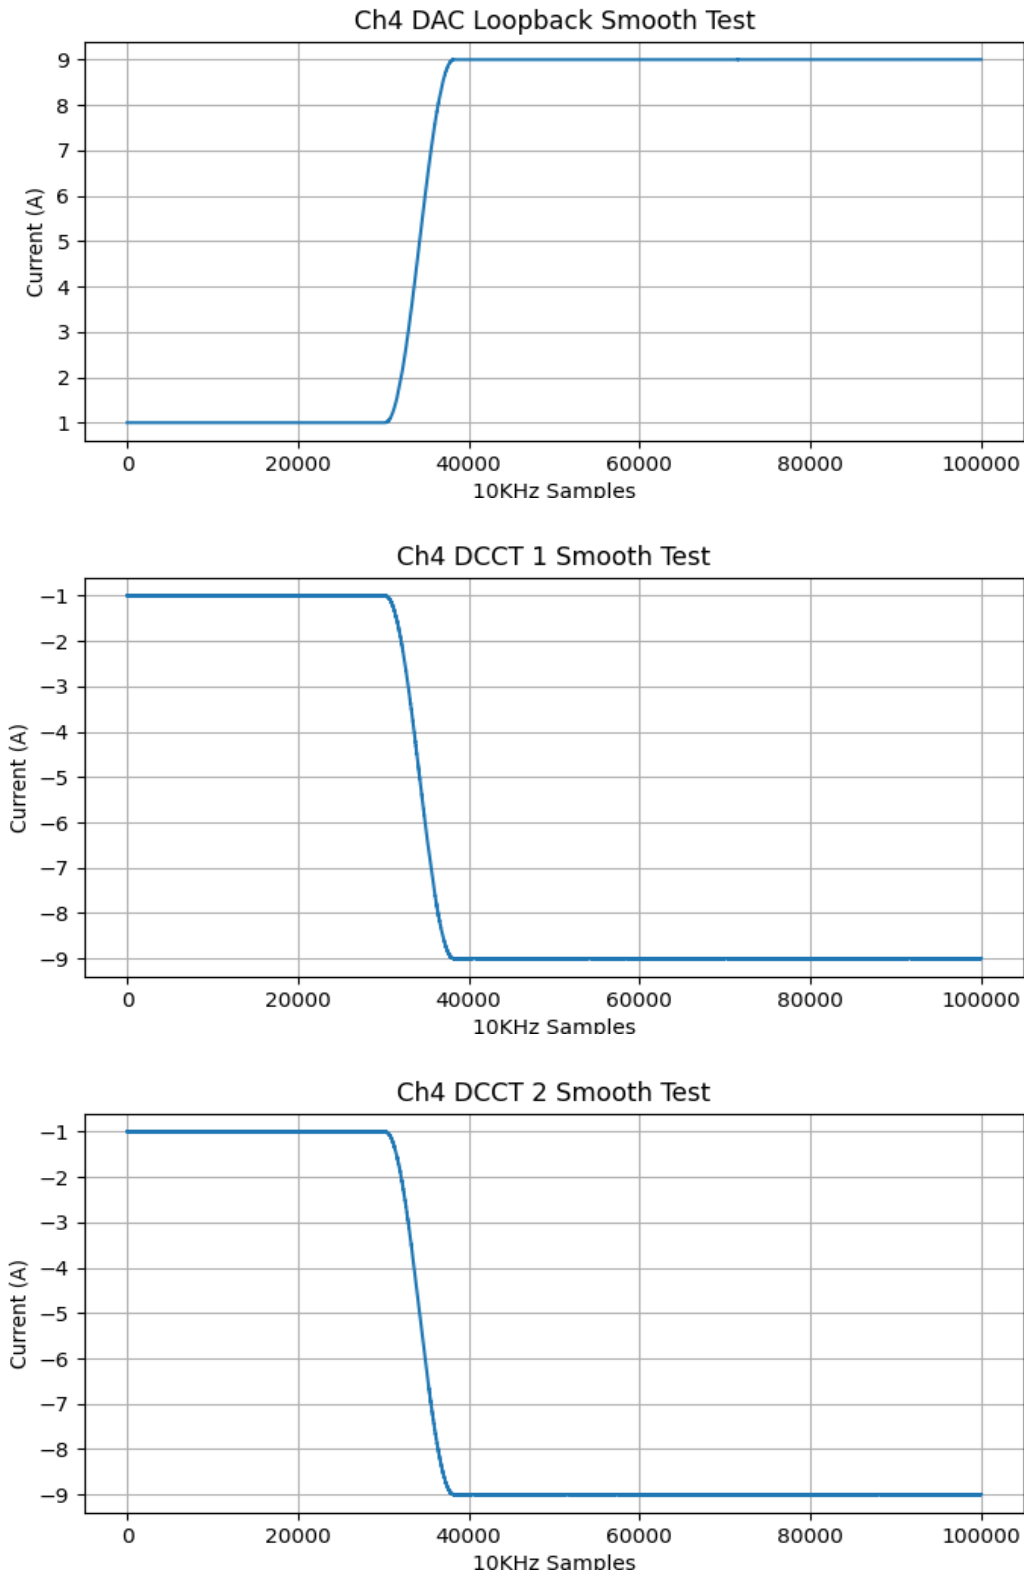

Smooth Test Results: CH4

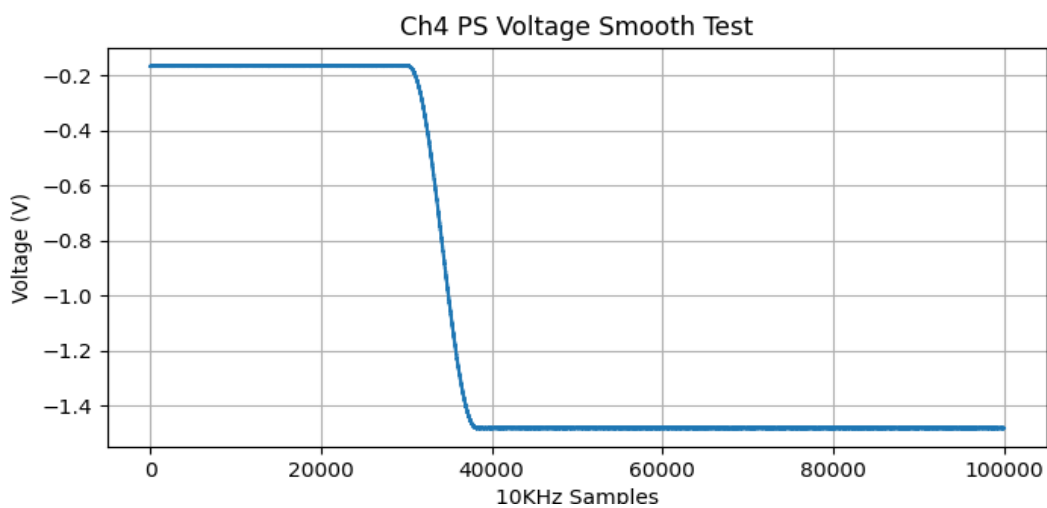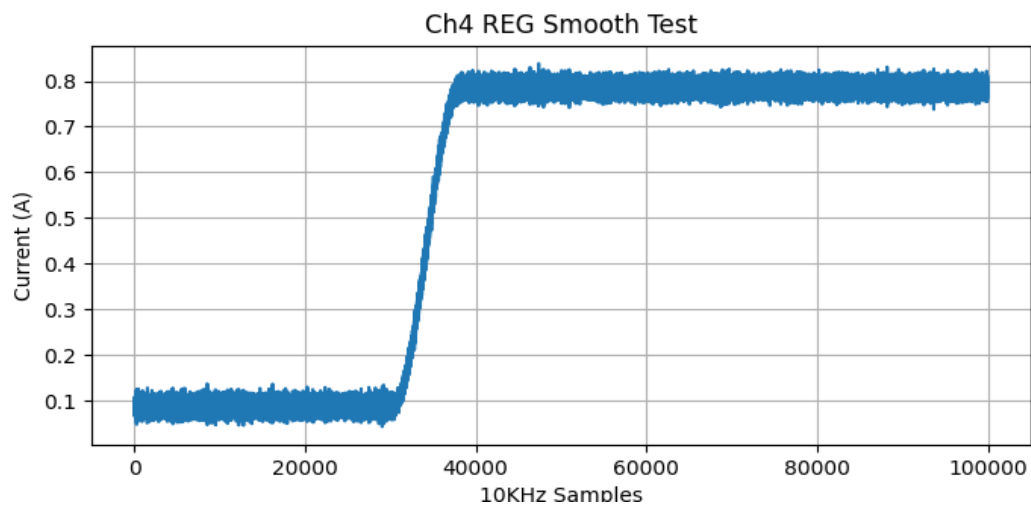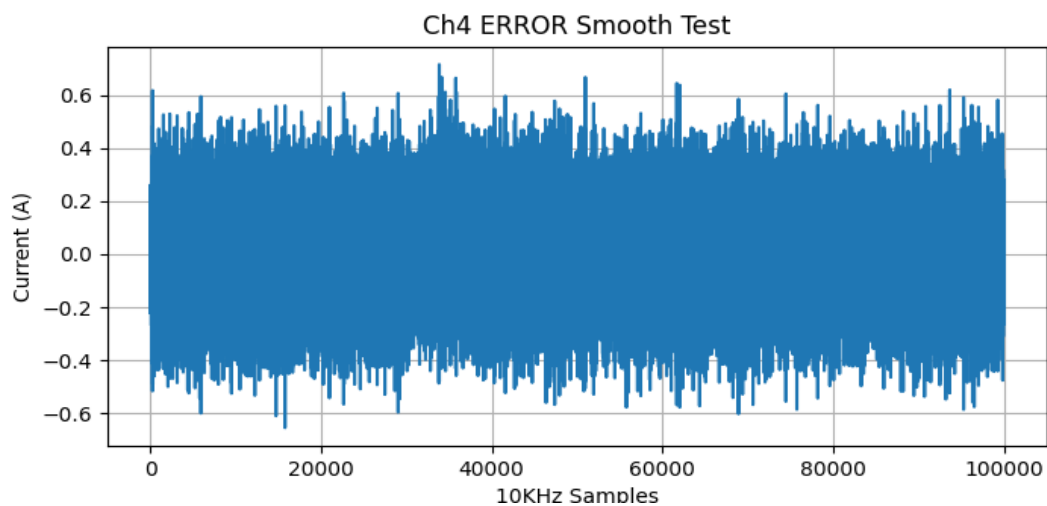

Smooth Test Results: CH4

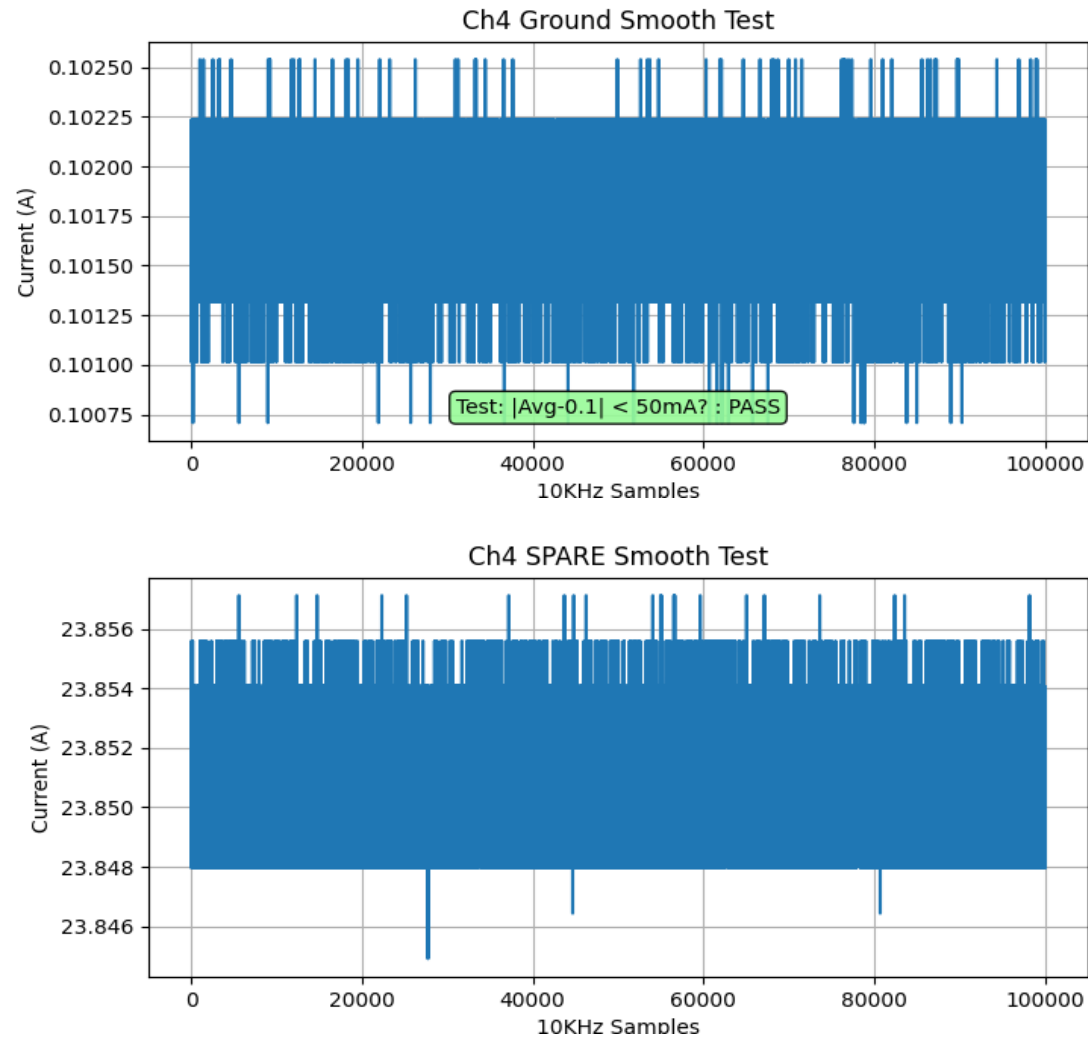

FOFB TX test (Bandwidth-Mode = Fast)

PV	Value	Pass?
lab{2}Chan1:DAC-I	11.4988431930542	PASS
lab{2}Chan2:DAC-I	11.50019645690918	PASS
lab{2}Chan3:DAC-I	11.500794410705566	PASS
lab{2}Chan4:DAC-I	11.499785423278809	PASS

UDP RX Packet Test

```

23:18:00.587370 IP (tos 0x0, ttl 64, id 57082, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.50654 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.587371 IP (tos 0x0, ttl 64, id 57083, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.49639 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.598781 IP (tos 0x0, ttl 64, id 57084, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.55376 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.598781 IP (tos 0x0, ttl 64, id 57085, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.41305 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.610654 IP (tos 0x0, ttl 64, id 57087, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.55951 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.610655 IP (tos 0x0, ttl 64, id 57088, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.60133 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.622344 IP (tos 0x0, ttl 64, id 57093, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.55128 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.622344 IP (tos 0x0, ttl 64, id 57094, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.42697 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.633813 IP (tos 0x0, ttl 64, id 57095, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.36116 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.633814 IP (tos 0x0, ttl 64, id 57096, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.36741 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.645485 IP (tos 0x0, ttl 64, id 57103, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.54688 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.645486 IP (tos 0x0, ttl 64, id 57104, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.37310 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.656951 IP (tos 0x0, ttl 64, id 57110, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.50865 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.656951 IP (tos 0x0, ttl 64, id 57111, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.39005 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.668238 IP (tos 0x0, ttl 64, id 57120, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.34493 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.668239 IP (tos 0x0, ttl 64, id 57121, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.53892 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.679692 IP (tos 0x0, ttl 64, id 57127, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.37693 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.679693 IP (tos 0x0, ttl 64, id 57128, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.47450 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.690998 IP (tos 0x0, ttl 64, id 57140, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.35218 > 10.69.26.55.12345: [udp sum ok] UDP, length 36
23:18:00.690998 IP (tos 0x0, ttl 64, id 57141, offset 0, flags [DF], proto UDP (17), length 64)
    10.69.26.1.58880 > 10.69.26.55.12345: [udp sum ok] UDP, length 36

```

(Full tcpdump log saved to /home/pstester/NSLS-II_PSCs/NEXT-II/NSLS2_zPSC_Calibration_and_Test/Test_Data/Raw_Logs/4ch_HSF_SN0001_RawData_04-30-26_22-45/tcpdump_full.log)

Test	Result
UDP RX FOFB	PASS

