

zPSC Calibration and Test Manual

Michael Capotosto

May 2026

Contents

1	Introduction	1
2	Cable Assemblies and Harnesses	3
2.1	Overview	3
2.1.1	2-Channel DCCT Cable	3
2.1.2	4-Channel DCCT Cable	4
2.1.3	Power Supply Channels 1 through 4 ATE Interface Cables	4
2.1.4	SFP Transceivers	4
2.1.5	Other Miscellaneous Cables	5
3	ATE Connections	7
3.1	Overview	7
3.2	Connections	9
3.2.1	Current Measurement Loop/DMM Connection	10
4	zPSC Chassis Overview	13
4.1	Introduction	13
4.2	Front Panels (2- and 4-Channel PSCs)	13
4.3	Rear Panel - 2 Channel	13
4.4	Internal Component Layout - 2 Channel	14
4.4.1	Analog Board Components	15
4.5	Rear Panel - 4 Channel	16
4.6	Internal Component Layout - 4 Channel	16
4.6.1	Analog Board Components	17
5	EPICS Base and IOCs	19
5.1	Introduction	19
5.2	EPICS Installation Overview	19
5.3	Installing EPICS Base and Required Modules	19
5.4	Installing the ATE IOC	21
5.5	Installing the PSC IOC	22
6	CS-Studio - Phoebus	23
6.1	Introduction	23
6.2	Installing Phoebus	23

7	Networking	25
7.1	Overview	25
8	Installing Minicom	27
8.1	Overview	27
9	Calibration and Test Scripts	29
9.1	Overview	29

Chapter 1

Introduction

Chapter 2

Cable Assemblies and Harnesses

2.1 Overview

This chapter provides a brief overview of the makeup of various cable assemblies used in the sections to follow. Some cables are off-the-shelf cables with gender changers installed on one end. Others are made up of commercial cable assemblies with fly leads that must connect to breakout boards.

Some off the shelf fiber and network patch cables will be required.

2.1.1 2-Channel DCCT Cable

This cable consists of a Molex Micro-D15 cable, 72" long, fly lead, connecting to a Winford HD26 breakout board.

- 1x Molex 834229018 72" Micro-D15 Fly Lead Cable
- 1x Winford BRKEGD26HDF-T HD26F Breakout Board

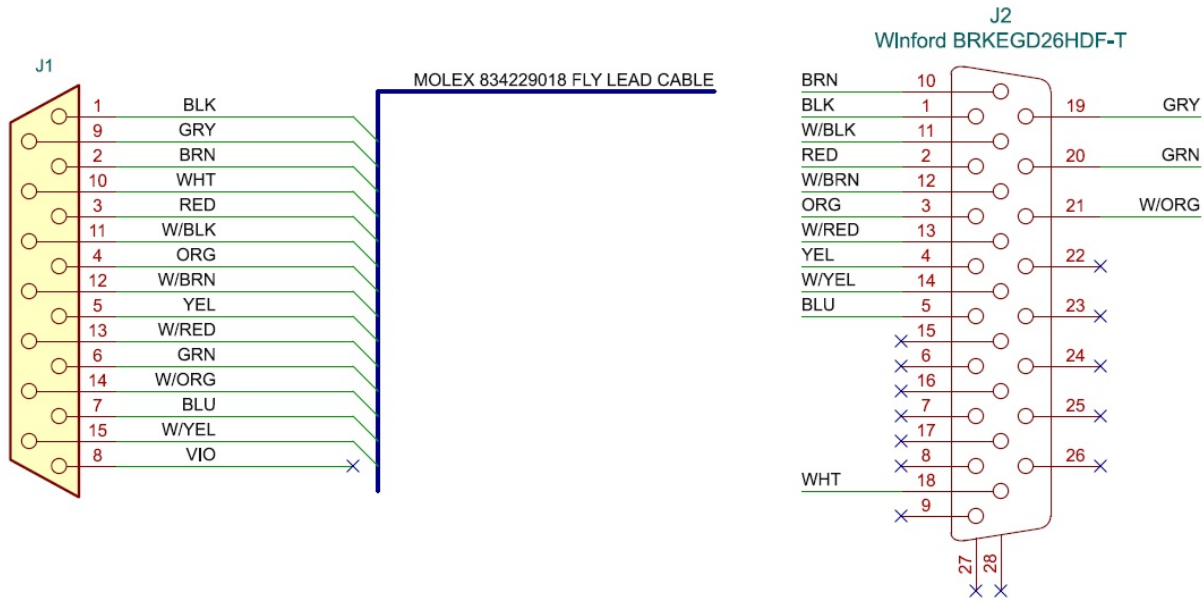


Figure 2.1: Pinout of 2-Channel microD15 to HD26 Cable

2.1.2 4-Channel DCCT Cable

This cable assembly consists of two parts:

- 1x Amphenol CS-DSDHD26MF0-005 1.52m HD26 M/F Cable
- 1x NorComp Inc. GCHDLP26F26F HD26 F/F Gender Changer

2.1.3 Power Supply Channels 1 through 4 ATE Interface Cables

This cable assembly consists of two parts:

- 4x Molex 83424-9062 Micro-D25 to DB25
- 4x L-com DGB25F DB25F/F Gender Changer

2.1.4 SFP Transceivers

Quantities depend on unit type and test workstation configuration. One SFP port is used for timing/event code tests on all units.

If testing FOFB, two more SFPs are required - the NSLS-II test stand uses one active copper and one fiber; though the simplest test setup would use two active copper SFPs.

- Fiber SFP: ATGBICS AFBR-57D7APZ-C or equivalent (8.5G+ SFP+, 850nm MM)
- Active Copper SFP: Finisar FCLF8522P2BTL or equivalent

2.1.5 Other Miscellaneous Cables

Other miscellaneous cables needed include:

- CAT6 Network cables
- OM3 LC/LC Duplex Fiber Patch Cables (e.g. FS.com SKU 40233)
- IEC C13 to NEMA 5-15P Power Cords
- Assorted discrete wires for DC power, signal, 16-18AWG

Chapter 3

ATE Connections

3.1 Overview

On initial setup, there are a few fixed connections that need to be made to the ATE:

- Current Shunt: Connect this to a resistance standard for calibrations, or to a wire loop if not being used for current measurement
- $\pm 15V$ Supply: Connect this to a split supply, draws less than 400mA under full load
- Network: Connect to the local test network
- SD Card must be configured once, but does not require any regular changes
- Jumpers: Install jumpers in J8-9, J12-13, J19-20, JJ23-24, J30-31, J34-35, J41-42, and J45-J46 for normal operations.

For every device under test:

- Channel 1, 2, 3, and 4 Power Supply Cables: These cables connect to each of the micro-D Power Supply I/O connectors on the rear of the PSC
- Tuning Boards: Tuning boards must be installed to match the loads being tested.
- DCCT Cable must be connected for every PSC. There are two cables - one for 4-Channel units, and another for 2-Channel units.

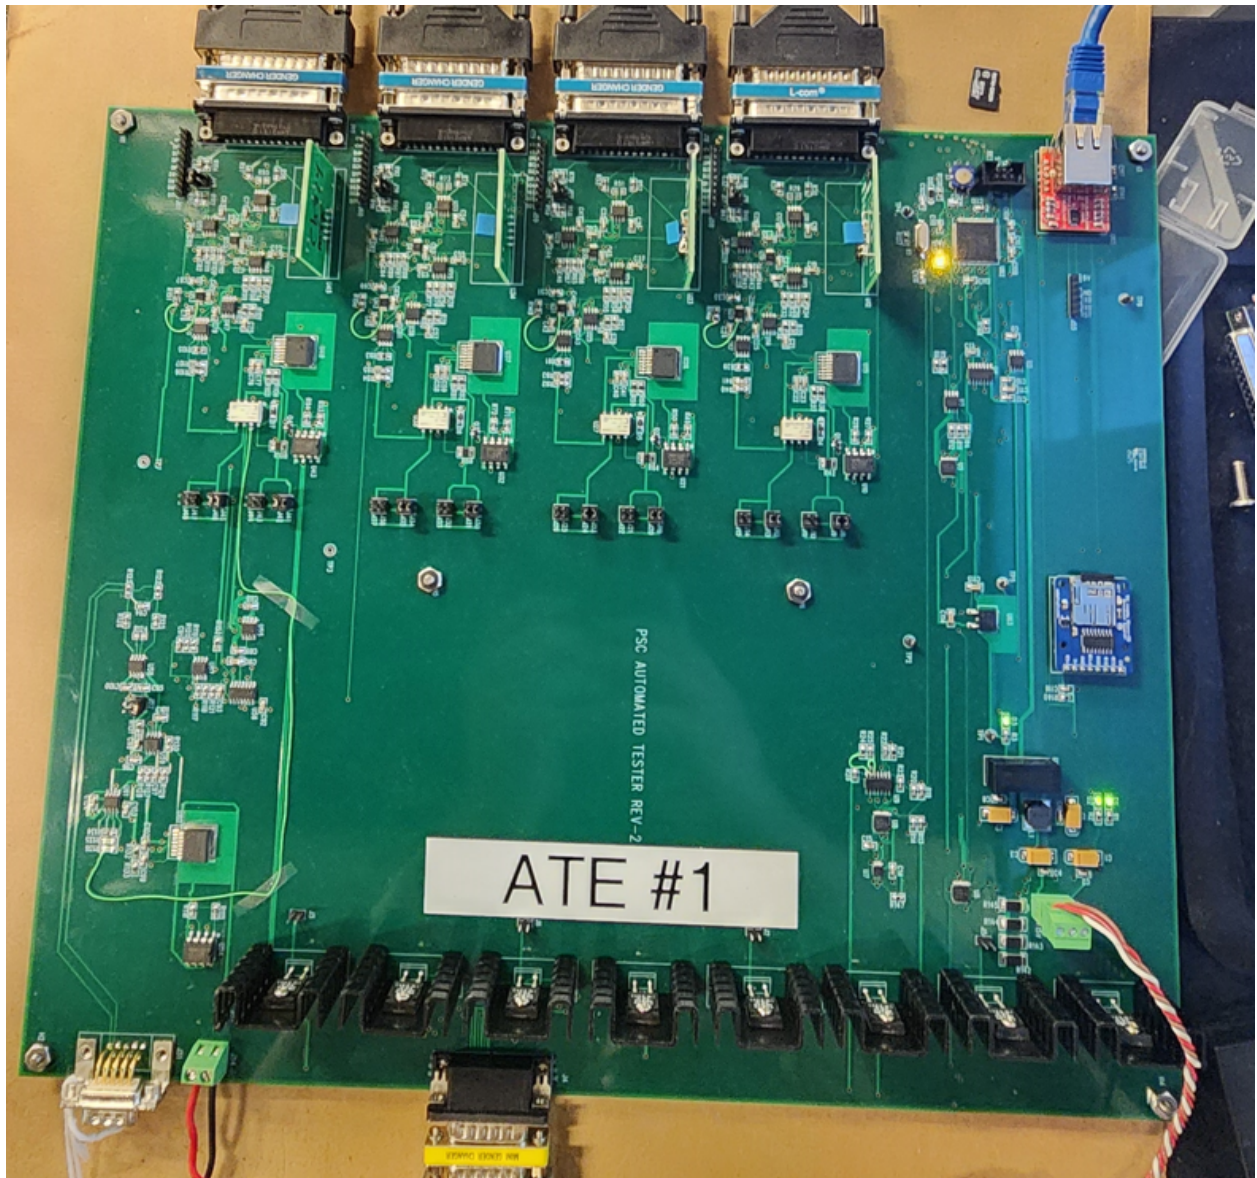


Figure 3.1: ATE #1

3.2 Connections

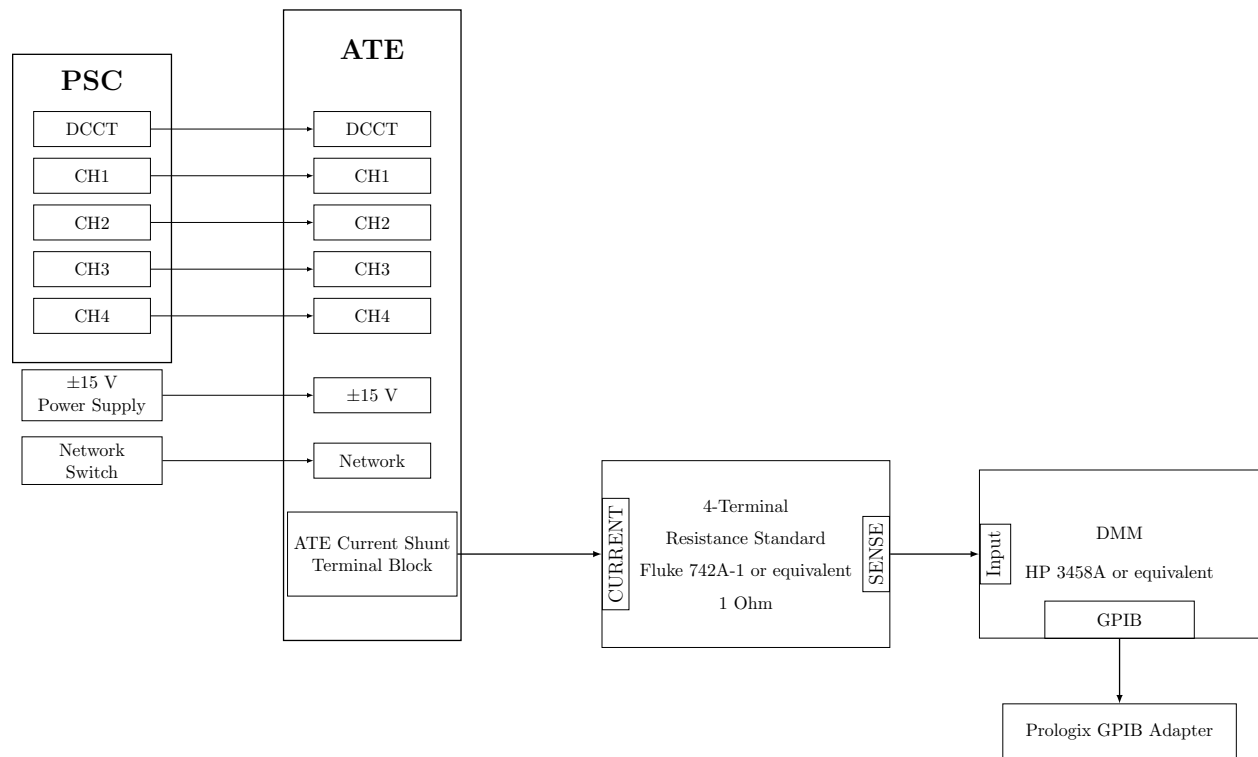


Figure 3.2: ATE Connection Block Diagram

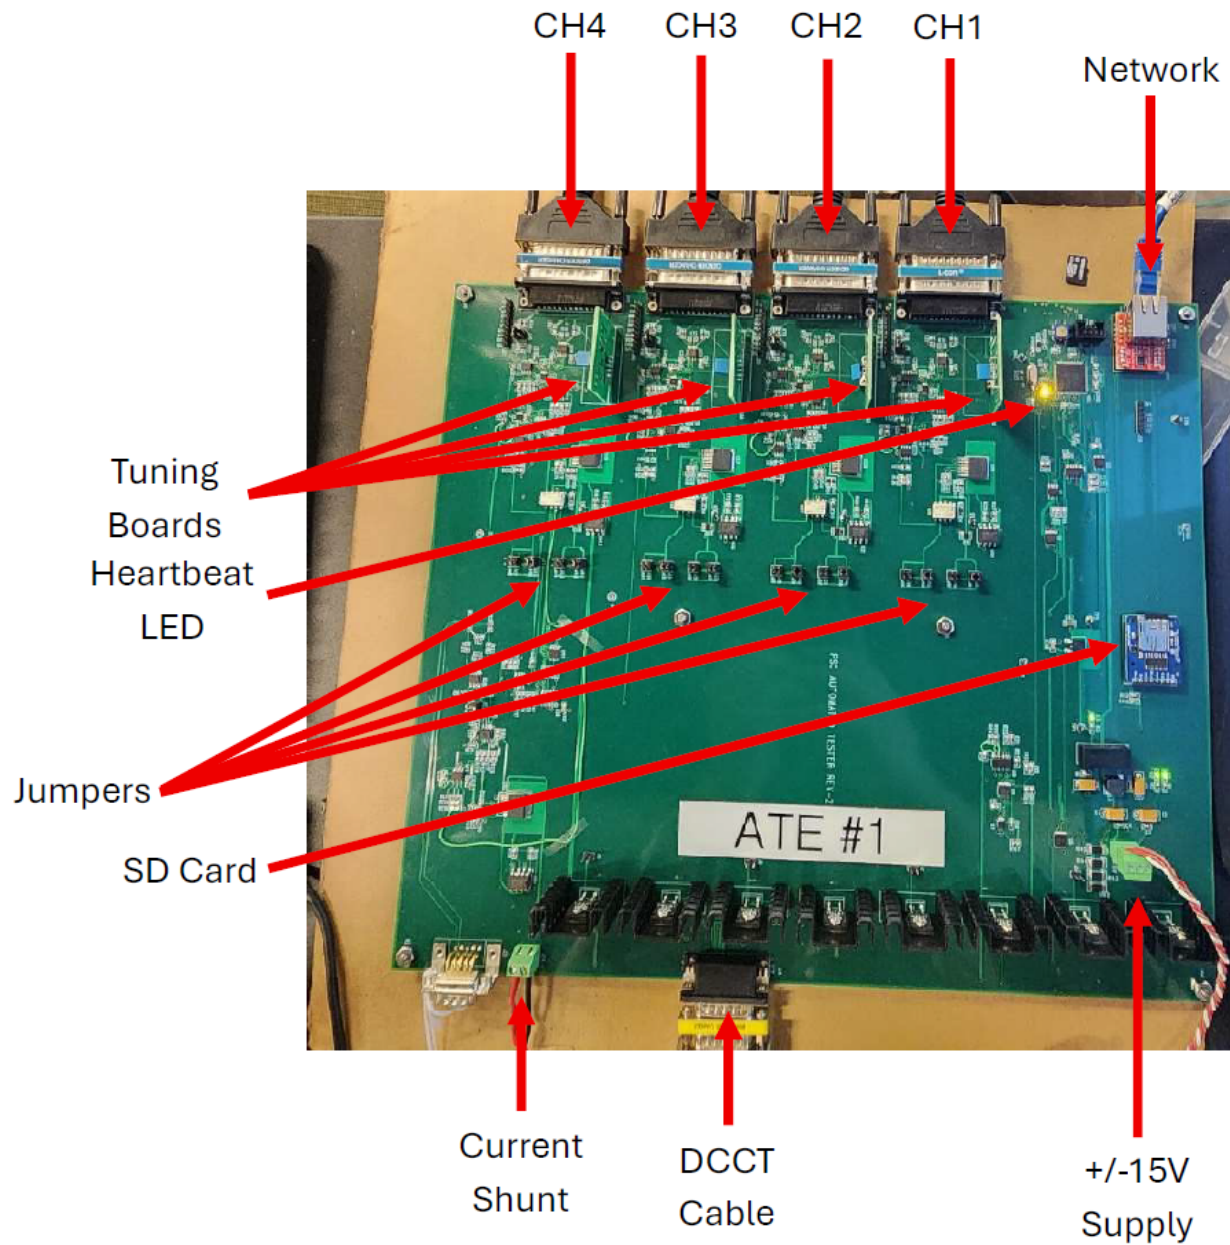


Figure 3.3: Annotated ATE Board

3.2.1 Current Measurement Loop/DMM Connection

The DMM is connected to the workstation via a GPIB adapter from Prologix. These are available in both USB and Ethernet forms.

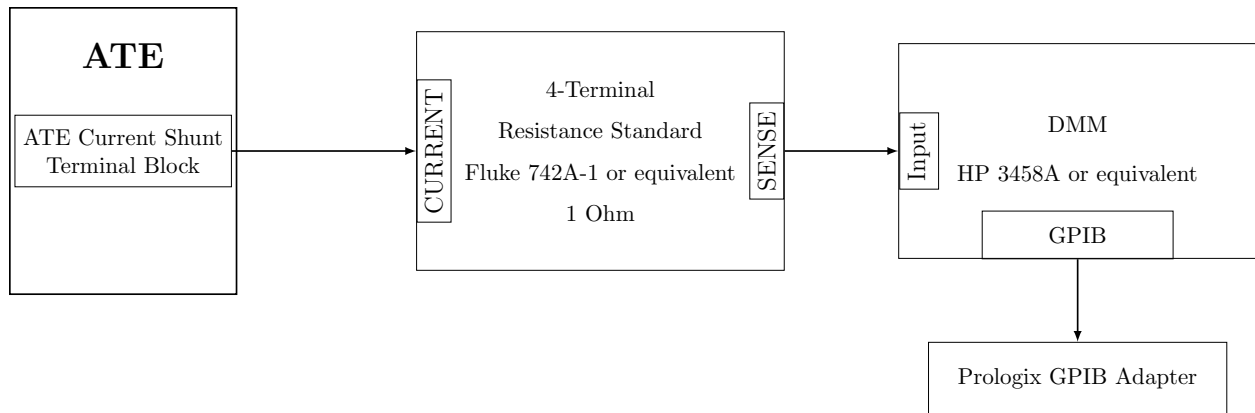


Figure 3.4: ATE → DMM Current Loop


Chapter 4

zPSC Chassis Overview


4.1 Introduction

4.2 Front Panels (2- and 4-Channel PSCs)


Both 2- and 4-Channel units share identical front panels:

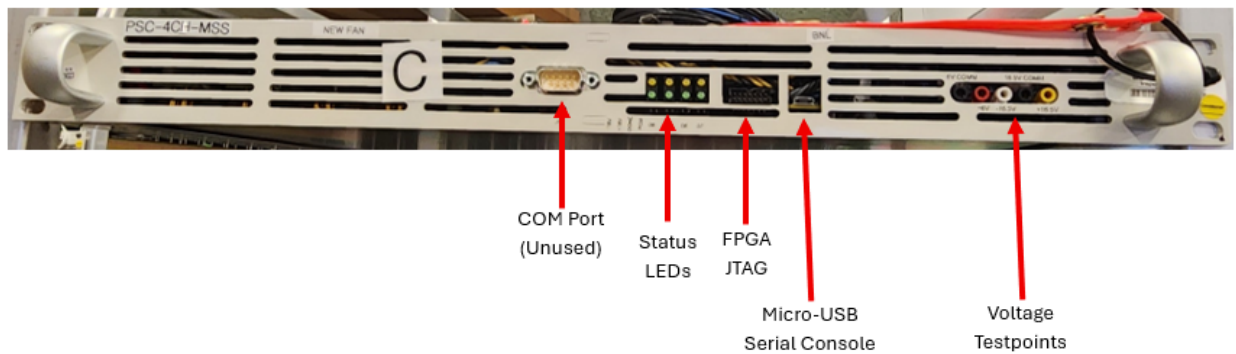


4.3 Rear Panel - 2 Channel

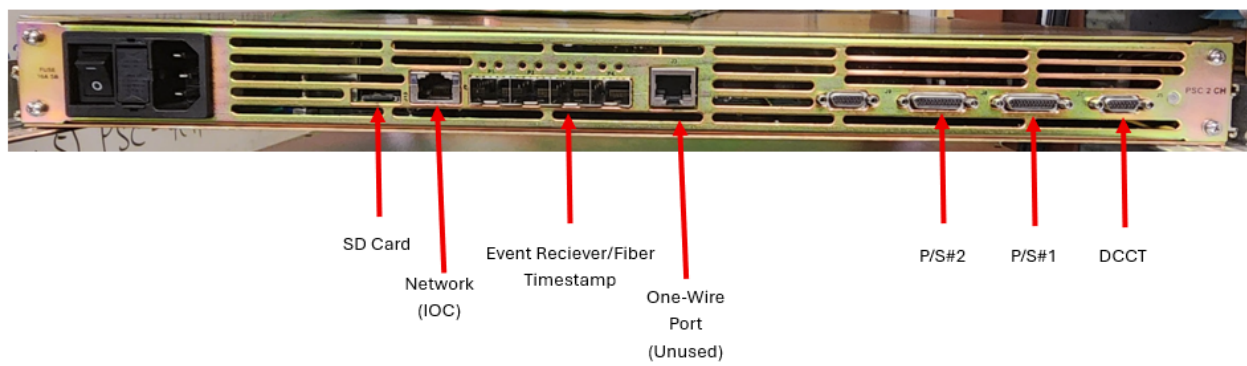


4.4 Internal Component Layout - 2 Channel

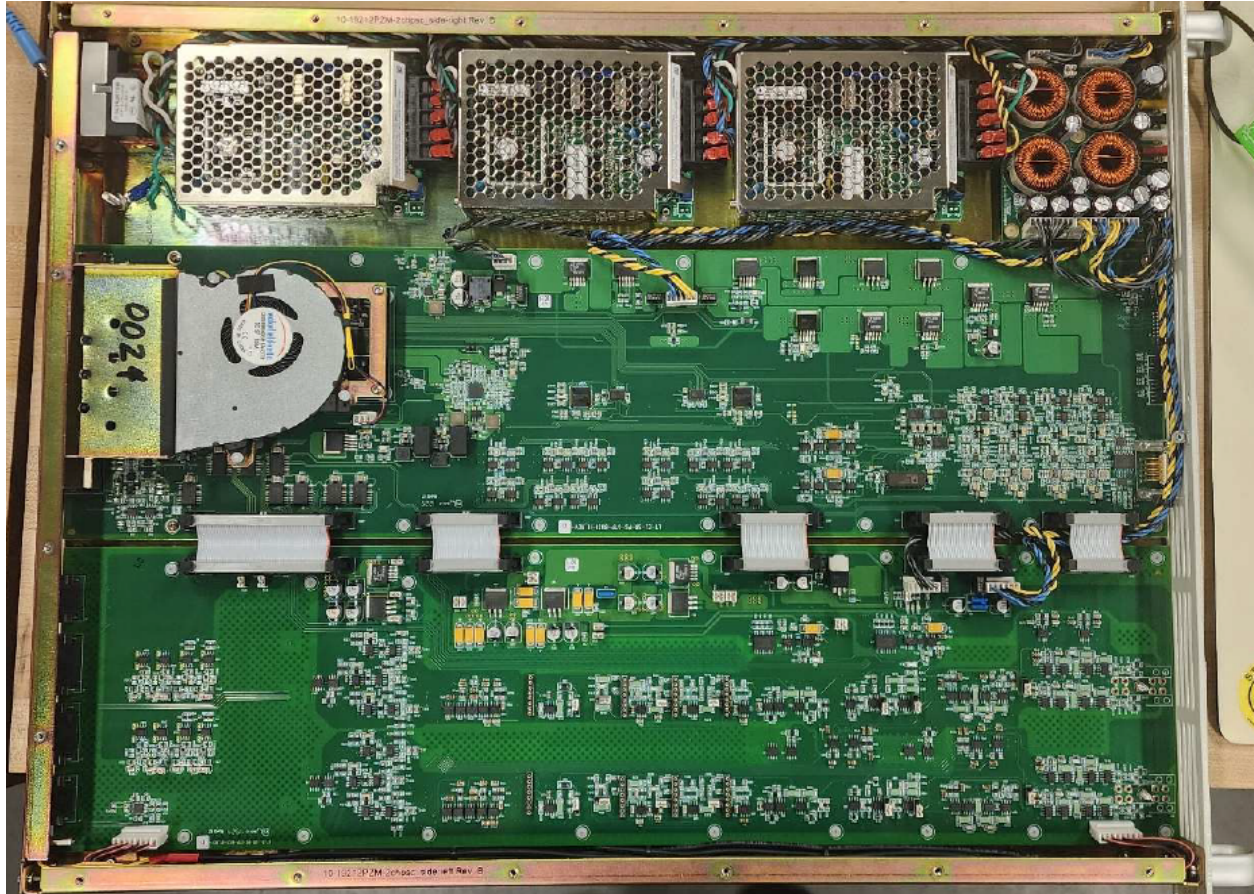


4.4.1 Analog Board Components

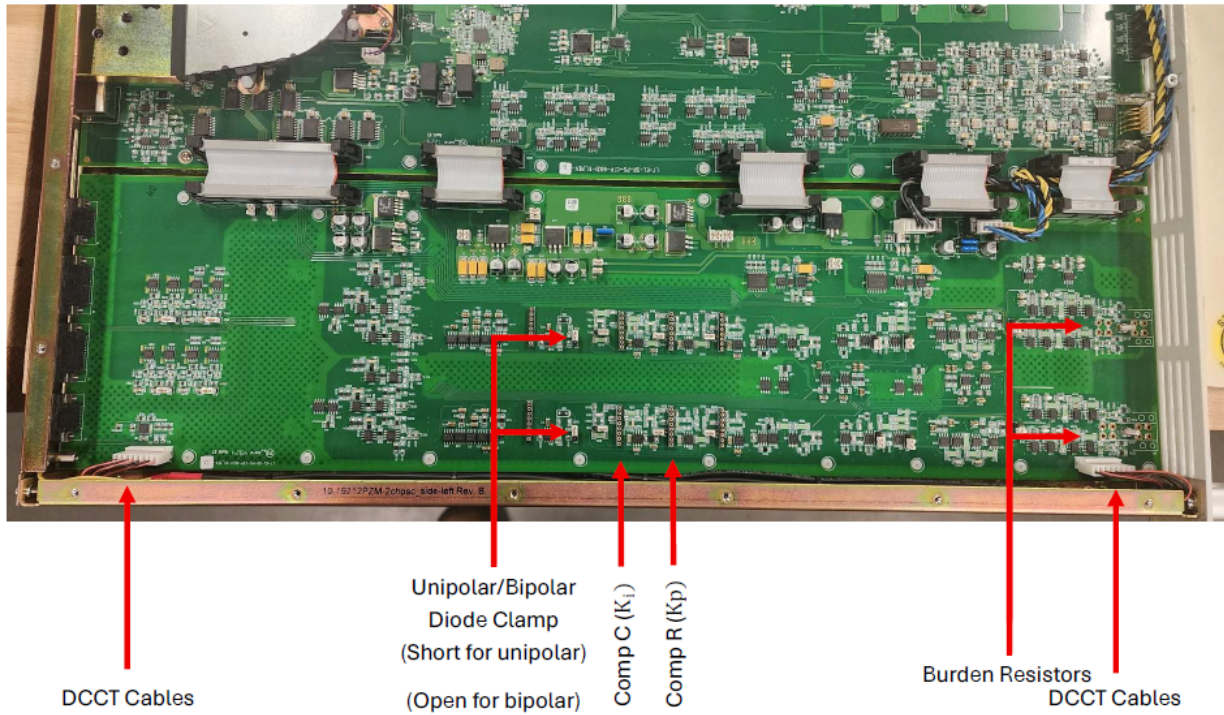


4.5 Rear Panel - 4 Channel

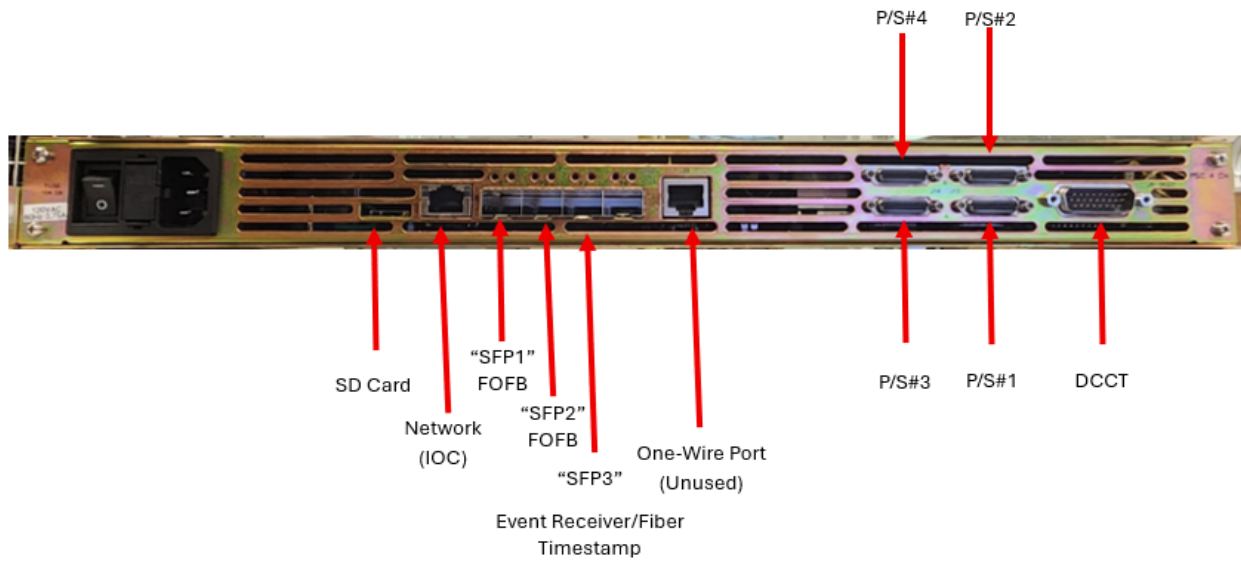

4.6 Internal Component Layout - 4 Channel

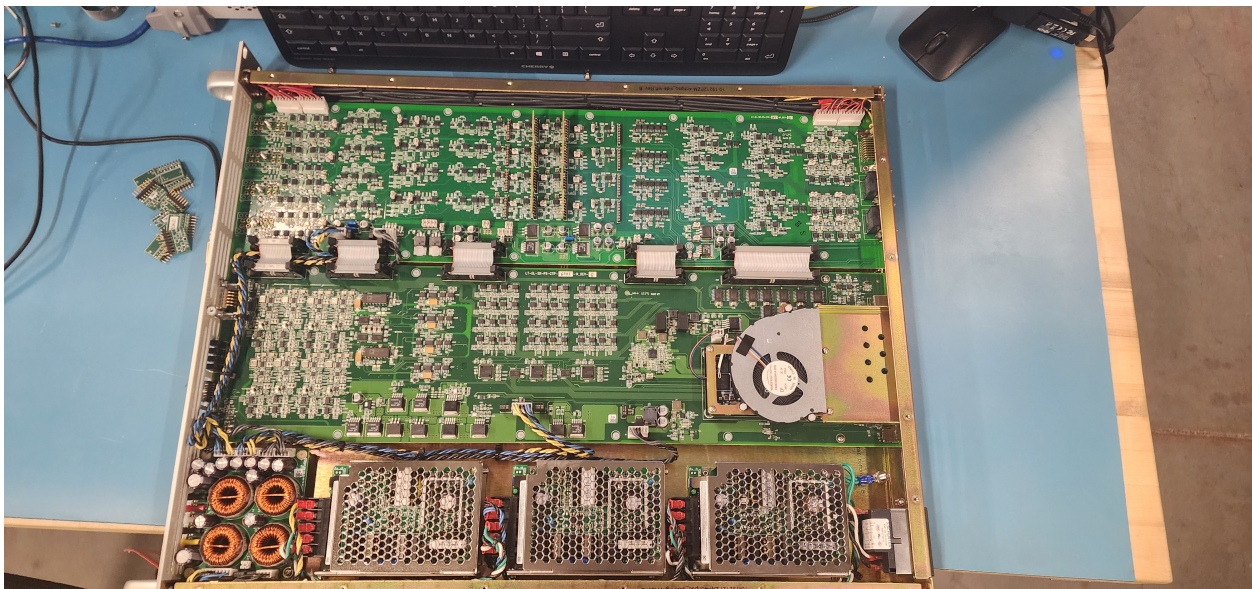

4.6.1 Analog Board Components

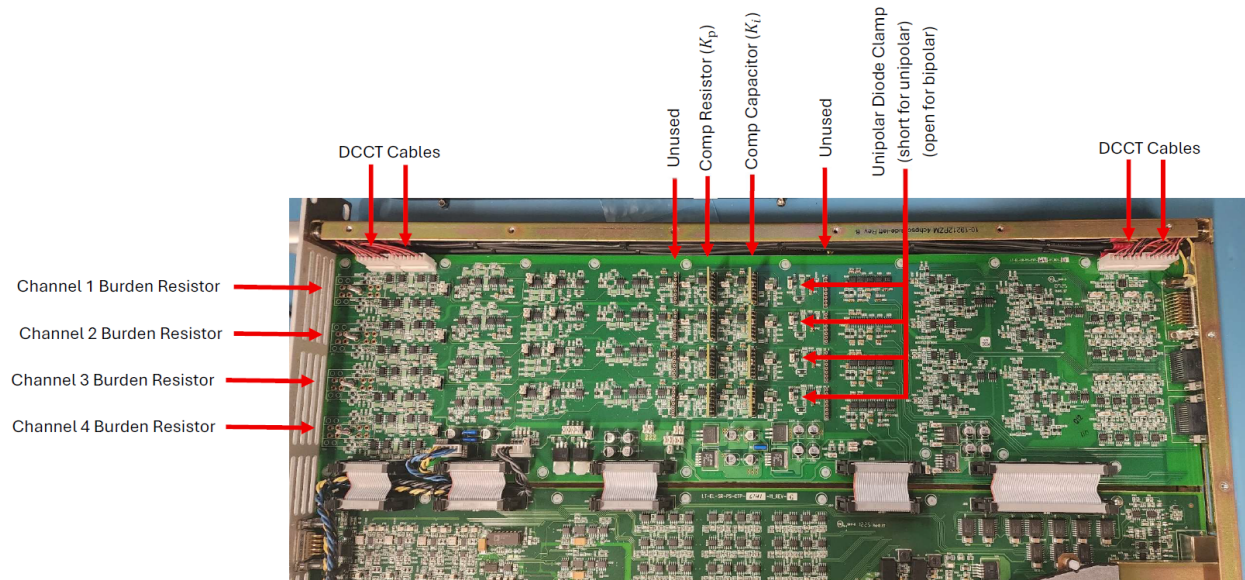

Chapter 5

EPICS Base and IOCs

5.1 Introduction

There are two IOCs associated with the calibration and test of the zPSC: The ATE IOC, and the zPSC IOC.

5.2 EPICS Installation Overview

EPICS installations performed by M. Capotosto loosely follow the below directory structure:

- `EPICS_BASE=/epics/base` or `/epics/base_[version]` or similar
- `SUPPORT=/epics/support` – or sometimes `MODULES` instead of `SUPPORT` is used.

Modules required for the ATE and PSC are installed here:

- `seq`: SNL-Sequencer
- `pscdrv`: Portable Streaming Controller Driver
- `asyn`: EPICS module for driver and device support
- `epics/iocs` - each IOC is cloned into this repository
- `epics/systemd-softioc` - This is an NSLS-II utility for managing IOCs as a system service

5.3 Installing EPICS Base and Required Modules

1. Create the EPICS user group, and the empty EPICS directory:

```
sudo groupadd epics
sudo usermod -aG epics $USER
newgrp epics
sudo mkdir -p /epics
```

```
sudo chown $USER:epics /epics
sudo chmod 2775 /epics
```

2. EPICS Base is cloned into /epics/base via:

```
git clone --recursive -b 7.0
    https://github.com/epics-base/epics-base.git /epics/base
cd /epics/base
```

3. Build EPICS:

```
make clean
make
```

4. Create the remaining directory structure:

```
mkdir -p /epics/iocs /epics/modules
```

5. Clone asyn:

- (a) `cd /epics/modules`
- (b) `git clone https://github.com/epics-modules/asyn.git asyn`
- (c) `cd /epics/modules/asyn`
- (d) Set up required files in `configure/RELEASE`, `configure/RELEASE.LOCAL`
- (e) Build with `make clean`, and `make`

6. Clone Sequencer:

- (a) `cd /epics/modules`
- (b) `git clone https://github.com/epics-modules/sequencer.git seq`
- (c) `cd /epics/modules/seq`
- (d) Set up required files in `configure/RELEASE`, `configure/RELEASE.LOCAL`
- (e) Build with `make clean`, and `make`

7. Clone PSC Driver:

- (a) `cd /epics/modules`
- (b) `git clone https://github.com/mdavidsaver/pscdrv.git pscdrv`
- (c) `cd /epics/modules/pscdrv`
- (d) Set up required files in `configure/RELEASE`, `configure/RELEASE.LOCAL`
- (e) Build with `make clean`, and `make`

8. Clone Manage IOCs Utility:

- (a) `cd /epics`
- (b) `git clone https://github.com/NSLS2/systemd-softioc.git`
- (c) Navigate to the repo directory `cd systemd-softioc`
- (d) Make the install script executable and run:


```
sudo chmod +x install.sh
sudo ./install.sh
sudo usermod -aG epics softioc
newgrp
sudo chown softioc:epics /epics/iocs
sudo chmod 2775 /epics/iocs
```

5.4 Installing the ATE IOC

1. Change to IOC directory `cd /epics/iocs`
2. Clone the repo:


```
git clone https://github.com/capotostobnl/ALSu-PSC-ATE-ioc.git PSCtest
```
3. `cd PSCtest`
4. `git switch Released,-UPC/BPC-Split-IOC-Ver-2`
5. Create the `RELEASE.local` file, `touch configure/RELEASE.local`
6. `echo "EPICS_BASE=/epics/base ASYN=/epics/modules/asyn" > /epics/iocs/PSCtest/configure/RELEASE.local`
7. Build the IOC: `make clean, make`
8. Update the `st.cmd` file: `cd iocBoot/iocPSCtest`
 - (a) Edit the `st.cmd` file: `nano st.cmd`
 - (b) Update the `EPICS_BASE` variable if needed.
 - (c) Update the `IPPORT` to match the ATE. Repository has 10.69.26.4:5000 as default. Changing this later from the Phoebus/CSS panels may not work!
9. Find the next available port: `manage-iocs nextport`
10. Configure this in the config file: `nano config`
11. Set the `NAME=PSCTest`, `PORT=` your next port
12. Update the directory path in the root-level `st.cmd` to point to the right binaries
13. Enroll in `manage-iocs` as a service: `sudo manage-iocs install PSCtest`

14. Enable auto-start on boot: `sudo manage-iocs enable PSCtest`
15. Check the status, it should be running! `manage-iocs status`
16. And if you want other information on the ioc: `manage-iocs report`

5.5 Installing the PSC IOC

1. Change to IOC directory `cd /epics/iocs`
2. Clone the repo:
`git clone https://github.com/jamead/zpsc-ioc.git zpsc_ioc`
3. `cd zpsc_ioc`
4. Create the `RELEASE.local` file, `touch configure/RELEASE.local`
5. `echo "EPICS_BASE = /epics/base
PSCDRV = /epics/modules/pscdrv
SEQ = /epics/modules/seq" >
/epics/iocs/zpsc_ioc/configure/RELEASE.local`
6. Build the IOC: `make clean, make`
7. Update the `st.cmd` file as needed: `cd iocBoot/ioczpsc`
 - (a) Edit the `st.cmd` file: `nano st.cmd`
 - (b) Update as needed
8. Find the next available port: `manage-iocs nextport`
9. Configure this in the config file: `nano config`
10. Set the `NAME=zpsc_ioc`, `PORT=` your next port
11. Update the directory path in the root-level `st.cmd` to the `iocBoot/ioczpsc/st.cmd`
12. Enroll in `manage-iocs` as a service: `sudo manage-iocs install zpsc_ioc`
13. Enable auto-start on boot: `sudo manage-iocs enable zpsc_ioc`
14. Check the status, it should be running! `manage-iocs status`
15. And if you want other information on the ioc: `manage-iocs report`

Chapter 6

CS-Studio - Phoebus

6.1 Introduction

CS-Studio Phoebus is installed using precompiled binaries. This application requires a Java runtime environment be installed.

The 'BOB' files - the user interface panels, are located in the IOC's directories, `/epics/iocs/PSCtest/gui` and `/epics/iocs/zpsc_ioc/gui`

Behavior of some features of Phoebus must be modified by the shell script used to launch Phoebus, an example is included with the below installation instructions to modify the behavior of the 'Home' button, used to bring up the custom 'PSC Launcher' panel using the Home button, instead of having to manually navigate to the file when needed.

6.2 Installing Phoebus

1. If not installed, install Java, e.g.:
`sudo apt update && sudo apt install openjdk-17-jdk`
2. Create the directory: `sudo mkdir /opt/phoebus`
`chown $USER:epics /opt/phoebus`
`chmod 2775 /opt/phoebus`
3. Download Phoebus and extract to the `/opt/phoebus` directory
`https://github.com/ControlSystemStudio/phoebus/releases/download/v4.7.4/phoebus-4.7.4-linux.tar.gz`
4. Make the shell script executable: `chmod +x phoebus.sh`
5. Copy in necessary configuration changes from the template:
`git clone https://github.com/capotostobnl/Phoebus-ALSU.git /opt/phoebus/config`

6. Update paths as necessary in the `settings.in/settings_template.ini`
7. Alias Phoebus to run via command `run-phoebus`:

```
echo 'alias run-phoebus="/opt/phoebus/phoebus.sh"' >> ~/.bashrc  
source ~/.bashrc
```
8. Now test! Try `run-phoebus` from a terminal, and then click the 'Home' button!

Chapter 7

Networking

7.1 Overview

The default configuration for these devices is to use static IP addresses on the 10.69.26.0/23 subnet.

The network topology is generally as follows:

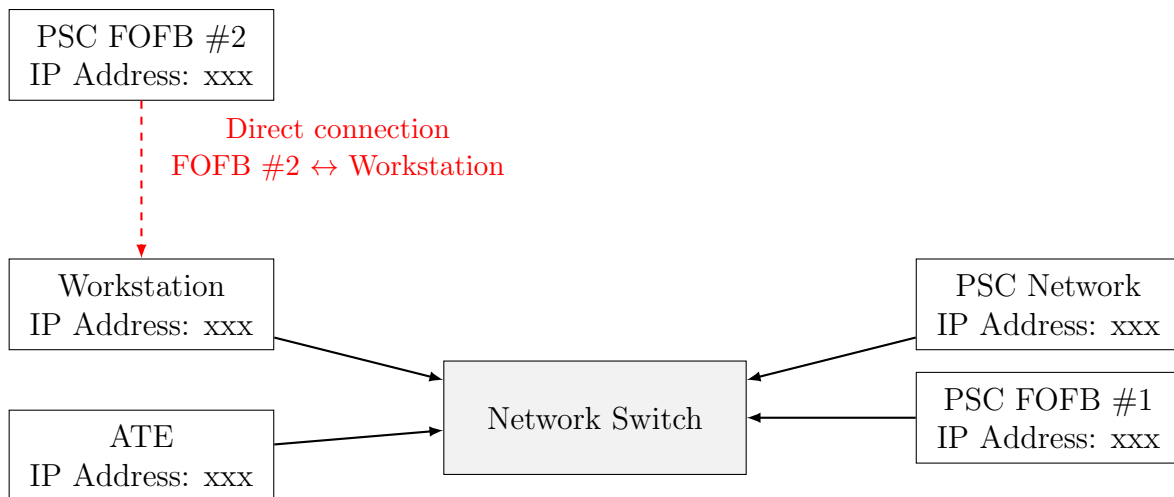


Figure 7.1: Network Topology with Clean FOFB Direct Link

Chapter 8

Installing Minicom

8.1 Overview

Chapter 9

Calibration and Test Scripts

9.1 Overview

