



en.carobook.com

HAVAL H1

Owner's Manual

For your safety and comfort , read carefully and keep in the vehicle.

en.carobook.com

Thank you for choosing Haval 1 vehicle manufactured by Great Wall Motor Company Limited and welcome to join the family of our vehicles. We believe that the excellent performance of Haval 1 vehicle will bring you endless pleasure of driving.

This manual introduces the vehicle characteristics and correct operation method in details. Please read this manual carefully before your first driving and follow the suggestions in this manual to ensure your easy, safe and correct operation of the vehicle. After that, place this manual in the vehicle for future reading.

Besides the users' manual, other supporting manuals related to the vehicle are accompanied with the vehicle. It is recommended that you read these manuals together to know relevant important information.

This manual covers all possible functions or devices installed on Haval H1 vehicle. Therefore, some functions or devices mentioned in this manual may not necessarily be provided or installed on your vehicle.

To resell your vehicle, this manual shall be accompanied with the vehicle as an important part of this vehicle.

Manual Structure

This manual is divided into 8 chapters. Of them, Chapter 1 – Precautions for Safe Driving is especially important. Read it carefully.

Chapter 1: Precautions for safe driving

It summarizes the "matters which may cause serious injury and fire", "general cautions" and their avoidance methods. Read this chapter carefully since its content is very important.

Chapter 2: Operation

It specifies the use methods of key, sunroof, steering wheel, rear view mirror, engine hood, oil filler cap, seat, safety belt.

Chapter 3: Driving

It introduces the driving method of vehicle and operation methods of relevant devices. Such as hand brake, instrument, light and window wiper.

Chapter 4: On-board device

It specifies the use methods of air conditioner, audio system, cigarette lighter, glove compartment and other devices.

Chapter 5: Safety

It introduces the airbag, child seat, engine immobiliser, vehicle anti-theft, ABS, etc.

Chapter 6: Emergency

It introduces the position of tool box, spare tire and jack and common emergency handling methods .

Chapter 7: Maintenance

It introduces the daily inspection and maintenance methods, regular maintenance content and replacement of remote key, battery and window wiper.

Chapter 8: Technical data

It introduces basic parameters of the vehicle and recommended fluid specification.

Marking

★ WARNING

The content below such marking is to remind that you must or must not do the things to avoid or reduce the possibility of injury to yourself and others. Ignorance of such warning may cause personal injury.

★ CAUTION

Content below such marking is to remind that you must or must not do the things to avoid or reduce the possibility of damage to the vehicle and its equipment. Ignorance of such warning may cause damage to the vehicle and its equipment.



The circular mark with slash in the schematic diagram of this manual indicates “must not”, “never do it” and “never let it happen”.

This manual is applicable to all models of Haval 1. However, due to different vehicle configuration, such function or part may not be provided or installed for your vehicle.

★WARNING: *Do not refit the vehicle since the refitting may affect the performance of complete vehicle, especially safety and durability and even may violate the national regulations. Vehicle fault and performance reduction due to refitting are not in its warranty scope.*


★CAUTION: *This manual contains all latest product information before its release. This manual may be inconsistent with the vehicle because of continuous improvement and change of products. Great Wall Motor Company Limited reserves the rights to change without prior notice and shall not have the obligations to make the same or similar change to vehicles manufactured or sold before.*

In the motor which steering wheel is on the right, the actual location of some handle component will be different with the illustration showed in the manual.

No data, illustration and description in this manual shall be used as the basis for claims.

Search method of this manual

To allow the users to read this manual conveniently, its content and form are described in details as follows:

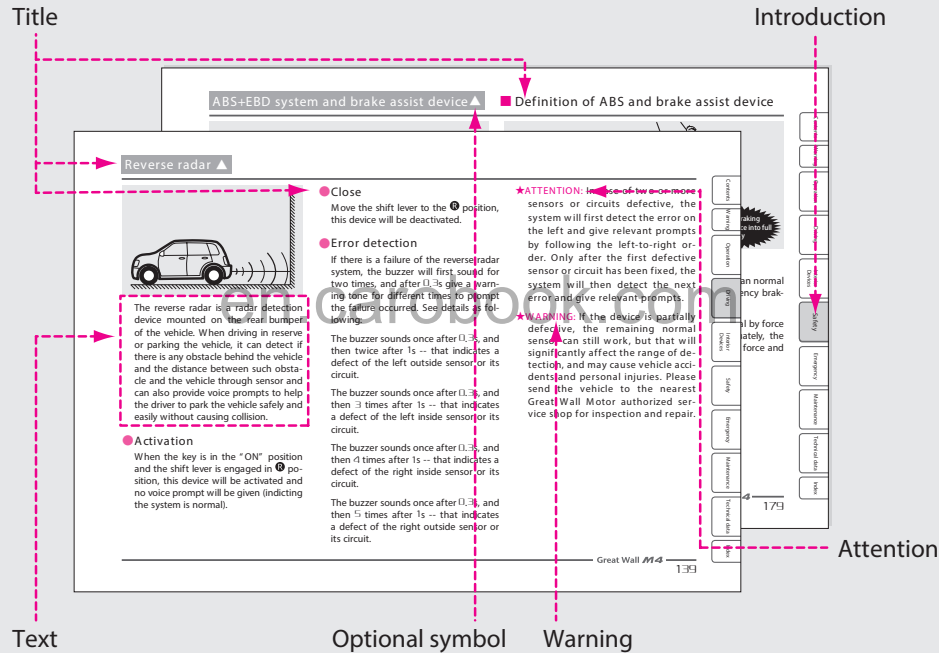

CONTENTS

Contents

1
2
3
4
5
6
7
8

Contents 1

Precautions for safe driving 7

Operation..... 63

Driving 97

Interior Devices..... 157

Safety..... 191

Emergency 219

Maintenance..... 241

Technical data..... 285

Index 295

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety


Emergency


Maintenance

Technical data

Index

■ Vehicle introduction

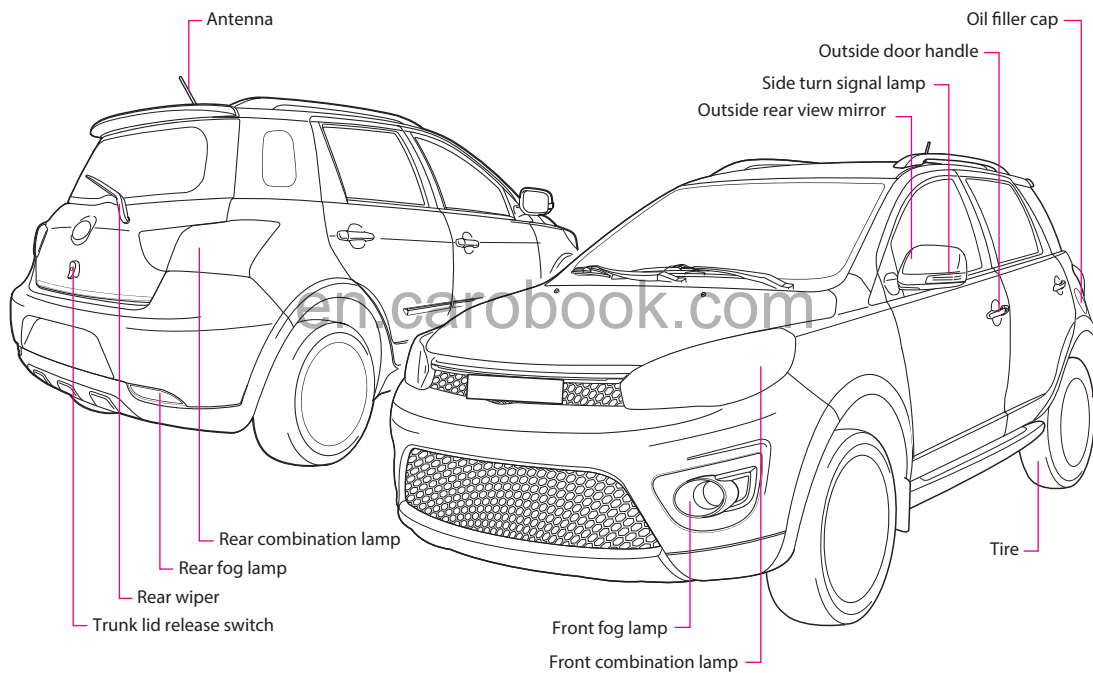

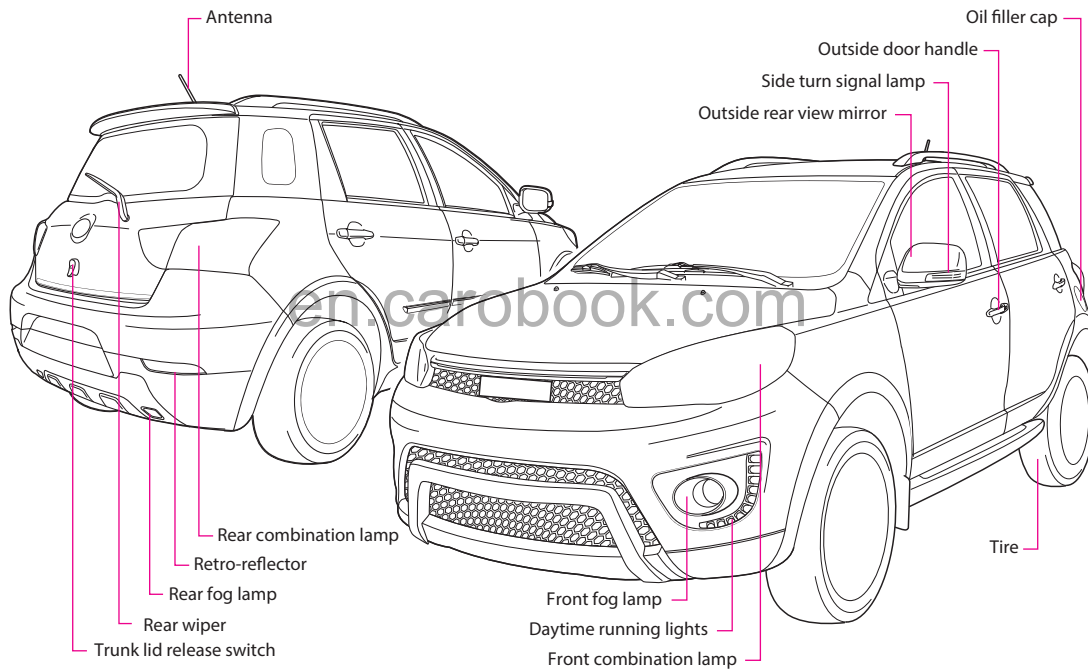

Contents

Warning

Operation

Driving

Interior
Devices


Safety


Emergency

Maintenance

Technical data

Index

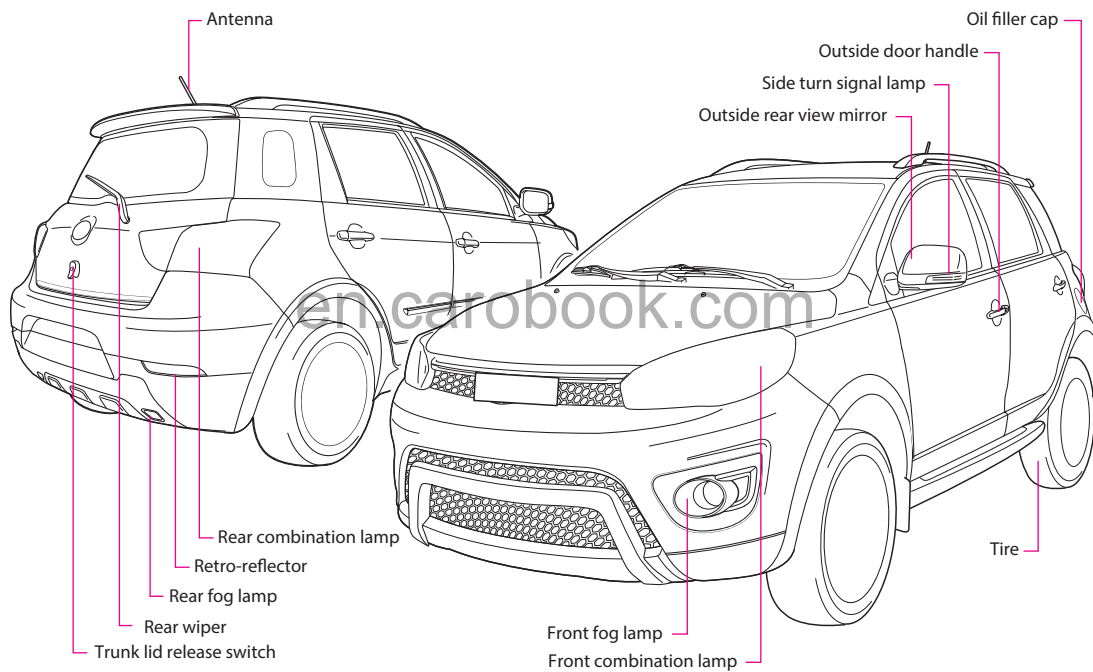

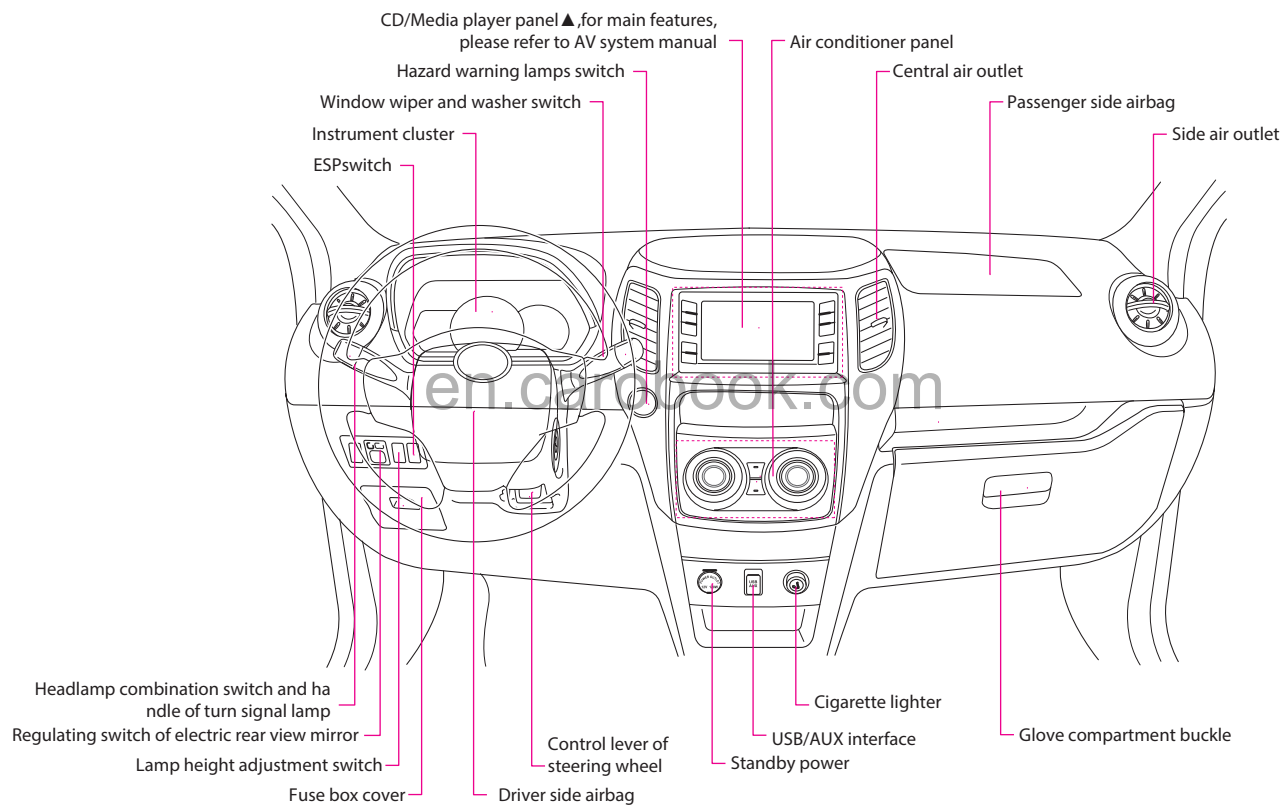

Precautions for safe driving

For safe and comfortable driving 8

Maintenance requirements.....	8
Preparation before leaving	9
Precautions for driving	13
Abnormal conditions during driving	20
Precautions during parking or stop	22
The tail gas of vehicle	24
Precautions for child passenger.....	26
Relevant precautions for seat	29
Relevant precautions for seat belt.....	32
Relevant precautions for the airbag	38
Relevant precautions for ABS and brake assist device with EBD▲	43

Driving device..... 44

Relevant precautions for automatic transmission vehicles.....	44
---	----

Maintenance..... 47

Precautions for check and maintenance ..	47
Relevant precautions for tire	49
Relevant precautions for battery	53
Relevant precautions for jack.....	55

Overheating and emergencies 57

Precautions for overheating	57
Precautions for emergencies	58

Other precautions..... 59

- **Make sure to maintain the vehicle.**

- It is the responsibility and obligation of users to provide daily and regular maintenance for the vehicle.

From the perspective of safety and environmental protection, the vehicle shall be maintained regularly.

Special maintenance tools shall be used for regular maintenance and the specified fluid shall be replaced. In addition, the parts replaced and the waste liquid discharged shall be treated. So please contact the special service station of Great Wall Motors.



- **Maintenance is one of the ways to diagnose the vehicle.**

The vehicle shall be maintained regularly.

Maintenance and replacement of necessary parts are very important to keep the vehicle in good condition.

- In case of any abnormality or bad vehicle condition found in daily maintenance, contact the special service station of Great Wall Motors immediately.

- Make sure that vehicle examination and maintenance are performed in special service station of Great Wall Motors.

■ Preparation before leaving

The following shall be followed before leaving. Otherwise, serious accident may occur, thus causing serious personal injury.


- **Do not extend the hand into the starting engine of the vehicle.**

Accident may happen. Make sure to start up the engine at the driver seat.

- **Before leaving, make sure that all doors are closed.**

Otherwise, the door may open suddenly during driving and accident may happen.

If the doors are not closed properly, the door ajar warning lamp will become on.

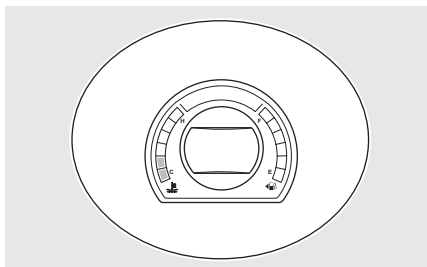

- **Before the water temperature gauge moves, do not press accelerator pedal excessively.**

1. Insufficient warm-up may cause abnormal combustion of unburned gas, thus damaging the catalytic device.
2. The movement of water temperature gauge indicates the warm up status.



- **The snow and fallen leaves on the vehicle body shall be removed timely.**

Do not only remove the snow on the wind shield before driving. During driving, the snow on the engine hood will melt into water as the engine temperature rises, thus corroding the vehicle paint. The snow on the window wiper may freeze the window wiper, and cause failure to use normally and even damage to motor of window wiper.


Furthermore, the snow on the vehicle roof may flood before the wind shield due to braking inertia, thus hindering the vision. If the snow is blown to the vehicle behind, this also may threaten the vehicle safety. The rear

wind shield is also an important vision window. If the snow is not removed, potential hazard exists.

You can remove snow during warm-up.




- **After the steering wheel is adjusted in stop status, confirm that the steering wheel is locked.**

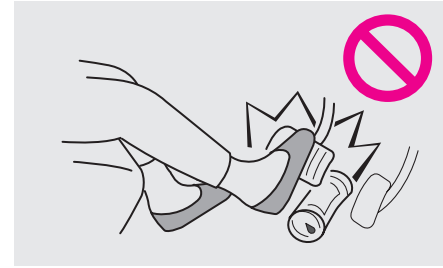

- **Do not place any article at the foot of the driver or under his seat.**

en.carobook.com

The articles at the foot of the driver or under the seat may get stuck under the brake pedal and accelerator pedal and cause failure to depress the brake pedal and accelerator pedal, thus leading to an accident. In addition, this also will affect the adjustment of seat position or seat locking and may cause an accident easily.

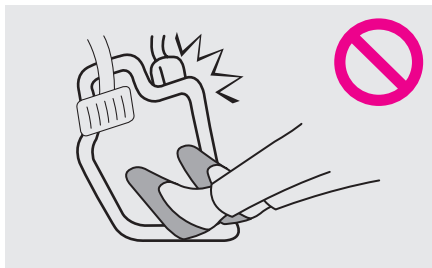

- **Do not use improper foot mat for this vehicle.**

The simple foot mat and disposable foot mat are very unsafe and its main threat is the disturbance to the pedal. Since such foot mat is very thin and soft, the foot of driver will slip to the position of pedal. If the foot slips to the position under the pedal, this may affect the travel of pedal and effect of braking and clutch; Slip to the position above the pedal may interference with the foot operation. In emergency, this may lead to a traffic accident.

The comfortable products cannot be at the cost of normal driving. Therefore, high-quality foot mat, flood carpet and other products shall be selected by the vehicle owner. For the

sake of safety, you'd better not use foot mat, especially disposable foot mat.



- **Do not place any article on the passenger seat or rear seats.**

In case of emergency braking or steering, the articles on the seat may fly out and hurt the passenger or the article may damage. And these articles may distract the driver's attention, thus causing an accident.

The articles shall be placed stably in the luggage compartment.




- **Do place the container or dispenser with fuel oil on the vehicle.**

Fire may occur by accident.

- **If the engine hood has even been opened before driving, confirm that the hood is locked.**

If the engine hood is not locked properly, the hood may open suddenly during driving, thus causing an accident.

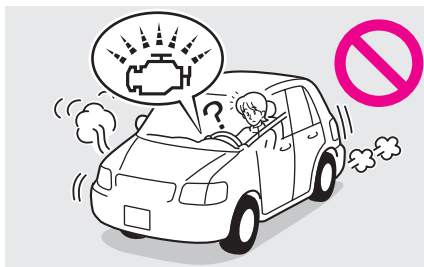

- **The following status indicates that the vehicle has faults. Continuing driving may not only affect the driving performance but also cause an accident. Please check the vehicle in the special service station of Great Wall Motors.**

- 1)Abnormal noise, smell or vibration
- 2)Abnormal condition of steering wheel
- 3)Insufficient brake fluid
- 4)Signs of leakage on the ground
- 5)Abnormality of instrument, pilot lamp, warning lamp, and other lamps.



- **Never drink and drive.**

It is prohibited to drink and drive according to the law.

Drinking and driving is very dangerous, since slight alcohol will influence the power of judgment, vision and attention, thus causing a serious accident.

■ Precautions for driving

Follow the precautions below during driving. Otherwise, a serious accident may occur or serious personal injury and even death may happen.




- **Do not shut down the engine while driving the vehicle.**

During driving, if the engine must be shut down in emergency, you only can turn the ignition switch to “ACC” position.

If the engine is in off-working state, the brake booster and power steering system do not work, which leads to poor braking efficiency and difficult operation of steering wheel. Thus, an accident may occur.

If the ignition switch is placed to “LOCK” position during driving, the engine will stall and the steering wheel will lock. Thus an accident may occur.

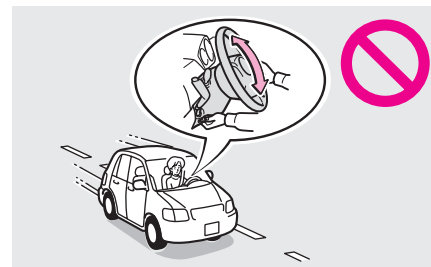

- **Do not adjust the position of steering wheel, rear view mirror, and driver seat in driving.**

Such adjustment may affect the normal operation of vehicle or the seat may displace suddenly. An accident may occur.


- **Do not drive when the rear view mirror is folded.**

Since the conditions behind the vehicle cannot be judged through the rear view mirror, an accident may occur easily.



- **Do not drive when you depress the pedal or pull up the hand brake.**


Otherwise, the brake pad may be worn excessively or the brake may overheat, thus affecting the braking efficiency and causing an accident.

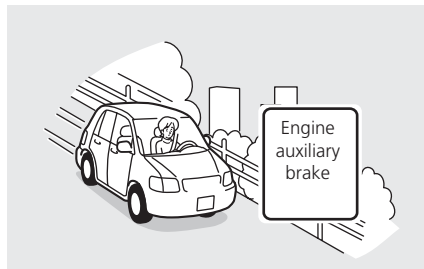

- **Use auxiliary braking during down sloping.**

If you depress the brake pedal continuously in down sloping, the braking efficiency may decrease due to overheating of the brake and an accident may occur.

- **To move the vehicle, you must start the engine.**
 - › If the engine is in off-working state, the brake booster and power steering system do not work, which leads to poor braking efficiency and difficult operation of steering wheel. Thus, an accident may occur.
 - › Never allow the vehicle to slide along the slope when it is in off-working state. Otherwise, an accident may occur.

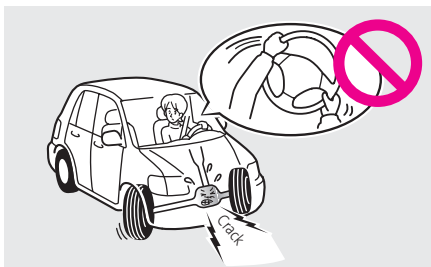

- **Do not keep the steering wheel in full position for a long period.**

Do not turn the steering wheel fully in either direction and hold it there for an extended period of time. Doing so may damage the power steering motor.




- **Use the vehicle mobile phone or cell phone only during driving.**

It is prohibited to use non-vehicle mobile phone or cell phone during driving according to the law.

An accident may occur when you answer the phone since your attention is paid to the phone.

When the driver uses non-vehicle mobile phone or cell phone, park the vehicle at a safe place.

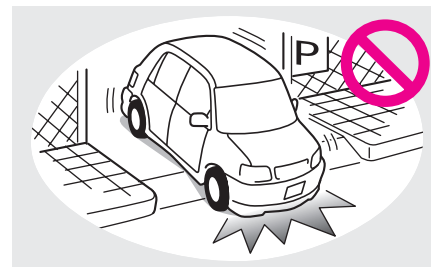

- **Operate carefully when you drive on uneven road.**


The bumper may damage when you drive in following road conditions. Please slow down and drive carefully.

- 1) When you drive on the road section with steps such as entrance of parking lot;
- 2) When you drive on the steep road section such as sky parking;
- 3) When you stop the vehicle on the road with deceleration strip or along the road shoulder;

4) When you drive on uneven road with ruts;

5) When you drive through the bumpy and rough road section;

6) When you drive from the flat road to ramp way or you drive from ramp way to flat road.

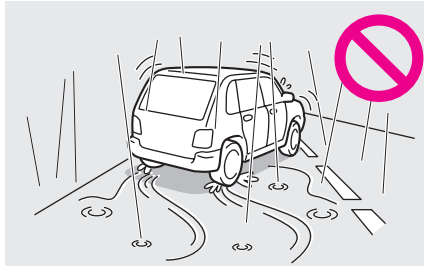


- **Drive carefully on the wet, snow-covered road, icy road and other slippery roads.**

In case of emergency braking, acceleration and steering on slippery road, the tire may slip to the side easily, and the vehicle may be out of control, thus causing an accident.

To change the gear up or down, the speed of engine will change rapidly. This may cause side-slip of vehicle and an accident may occur.


In cold weather, slow down when you drive on the bridge floor, road in the shade and other places where freezing may occur easily.

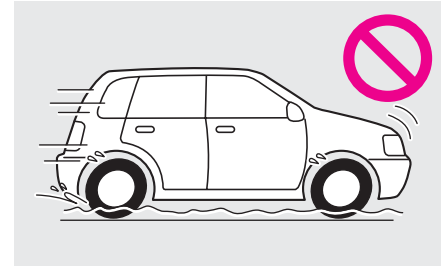

- **Drive carefully on the road with water.**

Driving on road with water may cause flameout of engine, short circuit of electrical elements and water ingress and damage to the engine. Thus, a serious accident may occur. In case of water ingress due to driving on road with water and engine flame-out, ask the special service station of Great Wall Motors for helping and checking the following.

- 1) Check the braking efficiency of brake.
- 2) Check the oil amount and quality of engine, transmission and differential mechanism.
- 3) Check the lubrication of drive shaft, bearing, joint, etc.

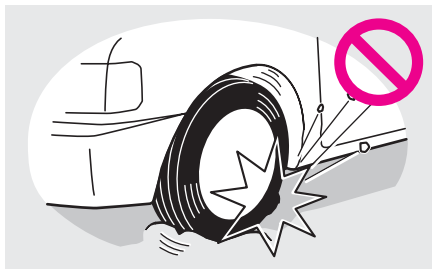

● **When the vehicle is trapped**


If the vehicle is trapped into the snow, mud and sand, operate it as follows:

- 1) Shut down the engine and pull up the hand brake;
- 2) Remove the mud, snow or sand around the trapped tire;
- 3) Place wood block, stone and other materials to increase the traction force of tire;
- 4) Restart the engine;
- 5) Accelerate carefully to get out of the trap.

★**WARNING:** To get the vehicle out of the pitfall by moving back and forth, make sure that nobody or on object is around the vehicle. Since when you push the vehicle, it will move forward or backward suddenly to get out the pitfall, be careful.

★**CAUTION:** To prevent damage to the transmission and other parts, follow the precautions below when you push the vehicle.

- Do not depress the accelerator pedal before you change gear with the shift lever or you change the gear of transmission completely to driving gear and reverse gear.
- If the vehicle cannot get out of the trap after several times of pushing, other traction methods shall be used.

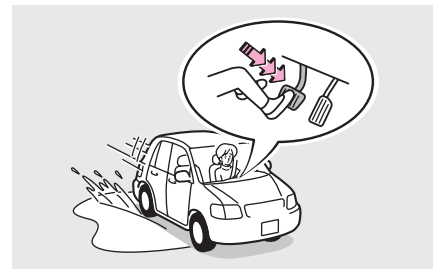

- **Depress the brake pedal gently after you wash the vehicle or drive on the road with water to ensure normal work of brake.**

If the brake pad gets wet, the braking efficiency will decrease and an accident may occur.

In case of poor braking efficiency, pay special attention to the surrounding safety and depress the brake pedal repeatedly to heat the brake until you confirm that it is normal.



- **In driving, the passengers shall wear the safety belt and shall not leave the seat or walk in the vehicle.**

Otherwise, the body, head and other parts of the body may be impacted and get serious injury during emergency braking.



- **Do not extend your hands or head out of the vehicle window or sunroof during driving.**

If so, you may be hurt by the window frame in emergency braking, thus causing serious injury and even death.

Do not sit beneath the sunroof opening to prevent serious injury and even death in an accident when the vehicle roof falls or you are thrown out of the vehicle.




- **To close the window or sunroof, do not hurt the hand, head or other part of others.**

To close the window or sunroof, the head and hand may be hurt, thus causing serious injury.

- **Do not drive when the glove compartment is open.**

During rapid acceleration of vehicle, the articles may be thrown out, thus causing an accident.

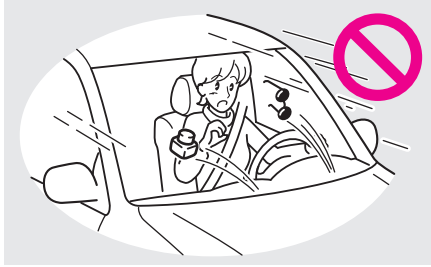

- **Do not drive when articles are placed on the instrument panel.**

This can prevent the driver's vision from blocking. In addition, this can prevent the passengers from injury when the vehicle is out of control and an accident occurs during rapid acceleration or sharp turn.

en.carobook.com

■ Abnormal conditions during driving




Fault warning lamp of brake system

- **Do not keep driving when the failure warning lamp of braking system is on.**

When the warning lamp becomes on, park the vehicle immediately at a safe place and contact special service station of Great Wall Motors.


When the engine is working, release the hand brake. If the failure warning lamp of braking system and failure warning lamp of ABS are on. At this moment, both the ABS system and braking system have fault. Please check and maintain the vehicle at special service station of Great Wall Motors.

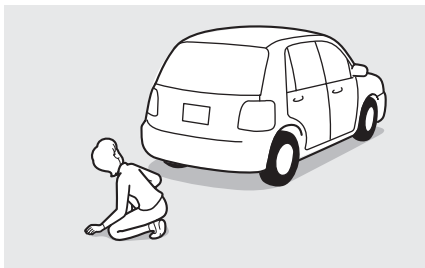

- **Park the vehicle at a safe place and check it when violent collision occurs under the vehicle body and to the tire and wheel.**

Check the brake fluid and fuel oil for leakage and the suspension parts, tire, wheel and parts of driving system for deformation and damage. Keeping driving in such state may cause an accident.

In case of any leakage or damage found, keep the original state and contact the special service station of Great Wall Motors.

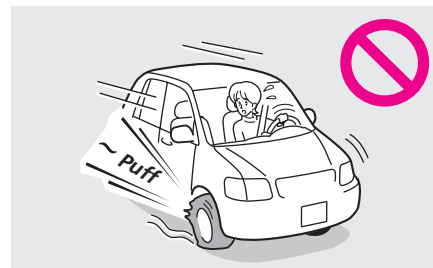

- **In case of tire burst or break during driving, keep calm to solve it.**

Hold the steering wheel tightly and depress the brake pedal for deceleration. Emergency braking or rapid turning of steering wheel may cause the vehicle to be out of control.

Consider if the tire bursts or breaks in any of the following circumstances.

- 1) Steering wheel vibration;
- 2) Abnormal vibration of vehicle;
- 3) Abnormal tilting of vehicle;

Do not drive in case of tire burst.

It is dangerous to drive when tire burst and an accident may occur. In addition, this may damage the tire,

wheel, suspension and vehicle body. Please replace it with the spare tire immediately.



- **The wear indicator lamp of brake pad on the disc brake will make warning tone when the brake pad needs replacement.**

In driving, if whistle or fraction noise is heard during braking, this reminds the driver that the brake pad has been extremely worn. Entrust the nearby special service station of Great Wall Motors to check and replace the brake pad.

Do not continue driving in case of warning tone or the brake disc may seriously wear, the braking parts damage and the braking efficiency will be affected, thus causing an accident.

★**CAUTION:** *Keeping driving when the worn brake pad is not replaced will damage the expensive brake disc. To reach the same braking distance as usual, depress the brake pedal with stronger force.*

★**WARNING:** *Do not use seriously worn brake lining or this will reduce the braking efficiency, thus causing an accident. Check the thickness of brake lining regularly.*

■ Precautions during parking or stop

Following the precautions below in parking or stop.


Otherwise, serious personal injury and even death may occur.

- **To leave the vehicle, pull up the hand brake, shut down the engine and lock the door properly.**

When you leave the vehicle, pull up the hand brake, shut down the engine and lock the door. To prevent the vehicle and articles in the vehicle from loss, do not place valuables in the vehicle.

Following matters shall be followed when you leave the vehicle. Otherwise, the vehicle may start in unattended manner and an accident may occur.

- 1) Place the shift lever on the gear.
- 2) Pull up the hand brake.
- 3) Shut down the engine.
- 4) Lock the door properly.

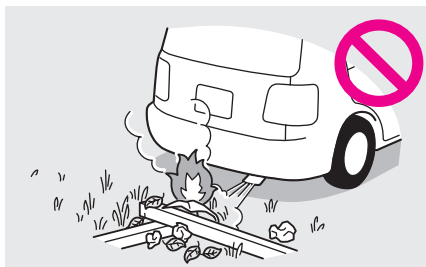

- **Do not park the vehicle near the combustibles.**

If there are inflammable substances behind the vehicle or near the exhaust pipe, fire may occur to the vehicle.


When there are timbers and plywood behind the vehicle, keep away from them at least 30cm. If not, the tail gas may cause color change or deformation and even fire.

Do not drive or park the vehicle on road with much grass, paper scraps and other inflammable substances. Since the exhaust pipe is hot, too close distance with the inflammable substances may cause fire.



- **Do not operate the engine under idle load for a long period in stop status.**

This may cause overheat of exhaust pipe and fire may occur to the vehicle.

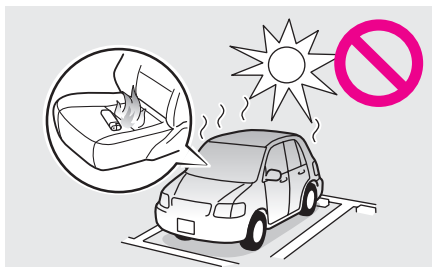

- **When parking the vehicle in hot weather, do not place the glasses, lighter, aerosol can, or carbonated drink can in the vehicle.**

Since the temperature in the vehicle is high, the spontaneous combustion, leakage or break of lighter and aerosol can may cause fire.

In case of break of carbonated drink can, the drink may contact the electrical parts, thus causing short circuit.

High temperature in the vehicle may deform the resin lens or glasses, thus causing cracking.



- **Shut down the engine to take a nap.**


During nap when the engine starts, you may shift the shift lever or depress the accelerator pedal by accident, thus causing sudden vehicle startup and an accident or fire due to overheat of engine.

In addition, if the exhaust pipe is damaged or the ventilation is not well, the tail gas may enter the vehicle, causing carbon monoxide poisoning, personal injury and even death.

■ The tail gas of vehicle

To prevent the tail gas poisoning, follow the matters below.

Otherwise, serious personal injury and even death may occur.

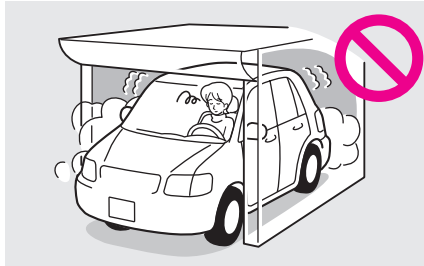


- **Do not run the engine for a long period in poorly-ventilated environment.**

In the poorly-ventilated places such as garage, the tail gas will gather easily, thus causing carbon monoxide poisoning, personal injury and even death.



- **Shut down the engine when you park the vehicle on snow-covered road or when snowing.**

When the engine is working and snow is covered in the surrounding area, the tail gas may enter the vehicle, thus causing carbon monoxide poisoning, personal injury and even death.

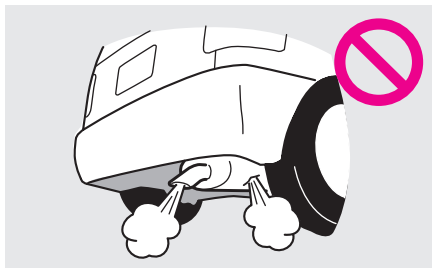


- **Check the exhaust pipe frequently.**

When the exhaust pipe cracks due to corrosion, the connectors are damaged or the abnormal noise of tail gas occur, check the vehicle at special service station of Great Wall Motors. Keeping use in such state may cause tail gas to enter the vehicle, thus leading to carbon monoxide poisoning, personal injury and even death.



- **Do not drive the vehicle when the rear door is open.**

Driving when the tail door is open may cause the tail gas to enter the vehicle, thus leading to carbon monoxide poisoning, personal injury and even death. Make sure that the tail door is closed completely before driving.

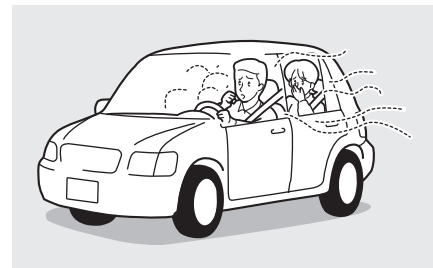


- **Take the following measures when you feel that the tail gas enters the vehicle.**

- › Roll down all window glass. Check and confirm that the rear doors are closed.
- › Adjust the air conditioner to fresh air mode and adjust the air flow to the maximum to allow the fresh air to flow into the vehicle.
- › Check it immediately at the special service station of Great Wall Motors. If not, this may lead to carbon monoxide poisoning, personal injury and even death.

■ Precautions for child passenger

Make sure to follow the precautions below when there are child passengers.

Otherwise, serious injury and even death may occur.

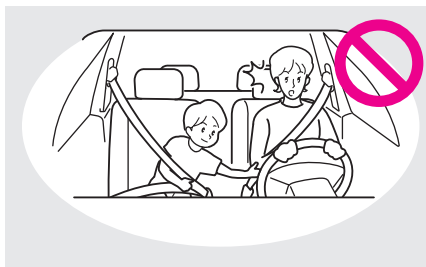

- **The child shall sit at the rear seat.**

If the child sits at the passenger seat, he will distract the driver's attention and may trigger the driving device, thus causing a serious accident. In addition, in case of sudden collision, the rear seat is relative safe.

When the child sits at the rear seat, use the child safety lock to prevent the door from opening due to maloperation.



- **The child shall wear seat belt.**

› If the child is held on the knee, in case of emergency braking or collision, and the adult may loosen the grip, thus causing injury and even death of the child.

› Even though the child sits at the rear seat, he shall wear the seat belt.



- **When the seat belt is correctly worn, if the seat belt reaches the neck or underjaw of the child and fails to lock the hip bone, use child seat with proper size.**



- **Do not let the child play the seat belt**

When the child plays the seat belt, if it wind around his neck, suffocation may occur due to failure to pull the seat belt. Thus, serious injury and even death may occur.

In such case, if the safety belt bolt cannot be released, use the scissors to cut off the safety belt.



- **Do not allow the child to operate the door, window and roof.**

If the child is allowed to operate, his hand, head and neck may hurt during closing, thus causing personal injury.

The child may be thrown out of the vehicle if the door is open in driving, thus causing personal injury and even death.

Please use the child lock and window locking device to avoid an accident due to maloperation of child. In addition, do not hurt the hand, head and neck when you roll up or down the window.



- **Do not leave the child alone in the vehicle when the adult leaves it.**
- › If the child is left in the vehicle in hot summer, he will suffer from heatstroke or dehydration, thus causing personal injury and death.
- › If the child is left in the vehicle, when he plays with the match, lighter (cigar lighter) and others, fire may occur.


- › If the key is in “ON” position or the engine is working, when the child left alone in the vehicle operates the electric window and sunroof, his hand, head and neck may hurt during opening and closing. Thus personal injury and even death may occur. If the driving device is triggered, an accident may occur. Never place the key in “ON” position or allow the engine to work when you leave the child in the vehicle alone.

en.carobook.com

■ Relevant precautions for seat


Follow the matters below when you use the seat.

Otherwise, an accident may occur and serious injury and even death may happen.

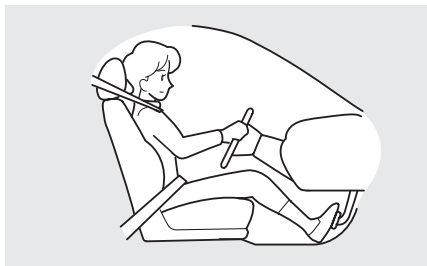

- **Adjust the seat to position convenient for correction driving.**

If not, maloperation may happen. An accident may occur. The safety effect of seat belt, airbag, head restraint and other devices cannot be brought into play.

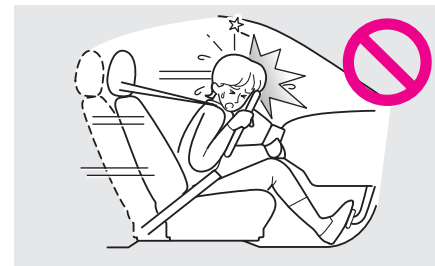

- **Do not adjust the driver seat during driving.**

If you adjust the seat during driving, the seat may move suddenly and maloperation may happen. An accident may occur.


- **Do not place articles under the front seat.**

Otherwise, the seat cannot be locked due to the articles, thus causing an accident.




- **Do not excessively tilt the seat backrest.**

If the seat backrest is tilted excessively, in case of collision or rear-end collision, the belt may come off from the waist or body and the organ may be pressed seriously, thus causing serious injury and even death.

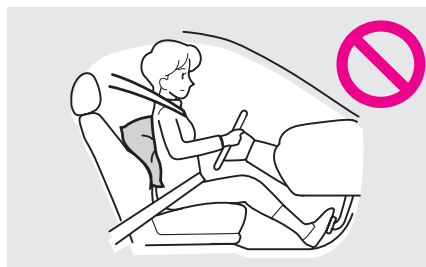

- **Do not place back cushions and other articles between the seat backrest and human body.**

This will not only affect the correct driving posture, but also cannot bring the seat belt and head restraint into play in case of collision. Serious injury may occur.

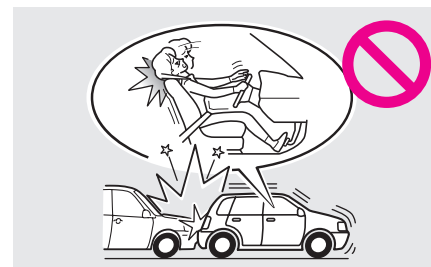

- **Do not drive when the head restraint is removed.**

In case of collision, the head may suffer from serious impact and serious injury may occur.




Please adjust the height of head restraint to flush with the upper ear.

-
- **The use of seat heater will easily cause low-temperature burn (erythema and blister) due to overheat so that enough attention shall be paid (to the vehicle type equipped with seat heater).**
 - The following persons shall be extremely careful when using the seat heater to avoid low-temperature burn (erythema and blister) due to overheat.
 1. Toddler, child, the elderly, patient and person with mobility disability
 2. Person with poor skin condition
 3. Overtired person
 4. Person with drinking problem and person who has eaten hypnotics (sleeping pill and cold drugs)
 - When taking a nap, do not use the seat heater so as to avoid low-temperature burn due to overheat.
 - During use, do not cover articles which have good heat preservation ability such as towel and seat cushion on the seat. It may cause abnormal overheat of the seat and thus cause scald and seat fault.
- en.carobook.com

■ Relevant precautions for seat belt

When using the seat belt, follow the precautions below.

Otherwise, serious injury and even death may occur.

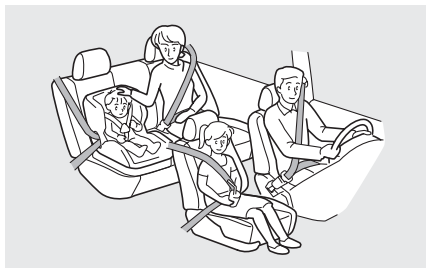

- **Driver and passengers shall wear the seat belt correctly.**

If seat belt is not worn or not worn correctly, your body will not be bound to the seat and easily hit other parts during emergency brake and vehicle collision accidents; moreover, your body may easily be impacted by the expanded airbag and this is extremely dangerous.

Besides, your body may easily be thrown out of the car and thus serious injury and even death may occur.

The user of vehicle is obliged to wear the seat belt and before driving the vehicle, the driver shall confirm that all passengers wear the belts according to the right method below.



- **When wearing the seat belt, keep your upper body straight and fully sit in your seat.**



- Do not hang the shoulder harness of seat belt over your neck or under your armpit.

The shoulder harness of seat belt shall be worn on your shoulder tight.

If the seat belt passes through the wrong body part, your abdomen will easily be squeezed intensely when vehicle collision accident occurs.


- Please adjust the retainer of the seat belt earnestly.

Adjust the seat belt, keep it away from your neck and make it hang on the middle part of your shoulder tight.




- Fix the waistband of the seat belt next to your hipbone at lower position.

If the waistband of seat belt is loosened and be away from your hipbone, your abdomen will easily be squeezed when vehicle collision accident occurs.

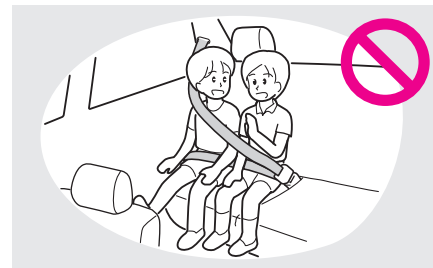

- One person wears one seat belt only.

If two or more persons wear the same seat belt, when vehicle collision accident occurs, the belt cannot disperse the impact, and the two persons may hit each other.

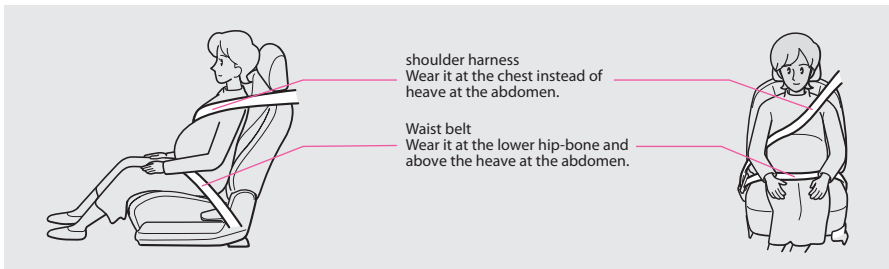

• **In addition, pregnant woman must wear the seat belt as well.**

Make sure to consult the doctor whether your are suitable for driving vehicles during each antenatal examination.

- The method of pregnant woman to wear seat belt is basically the same to the normal use method of seat belt; however, lower the waistband as much as possible and place it under the raised abdomen.

The shoulder harness shall pass through your shoulder but avoid your abdomen and place it at your chest instead.

- If the seat belt is not used correctly, when the vehicle brakes hardly or collide with other vehicles, the seat belt will tighten your raised abdomen and thus serious damage and even death will occur to both the mother and fetus.
- Persons who suffer diseases shall not only wear the seat belt correctly but also follow the doctor's advice.




• **The seat belt shall be fixed to the lock state and worn without any distortion and looseness.**

If the seat belt is twisted, loosened and not locked tight, it will not exert its function sufficiently when collision accident occurs even if your driving posture is correct; as a result, serious injury and even death may occur.


- When vehicle collision accident occurs, the seat belt is unable to disperse the impact force effectively if it is twisted and this is extremely dangerous.
- When the seat belt is twisted, adjust it so that it can be correctly worn.

If the seat belt cannot be adjusted, please consult the special service station of Great Wall Motors.

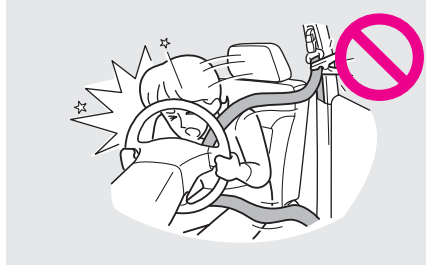


- Do not use washing clamp or pin to loosen the seat belt.

If the shoulder harness is loose, when vehicle collision accident occurs, your body cannot be bound tight since a certain distance exists between the seat belt and your body. As a result, your chest may easily be oppressed and this is extremely dangerous. Besides, your head may be impacted intensely when hitting the steering wheel and the expanded airbag.

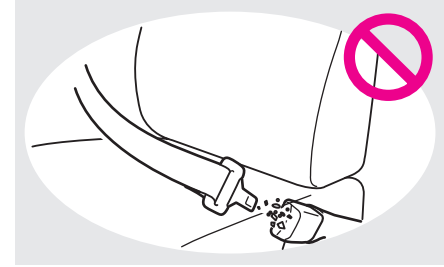

- When inserting the lock tongue into the lock body of the seat belt, make sure “crack” between lock tongue and lock body is heard to guarantee firm lock.

When foreign matters are found in the lock body, the lock tongue cannot be completely inserted into the lock body; as a result, the seat belt will jump out of the lock body.

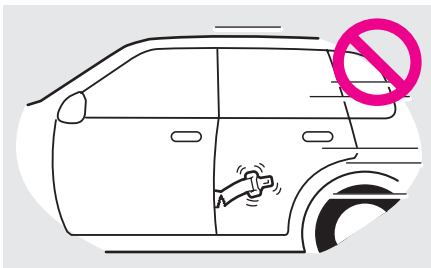

- Do not damage or wear the damaged safety belt.

If the broken seat belt is worn, when vehicle collision accident occurs, the seat belt cannot function effectively and thus serious injury and even death may easily occurs.

Make sure that seat belt and lock tongue are not clamped by the seat and car door so as to avoid damage.



- The seat belt which is split, worn or fails to work normally shall be changed immediately. Besides, do not wear the seat belt which has suffered intense impact or has been broken in accident, or the seat belt function well during the vehicle collision accident.

The broken seat belt is easily broken due to the impact of vehicle collision accident. In addition, since the belt cannot work normally, it is unable to exert its safety performance effectively.

The seat belt which cannot function well shall be replaced with an original new one manufactured by Great Wall Motors.



- Do not dismantle, disassemble, remold and install the seat belt.

The seat belt will not work normally and effectively during vehicle collision accident.

Please consult the special service station of Great Wall Motors about the installation, dismantlement and replacement.


- When wearing the seat belt with the pre-tensioner, be sure to follow the precautions below, or the pre-tensioner will not function well and thus serious injury and even death will easily occur.

Wear the seat belt correctly.

Adjust the seat to the correct driving position.

- Do not dismantle, disassemble, remold and install the seat belt with pre-tensioner.

If the seat belt with pre-tensioner is not handled properly, it may not work normally sometimes and be sure to go to the special service station of Great Wall Motors for repair.

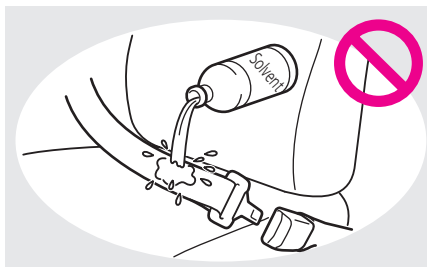

- Do not use organic matters such as benzene and gasoline to clean the seat belt. Moreover, do not bleach or stain the seat belt.

Otherwise, the seat belt performance will be influenced and cannot work normally and effectively during vehicle collision; as a result, serious injury and even death may occur.

Neutral cleaning solution or warm water shall be used for cleaning and it cannot be used until the seat belt is totally dried.


■ Relevant precautions for the airbag

When using the airbag, be sure to follow the precautions below.

Otherwise, serious injury and even death may occur.

The airbag is the auxiliary device of the seat belt and it cannot replace the seat belt.

The airbag can function well during vehicle collision accident only if you sit on the seat with the correct posture and wear the seat belt correctly at the same time; besides, the intense impact produced by airbag expansion may cause serious injury and even death.

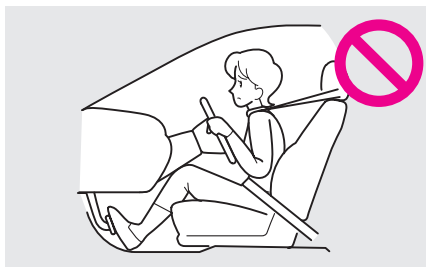


- **Adjust the seat to the right position and sit properly with your body close to the backrest.**

If your body covers or gets too close to the expansion part of the airbag, you may easily suffer from intense impact during airbag expansion.

- Driver

› **Sit properly so that you can drive easily and try to not be too close to the steering wheel.**

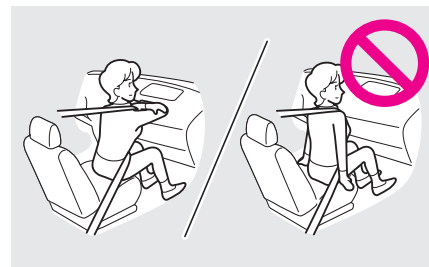


- Assistant driver

Try to be far away from the airbag at the assistant driver side and sit properly. Do not sit on the front end of the seat or close to the instrument panel.




- **Do not drive your car when article is placed on your knee or between any passenger and the air bag.**

Otherwise, the article will be impacted and hit your face when the airbag expands or it will hinder the normal expansion of the airbag and this is extremely dangerous.

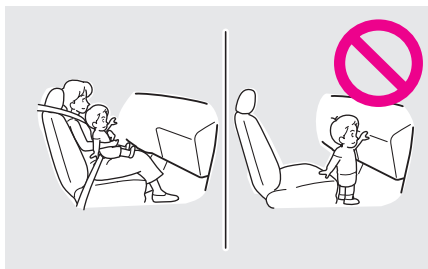

- **When driving the vehicle, do not let children stand in front of the air bag at the passenger side and do not embrace the child on your knees.**

The child will be impacted intensely when the airbag expands and it is extremely dangerous.

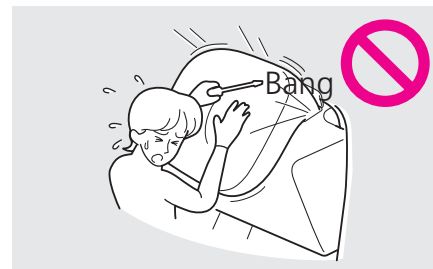


- **Make sure to follow the precautions below for the repair and maintenance of your vehicle.**


Otherwise, the airbag will not work normally or expand falsely and thus cause serious injury and even death.

- **Make sure to consult the special service station of Great Wall Motors about the dismantlement, disassembly, remolding and installation of the airbag, instrument panel and glove compartment.**


If your operation is not proper, the airbag may not work normally or expand falsely.

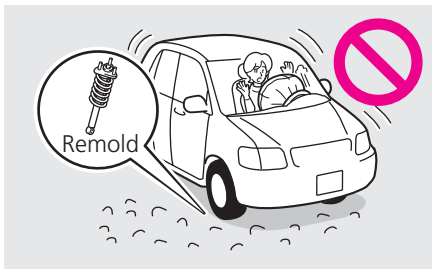

- Do not remake the suspension. If vehicle height or suspension stiffness changes, the airbag may expand falsely.

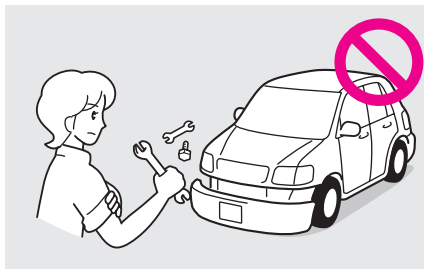

- Before repairing the forepart or cab of the vehicle, make sure to consult the special service station of Great Wall Motors. If it is not repaired properly, the impact delivered to the airbag sensor will change; as a result, SRS will not work normally and this is extremely dangerous.

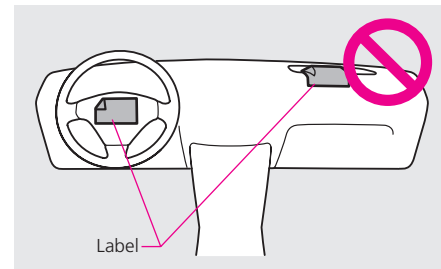

- **When installing car accessories, follow the precautions below.**


Otherwise, the airbag cannot work normally or it will expand falsely and thus serious injury and even death may occur.

- The expansion part of the airbag cannot be covered with articles or pasted with adhesive tape.

Otherwise, the airbag cannot work normally and this is extremely dangerous.



- Do not place articles such as spice box and umbrella on the dash board or console or the airbag at passenger side cannot work normally. Besides, the above articles may be blown up when the airbag is inflated.

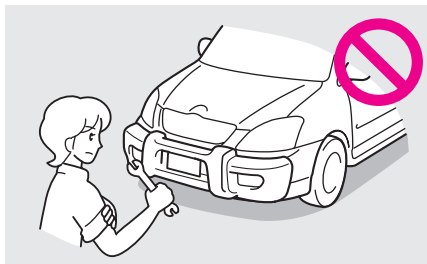


- Please consult a special service station of Greal Wall Vechiles for the installation of protective board and air deflector at vechile forepart. If the vehicle forepart is remolded, impact that delivered to airbag sensor will change and cause incorrect explosion or expansion of the airbag, which is extremely dangerous.



- After the airbag is expanded, do not contact any part of the air-bag immediately.

Since the constituent parts are very hot, serious injury such as scald are easily caused, so that immediate contact is extremely dangerous.

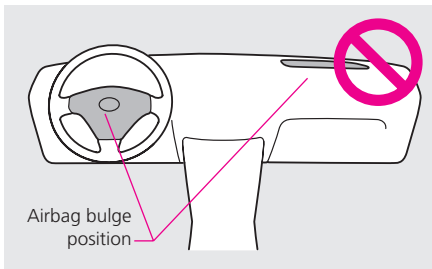

- **Do not flap the expanded part of the airbag hard.**

Do not flap the expanded part of the airbag hard or the airbag will not work normally or explode falsely, which can easily cause serious injury and even death.

en.carobook.com

■ Relevant precautions for ABS and brake assist device with EBD ▲

When using ABS and brake assist device with EBD, follow the precautions below.

Otherwise, accidents or life-threatening serious damage may happen.

Do not rely on the ABS and brake assist device with EBD excessively.

- **When ABS with EBD is working, the vehicle stability and steering wheel performance will be limited to some extent, so that free drive may cause accidents.**

Do not excessively rely on the ABS and brake assist device with EBD, control the travel speed, keep safe distance between vehicles and drive safely and carefully.


When touchdown limit of tire is exceeded or water film effect ※occurs, ABS device with EBD will not function.

※refers to the phenomenon that water film occurs between tire and ground and the tire loses the traction ability during high-speed driving in rainy days.

- **The purpose of ABS device with EBD is not to shorten the braking distance.**
- Under the following circumstances, compared with the vehicles which fail to install ABS device with EBD, the braking distance is sometimes longer instead. Make sure to control the travel speed and keep safe distance between vehicles.
 - › **When driving on sand-gravel road and the road after snow**
 - › **When crossing places with altitude differences such as road joints**
 - › **When driving in bad road conditions such as uneven road and rippled road**
- **The brake assist device is not the device that is able to exceed the ability of brake itself, so that pay attention to vehicles and distance between vehicles and drive safely and carefully.**

Make sure to follow the precautions below when driving automatic transmission vehicles.

Otherwise, accidents that cause serious injury and even death may happen.

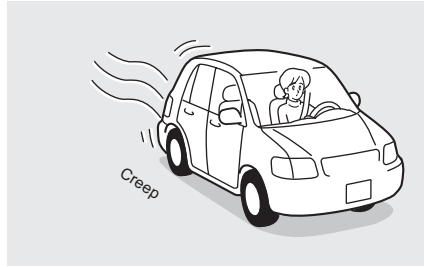


- **Characteristics of auto transmission vehicles**

- Creeping phenomenon

In operating mode of engine, when the shift lever is not at **N** gear, the engine power is on, so that vehicle will still creep without depressing the accelerator pedal and such phenomenon is called the creeping.

- Automatic transmission falls from high gear to low gear

During driving, the automatic transmission will be switched to low gear by fully depressing the accelerator pedal; at this time, the engine speed will rise and makes rapid acceleration possible. During such process, high gear will switched to low gear.

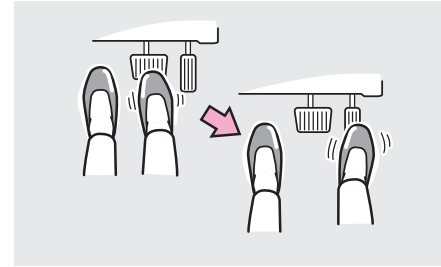


- **During driving, make sure the location of brake pedal and accelerator pedal and depress the correct pedal.**

› If the accelerator pedal is regarded as the brake pedal and depressed, the vehicle will accelerate suddenly and this will cause accidents, serious injury and even death.




- › When reversing the vehicle, the body will be twisted and it is a little bit difficult to depress the pedal, so make sure to depress fully.
- › When moving the vehicle slightly, also make sure to adopt the correct driving posture and fully depress the brake pedal or accelerator pedal.

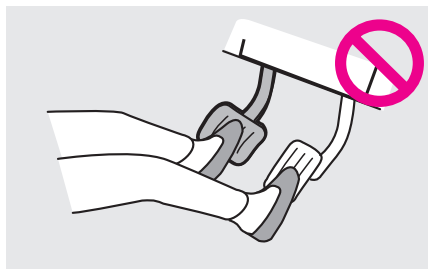

- Both brake pedal and accelerator pedal shall be depressed by the right foot.

If you depress the brake pedal with left foot, your reaction during emergencies will become slow and accidents may happen, so that it is extremely dangerous.

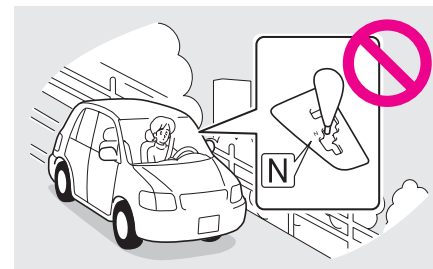

- When driving the vehicle, do not put the shift lever into the **N** gear.
- › When the shift lever is put into the **N** gear, the engine braking will not function and accidents may happen, so that this is extremely dangerous.
- › When driving for a long time when the shift lever is at the **N** gear, the lubricating oil in automatic transmission will easily age to cause faults.
- When the vehicle is moving ahead, do not engage the shift lever in the **R** gear.



- **Do not depress the accelerator pedal during parking.**

When the shift lever is not placed in gear **N**, the vehicle may start rapidly and cause accidents.


en.carobook.com

Strictly follow the precautions below for vehicle check and maintenance. Otherwise, it may cause serious accidents and injuries.



- **When checking the engine hood, shut down the engine and keep away from fire.**

If you contact or get close to the rotating parts such as engine belt or air fan, your hands, clothes and tools may be caught in and cause accidents. If the temperature of cooling liquid is relatively high, the cooling fan may rotate suddenly even if the engine is shut down and such phenomenon shall be noticed. Besides, keep the battery or fuel pipe away from fire to avoid explosion and serious injury.

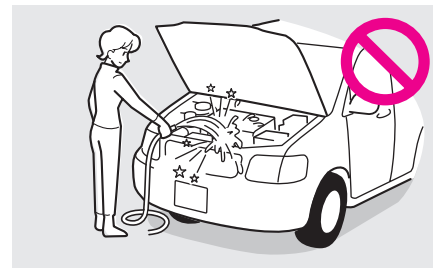


- **Keep water away from the engine hood.**

If water enters the internal engine hood, electrical parts will be easily short-circuited so as to cause fault or vehicle fire disaster.

- **Do not touch high-temperature parts including engine, exhaust pipe and radiator immediately after the engine is shut down.**

Otherwise, burn accidents will happen. Please pay attention to the lubricating oil and other liquid which may remain at high temperature.

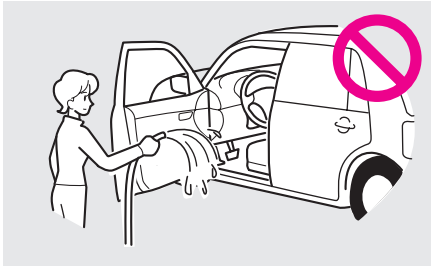

- **Do not flush the inside when washing the car.**

If the washing water contacts the stereo or the circuit of electrical part under the floor mat, fault or fire will occur.

- **When washing the car, keep the water away from the brake.**

If water enters brake, brake may be frozen to influence its braking performance, or it will become rusty and the parts will not operated accurately, which influences the normal traveling of the vehicle.

- **Make sure to use the fuse with specified specification.**

Otherwise, the conductor will become overheated and damaged by fire, thus fire may occur.

- **Pay attention to the quantity of brake fluid.**

If the quantity of brake fluid is not sufficient, the brake cannot work normally, thus accidents may occur.

- **At high temperature or operating status of the engine, do not add the car and window washing solution.**

Since the solution contains alcohol composition, fire may occur if it splashes on the engine.

- **After you overhaul the engine, do not leave any tool or cloth in the compartment.**


If the tools or cloth used for overhaul or cleaning are left in the engine compartment, fault may occurs; moreover, since the internal temperature of the compartment is very high, fire may easily occurs.

■ Relevant precautions for tire

For tires, follow the precautions below.

Otherwise, it may cause serious accidents and injuries.


- **Tires must be checked in daily checks.**
- The following items of tires shall be checked:
 - › Tire pressure
 - › If the tire is cracked or damaged
 - › Depth of tire thread
 - › **Wear degree of tires (serious eccentric wear of tire and obvious different wear degree with other tires)**

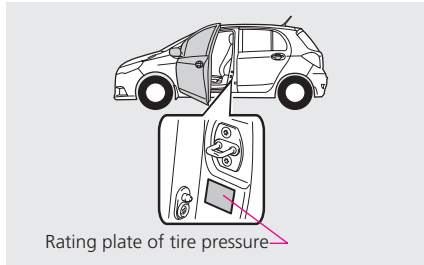

- **Make sure to adjust the tire pressure according to the specified air pressure.**

Adjust the tire pressure according to the tire pressure value specified in the label which is pasted on the door-frame at the driver side.

If the air pressure is lower than the specified value, not only vehicle stability will be influenced, but also the eccentric wear of tires will occur. When driving at high speed, continuous resonance will cause tire break or accidents. Hence, check if the pressure of tires including the spare tire is in compliance with the requirements during daily check.

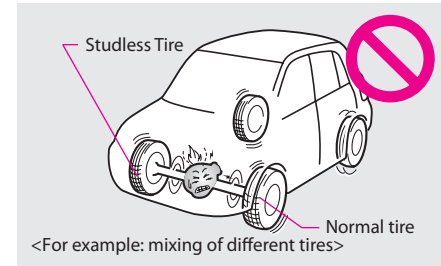

- **A single vehicle must use the tires with the same specification and the same brand.**

All the installed tires shall share the same specification, manufacturer, brand and pattern shape. Do not use tires with relatively large wear difference.

If tires which have different wear degrees are used, moving difference will occur to the four tires and meaningless load will be applied to the driving system parts (differential gear); as a result, the temperature of lubricating oil will increase and the oil will leak or sinter. Vehicle will be caught in fire when condition becomes serious.

- Under the following circumstances, mixed-use of tires with different wear degrees will influence the driving system parts, so make sure to check the tire pressure.


- › When the air pressure of four tires is obviously non-uniform
- › When the tire pressure is not in compliance with the specified value

- The wear degree of all the four tires shall be uniform. In order to extend the life of tires, the tires shall be replaced regularly.

- Do not replace the tires with other unknown brand products.

- If other tires whose brand is not specified or the four tires have the different specifications, the vehicle performance (fuel economy, vehicle stability, braking distance, etc.) will not function normally; moreover, since the rotational speed of the four tires is different, the sensor cannot detect the driving speed of the vehicle accurately and the following devices will not work normally.

- › ABS and brake assist device with EBD▲
- › GPS audio navigation device▲

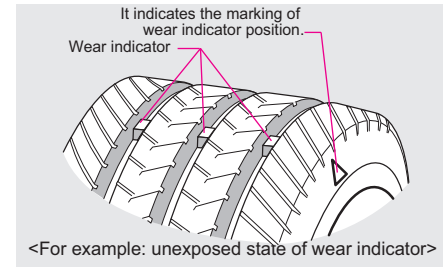


- Do not use excessively worn tires.

If tires with relatively shallow pattern or exposed wear mark (wear limit mark) are used continuously, the following harms may occur:

1. Braking distance becomes longer;
2. The vehicle fails to make turns normally when passing through an inundated road;
3. The tire breaks and accidents occur.

★**WARNING:** *The tire which is totally worn shall be replaced with a normal tire quickly.*

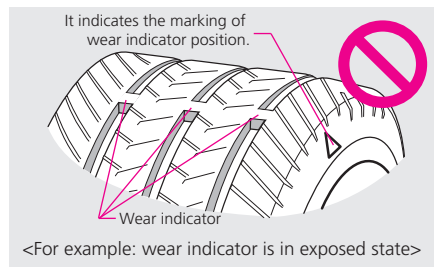

★ **CAUTION:** The diagram is just a schematic diagram for explanation and there may be difference when compared with the actual situation.


- Do not use the tire with abnormal situations including scar or crack on its side.

› If abnormal tire is mounted, you may feel displacement or abnormal vibration when driving the vehicle; moreover, damages beyond repair such as tire break or slipage may occur, thus accidents may occur. If you any abnormal vibration when driving the vehicle, please go to special service station of Great Wall Motors as soon as possible to receive check and install normal tires.

› If abnormal tires are installed, not only the normal vehicle performance (fuel economy, vehicle stability, braking distance, etc.) will be influenced, but also accidents may occur; in addition, adverse effects will be brought to other parts and vehicle fault will occur.

- Tires used in winter must share the same specification and brand with the standard tires; moreover, the specified tire pressure shall be reached.

Tires used in winter also must be standard tires. For the sake of safety, try to avoid high-speed driving when tires for winter use are mounted.

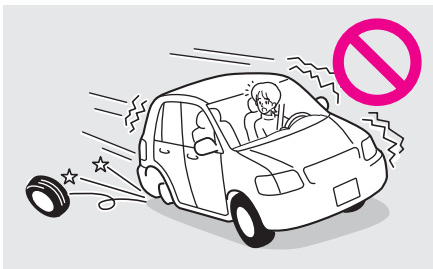

- **When changing tires, screw tight the retaining nuts of the wheel and make sure after that.**

› If the nuts are not screwed tight, the erection bolt of wheel or brake part will be damaged; or the wheels may be separated and thus accidents occur.

When tires are to be changed, it's best to go to a special service station of Great Wall Motors and screw the nuts tight with a torque wrench according to the standard value.

› Do not apply lubricating oil or grease to nuts or bolts used for tire installation. Excessive screwing will damage bolts or wheels. If the nuts are loosened, the wheel may get loose during driving and

thus accidents may occur.

- **When threaded part of bolts and nuts used for wheel installation and bolt hole of wheel is damaged or cracked, go to the special service station of Great Wall Motors to receive check.**

If abnormal phenomenon such as damage or crack occurs, nuts will get loose and cannot be locked tight no matter how hard you screw; as a result, the wheels will be separated from the vehicle and accidents may occur.

- **Try to drive slowly when passing through the uneven road.**

When the vehicle passes through uneven or rough and rugged road, tires and wheels will be damaged due to impact with the road.

- **Keep away from the sidewalk shoulder when driving.**

It may cause damage to tires and wheels.

- **Do not touch the wheels or part surrounding the brake immediately after parking.**

The temperature of area surrounding wheels and brake is still high after parking. Be careful not touch the tire by hands or feet when changing it so as to avoid scald.

■ Relevant precautions for battery

Make sure to follow the precautions below for the use of battery to avoid serious injury.



- **When connecting auxiliary cable to charge the battery, pay attention to the connecting sequence and parts.**

The combustible gas produced by the battery may cause fire disaster or explosion and thus serious injury such as burn will occur.


- **Keep away from the battery when the engine is working or being charged.**

During charging, battery liquid which contains high toxic and corrosive dilute sulphuric acid may be blown out and if the liquid contacts eyes or skin, serious injury such as blindness will occur.

In case of that, clothes shall be taken off immediately and skin part that contacts the liquid shall be washed with large amount of water; after that, doctor's check shall be received.

- **Keep the battery away from fire.**

Otherwise, combustible gas leaked from the battery may cause accidents such as fire, explosion and burn, and thus serious injury will occur.

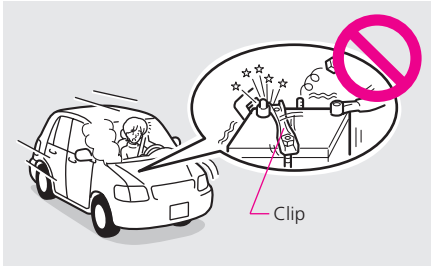

- **When changing the battery, fix the clamp and screw tight the nut at the correct place.**

If the clamp is not fixed at correct position or the nut is not screwed tight, the clamp may fall off during driving; as a result, short-circuit will occur and the vehicle may be caught in fire.


en.carobook.com

■ Relevant precautions for jack


Follow the precautions below when using the jack.

Otherwise, accidents or serious injury and even death may occur.

- **When using the jack, make sure the vehicle is parked at a smooth place and support the tire with the retaining device at diagonal position of the wheel. In the meantime, pull up the hand brake.**

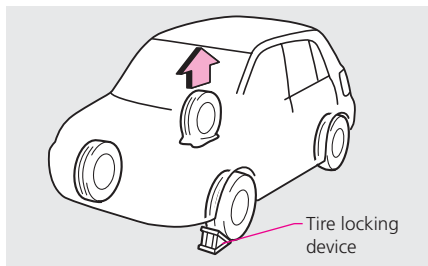

- › If the vehicle and jack move, serious injury may occur. The tire retaining device can be purchased at the special service station of Great Wall Motors and please consult the special service station of Great Wall Motors for details.
- › If tire retaining device is not available, you can use a large stone that can fix tires instead.

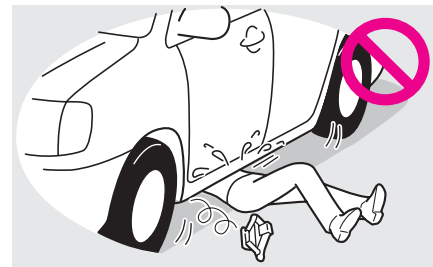

- **Never stay under the vehicle held by the jack.**
- › If the jack moves, human body will be pressed under the vehicle and thus serious injury or death may occur.
- › The jack provided along with the vehicle can only be used to support single side and replace the tire at the single side and it is prohibited to support both sides of the vehicle. Car lift shall be used to repair other faults.

- **Follow the precautions below when using the jack to avoid vehicle body damage or serious injury.**

- › Do not use the jack when the vehicle is carrying persons.
- › When using the jack, do not clamp articles at top or bottom of the jack.
- › When using the jack, confirm if the jack is in accurate position.
- › The uplifted height of the vehicle body shall be suitable for tire replacement.
- › Shut down the engine before using the jack.
- › When lowering the uplifted vehicle body, keep an eye on the surrounding condition to guarantee safe.

- **The jack provided along with the vehicle is the dedicated tool for the user.**

Do not use the jack for other vehicles or use jacks accompanied by other vehicles. Maloperation will cause accidents.

- **Keep the tools or jack provided along with the vehicle in the designated location after using them.**

Placing at will may cause accidents.

en.carobook.com

Overheating and emergencies

■ Precautions for overheating


Make sure to follow the precautions below for overheating.

Otherwise, serious injury may occur.



- **When hot gas emits from the engine hood due to engine overheating, do not easily open the hood until no hot gas emits anymore.**

Since the temperature in the engine compartment is relatively high, serious injury such as scald may occur. Even if no hot gas is coming out, some parts are still very hot, so be careful when opening the engine hood.

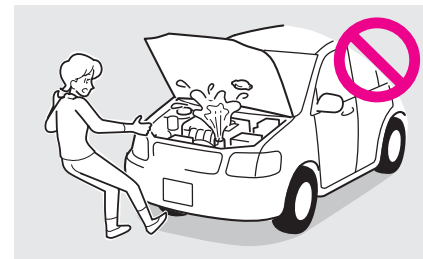

- **When the radiator and overflow tank are relatively hot, do not open the hood of the radiator or overflow tank.**

The emitted hot gas or hot water may cause serious injury such as scald.

If the hood is required to be opened, it shall be opened slowly by covering it with cloth after the temperature of radiator and overflow tank is decreased.


■ Precautions for emergencies

Make sure to follow the precautions below.

Otherwise, major accident or severe injury may occur.


- **When your vehicle is trailed by another vehicle and the engine is not started, operate the steering wheel and brake carefully.**

- › Since the engine is not started, power steering device and brake assist device cannot function effectively; as a result, the steering wheel is difficult to be operated.
- › **Be extremely careful when driving the trailed car.**

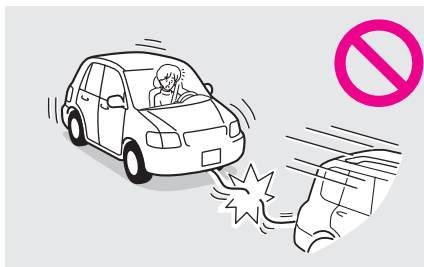

- **During dragging, do not make driving operations which produce great impact to the towing ring or towing rope such as sudden start.**

It may damage towing ring or towing rope and if person is contacted, serious injury may occur.

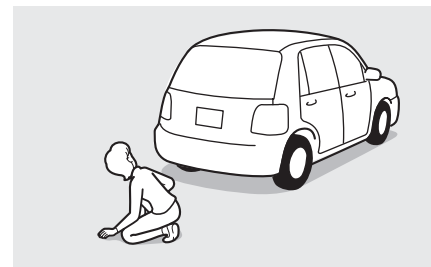

- **Before starting the engine after the accident occurs, confirm if there is fuel leakage.**

Confirm the ground under the vehicle and if liquid leakage is discovered, the fuel oil system may be damaged (except the air-conditioning liquid). If the engine is started in such condition, the fuel oil may be ignited and cause serious accidents; so do not start engine first. Instead, you shall consult and notify relevant situations to the special service station of Great Wall Motors at this time.

Other precautions

Make sure to follow the precautions below.

Otherwise, serious accident, or serious injury and even death will occur.

- **Remolding the machine illegally is not allowed.**

- › **Adopting the component not designated will be the behavior of illegal remolding.**

- › **If vehicle height is reduced, or wide tire or components that are inconsistent with the performance and function of the model is adopted, severe accident or serious injury will occur.**

- › **Remolding of the steering wheel is never allowed. Since built-in airbag is provided inside the steering wheel, if the operation is improper, normal working state will be affected, or the airbag expands due to accidental explosion, it will cause serious injury or even death.**

- › **It is prohibited to retrofit the exterior lighting and signaling devices.**

- › **It is prohibited to mount any ad-**

ditional exterior lighting and signaling devices beyond the relevant compulsory standards.

- › **Please consult the special service station of Great Wall Motors when any of the following situations occurs.**

If the nuts of different types or not designated are adopted when replacing the tires, wheels and wheel mounting screws, it will bring about inconvenience while driving and form the behavior of illegal refitting.


Assembling or disassembling the electrical equipment and wireless communications components will bring about adverse influence on electrical components, cause vehicle to break down or lead to fire and other accidents.

- **When using ash tray / tank, do remember to extinguish the flame of the match and cigarette butt and then cover the lid.**

If the ash tray lid is not covered, it might cause fire accident. Please never put the inflammable substances such as paper scraps into the ash tray.

- **Nothing else can be placed in the frame except water cups and beverage tank.**

When emergency braking or vehicle collision occurs, the substances in the cup holder might be flung away, which will injure the passengers.

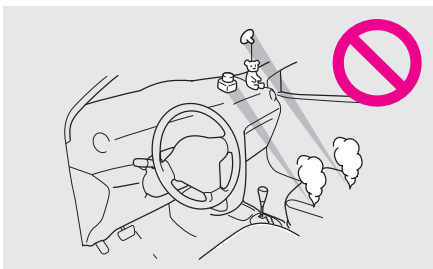

- **The vacuum suction cup shall not be attached on the window pane.**

The vacuum suction cup might result in lens effect, which is likely to cause fire disaster.

- **Never attach the polyethylene-made suction cup or gasket on the color glass such as infrared ray reflective glass or invisible glass.**

The compositions contained in polyethylene are likely to cause discoloration in the glass.

- **When the exterior rear view mirror heater▲ is operating, the mirror surface will become hot. Therefore, please never touch it with your hands.**

Otherwise, you will get burnt.

- **When replacing the key battery, please never allow the children to swallow the battery and other components mistakenly.**

If it is swallowed by mistake, it is likely to cause serious injury.



- **It is prohibited to carry persons in the trunk.**

When emergency braking or collision occurs to the vehicle, the persons are likely to be flung away from the vehicle and get injured or even killed.



- **The trunk lid shall be closed by pressing from the outside the door.**

If the user closes the trunk lid by using the assist grip directly, their hands are likely to get clamped and suffer from serious injury.

- **Never protrude articles out the roof.**

The articles might get hooked or collide with the things outside the vehicle and cause accidents.

- **Never make the beverage leak into the switches inside the vehicle.**

If the switches at the instrument panel, the storage box of the sub-instrument panel and the door are exposed to the beverage, which is likely to cause failure and lead to vehicle fire accident. Please consult the special service station of Great Wall Motors immediately if it is dripped with beverage by carelessness.

- **Do not touch the silencer while the engine is still working or shut it down just now.**

When the engine is working or is shut down just now, the silencer is in high temperature status. So, when unloading goods, if people touch the silencer by carelessness, they are easily to get scalded.

Memorandum

en.carobook.com

2

Operation

Basic operation.....	64
Key information	64
Opening and closing of the door	65
Opening and closing of tail door.....	68
Opening and closing of window	72
Opening and closing of sunroof▲	74
Method for adjusting steering wheel	75
Method for adjusting rear view mirror.....	76
Opening and closing of engine compartment cover	78
Opening and closing of oil filler cap	80
Correct driving posture.....	82
Method for adjusting seats	83
Method for using electric seat heater▲ ...	87
Method for using safety belt.....	89
Precautions for using safety belt	92

Contents

Warning

Operation

Driving

Interior
Devices

Safety


Emergency

Maintenance

Technical data

Index

Basic operation ■ Key information

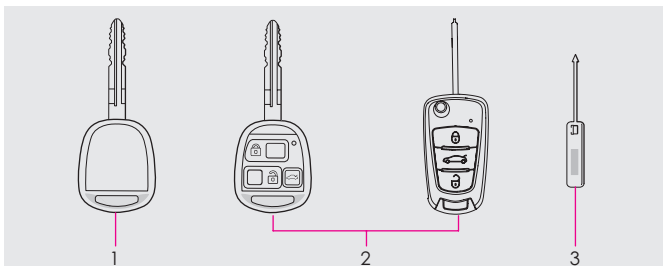

1. Mechanical key

2. Remote key

3. Key No. plate


This vehicle is equipped with two keys, including the remote key, which is optional, depending on the vehicle grade.

● Key No. plate

The key No. plate bears the key number intended for providing new key.

★**CAUTION:** You shall keep this key No. plate in safe place, because only the information on this plate can be used to prepare the key.

When purchasing new vehicle or transferring the vehicle, you should send the plate to the vehicle owner.

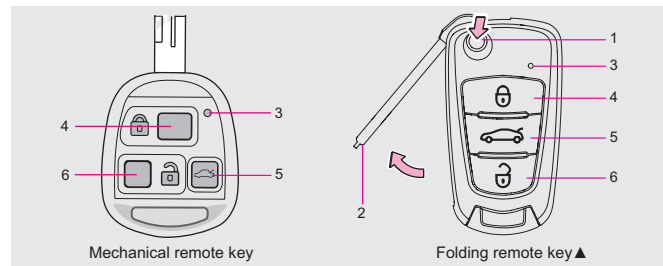

● Remote key

1. Mechanical key lock knob

2. Mechanical key

3. Indicator lamp

4. Locking switch


5. Trunk lid starter switch

6. Unlocking switch

Convenient function▲: The key is in the ignition switch, it can unlock the door from a distance.

- If the effective range of remote key is reduced, it suggests that the battery power is low and the battery shall be replaced.
- Never hand the key to any unauthorized person.


■ Opening and closing of the door

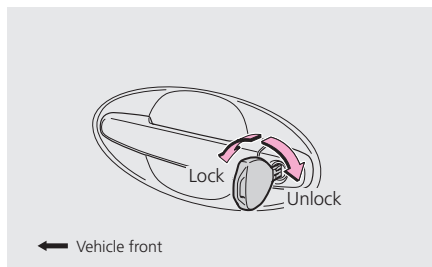

● Key operation

- › Lock: Turn the key towards the front of the vehicle
- › Unlock: Turn the key towards the back of the vehicle

★ **CAUTION:** The operation can lock or unlock all the doors at the same time.

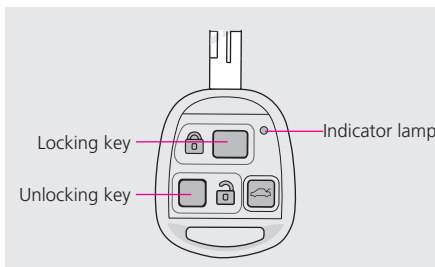

● Remote control

The locking or unlocking of all the doors can be realized by pressing the keys on remote controller.

See details as following:

1. Locking key

When the door is locked, the turn signal indicator will flicker once and the horn will beep once.

Vehicle locating function▲: Press the lock button for a long time, the turning signal lamp flashes several times, the horn sounds 3 times.

★ **CAUTION:** The door cannot be locked if the door is not closed or not firmly closed.

2. Unlocking key

When the door is unlocked, the turn signal indicator will flicker for twice and the horn will beep for twice.

Contents

Warning

Operation

Driving

Interior
Devices


Safety

Emergency

Maintenance

Technical data

Index

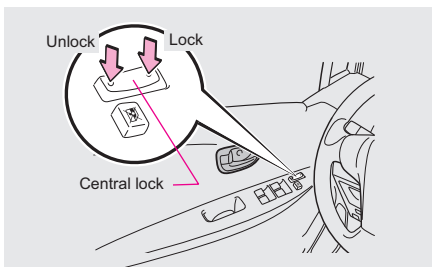

● Central control lock operation


The driver can lock or unlock all the doors by pressing the central control lock switches.

● Working conditions

1. Irrelevant to position of key.
2. The switch will manifest malfunction if it is pressed continuously. Move your hand temporarily away from the switch and then press it again.


● Anti-lock function by mistake ▲

if the door on the driver's side is open, you cannot lock the door by central locking.

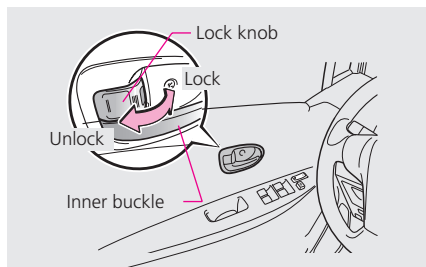

● Operation of interior locking button

The locking and unlocking of doors can be realized by turning the locking button inside the rotary door by following the figure.

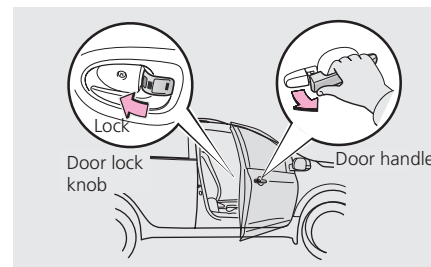

● Other operations

- › After setting the interior locking button at the position of locking, close the front door under the status when the door grip is pulled up, thus, the front door is directly locked.
- › After the rear door locking button is locked, directly close the door, and the rear door will be locked.


★**CAUTION:** Lock the front door by using this method and make sure that the key is not left in the vehicle.

● Speedy function

Even the locking button inside the driver's door is locked, pull the door buckle and the door will be opened.

★ **WARNING:** Before driving, please confirm that all the doors are locked.

If the door is not locked, the door may open abruptly during the driving, which is likely to cause accidents.

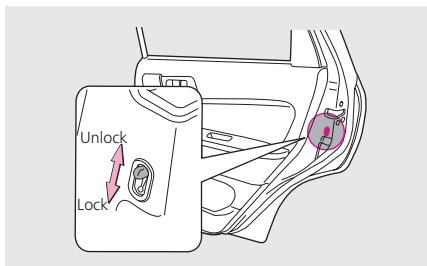


● Child safety lock

If there are child passengers within the vehicle, we recommend that they be seated in the comparatively safer rear seats where child safety locks are available with the corresponding vehicle doors to prevent child on the rear seat opening the door unexpectedly.

★ **WARNING:** Only the rear doors are equipped with child safety locks. If one or more children are sitting in the rear seat without an accompanying adult, please activate the child safety locks for the two rear doors to prevent inadvertent opening of the vehicle doors, which may then lead to accidents.

★ **CAUTION:** When the child safety lock is turned on, doors can only be opened from vehicle outside by pulling exterior door handle.


■ Opening and closing of tail door

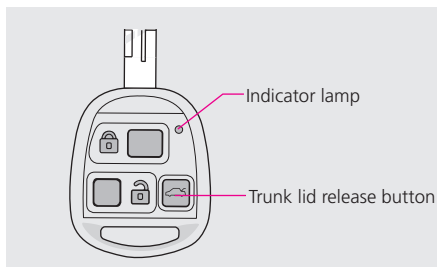

● Method for opening tail door

1. The unlocking of trunk lid can be realized by following several methods below:

- › Press tail door starter key on the remote key (the remote key is not in the ignition lock).
- › Press the unlocking key on the remote key (the remote key is not in the ignition lock).
- › Press the unlocking button of the central control switch.

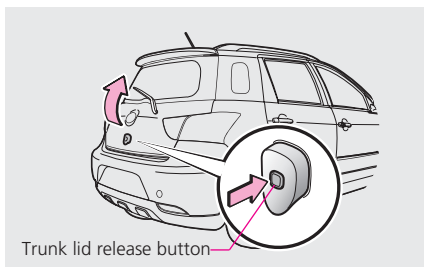


2. Press the trunk lid opening button and pull up the handle, the trunk lid will be opened immediately.

- › The tail door can be opened in 60s after the tail door is unlocked by pressing the tail door starter key on the remote key.
- › The tail door can be opened in 30s after the tail door is unlocked by pressing the tail door starter key on the remote key.
- › The tail door can be opened at any time after the tail door is unlocked by pressing the unlocking button of the central control switch.


★ CAUTION:

The supporting rod may be unable to prop the truck door up automatically when the ambient temperature is lower than 0°C .In this case, you may open the truck door manually.

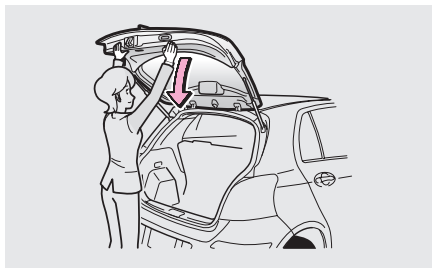

● Method for closing the tail door

1. As is shown in the figure below, pull downwards the assist grip of the tail door and release the assist grip after the tail door is completely closed.

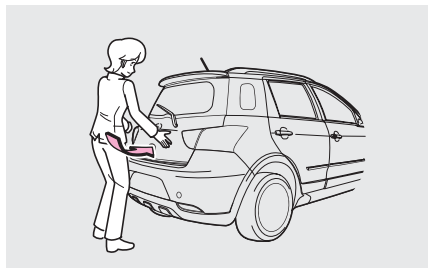

2. Press the tail door slightly from the outside and make it completely closed.




★ WARNING:

- The trunk lid shall be closed by pressing from the outside the door. If the user closes the trunk lid by using the assist grip directly, their hands are likely to get clamped and suffer from serious injury. In addition, it is also required to pay attention to the bag or necktie carried along.
- Never allow the children to operate the tail door switch. When closing the tail door, the hands, head and neck may be clamped and it causes serious injury.

en.carobook.com

★**CAUTION:**

- When operating the tail door, if you slam it with too much force, it might be damaged.
- Special attention shall be attached to the closing and opening of tail door in environment with strong wind.
- The opening of tail door under strong wind might be too large, which will result in the deformation of tail door.
- Under the status the engine is not operated, do not keep the lighting lamps in trunk for too long, for it may result in low power in the battery.
- Never forget the key in the trunk

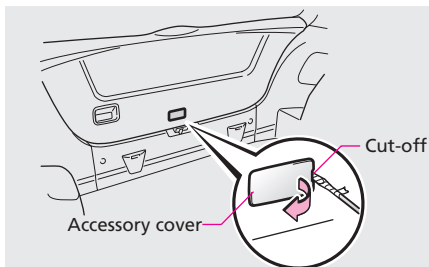


★**CAUTION:** To avoid the scratch, please wrap rubber strip and the like articles at the tip of screwdriver.

● **Tail door emergency opening device**

When the remote key battery or vehicle battery is run out, or the tail door cannot be opened from the outside, it is advised to open the tail door from the inside by operating the emergency operating lever.

1. **Open the cabin door with keys and enter the vehicle.**
2. **Fold the rear seats.**
3. **Open the garnish cover of tail door emergency opening device.**

Insert the slot type screwdriver into the incision of the garnish cover and pry it, then remove the garnish cover.

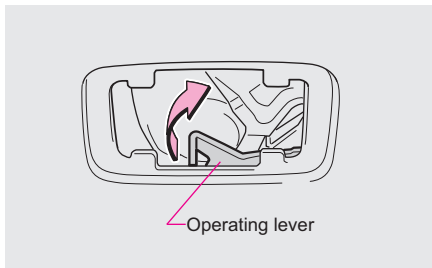

4. Dial the operating lever by following the direction stated in the figure and the tail door will be unlocked.

5. Open the tail door.

★**CAUTION:** *In normal conditions, if you have to use this operating lever to open the tail door, it indicates that something goes wrong with the tail door, in that case, please consult the special service station of Great Wall Motors and invite them to check your vehicle.*

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety


Emergency

Maintenance

Technical data


Index

■ Opening and closing of window

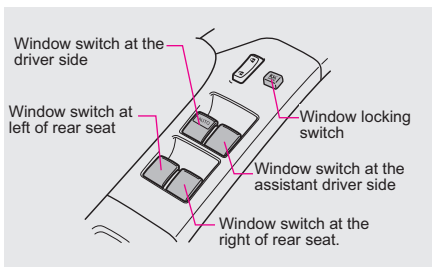

● Window switches at driver's side

The hoisting of corresponding window pane can be realized by operating the various window switch at driver's side.

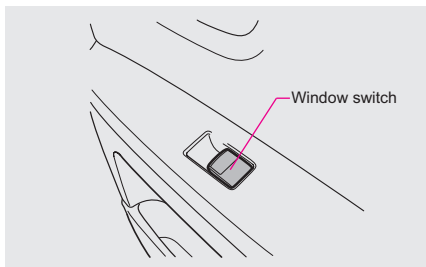

● The window switches at passenger side and the window switches at rear seats

Operating the window switch at passenger side and window switch at rear seat can only lift the corresponding window.

● Method for rolling up or down the window

- › Press the window switch, the window pane is rolled down, release the switch, the window pane will remain in the current position.
- › Pull upwards the window switch, the window pane will rolled up, release the switch, the window pane will remain in the current position.

• Function of automatic descending

The window switch at the driver side has the function of automatic descending. Release the switch after pressing it to the lowest position, the window pane will automatically descend. If you want to make the window pane stop during the automatic descending, you can pull upwards the switch and then release it.

● Working conditions

When the key is at the position of "ON", the rolling up/down of the window can be realized.

★ **CAUTION:** *Do not use the window switch at the driver's side or the window switch at other doors in the meanwhile of operating the same window in reversal direction, for this is likely to damage the electric window.*

● **Method for using window lock switch**

The function of window lock is enabled or disabled by pressing the window lock switch for once.

After window lock function is enabled, only the window switch at driver's side can be used to control the hoisting of all the windows while other window switches cannot work.

● **Window delay ▲**

Once the key is turned from the "ON" position, as long as a vehicle door is not opened you may continue to move up and down the door glass within 30 seconds.


★ **WARNING:** *To prevent the personnel from being injured seriously, the following instructions shall be followed.*

- 1) Before the electric window is closed, you should confirm whether there are someone around the electric window. Meanwhile, you can also confirm that the heads, hands or other parts of all the passengers are inside the vehicle. If the head, neck or hands of

the passengers are clamped between the window while the window is closed, they may be injured severely and even get killed.

- 2) Never stretch your hands or extend your head outside the window during the driving. If they are scraped by the things outside the vehicle or emergency braking occurs, the passengers will be injured severely and even get killed.
- 3) When leaving the vehicle, you should confirm whether the ignition key is removed.
- 4) Never allow the children to stay inside the vehicle alone, especially in the case when the ignition key is left inside the ignition switch. Otherwise, the children may be clamped between the window when they are using the electric window switch and cause injury and death accidents. If the children need to stay inside the vehicle in special cases, you must use window lock switch or pull off the keys to prevent them from using the electric window unexpectedly which may cause accidents.

■ Opening and closing of sunroof ▲

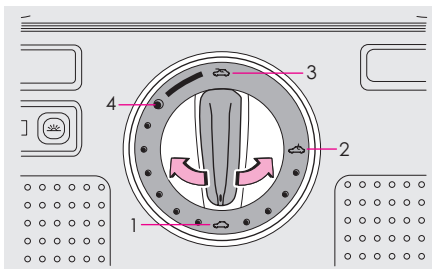

● Operating instructions

Under the status when the ignition switch is at the "ON" position, you can open or close the sunroof by turning the switch.

★CAUTION: *Be careful when closing the sunroof! You will be squeezed and injured if you close the sunroof carelessly or without any control!*

● Shut down

To close the sunroof, you will turn the switch to the position 1.

The sunroof is provided with anti-pinch function: If the sunroof goes through difficulties during the operation or is stopped during the closing due to resistance, the sunroof will open again.

You can also close the sunroof by following this method: Press the button at Position 1 and keep pressing it until the sunroof is completely closed. In this case, the anti-pinch function of sunroof is not enabled.

● Horizontal opening

Turn the rotary switch to Position 4 clockwise.


Open the window in different steps: If you want to open the sunroof fully, continue to turn the rotary switch clockwise to Position 3 until the sunroof is fully opened. Noise may occur due to increasing wind resistance under the status when the sunroof is fully opened.

When the sunroof is opened, the sun shade will open automatically.

● Tilting

Turn the rotary switch in an anti-clockwise direction to the target position. The inclination of the sunroof will be the maximum when the rotary switch is turned to Position 2.

■ Method for adjusting steering wheel

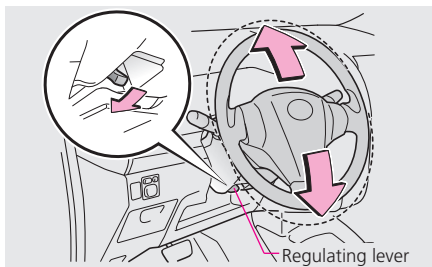

1. Hold the steering wheel and press the adjusting lever.
2. Move the steering wheel vertically and adjust it to the ideal position.
3. Pull the adjusting lever up.

★ WARNING:

After you have adjusted the steering wheel, you'd better make sure that the steering wheel is locked firmly.

Otherwise, the steering wheel may get displaced abruptly, which will bring about accident and cause serious injury and death accident.




- Please never adjust the direction during the driving.

Otherwise, the driver may suffer from accident or even severe casualty due to maloperation.

en-carobook.com


■ Method for adjusting rear view mirror

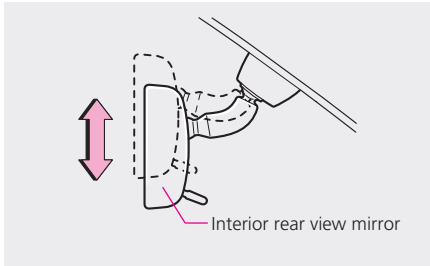

● Method for adjusting interior rear view mirror

● Adjustment of interior rear view mirror

Grab the rear view mirror and adjust it from top and bottom.

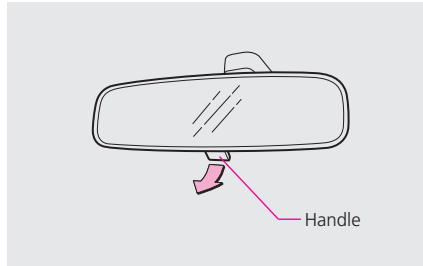


● Method for anti-dazzling switching

The switching between anti-dazzling status and normal status of rear view mirror can be realized inside the vehicle only by adjusting the regulating handle of rear view mirror.

★**CAUTION:** *The view definition of rear view mirror inside the vehicle will be reduced under the anti-dazzling status.*

★**WARNING:** *Do not adjust the rear view mirror while driving. Otherwise, it might cause accidents and result in personnel casualty.*

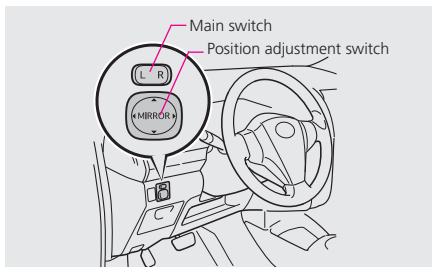

● Adjustment of exterior rear view mirror

● Method for adjusting mirror surface angle

1. Choose the rear view mirror to be adjusted.

Choose the rear view mirror by adjusting the main switch of exterior rear view mirror.

L: Left exterior rear view mirror


R: Right exterior rear view mirror

2. Adjust mirror surface angle.

Adjust the angle of exterior rear view mirror by using the position adjusting switch.

3. Adjust the main switch to the initial position.

After the adjustment is over, restore the main switch to the initial position.

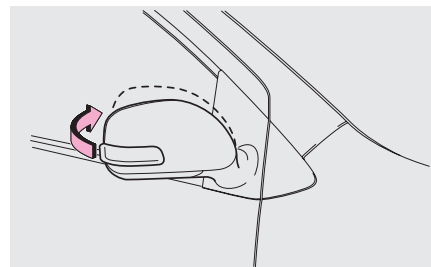


● Fold exterior rear view mirror

When the vehicle passes through narrow space, you should fold the exterior rear view mirror by following the operation method shown in the figure, so as to ensure that the vehicle can pass by smoothly.

★**WARNING:** Under the condition of normal driving, it is prohibited to fold the rear view mirror. Otherwise, the driver cannot observe the traffic conditions behind the vehicle, which will result in accidents.

en.carobook.com


■ Opening and closing of engine compartment cover

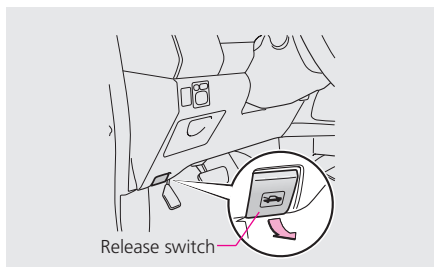

● Method for opening


1. Lift upwards the engine compartment cover.

Draw the engine compartment cover at the lower part of the instrument panel at the driver's side and the engine compartment cover will automatically pop up a slot.

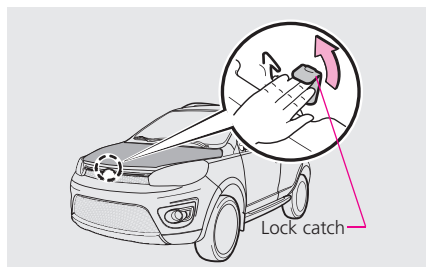

2. Deflect the lock latch.

Extend your hand into the slot, deflect the lock latch in an anti-clockwise direction and then the engine compartment cover is opened.

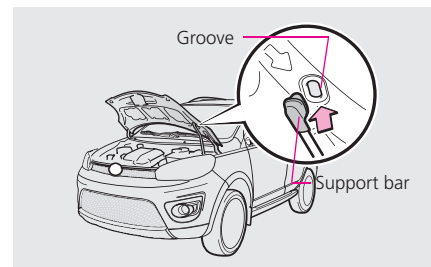

3. Support fastening.

Insert the support lever into the slot and keep the engine compartment cover open. In this way, the engine compartment cover will not fall off accidentally and cause serious injury.

● Turndown procedures

1. Place the support lever to the initial position;
2. Release the engine hood at the height about 20cm away and let it fall freely;
3. Confirm that it is locked.

★ **WARNING:** Before closing the engine compartment cover, check whether anything such as tools and cotton cloth are left inside the engine compartment.

★ **CAUTION:**

- 1) When closing the engine compartment cover, do not close it forcibly by using weight advantage, for it might cause engine cover to collapse.
- 2) Please never erect the ornaments not produced by Great Wall Motors on the engine compartment cover. Otherwise, the weight of engine compartment cover will become too large and the support may fail to bear the weight when the cover is opened.
- 3) Never draw the support with your hands or pull the support transversely forcibly. Otherwise, the support will become deformed and the engine compartment cover may cannot be opened.

en.carbook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety


Emergency

Maintenance


Technical data

Index


■ Opening and closing of oil filler cap

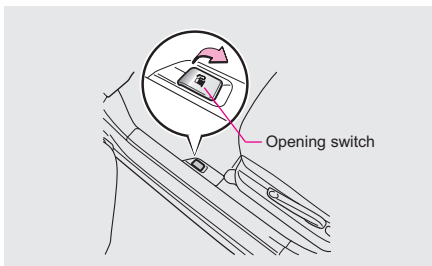

1. Pull the exterior oil filler cap opening switch at driver seat, then, the oil filler cap is opened.

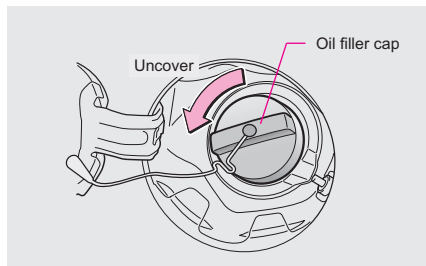


2. Hold the handle of oil filler cap and turn it in anti-clockwise direction, the oil filler cap will be opened.

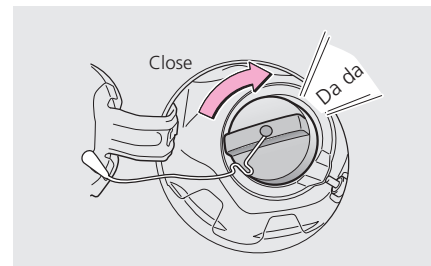


3. When closing the oil filler cap, hold the oil filler cap handle and turn it clockwise until the sound of "Tick, Tick" is heard.

en.carobook.com

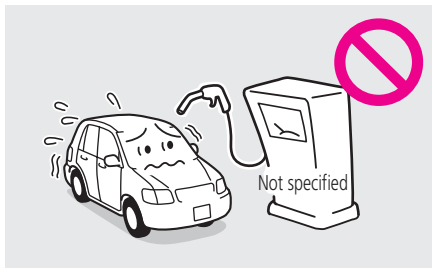

★ **WARNING:** Please use the specified fuel.

- Please use the specified lead-free gasoline.
- If the fuel not designated (poor quality gasoline, etc.) is used, the engine performance will be affected and the phenomenon such as knocking and decreasing power may occur. If you continue to use it, the engine will break down, the components of fuel system will be damaged and it will result in fuel leakage. Therefore, you should fill the designated fuel.
- When you fill the oil, please avoid the fuel oil from splashing on the vehicle body for it may etch the paint surface.

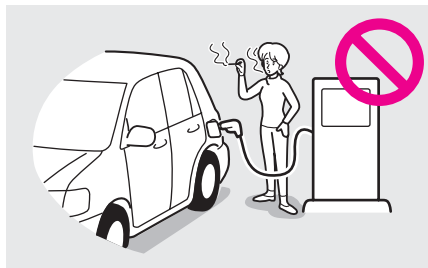

★ **WARNING:** The following instructions shall be observed when you fill the oil:


- 1) The engine shall be stalled.
- 2) Close the door and window.
- 3) Never allow fire sources such as cigarette to approach the vehicle.
- 4) Before opening the oil filler cap and oil tank cover, you shall remove the static electricity carried along human body for touching the metal parts of the vehicle.
When the body carries electricity, it might ignite the fuel due to the discharge spark, and thus cause burns.
- 5) When you are to open the oil tank, hold the handle of the oil tank cover and screw it open slowly.
- 6) When the temperature is high, the pressure inside the oil tank is rather

high, fuel oil might spill from the oil tank.

- 7) When the oil tank cover is screwed loose, if the sound of “gaspings” is heard, please stop opening the oil tank cover.
 - 8) Open it slowly after the sound disappears.
 - 9) When you are filling the oil, do not return to the vehicle, or touch the person or things that carries electricity (You may probably carry the electricity again).
 - 10) The personnel still carrying static electricity are not allowed to approach the oil filler.
 - 11) When you have filled the oil and are to close the oil tank cover, turn the cover clockwise until the sound of “crack” is heard and confirm it.
 - 12) Make sure to use the oil tank cover originally produced by Great Wall Motors.
 - 13) Moreover, you also have to observe all the precautions announced in gas station.
- ★ **WARNING:** When you are filling the oil, avoid inhaling the volatile fuel gas.


The fuel contains harmful components. Therefore, the use shall be careful.

Correct driving posture

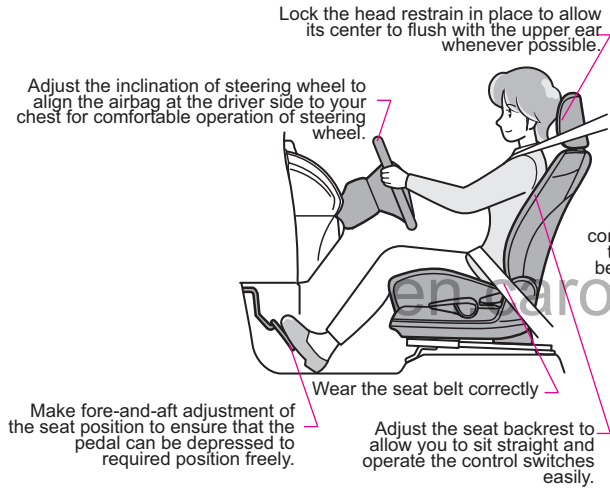


Adjustment criteria of seat and steering wheel




Use criteria of seat belt

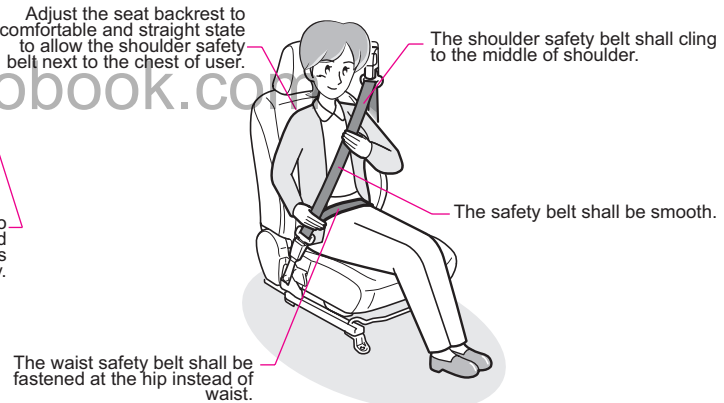


■ Method for adjusting seats

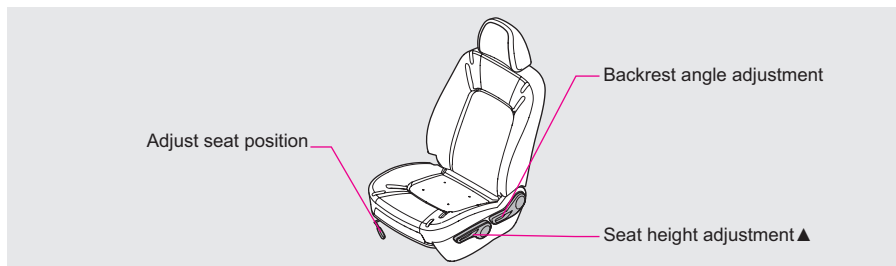


● Method for adjusting front seats

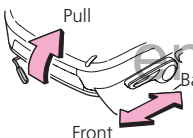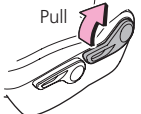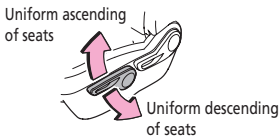Adjustment form	Adjustment diagram	Adjustment
Ajust seat position		Hold the adjusting lever and pull it upwards. Then, lean your body against the seat slightly, slide the seat to the required position and release the adjusting lever.
Backrest angle adjustment		Lean your body forwards and pull upwards the inclination adjusting rod of seat backrest. Then, lean your body backwards towards the backrest until the required angle is reached, then release the adjusting lever.
Seat height adjustment (driver's seat) ▲		Pull upwards the seat height adjustment. Every time you pull the adjusting lever, the seat will be raised by certain height; Press the seat height adjustment. Every time you press the adjusting lever, the seat will be lowered by certain height.

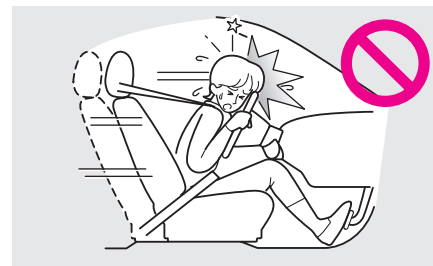

● Do not adjust the driver seat during driving.

If you adjust the seat during driving, the seat may move suddenly and mal-operation may happen. An accident may occur.

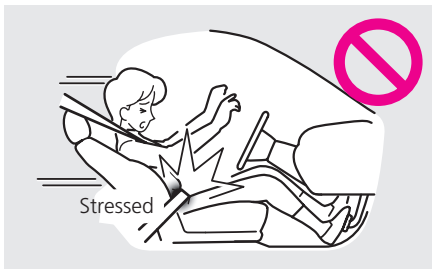

- **Do not excessively tilt the seat backrest.**

If the seat backrest inclines excessively, when collision or rear-end collision accident occurs to the vehicle, the safety belt around the waist is likely to get separated from the waist and the body slides downwards, some organs will be squeezed severely. Thus, the human are severely injured or even get killed.


★ **WARNING:**

- 1) *After the front and rear positions of seats are adjusted, you should release the adjusting lever and try to slide the seat from the front to the back, so as to ensure that the seat is locked in appropriate position.*
- 2) *After the seat backrest inclination has been adjusted, you should lean your body backwards towards the seat backrest, so as to ensure that the seat backrest is locked in appropriate position.*
- 3) *Do not put articles under the seat. Otherwise, the seat locking device will be affected, the seat may move suddenly. In this way, the driver will lose his control over the vehicle.*

● **Rear seats**

The rear seat has a separate structure for the seat and the seat back. The seat cushion is an integral type structure. The seat cushion is fixed to the vehicle body and can not be folded; the seat back can be folded forward, and the rear seat can be folded forward by lifting the rear seat lock (both the large seat back and the small seat back can be folded), to make more storage space available!

When folding or unfolding the seat, please keep hands and feet away from the rear seat lock in order to avoid injuries.

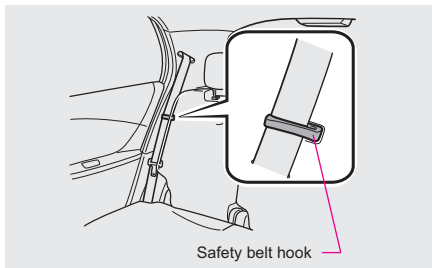


● Method for laying down rear seats

1. Leave the seat.

2. Hook the seat belt on safety belt hanger.

Hook the safety belt at the side of the rear seat laid down on the safety belt hanger, so as to prevent the safety belt from being hooked when the safety belt is laid down.

3. Adjust the head restraint to the lowest position.

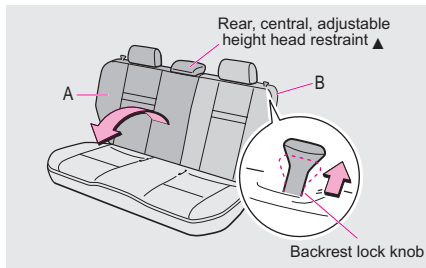

4. Lay down forwards the backrest of rear seats.

In the meanwhile of pulling upwards the backrest lock button, lay down forwards the backrest of rear seat, so as to release more storage space.

★ CAUTION:

- If you want to fold the large seat back A, the middle seat belt latch must be disconnected from the latch plate; otherwise the seat back A can not be reset.
- The lowest position of the rear, central, adjustable height head restraint is not the recommended position for use.

★ WARNING:

Please follow the following precautions after the seat backrest is recovered to the vertical position. Otherwise, serious injury and death accident will occur.

- 1) Please rock the seat backrest slightly from front to back to ensure that it has already been firmly locked.
- 2) Check and confirm that the safety belt or lock button is stuck beneath the seats.
- 3) Place the safety belt in the correct position for use.

Contents

Warning

Operation

Driving

Interior
Devices


Safety

Emergency

Maintenance


Technical data

Index

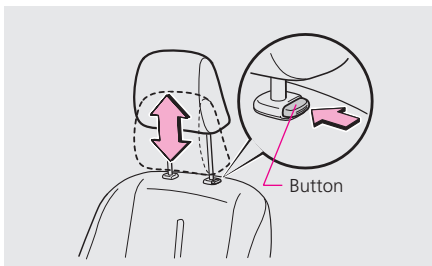

● **Method for adjusting the height of head restraint**

- › When raising the height of head restraint, you can lift upwards the head restraint directly.
- › When reducing the height of head rest, press the head restraint in the meanwhile of pressing the button.
- › When dismantling the head restraint, you can pull upwards the head restraint until it is separated from the seat in the meanwhile of pressing the button.

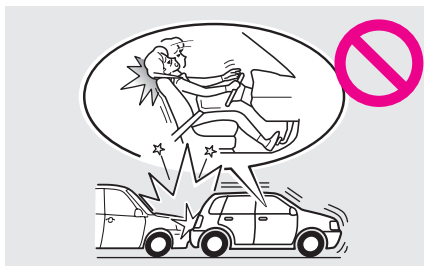


● **Do not drive when the head restraint is removed.**

Otherwise, when collision accident occurs, it is likely to cause severe impact to the head, even the severe accidents that threatens life.




When the headrest center height is aligned with the top of the driver's or passenger's ears, the headrest is at its maximum efficiency.

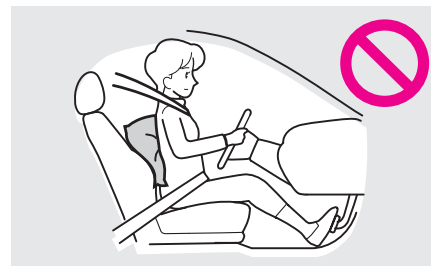

● **Do not place back cushions and other articles between the seat backrest and human body.**

Otherwise, it will affect the adoption of correct driving posture. Moreover, the safety efficiency of safety belt and head restraint cannot be realized when collision accident occurs. Worse more, the serious injury that threatens human life may occur.

■ Method for using electric seat heater ▲

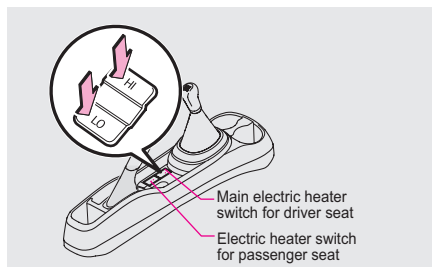

● Operation

When the key is placed at the “ON” position or the engine is in working status, the function of electric seat heater is enabled.

- › Press the button at “HI” side of the switch, the seat backrest and seat cushion will be heated. At this moment, the temperature rise is fast and the power is rather high.
- › Press the button at “LO” side of the switch, the seat backrest and seat cushion will be heated. At this moment, the temperature rise is fast and the power is rather low.

● Turndown procedures

When the electrical heating switch is set to its “HI” or “LO” position, push gently the opposite side of the switch to turn off the heat switch, and the corresponding indicator lamps may go out simultaneously.

★ **WARNING:** Please make sure to follow the precautions below when the front seats are heated.

- When the following personnel are to use the heater, they may feel a burning heat or even low-temperature burn (red spot and blister). Therefore, they shall be extremely cautious.
 - 1) Infants and toddlers, children, the elder, patients and persons with mobility disability.
 - 2) Persons with skin allergy.
 - 3) Persons with excessive fatigue.
 - 4) Persons who are sleepy due to alcoholic drinking or drug use (sleeping pills, cold pills, etc.).
- Never use the articles with good heat-insulating property such as blanket or seat cushion at the same time. It is likely to result in low-temperature burn or damage the seat due to over-temperature in the seats.
- Never use it while sleeping. It is likely to result in burn due to overheat in the seats.


en.carobook.com

★**CAUTION:**

- 1) *Never put the articles with uneven weight nor pinch the sharp articles such as needles and nails on the seat. Otherwise, the seat will be damaged.*
- 2) *When cleaning the seat, do not use the organic matter such as benzene and gasoline. They are likely to damage the heater and the seat cover.*
- 3) *To avoid low power in the battery, please avoid using the function of electric seat heater for long time when the engine is shut down.*

en.carobook.com

■ Method for using safety belt

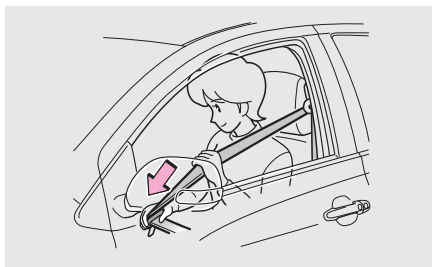


● Method for using 3-point safety belt

1. Drawing out the seat belt

Grab the tongue, draw out the safety belt from the retractor and confirm that it is not twisted.

If you cannot pull out the safety belt from the retractor, you should pull it outwards forcibly for once to make it unlock. Thus, you can pull out the safety belt successfully.

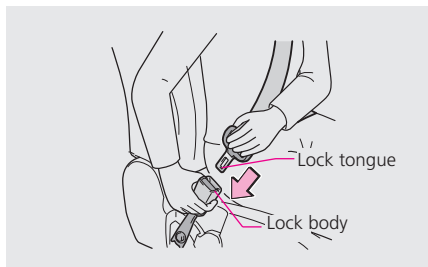


2. Insert the tongue into the lock body

Slide the tongue along the safety belt and make it connected with the lock body. Insert the tongue into the lock body and confirm that it is well locked.

★ CAUTION:

Insert the tongue into the lock body until a sound of "crack" is heard. Otherwise, it indicates the safety belt is not correctly locked.

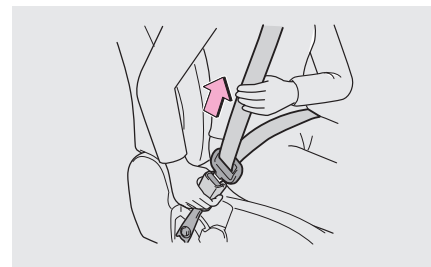


3. Adjust the position of the safety belt around the waist

Pull upwards the safety belt around the shoulder and make the safety belt around the waist cling the body closely. Thus, the firm pelvis is to bear the impact, and the possibility of internal injury is reduced. If necessary, you should pull upwards the safety belt again, so as to eliminate the phenomenon of relaxation in the safety belt around the shoulder.



4. Adjust the safety belt around the shoulder

Check whether the safety belt passes the chest and cross the middle part of the shoulder. In this way, the impact is distributed to all the hard bones on the upper body.

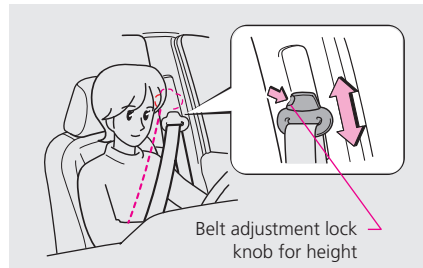


5. Safety belt height adjustment

On the front seats, when the safety belt is near the neck or slide from the shoulder to the arms, you can use belt height regulator to adjust the height of safety belt and try to make it across the middle of shoulders.

- **Adjustment of height of safety belt around the shoulder**


When adjusting the height of safety belt fastening ring for front seats, you can press and release the button and slide the fastening ring from top to bottom according to the requirements.

★ **WARNING:** After the adjustment is finished, you should ensure that the safety belt fastening ring is locked in appropriate position.

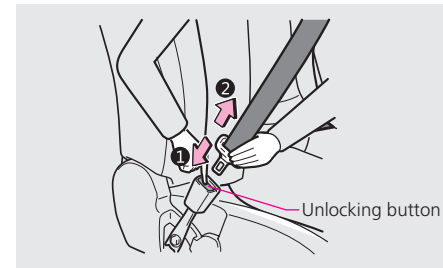

6. When retracting the safety belt, it is advised to press the unlocking button on the lock body.

When the lock is release, you should grab the tongue firmly until the safety belt is completely retracted, do remember to avoid touching the passengers or the surrounding objects. Before locking the door, make sure that the safety belt is completely retracted and the tongue is outwards so as to protect the safety belt from being damaged.

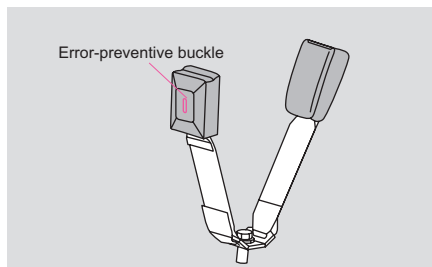

★ **WARNING:**

When pulling the large seatback, be sure to disengage the central seat belt tab from the error-preventive buckle, otherwise, the large seatback is unable to reset.

- **The back row seat belts feature two different buckles, preventing the tab from being inserted into the wrong buckle.**

The back row seat belts feature two different buckles, preventing the tab from being inserted into the wrong buckle. The back row three-point seat belts have two types of tabs. Each buckle will only match one type of tab. The tab/buckle is a very common combination. It is convenient and ensures the safety of the passengers. Putting a key or any other hard object into this buckle can release the locking function.

en.carobook.com

■ Precautions for using safety belt



- Do not hang the shoulder harness of seat belt over your neck or under your armpit.

The shoulder harness of seat belt shall be worn on your shoulder tight.

If the seat belt passes through the wrong body part, your abdomen will easily be squeezed intensely when vehicle collision accident occurs.

- Please adjust the retainer of the seat belt earnestly.

Adjust the seat belt, keep it away from your neck and make it hang on the middle part of your shoulder tight.



- Fix the waistband of the seat belt next to your hipbone at lower position.

If the waistband of seat belt is loosened and be away from your hipbone, your abdomen will easily be squeezed when vehicle collision accident occurs.



- It is prohibited that several persons share the same safety belt.

If two or more persons wear the same seat belt, when vehicle collision accident occurs, the belt not only cannot disperse the impact, but also the two persons may hit each other.




- **The seat belt shall be fixed to the lock state and worn without any distortion and looseness.**

If the seat belt is twisted, loosened and not locked tight, it will not exert its function sufficiently when collision accident occurs even if your driving posture is correct; as a result, serious injury and even death may occur.


- When the seat belt is twisted, adjust it so that it can be correctly worn.

If the seat belt cannot be adjusted, please consult the special service station of Great Wall Motors.

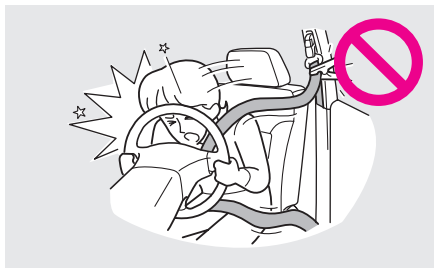


- Do not use washing clamp or pin to loosen the seat belt.

If the shoulder harness is loose, when vehicle collision accident occurs, your body cannot be bound tight since a certain distance exists between the seat belt and your body. As a result, your chest may easily be oppressed and this is extremely dangerous. Besides, your head may be impacted intensely when hitting the steering wheel and the expanded airbag.

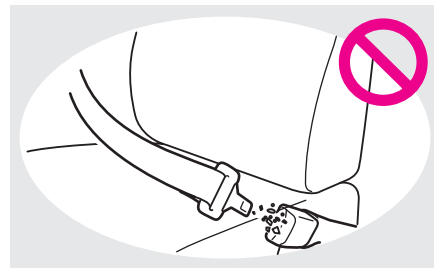

- When inserting the lock tongue into the lock body of the seat belt, make sure “crack” between lock tongue and lock body is heard to guarantee firm lock.

When foreign matters are found in the lock body, the lock tongue cannot be completely inserted into the lock body; as a result, the seat belt will jump out of the lock body.

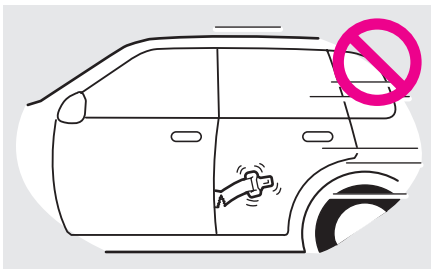

- **Do not damage or wear the damaged safety belt.**

If the broken seat belt is worn, when vehicle collision accident occurs, the seat belt cannot function effectively and thus serious injury and even death may easily occurs.

Make sure that seat belt and lock tongue are not clamped by the seat and car door so as to avoid damage.



- **The seat belt which is split, worn or fails to work normally shall be changed immediately. Besides, do not wear the seat belt which has suffered intense impact or has been broken in accident, or the seat belt is unable to functional well during the vehicle collision accident.**

The broken seat belt is easily broken due to the impact of vehicle collision accident. In addition, since the belt is unable to work normally, it is unable to exert its safety performance effectively.


When the safety belt cannot work normally, you should replace it with new original products.



- **Do not dismantle, disassemble, remold and install the seat belt.**

The seat belt will not work normally and effectively during vehicle collision accident.

Please consult the special service station of Great Wall Motors about the installation, dismantlement and replacement.

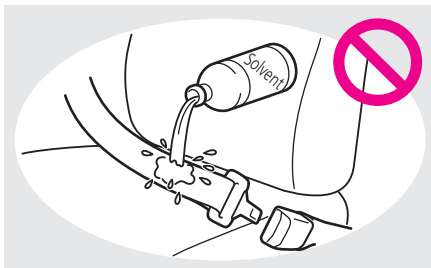

- Do not use organic matters such as benzene and gasoline to clean the seat belt. Moreover, do not bleach or stain the seat belt.

Otherwise, the seat belt performance will be influenced and cannot work normally and effectively during vehicle collision; as a result, serious injury and even death may occur.

Neutral cleaning solution or warm water shall be used for cleaning and it cannot be used until the seat belt is totally dried.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

Memorandum

en.carobook.com

3

Driving

Operation of Ignition Switch.....	98
Operation of engine.....	99
Starting mode of engine.....	99
Stopping engine.....	103
Operation of shift lever	104
Method for driving MT transmission vehicle	111
Method for driving 5AMT transmission vehicle	112
Method for driving 6AMT transmission vehicle	115
Operation of parking brake lever	119
Operation of lights.....	120
Operation of high-beam & low-beam lamps.	120
Operation of turn light.....	122
Operation of fog light.....	123
Operation of daytime running lights▲	124
Windshilder wiper operation	125

Operation of front windshield wiper.....	125
Operation of front windshield wiper.....	127
Operation of warning lamp switch.....	128
Operation of horn	129
Operation of ESP switch ▲.....	130
Identification of instruments, Indicators and warning lamps	131
Description of instruments.....	131
Descriptions of indicators and warning lamps.....	134
Tips on driving.....	141
Tips on driving in foggy weather	141
Tips on driving in rainy weather	142
Tips on driving in cold weather.....	143
Tips on driving in hot weather	149
Tips on economical driving.....	150
Reverse radar ▲	151
Reversing video ▲	154
Warning tones.....	155

Contents

Warning

Operation

Driving

Interior
Devices

Safety


Emergency

Maintenance

Technical data

Index

Operation of Ignition Switch

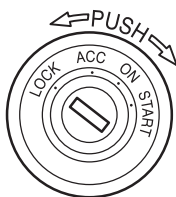

Insert the key into the ignition switch and turn the key to a desired position.

Location	Function
LOCK	The steering wheel is locked, and the key can be pulled out. All electrical components are in non-working condition.
ACC	It is allowed to use some of the electrical devices, e.g.: the sound system.
ON	It is allowed to use all electrical devices. This is the normal driving position.
START	It is allowed to start the engine. After the key is released, it will automatically return to the "ON" position.

● When switching from "LOCK" to "ACC"

When you start the engine, the ignition key may be stuck in the "LOCK" position and will not turn.

If this happens, turn the steering wheel gently left and right, and then turn the ignition key into the desired position. The problem then can be solved.

● Switching from "ACC" to "LOCK"


1. Move the shift lever to the "N" position.
2. Push in the ignition switch, and then turn it to the "LOCK" position.

★WARNING:

Never turn the ignition switch to the "LOCK" position while the vehicle is running. Otherwise, the steering wheel will be locked. That may result in loss of control of the vehicle, and cause a serious accident.

★CAUTION:


- The ignition switch shall not be held in the "ACC" or "ON" position for a long time when the engine is not running. Otherwise, the battery will be exhausted and therefore unable to start the engine.
- Switch the ignition switch to "LOCK" when leaving the vehicle and take the key with you.

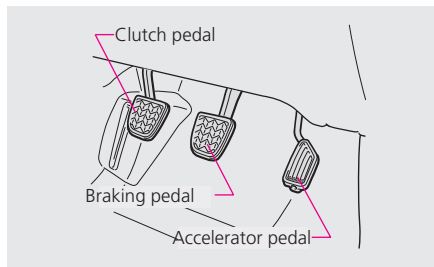

● For vehicle with manual transmission (MT)

1. Check the pedal location

Adjust the seat position to take the correct driving posture, and check the location of each pedal.

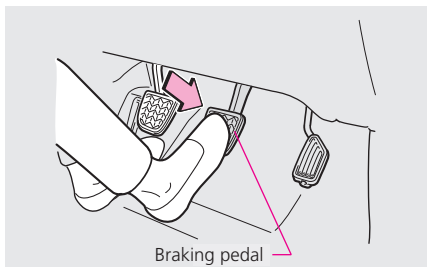


2. Check the condition of the parking brake lever

Check if the parking brake lever is engaged while you step on and hold the brake pedal.




3. Check the condition of the shift lever

Check if the shift lever is set in the **N** position (neutral gear).

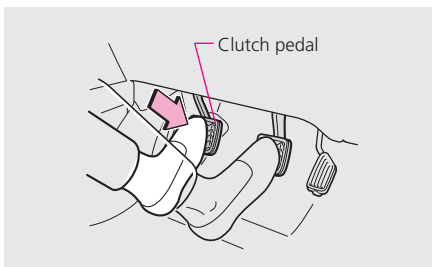

4. Fully step on the clutch pedal

Failing to fully step on the clutch pedal may lead to a start failure of the engine.

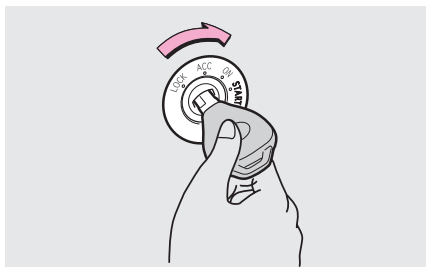

5. Start the engine


To start the engine, turn the key to the "START" position without stepping on the accelerator pedal.

★ CAUTION:

Never hold the ignition switch in the "START" position for more than 5 seconds each time you start the engine.

If the engine does not start successfully during this time, wait at least 15 seconds before setting the ignition switch to the "START" position again.

If the engine fails to start after 5 attempts, you should give up the start-up operation, but troubleshoot the problem or contact the nearest Great Wall Motor authorized service shop as soon as possible.

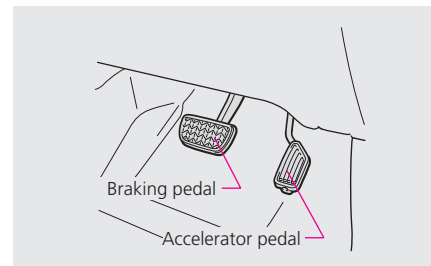


● For vehicle with automated manual transmission (AMT)

1. Check the pedal location


Adjust the seat position to take the correct driving posture, and check the location of each pedal.

★ **WARNING:** *In no case shall the driver start the engine outside the vehicle.*

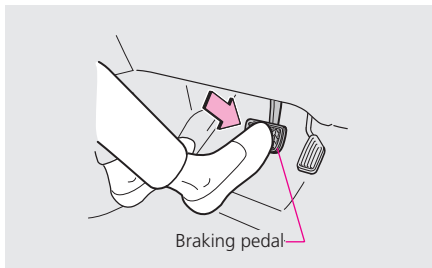


2. Check the condition of the parking brake lever

Check if the parking brake lever is engaged while you step on and hold the brake pedal.

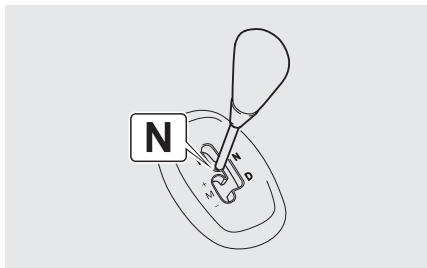

3. Check the condition of the shift lever

Check if the shift lever is set in the **N** position.

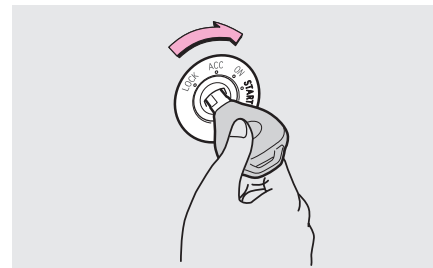

4. Start the engine

With the brake pedal depressed, make sure the instrument cluster shift position displays **n**, switch the ignition switch to the start position, then you can start the engine.

If you cannot start the engine, check if the following conditions are met:

- › The shift lever is in the **n** position;
- › Depress the brake pedal;
- › The instrument cluster shift position displays **N**;
- › The battery is fully charged.

en.carobook.com

If the shift lever is in the n position and the brake pedal is depressed, the n position still doesn't display, you can use the self-learning function of the gearbox.

1. The gearbox will start self-learning if you put the ignition switch in the on position and depress the brake pedal.
2. During the process of self-learning, the gearbox will give out the sound of static shifting, lasting about 10 seconds.
3. When the instrument cluster shift position displays n, the gearbox has finished self-learning, then you can start the vehicle.

★CAUTION:

If the instrument cluster still doesn't display the shift position, please contact the special service station of great wall motors.

en.carobook.com

■ Stopping engine

To stop the engine, turn the key to the "ACC" position the "LOCK" position.




- **Do not shut down the engine while driving the vehicle.**

During driving, if the engine must be shut down in emergency, you only can turn the ignition switch to "ACC" position.

If the engine is in off-working state, the brake booster and power steering system do not work, which leads to poor braking efficiency and difficult operation of steering wheel. Thus, an accident may occur.

If the ignition switch is placed to "LOCK" position during driving, the engine will stall and the steering wheel will lock. Thus an accident may occur.

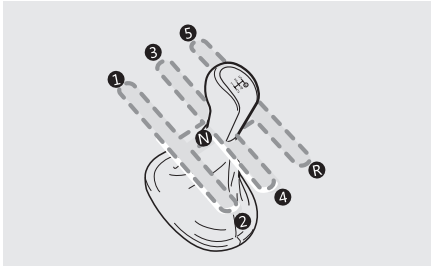

Shifting gears

Fully step on the clutch pedal, and move the shift lever to the desired position. Then slowly release the clutch pedal.


- When sliding the shift lever to the **R** position.

The manual transmission is fitted with a locking device to prevent direct change-over from the **5** gear to the **R** gear.

★ **CAUTION:** *Never switch the shift lever to the **R** position while vehicle is moving forward. Otherwise it will result in serious damage to the transmission system, and cause loss of control of the vehicle.*

en.carobook.com

■ Automated manual transmission (5AMT)

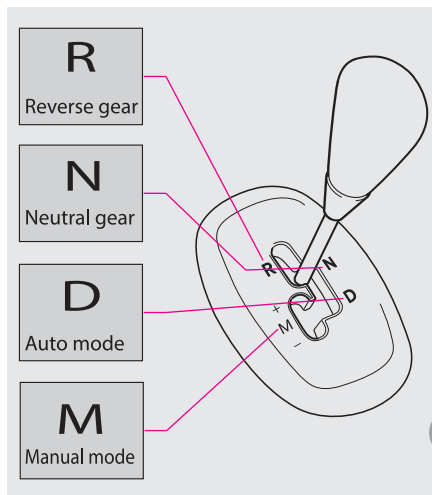

The shift lever has two gear positions: **R** position (reverse gear) and **N** position (neutral gear). It can be set in three modes: **D** auto mode, **M** manual mode and winter mode.

★CAUTION:

- 1) When the gear position indicator on the trip computer blinks with a character which indicates a certain gear position, it means the shifting operation is in process. Never use the accelerator pedal to move the vehicle when a character which indicates a certain gear position is blinking.
- 2) The automatic shift mechanism can only perform a shifting operation with a running engine. Otherwise, the system will accept no operating commands except that of the "N" position.
- 3) It is recommended not to engage the shift gear and drive the vehicle immediately after the engine starts running. Always wait for the engine RMP to drop to a steady idle speed before engaging the shift gear and driving the vehicle.

● Functions and operation of shift lever

● **R** Reverse gear

It is used to drive the vehicle in reverse. When the engine is running and the vehicle is properly braked (keeping the vehicle stationary with the brake), move the shift lever front left into place, and wait until the character "R" is shown steadily on the trip computer. The transmission will then be engaged in the reserve gear. Now you can drive the vehicle backward while stepping on the accelerator pedal.

★**WARNING:** The **R** position can only be activated after the vehicle is completely stopped and properly braked. Otherwise, it may cause damages to the transmission.

★**CAUTION:** To protect the transmission, the reverse gear can not be engaged if you try to move the shift lever to the **R** position at a forward speed greater than 2km/h, the shift lever shall not be placed at the **R** position.

- **N Neutral gear**

It is a non-power gear. As long as the shift lever is set in the **N** position and the character "N" is shown steadily on the trip computer, no power will be transferred by the transmission system.

★**CAUTION:**

- 1) *The engine can be boosted only when the shift lever is placed at **N** position.*
- 2) *Never start/stop the engine or park the vehicle before the character "N" is shown steadily on the trip computer.*
- 3) *Always set the shift gear in the **N** position before starting/stopping the engine (if no transmission auxiliary parking is needed) or before parking the vehicle, or when the vehicle needs to be parked for a long time.*

- **D Automatic mode**

To activate the "D" function, start the engine and then pull the shift lever backward in place under any of the following conditions:

- › Driving at low speed and applying the brake properly
- › Driving at high speed

After operating as above instructions and the character "D" shown steadily on the trip computer, the transmission will automatically select and change its working position.

- **M Manual mode**

To activate the "M" function, start the engine and pull the shift lever first backward then left in place under any of the following conditions:

- › Driving at low speed and applying the brake properly
- › Driving at high speed

After you operate as above instructions and a character "X" (X represents an Arabic numeral from 1 to 5) shown steadily on the trip computer, the transmission will be engaged in the indicated working position. In this mode, the working position has to be changed by manipulating the shift lever manually according to running conditions of the vehicle.

- **Shifting to the next higher gear in the $\oplus$ manual mode**

Activating this function to change the working position of the transmission system to the next higher gear (up-shifting) (except the system has already been set in the 5th gear or the travel speed is less than the minimum working speed of the next higher gear).

★ **CAUTION:** *In order to protect the drive train and power train, the system will not perform the command of shifting to the next higher gear if the vehicle is running at lower speed.*

- **Shifting to the next lower gear in the $\ominus$ manual mode**

Activating this function to change the working position of the transmission system to the next lower gear (down-shifting).

★ **WARNING:** *Make sure to select a correct gear position while working in the manual mode. Never select a lower gear when the vehicle is running at higher speed.*

★ **CAUTION:** *If the travel speed is less than the minimum speed required for the current working position, the system will automatically downshift to protect the drive train and power train.*

- **Winter mode**


After actuating this function $\oplus$ when the vehicle is stationary, the system will activate the ② gear start mode, and the “WINTER” indicator on the instrument will light up. Compared to the 1st gear start mode, the torque is smaller and unlikely to cause tyre slippage.

- **Deactivate winter mode**


When the transmission enters the ① gear due to manual trigger $\ominus$, or ① mode is actuated during the driving, the WINTER Mode will be cancelled.

★ **CAUTION:** *It is recommended to activate the WINTER mode while starting the vehicle on snow and icy surfaces.*

■ Automated manual transmission (6AMT)

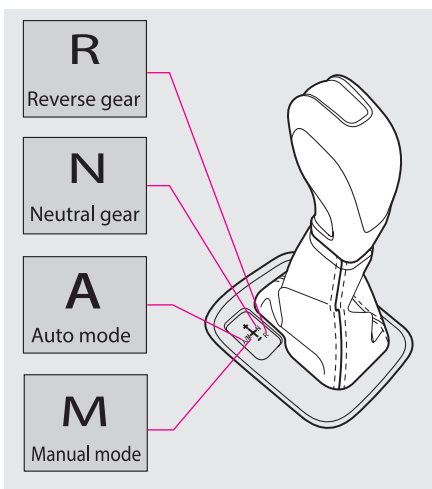

The gear selector lever has two gear positions: **R** (reverse) and **N** (neutral) gear as well as two modes: **A** (auto) and **M** (manual).

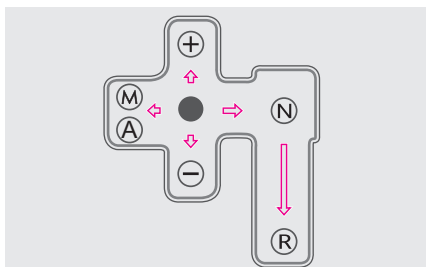

● The selector lever's gears and modes

● **R** Reverse gear

It is used when reversing the vehicle. After starting the engine, put the selector lever in the **R** position with full braking (using the brake to keep the vehicle stationary). When "R" is displayed on the meter, operate the transmission with reverse gear engaged. If you drive off now, the vehicle will move backwards.

★ **WARNING:**

- Reverse gear should only be used when the vehicle is stopped completely and the brake is fully applied. Otherwise, the transmission will be damaged easily.
- Shifting from reverse gear to forward gear is prohibited during reversing. The vehicle should be stationary before switching to forward gear.

- **N Neutral gear**

Non-powered gear. The transmission system does not transmit power when the selector lever is in the **N** position and when "N" is continuously shown on the trip computer.

★ **CAUTION:**

- 1) *he system has a shift-lock function, which means that the brake pedal must be pressed when shifting the gear from neutral to the other positions.*
- 2) *When the "N" on the meter is flashing, it means the desired gear is not properly engaged. You will need to try shifting gears again.*
- 3) *You can only start/turn off the engine or park the vehicle after the "N" on the trip computer is no longer flashing.*
- 4) *The selector lever must be in **N** position before starting/turning off the engine (when transmission is not used to aid parking), as well as before and during parking.*

★ **WARNING:**

Please do not allow the vehicle to slide forward in neutral gear. Otherwise, failure to adhere to this advisory may lead to accidents.

- **A Auto mode**

When Auto mode has been selected, the automatic mode indicator light (D) on the trip computer will light up. When you step on the accelerator pedal, engine speed increases and the transmission will shift up automatically under the control of the system. On the other hand, when you release the accelerator pedal gradually, engine speed decreases and the transmission will shift down automatically under the control of the system.

- **M Manual mode**

- **Manual mode**

Every time the selector lever is pushed towards "+", the gear will shift up one level accordingly.

- **Manual mode**

Every time the selector lever is pushed towards "-", the gear will shift down one level accordingly.

- **Tips for gear shifting**

During the drive, whenever the vehicle reaches the right conditions for gear shifting, a gear shift reminder will appear on the dashboard.

★ **CAUTION: System designed to protect the transmission and engine.**

If the driver fails to perform upshift or downshift operation, the system will carry out mandatory upshift or downshift, in order to protect the transmission and engine.

- **Switching between / modes**

When the ignition switch is in the position “ON”, the automatic mode is activated by default. By setting the selector lever in / position once and then release it, the gear will switch from automatic mode to manual mode, and repeating this operation will switch the gear back to automatic mode.

If the vehicle is in Auto mode, pushing the selector lever towards “+” or “-” position once will switch it to Manual mode.

en.carobook.com

Method for driving MT transmission vehicle

● Starting vehicle

● Normal start

1. Start the engine, and wait until the engine is running at a steady speed. Fully step on the clutch pedal, and move the shift lever to the ① gear.
2. Release the parking brake.
3. Slowly release the clutch pedal, and step on the accelerator pedal gently to accelerate the vehicle at the same time.

● Hill start

1. Start the engine and confirm the parking brake has been engaged. Then move the shift lever to the ① gear.
2. Slowly release the clutch pedal, and step on the accelerator pedal gently at the same time.
3. Release the parking brake.

● Braking vehicle

1. Step on the brake pedal while fully stepping on the clutch pedal.
2. Apply the parking brake if necessary.
3. Move the shift lever to the N position for long-stay parking.

● Parking vehicle

1. Step on the brake pedal while fully stepping on the clutch pedal.
2. Apply the parking brake.
3. Switch the shift lever to N position.
Move the shift lever to the ① gear or R gear when parking the vehicle on a slope. Block the wheels if necessary.
4. Turn the key to the “LOCK” position to stop the engine.
5. Lock the doors and ensure to take away the key with you.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

● Starting in the **D** auto mode

After starting the engine, step on the brake pedal and pull the shift lever backward to the **D** position. Wait until the character “D” is shown on the trip computer steadily. First release the brake, and then drive the vehicle by stepping on the accelerator pedal. The system will automatically change the working gear based on running conditions of the vehicle.

● Starting with the **2** gear

This vehicle can be started with the **2** gear directly. It is recommended to use this function if the vehicle has to be started on a surface which has a lower friction coefficient (e.g. slippery road, ice and snow surface) and may easily cause slippage.

Operating method: Move the shift lever forward after activating the system in the manual mode. Step on the accelerator pedal to drive the vehicle till the character “2” is shown on the trip computer.

After being started, the vehicle can be driven normally either in the auto mode or in the manual mode.

★CAUTION:

- 1) Never step on the brake pedal or the accelerator pedal simultaneously.
- 2) Do not step on the accelerator pedal before the brake pedal is fully released.

● Starting the vehicle with a forward gear in the manual mode

After starting the engine, step on the brake pedal and pull the shift lever first backward and then left to the **M** position. Wait until the character “1” is shown on the trip computer steadily. First release the brake, and then drive the vehicle by stepping on the accelerator pedal.

● Driving in reverse

After starting the engine, step on the brake pedal and pull the shift lever forward to the **R** position. Wait until the character “R” is shown on the trip computer steadily. First release the brake, and then drive the vehicle by stepping on the accelerator pedal.

■ Travelling

● Travelling in the **D** auto mode

After starting the vehicle in the **D** position according to the above instructions, continue to accelerate the vehicle until it reaches a certain speed. The system will automatically change to the next higher gear. Then accelerate the vehicle continuously until it switches to the **5** gear. On the contrary, while releasing the accelerator pedal or stepping on the brake pedal, the system will automatically select a lower gear as the working gear along with the decrease of the travel speed.

★ **CAUTION:** *In the auto mode, if you step on the accelerator pedal quickly while the vehicle is traveling with a certain gear at low speed, the system will automatically shift to the next lower gear in order to increase the output torque to facilitate acceleration. Therefore it is normal for the vehicle to change the gear while stepping on the accelerator pedal quickly.*

● Travelling in the **M** auto mode

After starting the vehicle in the **M** position according to the above instructions, continue to accelerate the vehicle until it reaches a certain speed. After actuating the “**+**” button once, the system will switch to the next higher gear accordingly. It is allowed to repeat the above operation while accelerating the vehicle continuously. On the contrary, after actuating the “**-**” button once, the system will switch to the next lower gear accordingly.

When driving on the road surface with steep slope (such as entering or leaving underground garage), it is suggested the **1** or **2** gear in manual mode should be adopted during the driving, so as to avoid the condition in which the vehicle draws back due to Gear Up in automatic mode.

★ **WARNING:** *Do not select a lower gear when the travel speed is higher than the maximum operating speed for the target gear.*

★ **CAUTION:** *It is recommended to use the manual mode to increase the output torque while overtak-*

ing on a mountain road, or driving on an uneven road or steep uphill slope (especially the exit of underground garage).

● Switching between the **M** (manual) mode **D** (auto) mode

If moving the shift lever to the **M** position while running in the auto mode, the system will be switched to the manual mode. If moving the shift lever to the **D** position while running in the manual mode, the system will then be switched to the auto mode.

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

■ Braking and parking vehicle

● Braking vehicle

1. Stop the vehicle.

Step on the brake pedal with the shift lever in the **D** position.

2. Apply the park brake if necessary.

Pull up the parking brake lever while stepping on the brake pedal.

3. Move the shift lever to the **N** position.

● Parking vehicle

1. Stop the vehicle completely.

2. Apply the parking brake.

Pull up the parking brake lever while stepping on the brake pedal.

3. Move the shift lever to the **N** position.

Block the wheels if necessary when parking the vehicle on a slope.

4. Shut down the engine.

Always shut down the engine and lock the doors before leaving the vehicle.

★ CAUTION:

- While parking the vehicle, make sure to apply a sufficient parking brake in order to prevent the vehicle from undesired movement or potential damages.
- Always shut down the engine and lock the doors before leaving the vehicle.
- Do not step on the accelerator pedal during braking operation. That may cause overheating or malfunction of the auto transmission.

● Starting in auto mode

First, start the engine. Then shift the gear to Auto mode while stepping on the brake pedal. After “D” no longer flashes on the trip computer, release the brake pedal and then throttle up the engine to start the journey. The system will automatically select the most appropriate gear according to the vehicle's specific operating condition.

● Moving off in manual mode

After starting the engine, shift the gear to the manual mode while stepping on the brake pedal. After “1” is continuously displayed on the meter, release the brake pedal first, and throttle up the engine to start the journey.

★CAUTION:

- 1) *Do not use the brake pedal and accelerator pedal at the same time.*
- 2) *Do not throttle up the engine until the brake is fully released.*
- 3) *When starting on a ramp, you need to use the parking brake to prevent backward slip of the vehicle.*

● Moving off in gear

It is suggested to use this function to avoid skidding when starting the vehicle on the road of low friction coefficient, such as wet, snow-covered or icy road etc.

After Manual mode has been activated, push the gear selector lever forward. Accelerate and move off when the figure “2” appears on the meter. After the vehicle moves off, the driver can choose to drive the vehicle either in Auto or in Manual mode.

en.carobook.com

[Contents](#)[Warning](#)[Operation](#)[Driving](#)[Interior
Devices](#)[Safety](#)[Emergency](#)[Maintenance](#)[Technical data](#)[Index](#)

■ Travelling

● Accelerating in **A** auto mode

● Stepping slowly on the accelerator pedal to speed up

When accelerating in low gear, the gear will shift in the order of 1, 2, 3, 4, 5, 6. Fuel economy and comfort are priorities during the gear shift process.

● Stepping quickly on the accelerator pedal to speed up

During normal driving, stepping quickly on the accelerator pedal will speed up the vehicle with downshifting of the transmission. The harder the accelerator is pressed down, the greater the downshift and the higher the bigger acceleration achieved. However, engine noise will also increase and the g-force felt by the driver will also be stronger.

● Decelerating in **A** auto mode

When release the accelerator pedal gradually or when force is applied to the brake pedal, as the vehicle decelerates the system will choose the most appropriate gear for vehicle operations. When the vehicle is in motion without pressure applied to either the accelerator or brake pedals, the transmission will stay in high gear as much as possible.

● Accelerating in **M** manual mode

Throttle up after starting the vehicle, when the speed of vehicle reaches a certain value, touch "+" once, the system will go into a higher gear working level. You can repeat the previous operation by keeping throttling up the engine.

● Decelerating in **M** manual mode

During the drive, decrease the pressure applied on the accelerator pedal. When vehicle speed reaches a certain value, touch "-" once, the system will go into a lower gear level. You can repeat the previous operation by continuing to decrease the force applied on the accelerator pedal.

★ CAUTION:

- When driving at bumpy roads or hills, it is recommended to use manual mode and put the shift lever at low gears and try to increase the vehicle speed.
- When driving on a steep road, it is recommended to use the 1st or the 2nd gear in the manual mode.

● Hill climbing function

When the vehicle is stationary or running at the speed below 6 km/h, only by engaging the 1st gear or R gear, you can move the vehicle forward slowly without pressing down the accelerator pedal as long as you release the brake pedal and handbrake.

★ CAUTION:

- *This function doesn't work when you use any of the brake pedal, handbrake or accelerator pedal in driving.*
- *To avoid clutch overheated, the crawling function should not be used longly. In some special working conditions, such as continuous "start-stop", especially for the continuous hill-start, crawling function used longly, etc, the transmission case will enter into safe mode due to overheated clutch, and the transmission oil temperature warning indicator in the dashboard will flash while the vehicle may shake significantly; when the clutch is seriously overheated, the "crawling" function will disappear with a smell of burning, at this time, the driver should park the vehicle at a safe place for a*

period of time or increase the vehicle speed and keep it at constant to cool the clutch.

- *When it is necessary to stop the vehicle temporarily at the hill, such as traffic jam, the brake pedal must be depressed or the parking brake must be engaged; do not use accelerator pedal or "crawling" function to keep the vehicle stable, otherwise the clutch will be damaged.*

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

■ Braking and parking vehicle

● Stopping the vehicle

Put the selector lever in “N” position and draw back the parking brake while stepping on the brake pedal.

● Parking the vehicle

1.Put the vehicle into the state of a full stop.

2.Apply the parking brake.

Step on the brake pedal, and draw back the parking brake lever.

3.Set the gear position of the selector lever.


› Place the selector lever in **N** position on a flat road.

› On a slope, place the selector lever into the **1** or **R** position, and apply wheel blocks if necessary.

4.Shut down the engine.

Shut down the engine and lock the doors when leaving the vehicle.

Operation of parking brake lever

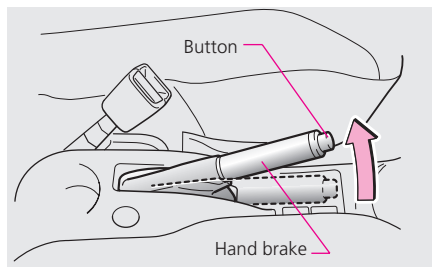


● Apply the parking brake

While you step on the brake pedal, pull up the parking brake lever without pressing the button to apply the parking brake.

- › **Stroke of parking brake lever: 6-9 teeth.**

★ **CAUTION:** After applying the parking brake with the key in the “ON” position, the pilot lamp will light up.

An audio warning will sound if driving the vehicle with the parking brake engaged.

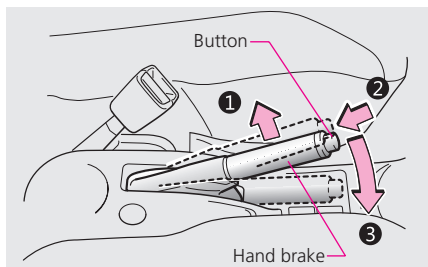

● Release the parking brake

While stepping on the brake pedal:

- ① Slightly pull up the parking brake lever;
- ② Press the button and hold it;
- ③ Put down the parking brake completely.

★ **CAUTION:** Check if the pilot lamp extinguishes after releasing the parking brake with the key in the “ON” position.

★ **CAUTION:** Driving under parking braking is not allowed.

Otherwise, that will cause overheating of the brake components, and then impair the braking performance and speed up wear of the brake.

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency


Maintenance

Technical data

Index

Operation of lights

■ Operation of high-beam & low-beam lamps

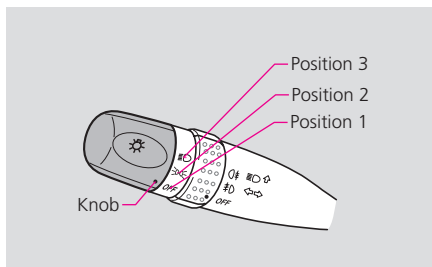


● Operation of light switch

Location of knob	Light ON
Position 1	All lights OFF
Position 2	Contour light, license plate light, dashboard light
Position 3	Headlight, contour light, license plate light, dashboard light

● Working conditions

All lights listed above can be operated independently of the key position.

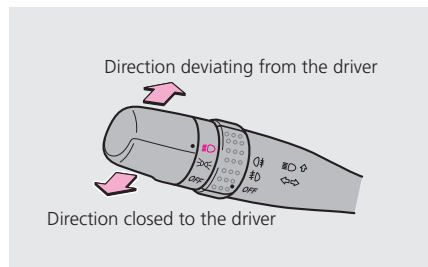

● Operation of high-beam & low-beam modes

1. When the light switch is in Position 3, the low-beam lamp of the headlight illuminates. If pushing the handle to the direction away from the driver, the high-beam lamp will illuminate permanently.

2. If pulling the handle to the direction toward the driver when the light switch is in Position 3, the low-beam lamp will extinguish and the headlight will switch from the low-beam mode the high-beam mode. Release the handle, the headlight will automatically return to the low-beam mode.

3. When the headlight is in the high-beam mode, the high-beam indicator in the instrument will light up.

tor in the instrument will light up.


★ **CAUTION:** Even if the battery is fully charged, using the lights for a long time with the engine shut-down will cause capacity loss of the battery.

- Follow me home ▲

Turn OFF the position lamp, pull out the vehicle key and open the driver's side door, and then close and lock it with a remote controller. If the above actions are completed within 45 seconds, the low beam lamp will be delayed 30 seconds before turning OFF to allow you to leave the vehicle when it is dark.

★ **CAUTION:**

If no light is used or the light is not turned OFF before turning the ignition switch OFF, the Follow Me Home function will not be enabled.

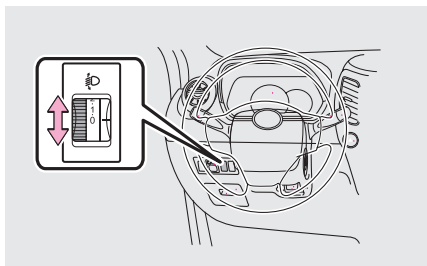

● **Beam height adjustment switch ▲**

This vehicle has a low-beam vertical adjustment mechanism, which can be activated when the key is in the "ON" position and the low-beam lamp has been switched on. The beam may be deflected upward when the vehicle is under loaded condition. In this case, it needs to adjust the height of the light beam. Rotating the knob downward will move the beam of the headlight downward accordingly, and vice versa.

Prevent glare caused to the driver of a vehicle coming in the opposite direction. Set the switch in a suitable position according to the number of persons and loads in the vehicle (see the following instructions).


Position	Instructions
0	Driver
1	Driver + co-driver
2	Driver + co-driver + 2 passengers (rear seat)
3	Driver + co-driver + 3 passengers (rear seat)
4	Driver + co-driver + 3 passengers (rear seat) + luggage
5	Driver + 3 passengers (rear seat) + luggage

Please make adjustment among Position 3, 4 and 5 depending on the weight of luggage.

It is possible to make fine adjustment with a half position according to particular circumstances.

Contents
Warning
Operation
Driving
Interior Devices
Safety
Emergency
Maintenance
Technical data
Index

■ Operation of turn light

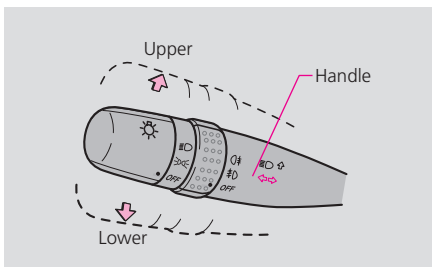

- 1. Pull up or step on the handle to activate the left or right turn light to blink. The turn indicator in the instrument will also blink at the same time.**

After returning the steering wheel, the handle will be reset automatically. If this does not happen, please reset the handle manually.

2. Changing lanes

During lane changing movement, gently pull up or push down the handle and hold it. Then the corresponding turn light and indicator will blink. After you release the handle, it will reset automatically and the turn light will extinguish.

● Working conditions

The turn lights can be activated when the key is in the "ON" position or the engine is running.

en.carobook.com

■ Operation of fog light

When the field of view is limited in rainy or foggy weather, use the front fog lights to supplement the headlights, and the rear fog lights to alert the following vehicles.


★ **CAUTION:** *If the field of view is in good condition, using the rear fog lights may cause the following vehicles confused. So do not use them if not necessary.*

● front fog lamp assist lighting function▲

When the engine is operating, the low beam lamp is on and the vehicle speed is lower than 40 km/h, the left side front lamp will light up when you turn the steering wheel to the left side or the turning angle is bigger to some point and the right side front lamp will light up when you turn the steering wheel to the right side or the turning angle is bigger to some point. If you reverse the gear when the front fog lamp on one side lights up, the fog lamps on both sides will light up.

★ **CAUTION:**

the priority of the turning signal lamp is higher than the turning signal.

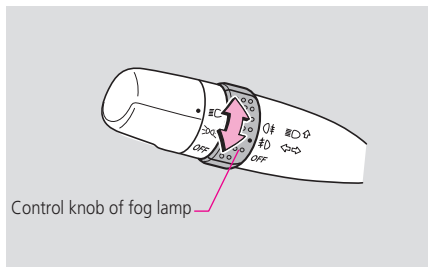

● Operation of front fog light▲


After you turn the knob to the **F** position, the front fog lights will illuminate.

After you turn the knob to the "OFF" position, the front fog lights will extinguish.

As long as the front fog lights are lit, the indicator in the instrument will illuminate simultaneously.

● Working conditions

The front fog lights can be activated when the contour lights or headlights are lit.

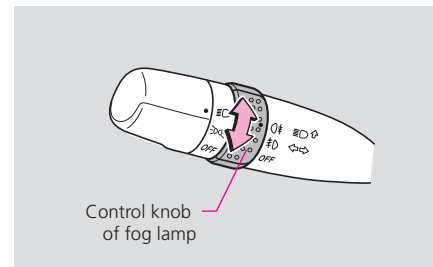

● Operation of rear fog light


After you turn the knob to the **R** position, the rear fog lights will illuminate.

As long as the rear fog lights are lit, the indicator in the instrument will illuminate simultaneously.

● Working conditions

1. The rear fog lights can be activated when the front fog lights are lit.
2. After the rear fog lights have been turned on, they will not extinguish as long as the contour lights are lit even if the headlights extinguish.
3. After the rear fog lights have been turned on, they will extinguish if the contour lights extinguish.

■ Operation of daytime running lights ▲

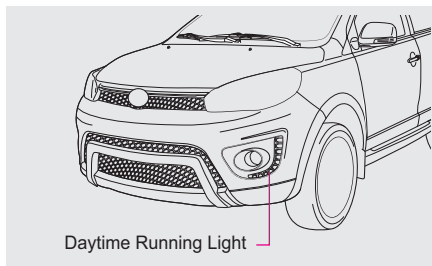


When the engine is running and the light switch is in the OFF position (position 1), the daytime running lights will light up.

When the engine is not in operation (excepting situations where it stalled all of a sudden) or when the light switch is in the OFF position, the daytime running lights will go out.

en.carobook.com

Windshilder wiper operation

■ Operation of front windshield wiper

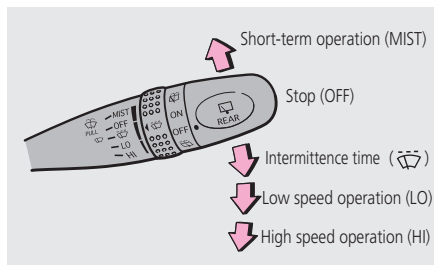

● Swinging Front Windshield Wiper

The windshield wiper and washer can be activated when the ignition switch is in the "ON" position.


● Positions of front windshield wiper

- › Mist gear of front wiper (MIST)
- › Off gear of front wiper (OFF)
- › Intermittent gear of front wiper (INTERM)
- › Low gear of front wiper (LO)
- › High gear of front wiper (HI)

The "OFF" position is an initial position.

The "MIST" position is an auto-return

position. When the windshield wiper is set in this position, it will work at low speed.

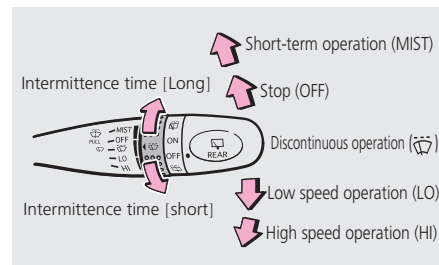

● Adjustable intermittent windshield wiper

When the windshield wiper is set in the "INTERM" (INTERM) position, the intermittent time can be adjusted in the range of 3-12s by turning the knob.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices


Safety

Emergency

Maintenance

Technical data

Index

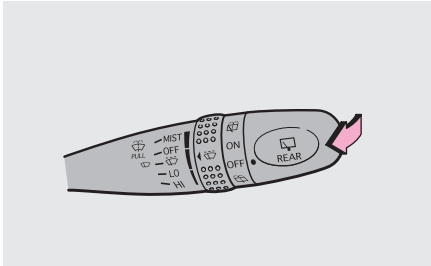


● Spraying washing liquid

Pull the switch of the windshield wiper to the direction toward the driver to spray the washing liquid.

- › After spraying the washing liquid, the windshield wiper will move several times.

en.carobook.com

■ Operation of front windshield wiper

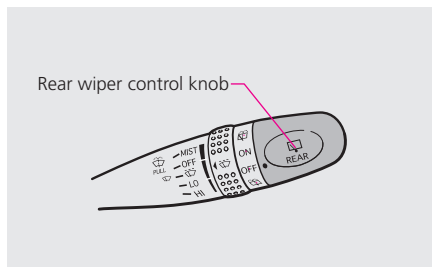

Operate the rear windshield wiper by turning the knob into the corresponding position:

- › ACTIVE + SPRAY ()
- › Rear wiper on (ON)
- › Rear wiper off (OFF)
- › The washer sprays water. However, the windshield wiper does not work ()

● Working conditions

The rear windshield wiper can be activated when the key is in the “ON” position or the engine is running.


★ CAUTION:

- Do not use the windshield wiper when the glass surface is dry. Otherwise, it will scratch the glass surface or cause excessive wear of the blade.
- Avoid continuous use of the washer for more than 20s. Never use the washer when the reservoir is empty. Otherwise, the motor will be burned.
- Please check the liquid level of the washer reservoir on a regular basis and fill it in a timely manner. Always use the recommended washing liquid in cold weather as it will not be frozen in the washer reservoir. Otherwise, the liquid will not only lose the washing function, also cause freeze damages to the components.
- The glass surface attached with ice or other foreign materials may block normal movement of the windshield wiper and hinder it on the way. Even if the wiper switch is turned off, it can also cause the motor to burn out. If the windshield wiper gets stuck, park the vehicle in a safe place and turn off the ignition switch. Then clear the glass surface to restore normal movement of the windshield wiper.

- Before using the windshield wiper in cold weather, always check if the blade has been frozen on the glass surface. Using the windshield wiper with the blade frozen on the glass surface may cause the motor to burn out.

■ Operation of warning lamp switch

If the vehicle has to be parked on the way due to a failure, always use the warning lamps to alert other vehicles.

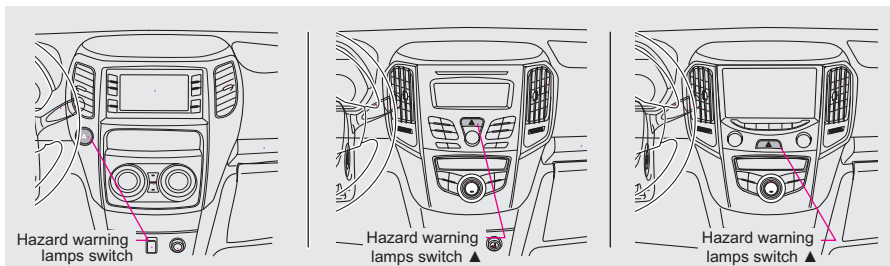

When you press the switch for the first time, all turn lights as well as the indicator in the instrument will blink simultaneously.

Press the switch again, all turn lights as well as the indicator in the instrument will extinguish.


en.carobook.com

★ **CAUTION:** In order to prevent loss capacity of the battery, do not use this function for a long time with the engine shutdown.

● Working conditions

This function can be activated independently of the key position.

■ Operation of horn

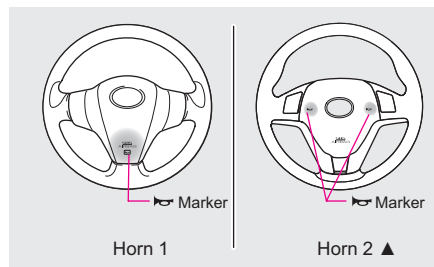

Press the peripheral area marked on the steering wheel to activate the horn.

★ **CAUTION:** Make sure to fix the steering wheel firmly after each adjustment of its position. Otherwise, the horn will not work normally.

● Working conditions

This function can be activated independently of the key position.

Contents

Warning

Operation

Driving

Interior
Devices

Safety


Emergency

Maintenance

Technical data

Index

■ Operation of ESP switch ▲

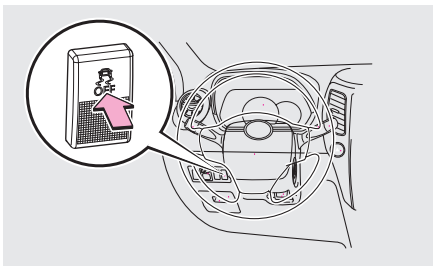


Press this switch once to switch between the “ON” and “OFF” positions of the ESP function.

After you turn off the ESP function, the ESP OFF indicator in the instrument will light up.

en.carobook.com

● Working conditions

This function can be activated when the key is in the “ON” position or the engine is running.

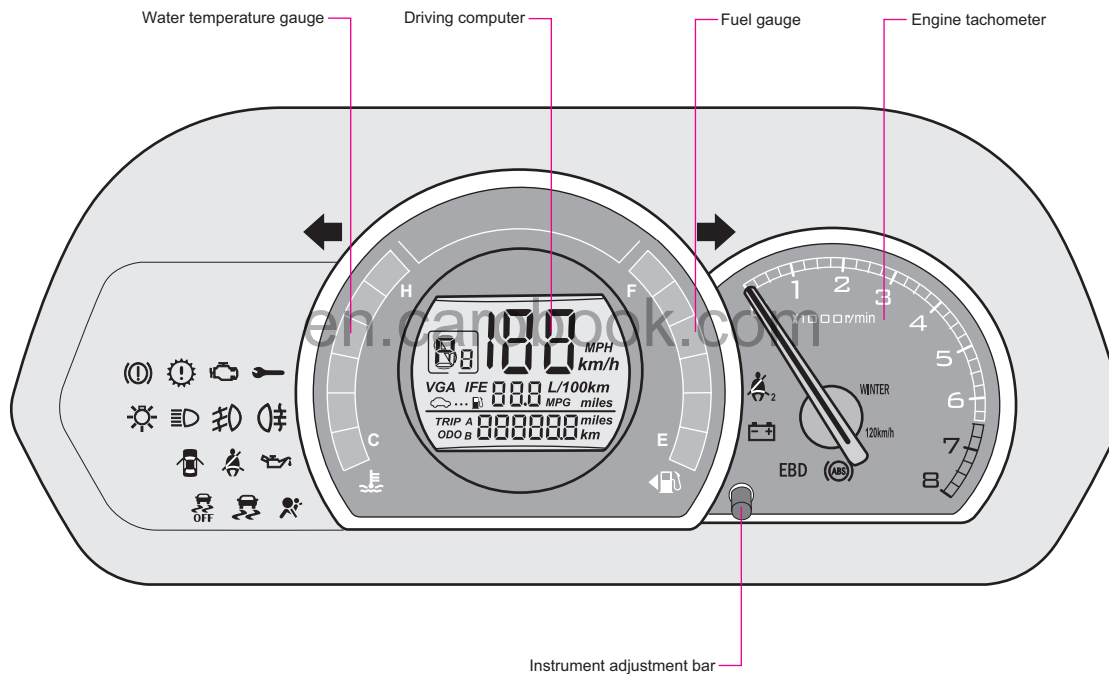

When you turn the key into the "ON" position or starting the engine, it is normal for the pointer of an instrument drift around the zero position for a short time.

● Fuel gauge

When the key is in the "ON" position or the engine is running, the approximate amount of the remaining fuel can be shown with 6 dash lamps between "E" and "F"

When the content of the fuel tank is less than or equal to 8L, the first dash lamp will start flashing, and the yellow low fuel level warning lamp  will illuminate.

Fuel tank capacity: 45L.

★CAUTION:

- 1) While driving on a slope or making a turn, the fuel will sway in the tank. Therefore the fuel display may not be stable.
- 2) It takes some time to obtain a stable fuel display after refueling.
- 3) When the key is in the "ON" position, it is not able to display the remaining fuel accurately.

● Water temperature gauge

When the key is in the "ON" position or the engine is running, the approximate temperature of the engine coolant can be shown with 6 dash lamps between "C" and "H"

When the engine coolant temperature is higher than 115°C, the red engine coolant temperature warning indicator  will illuminate. In this case, you must park the vehicle in a safe place immediately and carry out inspection and repair work accordingly.

● Engine tachometer

To show the revolution speed of the engine per minute.

Do not run the engine in the red warning zone (exceeding the permissible range of the engine speed). When the pointer is in the red warning zone, continuing running the engine will cause negative impacts on the engine, or even damages to the engine.

● Driving computer

The dashboard includes a simple trip computer to display the following information:

› Shift gear(AMT vehicle)

› Travel speed

› Instantaneous fuel consumption

The instantaneous fuel consumption is displayed in L/100km. This information can help you adjust your driving habits and make the fuel consumption reach your expected value.

The instantaneous fuel consumption will not be displayed when the travel speed is zero. It is also normal for the instantaneous fuel consumption to get a high calculated value when the vehicle is travelling at low speed during the starting or braking process.

› Cruising mileage

The cruising mileage is displayed in km. The trip computer can estimate the distance you can still drive according to the current driving mode and the content of the fuel tank. However, if the value of cruising mileage is

less than 50km, it will display as "---".

If you drive your vehicle in more economical pattern, the effective distance can be further expanded.

★ **CAUTION:**

- *If refilling a small amount of fuel, the cruising mileage will not be recorded for this added amount.*
- *The cruising mileage may vary from the driving mode, travel speed and traffic conditions. This information is for reference only.*
- *The "cruising mileage" function may not work correctly if the vehicle is travelling on uneven surfaces.*
- *Make sure to refuel the tank as soon as possible when the low fuel level warning lamp illuminates.*

› **Trip mileage (TRIP A or TRIP B)**

Display range: 0 ~ 9999.9 km;

Minimum display unit: 0.1 km.

★ **CAUTION:** *The trip mileage will be cleared when the instrument power is cut off (not the ignition power, but the battery power).*

› **Total mileage (ODO)**

Display range: 0 ~ 999999 km;

Minimum display unit: 1 km.

● **Instrument adjustment bar**

The instrument adjusting rod can be used for adjustment operation in three modes:

Short press, long press and rotation.

1. Short press operation:

Press the instrument adjusting rod shortly, the information displayed in the mileage area on the trip computer will be switched over in the following order: the total mileage (ODO) - trip mileage A (TRIP A) - trip mileage B (TRIP B) - Total mileage (ODO).

2. Long press operation:

When TRIP A or TRIP B information is displayed in the mileage area on the trip computer, pressing the adjusting rod for a long time will clear the trip mileage currently displayed, however without affecting the trip information area on the trip computer.

When the ODO information is displayed

in the mileage area on the trip computer, if you press the adjusting rod for more than 2s, the information displayed in the trip information area on the trip computer will be switched over in the following order: "Instantaneous fuel consumption – Cruising mileage - Instantaneous fuel consumption".


3. Rotation operation:

The backlight brightness of the instrument can be adjusted by rotating the instrument adjusting rod left and right. While making adjustment, the current backlight level will be displayed in the mileage area on the trip computer.

The following figure shows the display information when the backlight level is



■ Descriptions of indicators and warning lamps

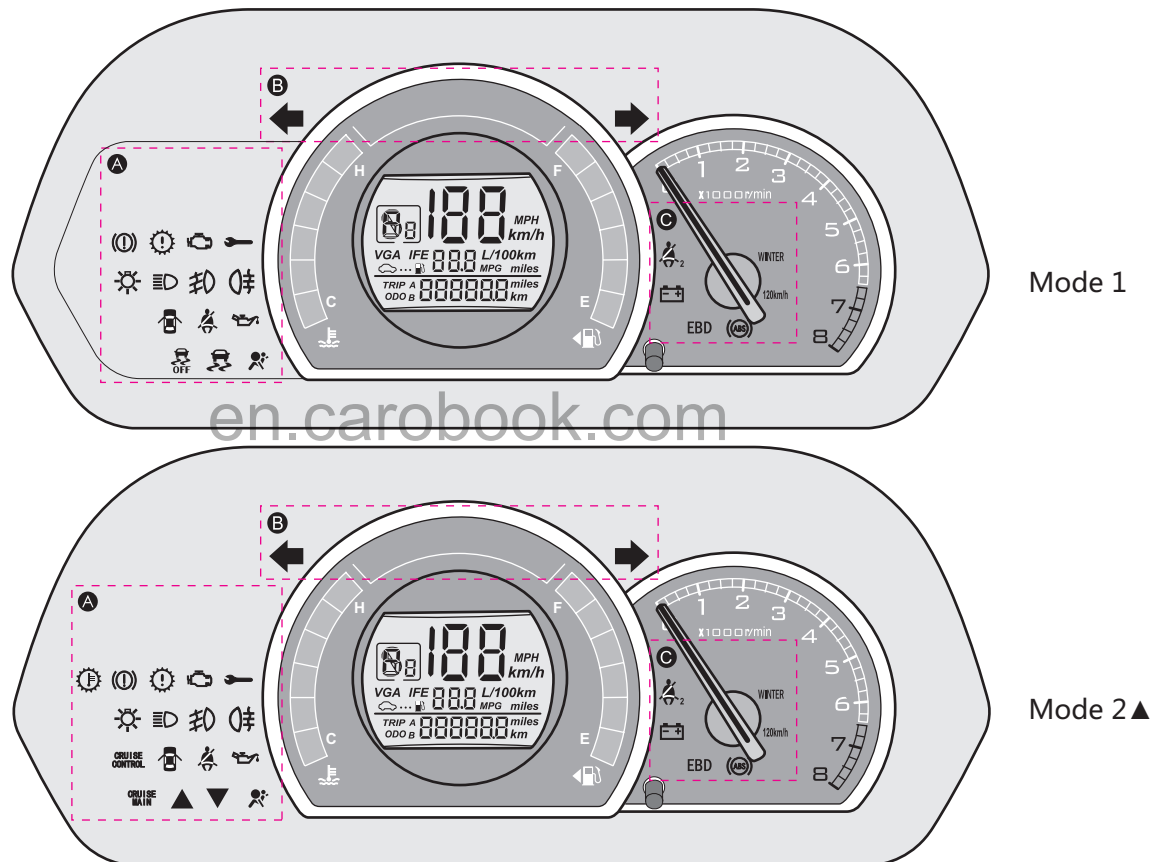

A Braking system fault and parking brake indicator lamp Main lighting switch indicator lamp Door ajar warning lamp ESP turndown indicator lamp Upshift Reminder Indicator Light	Transmission fault indicator lamp High beam indicator lamp Safety belt reminder lamp ESP operating and fault indicator lamp Downshift Reminder Indicator Light	Engine fault indicator lamp Front fog indicator lamp Oil pressure warning indicator lamp Airbag fault indicator lamp Transmission oil temperature warning indicator	Engine maintenance indicator lamp Rear fog indicator lamp Cruise Control Indicator Light Cruise Control Main Indicator Light
B Left and right turn signal indicator	C Unfastening indicator lamp of passenger safety belt EBD system fault indicator lamp Battery charging indicator lamp Winter mode indicator lamp ABS system fault indicator lamp 120km/h 120km/h alarm indicator lamp		

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index



- **Braking system fault and parking brake indicator lamp**

This indicator will illuminate when there is a failure of the braking system or the parking brake lever is engaged. If the indicator is still lit when the parking brake lever has been released, stop the vehicle and check it.

★ **WARNING:** *Never continue to drive the vehicle while this braking system error & parking brake indicator is lit. Failing to observe this requirement may lead to accidents. Please contact the nearest Great Wall Motor authorized service shop to check the brake as soon as possible.*



- **Transmission error indicator (AMT vehicle)**

This indicator will illuminate when there is a failure inside the transmission.



- **Engine system error warning lamp**

The engine ECU can monitor and control the normal operation of the engine through controlling the electric fuel injection (EFI) system. This warning lamp shall illuminate when the ignition switch is in the "ON" position, and shall extinguish when the engine is running. If the warning lamp is lit while the engine is running or the vehicle is travelling, it indicates there is a failure in the electric fuel injection system. Please contact the nearest Great Wall

Motor authorized service shop to check and solve the problem.

★ **CAUTION:** *Continuing to operate the engine without checking and repairing the emission system will cause serious damages to the emission control system and affect the fuel economy and power performance.*



- **Engine maintenance indicator lamp**

This indicator will illuminate if there is an engine failure which is not related with the emission system.



- **Main lighting switch indicator lamp**

The main lighting switch indicator will illuminate when the main lighting switch of the combination switch is turned on.



- **High beam indicator lamp**

The high beam indicator will illuminate when the high-beam lamp is turned on.



- **Front fog indicator lamp**

The front fog light indicator will illuminate when the front fog light is turned on.



- **Rear fog indicator lamp**

The rear fog light indicator will illuminate when the rear fog light is turned on.



- **Door ajar warning lamp**

This indicator will illuminate when the door is open or not closed in place.



- **Safety belt reminder lamp**

When the key is in the "ON" position, this indicator will illuminate if the driver seat belt is not used or fastened properly. When the travel speed reaches 20km/h, and the seat belt is still not used or fastened properly, this indicator will start to blink and the instrument will give an audible alarm. The alarm will last for 100 seconds, and the indicator will be lit permanently.

This indicator shall extinguish when the seat belt is in good working condition.

★**CAUTION:** Always use the seat belt while driving the vehicle.



- **Oil pressure warning lamp**

This light shall illuminate when the key is in the "ON" position, and shall extinguish after the engine is started.

If the light goes out when the key is in the "ON"

position, it may indicate a failure of signal lights, sensors or circuits. In this case, please check the system and repair it accordingly.

If this light occasionally illuminates while the engine is running, that will not cause damages to the engine system.

If the this light is lit permanently during normal operation of the engine, please stop the vehicle immediately and contact the nearest Great Wall Vehicle authorized service shop to check and solve the problem as soon as possible.

This problem may possibly be caused by a low oil pressure or low oil level.

If continuing to operate the engine in this situation, it will cause serious damages to the engine.



- **ESP OFF indicator ▲**

This indicator will illuminate when the ESP system is turned off.



- **ESP ON and error indicator ▲**

This indicator will blink when the ESP system is turned on.

It will be lit permanently if there is a failure of the ESP system.



- **Airbag fault indicator lamp**

When you turn the key into the “ON” position, the airbag error indicator will be lit for 6s and then go out. That indicates the airbag system is working properly.

If the above phenomenon does not happen, it indicates there is a failure of the airbag system. Please contact the nearest Great Wall Vehicle authorized service shop to check and solve the problem.



- **Left/right turn indicator**

After switching on the left or right turn light, the corresponding indicator will blink.

After actuating the hazard warning switch, both turn indicator will blink simultaneously.



- **Co-driver seat belt unfastened indicator ▲**

This indicator will illuminate if the co-driver seat is occupied but the seat belt is not used or fastened properly. As long as the travel speed reaches 20km/h when this indicator is lit, the indicator will start to blink and the instrument will give an audible alarm. The alarm will last for 100 seconds, and the indicator will be lit permanently.

This indicator shall extinguish when the co-driver seat belt is in good working condition.



- **Battery charging indicator lamp**

This indicator will illuminate when the key is in the “ON” position.

The indicator shall be off while the vehicle is traveling or the engine is running at idle speed, as the generator can produce electricity at this time. If in this case the indicator is lit, make sure to check the charging system immediately. Otherwise the battery will be discharged completely.

★ **CAUTION:** *If the drive belt is slack or damaged, the generator will not produce electricity. It is required to check and repair the charging system immediately.*



- **ABS error indicator**

The ABS error indicator is used to detect the condition of the ABS control system. When you turn the key into the “ON” position, this indicator shall be lit for 1-3s and then go out. That indicates the system is working properly.

If the indicator does not illuminate or is lit permanently, it indicates there is a failure of the system. Please contact the nearest Great Wall Vehicle authorized service shop to check and repair the ABS system.

★ **CAUTION:** *The hydraulic brake may still work*

even when the ABS system is damaged. However, you still need to contact the nearest Great Wall Vehicle authorized service shop to check and repair the system as soon as possible.

EBD

• EBD error indicator

The EBD error indicator is used to detect the condition of the EBD control system. When you turn the key into the “ON” position, this indicator shall be lit for 1-3s and then go out. That indicates the system is working properly.

If the indicator does not illuminate or is lit permanently, it indicates there is a failure of the system. Please contact the nearest Great Wall Vehicle authorized service shop to check and repair the EBD system.

★ **CAUTION:** *The hydraulic brake may still work even when the EBD system is damaged. However, you still need to contact the nearest Great Wall Vehicle authorized service shop to check and repair the system as soon as possible.*

WINTER

• Winter mode indicator (AMT vehicle)

When the key is in the “ON” position or the engine is running, the indicator will illuminate after selecting the WINTER mode.

120km/h

• 120km/h warning lamp ▲

When the vehicle speed is greater than or equal to 120km/h, this indicator will blink and the buzzer will sound. If the speed is consistently greater than or equal to 120Km/h, the buzzer will be mute after sounding 10 times while the indicator will remain blinking.

CRUISE CONTROL

• Cruise control indicator light ▲

Lights up when the cruise control function has been activated.

CRUISE MAIN

• Cruise control main indicator light ▲

When the cruise control function has been activated, the indicator light will light up.



• Upshift reminder indicator light ▲

When engine speed is too high, the upshift reminder indicator light will light up.



• Downshift reminder indicator light ▲

When the current gear is too high, the downshift reminder indicator light will light up.



- **Transmission oil temperature warning indicator (6AMT vehicle)**

When the key is in “ON” position and the clutch is overheated, the transmission oil temperature warning indicator flashes. In this case, the driver should park the vehicle at a safe place until the reminding disappears or increase the vehicle speed and keep it at constant; for details, please refer to the gear shift reminding label on the sun visor above the driver for operations.

en.carobook.com

- **Turn on the fog light**

Make sure to turn on the fog light while driving in foggy weather.

- **Press the horn to alert pedestrians and other vehicles. When hearing the horn of other vehicles, respond by pressing the horn immediately to indicate the location of your own vehicle.**

★ **CAUTION:** *Check relevant parts of the vehicle (e.g.: headlights, fog lights etc.) before driving the vehicle in order to prevent accidents during driving, which may cause personal injuries or even death.*

- **Drive at low speed and pay attention to safety**

While driving in foggy weather, always drive at low speed as far as possible and maintain an adequate safety distance from preceding vehicles. It is prone to have fog on the road under condition of low temperature and high humidity. Make sure not to apply the brake suddenly if possible.

- **Never wipe off the mist on the glass while driving**

Due to a big temperature difference between inside and outside of the cab, the inside surface of the windshield is often covered with a thin layer of mist which may affect the driver's field of view. In this case, you can remove the mist quickly by running the air conditioner or open the window slightly to maintain a consistent temperature inside and outside the vehicle, in order to prevent formation of the mist on the inside surface of the windshield.

If you want to wipe off the mist on the windshield by hand, make sure to stop the vehicle before doing it. Never wipe off the mist on the glass while driving.

■ Tips on driving in rainy weather

● Always drive carefully on slippery surfaces

› Driving in rainy weather may often company with poor forward visibility, mist on the front windshield and slippery road. So make sure drive with caution.

1. The road is prone to be slippery especially just under the rain. So make sure drive with caution.
2. It is prone to form water film while driving in rainy weather✕, which may impair normal function of the steering wheel and brake sometime. So make sure to reduce the speed accordingly.

✕ When driving at high speed in rainy weather, a water layer may be formed between the tyre and the road surface, and may easily cause the tyre loss of grip.

★ **WARNING:** Always drive carefully on slippery surfaces

- While driving on slippery surfaces, the tyre may easily goes into a skid due to sudden braking operation, acceleration or manipulation of the steering, and cause the vehicle loss of control and result in accidents.
- During upshifting or downshifting operation, the engine speed may be subject to significant changes, and the vehicle is prone to have a sideslip accident.
- After driving out of puddles, make sure to depress the brake pedal gently to check if the brake is functional. If a brake pad gets wet, the braking performance will be impacted significantly and only one side of the brake pad which is not wet can function normally. Therefore, it may easily cause accidents while manipulating the steering wheel.

● Do not drive through puddles

Puddles formed on the road after heavy rain may bring significant damages to the vehicle. Make sure not to drive on such roads as much as possible.

★ **WARNING:** While driving through a puddle, the water may get into the engine and cause serious accidents including damages of the engine.

In case that the vehicle gets trapped in the water while driving through a puddle, make sure to contact Great Wall Motor authorized service shop to check the following items:

- Check the braking performance of the brake.
- Check changes of oil quantity and quality for the engine, transmission and differential etc. (If the oil has white emulsion, it indicates the water has got into the mechanism and the oil must be replaced.)
- Check for poor lubrication of the drive shafts, bearings and universal joints.

■ Tips on driving in cold weather

● Replace the engine oil

Make sure to replace the engine oil according to changes of the temperature outside the vehicle.

● Replace the coolant

Make sure to refill a correct type of coolant in order to prevent the coolant from freezing.

Always use the type of coolant specified by the manufacturer.

● Check the battery capacity

The battery performance will degrade with a drop of the temperature, and sometimes may affect starting of the engine.

Check the battery capacity and recharge it if necessary.

● Prepare winter tyres

Make sure to use winter tyres while driving on snow and icy surfaces.

The specifications of a winter tyre must be the same as those of a standard tyre, i.e. the same size and also the same type.

For details, please contact the nearest Great Wall Motor authorized service shop.

● Prepare tire chains

Regulations regarding the use of tire chains vary according to location and type of road. Always check local regulations before installing chains.

Install tire chains on the front tires only. Do not install tire chains on only one tire. Install tire chains following the instructions provided with the tire chains.

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

★**CAUTION:** Observe the following precautions when installing chains:

- Use tires of the size specified and ensure correct installation. Tire chains used on a vehicle without proper size or installation can cause damage to the pipes, suspension, body or tire.
- Install and remove tire chains in a safe location. Turn on the emergency flashers, and set the warning triangle behind the vehicle.
- Stop the engine and set the parking brake before installing the tire chains.
- Do not use tire chains on the compact spare.
- Don't install tire chains when the tire inflation pressure is low.
- Don't damage aluminium alloy rim when using tire chains.

★**WARNING:** Observe the following precautions when driving with tire chains:

- Do not drive in excess of the speed limit specified for the tire chains being used, or 40 km/h, whichever is lower.
- Install tire chains on front tires as tightly as possible. Retighten chains after driving 0.5-1.0 km. Retighten or reinstall the tire chains if the tire chain is loose.
- Avoid sudden acceleration, turns and braking, as use of chains may adversely affect vehicle handling and cause accidents.
- When driving, if you hear the tire chain knock on the vehicle body or chassis, please stop the vehicle and retighten the tire chain. If you can still hear the sound, slow down until the sound disappears.
- Avoid driving on bumpy road surfaces or over potholes.

- Slow down before enter the curve, so you can control the vehicle.
- Remove the tire chains when driving on road surfaces without snow, or it may affect driving performance and severely damage tire.

● **Prepare a dedicated wiper blade for cold weather**

The wiper blade specially used for cold weather can prevent snow accumulation on the windshield. The metal part of the wiper blade is rubber-clad.

For details, please contact the nearest Great Wall Motor authorized service shop.

- 1. This wiper blade is difficult to clean up the windshield while driving at high speed. So make sure to reduce the speed accordingly.**
- 2. Always use a common wiper blade in the season when a dedicated wiper blade for cold weather is not necessary.**

● **Precautions on preparation before driving in cold weather**

● **Clean up snow on the hatchback**

Clear snow accumulated on the hatchback before opening it. Otherwise, that may easily cause damages to the hatchback.

● **Clean up snow and frost on the glass**

Accumulation of snow and frost on the inside or outside surface of the glass will affect the field of view for driving. The defroster can be used to remove the snow and frost without causing scratches on the glass.

● **Remove ice attached at the bottom of the vehicle**

Do not scratch the vehicle body while removing ice.

● **Clean up snow accumulated at the inlet on the lower edge of the front windshield**

The fan of the air conditioning system

can only work properly after cleaning up snow accumulated at the inlet on the lower edge of the front windshield. Working with accumulated snow may cause a fan failure, or blowing snow onto the glass.

Furthermore, the washer nozzle may not inject the washing liquid properly with accumulation of snow around it. Make sure to inject the washing liquid only after cleaning up snow accumulated around the washer nozzle.

● **When the wiper freezes**

Do not move the wipers, exterior mirrors or window glass if they can not work properly due to freezing condition. Pressing the switch continuously may cause damages to the device and capacity loss of the battery.


● **Clean up ice accumulated on the fender**

It may affect operation of the steering wheel. Make sure to check it often and remove the ice block before it becomes bigger.

- **Anti-slippage preparation**

Make sure to use winter tyres while driving on snow and icy surfaces.

★**WARNING:** When using winter tyres, make sure to drive with a correct tyre pressure. For safety purpose, avoid driving at high speed while using winter tyres.

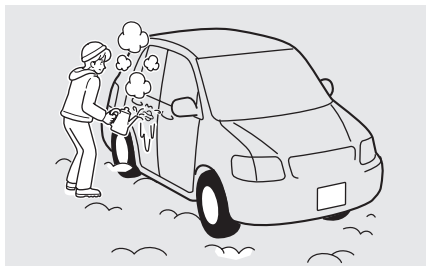

- When the door and hatchback freeze

Melt ice with hot water, and then clean up the water immediately.

Opening by force may cause damages to the door, hatchback and peripheral rubber parts.

In addition, the hatchback may be damaged if being opened by force.



- Pay attention to remove ice attached on the shoes

If there is ice attached on the shoe soles, it may cause slippage while stepping on a pedal, and increase moisture inside the vehicle and then cause frost, even ice formed on the wind glass.

● Precautions on driving in cold weather

● Avoid sudden operation while driving on slippery surfaces.

While driving at high speed, the vehicle may go into a skid due to sudden manipulation of the steering or braking operation and then cause accidents.

Drive slowly by controlling the speed and maintain an adequate distance from other vehicles.

While driving on a bridge or shady surface which is prone to freeze, make sure to reduce the speed and drive with caution.

★ **WARNING:** During upshifting or downshifting operation, the brake and engine speed may sometimes be subject to significant changes, and the vehicle is prone to have a sideslip accident.

● Clean up ice accumulated on the brake

Accumulation of ice may cause nega-

tive effects on the braking performance. Make sure to often depress the brake pedal gently to check if the brake is functional.

● Precautions on parking in cold weather

● Turn off the engine while parking the vehicle

Make sure to turn off the engine while parking the vehicle on snow surface or in snow weather.

★ **WARNING:** When the engine is running, the exhaust will enter the vehicle if there is snow accumulated around the exhaust pipe. That may cause carbon monoxide (CO) poisoning, or serious injuries, even death.

● Do not pull up the parking brake lever

Pulling up the parking brake lever in cold weather may lead to freeze of the brake mechanism and difficult disengagement of the parking brake

● When parking on even surfaces

Move the shift lever to the **R** position without pulling up the parking brake level.

● When having to park on a slope

To park the vehicle on a downhill slope, make sure to place stoppers below the front wheels.

To park the vehicle on an uphill slope, make sure to place stoppers below the rear wheels.

Move the shift lever to the **R** position (downhill slope) or the **1** gear position (uphill slope) without pulling up the parking brake level.

For details related with wheel stoppers, please contact the nearest Great Wall Motor authorized service shop.

If no wheel stoppers available, they can be substituted by big stones to stop the wheels.

● **Leave the engine compartment leeward**

The windward part normally has a lower temperature. In order to prevent degradation of the battery performance, it is recommended to park the vehicle by leaving its front body leeward as much as possible.

● **Lift up the wiper arm in advance**

When it snows in cold weather, the wiper may easily freeze on the glass. So make sure to lift up the wiper arm in advance.

● **Precautions with the steering system in cold weather**

To start up the vehicle for the first time during cold weather (-1°C and below) or when it has been parked outdoors for a long time, more strength may be needed to perform steering due to the higher viscosity of the power steering fluid at lower temperatures. When this occurs, please follow the following instructions:

1. Step on the accelerator to increase engine speed to 1500 revolutions per minute.
2. Release the accelerator to allow the engine to slow down and idle for 2 to 3 minutes in order to raise the temperature of the power steering fluid.

★ **WARNING:**

Power steering fluid is highly viscous at lower temperatures. Steering immediately after the car has been started up may have an impact on system functionality and lifespan.

■ Tips on driving in hot weather

In summer, hot weather and high temperature may be adverse to normal operation of the vehicle as well as health of the driver. To ensure driving safety, the driver shall pay particular attention to the following measures:

- **Prevent the engine from overheating,**

The engine is prone to have an overheating problem as the ambient temperature is quite high in summer. So make sure to enhance inspection and maintenance of the engine cooling system, and clean up scale in the water tank and water jacket, as well as dirt accumulated in the radiator fins.

- **Prevent tyre burst**

In summer, the air pressure in the tyres of the vehicle will be increased with a rise of temperature and it is prone to have a tyre burst problem.

- **Prevent heat stroke**

It is prone to cause heat stroke due to strong sunshine and high temperature in summer.

Make sure to keep sound ventilation inside the cab.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

■ Tips on economical driving

- **Foreseeable driving**

- › Maintain an appropriate distance with a vehicle ahead to avoid unnecessary acceleration and braking.
- › Stable speed can reduce fuel consumption.

- **Drive with an appropriate gear**

Avoid driving vehicle with a high gear at a low speed or with a low gear at a high speed, and maintain the engine at a low speed to reduce fuel consumption and wear.

- **Reduce idling**

If you need to park for a long time at traffic lights, a railroad crossing or during a traffic jam, turn off the engine to reduce unnecessary fuel consumption.

- **Avoid unnecessary load**

- › Vehicle load and overload driving will increase fuel consumption.
- › Before driving, remove unnecessary items from the vehicle.

- **Regularly check tire pressure**

Too small tire pressure will increase rolling resistance, thereby increasing fuel consumption while increasing tire wear.

- **Regular scheduled maintenance**

Regular maintenance can ensure that your car has a longer life and optimum economy.

- **Turn off electrical components temporarily not required**

Electrical components such as air conditioning, heated seats and rear window heater require a lot of energy and fuel consumption, therefore, turn them off if they are not used.


- **Turn off vehicle windows and sunroof**

Opening vehicle windows or sunroof will increase wind resistance, thereby increasing fuel consumption, so turn them off when they are not needed.

- **Coast using inertia**

In approaching a red light or driving down along a large slope, you should release the accelerator pedal to allow the vehicle to coast.

Reverse radar ▲

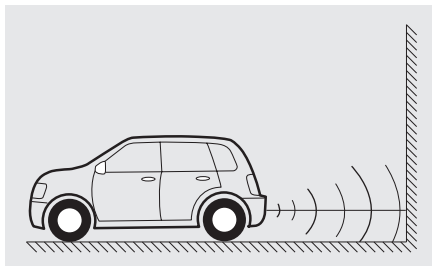

The reverse radar is a radar detection device mounted on the rear bumper of the vehicle. When driving in reserve or parking the vehicle, it can detect if there is any obstacle behind the vehicle and the distance between such obstacle and the vehicle through sensor and can also provide voice prompts to help the driver to park the vehicle safely and easily without causing collision.

● Activation

When the key is in the “ON” position and the shift lever is engaged in **R** position, this device will be activated and no voice prompt will be given (indicating the system is normal).

● Close

Move the shift lever to the **R** position, this device will be deactivated.

● Error detection

If there is a failure of the reverse radar system, the buzzer will first sound for two times, and after 0.3s give a warning tone for different times to prompt the failure occurred. See details as following:

The buzzer sounds once after 0.3s, and then twice after 1s -- that indicates a defect of the left outside sensor or its circuit.

The buzzer sounds once after 0.3s, and then 3 times after 1s -- that indicates a defect of the left inside sensor or its circuit.

The buzzer sounds once after 0.3s, and then 4 times after 1s -- that indicates a defect of the right inside sensor or its circuit.

The buzzer sounds once after 0.3s, and then 5 times after 1s -- that indicates a defect of the right outside sensor or its circuit.

★**CAUTION:** *In case of two or more sensors or circuits defective, the system will first detect the error on the left and give relevant prompts by following the left-to-right order. Only after the first defective sensor or circuit has been fixed, the system will then detect the next error and give relevant prompts.*

★**WARNING:** *If the device is partially defective, the remaining normal sensor can still work, but that will significantly affect the range of detection, and may cause vehicle accidents and personal injuries. Please send the vehicle to the nearest Great Wall Motor authorized service shop for inspection and repair.*

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

Area A	Area B	Area C
Buzz	4Hz interruption tone	2Hz interruption tone
40 ± 5	100 ± 5	150 ± 5

Organization: cm

● Detection range

The system will switch to the normal detection mode after completing the self-test process. The relation between the distance of obstacle and frequency of alarm sound is shown in the following figure.

Zone A: The alarm is a continuous sound;

Zone B: The alarm is an intermittent sound with a frequency of 4Hz.

Zone C: The alarm is an intermittent sound with a frequency of 2Hz. The obstacle is 100-150cm right behind the vehicle.

★**CAUTION:** *In the following circumstances, it may easily lead to detection failure or poor detection. However it does not indicate malfunction of the system.*

- The obstacle is a small object, e.g. wire mesh, fence, post, rope etc.
- The vehicle is travelling on the grass or uneven surfaces.
- The obstacle is snow, cotton or a substance which surface is easy to absorb sound waves.
- There are foreign materials attached on the surface of the sensor.

To ensure normal function of the system, make sure to keep the sensors clean and free of snow and ice.

Clean the surface of the sensor with a cloth or wash it with water (low-pressure water). Never wash the sensor with a high-pressure washer. Keep the surface of the sensor free of compaction or impact.

- There are ultrasonic noises with the same frequency, such as metallic sound, sound produced during emission of high-pressure gas and when the vehicle horn is beeping right toward the sensor.
- The obstacle is a reflecting object with sharp corners or an object with a taper shape.

★ **WARNING:**

- 1) Although the device can help the driver to avoid an accident during driving in reserve, the driver still needs to concentrate on operation without negligence!
- 2) There is a blind spot for the sensors of this device, where obstacles in some areas may not be detectable. When driving in reverse, make sure there are no children or animals around the vehicle, because the sensors may not be able to detect them.
- 3) When the travel speed is more than 5km/h, the system can not work properly to ensure effective identification of obstacles.
- 4) The detection range may be narrowed due to various factors, e.g. physical characteristics, position, angle, size, material of the object or complex background etc., which may resulting in no action or misidentification. However it does not indicate malfunction of the system. Especially when reversing uphill or downhill, it may cause a false alarm. So make sure to exert more caution in this case.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance


Technical data

Index

● Description of functions

1. Display of rearview images

When you engage the "reverse gear", the camera mounted on the rear bumper will start to work and send rearview images to the multimedia player for display, so that the driver can observe obstacles behind the vehicle directly through the display. As shown in the figure:

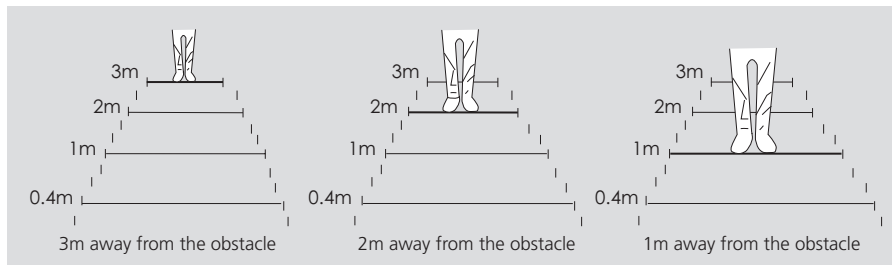

Note: The two lines on the screen are used to mark out an area extending backward naturally from both sides of the vehicle body, i.e. objects outside these two lines are safe.

2. The reversing video will be displayed with priority while backing the vehicle

When the multimedia player is playing other program sources, it will automatically interrupt the current playlist and switch to display of rearview images as soon as starting reversing operation. (To be supported by the multimedia player)

★ CAUTION:

- When the camera surface is covered with dust or other foreign materials, it will affect the image effect. The user shall clean it up in a timely manner. It is recommended to clean it gently with a soft damp cloth.
- Never wash the camera directly with a high-pressure washer.
- During night reversing operation in the dark without light, the reversing video may have snow points due to inadequate illumination.
- Camera viewing angle limitation: The areas near both sides of the rear bumper are blind spots where no images can be observed.

Warning tones

When you start the engine or during driving, the vehicle may emit warning tone in following conditions:

- › If the seat belt is unfastened and the speed exceeds the preset speed.
- › If the speed exceeds the preset alarm speed.
- › If the the parking brake is not released and the speed exceeds the preset speed.

If the driver-side door is opened while the ignition switch is in the LOCK or ACC position, the vehicle may emit warning tone in following conditions:

- › If the key is left in the ignition switch.
- › The vehicle lamps are on.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

Memorandum

en.carobook.com

4

Interior Devices

Air-conditioning system 158

peration of manual air conditioner 158

peration of of electric control air conditioner
162

peration of auto air conditioner(1) 166

peration of auto air conditioner(2) 171

Adjustment of air outlet 175

Audio system 176

Method for using sound input terminal

AUX ▲ 176

Audio system control button ▲ 177

Radio antenna 178

Cruise control ▲ 179

Operating instructions of in-vehicle blue-
tooth 181

Method for using interior equipment 182

un visor 182

Reading lamp and lamp in trunk 183

Storage device 185

Curtain ▲ 187

Standby power supply 189

Cigarette lighter and ash tray 190

Contents

Warning

Operation

Driving

Interior
Devices


Safety

Emergency

Maintenance


Technical data

Index

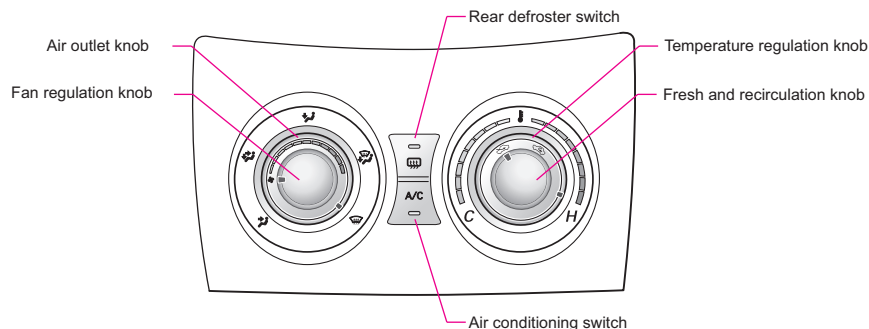

● In order to achieve the desired state

The system can be used under various setting conditions by operation of relevant knobs or switches.

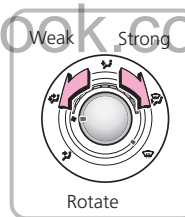


● Change the air flow

Rotate the fan adjusting knob to set the air flow.

The air flow can be set in 4 positions.

Rotate the knob right to increase the air flow, and left to reduce the air flow.


› After setting the knob in the initial position, the fan will stop running.

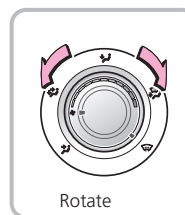


● Change the outlet

Rotate the outlet selector knob to select desired outlets.


• <Criteria for outlet selection>

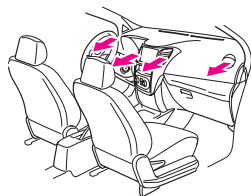


▶ The airflow blows to the upper body

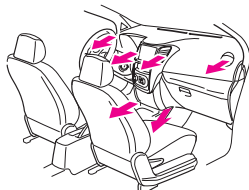


▶ The airflow blows to the upper body and feet

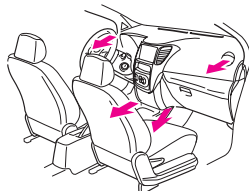


▶ The airflow blows to the feet

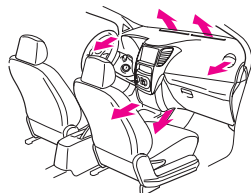

▶ The airflow blows to the feet and the windshield defogger is working

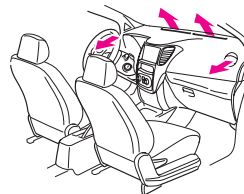

▶ Clean up frost/mist on the windshield

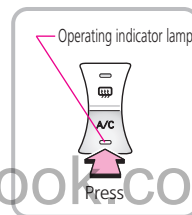


• **Set the air conditioner in the ON mode.**

Every time you press the air conditioner switch, it will switch between the ON mode and OFF mode of the air conditioner (cooling / dehumidification function).

› The Working pilot lamp will be lit while the system is working.


› It can be used while the fan is running.

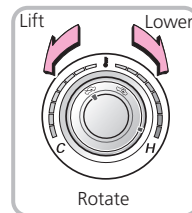

• **Adjust the temperature**

Rotate the temperature adjusting knob to set the temperature.

› Rotate the knob right to increase the temperature, and left to reduce the temperature.

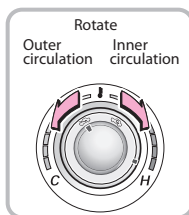


• Switch between internal circulation and external circulation

After setting the internal/external circulation selector knob in the “external circulation” position, the system will induce air outside the vehicle. If setting the knob in the “internal circulation” position, it will switch to the internal circulation.


Location of Knob	Mode
	Outer circulation A state of inducing air outside the vehicle. This position is to be used under normal circumstances.
	Inner circulation A state of blocking air outside the vehicle. You can switch to the internal circulation mode under the following conditions: When air outside of the vehicle is polluted due to a tunnel environment or traffic jams etc.; or if you want to enjoy cool/hot wind as soon as possible after getting into the vehicle, or enjoy cool wind as soon as possible with a high temperature outside the vehicle.

• Clean up frost/mist on the windshield


- To remove mist on the inside surface of the window:

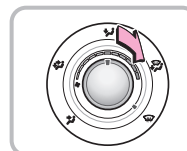

1. Actuate the fan adjusting knob to start the fan.

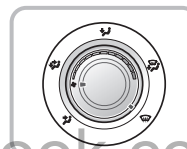

2. Set the outlet selector knob in the “windshield” position.

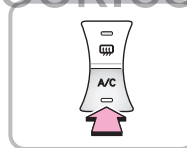

3. Press the air conditioner switch to turn on the air conditioner if it is not activated.
 › The Working pilot lamp will be lit while the system is working.



4. Actuate the internal/external circulation selector knob to switch to the external circulation mode.

5. Close the side outlets to increase the air flow blowing to the windshield.

- To remove frost or ice on the outside surface of the window:
 1. Set the outlet selector knob in the “☼” position.
 2. Actuate the internal/external circulation selector knob to switch to the internal circulation mode.
 3. Set the fan & temperature adjusting knobs to maximum.

★ **CAUTION:** *Do not use the air conditioner while the engine is not running to avoid capacity loss of the batter.*

• Operation of rear defroster

Press the rear defroster switch on the air conditioner panel to activate defrosting and defogging operation for the rear window.

› For the vehicle equipped with a rearview mirror heater

The rearview mirror heater and rear window defroster can be operated with a same switch.

★ **WARNING:** *During heating the rearview mirrors, the exterior rearview mirrors will get hot. Do not touch them with hands. Danger of burning injuries!*

★ **CAUTION:**

- *Using this function for a long time while the engine is not running will cause capacity loss of the battery.*
- *After cleaning up frost or mist on the window glass, make sure to turn off the defroster.*

• Knowledge

- About switching between internal circulation and external circulation

You can switch to the internal circulation mode by using the internal/external circulation selector knob under the following conditions:

- › When air outside of the vehicle is polluted due to a tunnel environment or traffic jams etc.;
- › If you want to enjoy cool/hot wind as soon as possible after getting into the vehicle;
- › If you want to enjoy cool wind as soon as possible with a high temperature outside the vehicle.

It is prone to formation of mist on the windshield if using the internal circulation function for a long time.


- About the outlet

After setting the outlet selector knob in the “face/foot” position, and then setting the temperature adjusting knob in the middle position, the hot wind will be blown out from the foot outlet and the wind with lower temperature will be blown out from the central outlet, driver-side outlet and co-driver-side outlet.

- With high temperature inside the vehicle


If the temperature inside the vehicle is high after parking, make sure to open the windows first to let hot air flow outside before turning on the air conditioner.

■ Operation of of electric control air conditioner

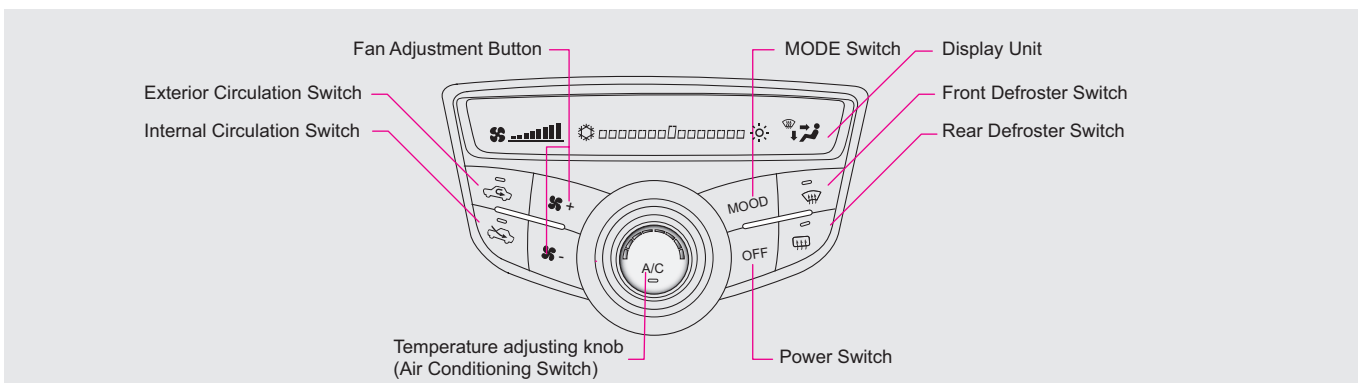

● In order to achieve the desired state


The system can be used under various setting conditions by operation of relevant knobs or switches.

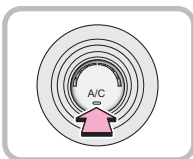

● Cooling with the air conditioning system

Press the Air Conditioning Switch (A/C) to turn on and shut down the compressor.

When the compressor is in operation, the switch will light up.

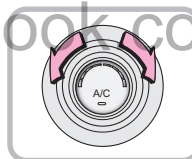

● Temperature adjustment

Turn the temperature regulation knob to set air temperature inside the vehicle.

- › Turn the knob to the right for a higher temperature and to the left for a lower temperature,
- › You can choose from a total of 15 temperature levels represented by lines on the display unit.

• Air volume adjustment

You may adjust the air volume using the air volume adjustment buttons (“+” or “-”).


- › You can select from 8 fan settings represented by lines on the display unit.
- › When the air conditioning system is in the OFF state, press the air volume adjustment buttons (“+” or “-”) to turn on the air conditioning system.

• Air outlet adjustment


Press the mode switch (MOOD) to select your preferred air outlet.

- › Each time you press the switch, you will be moving on to the next air outlet.
- › The air outlet selected is shown on the display unit.
- › When the air conditioning system is in the OFF state, pressing the mode switch (MOOD) will turn on the air conditioning system.


• <Criteria for outlet selection>

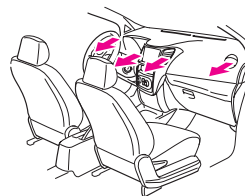


▷ The airflow blows to the upper body

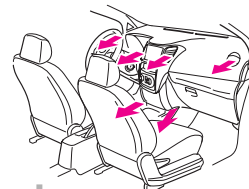

▷ The airflow blows to the upper body and feet

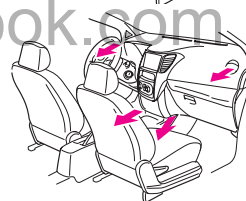

▷ The airflow blows to the feet


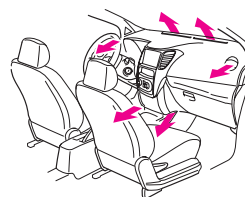


▷ The airflow blows to the feet and the windshield defogger is working

- **Switch between internal circulation and external circulation**

Press the “Exterior Circulation Switch” once. The exterior circulation indicator will light up and the interior indicator will go out.

Press the “Interior Circulation Switch” once. The interior indicator will light up and the exterior circulation indicator will go out.

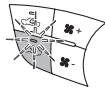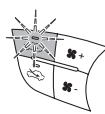Location of Knob	Mode
	Outer circulation A state of inducing air outside the vehicle. This position is to be used under normal circumstances.
	Inner circulation A state of blocking air outside the vehicle. You can switch to the internal circulation mode under the following conditions: When air outside of the vehicle is polluted due to a tunnel environment or traffic jams etc.; or if you want to enjoy cool/hot wind as soon as possible after getting into the vehicle, or enjoy cool wind as soon as possible with a high temperature outside the vehicle.

★**CAUTION:** Sustained use of interior circulation will cause the windshield to fog up.

- **Using the front defrost function**

To remove the fog on the inside of the vehicle windows or frost/ice on the outside of the windows:

1. Press the front defrost switch.

- › During operations the switch will be lit up and operations will also be indicated on the display unit
- › The ventilation mode will be set at “defrost” only, which provides a stronger air current;
- › The air circulation mode will be set at exterior circulation only.
- › When the air conditioning system is in the OFF state, pressing the front defrost switch will turn on the air conditioning system.

2. To exit front defrost mode, press the front defrost button again.

- › At this point, the ventilation mode, compressor, circulation mode and air volume modes will revert to their previous states and the front defrost indicator light will go out.

- **Using the rear defrost function**

When the ignition switch is in the ON position, pressing the rear defrost switch will activate the function. The switch indicator light will light up.

- › Delay Control of Rear Defrost Function

When the rear defrost function has been activated, it will automatically turn off after 15 minutes of operation until next activation in case the operator has forgotten to turn it off.

- **Turning off the air conditioning**


Press the power switch (OFF) to turn off the air conditioning system. The display unit will also power down.

★ **CAUTION:** *This switch does not control the function of rear defrost function as well as the switchover of exterior /interior circulation systems.*

- **When the temperature inside the vehicle is high**

When the internal temperature is high in parked vehicle, please open the windows to discharge hot air before turning on the air conditioner.


■ Operation of auto air conditioner(1)

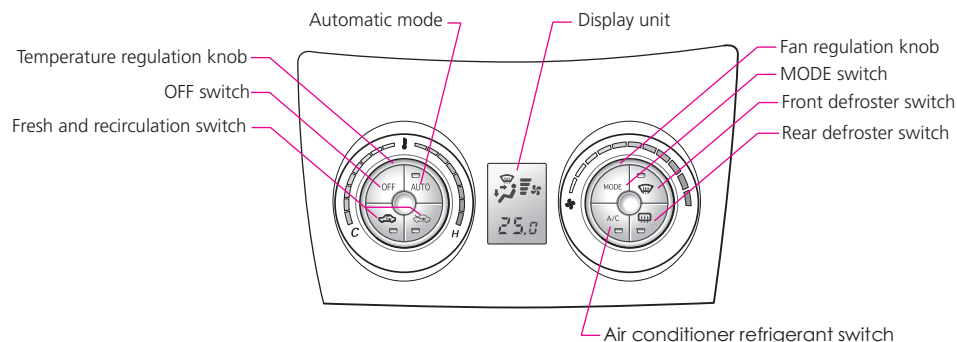

● Operation in the auto mode


Press the AUTO switch. Then the fan will start to work, and the air conditioner will automatically adjust the outlet and air flow to reach the preset temperature.

● Starting

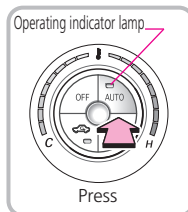

1. Press the AUTO switch. Then the the air conditioner will automatically adjust the outlet and air flow.

- › The Working pilot lamp will be lit while the system is working.
- › The fan will automatically start to work.

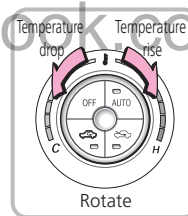


2. Rotate the temperature adjusting knob to set the temperature.

- › Rotate the knob right to increase the temperature, and left to reduce the temperature.

Max. cooling temperature --LO

Max. heating temperature --HI


- › The preset temperature will be shown in the display unit.

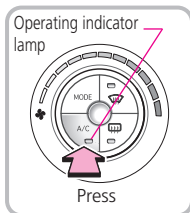

3. Turn on the air conditioner by pressing its cooling switch.

- › Every time you press the air conditioner switch, it will switch between the ON mode and OFF mode of the air conditioner (cooling / dehumidification function).
- › The Working pilot lamp will be lit while the system is working.
- › The fan can be used during operation.
- › The air conditioner will not work when the temperature outside the vehicle reaches approximately 0°C.

• Stopping

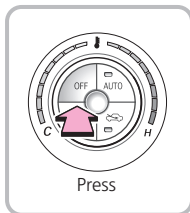

Press the OFF switch.

- › The fan will stop working.

★CAUTION: Do not use the air conditioner while the engine is not running to avoid capacity loss of the batter.

• With high temperature inside the vehicle

If the temperature inside the vehicle is high after parking, make sure to open the windows first to let hot air flow outside before turning on the air conditioner.


• About the AUTO switch

If actuating the MODE switch and fan adjusting knob when the AUTO switch is in the ON position, the AUTO switch will automatically switch to the OFF position (and the working pilot lamp of the AUTO switch will extinguish).

en.carobook.com

● In order to achieve the desired state

The system can be used under various setting conditions by operation of relevant switches or knobs.

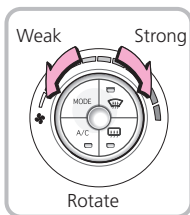


● Change the air flow

Rotate the fan adjusting knob to set the air flow

Rotate the knob right to increase the air flow, and left to reduce the air flow.

- › The air flow will be shown in the display unit.
- › Press the OFF switch to turn off the fan.

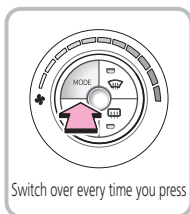


● Change the outlet

Press the MODE switch to select desired outlets.


Every time you press this switch, the outlet will be switched over in order.

- › The outlet will be shown in the display unit.


● <Criteria for outlet selection>

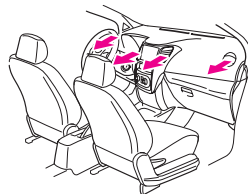


The airflow blows to the upper body

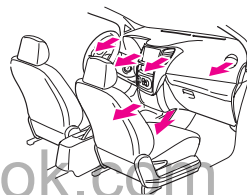


The airflow blows to the upper body and feet

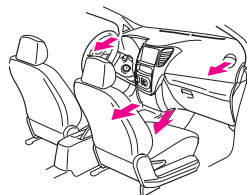

The airflow blows to the feet

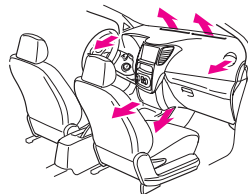

The airflow blows to the feet and the windshield defogger is working


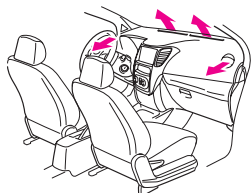





▶ Clean up frost/mist on the windshield

• Switch between internal circulation and external circulation

Press the internal/external circulation selector switch to switch between internal circulation and external circulation.

The Working pilot lamp will be lit while the system is working.

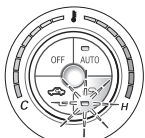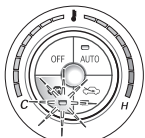Operating indicator lamp	Mode
 Switch on	Outer circulation A state of inducing air outside the vehicle. This position is to be used under normal circumstances.
 Switch on	Inner circulation When you want to enjoy the cool and warm air immediately after you have entered the vehicle due to the full air outside caused by tunnel environment or traffic jam; or you want to use the cool air as soon as possible since the temperature outside the vehicle is high.

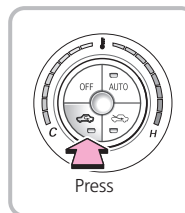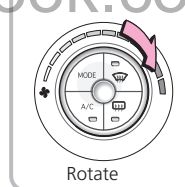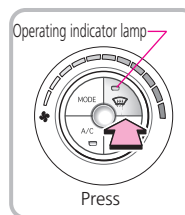

• Clean up frost/mist on the windshield

• To remove mist on the inside surface of the window:

1. Press the front defroster switch.

› The Working pilot lamp will be lit while the system is working.

› If you press this switch when the fan is turned off, the fan will automatically start.

› The air conditioner will automatically switch to the ON position.

2. Set the fan adjusting knob to a higher revolution to enable quick defogging operation.

3. Select the external circulation mode to induce air outside the vehicle.

4. Close the side outlets to increase the air flow blowing to the windshield.

- To remove frost or ice on the outside surface of the window:

1. Press the front defroster switch .
2. Select internal circulation mode.
3. Set the fan & temperature adjusting knobs to maximum.

★**CAUTION:** *Do not use the air conditioner while the engine is not running to avoid capacity loss of the batter.*

● Operation of rear defroster

Press the rear defroster switch on the air conditioner panel to activate defrosting and defogging operation for the rear window.

› Time delay control of rear defrosting function ▲

After the rear defrosting function is enabled for over 15min, the defrosting function will be shut down automatically until it is enabled again so that the user will not forget to switch off the function.

› For the vehicle equipped with a rearview mirror heater

The rearview mirror heater and rear window defroster can be operated with a same switch.

★**WARNING:** *During heating the rearview mirrors, the exterior rearview mirrors will get hot. Do not touch them with hands. Danger of burning injuries!*

★**CAUTION:** *Using this function for a long time while the engine is not running will cause capacity loss of the battery.*


● About switching between internal circulation and external circulation

The internal & external circulation shift switch can be used in following circumstance

Shift into internal circulation:

1. If the air outside is foul due to the reasons such as being in tunnel or traffic jam;
 2. You want to enjoy the cold / warm air immediately after you have entered the vehicle;
 3. The outside temperature is high and you want to enjoy the cold air as soon as possible.
- › It is prone to formation of mist on the windshield if using the internal circulation function for a long time.


■ Operation of auto air conditioner(2)

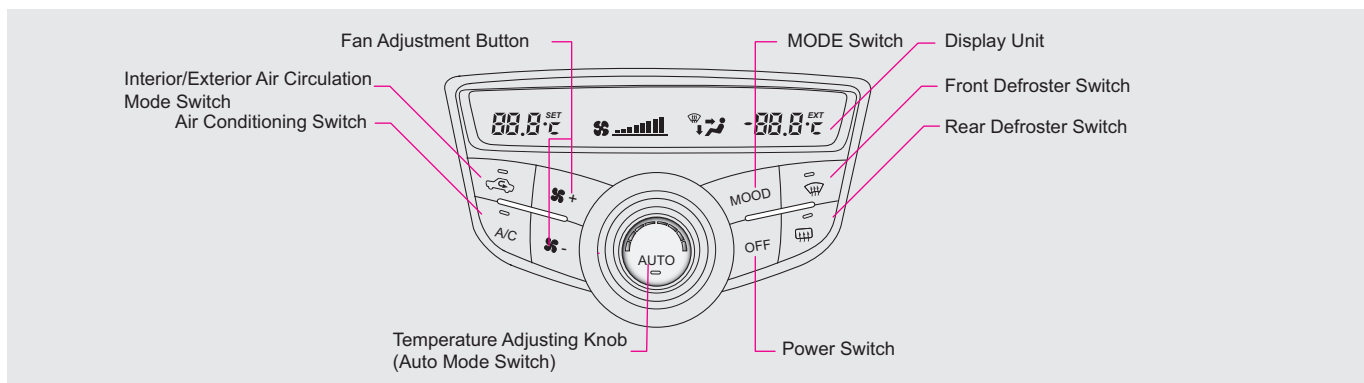

● In order to achieve the desired state

The system can be used under various setting conditions by operation of relevant knobs or switches.


● Starting

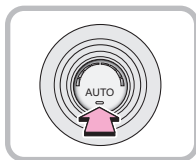

• Auto Mode Switch

Pressing the AUTO mode switch will send the air conditioner into auto control mode. The compressor will turn on and the system will automatically control the air temperature, air outlet mode, air volume and circulation mode.

At this point you can also use switches and buttons to adjust corresponding functions.

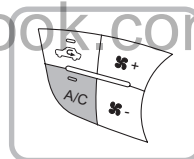

• The Air Conditioning Switch (A/C)

Press the Air Conditioning Switch (A/C) to turn on and shut down the compressor. If the air conditioning system is in Auto mode, the compressor will exit from automatic control while the blowers, mode damper and circulation flap will remain in Auto mode.

- **Temperature adjustment**

Turn the temperature regulation knob to set air temperature inside the vehicle.

- › Turn the knob to the right for a higher temperature and to the left for a lower temperature. Each level will bring the temperature setting up or down by 0.5 degrees, with the highest possible setting at 32.0 degrees Celsius and the lowest at 18.0 degrees Celsius.
- › The temperature is shown on the display unit.

- **Air volume adjustment**

You may adjust the air volume using the air volume adjustment buttons (“+” or “-”).

You can select from 8 fan settings represented by lines on the display unit.


When the air conditioning system is in the OFF state, press the air volume adjustment buttons (“+” or “-”) to turn on the air conditioning system.

- **Air outlet adjustment**


Press the mode switch (MOOD) to select your preferred air outlet.

- › Each time you press the switch, you will be moving on to the next air outlet.
- › The air outlet selected is shown on the display unit.
- › When the air conditioning system is in the OFF state, pressing the mode switch (MOOD) will turn on the air conditioning system.
- <Criteria for outlet selection>


en.carobook.com

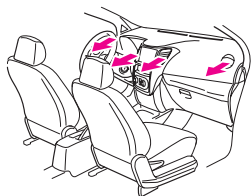


▶ The airflow blows to the upper body

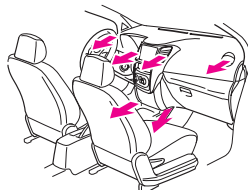

▶ The airflow blows to the upper body and feet

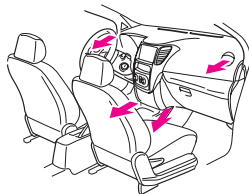


▶ The airflow blows to the feet

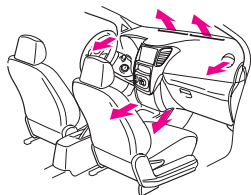

▶ The airflow blows to the feet and the windshield defogger is working

● Switch between internal circulation and external circulation

Press the interior/exterior air circulation mode switch to toggle between interior circulation and exterior modes.

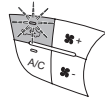Location of Knob	Mode
	Outer circulation(Indicator Light dimmed) A state of inducing air outside the vehicle. This position is to be used under normal circumstances.
	Inner circulation(Indicator Light lit) A state of blocking air outside the vehicle. You can switch to the internal circulation mode under the following conditions: When air outside of the vehicle is polluted due to a tunnel environment or traffic jams etc.; or if you want to enjoy cool/hot wind as soon as possible after getting into the vehicle, or enjoy cool wind as soon as possible with a high temperature outside the vehicle.

★**CAUTION:** Sustained use of interior circulation will cause cause the windshield to fog up.

- **Using the front defrost function**

To remove the fog on the inside of the vehicle windows or frost/ice on the outside of the windows:

1. Press the front defrost switch.

- › During operations the switch will be lit up and operations will also be indicated on the display unit;
- › The ventilation mode will be set at “defrost” only, which provides a stronger air current;
- › The air circulation mode will be set at exterior circulation only;
- › When the air conditioning system is in the OFF state, pressing the front defrost switch will turn on the air conditioning system.

2. To exit front defrost mode, press the front defrost button again.

- › At this point, the ventilation mode, compressor, circulation mode and air volume modes will revert to their previous states and the front defrost indicator light will go out.

- **Using the rear defrost function**

When the ignition switch is in the ON position, pressing the rear defrost switch will activate the function. The switch indicator light will light up.

- › Delay Control of Rear Defrost Function

When the rear defrost function has been activated, it will automatically turn off after 15 minutes of operation until next activation in case the operator has forgotten to turn it off.

- **Turning off the air conditioning**

Press the power switch (OFF) to turn off the air conditioning system. The display unit will also power down.


★ **CAUTION:** *This switch does not control the function of rear defrost function as well as the switchover of exterior /interior circulation systems.*

- **When the temperature inside the vehicle is high**

When the internal temperature is high in parked vehicle, please open the windows to discharge hot air before turning on the air conditioner.

en.carobook.com


■ Adjustment of air outlet

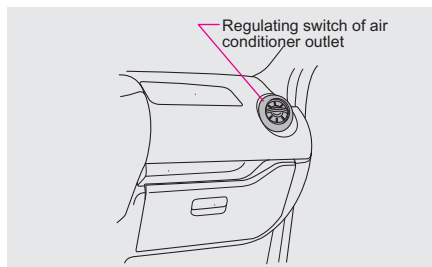

● Method for adjusting side air outlet

The side air outlet can be rotated at any angle.

The adjustment of air volume and air direction can be realized by rotating the air conditioner grills at both side-sn.

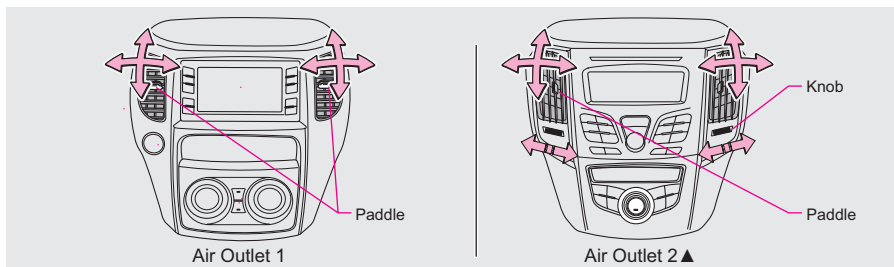

● Method for adjusting central air outlet


● Air direction adjustment

Turn the turning slice of the air outlet following the four directions of up, down, left and right until the required air direction is realized.

● Air volume adjustment ▲

You can adjust the air volume coming out from the air outlet by turning the adjustment knob; you can also open or close the outlet.

★ **CAUTION:** When there is cold air, sometimes you can observe white mist blown from the air outlet. This is because the wet hot air is cooled abruptly and it generates steam. It is by no means any abnormal phenomenon.

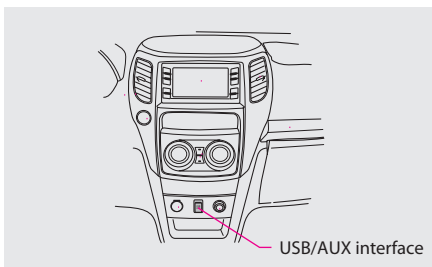

★CAUTION:

- Please make sure that the power supply of portable music player is switched OFF when you are to connect it.
- Please fasten the portable music player so that it will not move during the driving.

The sound box of the vehicle can give off sound after the micro plug is connected with the portable music player.

› **The followings are method for connecting the portable music player:**


Open the decorative cover of sound input terminal.

Connect the portable music player with sound input terminal.

Connect the audio output terminal of the portable music player and the audio input terminal of the vehicle by using micro plug.

en.carobook.com

■ Audio system control button ▲

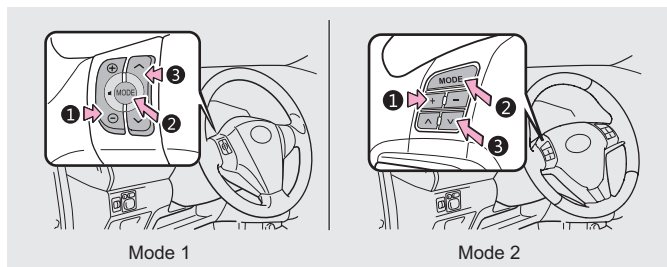

● Sound volume switch ①

It can be used to adjust sound volume.

● Mode switch ②

● Power supply control

The machine can be started and shut down by pressing the button for a long period.

● Mode shift

The vehicle with CD machine can realize the circular shift between the modes of CD, RADIO and MP3;

The vehicle with multi-media player can realize the circular shift of modes of audio files and RADIO.

● Adjustment switch ③

● Song selection

The CD and multi-media player can realize the function of song selection by clicking the switch and pressing for long is set for rapid forward and backward.

● Radio tuner

The RADIO can search automatically after you have clicked the button.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety


Emergency

Maintenance

Technical data

Index

■ Radio antenna

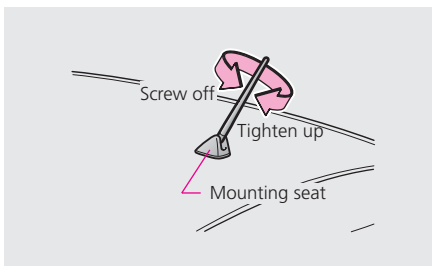

- **Method for dismantling the antenna**

Turn the antenna and screw it off the mounting holder.

- **Method for erecting the antenna**

You can erect it by following the operations opposite to the dismantling of the antenna.

★ **CAUTION: Precautions for erecting the antenna.**

Since the antenna might be damaged when using the automatic car washing machine, please remove it and keep it appropriately.

- *The antenna may be damaged in the following conditions, so, please lay it down.*

When car garage touches the antenna

When covering the car hood

- *Please reset the antenna before the driving.*


■ Cruise control ▲

The cruise control function allows you to maintain preset speeds higher than 45 km/h without having to maintain pressure on the accelerator pedal. You may activate this function when driving on straight highway. We do not recommend that you activate this function when driving in urban areas, on winding or slippery roads, in rainy weather or other poor weather conditions.

★WARNING:

★**CAUTION:** *Incorrect use of the cruise control function will lead to accidents on the road.*

- You may activate the cruise control function only when weather conditions are good and you are driving on straight roads.
- The driver may not leave his/her seat when the vehicle is in cruise control mode. Using Cruise Control

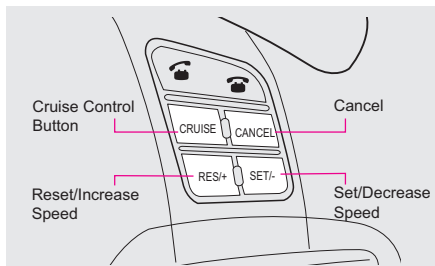

● Using cruise control

1. Press the cruise control button (CRUISE) on the steering wheel. The cruise control indicator light on the dashboard will light up. The cruise control system will be turned on even if it is not in use.
2. Bring your vehicle to the speed desired (the lowest traveling speed for gears 2 to 4 is 45 km/h and we suggest that you use gear 5 to activate cruise control at speed of 60 km/h or above. Otherwise vehicle speed may become unstable).

Note: You may not activate cruise control in gear 1.

3. Press the Set/Decrease Speed (SET/-) button on the steering wheel. The cruise control indicator light on the dashboard (CRUISECONTROL) will light up to indicate that the system has been turned on. The cruise control system is not able to maintain preset speeds when the vehicle is traveling uphill or downhill. When the vehicle is traveling too quickly downhill, you may use the brake to reduce traveling speed. Doing so will cancel cruise control settings.

If you wish to restore the previous speed settings, simply press the Reset/Increase Speed (RES/+) button. The cruise control indicator light on the dashboard will light up again.

When traveling uphill, the automatic transmission may downshift to maintain preset speeds.

● Changing preset speeds

- You can use any of the methods below to raise the preset cruising speed:

- › Pressing the Reset/Increase Speed (RES/+) button. Release the button when you have reached your desired cruising speed.
- › Stepping on the accelerator pedal. When you have reached your desired cruising speed press the Set/Decrease Speed (SET/-) button.
- › To increase speed slightly: Tap the Reset/Increase Speed button. Each tap increases your traveling speed by about 2 km/h.

- You can use any of the methods below to lower the preset cruising speed:

★ WARNING:

If you wish to decrease your traveling speed as quickly as possible, you should use the brake as you normally would.

- › Press the Set/Decrease speed button. Release the button when you have reached your desired speed.
- › To reduce traveling speed slightly: Tap the Set/Decrease Speed button. Each tap decreases your traveling speed by about 2 km/h.
- › Step gently on the brake pedal or the clutch pedal. The cruise control indicator light (CRUISECONTROL) on the dashboard will go out. When the vehicle has reached the desired cruising speed press the Set/Decrease Speed button.

You can still step on the accelerator pedal for overtaking purposes when the vehicle is in cruise control mode. Once you have completed overtaking, take your foot off the accelerator

pedal. The vehicle will then return to the preset cruising speed.

● Canceling cruise control

You can use any one of the following methods to cancel cruise control:


- › Stepping gently on the brake or clutch pedal.
- › Pressing on the Cancel (CANCEL) button on the steering wheel.

● Restoring previous cruising speed

If you are not using the cruise control button (CRUISE) to cancel the function, you may first accelerate to a speed greater than 45 km/h and then press the Reset/Increase Speed (RES/+) button. The cruise control indicator light will light up and vehicle speed will increase to preset levels.

Press the cruise control button (CRUISE) to turn off the system and cancel previously set cruising speeds.

■ Operating instructions of in-vehicle bluetooth

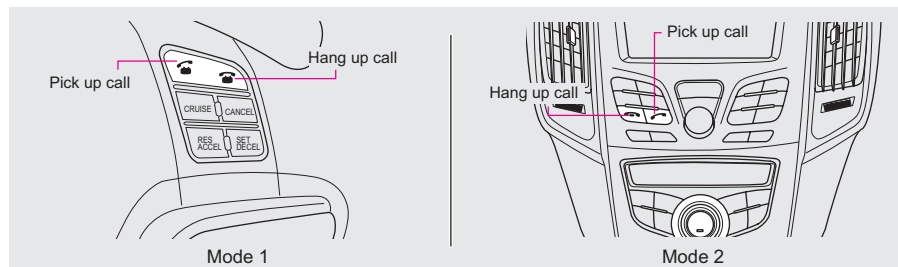

If your mobile phone is Bluetooth-equipped and assuming that you have connected your mobile phone with the in-vehicle Bluetooth unit, you can press a button to pick up and hang up calls on your mobile phone.

For more information, please refer to AV system manual.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices


Safety

Emergency

Maintenance

Technical data

Index

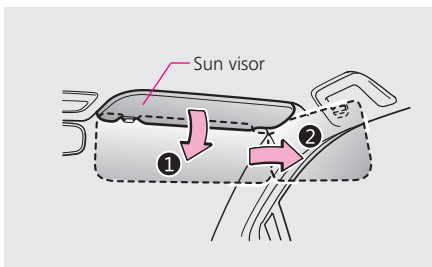


When the sun shines and the sun-shine is glaring, you can turn over the sun visor above the positions of the driver and the assist driver. In this way, the stimulation of sunshine to your eyes can be alleviated.

1. Cover the front sunshine (Position ①)

Lay down the sun visor.

2. Cover the sunshine from the side (Position ②)


Lay down the sun visor, unhook the hook and then push it to the side.

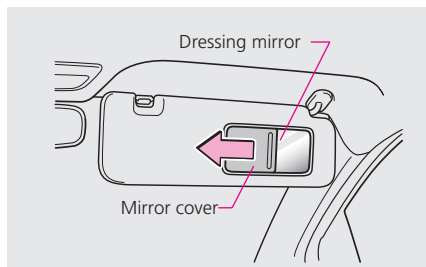

• Dressing mirror

The inside of sun visor at the side of the assist driver is provided with make-up mirror, you can use it immediately after you have opened it.

■ Reading lamp and lamp in trunk

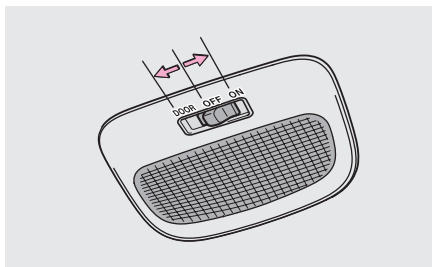


● Reading lamp (I)

You can operate the reading lamp by turning the switch.

The "ON" light indicates that the lamp illuminates continuously.

The "OFF" light indicates that the lamp goes off.

"DOOR" The reading lamp will illuminate automatically when the doors at both sides are opened or not closed fully.

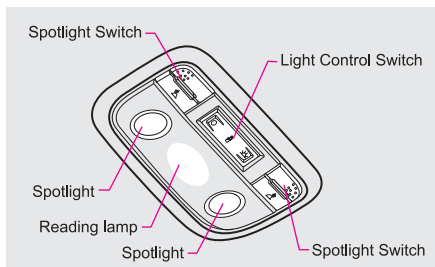


● Reading lamp (II)

Press the spotlight switch to turn on the corresponding light. One more press of the switch turns off the light.

Press the right side of the light control switch to turn on all three lights at the same time. At this point, you will not be able to use the spotlight switch to turn off individual lights. Press the left side of the light control switch to turn off all three lights at the same time.

When the light control switch is in the center position, the door control function is also activated. A light will be on when any door is opened.

When the door control function has been activated and when a vehicle door is open, you will not be able to use the spotlight switch to control individual lights. You can only use the light control switch to turn off all lights.

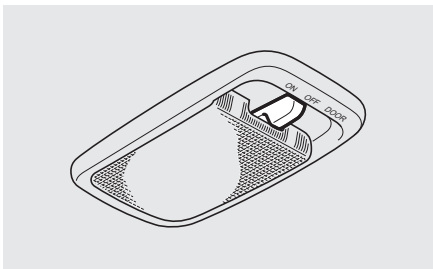

● Lamp in luggage compartment

You can operate the lamp in luggage compartment by turning the switch.

The “ON” light indicates that the lamp illuminates continuously.

The “OFF” light indicates that the lamp goes off.


“DOOR” The lamp in luggage compartment will illuminate automatically when the four doors and the trunk lid are opened or not closed fully.

- The switches of the reading lamp and lamp in luggage compartment are at “DOOR” position, the time delay function will be enabled in the following situations:

1. The door is opened and the light is on at this time. The door is closed, and the lamp will be off in 15s;
2. The door is closed, place the key at the “ON” position, the lamp will be off;
3. The key will be switched from the “ON” to “LOCK”, the lamp will illuminate for 15s and then go off.
4. If a door is left open, the corresponding lamp will remain ON for 5 minutes and turn OFF in order to save energy (only for some models).

★**CAUTION:** To avoid low power in the battery, please do not keep it being on for long time when the engine is shut down.

■ Storage device

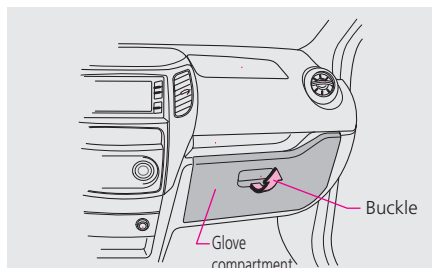


● Glove compartment at assist driver's side

You can open the compartment lid by pulling up the buckle.

When closing the compartment lid, you shall confirm that a sound of "crack" is heard, so as to make sure that the compartment lid is closed firmly.


★ **WARNING:** Please avoid driving the vehicle when the glove compartment is open. Otherwise, the articles in the compartment may be flung away when emergency braking occurs and accordingly incurs accidents.

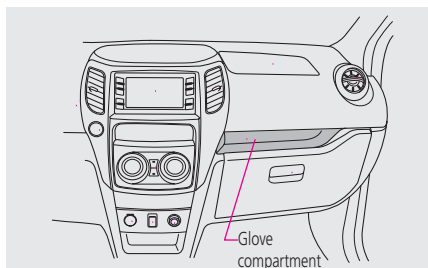

● Glove compartment at assist driver's side

★ **CAUTION:** Please never fill in the glove compartment with the articles that can roll, which is likely to cause accidents.


It is suggested some light articles such as invoices be stored at the glove compartment. Otherwise, accident is likely to occur when rapid acceleration or collision occurs.

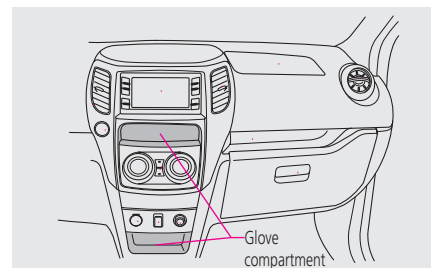

● Central glove compartment


★ **CAUTION:** Please never fill in the glove compartment with the articles that can roll, which is likely to cause accidents.

It is suggested some light articles such as invoices be stored at the glove compartment. Otherwise, accident is likely to occur when rapid acceleration or collision occurs.

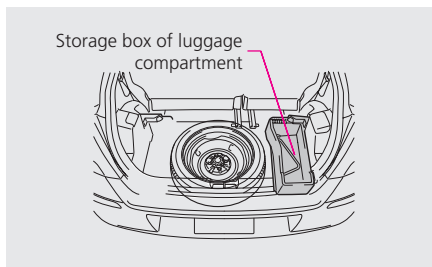

● **Glove compartment in trunk**


Beneath the trunk cover, there is the glove compartment which can be used to store goods.

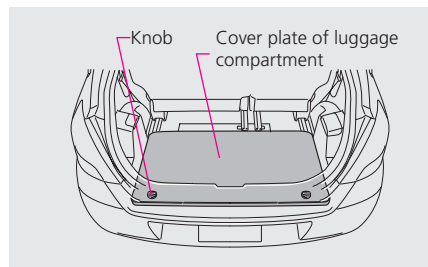

● **Method for removing trunk cover lid**

You can lock or unlock the luggage compartment cover by turning the knob along the direction of "LOCK" or "UNLOCK"


■ Curtain ▲

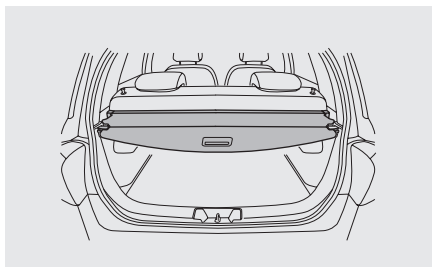

You can shield the articles inside the trunk with the curtain, so as to protect them from sunshine exposure.

★ **CAUTION:** *Never put the luggage on the curtain.*


If the curtain is stressed by heavy articles, the curtain may be damaged.

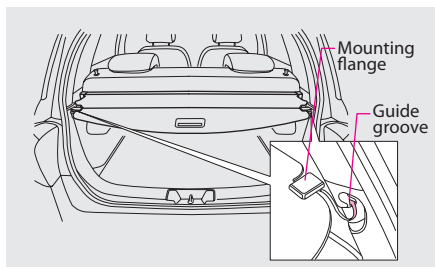

● Application of curtain

If you are to use the curtain, you can draw out the curtain from the back and then cup the installation flange into the guide groove at both sides of the opening of trunk lid.

When you are to shrink the rear part of the curtain, you shall slide the flange from the groove and then roll the complete curtain into the sleeve.

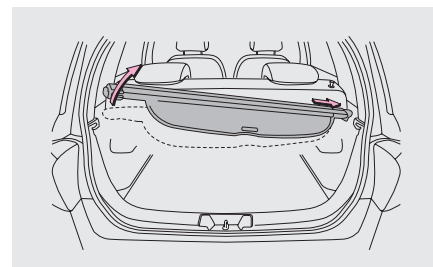

● Method for dismantling the curtain

● Dismounting

1. Recover all the curtain into to curtain sleeve.
2. Push the sleeve device fully from the right and raise it up to release both ends of the curtain sleeve device. Then, you can dismantle the curtain.

● Installation

You can install the curtain by following the sequences opposite to the dismantling.

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical
data

Index


★**CAUTION:**

During the process when you dismount the curtain, pay attention to avoiding touching the internal device of the vehicle.

After the curtain is installed again, you shall make sure that it is firmly installed at the correct position, so as to preventing it from getting loose during the driving.

en.carobook.com

■ Standby power supply

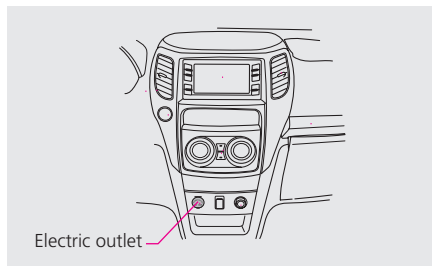

Sockets for electrical components inside the vehicle.

It is located at the instrument panel. You can use it after you have opened the cover.

★**CAUTION:** Please close the socket cover when you do not use the standby power supply.

- 1) Please close the socket cover when you do not use the standby power supply. Failure or short circuit is likely to occur when foreign matters or beverage drips into it.
- 2) When the engine is shut down, the power in the battery will become low if you use the standby power supply for long. Besides, when the engine is operated, the power in the battery is also likely to become low if you use the standby power supply for long.

● Standby power

1. The voltage for the electrical components used in the vehicle shall be DC12V and the total current shall be not greater than 10A (maximum power 120W).
2. If you use the electrical components with capacity higher than the rated volume, the vehicle fuse may be burned.

● Working conditions

You can use it when the key is set at the position of “ACC” or “ON” or the engine works.

Contents

Warning

Operation

Driving

Interior
Devices

Safety


Emergency

Maintenance

Technical data

Index

■ Cigarette lighter and ash tray

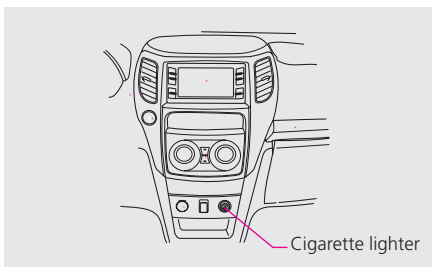

You can use the cigarette lighter when the key is placed at the position of "ACC" or "ON" or the engine works.


Press the cigarette lighter and then release it. You can use it when it returns to the original position.

★**CAUTION:** Please never touch the metal part of the cigarette lighter.

- 1) Please never touch the metal part of the cigarette lighter. Otherwise, you will get burnt.
- 2) To prevent the cigarette lighter from breaking down and burning the surrounding articles, please follow the instructions below:

1) Please never press the cigarette lighter for long.

2) Please never insert the cigarette lighter of other vehicle into it. The cigarette lighter socket can only be used as the power supply for original electrical products of Great Wall Motors. Otherwise, the burning cigarette lighter may be flung away if you insert the cigarette lighter after you have used it. Or, worse more, you cannot pluck it off after you have inserted it into the socket.

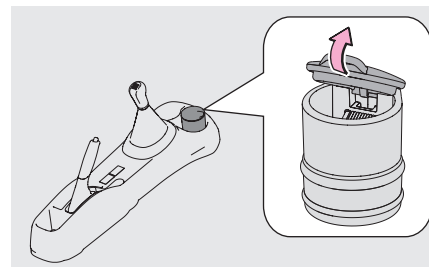

★**CAUTION:** To prevent the fire, you shall follow the instructions below:

- 1) Please put the match and cigarette butt into the ash tray and confirm all are placed in the right place after you have extinguished them.
- 2) Please never put the inflammable articles such as paper scraps in the ash tray.

5

Safety

Airbag	192
Child seat (provided by the users themselves)	201
Introduction to electronic immobilizer system for engine ▲	210
Introduction to the anti-theft system of complete vehicle ▲	212
Introduction to remote-control central lock system	213
ABS+EBD system and brake assist device ▲	214
Definition of ABS and brake assist device....	214
Working state of ABS and brake assist device.....	215
Functions of EBD system.....	216
Introduction to ESP system functions ▲	217

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

Airbag



● Airbag warning label


The label is located on the sun visor on the co-driver's side. It serves to remind you that the vehicle is equipped with front airbags and to pay attention to the relevant issues.

★**WARNING:** Do not place rear-facing child seat on this seat with airbag. Death or serious injury can occur.


● Introduction to airbag

The airbag is an auxiliary device that is able to protect the safety of passengers. It can be used together with safety belt. To bring the airbag to play into full role, the passengers shall wear the safety belt correctly and keep the correct sitting posture.

In addition, its efficacy can be fully realized if you use the airbag correctly. If you use it improperly, its safety function will never materialize. Instead, it may injure the passengers.

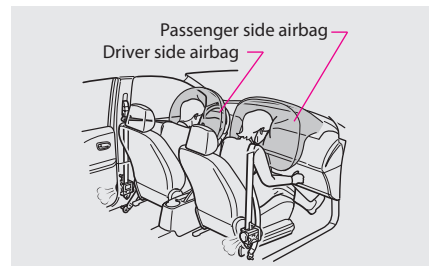


When the vehicle suffers from violent collision from the front, the safety belt becomes tight and meanwhile the airbags at the position of the driver and the passenger expands, so as to distribute and alleviate the impact on the heads and chests of the passengers.

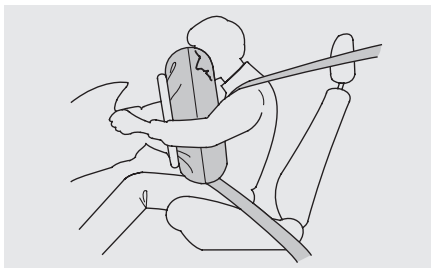


● Working principle of airbag

If medium-level and even violent head-on collision accident occurs, the sensor will perceive that the vehicle is in abrupt deceleration.

- › If the vehicle decelerates abruptly, the control device will immediately make the airbags at the sides of the driver and the passenger expand to the maximum in rapid succession.
- › When head-on collision accident occurs, the airbag will protect your head and chest.

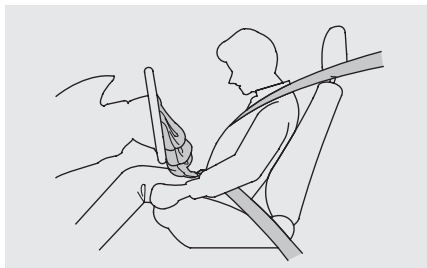


- › Release the air immediately after you have filled the front airbag with air. In this way, the driver's view and his capability of operating the steering wheel or other control device will not be affected.

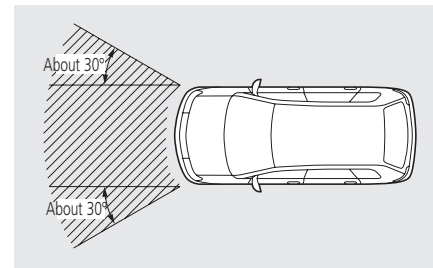

● Conditions when the airbag bursts

The airbag will burst when the vehicle is under violent collision from the range of 30° in the front.


The airbag works only when the ignition switch is set at the position of "ON". If the ignition switch is at the position of "LOCK", the airbag still does not work when your vehicle collides with other vehicle or articles.

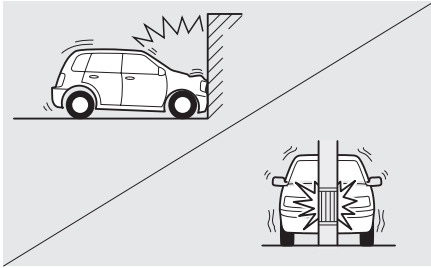

● **Conditions when the airbag does not burst**


● **Sometimes the airbag does not expand when the vehicle is under slight collision.**

1. When the collision speed is below 15km/h, the vehicle head collides with solid concrete wall which cannot move or will not get deformed.
2. The front of the vehicle collides with narrow wire pole or trees that cannot move or will not get deformed.

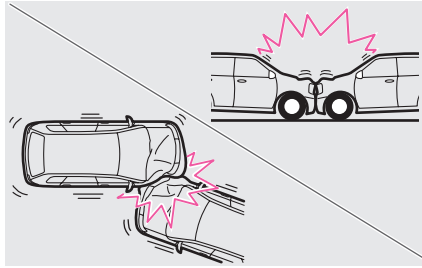


- The impact caused by the collision will become smaller if the collided objects is get deformed or transferred. Thus, the vehicle speed that makes the airbag work will become higher.

1. For example, the vehicle head collides with static vehicle with the same weight as itself, sometimes the airbag also refuses to expand.
2. When it collides at certain inclination or certain side surface, even the vehicle speed is rather high, the airbag still fails to expand sometimes.

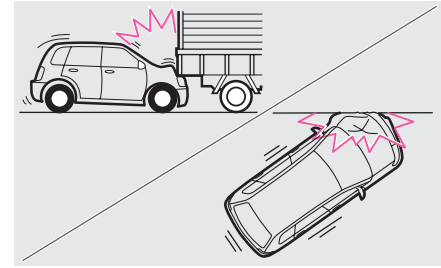


- The airbag may do not work for the impact caused by the collision is weakened when the following situations occur.

1. The vehicle will run into the space under the cargo container when the vehicle collide into the truck from the behind.
2. When the vehicle is under impact from the front tilting direction.

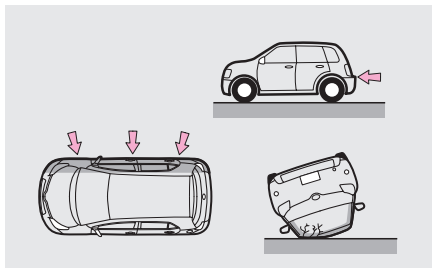


- The airbag may expand when the following situations occur. However, the expected expanding effect cannot be achieved.

1. When the vehicle collides from the front or the back.
2. When the vehicle turns over or rolls.

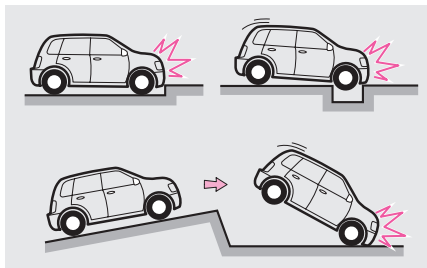

- The airbag may expand when the vehicle bottom is under serious collision as shown below.

1. When the vehicle collides into road-side stone.
2. When the vehicle falls into or jumps over the deep tunnel or ditch.
3. When the vehicle jumps over the steps and collides with road surface or fall on road surface.

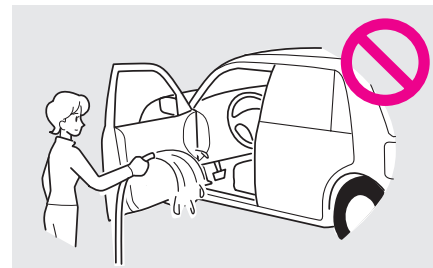


● Important safety warnings

1. Never clean the car inside with water or detergent.

The gas generator of airbag contains toxic or inflammable substances. Therefore, when the composition inside the gas generator comes across with water, acid substances or heavy metal, toxic or explosive substances are likely to get generated.

If gas is generated inside the gas generator, please open the window immediately and inhale fresh air and then invite the special service station of Great Wall Motors to apply overhaul to the airbag system immediately.

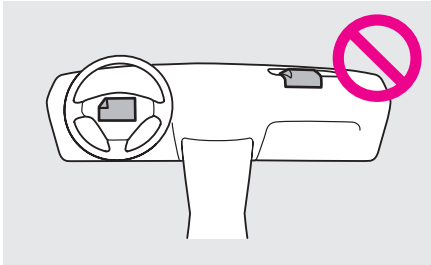

2. It will no longer work normally if you damage the airbag cover.

Therefore, you shall never open or damage the airbag cover by yourself.

3. Never paint sealing wax, paste adhesive tape or similar articles on the horn pad. Otherwise, the airbag does not expand normally.

4. Never add cover or install any decorative articles or similar articles on the horn pad of the steering wheel. The airbag is set inside the steering wheel. Therefore, these decorative articles will scatter inside the vehicle and this will injure the passengers when the airbag bursts.



5. Neither place articles on the instrument panel nor allow the articles inside the glove compartment of the instrument panel to protrude.

Violating the requirements will result in the fact that the airbags cannot burst normally or these things will scatter everywhere inside the vehicle and injure the passengers.

6. Never hang the decorative articles on the window pane or the rear view mirror inside the vehicle. These decorative articles will scatter inside the vehicle and injure the passengers when the airbag bursts.

7. Do not lean the umbrella against the instrument panel.

Otherwise, the umbrella will hurt the passenger when the airbag bursts.

8. Do not knock the steering wheel, instrument panel or the relevant parts violently. Otherwise, the airbag will burst accidentally.


9. If your vehicle needs repair or service, please inform the special service station of Great Wall Motors or the service staff to prepare the airbag system.

10. Please remember that your vehicle is provided with airbag.

When you are to sell the vehicle out, please tell the next user that the vehicle is provided with airbag.

11. Please you shall never use the airbag for other purposes.

The airbag is only applicable to SRS (auxiliary protection system).

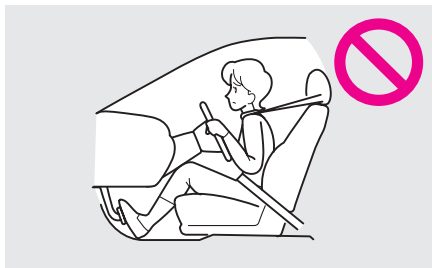


The driver and passengers on front seats that is too close to the steering wheel or instrument panel will be injured seriously or get killed when the airbag expands.

It is highly suggested by Great Wall Motors:

The driver shall sit as far away from the steering wheel as possible when he drives the vehicle normally.

The passengers on the front seats shall keep as far away from the instrument panel as possible.

All the passengers in the vehicle shall use the safety belt correctly for safety.

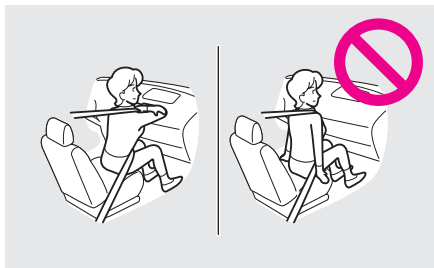


You shall never sit at the edge of the seat or lean against the instrument panel when you drive the vehicle. Since the airbag for the passengers on the front seats holds high speed and considerable force when it expands, If someone leans against the airbag or is close to the airbag, they will get injured seriously or even killed when the airbag expands. Therefore, you shall sit upright and straight on the seat and you must use the safety belt correctly.



Never use child seat on the front seats.

★WARNING: *If the vehicle is equipped with airbag, you shall not arrange on the front seats the child seat which is opposite to the driving direction. Once collision occurs, the airbag will expand and brings about fatal injury to the children carried along the vehicle.*

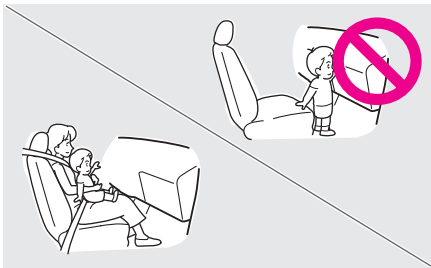

You shall never allow your child stand in front of the airbag or put your child on your laps.

It is highly suggested by Great Wall Motors that all the infants and children shall sit on the rear seats of the vehicle and provided with correct restraint protection.

Since the passenger side airbag possesses high speed and tremendous force when it expands, you shall never allow your child to stand or kneel on the front seats. Otherwise, the child will be injured seriously and even get killed.

You shall not place your child on your legs or hug it in your bosom, rather, you shall put it on rear seats and use children restraint device.



If you put the articles between the driver and the steering wheel, or between the passenger and the instrument panel, serious injury may be incurred since the airbag will expand when the vehicle is under violent impact.



Please never touch the components of the airbag when it expands. The components of airbag become extremely hot, which may bring about serious injury such as burn.



Sometimes the following phenomena may occur when the airbag acts normally:

- › The airbag expands too fast, sometimes it will result in injury.
- › When the airbag expands, smoke occurs as the airbag bursts. However, it is not likely to cause fire disaster. If patients with respiratory disease such as asthma inhales the gas, they will have difficulty in breathing sometimes.

At this time, it is much safer to escape from the vehicle immediately. Moreover, if you cannot escape from the vehicle, you shall open the window or door and breath the fresh air.

- › If the residual substances (gas and

the like) generated from the expansion of the airbag enters your eyes or get attached to your skin, you shall wash them down immediately with clean water.

- › People with sensitive skin may has anaphylactic reaction from time to time.
- › The expansion of diver's seat airbag may lead to broken of front windshield.
- › Airbag will no longer work in the second impact and thereafter impact after its initial expansion. Please contact with the Great Wall authorized service station. Therefore, after first expansion, the airbag will no longer work in the second impact in continuous impacts.
- › When the car and airbag are scrapped, please make sure to contact the Great Wall authorized service station. Otherwise, the airbag may lead to unexpected explosion, causing injuries.

- › When there are scratches and cracks in steering wheel equipped with airbag, please keep it the same and take it to Great Wall authorized service station for replacement as soon as possible. Otherwise, the airbag will fail to work normally in a impact, which will lead to personal injury.

★ **WARNING:**

- Please consult the special service station of Great Wall Motors before you are to conduct the following operations.

- 1) When the horn pad shall be removed;
 - 2) When the steering wheel shall be removed;
 - 3) When the vehicle is scrapped;
 - 4) When the airbag is scrapped;
 - 5) When electric welding is to be applied;
 - 6) When the body shall be maintained;
 - 7) When the vehicle shall be painted,
- You shall not refit or replace the steering wheel, the part related to the airbag system and the suspension system. The refitting of these parts will harm the effectiveness of the airbag or make the airbag unable to work.

- If the following operations are done, it may lead to accidental burst of the airbag, which will bring about physical injury or even death.

- 1) You shall never attempt to remove the airbag module;
 - 2) Never use multi-meter or the similar instrument to test the airbag module;
 - 3) Never use heater or dryer to heat the part related to airbag system.
- To ensure your safety, please invite the special service station of Great Wall Motors to remove, install or detect the part related to driving.

en.carobook.com

Child seat (provided by the users themselves)

When there are child passengers inside the vehicle, they must be secured using child seats that are appropriate for their age and size. Only this way will they be adequately protected from the various risks that arise in the event of a collision.

★ **WARNING:**

If a child seat is not properly fastened or secured inside the vehicle, the child passenger seated within will be at risk in the event of a collision.

● **Installing a child seat on the front seat**

Please do not install a child seat on the front seat.

This places the child passenger too close to the airbag. In the event of airbag deployment this can cause grievous hurt to the child passenger.

Child seats should only be installed on the rear seats.

● **Installing a child seat on the rear seat**

Do not install a child seat on the center rear seat.

You must abide by the instructions contained in this manual as well as in the child seat product manual when installing a child seat.

● **Installing a child seat using ISOFIX**

The ISOFIX system is a standard protective system designed for the installation of child seats on rear seats. You can install ISOFIX child seats on either of the two side seats in the rear.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices


Safety

Emergency

Maintenance


Technical data

Index

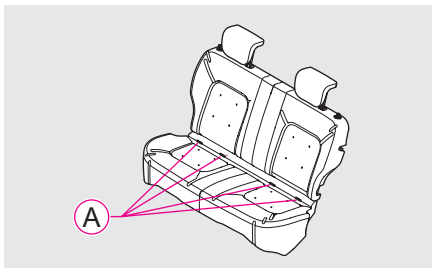

- Child seat bottom strap fixing point

The child seat fixing point is located at the bottom of the rear seat backrest.

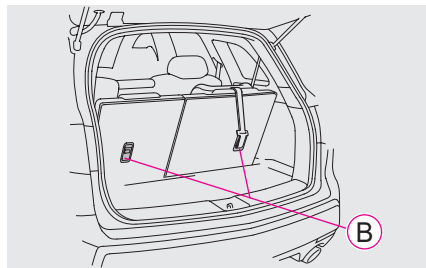

- Child seat top strap fixing point


The child seat top strap fixing point is located at the back of the rear seat.

en.carobook.com

› Installation instructions

1. Shift the front seat to its front most position;
2. Raise or remove the headrest from the rear seat where the child seat is to be installed;
3. Slide the child seat lock mechanism into the fixing point at the bottom;
4. Ensure that the two ISOFIX lock mechanisms are properly secured;
5. Tighten the top strap.

Secure the top strap on the corresponding fixing point. When securing, you must make sure that the top strap passes through the bottom of the seat headrest.

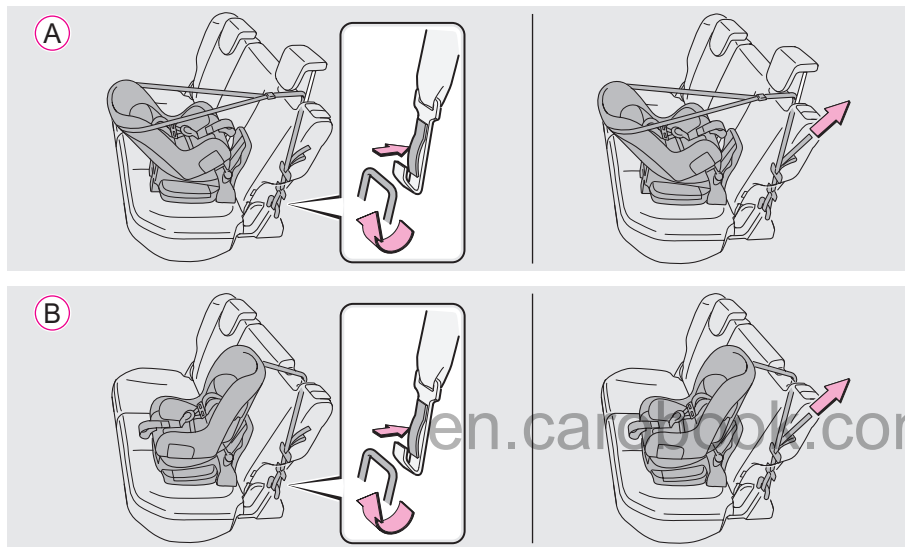

› Example of the child seat installation process

A. Child facing backward

B. Child facing forward

★**CAUTION:** *This picture is for the purposes of illustration only, and the details may differ from those of your specific seat model.*

› Matters of note during installation

★**WARNING:**

- Please refer to the child seat product manual for installation and removal instructions.
- If the child seat is not installed correctly, in the event of an emergency brake or collision it may dislodge from its position and cause severe injury or even death.

Contents

Warning

Operation

Driving

Interior
Devices



Safety

Emergency

Maintenance

Technical data


Index

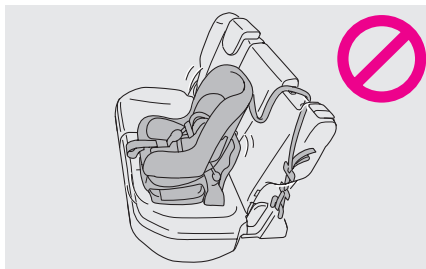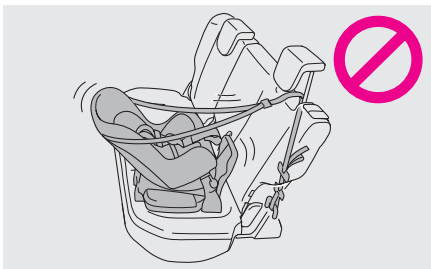

- If the child seat is equipped with a top strap, you must fasten the top strap in accordance with the instructions provided by the child seat manufacturer. If the top strap is not properly tightened, in the event of a collision it may cause severe injury or even death.
- Make sure that the top strap does not circle around the child.
- Bring the top strap hook to the fixing point and affix. Make sure that the strap is properly fastened and tightened.
- Shake the child seat gently to make sure that it has been properly secured.



- When installing the child seat by raising the headrest, the fixing strap must pass through the lower part of the headrest. Placing the strap on top of the headrest will not secure the child seat adequately. In the event of a collision, it may cause severe injury or even death.

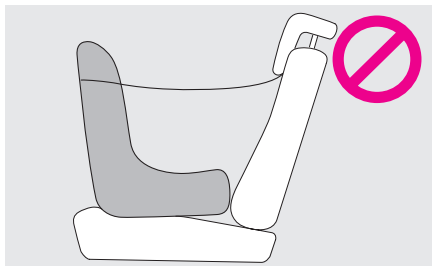


- *When installing the child seat with the headrest raised, do not allow the headrest to fall back into place after securing the child seat to the top strap fixing point.*

If the headrest is allowed to fall back into place, it may come into contact with the fixing strap and loosen it. In the event of a collision, this can cause the child seat to dislodge, causing severe injury or even death.

● Installing a child seat using the seat belt

The seat belts on both sides of the rear seat can be used to secure a child seat.

The child seat using the seat belt must be secured with a tightened seat belt. Otherwise, in the event of a collision the set-up will not be able to offer the child sufficient protection or even cause harm to the child or other passengers inside the vehicle.

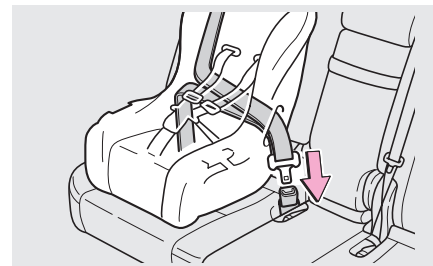

● Installation instructions

1. Pull out the shoulder section of the seat belt to install the child seat.

Run the seat belt along the indicated route on the child seat and insert the lock tongue into the buckle until you hear a 'click' sound.

Please refer to the product manual that has come with the child seat for specific installation instructions.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index



2. Allow the seat belt to retract.

With your body weight pressing down on the child seat in the rear seat, allow the seat belt to retract and tighten. There must be no slack in the seat belt.

3. Make sure that the child seat is securely fastened.

Shake the child seat gently to make sure that it has been properly secured.

★ **WARNING:** When installing child or infant seats, you must read the manual that has come with the product carefully before proceeding with the installation.

- If you are unable to install the seat correctly, in the event of an emergency braking or accident, severe injury or even death may occur.
- When the child seat has been unfastened, do not leave it inside the vehicle as it may cause a severe accident when the driver performs an emergency brake as it comes into contact with passengers or other objects.

- Do not allow children to play with seat belts. If a seat belt is wrapped around the neck of a child, it may cause suffocation or other fatal injuries.

In such a situation, when you cannot unbuckle the seat belt, please cut it using the tools such as a pair of scissors.

- If you do not require the use of a child seat for a long time, remove it from the vehicle or secure it inside the boot. Doing so can help prevent the occurrence of injury during emergency braking, emergency turns or in the event of an accident.

● Compatibility of child seats with various seat positions

Only child seats that meet ECE No. 44 specifications may be installed in the vehicle.

According to ECE No. 44 specifications, child seats can be categorized into five groups.

- › Group 0: Maximum 10 kg (0-9 months)
- › Group 0+: Maximum 13 kg (0-2 years)
- › Group I: 9 to 18 kg (9 months-4 years)
- › Group II: 15 to 25 kg (4 years-7 years)
- › Group III: 22 to 36 kg (6 years-12 years)

● Use of various vehicle seats with a child seat

Weight category	Seat position		
	Front passenger seat	Rear side seat	Rear center seat
Group 0	X	U	X
Group 0+	X	U	X
Group I	X	U	X
Group II	X	U	X
Group III	X	U	X

NB: Explanation of codes used in the table:

U - Suitable for use with the universal child restraint system in this weight class.

X- This seat is not suitable for use with child restraint systems in this weight class.

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

● **Compatibility of vehicle ISOFIX positions with ISOFIX child safety seats**

Weight category	Dimensions/model	Fixing module	Vehicle ISOFIX position
			Rear side seat
Portable bed	F	ISO/L1	X
	G	ISO/L2	X
Group 0	E	ISO/R1	IL
Group 0+	E	ISO/R1	IL
	D	ISO/R2	X
	C	ISO/R3	X
Group I	D	ISO/R2	X
	C	ISO/R3	X
	B	ISO/F2	IUF
	B1	ISO/F2X	IUF
	A	ISO/F3	IUF

NB: Explanation of codes used in the table:

IUF - Suitable for use with front-facing ISOFIX child restraint systems in this weight class.

IL - Suitable for special child restraint systems on the list. These systems may be used only with certain vehicle types, come with certain limitations or may only be used under particular circumstances.

X - The ISOFIX position is not suitable for use with this weight class and/or ISOFIX child restraint systems of other dimensions.

★ **WARNING:**

- Restraint protection in the form of seat belts or child seats must be applied according to the age and weight of the child passenger for adequate protection in the event of an accident or emergency braking. Carrying the child in your lap is not the same as securing the child in a child seat. In the event of an accident, the child may be thrown towards the windshield or crushed between you and the vehicle interior.
- We strongly recommend that you select an appropriate child seat based on your child's weight and to secure the child seat on the rear seat. Accident statistics show that compared to child passengers seated in the front seat, child passengers are safer when they are seated in a rear seat and secured with the appropriate protective measures.

-
- *Even when the child has been seated in a child seat, take care that his or her head or body is not leaning against the vehicle door, seat, A-pillar, B-pillar, C-pillar or ceiling horizontal bar (where the SRS side airbag or SRS airbag curtain will deploy). When the SRS side airbag and airbag curtain fully deploy, it can be very dangerous in this scenario as the deployment force may cause severe injury to the child.*

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

Introduction to electronic immobilizer system for engine ▲

The vehicle is equipped with electronic anti-theft system for engine.

Each key is embedded with an anti-theft convertor. When you insert the key into the core of the ignition lock and turn it at the position of "ON", the electronic anti-theft ECU communicates with the key through wireless radiofrequency. If the key is considered as legal, the anti-theft ECU will have password identification with the ECU of engine. If the password is correct based on the identification, it will permit the engine to start; if any of the two kinds of password identifications fails, the engine will be disabled.

● Operation method

The electronic immobilizer system of the engine will act as is described below:

When you insert the key into the lock core and turn it to the position of "ON", if the password identification is passed, the warning lamp will be off, it suggests that the engine can be started; if the password identification is not successful, the warning lamp will flash in the frequency of twice per second; when your vehicle is automated guided and locked, the electronic immobilizer system will be on the sleep mode and the warning lamp will keep flashing in the frequency of 0.25s for being on and 4s for being off.

When you cannot start the engine, please turn the key to the "LOCK" position and then turn it to the "ON" position. At this moment, you can check:

- › Whether your key is legal.
- › Whether the warning lamp of electronic immobilizer system of the engine flashes every 2s and the warning lamp of the maintenance of the engine flashes in a certain frequency. If the above phenomena occur, it might be the problems with the electronic immobilizer system of the engine, please contact the special service station of Great Wall Motors and invite them to provide overhaul to the electronic immobilizer system of the engine.
- › Whether the anti-theft convertor inside the key is in good condition.
- › Whether the upper coil of ignition lock is in good condition.
- › If it is not caused by the causes above, please contact the nearest special service station of Great Wall Motors.

★ **CAUTION:**

- 1) *When you insert the key into the lock core and turn it to the position of "ON", you shall not place articles with strong magnetic field near the lock core.*
- 2) *You shall not place the key in the special environment with high temperature or low environment.*
- 3) *You cannot drop the key on the floor carelessly.*
- 4) *You shall avoid pressing the key with heavy objects.*

● **Security envelope of electronic immobilizer system**

1. The security envelope of PIN code of the electronic immobilizer system is placed in the user's manual attached along the machine. The security envelope contains the PIN code of the electronic anti-theft system of the engine. When any of the following situations occurs such as key is lost, the immobilizer anti-theft convertor assembly is damaged, the anti-theft ECU assembly is damaged, or the ECU assembly of the engine is damaged and the electronic anti-theft system of the engine shall be assembled again, you can open the envelope, fetch the PIN code of the immobilizer system and inform maintenance personnel of the special service station of Great Wall Motors about it, so as to provide convenience for the maintenance personnel to give maintenance to the anti-theft system.
2. If the security envelope has already been opened when you purchase the vehicle, it suggests that the PIN code of the anti-theft system may have already been stolen by others. Thus, the

anti-theft system may be decoded by the unscrupulous personnel. To ensure the safety of your vehicle, please contact the special service station of Great Wall Motors immediately.

3. To ensure the safety of your vehicle, you shall keep the security envelope of the electronic immobilizer system of the engine properly and you shall never tell the PIN code to others (The case in which something goes wrong with the anti-theft system and the maintenance personnel are required to know the PIN code for the maintenance). Please contact the special service station of Great Wall Motors if the security envelope is lost.

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical
data

Index

Introduction to the anti-theft system of complete vehicle ▲

The anti-theft system of the complete vehicle can protect your vehicle and precious articles from being stolen.

● **Conditions for starting the anti-theft system of the complete vehicle**

After all the doors are closed and the remote control locking is successful finished, the alarm status is initiated.

The preinstall function▲: All the doors are closed, the preinstall function is set within in 15 seconds when you have locked the door by remote control key, the vehicle will not alarm when the doors are opened and the indicator lamp flashes quickly. After 15 seconds, the indicator lamp will start flashing quickly to show the system is set.

★**CAUTION:** *Under the alarm status, the switch of the central lock is disabled.*

After the anti-theft system of the complete vehicle is started, the anti-theft system of the complete vehicle will give off the alarm for six times in the forms of beeping in the horn and flashing in the turn signal light when someone attempts to enter the vehicle forcibly or open the trunk lid. The interval of each alarm is about 3s and each alarm will last for about 27s.

If you want to close the alarm message of the anti-theft system of the complete vehicle during the alarm process, you can execute the following operations:

Method: Insert the key into the ignition switch and turn it to the position of "ON".

Method : Press the unlocking key on the remote key.

When you open the door lock at the driver's side by using the mechanical key but you cannot turn off the anti-theft system of the complete vehicle, at this time, the anti-theft system of the complete vehicle will give off the alarm. The anti-theft system of the complete vehicle will be shut down until the ignition switch is shifted to the position of "ON" and the key has passed the identification by the anti-theft system of the engine.

★**WARNING:**

- *The safety system shall not be set when the trunk lid or any of the doors is not fully closed. When the safety system cannot be set, check whether the doors and the trunk lid have already been well closed.*
- *Please never attempt to refit or add other devices to the system.*

Introduction to remote-control central lock system

1. Lock the door

After you have closed the door, press the locking switch of the remote key once. At this time, the lamp will flash once and the electric horn will beep once, then, the four doors and the trunk lid are closed.

2.Unlock the door

Under the locking status, press the unlocking switch of the remote key once, at this time, the lamp flashes twice and the electric horn beeps twice, then, the four doors and the trunk lid are unlocked.

3. Safety function

Under the locking status, press the unlocking switch of the remote key, it will get locked automatically if the trunk lid is not opened in 30s.

4. Temporary halt of the function of remote control

When the remote key is inserted into the ignition switch, the remote controller is unable to work. However, the main machine can still work normally.

5. Manual unlocking and locking

It is feasible to unlock and lock the

four doors and trunk lid through manual operation.

6. Function for alarm for key retaining in the vehicle

If the key is in the ignition lock and it is not at the position of "ON", the beeper will beep intermittently when you open the left front door. So as to prevent the door from being closed accidentally and cannot be opened.

7. Function of alarm for lamps which are not switched off

If the key is not in the ignition lock and the lamp is switched on, the beeper will beep for long time when you open the left front door, So as to prevent the battery from being consumed completely which in turn makes the vehicle unable to get started.

8.Function of automatic locking

If the vehicle speed is greater than 15km/h, the door will get locked automatically.

9.Function of automatic unlocking

Type 1: All the doors are locked, and the door locks of the vehicle are unlocked when you remove the key from the ignition lock.

Type 2: when all the doors are locked, by switching the key to the LOCK, you can unlock all the doors.

10. Function of unblocking the doors when collision occurs

The doors of both sides will be unlocked automatically when collision occurs to the vehicle equipped with airbag and promotes the airbag to expand.

11. Function for starting the trunk lid

› Press the trunk lid opening key on the remote key, you shall press the trunk lid opening button in 60s. Then, you can open the trunk lid by pulling the handle upwards. The trunk lid will be locked automatically if the trunk lid is not opened within 60s.

› Press the unlocking key on the remote key, you shall press the trunk door opening button in 30s. Then, you can open the trunk lid by pulling the handle upwards. The trunk lid will be locked automatically if it is not opened within 30s.

› The trunk lid can be opened at any time by pressing the unlocking button of the central lock control switch.

Contents

Warning

Operation

Driving

Interior
Devices



Safety

Emergency

Maintenance

Technical data

Index

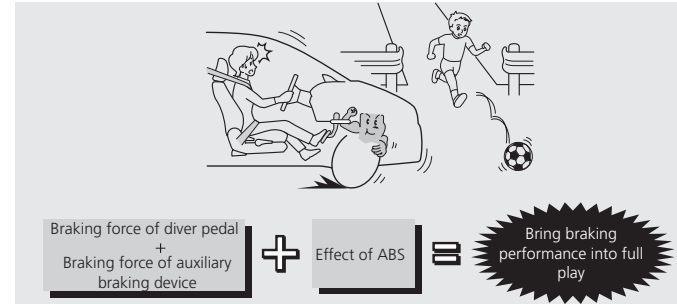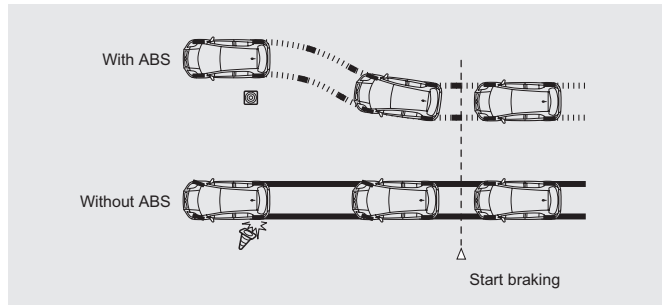

● Functions of ABS

ABS refers to the method to avoid wheel lock (wheel fails to rotate) during emergency braking and braking on slippery road surface of the vehicle and it is mainly used to suppress side slip of the vehicle.

★ CAUTION:



Since the stability and effective control range of steering wheel of the vehicle which installs ABS are limited to some extent, do not rely on ABS excessively and drive safely and carefully.

● Functions of brake assist device

When the driver depresses the brake pedal faster than normal condition, the vehicle sensor will judge that emergency braking is needed.

When the driver is unable to depress the brake pedal by force and braking function cannot be performed adequately, the brake assist device can help increase the depressing force and guarantee the adequate braking force.

■ Working state of ABS and brake assist device

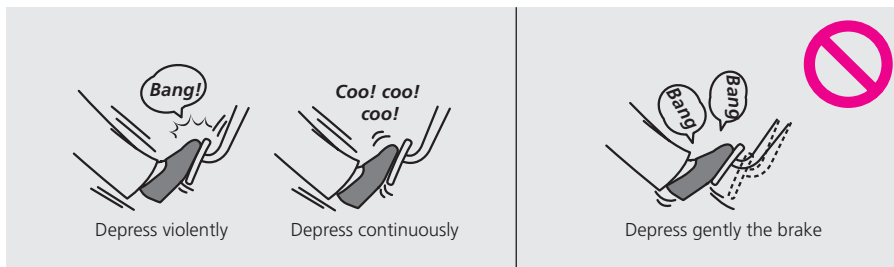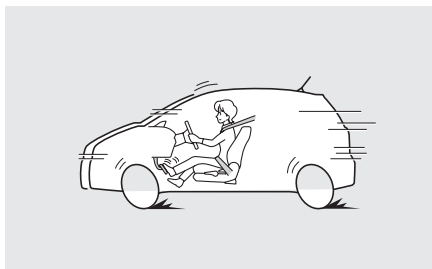

● Relevant precautions for driving

1. During emergency braking, in order to make sure ABS and brake assist device function well, the driver must response rapidly and depress the brake pedal hard.

2. Do not use pump type braking method ✕ during emergency braking or the braking distance may be increased.

Note: ✕ depress the brake pedal for several times with little strength.

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

■ Functions of EBD system

ABS control technology is adopted and the best braking force will be assigned to front and rear wheels according to the driving mode; braking force will be assigned to front and rear wheels in the best way according to the load capacity and load change during speed cut, so as to guarantee high braking performance. Besides, braking force of left and right wheels can be controlled during steering braking in order to guarantee the driving stability of the vehicle.

★WARNING:

- Do not rely on the functions of ABS and assist device with EBD excessively.

When ABS with EBD is in working mode, the stability of the vehicle and control effectiveness of the steering wheel are limited to some extent. Non-standard driving may cause accidents.

Do not rely on the functions of ABS and brake assist device with EBD excessively; you shall control the driving speed, confirm the effective distance between vehicles and drive your car safely and carefully.

When lock limit of tire is exceeded or water film effect ✕occurs, ABS device with EBD will not function.

✕refers to the phenomenon that water film occurs between tire and ground and the tire loses the traction ability during high-speed driving in rainy days.

- Under the following circumstances, compared with the vehicles which fail to install ABS, the vehicles installed with ABS with EBD, the braking distance is not shortened. To the contrary, it is longer sometimes.

Therefore, control the driving speed well and keep effective distance between vehicles.

- 1) When driving on sand-gravel road and the snow-covered road;
 - 2) When crossing places with altitude differences such as road joints;
 - 3) When driving on bad roads such as uneven road and rippled road.
- The brake assist device is not the device that is able to exceed the ability of the brake itself. Pay enough attention to the functions of your vehicle and drive safely and carefully.

● Working conditions

1. ABS and brake assist device with EBD starts to work when the travel speed exceeds 15km/h. They stop working when the travel speed is decreased to 5km/h.

2. In rainy days, the vehicle may slip when depressing the brake pedal at road entrance and exit, road joints and construction-use iron plate and ABS with EBD works easily at this time.


● Working sound

When the engine starts and after the vehicle moves, sometimes you may hear the sound of motor or “crack” sound from the engine compartment. Such sound is produced by ABS with EBD when examining its working condition and it is not abnormal.

Introduction to ESP system functions ▲


● Composition of ESP system

1. Hydraulic control unit with ECU and pressure sensor
2. Wheel speed sensor
3. Steering angle sensor
4. Sensor of yaw velocity and lateral acceleration
5. Communication with engine management system

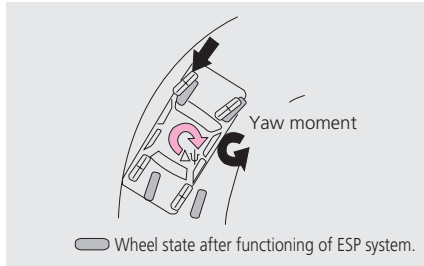

● Operating principle of ESP

- When steering excessively, the yaw velocity becomes too large, the vehicle will spin and rear axle will slide to the outside of the curve. ESP system can stabilize the vehicle by braking the front wheel at outside of the curve.

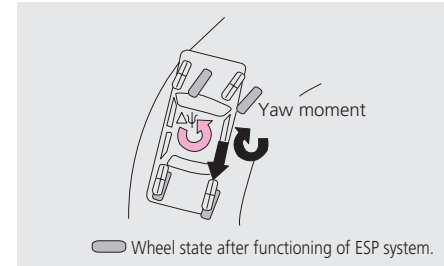

- When the steering angle is not enough, the yaw velocity is too small and front axle of the vehicle will slide to the outside of the curve. ESP system is able to stabilize the vehicle by braking the rear wheel at inner side of the curve.

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

● Additional value added functions of ESP

1. Hill hold control with longitudinal acceleration sensor: during hill start, from the period when the driver releases the brake pedal to the vehicle starts, the braking force applied by the driver can be automatically maintained for 1.5~2 seconds, so as to effectively avoid slope sliding.
2. Hydraulic Brake Assist: In some contingency situations, the force applied by the driver to the pedal is sometimes inadequate. HBA (hydraulic brake assist) can recognize such rapid but inadequate situations and automatically produce ABS-level braking force; as a result, HBA (hydraulic brake assist) can greatly shorten the braking distance.

● Application of ESP

When switching the ignition key to "ON" position, ESP working and failure indicator lamps are on and become off 3~5 seconds later, which indicates that self-check of ESP system is normal; when ESP working and failure indicator lamps flash, it indicates ESP system is working; if ESP working and failure indicator lamps are always on, it indicates the system is faulted and go to the special service station of Great Wall Motors to overhaul the ESP system.

1. After the ignition, ESP function will be enabled automatically after the self-check and the anti-sideslip function will be enabled when the speed exceeds 30km/h.
2. When the vehicle speed is less than or equal to 80km/h, ESP function can be disabled by pressing the ESP button (precondition: ESP on/off button cannot be pressed for more than 10 seconds and if it is pressed for more than 10 seconds, ESP system will consider that as mal-operation and maintain the ESP function).

3. When the vehicle speed exceeds 80km/h, ESP will work normally whether ESP on/off button is pressed or not.
4. Whether the switch is pushed or not, ABS functions may work.
5. Vehicles equipped with ESP function can only use two tire brands – Kumho Tires or Giti Tire and it is prohibited to use tires of other brands.

6

Emergency

Position of jack, tool box and spare tire	220
Other tools ▲	223
When fault occurs	224
When fault occurs on the road	224
When the vehicle cannot drive	225
When a tire bursts.....	226
Change the broken tire.....	226
When the battery voltage is insufficient	232
Treatment method for insufficient battery voltage.....	232
Overheating.....	234
Treatment method for overheating	234
Towing	237
Precautions for towing.....	237
Towing method	238

Contents

Warning

Operation

Driving

Interior
Devices

Safety


Emergency

Maintenance

Technical data

Index

Position of jack, tool box and spare tire

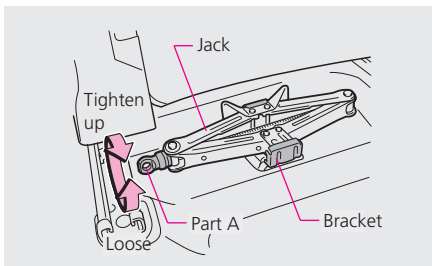

● Position of jack


The jack shall be placed under the driver seat.

● When taking out

1. Move the driver's seat to the most front.
2. Loosen part A of the jack and take it out.

● When putting back

Put the jack on the support and lock it by screwing tight part A.

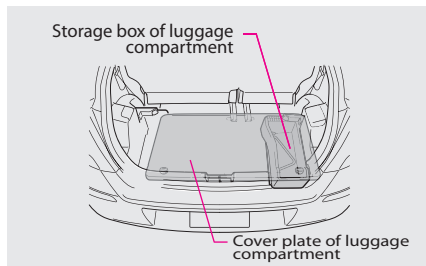


● Position of tool box

The tool box shall be placed in the glove compartment under the cover plate in the luggage area.

Confirm the use method of jack and different types of the tools in advance for the convenience of treatment during emergencies.

★ WARNING:

- Make sure to put the tools and jack back after using them. If they are placed at non-specified positions, accidents may occur.
- The jack provided along with the vehicle is the dedicated tool of the vehicle. Do not use the jack for other vehicles or use jacks accompanied by other vehicles. Maloperation may cause accident.
- The jack provided along with the vehicle shall be used for changing tires rather than for other purposes.

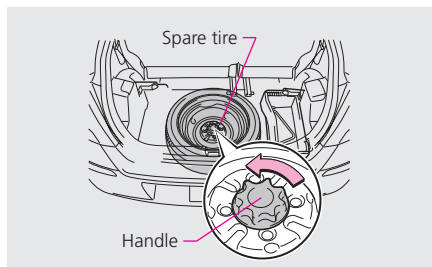


● Position and take-out method of the spare tire.

The spare tire shall be placed under the cover plate in the luggage area.

● Take-out method

1. Dismantle the cover plate in luggage area.
2. Take out the spare tire by rotating the handle that fixes the spare tire anticlockwise.

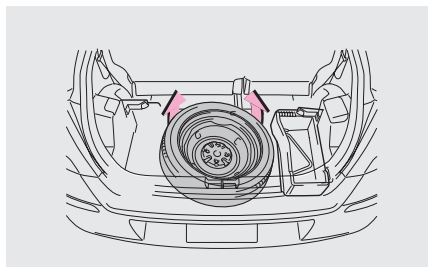

3. Take out the spare tire along with the direction shown in the picture.

★ **CAUTION:** In order to take out the spare tire more conveniently, you can lay down the backrest at the back row.

● Storage method

Opposite to the take-out method.

★ **CAUTION:** After placing the spare tire, make sure to confirm that the spare tire really is at lock status.

★ **WARNING:** The spare tire is the tire temporarily used when the standard tire is broken; repair the damaged standard tire and change it as soon as possible.

★ **WARNING:**

- Make sure to check the state of the spare tire and always bear in mind never install the abnormal spare tire. Designated "tire pressure" label is pasted on the door frame at the driver side.

If you drive the vehicle when the tire pressure is low, the diameter difference among different tires will become larger and larger and thus accidents may occur.

- The spare tire loaded on your vehicle is exclusively used by your vehicle and it cannot be used together with other tires or disc wheels; moreover, the spare tire cannot be used for other vehicles and your car cannot use the spare tires of other vehicles. Otherwise, normal driving will be seriously influenced and thus accidents may occur.

★**CAUTION:** *The spare tire is the tire temporarily used when the standard tire is punctured. Since its diameter is smaller than that of the standard tire, pay attention to the precautions below.*

- *When the spare tire is installed, do not exceed 80km/h when driving your vehicle or accident may occur. The spare tire is the tire temporarily used when the standard tire is punctured. Change a new standard tire as soon as possible.*
- *When driving the vehicle which installs the spare tire to pass through objects such as raised object, do not drive with the same feeling when standard tire is installed. The heights of vehicle that installs the spare tire and vehicle that installs the standard tire are different. If you drive with the former feeling, collision accident may occur.*
- *If the front tire is punctured, the spare tire shall be installed at the rear wheel instead of the front wheel; after that, the dismantled rear wheel shall be installed at the front wheel.*

- *When the spare tire is installed, since the vehicle speed cannot be accurately detected, systems below may not work normally as well.*

› ABS

› GPS voice navigation system▲

en.carobook.com

● Fire extinguisher

Fire extinguisher should be placed under the co-driver's seat.

● First aid kit

When an injury has occurred, you may use the first aid kit to perform first aid. For the usages of medications and instruments, please refer to the Emergency Rescue Guide for more details.

★ CAUTION:

Please check and replace the medications in the first aid kit on a regular basis.


● Pressure gauge

Use the pressure gauge to check tire pressure before driving. Instructions for using the pressure gauge are as follows:

Press the head of the pressure gauge against the tire valve to obtain the correct tire pressure readings.

★ CAUTION:

When the tire pressure value displayed is too high or too low, you must deflate or inflate the tire further to keep the tire pressure in the correct range so as to reduce tire wear to a minimum and to maintain ride comfort and safety.

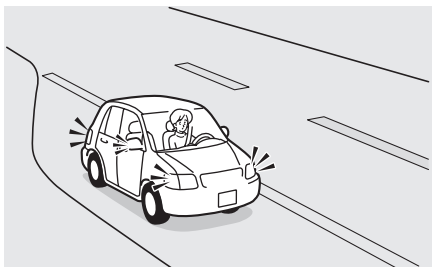

1. Avoid subsequent faults.

Move the vehicle to safety zone to prevent traffic from being influenced and then shut down the engine.

Turn on the hazard warning light and place the warning triangle at the proper location behind the vehicle.



2. Injured person shall be treated with emergency measures.

Try to adopt the emergency measures before doctors and the ambulance arrive.

If your head is seriously hurt, try to remain your current posture and keep still; if you are worried about subsequent accident, you shall move to the safety zone.




3. Call the police.

4. Confirm the person who causes the trouble and make records (name, address and phone number).

5. Contact the agency where you bought your car and the insurance company.

■ When the vehicle cannot drive

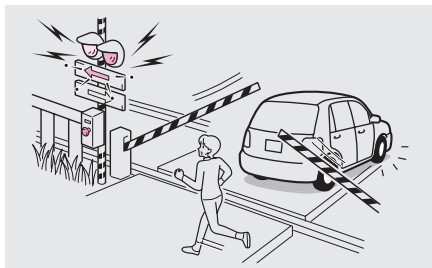

● When it can't drive at a crossing

Put the shift lever into **N** gear and ask people around to push the vehicle to a safe place.

If the vehicle cannot be moved since its tire comes off, press the abnormal switch at the crossing immediately.



● When the vehicle can't drive on the road

Put the shift lever into **N** gear and ask people around to push the vehicle to a safe place.

If the problem cannot be solved on site, contact the special service station of Great Wall Motors.

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

When a tire bursts ■ Change the broken tire

● Before changing the tire

1. Push the car to a solid and flat location.

Push the car to a solid and flat location to guarantee normal traffic and safety operation.

2. Pull up the handbrake.

3. Shutdown the engine.

4. Hint the vehicle is in halted state.

Turn on the hazard warning light according to need, make all passengers get off the car, unload all luggage and articles and place the warning triangle.

5. Prepare the jack, jack handle and wheel nut wrench.

6. Prepare the tire retainer.

Use the tire retainer when using the jack.


You can buy the tire retainer at the special service station of Great Wall Motors and contact with the special service station of Great Wall Motors for relevant matters.

Besides, if tire retainer is not available, you can use the big rock which can fix the tire instead.

7. Prepare the spare tire.

★ WARNING:

Do not drive continuously when a tire bursts. Otherwise, driving will become unstable and thus accident may occur. Moreover, other tyres, wheels, suspension and vehicle body may be damaged. Install the spare tire immediately.

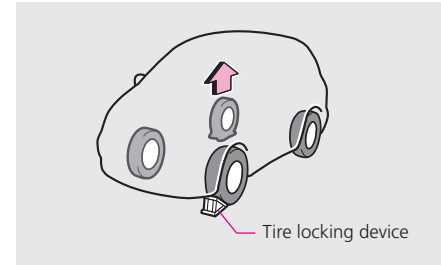


● Tire replacement method

1. Fix the tire.


Use the tire retainer to resist the tire which is catercorner with the broken tire.

Lock the rear wheel when uplifting the front wheel and lock the front wheel when uplifting the rear wheel. (The situation when rear wheel at right is uplifted is shown in the figure)

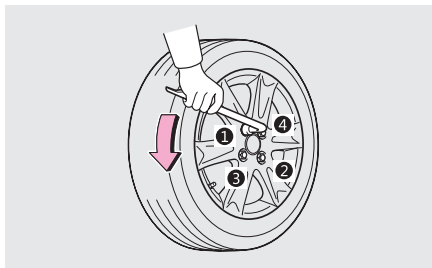

2. Unscrew the nut.

Use the wheel nut wrench to screw off the nut anticlockwise according to the sequence indicated in the figure and do not take off the nut temporarily.

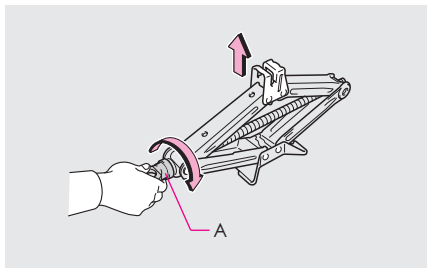


3. Place the jack.

Place the jack on flat and hard ground.

4. Set the jack.


Rotate part A of jack clockwise and put the jack under the lift position of the vehicle body.

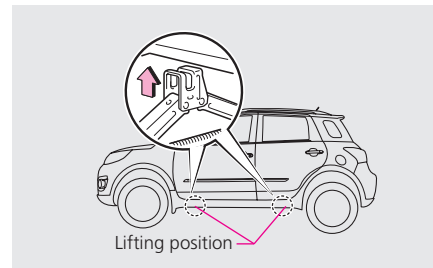

5. Install the jack at the fixed lift position.


Adjust the jack at the lift position for tire replacement.

Guarantee that the jack is stably fixed to the lift position of the vehicle body.

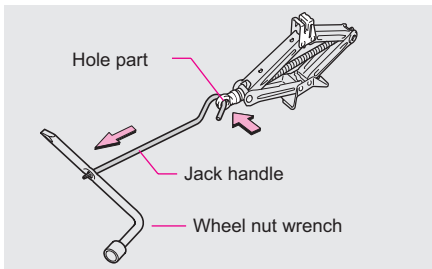

6. Install the jack handle.

Assemble the jack handle and wheel nut wrench to the shape shown in the above figure and then insert the handle into the header hole of the jack.

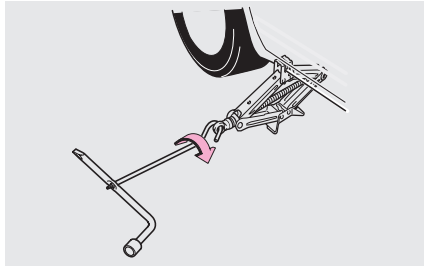

7. Use the jack to lift the vehicle.


Rotate the assembled tool clockwise and lift the tire to the height when the spare tire can be installed.

8. Screw off the nut.

Screw off the retaining nut anticlockwise and remove the tire.


9. Remove the tire.

When placing the wheel on the ground directly, the decorated side shall face up to avoid damage.

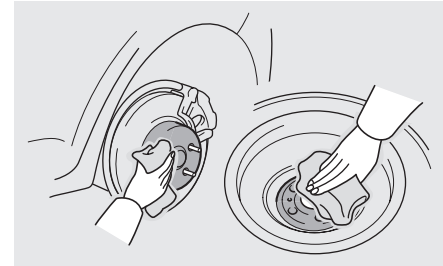


10. Install the spare tire.

Remove the soil on hub surface, hub bolt or wheel mounting hole and then install the spare tire.

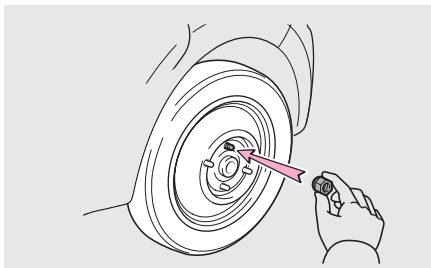


11. Install all the wheel nuts until the wheel is not loose.

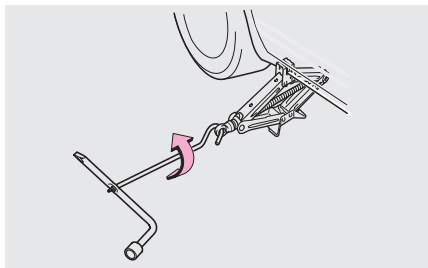

12. Lower the vehicle.

Lower the vehicle by rotating the jack anticlockwise.

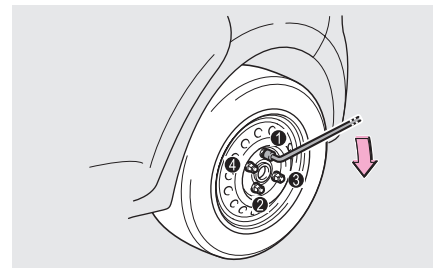

13. Use the wheel nut wrench to screw the wheel nuts tight in turn according to the sequence shown in the figure.

Tightening torque: $110 \pm 10 \text{ N}\cdot\text{m}$

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

★ **WARNING:**

Follow the precautions below when using the jack. Otherwise, the vehicle may be damaged or the jack may shift to cause severe injury.

- 1) *When using the jack, park the vehicle at a flat place and use the tire retainer to resist the tire catercorner with the jack.*
- 2) *Shut down the engine when using the jack.*
- 3) *It is prohibited to use the jack when the vehicle carries persons.*
- 4) *Check if the jack is in lift position when using the jack.*
- 5) *Do not put any object under or above the jack when using it.*
- 6) *Do not lay under the vehicle when it is lifted by the jack.*
- 7) *The uplifted height of the vehicle body shall be suitable for tire replacement.*
- 8) *When lowering the vehicle, keep an eye on the surrounding situation to prevent operators and other surrounding people from being hurt.*

★ **WARNING:**

Follow the precautions below when installing the spare tire. Otherwise, the vehicle may be damaged or serious injury may occur.

- *Do not apply lubricating oil or grease when installing the nuts and bolts of the wheel.*
 - *When damage or crack occurs to the installation bolts of wheel, thread part of nut and bolt hole of the wheel, go to the special service station of Great Wall Motors to repair.*
- If damage or crack occurs, the nut cannot be screwed tight adequately and thus wheels will come off and accident may occur.*
- *Confirm that the installation nut of the wheel is locked tight. Otherwise, mounting bolts and brake parts of the wheel may be damaged and even the wheel may come off to cause accident.*

When changing the tire, go to the special service station of Great Wall Motors as soon as possible to screw the nuts tight to reach the standard value by using the torque wrench. Be-

sides, screw tight the wheel nuts every 1,000km and this preventive measure is really necessary because it can guarantee the wheels are secure.

★ **WARNING:**

- *Fasten the nut tight when using the wheel nut wrench. Otherwise, the wrench may be separated from the nut when screwing the nut and thus injury may occur.*
- *If dust is attached to the wheel guard and inner surface of the wheel, retaining nuts of the wheel may get loose during driving and thus the wheel may be separated from the vehicle.*
- *Use the dedicated nuts of Great Wall Motors only when fixing the aluminum wheel or the nuts may get loose during the driving and thus the wheel may be separated from the vehicle.*
- *Do not step on the wheel nut wrench by feet or screw the nuts overly tight by using other pipes, or the fixed bolts of the wheel may be broken.*
- *Do not use damaged or deformed nuts and wheels.*
- *After changing the wheel, when noticing any vibration of steering wheel and vehicle body during driving, go to the special service station of Great Wall Motors to receive dynamic balance check.*
- *When installing the new tire, guarantee the four tires share the same designated specification, the same manufacturer, the same brand and the same pattern.*

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

When the battery voltage is insufficient ■ Treatment method for insufficient battery voltage

Insufficient battery voltage status is shown as follows:


1. Starter does not work, even if works, its power is too weak to start the engine.
2. The starter produces “crack, crack” sound and does not work.
3. Headlamp is a little bit dim than normal status.
4. Alarm is weak or silent.

● Method to avoid insufficient battery voltage

1. Do not turn on light, listen to the radio or play the CD when the engine is shut down.
2. When the engine is working and the car is required to be parked for a long time due to traffic congestion, shut down the engine and unnecessary electrical equipment.

● Treatment method for insufficient battery voltage

Rely on the rescue car and connect its auxiliary cable with the battery to start the engine. The rescue car shall be equipped with 12V battery.

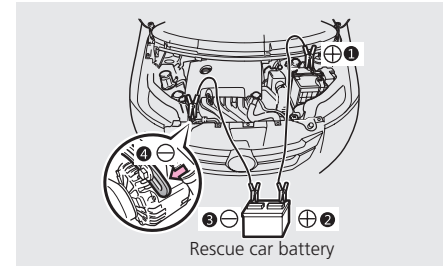

1. Connect the auxiliary cable according to the sequence below.

- ① Positive electrode of battery of your own vehicle ⊕
- ② Positive electrode of battery of the rescue car ⊕
- ③ Positive electrode of battery of the rescue car ⊖
- ④ Connect the negative electrode of battery of the rescue car ⊖ to the grounding point indicated in the figure

2. Charge the battery

Start the engine of the rescue car, when the engine speed is slightly increased, keep that speed for approximately five minutes to charge the battery of your own car (the car whose battery voltage is insufficient); this is only the emergency measure.

3. Start the engine of your own car (the car whose battery voltage is insufficient).

If the engine still cannot start, you shall check if the auxiliary cable is connected normally and then charge the battery.

4. Remove the auxiliary cable.

Remove the auxiliary cable by using the method contrary to the operation to connect the auxiliary cable.

• Battery of the rescue car

The configuration of the battery of the rescue car shall be better than that of your own car (the car whose battery voltage is insufficient), or the engine may not be started smoothly. In such case, charging time for the battery of your own car (the car whose battery voltage is insufficient) shall be extended.

★ **WARNING:** Keep the battery away from fire.

• Be sure to follow the precautions below.

Otherwise, combustible gas produced from the battery may cause fire disaster and explosion and thus serious injury may occur.

- 1) It is prohibited to connect the negative electrode of the rescue car to the negative electrode of your own car. Otherwise, spark may be produced.
- 2) When connecting the auxiliary cable, contact of positive and negative electrodes is forbidden, or spark may produce.
- 3) Keep the battery away from fire.


• Do not get close to the battery during charging. Battery liquid contains dilute sulphuric acid may overflow and cause serious damage to eyes or skin. If you contact the acid carelessly, flush with water immediately and seek medical attention.

• Try not to touch the fan and belt when connecting and removing the auxiliary cable. Because your hands or clothes may be stuck and major accident may occur.

• When changing the battery, make sure to lock tight the clamp nut or the clamp may come off during driving and thus short-circuit and fire disaster may occur.

★ **CAUTION:** The rescue car shall be equipped with 12V battery.

- Battery of other vehicles (rescue car) must be 12V. Make sure to confirm that
- When the battery voltage becomes insufficient frequently, go to the special service station of Great Wall Motors for check.

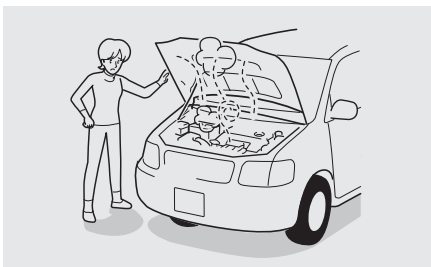

Overheating status is shown below:

1. When the water temperature indicator enters the “H” warning area, the engine power decreases.

2. Steam emitted from the engine hood.

● Treatment method

1. Park the car

Park the car at a safety place and shut down the engine. Turn off the air conditioner if it is opened at that time.

2. Confirm the engine hood.


Confirm if steam comes out of the engine hood.

› When no steam is coming out of the engine hood

Open the engine hood and then start the engine.

› When steam comes out of the engine hood

Wait until no steam comes out, open the engine hood and then start the engine for the convenience of ventilation.

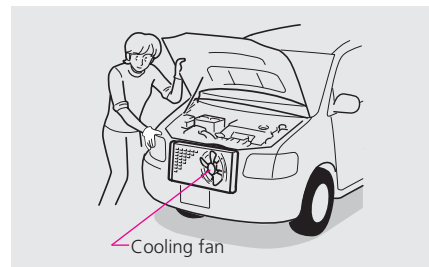


3. Confirm the cooling fan.

Confirm that the cooling fan functions well. If the fan fails to work, shut down the engine and consult the special service station of Great Wall Motors.

4. Shut down the engine.

Shut down the engine when the water temperature returns to normal.

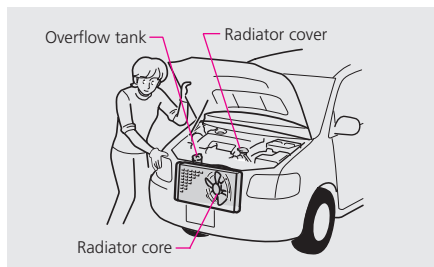

5. Confirm the quantity of cooling fluid.

After the engine is cooled down, open the radiator cap to confirm the quantity of cooling fluid in the water tank and check if the core of radiator (cooling part) is dirty or covered by dusts.



Radiator cap is affixed with warning labels shaped as shown.

The mark reminds you to read the section related to the radiator in this user manual carefully before operation to avoid the occurrence of dangerous incidents such as burns and coolant spills.

6. Supplement the cooling fluid.

Supplement the cooling fluid when it runs short.

7. Have the vehicle checked at the special service station of Great Wall Motors.

Have the vehicle checked at the special service station of Great Wall Motors as soon as possible.

When the water temperature indicator enters the "H" warning area again on the way, regulate the temperature adjusting button to the highest warm level to maximize the air volume of the fan and control the water temperature via the cooling liquid in the pipe of heating equipment.

● To avoid overheating

Confirm the quantity of cooling fluid and check if water leaks to the ground in daytime.

★ **WARNING:** Operate carefully to avoid burn.

- When steam comes out of the engine hood, do not open the hood until the steam disappears. Extremely high temperature in the engine compartment may cause serious injuries such as burn.
- Do not open the radiator cap when radiator and water tank are hot or steam or hot water may overflow to cause serious injuries such as burn. Do not touch or get close to the fan or belt when opening the radiator cap and open the cap slowly by covering it with cloth.
- When the engine is running, do not contact or get close to the fan or belt, or your hands and clothes may be stuck and thus serious injury may occur.

★ **CAUTION:** Do not add cooling fluid when the engine is overheated. If you add cooling fluid suddenly, the engine may be damaged. Add the cooling fluid when the engine is totally cooled down.

en.carobook.com


Towing ■ Precautions for towing

★CAUTION:

- Local regulations concerning towing must be obeyed.
- Vehicle towing shall be operated by professionals.
- Use the tow hook provided along with your car only.
- The tow hook can only be used for towing cars in highway.
- The towing vehicle shall be lighter than the disabled vehicle.
- Pay attention to the precautions below when towing the vehicle with the tow rope.
 - 1) Tie the rope to the tow hook only;
 - 2) Avoid applying large impact to the tow hook when towing vehicles;
 - 3) Be sure to always keep the tow rope in tightly tensioned status during towing.
 - 4) Try to use flexible tow rope.
 - 5) Keep the vehicle speed at 30km/h below during towing and control the towing distance within 80km.

★WARNING:

- When the following situations occur, the vehicle must be put on the dedicated carrier vehicle or trailer and carried away.
 - 1) Fault occurs to vehicle steering system;
 - 2) Fault occurs to vehicle braking system;
 - 3) Fault occurs to vehicle transmission system.
 - 4) Fault occurs to vehicle transmission;
 - 5) Fault occurs to lightings such as brake lamp and steering lamp.
- When vehicle is towed in long downhill slope, the temperature of its braking part will rise and brake failure may occur. Call for rescue tow truck for such road.
- Never tow the car from its back (reverse direction) when all the four wheels touch the ground. Otherwise, transmission will be seriously damaged and economic loss may occur.

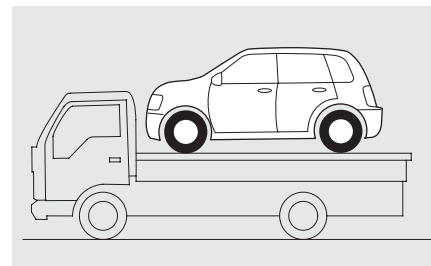

Flat-bed cargo truck is the best vehicle to transport your car.

Contents

Warning

Operation

Driving

Interior
Devices

Safety


Emergency

Maintenance

Technical data


Index

■ Towing method

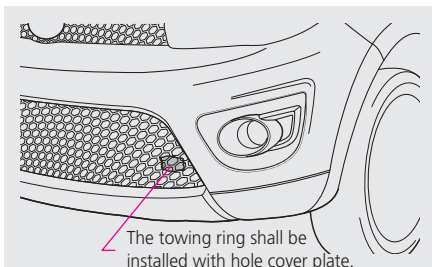


● Tow the vehicle with tow rope

1. Remove the cover plate of the tow lug installation hole.

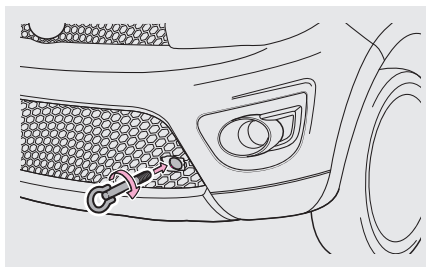


2. Install the tow lug.

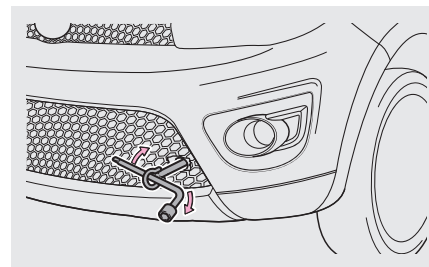

3. Rotate the two lug tight with the wheel nut wrench.

en.carobook.com

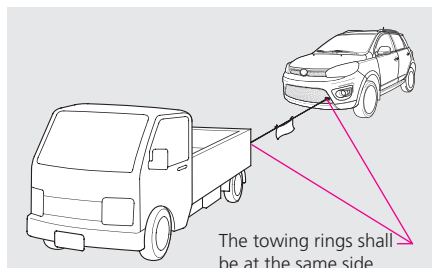

4. Hang the tow rope to the tow hook and do not damage the vehicle body.
5. Tie a 0.3m² (0.3m×0.3m) white cloth strip to the middle of the rope.

6. Start the engine.


★ **CAUTION:**

- When the engine cannot be started, place the ignition switch at “ACC” or “ON”. Otherwise, the steering wheel will be locked and the vehicle is unable to turn.
- If the engine is not running, power steering system does not work; hence, larger force is needed for vehicle to brake and steer.

7. Put the shift lever to the N gear.

8. Turn on the hazard warning lamp.

9. Pull down the handbrake and then tow the vehicle.

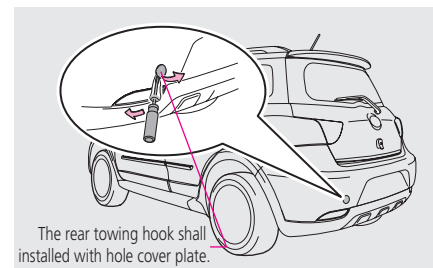

● **Towing of other vehicles**

It is prohibited to tow the vehicle heavier than your car. Otherwise, driving system will be seriously influenced and tow lug or vehicle body may be damaged.

★ **CAUTION:**

When unclenching the cover plate of the back towing hook mounting hole, please wind the head of slot type screwdriver with thin cloth to avoid damage to the bumper.

Contents
Warning
Operation
Driving
Interior Devices
Safety
Emergency
Maintenance
Technical data
Index

Memorandum

en.carobook.com

7

Maintenance

Checking	242
Engine compartment.....	242
Anti-corrosion measures	247
Daily inspection and maintenance.....	248
Daily inspection	248
Daily maintenance.....	253
Regular maintenance	256
Replacement method of remote key battery	265
Replacement method of wiper	268
Replacement method of front wiper	268
Replacement method of rear wiper	269
Fuses	270
Check and replacement method of lamp	272
Lamp overview	272
Maintenance and replacement method of lamp	273
Maintenance of air conditioner	279

Maintenance method of sunroof ▲	282
--	------------

Contents

Warning

Operation

Driving

Interior
Devices

Safety


Emergency

Maintenance

Technical data

Index

Checking ■ Engine compartment

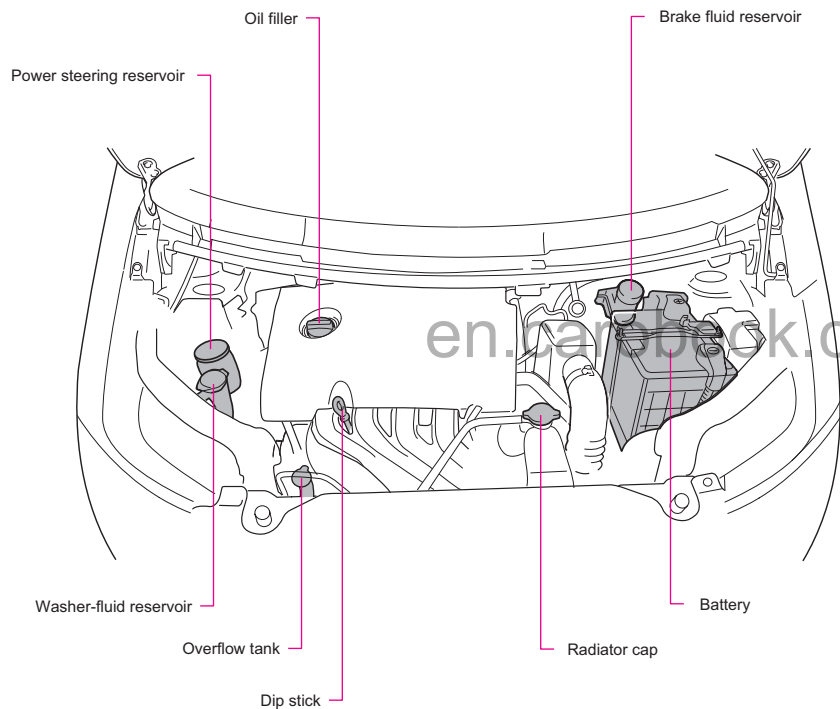

★ **WARNING:** Confirm that no objects such as tool or cloth are left in the engine compartment after checking or replacing in case of that, failure may occur; moreover, high temperature in the engine compartment may cause fire disaster to the vehicle.

● Engine oil

Park the vehicle on the flat ground and the engine heat up to normal temperature. Then 10 minutes after the engine is shut down, check the liquid level of engine oil.

The liquid level lies between the lowest and highest mark of the dipstick.

If the liquid level of engine oil is close to or lower than the lowest mark, refuel the engine oil through the filler neck until the liquid level is between the lowest and highest mark.


Vehicle maintenance when changing the oil, fill volume should be in accordance with the technical parameters of the "Technical data" chapter.

★ **CAUTION:** Check and change the engine oil regularly.

- *The engine oil consumption depends on the driving method and service condition of the vehicle.*
- *Pave cloth on the engine when checking the engine oil so that oil will not be dropped on the engine. In case of that, clean the engine thoroughly.*
- *After refueling the engine oil and before checking the liquid level, make the engine run for a few seconds; shut down the engine, wait several minutes and then check.*
- *Both engine oil and filter contain substances that contaminate environment. It is suggested to emptying the engine oil and changing the filter at the special service station of Great Wall Motors because the station is equipped with the engine oil removal device which conforms to the requirements of environment and current regulations.*

★ **WARNING:** Follow the precautions below when checking and changing the engine oil, or serious injury and burn may occur.

- **Engine stalls.**
When the engine runs, if you contact or get close to rotating parts such as belt and fan, your hands, clothes and tools may be stuck and accident may even occur.
- *Even if the engine stalls, the temperature of cooling fluid and engine oil is very high and thus burn may occur.*
- *Do not refuel the engine oil whose characteristics are different from that of the original engine oil.*

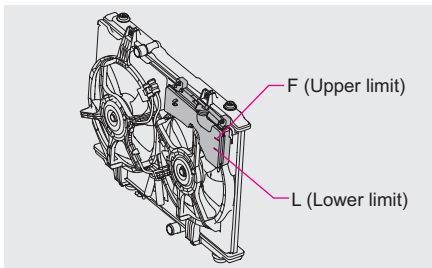

● Quantity of cooling fluid

When the engine is in cold status, if the liquid level of cooling fluid is between “F” (upper limit) and “L” (lower limit), the liquid level is normal.

› If the liquid level drops soon after the cooling fluid is refueled

Check the radiator, hose, overflow tank cover, radiator cap, discharge faucet and pump visually.

If no leakage is found, cap pressure and cooling system leakage shall be checked at the special service station of Great Wall Motors.

★CAUTION:

- Use the cooling fluid specified by the manufacturer only.
- The spilled cooling fluid must be flushed with water to avoid damage to components and parts or the paint surface.

★WARNING:


- Do not remove the radiator cap when the engine is hot.
Since there may be pressure in the cooling system, high-temperature cooling fluid may eject if you remove the radiator cap and thus burn and other injuries may occur.
- When the radiator cap is to be changed, use the original accessories. Otherwise, pipeline effect will be influenced.

● Radiator and condenser

Check radiator and condenser and then remove the foreign matters.

If the radiator or condenser is extremely dirty or when you cannot make sure whether it can be operated normally, have the vehicle checked at the special service station of Great Wall Motors.

★**WARNING:** Do not touch the radiator or condenser when the engine is at high temperature state. Otherwise, burn may occur.

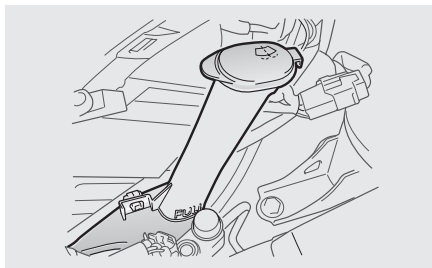

● Glass scrubbing solution


The function of glass scrubbing solution is to improve vision visibility.

Check the liquid level of scrubbing solution through the liquid storage tank.

Lift the lid a little when supplementing the solution. Do not replace the glass scrubbing solution with water.

★ **WARNING:** It is prohibited to drive without scrubbing solution.

Some additives of glass scrubbing solution sold on the market are combustible. Therefore, do not supplement the solution when the engine is very hot or the engine is running, or fire disaster may occur.

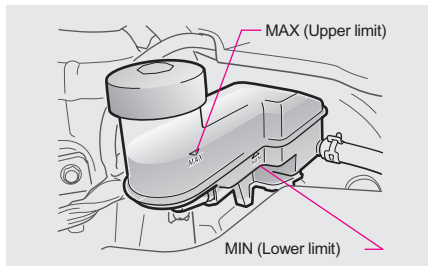

● Brake fluid

● Explanation on filling of brake fluid

Precautions for brake fluid filling or change:

1. The container filled with brake fluid must be closed tight and sealed.
2. Since the brake fluid is toxic and can damage the paint surface, it shall be wiped off immediately if it splashes on the vehicle surface.
3. If the brake fluid is mixed with water or other pollutant and when the piston sealing ring of brake master cylinder has been broken, brake fluid and all rubber parts including brake hose in the brake system must be changed.

4. The correct liquid level in the liquid storage tank shall lie between the upper limit (MAX) and lower limit (MIN).

5. Use DOT4 synthetic brake fluid only to refill the fluid.

6. When unscrewing the cover of liquid storage tank, keep the brake fluid which has extremely strong corrosivity away from the painted part. Otherwise, flush with water immediately.

★ **WARNING:**

- Brake fluid is harmful to human body and is corrosive. If you contact the fluid by accident, wash the contacted body part with clear water and neutral soap immediately and flush with water for several times. If you eat it by mistake, seek medical attention immediately.
- If the brake fluid is insufficient, the brake effect becomes poorer and thus accident may occur.

● Power steering fluid

Check if the liquid level in the oil cup is between the upper limit (MAX) and lower limit (MIN).

Use ATF III-type hydraulic drive oil only to refill the fluid.

● Belt check

Check the tightness degree of the belt of power steering oil pump.

Check the tightness degree of the belt of air conditioning compressor.

Check the tightness degree of engine belt.

Check if the belt is cracked or broken and if yes, have the belt checked at the special service station of Great Wall Motors.

★CAUTION: *Wipe off liquid such as water or oil on the belt as soon as possible.*

■ Anti-corrosion measures

● Most common factors that cause vehicle corrosion:

Humid dirt, dust or foreign matter stays on plate-type, hole-shape and other parts of the vehicle body.

Damage of coating or other protective layer caused by sand-gravel or minor accidents.

● Environmental factors influence corrosion rate:

Corrosion will be accelerated in the cases below:

- › Area with high relative humidity;
- › Area where temperature is above the freezing point all the time;
- › Area suffers air pollution or industrial pollution;
- › Waterfront area and area where roads with too much salt.

● Moist

Sand, dirt and moisture accumulated at the vehicle bottom will accelerate corrosion. The ice and snow stored under the vehicle floor cannot be dried easily.

● Temperature

Temperature rise will accelerate the corrosion of poorly ventilated parts.

● Air pollution

Industrial pollution; salt content in the air and salt used for roads of water-

front areas is too much and it will accelerate paint corrosion.

● The way to prevent your car from being corroded:

Wash and wax your car regularly to keep it clean.

Check if there is little damage on the paint regularly and repair it as soon as possible.

Keep the drainage hole at the bottom of car door and tailboard unblocked to avoid water accumulation.

Check the lower part of the vehicle body and luggage area. If there are sands, dirt or salt content, flush with water as soon as possible.

Never flush dust, sand grain or other foreign matters in the passenger room with water pipe; use vacuum cleaner or brush instead.

★ **CAUTION:** Keep electronic components in the vehicle away from water or other liquid.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance


Technical data

Index

Daily inspection includes the items required to be checked before normal driving each day and this is the most basic requirement for continuous normal running of your car.

Check your car regularly according to this section. If you feel any abnormal sound, vibration or strange smell, be sure to check the cause or have your car checked at the special service station of Great Wall Motors as soon as possible. Besides, notify the special service station of Great Wall Motors if your car needs to be repaired.

Unless otherwise specified, maintenance items listed here shall be performed regularly.

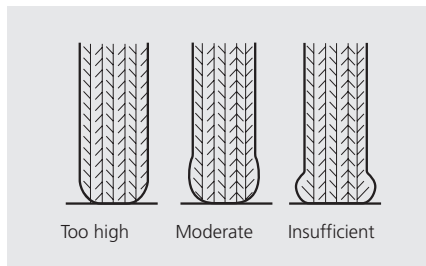


● Tire pressure check

First observe the status of tires before driving and when hitting the ground and then check if the tire pressure is proper.

1. Check the tire pressure with the tire gauge once a month.
2. When the tire is abnormal, make sure to adjust it to the specified value.

★ **WARNING:** When the tire pressure is lower than the specified value, not only the vehicle stability will be influenced, but also the tire wear will be accelerated. The tire may be broken and even accident may occur during high speed driving.

During daily check, adjust the pressure of all tires including the spare tire to the regulated value.

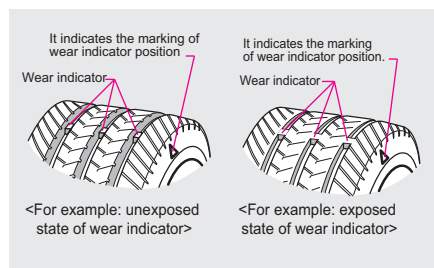


● Check of tread pattern depth and wear condition of tires

Check if the tire is cracked and damaged and check the tread pattern depth and wear degree of the tire (serious eccentric wear of tire and obvious different wear degree with other tires).

★ **WARNING:** Do not use the tire which exceeds the wear limit. If the tire with relatively shouldow tread pattern and exposed wear mark (indicates the wear limit), braking distance may be extended and steering wheel may not be manipulated in rainy days; moreover, the tire may be broken and thus accident may even occur.

When the tire exceeds the wear limit, replace it with a normal tire as soon as possible.

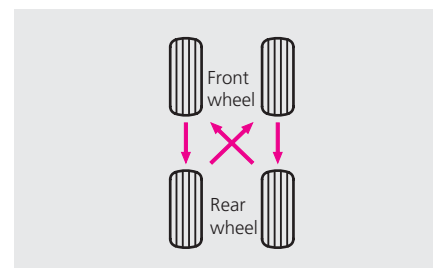

● Tire rotation (tire location exchange)

To make wear degree of each tire uniform and extend its service life, we suggest you carry out tire rotation every 10,000km.

★ **CAUTION:** Check the tire pressure regularly and it shall conform to the requirement marked on the tire side.

en.carobook.com

- **Wheel nut**

Confirm that no wheel nut is loosened during tire check. Check if any wheel nut is loosened within the first 5,000km and screw it tight if necessary.

- **Four-wheel alignment and dynamic wheel balance**

When vehicle driving wandering or abnormal tire wear occurs, check if the wheel alignment parameters are normal. If steering wheel or seat vibrates at normal speed, it is necessary to carry out dynamic wheel balancing.

- **Wiper blade**

If it does not work normally, check if it is cracked or worn.

- **Doors and engine hood**

Check if all doors, engine hood and trunk lid operate normally and confirm that all doors are locked firmly. Lubricate the hook and hinge if necessary.

Toggle the open switch of engine hood and after the engine hood bounces off automatically and leaves a certain gap, confirm the lock catch can still hold down the engine hold.

When driving in the area where the road is covered with salt or other corrosive substances, check the lubrication situation regularly.

- **Light**

Confirm if front combination lamp, rear combination lamp, fog lamp and other lamps work normally and area installed firmly and check the beam-focusing of the headlight.

The maintenance items listed here shall be carried out regularly, for example, regular maintenance, car washing, etc.

- **Warning lamp and buzzer**

Confirm if all warning lamps and buzzers work normally.

- **Wiper and cleaner**

Check if wiper and cleaner work normally and confirm that the blade is not scratched.

- **Windshield defroster**

When turning on the A/C heater, check if the air blown from the defroster outlet is normal and adequate.

● **Steering wheel**

Check if the steering status is changed, for example, too large free play, hard steering, big noise, etc.

● **Seat**

Check the seat control, for example, seat adjuster and backrest tilt device, so as to guarantee that they can be operated stably and every location can be locked firmly. Check if the head restraint can be moved up and down stably and can be safely fixed at all locking (such as equipment) position.

● **Seat belt**

Check if all parts of the seat belt (for example, belt buckle, belt stand, adjuster and retractor) work normally and stably and are firmly installed. Check if the seat belt is cut, cracked, worn or broken.

● **Clutch pedal**

Confirm that the pedal works stably and check if its free travel is normal.

Free travel: 7~13mm

● **Brake**

Check if phenomena such as driving wandering and drift occur to the vehicle. Brake pedal and power booster

Check if the pedal works normally and stably and the pedal has enough reserve travel when it is fully depressed. Check the performance of brake booster. Make sure to guarantee the distance between floor mat and pedal is within the normal range.

Free travel: 6~9mm

● **Parking brake**

Check if the stroke of parking brake handle grip is normal and check if the vehicle can be safely parked on the abrupt slope when the parking brake is only pulled up.

Stroke of parking brake handle grip: 6~9mm

When you check the engine oil or refuel oil, check the following maintenance items as well.

● **Radiator and hose**

Check the forepart of radiator and remove the accumulated foreign matters including dust, insect and leaf.

Confirm the hose is not broken, deformed, corroded or loosened.

● **Battery**

Your battery belongs to maintenance-free type.

- **Exhaust system**

Confirm the exhaust pipe is firmly supported without any crack or broken hole. If the exhaust device produces abnormal sound or emits heavy and odorous smell, have the exhaust system checked immediately at the special service station of Great Wall Motors.

- **Liquid leakage**

After stopping the car, wait for a while and check if fuel oil, engine oil or other liquid is leaked. Check if the water dropping after turning on A/C is normal. If the leakage is obvious, check the cause and make it normal through adjustment immediately.

- **Lower part of car body**

Lower part of your car is frequently exposed to the corrosive substances for melting ice on road and dust. Hence, it is very important to remove these substances from the lower part of the car, or they may be accumulated on the floor bottom, carframe, oil pipe and exhaust system. At the end of winter, flush the mud and dust accumulated at the lower part of your car with water.

en.carobook.com

■ Dially maintenance

Correct maintenance is extremely important to the apperance protection of your car.

In cases below, wash your car as soon as possible to protect the paint.

- › After the rain, to avoid acid rain corrosion;
- › After driving on the seacoast road;
- › After driving on the road covered with snow melting agent;
- › When smoke dust, bird dropping, leaf, metal particle or insect are attached to the paint surface;
- › When dust or clod accumulates on the car surface.




● Washing of car body

Remove the dirt with wet sponge and a lot of water and then thoroughly clean the car with clean and warm (not hot) water mixed with neutral soap, detergent, vehicle dedicated or multi-purpose washing liquid.

Wipe and dry the car with wet animal fur to avoid water spot.

Make sure to keep the drainage hole at bottom edge under the car door.

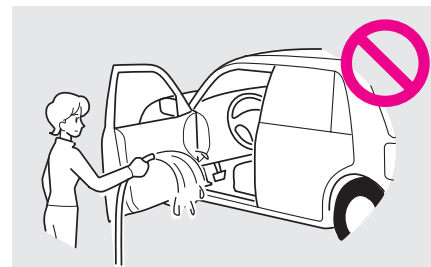

● Washing of inner part of car

Never flush dust, sand grain or other foreign matters in the passenger room with water pipe and the correct method is to regularly clean the decorating parts, plastic parts and dusts on the seats with dust collector or soft brush. Scrub the surface of vinyl plastics and leather by using the clean soft cloth with alkalescent suds and then wipe to dry with dry soft cloth.

Read the instruction provided by the manufacturer before using any fiber protective agent. Some fiber protective agents will leave colored spot or fade the seat since they contain chemical agent.

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

★ **CAUTION:**

- 1) Do not use powerful household soap, chemical detergent, gasoline or other dilution solvents.
- 2) To avoid damage to the external lamp shade, never use chemical solvents or aggressive cleaning agents to clean it.
- 3) Avoid using flannelet or coarse cloth similar to washed canvas, for example, washing gloves. Be careful when removing bulk or other foreign matters to prevent paint from being scratched or damaged.
- 4) Do not wash your car under direct sunshine or when the car body is hot to avoid water spot on car surface.
- 5) Bringing water or other liquids into contact with the interior electrical components is forbidden, as this may damage the electrical components.

● **Waxing**

Wax regularly to protect the paint and keep the appearance of the new car. After waxing, it is suggested to polishing to remove accumulated wax and avoid climate speckles.

Wax the car only after thoroughly cleaning it and conform to the instruction provided along with wax.

Do not use wax contains abradant because such wax that contains abrasive material, cutting mixture or detergent may damage the car paint.

Use ground mixture or powerful polishing agent on base coat/finish paint will shade the paint or leave scratch.

● **Removing of contamination spot**

Remove asphalt, oil spot, industrial dust, insect dead body or tree branch from the paint surface as soon as possible to avoid long-term damage or contamination spot.

● **Washing of lower part of car**

When driving in the area where the road is covered with salt, lower part of the car shall be washed regularly in order to prevent the lower part and suspension device of the car from being corroded by dirt and salinity. Make sure to check the lower part sealing condition in winter and at the turn of winter and spring and perform maintenance if necessary.

- **Glass cleaning**

Remove the thin film smoke dust on glass surface with the glass cleaner. After the car is parked under the burning sun, the glass surface will be covered with one layer of thin film and it can be easily removed by using the glass cleaner and the soft cloth.

When cleaning inner side of car window, do not use the tool with sharp edge or the cleaning agent contains abrasant or chloride. These objects may damage the electric terminal, radio antenna or rear window defroster.

- **Cleaning of aluminium alloy wheels**

Scrub the wheels regularly. Especially in the area where road salt is applied in winter. The salt will fade the wheels if it is not removed.

- **Chromed part**

Scrub all chromed components and parts with the chromium polishing agent without any abrasive material to keep brightness of those parts.

- **Plastic parts**

Plastic parts can be cleaned with alkalescent soap solution. If the dirt cannot be removed easily, it can be removed with plastic cleaner instead of any organic solvent.

- **Seat belt**

Wipe the seat belt with the sponge mixed with netral scrubbing solution. Do not clean the seat belt until it is dried out and do not let the seat belt back in the retractor. Do not use bleaching agent, stripping agent or chemical solvent because such agent will reduce the strength of the seat belt.

Regular maintenance

Regular maintenance items shall be performed within the regulated interval and through maintenance, good performance and status of engine, exhaust control system and mechanical system of your new car will be guaranteed. Have this done at the special service station of Great Wall Motors.

However, after the vehicle is driven in bad conditions, extra or more frequent maintenance is required. You are obliged to perform the mentioned maintenance regularly.

● **Mandatory running-in maintenance in initial stage**

Mandatory running-in maintenance in initial stage is one of the most important maintenance periods, so that it plays an extremely important role in guaranteeing the optimal status of your new car.

● **Where to perform regular maintenance and overhaul**


When maintenance is required or when your car is faulted, have your car checked and adjusted at the special service station of Great Wall Motors.

All maintenance technicians of Great Wall Motors are well-trained professionals. Acquire the latest maintenance information through the technical manual, maintenance instruction and the training courses offered at the maintenance service center. They have obtained the qualification to repair Great Wall vehicles before repairing your car.

You can totally believe that the special service station of Great Wall Motors can satisfy the maintenance requirements in both reliability and economy aspects with its best service.

en.carobook.com

Replacement method of remote key battery

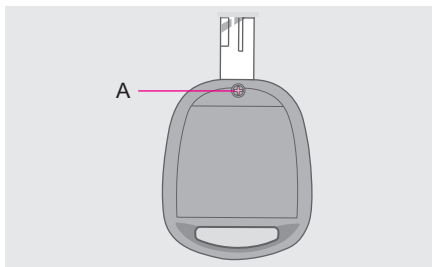

● Battery replacement method of remote key

Screw off the fastening screw A at the back of key handle with a screwdriver.

Open the key shell with a flat head screwdriver with the adhesive tape winding at the tip;

Take the micro module out of the key shell;


Open and remove the battery cover;

Replace the battery and check if the key can work normally.

★**CAUTION:** Pay attention to the following when you replace the remote key battery.

- To replace the battery, do not lose the micro parts in the key.
- The positive electrode (+) and negative electrode (-) must be installed correctly.
- Do not bend the electrode in the battery and the micro modules shall be free from foreign matters or oil.
- The used battery must be treated according to local laws. Do not litter it to protect the environment.

★**WARNING:** Avoid the child from swallowing the battery and key parts. If so, serious injury may occur. Please visit the doctor immediately.

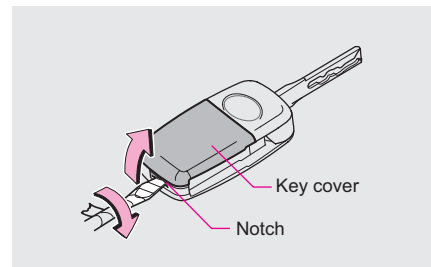

1. Remove the key cover.

Insert a flat-head screwdriver into the notch. Turn it to open the key cover.

★**CAUTION:** Be sure to wrap the front tip of the flat-head screwdriver with cloth to avoid damage to the key.

Contents

Warning

Operation

Driving

Interior
Devices


Safety

Emergency

Maintenance


Technical data

Index

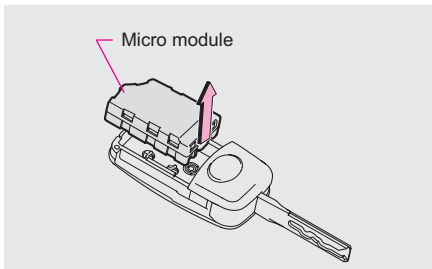


2. Remove the micro module.

Dig open the notch with your nail and take out the micro module from the main body.

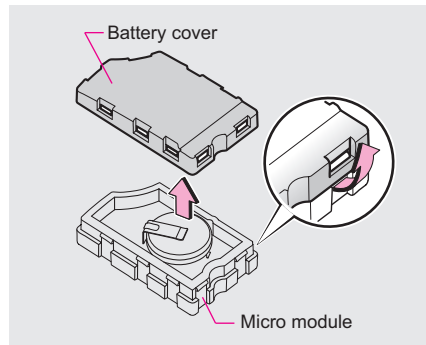


3. Remove the battery cover of the micro module.

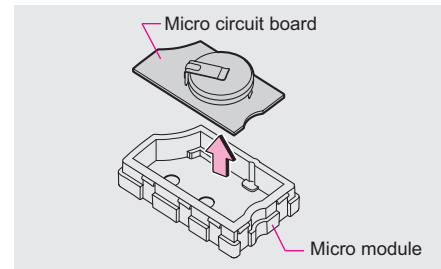

4. Take out the micro circuit board.

en.carobook.com

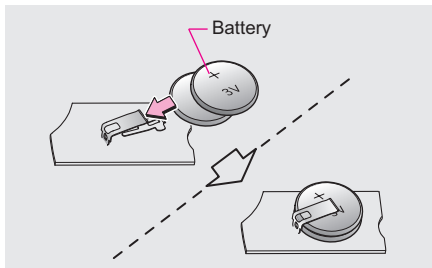

5. Replace the battery.

Take out the used battery, and insert a new battery with the positive (+) pole upward.

6. Install the micro circuit board, and fasten down the battery cover.

7. Install the micro module and the key cover.

Install the micro module back into the main body, and install the key cover.

8. Conduct operation confirmation.

Press any remote control switch to confirm that the LED lamp of the main body is on.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency


Maintenance

Technical data

Index


Replacement method of wiper

■ Replacement method of front wiper

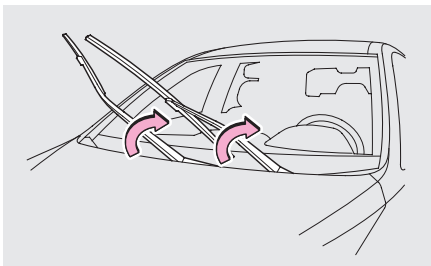

1. Lift the wiper arm from the window shield.

★**WARNING:** If the wiper blade is frozen on the window shield. Do not use the wiper until the ice melts and the wiper blade can move freely or the engine damage may result.

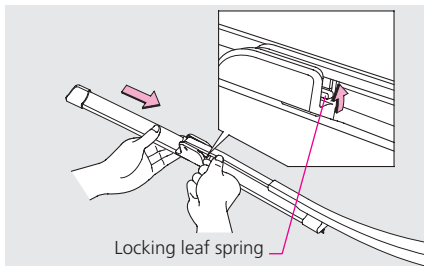


2. Remove the blade assembly from the wiper arm.

- › Press the locking leaf spring;
- › Slide the blade assembly to the locking leaf spring until it separates from the wiper arm.

★**CAUTION:** Do not place the wiper arm directly on the window shield, or the glass damage may result.


★**CAUTION:** If the blade of front wiper is damaged, place the blade assembly directly.

■ Replacement method of rear wiper

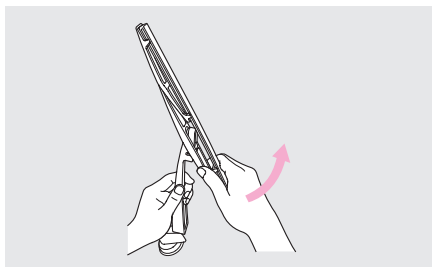


1. Lift the wiper arm from the window shield.
2. Rotate the blade assembly upwards and remove it from the wiper arm.

★ **CAUTION:** Do not place the wiper arm directly on the window shield or the glass damage may result.

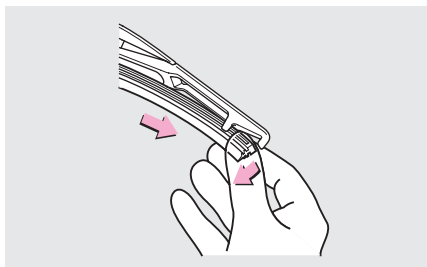

3. Pull the wiper blade downward out from the thrust point at the end of wiper arm. Pull the wiper blade further to separate them.

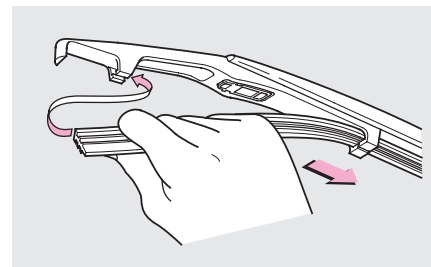

4. Slide and insert a new wiper blade through the U-shaped hook of wiper arm.
5. Insert the retainer into the blade groove of wiper.


★ **CAUTION:** If there is no retainer for the new wiper blade, use the retainer in the old wiper.

en.carobook.com

Fuses


If any electrical component does not work, a fuse may have been blown. If this happens, it is recommended to check as follows, and if necessary, replace the fuse:

1. Turn off all electrical components.
2. Turn the ignition switch to the LOCK mode, and apply the parking brake.
3. The fuses are located at the following location:

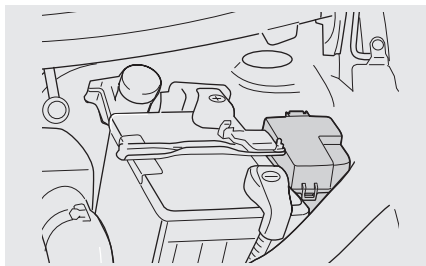

› Located in the engine compartment, near to battery.


Press and hold the pawl, and then pull up the fuse box cover at the same time to open the fuse box.

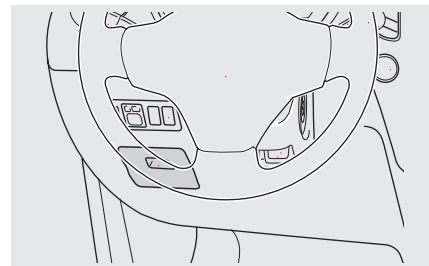

› Located in the instrument panel, near the steering wheel.

Remove the cover, and you can see it.


en:carbook.com

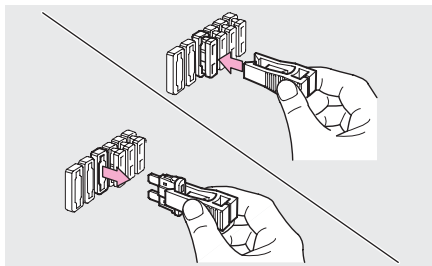

4. Use the fuse clip supplied in the vehicle to remove each fuse for detailed examination.

★ **CAUTION:**

- The fuse clip is located in the fuse box within the engine compartment.
- A label is attached to the inside of the cover of the fuse box in the engine compartment and the fuse box in the instrument panel. With this label, you can determine which fuses control the electric components which stop working, and then check whether these fuses are blown.
- Before confirming that the blown fuses are the cause of a failure, you should also check all fuses and replace any blown fuse.

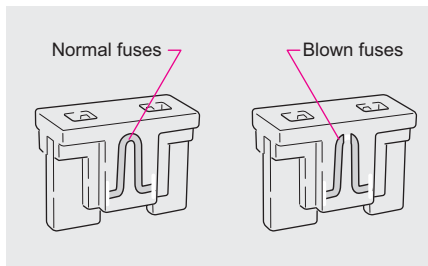

5. Check the wire in the fuse; if the wire has been burned out, it should be replaced with a spare fuse of similar amperage rating.


★ **WARNING:**

For a blown fuse, do not attempt to repair it or replace it with a fuse of inconsistent color or amperage rating, otherwise a fire may occur due to cable overload.

6. Check whether the electrical components are back to normal work.

★ **CAUTION:**

If the spare fuse of the same amperage burns out within a short period or the electrical components do not resume normal operation, there may be a severe electrical fault somewhere within your vehicle. At this juncture, please contact a Great Wall Motor service provider for assistance in a timely manner.

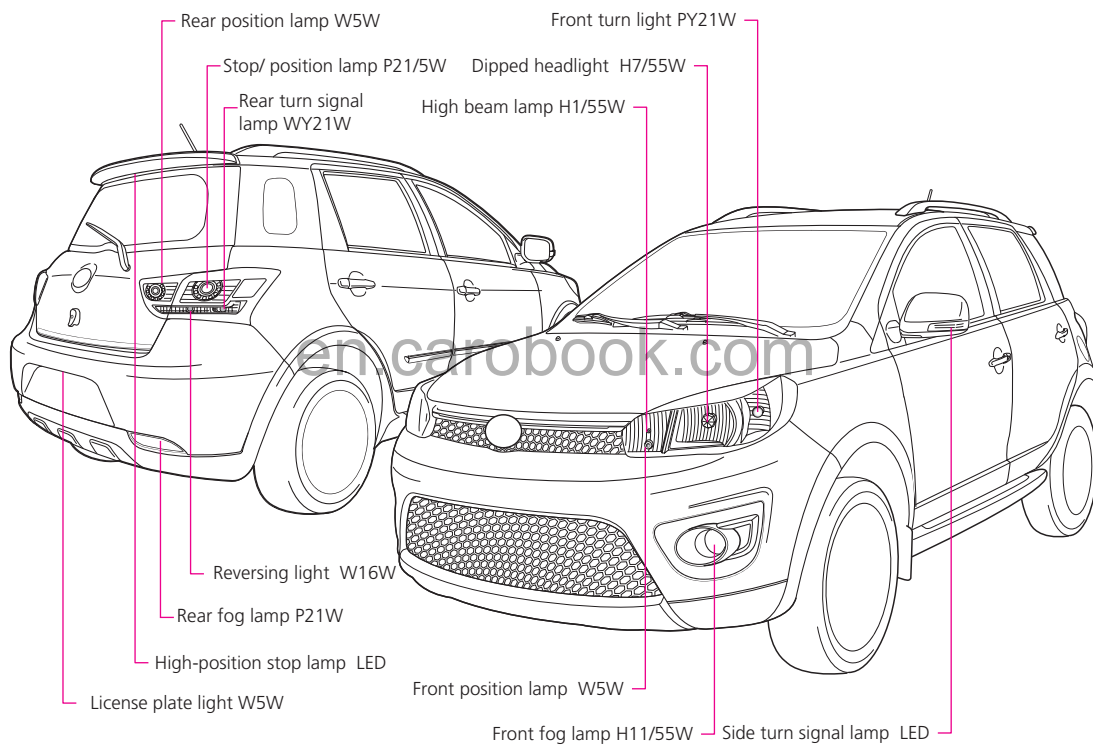

■ Maintenance and replacement method of lamp

The front combination lamps on a new vehicle have been calibrated at the factory. If you carry heavy items in the luggage area frequently, the front combination lamps may need to be re-calibrated. For the calibration of the front combination lamps, go to a Great Wall Motors service center.

Operate the lamp switch to check if all lamps can work normally. Failure to illuminate the lamp generally results from fuse burnout or bulb failure. Check the fuse. If the fuse does not burn out, check the bulb.

If the fuse and bulb are in good condition, drive your vehicle to the special service station of Great Wall Motors for overhaul.

● Maintenance of device, instrument and indicator lamp

Run the engine to check if all devices, instruments and indicator lamps can work normally.

In case of any problem, drive your vehicle to special service station of Great Wall Motors for overhaul.

● Bulb replacement

Generally, other automobile parts shall be dismantled to replace the bulb. Especially for the bulb which can be contacted from the engine compartment. Therefore, such work requires professional skills.

General criteria

1. Before bulb replacement, make sure that the lamp is turned off and check if the relevant contact part is oxidized;
2. Replace the burnout bulb with a new one with the same type and power;
3. After the headlight is replaced, for sake of safety, drive to the special service station of Great Wall Motors for lamp adjustment.

★**WARNING: Maloperation and replacement or maintenance of electrical device without considering the electrical characteristic of device may cause abnormal function and fire disaster; Remember to cut off the negative wire of battery before bulb replacement.**

- It is suggested to replace the bulb at the special service station of Great Wall Motors. The direction and normal work if exterior lamps is an important condition for safe driving and avoidance of legal punishment.
- The gas in halogen bulb has pressure. When such bulb breaks, the glass fragments may splash.
- When you carry the halogen bulb, only touch the metal part of bulb body. If you touch the transparent glass with your fingers, the skin oil stain left on the glass will evaporate when the bulb becomes hot and the vapor will condense on the emitter, thus making its surface dark and affecting its service life. In case of touching by accident, wipe the glass with alcohol-soaked cloth and dry it in the air.

Contents

Warning

Operation

Driving

Interior
Devices

Safety


Emergency

Maintenance

Technical data

Index


- A thin layer of aqueous vapor sometimes covers in the inner surface of front combination headlight. This is normal phenomenon under low temperature and humid air. After the headlight illuminates, such phenomenon disappears gradually. If there are large water drop and water in the lamp, contact the special service station of Great Wall Motors for checking.

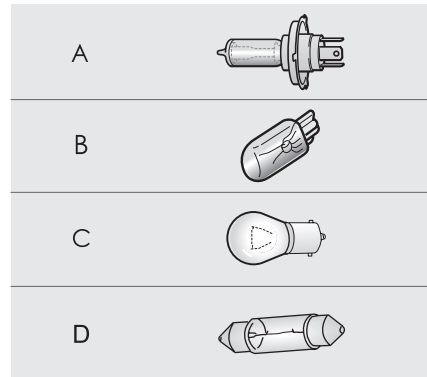

● Bulb type


Different types of bulbs installed on the vehicle:

- A. halogen lamp: To remove it, release the fixed spring at the lamp seat.
- B. All-glass bulb: pull it out to take it out and push it to install such bulb.
- C. bayonet-type bulb: remove it from the bulb seat, press the bulb and rotate it anticlockwise and then take it out. Operate it in reverse sequence for installation.
- D. two-burner lamp: Pull it out to remove and push it to install it.

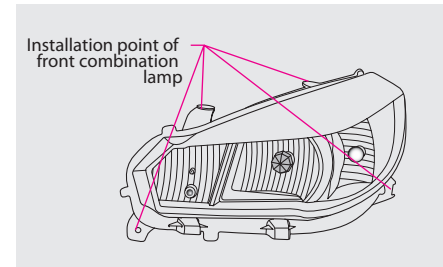


● Disassembly and assembly of front combination lamp

★ **CAUTION:** Dismount the bumper before you dismantle the front headlight. *Vise versa, install the front bumper after the front combination lamp is installed.*

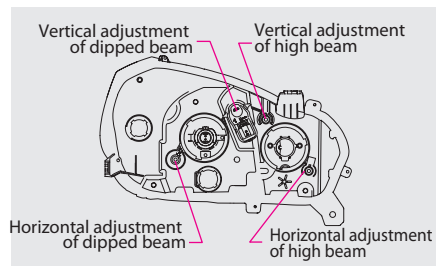

● Adjustment of front combination headlight


★ **CAUTION:** Adjust the light at the special service station of Great Wall Motors.

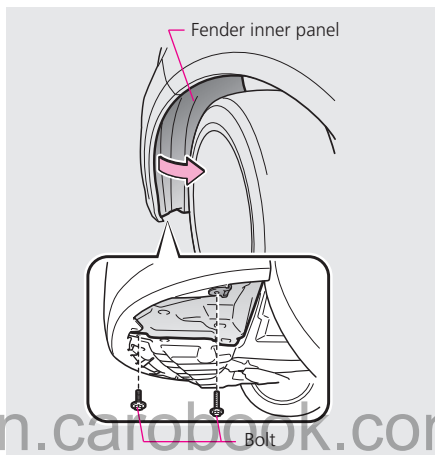

● Dismounting method of front fog lamp


1. Opening the fender inner plate after turning the steering wheel gully to right (turn to left at the passenger seat.)

Dismount two bolts and open the fender inner plate.

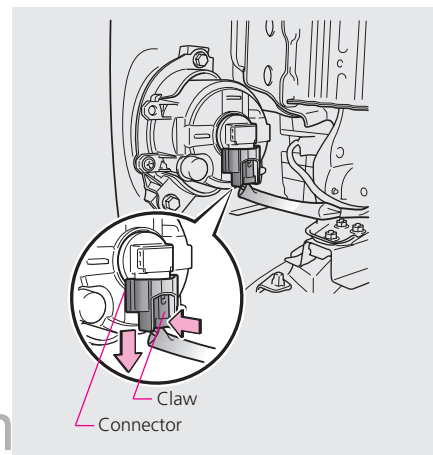


2. Dismounting the connector.

Press the claw and pull the connector to remove the bulb.

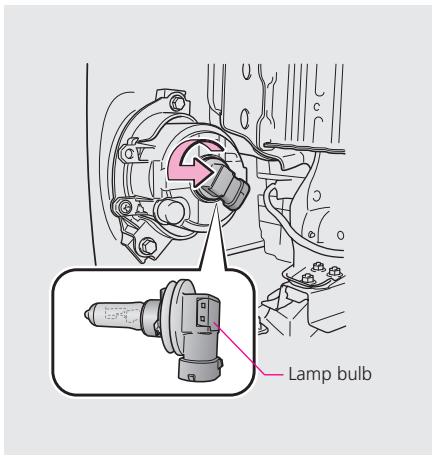

3. Dismounting the bulb.


Rotate the bulb in the arrow direction to remove it.

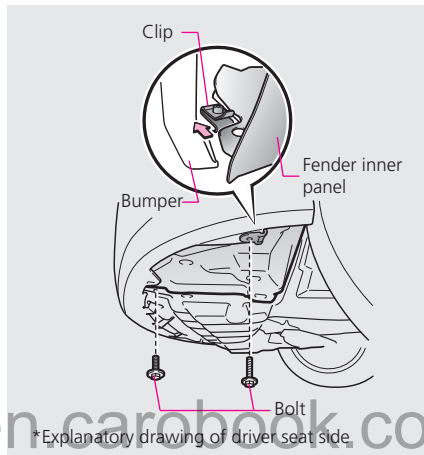

4. Installing the bulb and connector in the reverse sequence of dismounting.

Insert the fender inner plate into the clamp fixed in the bumper and tighten the bolts up.

★**CAUTION:** Confirm that the fender inner plate is fixed securely after operation.

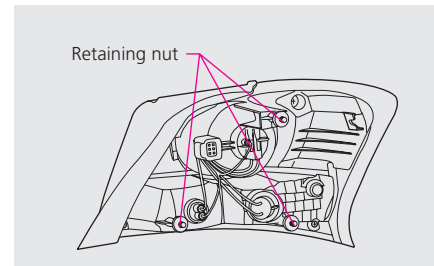

● Dismounting of rear combination lamp


Dismount the maintenance shield of rear combination lamp;

Screw off the three fastening nuts from the shield, remove the rear combination lamp and cut off the harness;

Remove the bulb of rear combination lamp;

- › Rotate anticlockwise to remove the brake lamp seat and then rotate anticlockwise to remove the bulb.
- › The method to remove the steering lamp and back light is the same with the procedure to remove the brake lamp bulb.

Install the rear combination lamp in the reserve sequence.

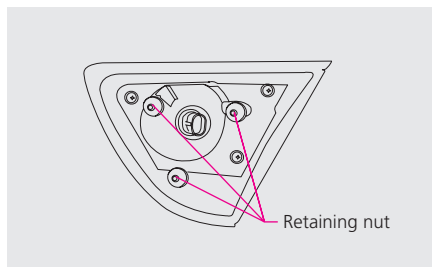

● Dismounting of rear position lamp

1. Dismount the shield of trunk lid;
2. Screw off three fastening nuts and cut off the harness connector and then remove the rear position lamp;
3. Rotate anticlockwise to remove the seat of rear position lamp and take the bulb out;
4. Install the rear position lamp in reverse sequence.

● Replacement of license plate lamp bulb

Rotate the bulb seat, remove it and pull out the bulb from the bulb seat;

Operate in reverse sequence and re-install the whole license plate lamp.

● Replacement of high position brake lamp

Use LED instead of bulb as the high position brake lamp.

For maintenance and replacement, contact the special service station of Great Wall Motors.

● Replacement of reading lamp bulb

● Reading lamp (I): C10W

● Reading lamp (II):

- › All-glass bulb: W5W
- › Two-burner bulb: C5W

● Reading lamp (with sunroof switch)▲:

- › All-glass bulb: W5W
- › Two-burner bulb: C10W

1. Remove the lamp lens with a screw-driver;
2. Release the clip at the side to replace the bulb, install a new bulb and ensure that it is appropriately fixed with the same clips;
3. Install the lamp lens again.

★**CAUTION:** Cover the head of screw-driver with cloth to prevent the lamp shade from scratch.

● Replacement of lamp bulb at trunk

● Lamp at trunk: C10W

1. Remove the lamp lens with a screwdriver;
2. Release the clip at the side to replace the bulb, install a new bulb and ensure that it is appropriately fixed with the same clips;
3. Install the lamp lens again.

★**CAUTION:** *Cover the head of screwdriver with cloth to prevent the lamp shade from scratch.*

● Other bulbs

If the light bulbs in the following parts are damaged, please head to a Great Wall Motors authorized service center to replace the bulbs.

- › Daytime running lamp ▲
- › Rear fog lamp
- › Side turn Indicator lamp

en.carobook.com

Maintenance of air conditioner

● Check and cleaning

If the refrigerant is insufficient, the cold air performance will decrease. Before the summer approaches, check and refill it. For the matter how to check the refrigerant, contact the special service station of Great Wall Motors.

The air conditioning system of your vehicle is a closed system and any important maintenance shall be performed by qualified technician. You can operate as follows to ensure effective work of air conditioning system.

Check the engine radiator and air conditioning condenser regularly. Remove the leaves, insects and dust from its surface. Such substances will block the air flow, thus reducing the refrigeration effect. Remove them with a low-pressure hydraulic gun or soft brush.

★**CAUTION:** *The condenser and radiator fins may bend easily. Only the a low-pressure hydraulic gun or soft brush can be used for washing.*


In the cold months, start the air conditioner once every week for at least ten minutes when the vehicle runs in constant speed and the engine temperature is normal. This is to circulate the refrigerant in the condenser.

If the refrigeration effect of air conditioner is not good as it was, drive to the special service station of Great Wall Motors for overhaul. Fill the refrigerant HFC-134a (R134a) into the system.

★**CAUTION:** *Whenever the air conditioner is overhauled, the service station shall guarantee to use refrigerant recirculation system. This system can recycle the refrigerant for reutilization. The refrigerant released in the air will pollute the environment.*

● Replacement of filter element of air conditioner

1. Place the key in “LOCK” position.

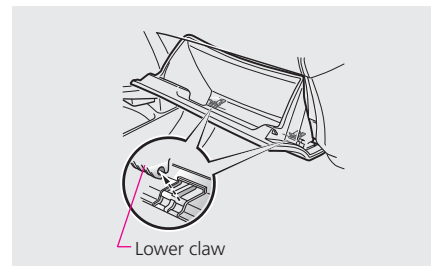

2. Remove the glove compartment.

Open the glove compartment, and pull the lower claw out of the glove compartment to remove the glove compartment.

Contents

Warning

Operation

Driving

Interior
Devices


Safety

Emergency

Maintenance


Technical data

Index

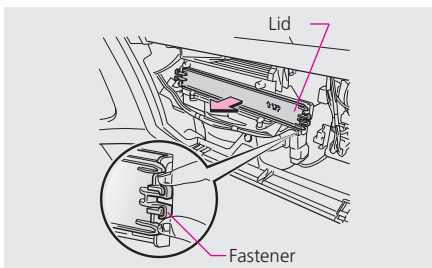


3. Dismount the lid of filter housing.

Press the fastener at right of the housing and pull it out to remove it.

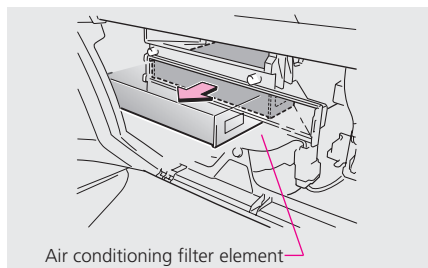

4. Take the filter out.

Pull the filter out.

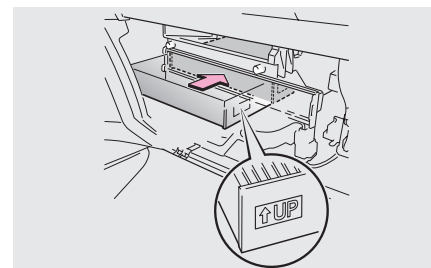

5. Install a new filter.

Insert the filter.


Confirm that the "UP" arrow of filter faces upwards during installation.

6. Install the lid of filter housing.

Align the lid fastener with the notch of filter housing to install.

Confirm that the "UP" arrow on the lid faces upwards.

en.carobook.com

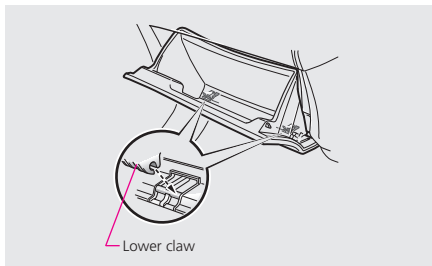

7. Install the lower glove compartment.

Install it in the reserve sequence of dismounting.

★**CAUTION:** When replacing the filter element of air conditioner, follow the matters below.

- When the air flow of air conditioner reduces greatly, the meshes of filter element are generally blocked. Replace the filter element of air conditioner.
- Install the filter element in the filter housing firmly. Do not install the filter element of air conditioner in reserved manner.
- Only use the air conditioner when the filter element of air conditioner is installed. Using the air conditioner without filter element may cause faults.
- To replace the filter element of air conditioner, turn the ignition switch at the "LOCK" position.

● Replacement of filter element of air conditioner

- › The air conditioner has filter element. To drive comfortably, it is suggested to replace the filter element regularly.
- › Replacement of filter element of air conditioner requires no tools.
- › For information about filter element of air conditioner, consult the special service station of Great Wall Motors.

● Replacement standard

Air conditioning filter element

It is suggested to clean it 6,000km after purchase of new vehicle, clean it once every 3,000km and replace it after the accumulative mileage is 15,000km.

● Daily maintenance frequency

Daily lubrication maintenance depends on the driving condition and use frequency of sunroof.

Increasing the frequency of routine maintenance is recommended when driving in a severely dusty or rainy area.

★CAUTION:

Untimely maintaining may cause leakage of sunroof. The maintenance frequency shall be adjusted properly according to the use condition; for example in the sandy area and season when the it is used frequently, the maintenance frequency shall be increased.

● Routine maintenance procedure

Open the sunroof glass fully and check the drainage grooves in the left and right guide rails for dust and other foreign matters. If any, remove the dust and other foreign matters from the guide rail with a clean soft cloth;

Open the sunroof and check the blockage during operation of glass plate. If any, drive to the special service station of Great Wall Motors for overhaul.

★CAUTION:

- *In no case, the sunroof shall be applied with silica gel (glass cement).*
- *In case of sunroof failure, drive to the special service station of Great Wall Motors for overhaul.*
- *Do not open the sunroof forcibly when driving in cold and icing area in winter and staying overnight to prevent the sunroof motor and seal of glass plate from damage. Do not open the sunroof until the inner temperature of vehicle rises and the seal of glass plate and top opening are not frozen. In addition, after car washing in winter, open the sunroof and dry the seal of glass plate with soft cloth before driving.*
- *Close the sunroof completely in the mechanical car wash. Do not wash the seal of glass plate directly with water column. Prevent the seals from deformation under high pressure water column thus causing water ingress and damage to the seal.*

-
- *In hot weather, wipe and clean the surface of glass plate with soft cloth and non-adhesive detergent in the shade.*
 - *On the extremely bumpy road and rugged road, it is better not to open the sunroof completely for a long period or damage to the parts of sunroof may result from the vibration.*
 - *In rainy season, strengthen the inspection of sand and dust on the seal of glass plate and wipe them timely to ensure good sealing performance of glass plate.*

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

Memorandum

en.carobook.com

8

Technical data

Vehicle verification	286
Vehicle specification	286
Maintenance data	288
Complete vehicle parameter	288
Fluid type and volume	292

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices


Safety

Emergency

Maintenance

Technical data


Index

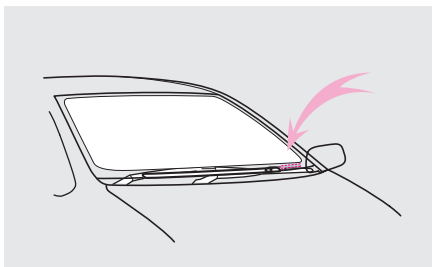

● **Vehicle identification number**


Vehicle Identification Number (VIN) is the statutory identification marking of vehicle for registration of vehicle ownership.

This number is stamped at three different positions: nameplate, instrument panel and crossbar under the passenger seat.

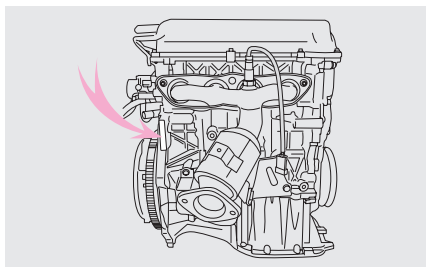

● **Engine number**

The engine number is stamped on the cylinder of engine.

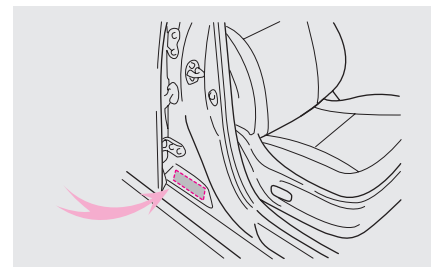

● **Manufacturer's name plate**

The nameplate of manufacturer is located at the central post at the assistant side.

The nameplate of manufacture includes brand, complete vehicle model, manufacturing date, certification number, country of origin, VIN, engine model, displacement, rated power, maximum design gross mass and number of passengers.

en.carobook.com



● Pattern and position of color code label

The color code label is located on the passenger side B-pillar of the vehicle, whose contents consist of the color, color code and plant.

- › Color — stands for the color of the vehicle.
- › Color code — stands for the brevity code which constitutes the color of the vehicle.
- › Plant — stands for the producing area of the vehicle.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

Maintenance data

Complete vehicle parameter

Vehicle Model no.			CC7151SMA05	CC7151SMA0D	CC7151SMA0J	CC7151SMA15
Engine Model no.			GW4G15	GW4G15	GW4G15	GW4G15
Transmission Model no.			CC0011A	CC0011A	4520012325	CC0011A
Dimensions	Overall Dimensions	length [mm]	3961	3961	3961	3961
		width [mm]	1728	1728	1728	1728
		height [mm]	1617	1617	1617	1617
	Wheel Tread	front [mm]	1459	1459	1459	1459
		rear [mm]	1445	1445	1445	1445
	Axle track [mm]		2383	2383	2383	2383
	Front suspension [mm]		839	839	839	839
	Rear suspension [mm]		739	739	739	739
	Approach angle [°]		22	22	22	22
	Departure angle [°]		25.5	25.5	25.5	25.5
	Minimum ground clearance [mm]		169	169	169	169
Mass	Gross mass [kg]		1481	1481	1511	1481
	Front and rear axle load [full load, kg]		764/717	764/717	780/731	764/717
	Curb mass [kg]		1106	1106	1136	1106
Performance	Max. grade [%]		33.4	33.4	33.4	33.4
	Top speed [km/h]		170	170	170	170
	Fuel consumption [L/100 km]		7.2	7.2	6.84	7.2
	Emissions levels		Euro IV	Euro IV	Euro V	Euro IV
	Permitted no. of passengers		5	5	5	5

★CAUTION: The above parameters may be different from your vehicle based on the vehicle model, please refer to the vehicle formal document.

Vehicle Model no.			CC7151SMA1H
Engine Model no.			GW4G15
Transmission Model no.			4520012325
Dimensions	Overall Dimensions	length [mm]	3961
		width [mm]	1728
		height [mm]	1617
	Wheel Tread	front [mm]	1459
		rear [mm]	1445
	Axle track [mm]		2383
	Front suspension [mm]		839
	Rear suspension [mm]		739
	Approach angle [°]		22
	Departure angle [°]		25.5
Minimum ground clearance [mm]		169	
Mass	Gross mass [kg]		1511
	Front and rear axle load [full load, kg]		780/731
	Curb mass [kg]		1136
Performance	Max. grade [%]		33.4
	Top speed [km/h]		172
	Fuel consumption [L/100 km]		7
	Emissions levels		Euro IV
	Permitted no. of passengers		5

★ **CAUTION:** The above parameters may be different from your vehicle based on the vehicle model, please refer to the vehicle formal document.

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

● Engine

Model	GW4G15	
Type	In-line 4 cylinders, 4 stroke, gasoline	
Bore x stroke[mm]	75×84.7	
Displacement [mL]	1497	
Contraction ratio	10.5:1	
Maximum power [kw]	2WD	70.1
	4WD	71.1

● Transmission

Type	Model	Gear ratio
MT(2WD)	CC0011A	I: 3.545, II: 1.905, III: 1.310, IV: 0.970, V: 0.816, R: 3.250
MT(4WD)	001T1A-02	I: 3.545, II: 1.905, III: 1.310, IV: 0.970, V: 0.816, R: 3.250
5AMT	01AM	I: 3.545, II: 1.905, III: 1.310, IV: 0.970, V: 0.816, R: 3.250
6AMT	45200012325	I: 3.308, II: 1.913, III: 1.258, IV: 0.943, V: 0.763, VI: 0.643 R: 3.231

● Standard value of spot checking

Braking pedal	Free travel (mm)	8~10
Clutch pedal	Free travel (mm)	5~15
Parking brake	Travel (gear)	6~9

● Tire specification

Tire type	Tire specification	Air pressure when tire cooling [kPa]	
		Front wheel	Rear wheel
Standard	205/60R16	230±10	230±10
	195/55R16	220±10	220±10
Spare tire	T125/90R16 98M	420±10	420±10

★ **WARNING:** Do not install the tire which does not conform to the installed tire. For each installed tire, the setting values of wheel offset and steering pinion are different. In case the tire which is not consistent with the installed tire is installed, the vehicle performance (driving stability of vehicle) cannot be brought into full play and accidents may occur. In addition, serious influence on the parts may cause faults.

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

■ Fluid type and volume

● Recommended engine oil.

The engine oil is important to ensure the performance and service life of engine. For your vehicle, it is sincerely recommended to replace the genuine engine oil of original plant at the special service station of Great Wall Motors.

Refer to the table below to select appropriate API standard oil products (quality grade + viscosity grade), for example, you can select SL 10W-40 in area with temperature above -25°C. If no recommended oil product is in your region, refer to the viscosity grade of oil products to select oil products with higher quality.

Ambient temperature	Above -25°C			Above -30°C		Lower temperature	
Quality grade	SL	SM	SN	SM	SN	SM	SN
	Recommended	Higher quality grade		Recommended	Higher quality grade	Recommended	Higher quality grade
	Low  high			Low  high		Low  high	
Viscosity grade	10W-40			5W-30		0W-30	
Volume [L] (reference value)	3.2±0.1 (only replace the engine oil)			3.5±0.1(replace the engine oil and engine oil filter)			

If you select the oil products which meet requirements of ACEA standards, it is suggested to use A3/B4 5W-40 oil products in region with ambient temperature above -30°C. It is suggested to use A3/B4 0W-40 oil product when the temperature in your region is lower.

● Type and volume of other fluid

Types		Model	Volume [L]
Transmission oil	MT/5AMT	GL-4 80W-90	1.9±0.15
		GL-4 75W-90 (alpine region)	
		GL-5 140 (high temperature region)	
	6AMT	GL-4 75W-90	1.7±0.1
Lubricating oil of transfer case (4WD)		GL-5 80W-90	0.5±0.1
		GL-5 75W-90(alpine region)	
		GL-5 140-90 (high temperature region)	
Lubricating oil of main reducer for rear axle (4WD)		GL-5 80W-90	0.7±0.1
		GL-5 75W-90 (alpine region)	
		GL-5 140 (high temperature region)	
Brake/clutch fluid	MT/6AMT	DOT4 synthetic brake fluid	0.66±0.02
	AMT		0.61±0.02
Power steering fluid		ATF III	0.65±0.03
Coolant		Ethylene glycol -35°C	5.0
		Ethylene glycol -35°C (high temperature region)	
		Ethylene glycol -45°C (alpine region)	
Windshield glass cleaner		--	2.8
Fuel oil	2WD	93# lead free gasoline or above	45
	4WD		39±2

Memorandum

en.carobook.com

Index

A

ABS+EBD system and brake assist device ▲ **214**
Adjustment of air outlet **175**
Air-conditioning system **158**
Airbag **192**
Airbag warning label **192**
Anti-corrosion measures **247**
Audio system control button ▲ **177**
Automated Manual Transmission (AMT) **105 108**

B

Beam Height Adjustment Switch ▲ **121**
Brake fluid **245**

C

Central control lock operation **66**
Central glove compartment **185**
Check of tread pattern depth and wear condition of tires **249**
Child safety lock **67**
Child seat **201**
Cigarette lighter and ash tray **190**

Curtain ▲ **187**

D

Daily inspection **248**
Description of Instruments **131**
Descriptions of Indicators and Warning Lamps **134**
Dialy maintenance **253**

E

Engine **290**
Engine compartment **242**
Engine oil **243**

F

Fluid type and volume **292**

G

Glass scrubbing solution **245**
Glove compartment at assist driver's side **185**
Glove compartment in trunk **186**

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

I

- Inspection and replacement method of fuse **270**
- Introduction to electronic immobilizer system for engine **210**
- Introduction to ESP system functions▲ **217**
- Introduction to remote-control central lock system **213**
- Introduction to the anti-theft system of complete vehicle ▲ **212**

K

- Key information **64**
- Key No. plate **64**
- Key operation **65**

L

- Lamp overview **272**

M

- Maintenance and replacement method of lamp **273**
- Maintenance data **288**
- Maintenance method of sunroof ▲ **282**
- Maintenance of air container **279**
- Manual Transmission (MT) **104**
- Method for adjusting rear view mirror **76**
- Method for adjusting seats **83**
- Method for adjusting steering wheel **75**
- Method for adjusting the height of head restraint **86**
- Method for driving AMT transmission vehicle **112 115**
- Method for driving MT transmission vehicle **111**
- Method for laying down rear seats **85**
- Method for opening tail door **68**
- Method for removing trunk cover lid **186**

- Method for using safety belt **89**
- Method for using sound input terminal AUX▲ **176**

O

- Opening and closing of engine compartment cover **78**
- Opening and closing of oil filler cap **80**
- Opening and closing of sunroof▲ **74**
- Opening and closing of the door **65**
- Opening and closing of window **72**
- Operation of auto air conditioner **166 171**
- Operation of ESP Switch▲ **130**
- Operation of Fog Light **123**
- Operation of Front Windshield Wiper **125 127**
- Operation of High-beam & Low-beam Lamps **120**
- Operation of Horn **129**
- Operation of Ignition Switch **98**
- Operation of interior locking button **66**
- Operation of manual air conditioner **158 162**
- Operation of Parking Brake Lever **119**
- Operation of Shift Lever **104**
- Operation of Turn Light **122**
- Operation of Warning Lamp Switch **128**

P

- Position and take-out method of the spare tire **221**
- Position of jack **220**
- Position of tool box **220**
- Power steering fluid **246**
- Precautions for towing **237**
- Precautions for using safety belt **92**

Q

Quantity of cooling fluid **244**

R

Radio antenna **178**

Reading lamp and lamp in trunk **183**

Recommended engine oil **292**

Regular maintenance **256**

Remote control **65**

Replacement method of remote key battery **265**

Replacement method of wiper **268**

Reverse radar ▲ **151**

Reversing video ▲ **154 155**

S

Standby power supply **189**

Starting mode of engine **99**

Stopping Engine **103**

Sun visor **182**

T

Tail door emergency opening device **70**

Tips on Driving in Cold Weather **143**

Tips on Driving in Foggy Weather **141**

Tips on Driving in Hot Weather **149**

Tips on Driving in Rainy Weather **142**

Tips on Economical Driving **150**

Tire pressure check **248**

Tire rotation (tire location exchange) **249**

Tire specification **291**

Towing method **238**

Transmission **290**

Treatment method for insufficient battery voltage **232**

Treatment method for overheat **234**

V

Vehicle specification **286**

W

When a tire bursts **226**

Windshilder wiper operation **125**

en.carobook.com

Contents

Warning

Operation

Driving

Interior
Devices

Safety

Emergency

Maintenance

Technical data

Index

Memorandum

en.carobook.com

en.carobook.com

en.carobook.com