

GEELY RADAR ZB1030BEVRSD1 2023 MANUAL

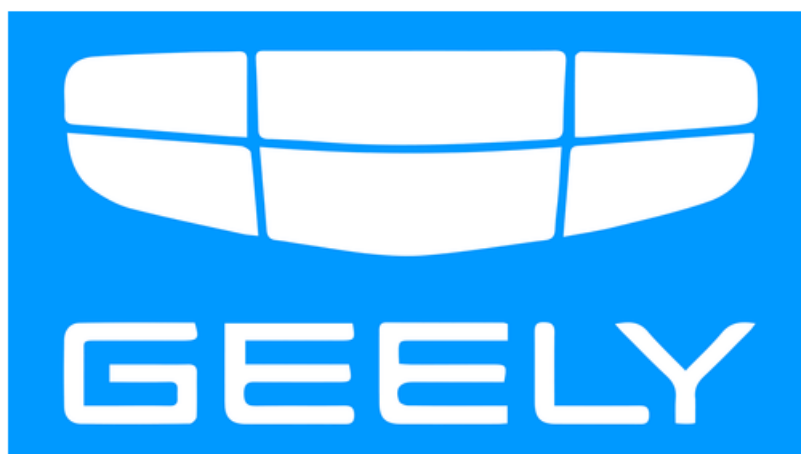


Table of Contents

[Table of Contents](#)

[Introduction and Vehicle Identification](#)

[Introduction](#)

[Environmental Protection](#)

[Vehicle Identification](#)

[Vehicle Identification Number Position](#)

[Vehicle Nameplate](#)

[Charging System](#)

[Battery Electric Power System Introduction](#)

[Charging System Introduction](#)

Electronic lock

Meter and Control

Meter and Control Devices

Instrument Cluster

Battery level gauge

Warning volume

Display Settings

Warning information display

ECU information

Light and Wiper Combination Switch

Daytime Running Light

Follow me home

Wiper Combination Switch

Rain sensor (If equipped)

Steering Wheel

Steering Wheel Adjustment

Rearview Mirror

Exterior Rearview Mirror

Exterior rearview mirror adjustment

Window

Power Window

Automatic operation

Sunroof (If Equipped)

Maintenance

Interior Lighting

Interior Equipment

Glove Box

Cup Holder

Backup Power

Cargo Compartment

Exterior Equipment

Roof Carrier

Air Conditioning System

Heating, Ventilation and Air Conditioning

Air Conditioning System

Air outlet

Air conditioning system maintenance

Long Term Storage

Seats and Protective Devices

Seats

Seat Belt

Correct sitting position

Three-Point Seat Belt

Shoulder belt height adjuster

Seat Belt Maintenance

Airbag

Side airbag

Airbag deployment

Installation of Child Seat Protective Devices

Starting and Driving

Key

Immobilizer System

Vehicle Locking and Unlocking

Door Handle

Child Safety Lock

Vehicle Start

Start operation

Economic driving

Noise And Vibration

Automatic Shifting Operation

Gear Position

Comfort mode

Economic mode

Sport Mode

Brake and Electric Auxiliary System

Parking Brake

Electronic Stability Control (ESC)

Hill Descent Control (HDC)

Hill Hold Control (HHC)

Traction Control System (TCS)

Smart Parking Assist System

Parking Sensor System

Reverse Camera System

Intelligent Driving System

Cruise Control System (Ccs)

Hazard Warning Device

Fault Happened When Driving

Reflective vest

Jump Start

Towing Your Vehicle

Towing Tips

Towing Eyelet

Technical Parameters

Tyre Replacement

Tyre pressure

Tyre pressure monitoring system

Wheel alignment and tyre balance

Changing Fuses

Engine Compartment Fuse Box

Light Bulb Replacement

Bulb Specifications

Handling in Emergency

Care and Maintenance

Repair and Maintenance

Maintenance Record

Engine Compartment

Engine Hood

Cooling System

Brake System

Brake Pedal Travel

Brake Fluid

Steering System

Electric Power Steering System (EPS)

External Lights

Battery

Vehicle Storage

Washing Liquid and Wiper Blade

Vehicle Cleaning and Maintenance

External Cleaning

Internal Cleaning

Technical Data

Main Dimensions

Wheels And Tyres

Fluid

Other ManualsLib Projects

FOREWORD

Dear owners:

Thank you for your trust in GEELY brand and choosing a GEELY Automobile. We are committed to enhancing your work and life with our high-quality products and services.

Before your initial use of the vehicle, we recommend reading and adhering to the instructions outlined in this manual. It will provide valuable insights into understanding and operating your GEELY vehicle, ensuring its consistent technical performance and reliability. Your knowledge of the vehicle's functionalities will also enhance your driving experience.

In the event of any issues during usage, we encourage you to promptly contact a GEELY Automobile Service Center for diagnostics and repairs. Our service centers are dedicated to delivering top-tier maintenance and repair services. Be sure to adhere to the maintenance guidelines specified in this manual and schedule your maintenance accordingly.

This manual endeavors to provide comprehensive information about your vehicle. All content is based on the latest available data at the time of printing. However, as we continuously strive for improvement and optimization, your vehicle may have variances from the descriptions provided in this manual. Therefore, we reserve the right to make changes without prior notification. Please note that no claims or demands can be made against our company based on the data, illustrations, and descriptions in this manual. This manual is an integral part of the vehicle and should be passed on to any new owner when selling or lending the vehicle.

This manual applies to both GB and European standard models. European standard models are those equipped with charging ports that adhere to European standards, while GB standard models comply with Chinese standards.

All the information in this manual is the latest information at the time of publication. Any future updates or changes will be notified in accordance with relevant regulations.

GEELY HOLDING GROUP TRUCKS








September 2023

©GEELY HOLDING GROUP TRUCKS

Copies or reproductions of any content from this manual are strictly prohibited without written permission from GEELY HOLDING GROUP TRUCKS.

Note: The cover and pictures of this manual are for reference only.
For precise details, please refer to the actual vehicle.

Version V1 September 2023



CONTENTS

Introduction and Vehicle Identification

- 3 Introduction
- 6 Vehicle Identification
- 6 Vehicle Identification Number Position

Charging System

- 11 Battery Electric Power System Introduction
- 16 Charging System Introduction

Meter and Control

- 21 Meter and Control Devices
- 25 Instrument Cluster
- 44 Light and Wiper Combination Switch
- 49 Steering Wheel
- 52 Rearview Mirror
- 55 Window
- 57 Sunroof (If Equipped)
- 59 Interior Lighting
- 61 Interior Equipment
- 72 Exterior Equipment

Air Conditioning System

- 73 Heating, Ventilation and Air Conditioning

Seats and Protective Devices

- 83 Seats
- 88 Seat Belt
- 94 Airbag
- 101 Installation of Child Seat Protective Devices

Starting and Driving

- 111 Key
- 113 Immobilizer System
- 113 Vehicle Locking and Unlocking
- 121 Vehicle Start
- 128 Automatic Shifting Operation
- 131 Brake and Electric Auxiliary System
- 138 Smart Parking Assist System
- 142 Intelligent Driving System

Fault Happened When Driving

- 145 Hazard Warning Device
- 146 Jump Start
- 148 Towing Your Vehicle
- 152 Tyre Replacement
- 160 Changing Fuses

1

2

3

4

5

6

7

8

9

167 Light Bulb Replacement

168 Handling in Emergency

Repair and Maintenance

171 Care and Maintenance

173 Engine Compartment

175 Cooling System

177 Brake System

181 Steering System

181 External Lights

182 Battery

183 Washing Liquid and Wiper
Blade

186 Vehicle Cleaning and
Maintenance

Technical Data

189 Main Dimensions

193 Fluid

Introduction

Notes to Owners

1. This vehicle is a battery electric vehicle with features that differ from traditional fuel vehicles. Before initial use, please read the instructions in this manual carefully. Failure to do so could result in personal injury, property damage, and may lead to the loss of maintenance or warranty rights.
2. Battery electric vehicles do not need to use the engine to provide power, which is the primary distinction from traditional fuel vehicles. The vehicle uses a lithium-ion battery pack (Power battery) to store electrical energy. It is recommended to keep the power battery fully charged before driving. During vehicle running, the power battery gradually discharges. When the charge level is insufficient, the power battery must be recharged, or the vehicle will not run.
3. This vehicle features two types of batteries: a lithium-ion power battery (high-voltage) that provides power to the electric motor for driving the vehicle, and a 12V lead-acid battery located in the front cabin. The 12V battery functions similarly to lead-acid batteries in traditional fuel vehicles, supplying power to low-voltage electrical systems such as headlights, audio systems, and speakers. The 12V lead-acid battery is charged from the power battery.
4. The high-voltage power of the vehicle is about 400V. Do not touch the high-voltage components with bare hands when the high-voltage power supply is connected. The high-voltage components include: drive motor controller, distribution box, power harness device, high and low voltage charging system assembly, high-voltage main cable, fast charging plug, fast charging port, power battery, drive motor, slow charging port, slow charging plug, etc. The high-voltage cables in the vehicle are wrapped with orange-yellow corrugated tubing for easy identification.
5. The vehicle uses a charger connected to the power grid to charge the battery. In addition, as long as the accelerator pedal is released, part of the electric energy is stored in the battery through the motor generation, thus extending the driving range of the vehicle, which is called energy recovery.
6. It is strictly prohibited to simultaneously touch the positive and negative poles of the battery box with both hands.
7. Any deliberate actions, such as crushing, piercing, or burning, that may damage the battery system are strictly prohibited.
8. Do not sell, transfer, or modify the batteries. Batteries removed from scrapped vehicles should be collected and managed by Geely Automobile Service Center to prevent accidents.
9. When cleaning the vehicle, try not to flush the electrical parts in the front cabin and chassis of the vehicle with the water gun.
10. The vehicle should be parked in an environment where the ambient temperature ranges from -30°C to 55°C. Otherwise, the vehicle may not operate normally.
11. The vehicle is equipped with Electronic Stability Control (ESC), which

Introduction and Vehicle Identification

- includes Anti-lock Braking System (ABS). In case of an emergency brake, apply firm pressure to the brake pedal instead of light taps.
12. The vehicle features a creep function. When the vehicle is in a drivable state (indicated by the READY light), and the gear lever is in the D (Drive) or R (Reverse) position, releasing the brake pedal and parking brake will cause the vehicle to move slowly forward or backward.
 13. Regularly inspect tyre wear and tyre pressure according to the methods and tyre pressure requirements recommended in this manual.
 14. Use the recommended oils and fluids specified in this manual and adhere to the maintenance requirements specified in the Warranty and Maintenance Manual.
 15. The vehicle is equipped with airbags. To ensure child passenger safety, it is prohibited to use rear-facing child restraint systems on seats protected by frontal airbags (when activated).
 16. To ensure your driving safety, do not disassemble or replace vehicle parts by yourself. Some fasteners on the vehicle may have anti-loosening agents applied, and they cannot be reused after disassembly.
 17. Modifying or installing additional equipment on the vehicle without proper authorization is strictly prohibited. Geely will not assume any responsibility for direct or indirect losses resulting from unauthorized modifications or additions.
 18. Ensure that the vehicle is parked in an environment free from corrosive, explosive, or insulating gas and away from heat sources.
 19. Ensure that floor mats are correctly positioned and are of the correct size. Floor mats should not obstruct the normal operation of pedals, and they should be placed to prevent slipping, which can affect pedal movement and lead to traffic accidents.
 20. The Multimedia Manual is essential for understanding the vehicle's infotainment system and is an integral part of this manual. For specific instructions on operating the infotainment system, refer to the Multimedia Manual available in the vehicle's head unit and app.
 21. The content of this manual is based on the product information at the time of publication. In order to meet the needs of customers and comply with the requirements of regulations, the features and performance of the vehicle will be continuously optimized and improved, so there may be differences between the actual vehicle and the description in this manual.

Prompt Information

Hazard

 Indicates that ignoring this warning could lead to severe injury or death. The steps or requirements stated must be strictly followed.

Warning

 Indicates that the steps or requirements stated here must be noted and followed, otherwise the vehicle may be damaged.

Alert

 Informative statement indicating information to help you better use the vehicle.

Environmental protection

 Indicates that the event described here is related to environmental protection.

If equipped

The appearance of “If equipped” after the title or name indicates that the described configuration or feature is only available in certain vehicle models, and may not be available in this vehicle.


Illustration Information

-  Indicates the object described.
-  Indicates the direction of movement for an object.
-  Indicates the direction of rotation for an object.
-  Signifies a prohibition or restriction, indicating what should not be done or what circumstances should be avoided.

Vehicle Identification

Vehicle Identification Number


When contacting the Geely Automobile Service Center, it's essential to provide the vehicle identification number (VIN). Additionally, if your inquiry or service request involves the drive motor, you may also need to provide the drive motor code.

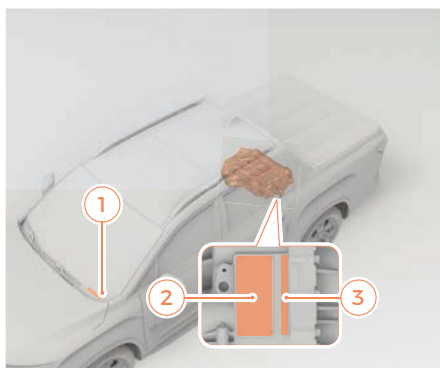

1. Vehicle Identification Number (VIN)
2. Drive motor model tag
3. Drive motor code

Vehicle Identification Number Position


Position of Drive Motor Code/Identification Number

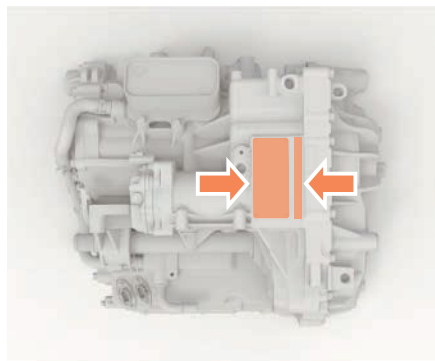

The drive motor code/identification number is located in the bottom middle of the motor and below the cargo tailgate.


Location of power battery code

Power battery (CATL) (If equipped)

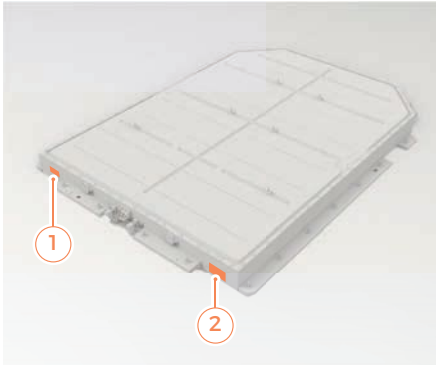

The power battery code is pasted on the front of the power battery.

Power battery (VREMT) (If equipped)

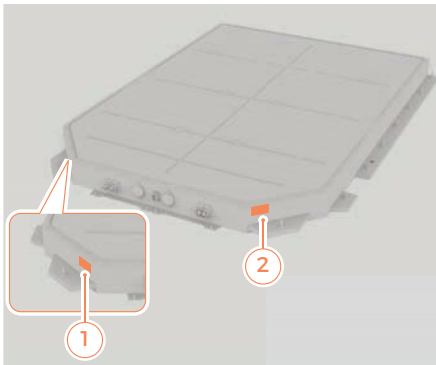


The power battery code is pasted on both sides of the rear bevels of the power battery.

1. Geely Automobile 43-digit 2D tag
2. 24-digit new GB standard code label

! When the power battery is repaired or recycled, it is necessary to provide and upload the power battery code. If the label on the power battery is damaged, please contact the Geely Automobile Service Center in time.


Power battery code:

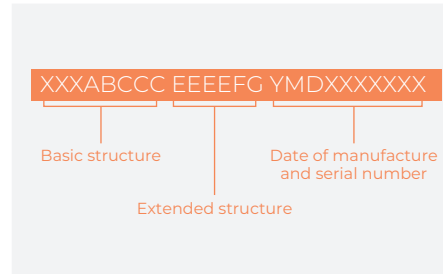

The power battery code in the 24-digit new GB standard code label is composed of 24 characters. It contains the power battery supplier code, product type, battery type, specification code, origin, production date and serial number and other information.


Geely Automobile 43-digit 2D tag contains the part number, traceability code (New GB standard code), and supplier code.

Location of vehicle identification number (VIN)

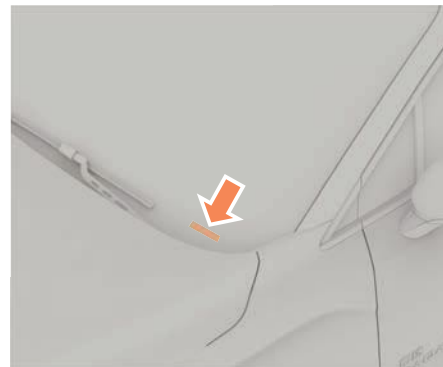

There are 4 VIN labels on the vehicle. The VIN label shown in the picture is located on the dash panel at the lower left corner of the windshield and can be seen through the windshield.

Introduction and Vehicle Identification

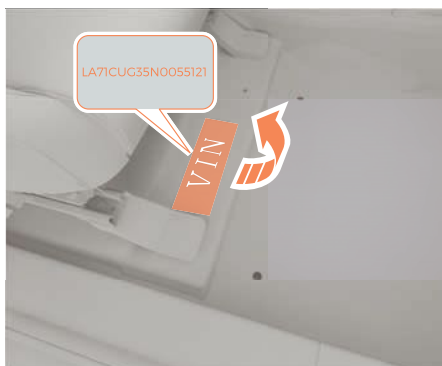

The VIN label, as shown in the picture, is located on the right front seat beam. To access it, move the right front seat to the lowest position and lift the carpet to reveal the VIN label.

The locations of the other two VIN labels are as follows:

- VCU electronic data
- On the vehicle nameplate at the lower end of the right side B-pillar panel

! When contacting the Geely Automobile Service Center, please provide the Vehicle Identification Number (VIN). If there is any damage to the identification number engraved under the front passenger seat, please contact the Geely Automobile Service Center for inspection as soon as possible.

The vehicle identification number (VIN) consists of 17 characters. It contains information about the vehicle's manufacturer, model year, body type, code and manufacturing base.


Read the VIN

The vehicle identification number (VIN) can be read through the Geely Automobile Service Center using the Geely Automobile diagnostic instrument. The specific steps are as follows:


1. Turn the start switch to OFF;
2. Connect the Geely diagnostic instrument to the OBD diagnostic interface;
3. Start the diagnostic program, start the vehicle, and click "Welcome to enter";
4. The VIN is automatically read.

! If the vehicle identification number is to be read by the above method, the data should be read by the operation of professional maintenance personnel in the Geely Automobile Service Center. Attempting this procedure without professional knowledge may result in damage to the vehicle.

VIN on the vehicle nameplate

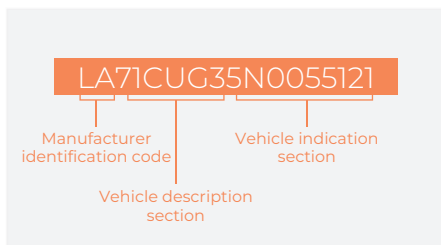

Microwave Window

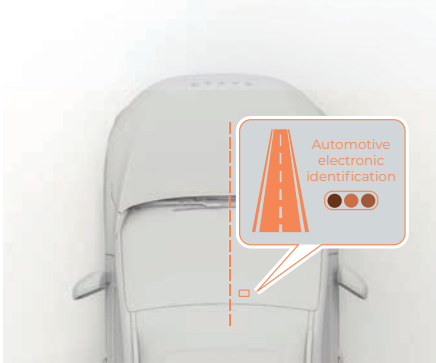

The microwave window of the vehicle is located horizontally in the center of the front windshield and vertically up.

Automobile electronic tag should be installed in the middle, slightly to the right, of the microwave window. It should not be obstructed by the interior rearview mirror mounting bracket, sensor bracket, or other objects.

The tag contains essential information about the vehicle.



Please keep the front windshield clean and dry. Do not paste film or metal and other materials on the microwave window to ensure the standardized installation of the automobile electronic tag and the effective reading of the data.

Do not block, squeeze or remove the automobile electronic tag! If the tag is damaged, please promptly contact the issuing agency for reapplication.

Vehicle Nameplate



Vehicle Nameplate is located below the right-side center pillar and contains the following information:


- Manufacturing country
- Manufacturer name
- Vehicle identification number
- Brand
- Vehicle model
- Model of drive motor
- Max power of drive motor
- Battery rated voltage
- Battery rated capacity
- Curb vehicle weight
- Gross vehicle weight
- Model year
- Payload
- Number of passengers

Introduction and Vehicle Identification

Battery Electric Power System Introduction

Figure: System Position


GB standard type

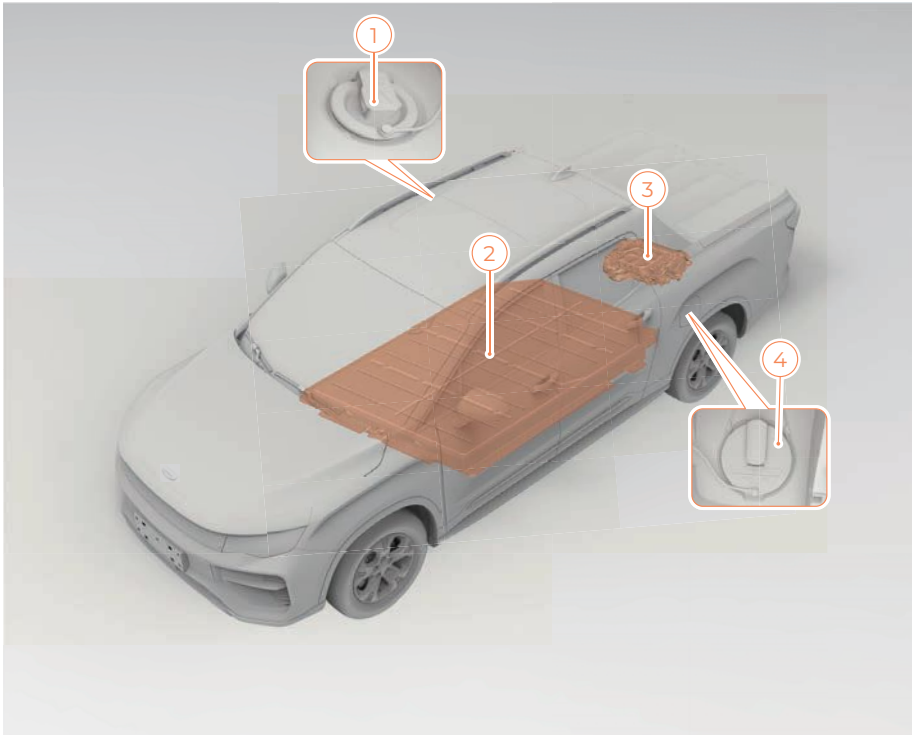

- | | |
|---------------------|---------------------|
| 1. AC charging port | 3. Drive motor |
| 2. Power battery | 4. DC charging port |

Charging System

European standard type

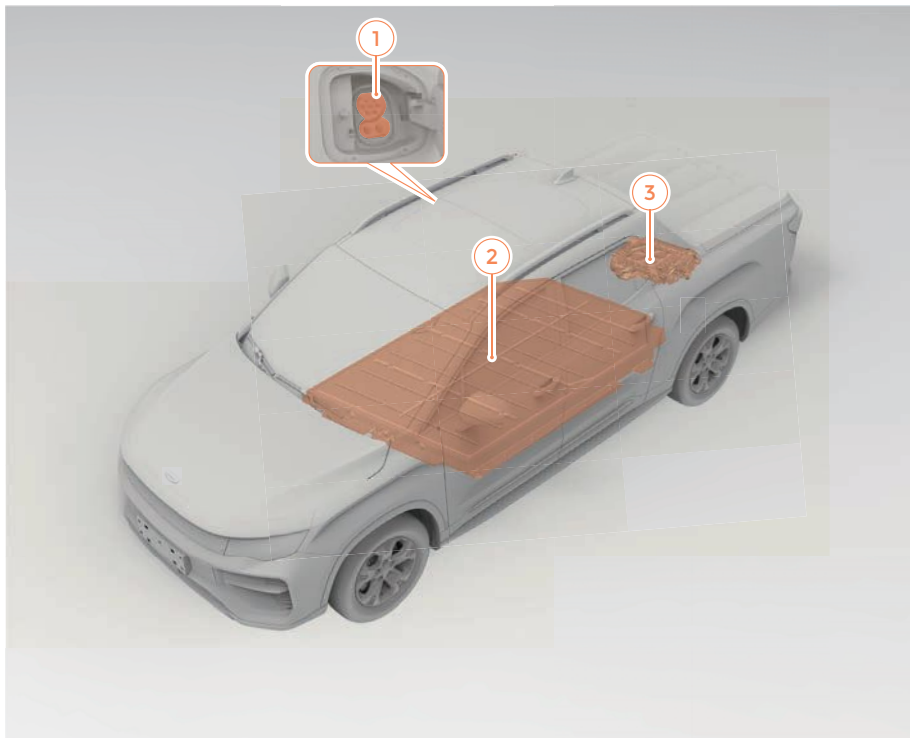

- 1. Charging port
- 2. Power battery

- 3. Drive motor

System Features

High-voltage safety

The power battery provides DC voltage of about 400V for the high-voltage electrical system, which is converted into three-phase AC power for the drive motor through the motor controller. The DC high-voltage system is distributed through the high and low-voltage charging system assembly to the heater and compressor. The DCDC (high-to-low voltage converter) is integrated within the high and low voltage charging system assembly. The following information is essential to protect vehicle occupants and first responders from high voltage electrical hazards:

- The high-voltage fuse (Inside the power battery) provides short circuit protection for the battery.
- The positive and negative high-voltage cables connected to the power battery are usually controlled by high-voltage relay. When the high-voltage power supply of the vehicle is disconnected, the relay is disconnected to prevent current from flowing out of the battery.
- To prevent serious injury or death from severe burn or electric shock, never touch, cut, or damage any orange high-voltage cables or high-voltage components.
- The positive and negative cables are insulated from the metal body. High-voltage current flows through these cables and does not pass through the metal body. Touching the metal body is safe because it is insulated from high-voltage components.

Warning message

In case of power system failure or improper user operation, the instrument cluster will automatically display warning messages. Please read and follow the instructions in these messages. If warning lights illuminate, warning messages are displayed, or there is a low-voltage battery fault, the power system may not start. In this case, attempt to restart the system. If the operational readiness indicator light does not illuminate, please contact the Geely Automobile Service Center for diagnosis and repair.


In the event of a collision, sensors detect a certain level of impact and will urgently disconnect the system and high-voltage current output to minimize the risk of electric shock. If the emergency system cutoff is activated, the vehicle cannot be restarted. To restart the vehicle, please contact the Geely Automobile Service Center for diagnosis and repair.

 The vehicle is equipped with high-voltage DC and AC systems, as well as a 12V low-voltage system. The high-voltage DC and AC equipment systems can be extremely dangerous, and in the event of a failure, they may result in severe personal injury or even fatalities.

Charging System

Battery

As one of the main power sources, the power battery can be charged repeatedly. The primary methods of charging the power battery through the external power supply are AC charging and DC charging, and the power battery can also be charged through the motor when the vehicle is braking or coasting.

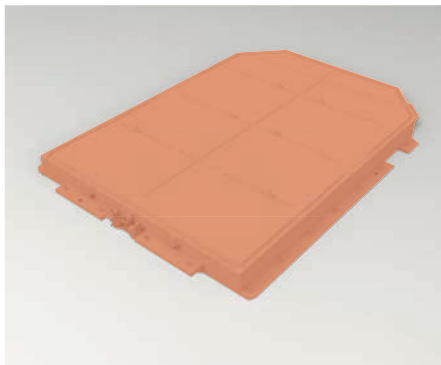

 To maintain the power battery in optimal condition, it's necessary to recharge the battery if the vehicle is stored for a period exceeding three months or if the battery charge level is too low. Failure to do so could result in overdischarge of the power battery, leading to reduced battery performance. Vehicle issues or damage caused by this could void the warranty.

- For a new vehicle with a healthy power battery, the actual driving range can vary due to factors such as driving habits (frequent acceleration and deceleration), road conditions (steep uphill roads), temperature (cold weather), and the use of electrical accessories (e.g. air conditioning).
- At low temperatures (Below 0 °C), the chemical reaction rate in the

battery is reduced, and the effective energy provided by the battery is reduced, which is a normal phenomenon.

- All electrical appliances of the vehicle are powered by the battery. At low temperature, the self-heating function of the power battery system will be activated, and the air conditioning in the passenger compartment will start heating. The energy allocated to the power system will be reduced, and the driving range will be correspondingly reduced.
- The power battery is a specialized chemical product that requires proper use and maintenance. Regular full charging and discharging operations are crucial for maintaining its performance. Additionally, due to its chemical properties, the capacity of power battery naturally decreases over time. Therefore, for vehicles that have been in use for some time, if you notice a significant difference between the battery being fully charged and the actual driving range, it is advisable to have it checked at the Geely Automobile Service Center.

Precautions

The power battery is a high-voltage energy storage device and classified as a hazardous item. Improper handling and usage by non-professionals can lead to serious consequences such as electric shock, fire, or explosion. The installation and maintenance of the power battery must be carried out by professional technicians at the Geely Automobile Service Center, and its use must strictly adhere to relevant safety regulations. Unauthorized installation, repair, or misuse is strictly prohibited.

Any battery damage or other losses resulting from improper use or usage beyond specified limits will not be covered under warranty. Please note the following points:

1. Moisture and waterproofing

The power battery contains numerous high-voltage control circuits and individual cells. Liquids entering the power battery can cause short circuits, leakage, corrosion of individual cells, electronic circuits, and connectors. Therefore, it is essential to ensure that the power battery is not submerged in any liquid, and moist air should not enter its interior.

2. Thermal insulation

Maintaining the power battery within the optimal operating temperature range significantly extends its lifespan and enhances safety. Therefore, it's essential to ensure that the surrounding area provides thermal insulation and ventilation when the vehicle is parked.

3. Anti-shock and anti-collision

The power battery is connected in series internally and installed with a management system and various sensing elements. Please be careful when driving on uneven roads to prevent the power battery from bumping.

Battery recycling process

The designated Geely Automobile Service Center is responsible for the power battery recycling, and is responsible for contacting Geely Holding Group Trucks. Geely Holding Group Trucks then notifies the power battery recycling company to carry out power battery recycling process in accordance with the law.

 Do not sell, transfer, or modify the power battery. Power batteries removed from scrapped vehicles should be collected and managed by Geely Automobile Service Centers to prevent accidents.

 If the power battery is not properly recycled, the following conditions may occur, resulting in serious injury or death:

- Illegal scrapping or discarding of power batteries will cause harm to the environment, and individuals might suffer electric shock from touching high-voltage parts.
- Improper use or modification of the power battery can lead to accidents such as electric shocks, overheating, smoke, explosions, and electrolyte leakage.

Charging System Introduction

Charging Port (GB standard type)

This vehicle has two kinds of charging ports: AC and DC. You can charge the power battery by opening the protective cover of the charging port.



It is prohibited to disassemble or modify the charging port without permission.


AC charging port




The AC charging port is located on the right rear side of the vehicle.

If the vehicle needs to be charged in AC charging mode, open the charging port cover and connect the AC charging device to the AC charging port.

Open the AC charging port

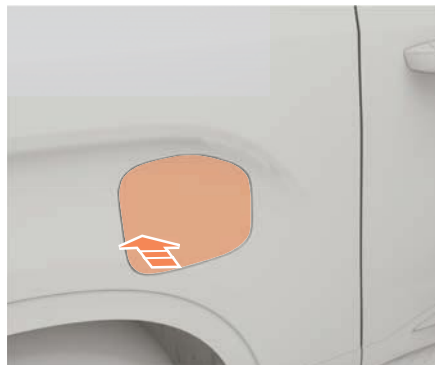

1. When the vehicle is unlocked, open the AC charging port cover by pressing on its left side.

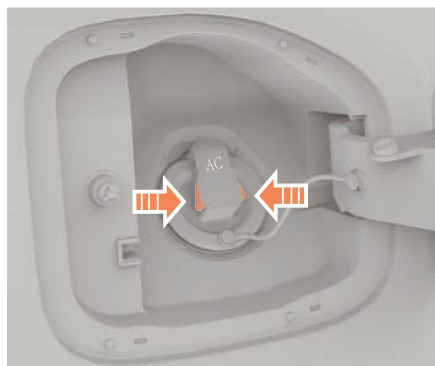

2. Press and hold the locking switch of the AC charging port protective cover and remove the AC charging port protective cover.

Electronic lock

This vehicle is equipped with an electronic lock function for AC charging, which prevents the removal of the charger while it's live and also serves as an anti-theft measure for the charger. The electronic lock is installed on the charging port and controls the extension and retraction of the cylindrical lock rod to lock and unlock the charger.

Locking

The electronic lock automatically locks when you insert the charger and meet the charging conditions.

Unlocking

There are two ways to unlock:

1. When the start switch is in the OFF position, press the unlock button on the intelligent key or the central control unlocking key to unlock.
2. When the start switch is in the ACC/ON position, only the central control unlocking key is effective for unlocking. Use the central control unlocking key to unlock.
3. In case the key unlocking is not working, you can unlock it by pulling the emergency charging port cable.

i After pressing the intelligent key unlock button, if you do not disconnect the charger and there is no further operation on the intelligent key within 30 seconds, the electronic lock will automatically relock, and charging will continue.

Emergency charging port cable



In case of emergencies during vehicle charging, such as a power failure or

mechanical failure of the electronic lock, which prevents the charger from being removed, you can manually unlock it using the emergency charging port cable. The emergency charging port cable is located on the right rear side of the rear backrest, and you can access it by folding down the seat back.

! Before closing the charging port cover, please ensure that the charging port protective cover is securely in place to prevent water or dust from entering the charging port and causing malfunctions. To prevent potential discharge and ensure safety, first unlock the vehicle, then press the button on the charger plug, remove the charger, and finally disconnect it from the power grid.


DC charging port



The DC charging port is located on the left rear side of the vehicle.

Charging System

Open the DC charging port

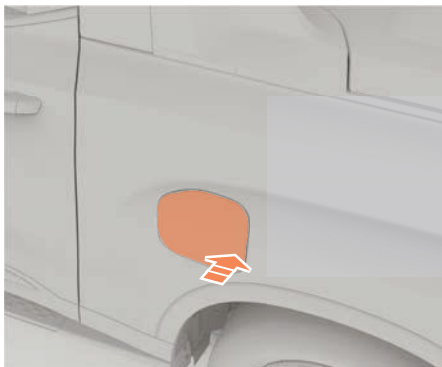

1. When the vehicle is unlocked, open the DC charging port cover by pressing on its right side.



2. Press and hold the locking switch of the DC charging port cover and remove the DC charging port cover.

Charging Port (European standard type)

This vehicle has two kinds of charging ports: AC and DC. You can charge the battery by opening the protective cover of the charging port.



It is prohibited to disassemble or modify the charging port without permission.


AC charging port



The AC charging port is located on the right rear side of the vehicle.

If the vehicle needs to be charged in AC charging mode, open the charging port cover and connect the AC charging device to the AC charging port.

Open the charging port

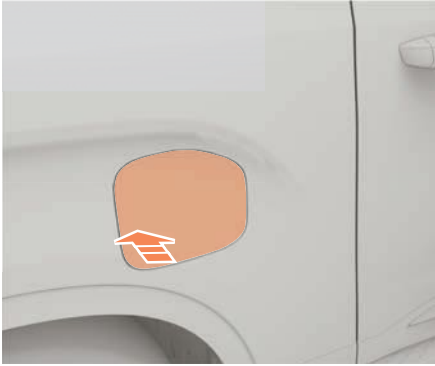

1. When the vehicle is unlocked, open the charging port cover by pressing on its left side.



2. Remove the protective cover of the charging port.

Electronic lock

This vehicle is equipped with an electronic lock function for AC charging, which prevents the removal of the charger while it's live and also serves as an anti-theft measure for the charger. The electronic lock is installed on the charging port and controls the extension and retraction of the cylindrical lock rod to lock and unlock the charger.

Locking

The electronic lock automatically locks

when you insert the charger and meet the charging conditions.

Unlocking

There are two ways to unlock:

1. When the start switch is in the OFF position, press the unlock button on the intelligent key or the central control unlocking key to unlock.
2. When the start switch is in the ACC/ON position, only the central control unlocking key is effective for unlocking. Use the central control unlocking key to unlock.
3. In case the key unlocking is not working, you can unlock it by pulling the emergency charging port cable.

2

i After pressing the intelligent key unlock button, if you do not disconnect the charger and there is no further operation on the intelligent key within 30 seconds, the electronic lock will automatically relock, and charging will continue.

Emergency charging port cable



In case of emergencies during vehicle charging, such as a power failure or mechanical failure of the electronic

Charging System

lock, which prevents the charger from being removed, you can manually unlock it using the emergency charging port cable. The emergency charging port cable is located on the right rear side of the rear backrest, and you can access it by folding down the seat back.


 Before closing the charging port cover, please ensure that the charging port protective cover is securely in place to prevent water or dust from entering the charging port and causing malfunctions. To prevent potential discharge and ensure safety, first unlock the vehicle, then press the button on the charger plug, remove the charger, and finally disconnect it from the power grid.

DC Charging port



The DC charging port is located on the right rear side of the vehicle.

Open the charging port

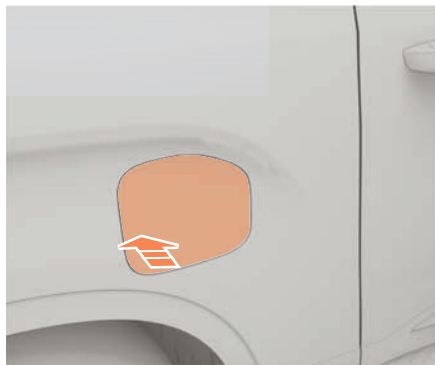


1. When the vehicle is unlocked, open the DC charging port cover by pressing on its left side.



2. Remove the protective cover of the AC and DC charging port.

Meter and Control Devices


Driver Side Overview (Type 1)

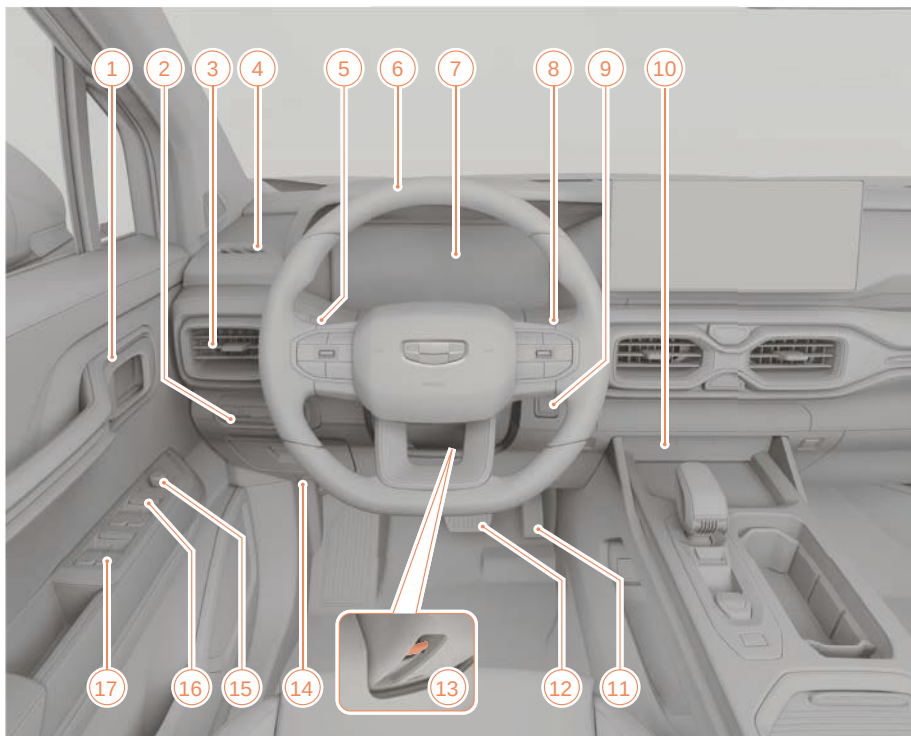

3


- | | |
|-----------------------------|--|
| 1. Inner door handle | 10. Multimedia interface |
| 2. Dashboard switch group | 11. Accelerator pedal |
| 3. Left side air outlet | 12. Brake pedal |
| 4. Left defrosting outlet | 13. Steering wheel adjusting level |
| 5. Light combination switch | 14. Front hood release handle |
| 6. Steering wheel | 15. External rearview mirror adjustment switch |
| 7. Instrument cluster | 16. Central control key |
| 8. Wiper combination switch | 17. Power window control switch |
| 9. Start switch | |

Driver Side Overview (Type 2)

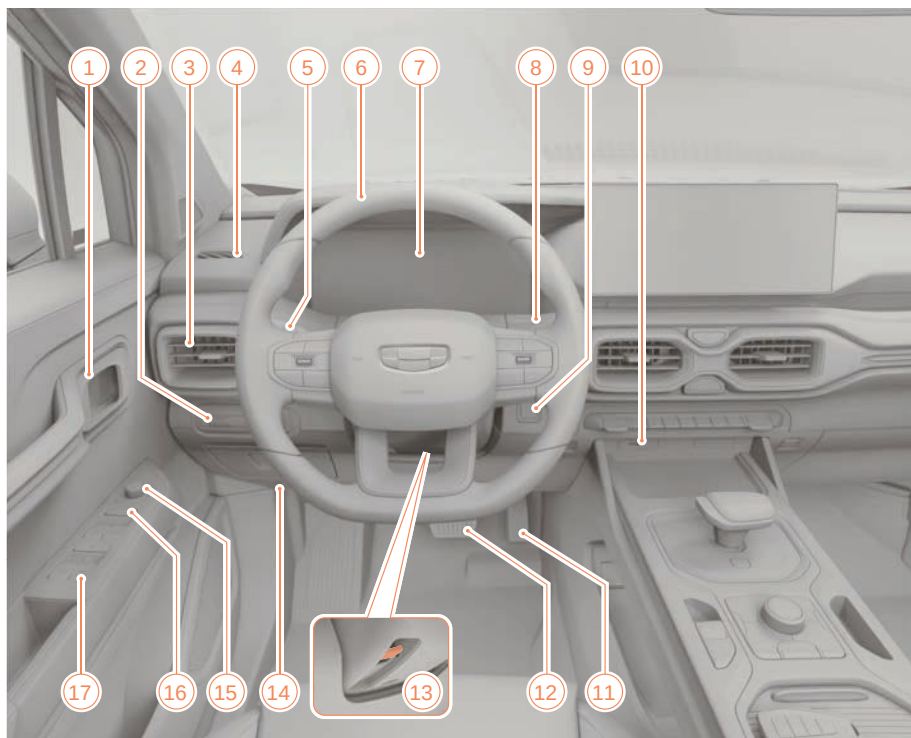

- | | |
|-----------------------------|--|
| 1. Door inner handle | 10. Multimedia interface |
| 2. Dashboard switch group | 11. Accelerator pedal |
| 3. Left side air outlet | 12. Brake pedal |
| 4. Left defrosting outlet | 13. Steering wheel adjusting level |
| 5. Light combination switch | 14. Front hood release handle |
| 6. Steering wheel | 15. External rearview mirror adjustment switch |
| 7. Instrument cluster | 16. Central control key |
| 8. Wiper combination switch | 17. Power window control switch |
| 9. Start switch | |


Passenger Side Overview (Type 1)

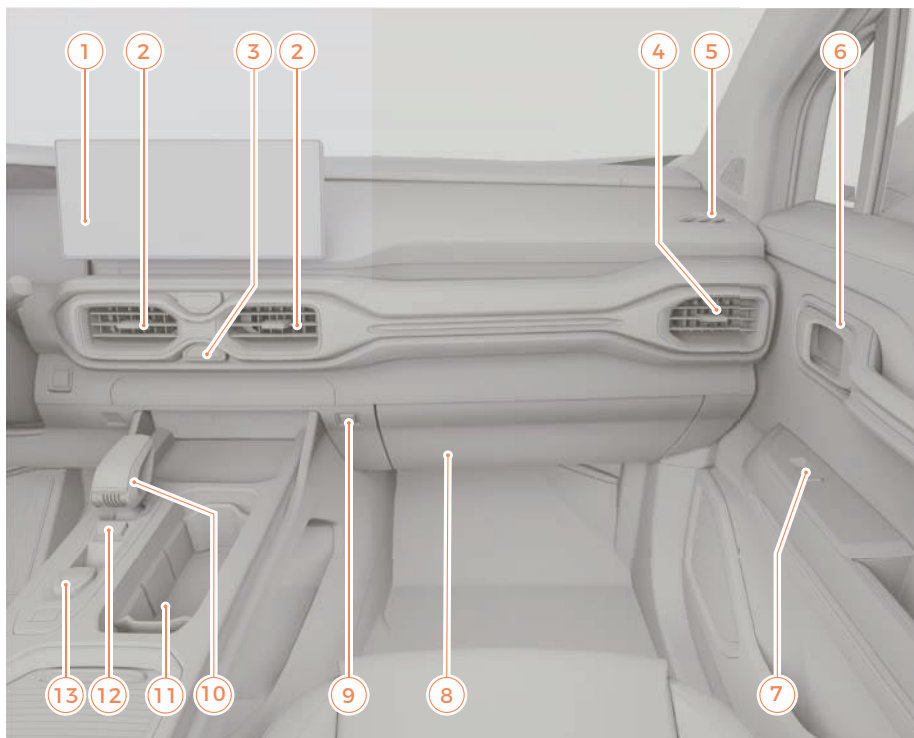

3

- | | |
|---|---|
| 1. Display screen | 8. Glove box |
| 2. Central air outlet | 9. Glove box switch |
| 3. Hazard warning light switch | 10. Electronic shift lever |
| 4. Right side air outlet | 11. Sub-dash panel cup holder |
| 5. Right defrosting air outlet | 12. Gear P button |
| 6. Door inner handle | 13. Electronic Parking Brake (EPB) switch |
| 7. Front passenger side power window control switch | |

Passenger Side Overview (Type 2)

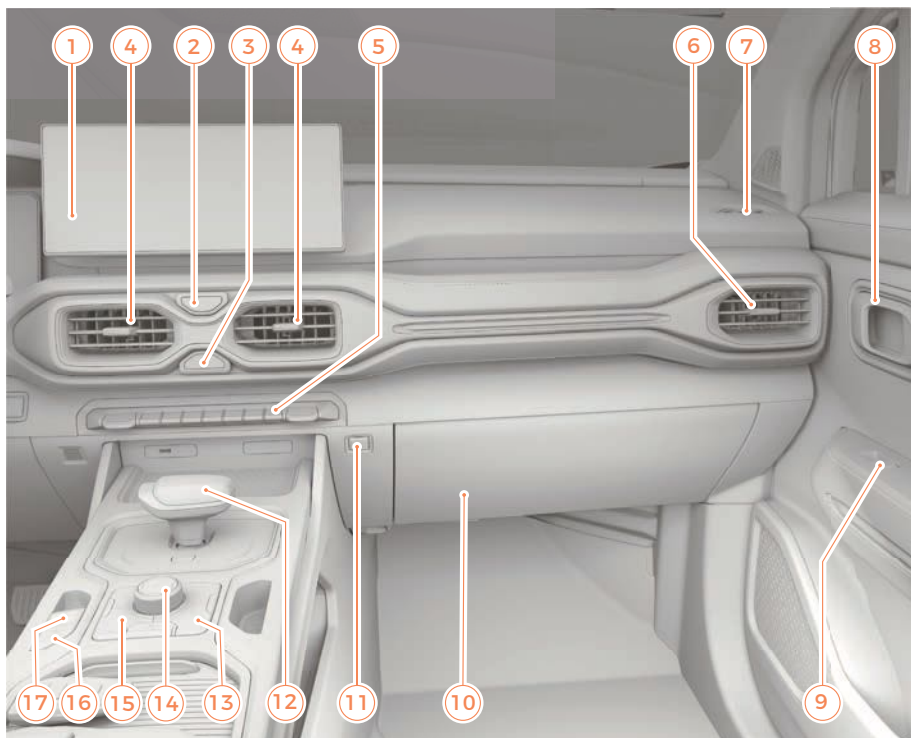

- | | |
|---|---|
| 1. Display screen | 10. Glove box |
| 2. Display screen power switch (If equipped) | 11. Glove box switch |
| 3. Hazard warning light switch | 12. Electronic shift lever |
| 4. Central air outlet | 13. Electronic Stability Control (ESC) switch |
| 5. Air conditioning control panel | 14. Drive mode knob |
| 6. Right side air outlet | 15. Hill Descent Control (HDC) switch |
| 7. Right defrosting air outlet | 16. AUTO HOLD switch |
| 8. Door inner handle | 17. Electronic Parking Brake (EPB) switch |
| 9. Front passenger side power window control switch | |

Instrument Cluster

Instrument Cluster Overview (3.5 ")




1. Power meter
2. Speedometer
3. Battery level gauge
4. Battery temperature gauge

Meter and Control

Indicators (3.5 ")

Power meter

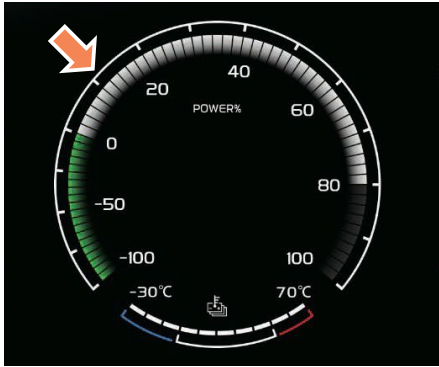

The power meter is a percentage meter that indicates the percentage of the output power or recovered power to the maximum allowable power.

The power meter is in the white area, indicating that the drive motor is consuming electric output power.

The power meter is in the green area, indicating that the drive motor is recovering energy to charge the power battery.

Speedometer



Speedometer displays real-time speed of vehicle (Unit: km/h).

You can drive at high speed on a good road surface, but for safety, stability

and comfort, please keep your speed within the road traffic speed limit. On regular road surfaces, you should drive at speeds in accordance with traffic regulations.

Battery level gauge



The battery level gauge displays the percentage of battery level in the power battery, and the battery level display is divided into 10 segments, each segment represents 10% of the battery level. When the battery level drops to 20% or below, the low battery indicator light will illuminate. At this point, please recharge the battery promptly.

Battery temperature gauge



The start switch is set to ON, and the battery temperature gauge displays

the temperature of the coolant of the battery electric drive system. The temperature of this cooling fluid varies depending on factors such as ambient temperature and the load of the drive motor.

If the temperature gauge shows in the red or on the right side of the scale, you should stop the vehicle and allow the battery drive system to cool down.

Under harsh driving conditions, the battery drive system may overheat, such as:

- Long distance climbing in hot weather.
- Slow down or stop the vehicle after driving at high speed.


Warning volume

Volume setting for overspeed warning

Press the button on the right side of the steering wheel to enter the main menu of the instrument cluster → Vehicle Settings → Warning Volume → High/medium/low (Set at the original 10-level sound setting, high is 10, medium is 6, and low is 3), please refer to the “Menu Information and Settings” section in this chapter.

Information Center (3.5 ")

Display screen overview

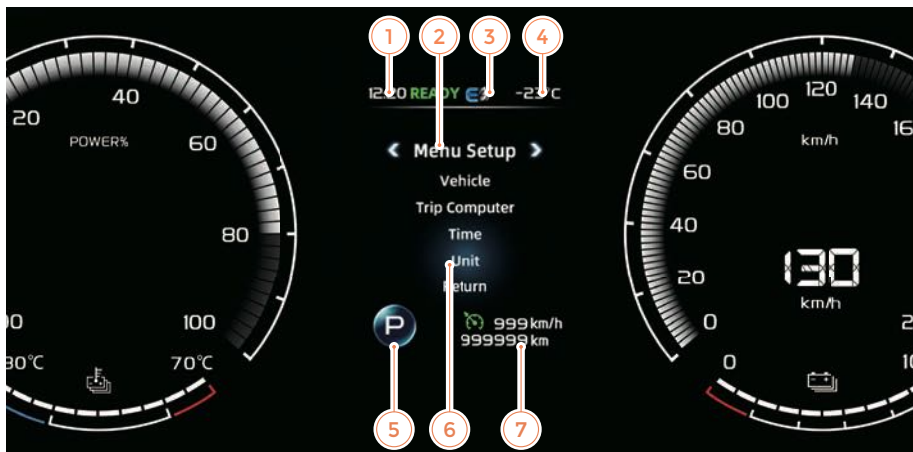

1. Clock display area

Always-On, the clock can be adjusted and set if the Combined Use function of the steering wheel is activated.

2. Menu display area

This area displays the functions of the menu on the instrument cluster, including tyre pressure monitoring, warning list, menu settings, multimedia, Bluetooth telephone, subtotal mileage, average power consumption, instantaneous power consumption, driving mileage, driving time, average speed.

3. Driving mode

Based on the selected driving mode, it will be displayed as E, S, or C.

4. Outside temperature display area

Always-On, the outdoor temperature display ranges from -40°C ~ 60°C .

5. Gear display area

Based on the selected gear, it will be displayed as R, N, P, or D.

6. Information display area

- This area displays the informations about tyre pressure monitoring, subtotal mileage, average power consumption, instantaneous power consumption, driving mileage, driving time, average speed.
- Illustration information of warnings
- Menu settings.
- Multimedia information.
- Bluetooth telephone.

7. Total mileage display


The number displayed is the total mileage of the vehicle and is always displayed in the lower right corner of the instrument cluster.

Display settings

! For safety reasons, it is prohibited to set the instrument cluster while the vehicle is in motion.

i It is important to activate the steering wheel combined use function before setting up the instrument cluster.

Steering wheel combined use function

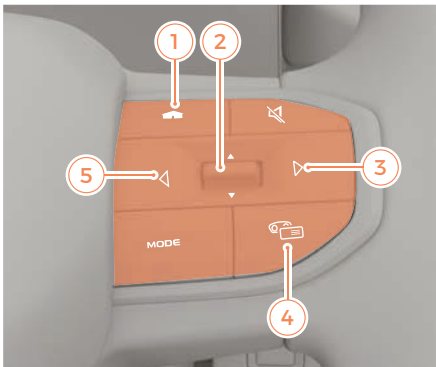

Short press the MODE button on the right side of the steering wheel to activate the steering wheel combined use function.

1. HOME: Short press this button to return to the default home page.
2. Confirm:
 - Press this button upward to select the menu/time upwards.
 - Press this button downward to select the menu/time downwards.
 - Short press this button to confirm the selection of menu items and enter the sub-menu; Long press this button to reset the ECU or block the ordinary warning.
3. Right selection key: Press this button to select the right shortcut

menu interface or content.

4. Modes switch key: Press this button to switch the control of the steering wheel button to the multimedia host and the combined instrument.
5. Left selection key/Back key: Short press this button to select the menu on the left. When in the secondary menu, short press this key to return to the previous menu.

Warning information display

Warning information displays the current working status of the vehicle for the user through a text-based graphical interface.

Warning information is categorized into four types: security warning information, prompt message, general warning information and special warning information. Among these, security warning information holds the highest priority, followed by prompt message and general warning information, while special warning information has the lowest priority.

Security warning information

Security warning information can immediately interrupt other types of warning informations or prompt messages. Security warning information cannot be hidden to the warning list by selecting the upwards, downwards or Confirm keys, and it will continue to be displayed until the warning conditions are cancelled.

Prompt Information

Prompt message can immediately interrupt the general and special warning information.

General warning information

General warning information can immediately interrupt the special warning information and can be hidden

Meter and Control

from the warning list by the Confirm key. Once listed in the warning list, it can be displayed again through the menu.

Special warning information

In general, the special warning information is displayed in the current information area. However, when the active safety system is activated, it is displayed in the active safety system display area.

ECU interface setting

ECU interface switching

- Short press the Confirm button on the steering wheel to switch one by one in a circular manner. When the Combined Use function of the steering wheel is activated, you can also use the Up and Down buttons for switching.
- When the start switch is set to the ON position, the ECU will display the last recorded information.

Reset the ECU information

- In any ECU information interface, you can initiate a reset by long-pressing the Confirm key on the steering wheel, which activates the Combined Use function. This reset action clears the displayed ECU information on the interface, excluding the instantaneous power consumption data. Please note that if any warning informations are displayed during this long press, the reset will be invalid, and the warning information will persist on the screen.
- Go to Menu Settings → ECU Settings → Reset All ECUs → Select Reset, you can reset all ECU interfaces (Except instantaneous power consumption).

ECU interface opening and closing

- Go to Menu Settings → ECU Settings → Check or cancel the ECU interface

ECU information

Subtotal mileage



Subtotal mileage shows the mileage of the vehicle since the last reset.

The subtotal mileage interface updates every 0.1 km and ranges from 0.0 to 999.9 km. Once it reaches its maximum value, it resets to 0.0. You can switch between km and miles as the unit of measurement in the Menu Settings.

Average power consumption



The average power consumption is measured in kWh/km, which shows the average power consumption since the last time the memory was reset. This information is updated every 10 seconds to help drivers to adjust their driving habits to achieve the desired power consumption value.


Instantaneous power consumption



Instantaneous power consumption is measured in kWh/km. It can not be reset. When the vehicle is stationary and the start switch is in the ON position, the instantaneous power consumption is displayed as "-. - kWh/km". This interface helps the drivers to adjust their driving habits to achieve the desired power consumption.


Meter and Control

Driving mileage

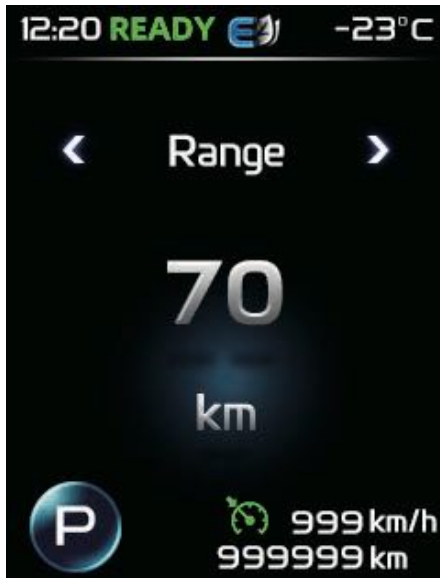

Driving mileage is used to display the mileage the vehicle can travel with the current level of charge in the power battery. Due to variations in road conditions and driving habits, the displayed mileage may differ from the actual achievable distance. This value is provided for reference only.

Driving time

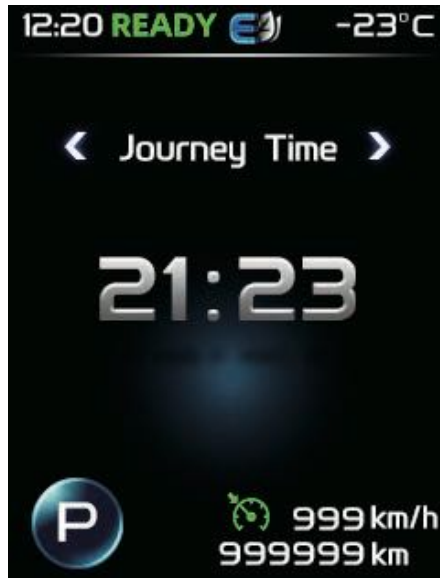

After the vehicle is in the Ready state, the driving time starts accumulating. Within 2 hours after the start switch is turned to the OFF position, the timer pauses. Otherwise, the driving time will be reset to zero. Disconnect the low-voltage battery, and the driving time will be reset to zero.

The driving time interface is updated every 1 minute. The maximum driving time displayed is 99:59.

You can activate or deactivate the display of driving time in the ECU menu interface.

Average speed



Average speed shows the average speed since the last reset.

The calculation of average speed starts when the vehicle is turned on and stops when the start switch is turned to the OFF position.

You can reset the average speed by activating the steering wheel Combined Use function and accessing the reset option in the instrument cluster menu.

Tyre pressure monitoring



The tyre pressure and temperature can be monitored through the tyre pressure sensors, and this information is displayed on the instrument cluster screen with updates every 3 seconds.

You can adjust the pressure unit to display in bar, PSI, or kPa, and also change the temperature unit to °C or °F.

- Low tyre pressure warning
When low tyre pressure is detected, the corresponding tyre location on the display turns red, the background flashes red, and an audible warning is triggered. This warning persists until the issue is resolved. All low pressure warnings are canceled when the tyre pressure signal exceeds the low pressure warning threshold by more than 20 kPa.
- Rapid air leakage warning
If TPMS detects rapid air leakage in a tyre, the hazard warning light illuminates, and the warning interface

Meter and Control

displays the location of the rapidly leaking tyre. The warning light remains illuminated until the issue is resolved.

Tyre pressure sensor lost warning

When TPMS does not receive a valid message from a tyre sensor, the warning interface shows that "Tyre pressure sensor lost" and the warning light remains on until the warning is eliminated.

- Low battery warning

When the battery level of the tyre sensor is low, the warning interface shows that "Tyre pressure sensor low battery" and the warning light remains on until the warning is eliminated.

 After the vehicle is powered off and then restarted, the instrument cluster will perform a self-check and display the tyre pressure values before the restart. Once the vehicle's speed exceeds 40 km/h and after 1 minute, it will display real-time tyre temperature and pressure values. If the tyre pressure warning light is illuminated, please promptly pull over and contact the Geely Automobile Service Center for inspection!

"Lights not off" alerts



When the start switch is in the OFF position, and if the position light or combined headlight is on with the left front door open, the instrument cluster will display an alert message "Lights not off", and a buzzer will sound to remind the driver.

 After exiting the vehicle, please turn off all lights to prevent the battery from draining and being unable to start the vehicle.

“Doors not closed” alerts



3

After the vehicle is started, if any of the four doors is not properly closed, a warning message will appear on the instrument cluster with a warning sound to prevent accidental opening while the vehicle is in motion.

Meter and Control

Menu information and settings

First level menu	Second level menu	Third level menu	Fourth level menu
Vehicle Settings	Steering mode switch (Linkage)	○ Driving mode correlation	
		Private customization mode	
		○ Comfort	
		○ Standard	
		○ Sports	
		Back	
	Warning volume	○ High	
		○ Mid	
		○ Low	
		Back	
	Remaining maintenance mileage	There are still xxxx-km left until the next maintenance	
		Back	
	Back		
ECU Settings	Reset ECUs	Confirm	
		Cancel	
	☐ Subtotal mileage		
	☐ Average power consumption		
	☐ Instantaneous power consumption		
	☐ Driving mileage		
	☐ Driving time		
	☐ Average speed		
	☐ Tyre pressure monitoring		

First level menu	Second level menu	Third level menu	Fourth level menu
	Back		
Time Settings	Calendar settings	Year settings	
		Month settings	
		Day settings	
		Confirm	
		Cancel	
	Clock settings	Hour settings	
		Minute settings	
		Confirm	
		Cancel	
	Back		
Unit Settings	Temperature unit	○ °C	
		○ °F	
		Back	
	Pressure unit	○ psi	
		○ kPa	
		○ bar	
		Back	
	Mileage power consumption unit	○ km, kWh/100km	
		○ mi, kWh/100mi	
		Back	
	Back		
Back			

Clock display and settings

Display



The clock is displayed on the instrument cluster.

Time settings



Press the steering wheel mode switch button to activate the steering wheel Combined Use function. Short press the left or right selection button to choose "Menu Settings", then press the confirm button to enter the settings interface. Use the confirm button again by pressing it up or down to select "Time Settings".

Calendar settings



To manually set the calendar, go to Menu Settings → Time Settings → Calendar Settings → Year/Month/Day. Short press the Left and Right selection keys to select the year/month/day, push the Up, Down and Confirm keys to modify the value, and select Confirm to update the date.

Clock settings




To manually set the clock, go to Menu Settings → Time Settings → Clock Settings → Hour/Minute. Short press the Left and Right selection keys to select the content that needs to be adjusted, push the Up, Down and Confirm keys to modify the value, and select Confirm to update the time.

Warning Lights and Indicators

Warning lights and indicators position

3.5" color TFT screen

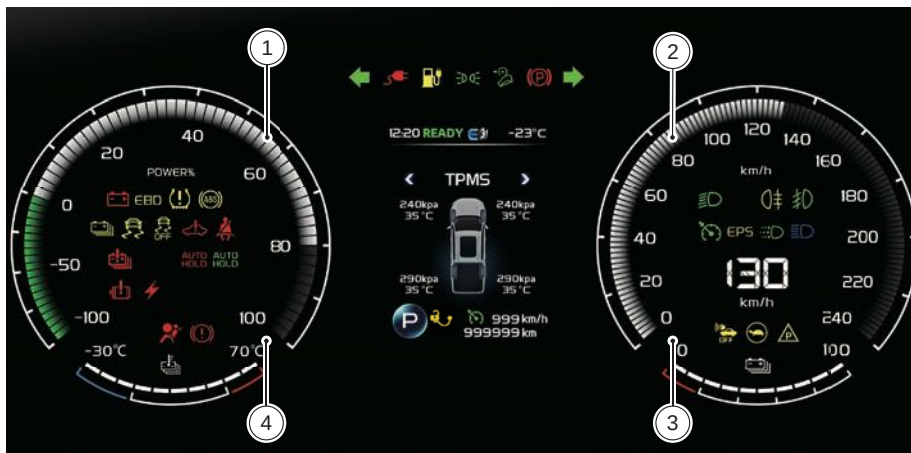

Warning lights and indicators introduction

Illustration	Name	Description
	Left turning signal indicator	The left turning signal indicator is on
	Right turning signal indicator	The right turning signal indicator is on
	Low beam indicator	The low beam indicator is on
	High beam indicator	The high beam indicator is on
	Rear fog light indicator	The rear fog light indicator is on
	Daytime running light indicator	The daytime running light indicator is on
	Position light indicator	The position light indicator is on
	Airbag malfunction warning light	The airbag system is faulty
	Parking brake warning light	Parking brake is enabled
	Parking brake indicator	The AUTO HOLD function is enabled
	Electronic Parking Brake System (EPB) malfunction warning light	The electronic parking brake system is faulty
	Brake system malfunction warning light	The braking fluid level is too low or the brake system is faulty
AUTO HOLD	AUTO HOLD status indicator	AUTO HOLD is enabled
AUTO HOLD		AUTO HOLD is faulty
	Battery charging malfunction warning light	The battery charging is faulty
	Unfastened front seat belt warning light	Driver/passenger seat belt not fastened

Meter and Control

Illustration	Name	Description
	Tyre pressure abnormal warning light	Tyre pressure monitoring system malfunction, tyre pressure abnormal, or not learned
	Electronic Stability Control (ESC) malfunction warning light	The electronic stability control system is faulty
	Electronic Stability Control (ESC) indicator is off	The electronic stability control system is disabled
	Electronic Power Steering System (EPS) malfunction warning light	The electronic power steering system is faulty
	Cruise status indicator	The vehicle is on cruise mode
	System fault light	System is faulty
	Charging cable connection indicator	The vehicle is connected to a charging cable
	Motor system fault light or overheating warning light (3.5")	The drive motor and controller are faulty
	Power battery charging indicator	The power battery is charging
	Low speed warning off indicator	Low speed warning switch is on
	Power battery fault warning light	The power battery is faulty
	Power battery low voltage indicator	The power battery level is too low
	Operation ready indicator	The vehicle is all ready for normal driving
	Comfort mode indicator (3.5")	The driving mode is Comfort

Meter and Control


Illustration	Name	Description
	Economy mode indicator (3.5")	The driving mode is economy
	Sports mode indicator (3.5")	The driving mode is sports
	Hill Descent Control System (HDC) indicator	The hill descent control system is faulty
		The hill descent control system is enabled
	High-voltage insulation indicator	High-voltage insulation is faulty
	Electronic Brake Force Distribution (EBD)/Brake energy recovery malfunction warning light	Electronic brake force distribution/brake energy recovery system is faulty
	Anti-lock Braking System (ABS) malfunction warning light	The anti-lock braking system is faulty
	Power limited indicator	The vehicle has developed some specific faults and the power is limited
	Towing mode indicator	Towing mode is enabled

 Please pay close attention to the illuminated warning indicators and lights, as neglecting them can lead to serious personal injury and property damage.


Light and Wiper Combination Switch

Light Combination Switch

Manual light combination switch (If equipped)

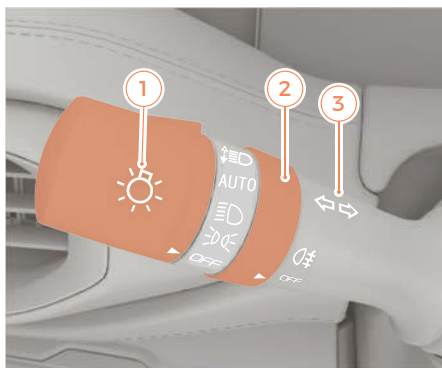


Automatic light combination switch (If equipped)

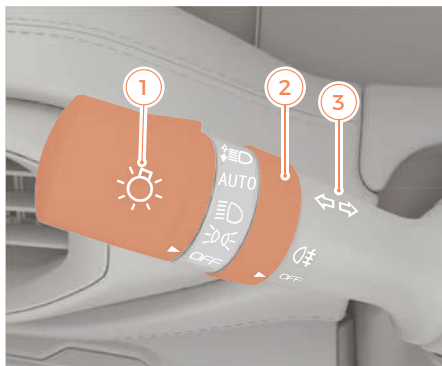

1. Light control switch
2. Fog light control switch
3. Light switch lever (Control the High beam, Low beam, left turn signal, and right turn signal)

Light combination switch operation

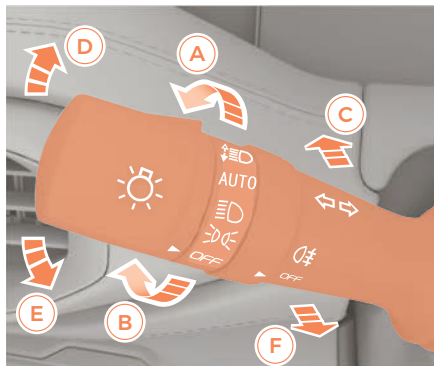

Position light

Rotate the light control switch to the direction A until the mark ► points to the , the position light and backlight are all on and can be adjusted. Rotate the light control switch to the direction B until the mark ► points to the OFF, the position light and backlight on the light control switch are all off.

Low beam

Rotate the light control switch in the direction A until the mark ► points to the , the low beam is on. Rotate the light control switch to the direction B until the mark ► points to the OFF, the low beam is off.

High beam and Low beam switching

If the low beam is on, then push the light switch lever to the limit position to the C direction, the high beam will turn on. Pull back the light switch lever to the F direction, it will switch back to the low beam.

High beam flash

Push the light switch lever to the limit position in the F direction, the high beam will turn on. Release the lever, and the high beam will automatically turn off. Repeating this action will flash the high beam.

AUTO lighting (If equipped)

Rotate the light control switch in the direction of A until the mark ► points to the AUTO, the automatic lighting function of the headlight is enabled. The automatic lighting system automatically controls the headlight ON and OFF according to the external light intensity. When entering a tunnel, the system will automatically turn on the position light and low beam, and when exiting the tunnel, it will turn them off. Additionally, in dark external environments, the system will also activate the position light and low beam.



In automatic mode, the system has a manual priority function. If there is a light signal input, the system will exit the automatic lighting mode.

Right turning signal indicator

Flick the light switch lever in the direction D, and the right turning signal indicator flashes. After the turn is completed, the light switch lever automatically returns to its original position, and the turning signal indicator will turn off.

Left turning signal indicator

Flick the light switch lever in the direction E, and the left turning signal indicator flashes. After the turn is completed, the light switch lever automatically returns to its original position, and the turning signal indicator will turn off.

Lane-change lighting function

Flick the light switch lever in the direction D or E slightly, and the right or left turning signal indicator will flash 3 times.

Rear fog light

With the Low beam turned on, rotate the fog light control switch 2 to the direction A until the mark ► points to the , the fog light will be turned on.

Headlight height adjustment function**Manual adjustment (If equipped)**

3

1. Front combination light height adjustment knob

This knob is used to adjust the illumination height of the front combination lamps and has four positions: 0, 1, 2, and 3. Please adjust the knob position according to the load:

0: Driver only.

1: Driver and front passenger.

2: Full passenger load with cargo.


3: Driver with cargo.



When adjusting the height of the front combination light, ensure it does not dazzle oncoming road users.

Meter and Control

Adaptive Front-lighting System (AFS) (If equipped)

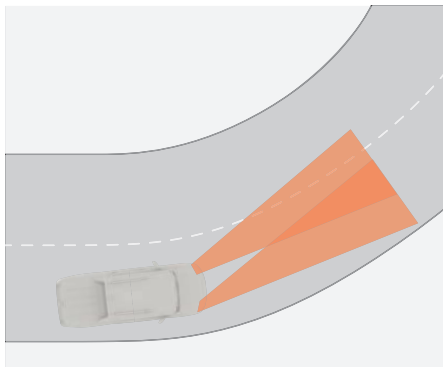


During turns, the adaptive headlights illuminate the entire curve, providing a wider beam angle for improved visibility of other vehicles or obstacles on the curve.

The function of Adaptive Front-lighting System is enabled when all of the following conditions are met:

- The vehicle is in READY condition.
- The vehicle speed is above 10 km/h.
- Steering wheel signal is normal.
- The low beam is on.
- The high beam is off.
- Weak ambient light intensity or night driving.
- The gear is not in R.

i Once activated, the function remains active at speed exceeds 30 km/h. However, it automatically turns off when the vehicle speed exceeds 40 km/h.

Headlight AUTO ON function (If equipped)

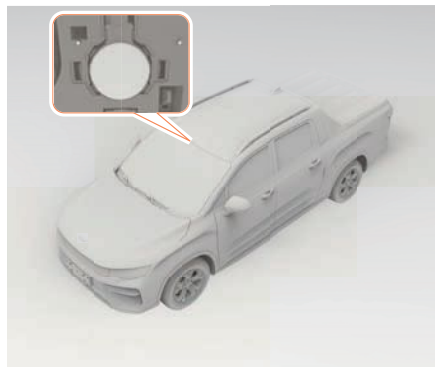

The light intensity of the external environment is monitored by the light sensor. When the light is dim, the low beam, the position light and the corresponding indicator light on the instrument cluster will automatically turn on. When the light is sufficient, they will automatically turn off.

Daytime running light

Daytime running light ON

When the vehicle is started with the low beam turned off, the daytime running lights are automatically turned on.

Daytime running lights OFF

The daytime running lights automatically turn off under the following conditions:

- The vehicle is powered off.
- The low beam is turned on.

Follow me home

Time setting of follow me home function



Click on the multimedia display step by step: Vehicle Settings - Lights, go to the Follow Me Home function interface.

In the "Follow Me Home" settings menu, you can choose the timer duration based on your preference, with options of 30 s, 60 s, or 90 s. When the "Follow Me Home" function is activated, the timer will start counting down according to your chosen duration. If any door is opened before the timer expires, it will reset. The timer will reset to your chosen duration only if all doors are closed after such a reset.



You can activate the "Follow Me Home" function in the following two ways when the vehicle anti-theft system is disabled:


- Automatic activation: the low beam is turned on within the last 60 seconds before turning the start switch to the OFF position.
- Manual activation: The overtaking light switch is turned on within 10 minutes after the vehicle is powered off.

Wiper Combination Switch


Wiper control combination switch

Manual wiper combination switch (If equipped)

3

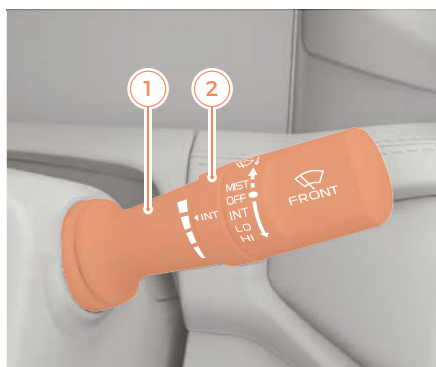


Automatic wiper combination switch (If equipped)

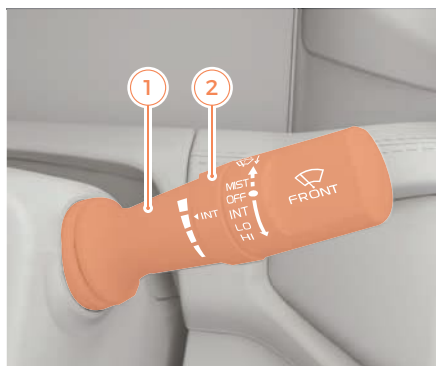

1. Wiper control lever
2. Wiper sensitivity adjustment knob

! If there is dust or sand on the windshield, please clean it before using the wiper. Do not use the wiper on a dry windshield as it can scratch the glass and affect the lifespan of the wiper blades.

Wiper control combination switch operation

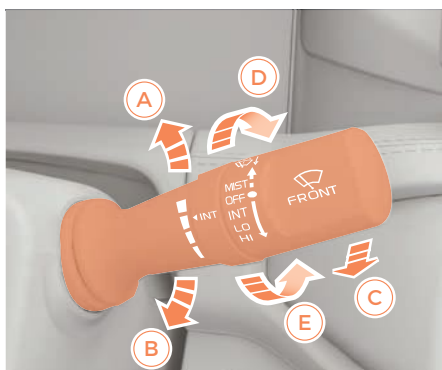

MIST

Flick the wiper control lever in the direction A and release the lever (Put the lever in gear MIST, then release), the lever automatically returns to gear OFF, and the wiper performs wiping operation once.

OFF

When the wiper control lever is in gear OFF, the wiper do not perform wiping operation.

AUTO (If equipped)

Flick the wiper control lever to the B direction to gear AUTO, and the wiper performs automatic wiping operation. At this time, the wiper system automatically adjusts the wiping speed according to the amount of rain. The sensitivity of the wiper system for sensing rainfall can be adjusted by rotating the wiper sensitivity adjustment knob

to the D or E direction. The scale bar indicated by AUTO changes from narrow to wide, it means that the sensitivity of the wiper system for sensing rainfall changes from weak to strong.

INT (If equipped)

Flick the wiper control lever to the B direction to gear INT, and the wiper performs intermittent wiping operation. At this time, the wiper system automatically adjusts the wiping speed according to the sensitivity adjustment knob of the wiper system.

LO

Flick the wiper control lever to the B direction to gear LO, and the wiper performs wiping operations at low speed.

HI

Flick the wiper control lever to the B direction to gear HI, and the wiper performs wiping operations at high speed.

Wiper maintenance mode

Within 30 seconds after the start switch is switched from gear ON to gear OFF/ACC, flick the lever of the wiper switch from gear OFF to gear LO or INT, and the wiper will move and then stop on the front windshield for easy replacement. After the start switch is set to gear ON, flick the wiper switch to any gear, the wiper will return to the original position and exit the maintenance mode.

Front windshield washing

Flick the wiper control lever in the C direction, while the front windshield washer sprays water, the wiper wipes. After releasing the wiper control lever, the washer stops spraying water, and at the same time, the wiper wipes several times before resetting.

Rain sensor (If equipped)




The rain sensor is mounted behind the front windshield, and it can adjust the action of the wiper according to the amount of rain falling on the front windshield.

 Please keep the rain sensor area clean to avoid affecting the sensitivity of the rain sensor and the use of the wiper.

Steering Wheel

Horn

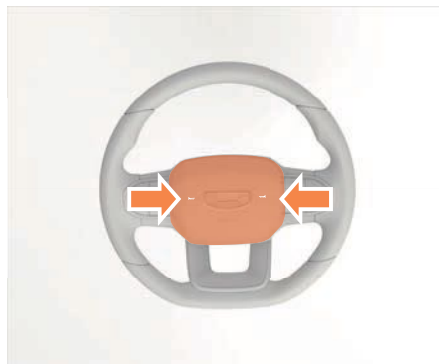

Press the Horn icon area on the steering wheel (Indicated by the arrows) to activate the horn.

 The area with horn icons on the steering wheel is also the cover for the driver's airbag. Due to the special function requirements of the driver's airbag, please do not press or strike the driver's airbag cover forcefully when using the horn. Doing so may trigger the deployment of the driver's airbag, causing personal injury.

Steering Wheel Adjustment

! After adjusting the position of the steering wheel, please confirm that the steering wheel is locked. Do not adjust the steering wheel while the vehicle is running, otherwise it will lead to serious personal injury and property damage.



1. Steering wheel adjusting lever

Adjust the steering wheel to the appropriate position through the following steps:

1. Turn the steering wheel to the straight driving position.
2. Unlock the steering wheel adjustment lever completely.
3. Grip the steering wheel with both hands and adjust the steering wheel back and forth, up and down, to the appropriate position.
4. Pull up the steering wheel adjustment lever completely to lock the steering wheel in the new position.

Steering wheel steering mode switch

i Drivers should choose the appropriate steering mode according to their own driving ability and road conditions.

! Large angle steering or high speed driving may cause switching failure.

This vehicle offers three steering modes. Drivers can transmit control from the steering wheel to the instrument cluster using the steering wheel mode switch button, and switch among the steering modes by navigating to Settings > Steering mode switch in the instrument cluster menu.


- Standard mode: medium power-assisted steering, and the hand feeling is medium when steering;
- Comfort mode: compared with the Standard mode, increased power-assisted steering, and the hand feeling is light and flexible;
- Sports mode: Compared with the Standard mode, reduced power-assisted steering, and the hand feeling is calm and stable.

To switch the steering mode, the following conditions must be met simultaneously:

1. The start switch is in the ACC or ON position;
2. The steering wheel Combined Use function is activated on the instrument cluster.


Buttons on the Steering Wheel

Steering wheel with cruise control

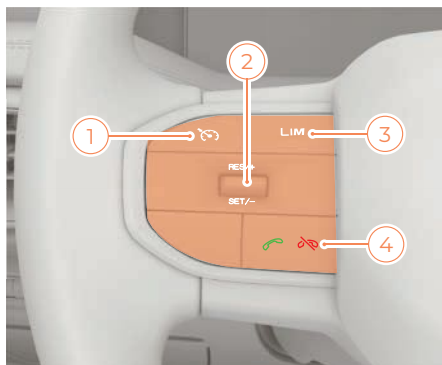

1. **Cruise Control:** Enable/disable the cruise control function.
2. **Speed adjustment and settings:** used for cruise control adjustment in cruise control state; In Speed Limit state, used for Speed Limit adjustment.
 - **RES/+ (Restore/Accelerate)**
Push the Speed Setting button in the RES/+ direction to restore the cruise speed to the original setting or increase the cruise speed.
 - **SET/- (Set/Decelerate)**
Push the Speed Setting button in the SET/- direction to set the current speed to the cruise speed or decrease the cruise speed.
3. **Speed Limit:** Enable the active Speed Limit function, and set the speed through the RES/+ and SET/- buttons. The speed limit range is from 30 to 150 km/h.
4. **Call:** Answer/hang up a call.

Buttons on the right side of the steering wheel

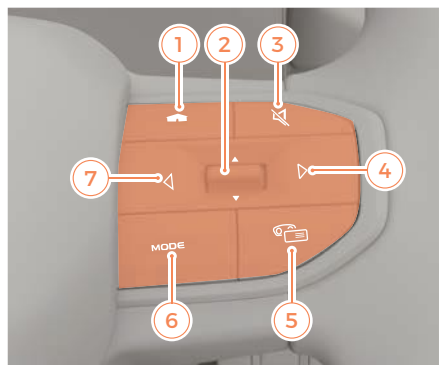

1. **Home:** Return to the home page.
2. **Volume adjustment:** Adjust the volume.
3. **Mute:** Switch to mute.
4. **Right option key:** Shortly press this key to jump to play the next file in the multimedia mode.
5. **Modes Switch key:** Press this key to switch the control of the steering wheel button to the multimedia host and the instrument cluster.
6. **MODE:** Switch among audio sources.
7. **Left option key:** Shortly press this key to jump to play the previous file in the multimedia mode.

Rearview Mirror

Exterior Rearview Mirror

! Do not adjust the exterior rearview mirror while the vehicle is driving, otherwise it will lead to serious personal injury and property damage.

! Before driving, the external rearview mirror must be unfolded and adjusted correctly.

The exterior rearview mirror adjustment switch is located on the interior panel of the driver's door.




1. Exterior rearview mirror adjustment switch

i Objects seen in the exterior rearview mirror are further away than they really are. Please adjust the driving position first, and then adjust the exterior rearview mirror.

When the exterior rearview mirror is frozen, use a spray or deicer to remove the ice from the surface of the exterior rearview mirror. And then adjust the exterior rearview mirror.

! Do not touch the exterior rearview mirror while adjusting to avoid damage to the vehicle.

Exterior rearview mirror adjustment

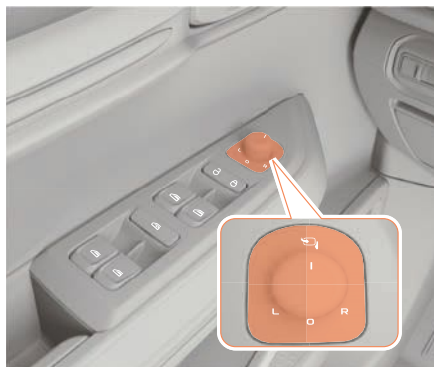

1. When the start switch is ACC or ON, rotate the exterior rearview mirror adjustment switch so that the mark — on the exterior rearview mirror adjustment switch points to L (Left) or R (Right) for selecting the corresponding left and right exterior rearview mirrors.
2. Adjust the angle of the exterior rearview mirror by pushing the exterior rearview mirror adjustment switch left, right, up or down.
3. After the adjustment is completed, reset the exterior rearview mirror adjustment switch to the initial position (0).

Folding the exterior rearview mirror

The exterior rearview mirror has a folding function to facilitate driving through narrow laneways and when parking vehicles.

Manually folding the exterior rearview mirror (If equipped)



Push the exterior rearview mirror inwards and manually fold it.

Push the exterior rearview mirror outwards and manually unfold it.

Electrically folding the exterior rearview mirror (If equipped)



Electric exterior rearview mirror has an electric folding function to facilitate driving through narrow laneways and when parking vehicles.

Rotate the exterior rearview mirror adjustment switch to  to fold the left and right exterior rearview mirrors at the same time; Rotate the switch to a different angle to unfold the left and right exterior rearview mirrors at the same time.

Automatic folding the exterior rearview mirror (If equipped)

In Multimedia Settings, you can enable the function of exterior rearview mirror folding when locking the vehicle. When the exterior rearview mirror folding switch is not in Folding gear and the exterior rearview mirrors are folded, the exterior rearview mirrors will automatically unfold when unlocking the vehicle; When the exterior rearview mirror folding switch is not in Folding gear and the exterior rearview mirrors are not folded, the exterior rearview mirrors will automatically fold when locking the vehicle.

 Do not fold the exterior rearview mirror manually. Otherwise, the folding mechanism of the exterior rearview mirror may be damaged.

Exterior rearview mirror heating & defrosting function (If equipped)

After the vehicle starts, press the rear windshield/exterior rearview mirror Defrost button  on the air conditioning control panel of the dashboard or the multimedia display screen, the defrosting function will be activated and the indicator of this button will lit up. The defrosting function will be automatically disabled after about 12 minutes. For details, refer to the "Heating, Ventilation, and Air Conditioning" section in "Air Conditioning Systems".

Interior Rearview Mirror

Adjustment of the interior rearview mirror


! Do not adjust the interior rearview mirror while the vehicle is in motion, otherwise it will lead to serious personal injury and property damage.

! To avoid affecting the function of the interior rearview mirror, it is prohibited to attach a label or install a tachograph in front of the interior rearview mirror.



The interior rearview mirror is fixed to the front windshield and can be adjusted to the desired position by rotating it.

Mechanical anti-glare interior rearview mirror (With bezel) (If equipped)

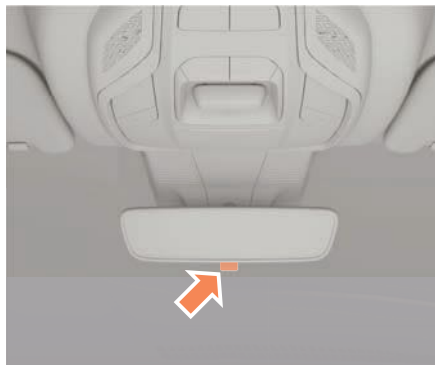

Adjust the rearview mirror angle by pushing the bottom handle to activate the anti-glare function. Pull the handle back to return the rearview mirror to its regular position and deactivate the anti-glare function.

Mechanical anti-glare interior rearview mirror (Without bezel) (If equipped)



Adjust the rearview mirror angle by pushing the bottom handle to activate the anti-glare function. Pull the handle back to return the rearview mirror to its regular position and deactivate the anti-glare function.

Window


Power Window

! Never leave children, incapacitated adults or pets in a vehicle with the windows closed and locked. They may be unable to open the doors and windows due to excessive temperature, resulting in injury or death.

! Please refer to the configuration manual before use to confirm whether the windows are equipped with anti-pinch function.

Do not try to test the anti-pinch function with your body, otherwise it will cause personal injury or death.

When the window is closed and the top of the window is less than 4 mm from the window frame, the anti-pinch function may not work.

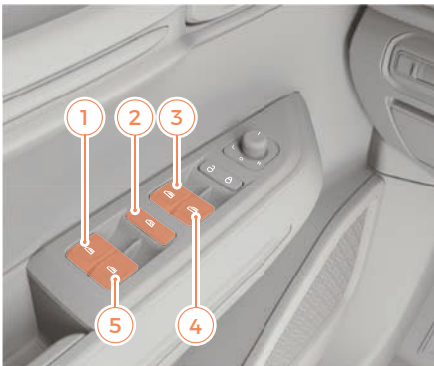

1. Rear left window switch
2. Window locking switch
3. Front left window switch
4. Front right window switch
5. Rear right window switch

Manual operation

Open: Press and hold the window switch to open the window.

Close: Pull and hold the window switch to close the window.

Automatic operation

Press the window switch to the automatic position and release it to open the window automatically. In some models, pull up the window switch to the automatic position and release it to close the window automatically. If you press or pull up the window switch again during the automatic operation, the window will stop moving.

Remote window opening/closing (If equipped)

The remote window closing function is only available on the windows equipped with anti-pinch function.

When the start switch is set to gear OFF, the four doors are closed and the anti-theft alarm is not triggered, long press the unlock button on the intelligent key, and all windows will be opened at the same time; Long press the lock button on the intelligent key and all windows will be closed at the same time.

Window locking switch

The window locking switch is located on the driver's door, in the middle of the window switch.

Press the switch to disable the window switch operation for the front passenger side window and rear windows. When the lock function is enabled, the window lock switch indicator lights up. The driver can still control the front passenger side window and rear windows using the driver side window switch.

Meter and Control

To restore the window switch operation for the front passenger side window and rear windows, simply press the switch again to unlock. The window lock switch indicator will turn off, deactivating the lock function.

Power windows thermal protection

If the windows are operated repeatedly within a short time or in high temperature conditions, it may temporarily disable the power window control switch to protect the motor's longevity. Wait for a brief period or until the temperature decreases, and the power window operation will be restored.

Anti-pinch function (If equipped)

During the automatic closing operation, if an object is caught between the glass and the window frame, the window will automatically stop and return to its initial position. If the window is severely impacted, this feature may still work even if no object is caught. If the power windows anti-pinch function does not work properly, self-learning of the power windows is necessary.

Self-learning of anti-pinch power windows (If equipped)

If the low-voltage battery of the vehicle is reconnected after power failure or if the anti-pinch power window does not work properly, self-learning of the anti-pinch power window is necessary.

Follow the steps below to perform self-learning:

1. The start switch is set to gear ON
2. Pull up the window switch to the manual closing gear until the window glass is completely raised to the top position, and release the window switch.

3. Pull up the window switch again and hold for more than 3 seconds.
4. Press down the window switch to the opening gear until the window glass is completely lowered to the bottom position.
5. Press the window switch again and hold for more than 3 seconds.
6. Repeat the same steps for the remaining windows (both raising and lowering) to finalize the self-learning procedure.
7. If the power window continue to malfunction despite following these steps, please go to the Geely Automobile Service Center for repair.



- If the window can automatically rise, the self-learning is successful.
- During the self-learning process, it's essential to strictly follow the steps and complete them continuously. If the window stops moving while raising or lowering, you should restart the process.

Operation delaying function (If equipped)

If the following conditions are met at the same time, the operation of the window can be maintained through the window switch within 60 seconds after the start switch is set to gear OFF:

- The left and right front doors are not open.
- The vehicle is not unlocked/locked using the intelligent key.

Sunroof (If Equipped)

Panoramic Sunroof



The sunroof switch is on the front interior light.

Sunroof opening/closing

Sunroof automatic operation

Short press the sunroof switch backward to fully open the sun visor. Short press the sunroof switch backward again, and the sunroof glass will automatically move to its maximum open position.

Short press the sunroof switch forward, and the sunroof glass will slide to the fully closed position. Short press the sunroof switch forward again, and the sun visor will automatically slide to the closed position.

During the automatic operation of the sunroof glass, a short press of the sunroof switch backward or forward will stop the sunroof glass from moving.

Sunroof manual operation

Press and hold the sunroof switch backward, and the sun visor will fully open. Press and hold the sunroof switch backward again, and the sunroof glass will move to its maximum open position.

Press and hold the sunroof switch forward, and the sunroof glass will slide to the fully closed position. Press and hold the sunroof switch forward again, and the sun visor will fully close.

During the long press, releasing the sunroof switch will stop the sun visor or sunroof glass from moving.

Tilt opening/closing

Tilt opening

Press the sunroof switch upward. After the sun visor moves to the half-open position, the sunroof glass will tilt open.

Tilt closing

If the sunroof glass is in the tilted open position, press the sunroof switch forwards to close the sunroof glass. After the sunroof glass is completely closed, the sun visor will automatically close.

The tilting open/close operation of the sunroof glass cannot be paused using the sunroof switch. The sunroof glass will automatically move to the fully tilted or fully closed position.

Remote sunroof opening/closing

When the start switch is set to gear OFF, the four doors are closed and the anti-theft alarm is not triggered, long press the unlock button on the intelligent key, the sunroof will be fully opened; Long press the lock button on the intelligent key, the sunroof will be completely closed.

i You can configure the remote sunroof closing feature with a short press of the lock button through the Vehicle Settings menu on the multimedia system.

Meter and Control

Anti-pinch protection

Tilt anti-pinch

- When the sunroof is tilting open, it will stop if an obstacle is detected.
- When the sunroof is closed and tilted, if an obstacle is encountered, the sunroof will return to the fully tilted position.

Sunroof glass and sun visor with anti-pinch function

- When the sunroof is closed, if an obstacle is encountered, the sunroof will return to the fully open position.
- When the sunroof and sun visor run into obstacles, anti-pinch function will be performed.

 When the sunroof is running, if anti-pinch function works once, the anti-pinch function and automatic operation function will be suspended within 10 seconds. After 10 seconds, the anti-pinch function and automatic operation function are restored.

Sun visors

Sun visors opening

Press the sunroof switch backwards, and the sun visor will automatically operate to fully open. Press the sunroof switch backwards/forwards again, and the sun visor will stop sliding immediately. Long press the sunroof switch backwards to open and slide the sun visor. Release the sunroof switch, the sun visor stops sliding immediately.

Sun visors closing

Press the sun visor switch forwards, the sun visor will automatically operate until fully closed; Long press the sun visor switch forwards to close and slide the

sun visor. Release the sunroof switch, the sun visor stops sliding immediately.

If the sunroof glass is not fully closed, the sun visor cannot be closed. During the automatic (Short press) or manual (Long press) closing process of the sunroof, press the sunroof switch backwards/forwards again, and the sun visor will stop sliding; During the manual closing process of the sun visor, the sun visor will stop sliding after releasing the sunroof switch.

 Avoid applying excessive force to the sun visor to prevent it from dislodging, which could lead to unusual noises or operational issues.

- When the sunroof is fully opened, it may cause excessive wind noise.
- When parking the vehicle for a long time, it is recommended to close the sun visor to the fully closed position. If possible, it is best to park in the garage to prevent the temperature inside the vehicle from rising due to long-term exposure and damaging the interior.

Maintenance

Maintenance of sunroof glass

Use a glass cleaner to clean the glass pane of the sunroof. Do not use sticky cleaners!

Maintenance of sunroof

- When the vehicle often uses the sunroof in an environment with heavy wind and sand, you can regularly use a wet sponge to clean the sand and dirt near the glass rubber strip.
- If the vehicle is parked for a long time or the sunroof is not used for a


long time, fine talc powder or lubricant dedicated for the rubber strip can be used to clean the rubber strip around the sunroof.

- When washing the vehicle, check whether the sunroof rubber strip, drainage holes, and grooves are covered by foreign objects such as sand, leaves, and branches. If so, please clean them up.

Interior Lighting


Front Interior Light

Basic front interior light (If equipped)

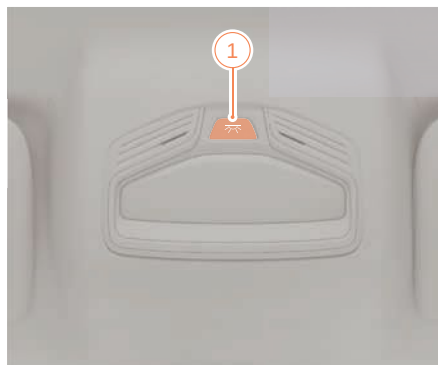

1. Interior light door-controlled switch

Front interior light with sunroof (If equipped)

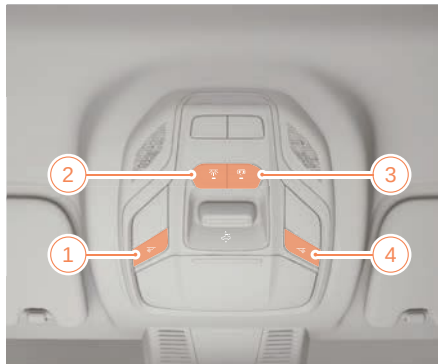

1. Left interior light switch
2. Interior light always-on switch
3. Interior light door-controlled switch
4. Right interior light switch

Front interior light operation

Press the left or right interior light switch to turn on or off the left or right interior light; Press the door-controlled switch of the front interior light, the front interior light can be controlled by doors.

The function of door-controlled switch is enabled by default. Opening any door will light up the interior light. Pressing the door-controlled switch of the interior light can cancel the door-controlled function of the interior light.

i If the left and right interior lights are turned on by the door-controlled switch, they cannot be turned off by pressing the corresponding left or right light switch.

When the four doors are locked, use the intelligent key to unlock or touch the door handle to unlock the four doors, the interior lights will be automatically turned on. If no doors are opened at this time, the interior lights will be on for a period of time and then turned off. During this period, if locking with the remote or pressing the touch area of the door handle, the interior lights will be turned off.

After unlocking with the intelligent key or touching the door handle to unlock the four doors, if you open any door before the interior lights are turned off, the interior lights will continue to light up. During the period, if all four doors are not opened, the indoor lights will automatically be turned off. This function can be disabled by pressing the interior light door-controlled switch.

! Avoid using front interior lights when driving at night. Bright lights may affect the driver's safe driving and may cause traffic accidents.

Interior light door-controlled status

The door-controlled function of the interior light is enabled by default.


Light up

- With the four doors closed, the interior lights gradually light up after the power is off.
- When the locked vehicle receives the unlocking command, the interior lights gradually light up.
- When either door is opened, the interior lights gradually light up.

Light out

- With the four doors closed, the interior lights will be automatically turned off after 15 seconds after the power is off.
- With the four doors closed, but the start switch is not in the OFF position, the interior lights gradually light out after the power is off.
- When the vehicle loses power and all four doors are closed, the interior lights gradually light out upon receiving a locking command.

Rear Interior Light (If Equipped)

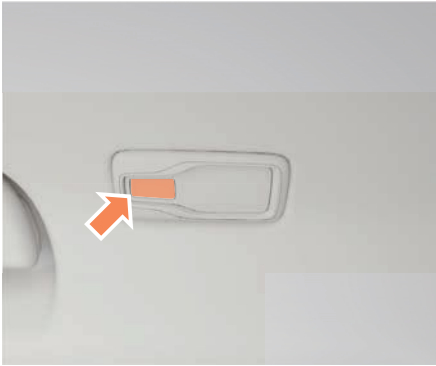

By pressing the rear interior lighting switch, you can activate or deactivate the rear interior light.

Interior Equipment

Glove Box



The glove box switch is located on the left side of the glove box. Press the switch to open the glove box. Push back the glove box lid forward to close the glove box.

Storage Box


Front engine compartment storage box



The vehicle is equipped with a storage box in the engine compartment.

Meter and Control

Door storage box

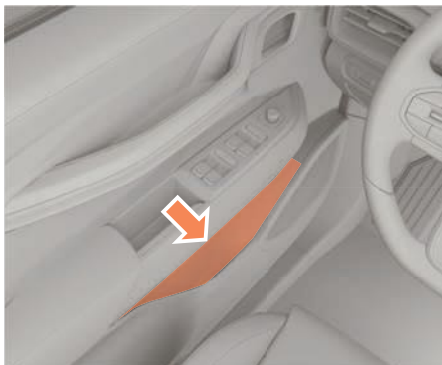

The vehicle's four doors are equipped with storage boxes, which are located under the interior panels of the four doors and can be used for storing smaller items.

Dashboard card slot



The dashboard card slot is located at the lower left of the dashboard for storing cards.


Dashboard storage box




There is a storage box in the lower left of the dashboard, which can be opened by pulling the opening handle.

Front storage box

Center console upper storage box (Type 1)

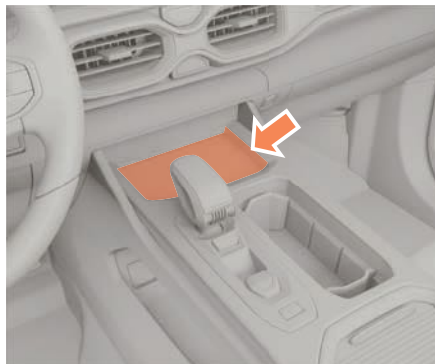


Center console upper storage box
(Type 2)

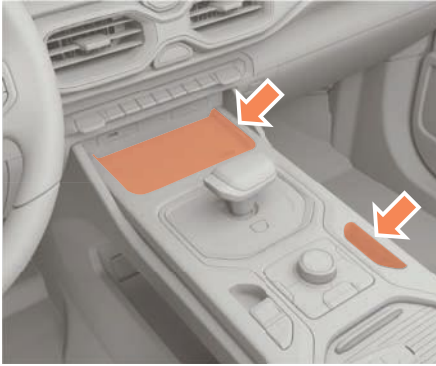

The vehicle is designed with an open storage box on the upper part of the center console, which can be used directly.


Center console bottom storage box

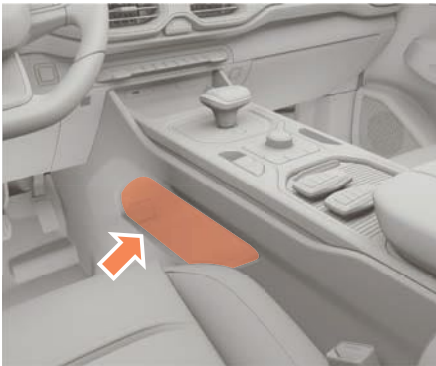

The vehicle is designed with a storage box under the center console, which can be used for storing smaller items.

Rear storage box

Center console rear storage box

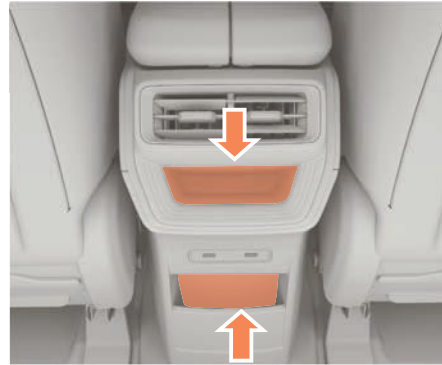

The vehicle is designed with an open storage box behind the center console, which can be used for storing smaller items.

Rear seat storage box



A storage box is designed under the cushion of the rear seat for storing tools and warning triangle.

The vehicle is equipped with onboard tools: electric air pump, traction ring and fluid tank for tyre repair.

Sun Visor and Make-up Mirror



The vehicle is equipped with sun visors on the driver's side and front passenger's side. Turn down the sun visor or pull it out of the holder and turn it towards the door to reduce glare.

The sun visor is equipped with a make-up mirror, which can be used by turning the cover of the make-up mirror up/down.

Ticket folder



For placing small and light objects (e.g. invoices).


Glasses Case (If Equipped)



The glasses case is integrated with the front interior light for you to place or use your glasses while driving.

Central Armrest

Front central armrest

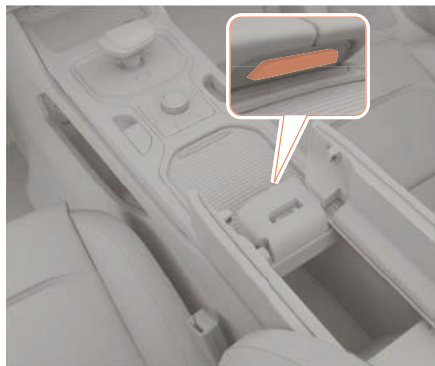


There is a storage box under the central armrest in the front of the vehicle. Press the latch under the front of the central armrest to open the storage box.



Do not open the storage box in the central armrest while the vehicle is in motion.


Rear central armrest (If equipped)

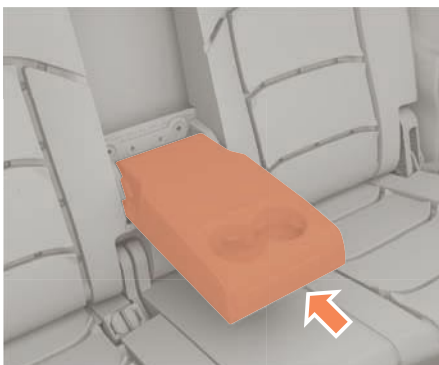

The rear central armrest is located in the middle of the rear seat backrest, pull down the pull strap, you can open the central armrest to improve the comfort.

Cup Holder


Front cup holder (Type 1)

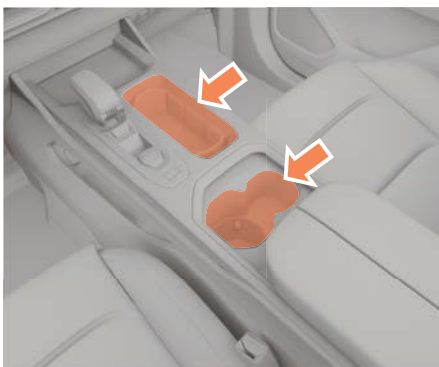

There are two cup holders in the sub-dash panel. The cup holder on the right side of the gear lever is equipped with a removable cup holder for easy use of teacups, beverages, or other objects of different sizes.

The cup holder behind the gear lever can only be used by pushing the cover backward.

Front cup holder (Type 2)

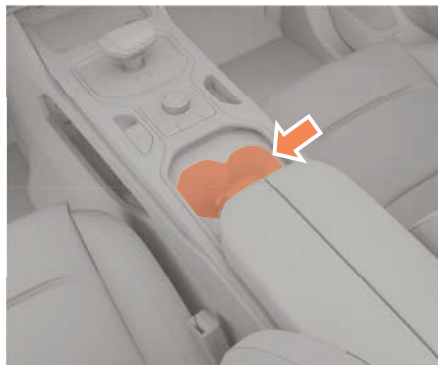

The sub-dash panel is designed with a cup holder for placing teacups, beverages, or other objects. It can be used by pushing the cover of the cup holder backward.

! In case of spilling of the beverages, any sudden braking and starting should be avoided when using the cup holder. Hot drinks may cause scalding of the driver and occupants of the vehicle.

! Do not place open drink bottles on the cup holders while the vehicle is in motion! Otherwise, drinks could be spilled and damage the vehicle and the electrical equipment in any sudden braking.

Rear drink holder (If equipped)



There is a rear cup holder on the rear center armrest, which can be used after turning the center armrest backward.

Backup Power

Backup power for sub-dash panel




Backup power is located in a stowage compartment under the sub-dash panel. Backup power can be used to connect electrical equipment with a maximum limit of 120W.

Discharge platform


This vehicle is equipped with an external power discharge feature. You can use the V2L discharger (recommended to use the original manufacturer's accessory) by plugging it into the AC charging port to access a 220V household power supply. Additionally, you can also use the V2V discharger (recommended to use the original manufacturer's accessory) in conjunction with an interconnection device to enable vehicle-to-vehicle charging in situations where there is a temporary power deficit.

Discharge setting

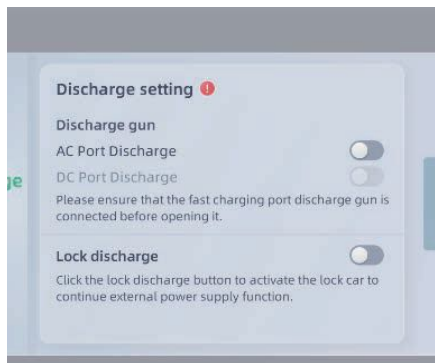

After plugging into the discharger, click on the multimedia display in turn:
■ - Energy center - Discharging setting.

In the discharge setting menu, you can enable or disable the lock discharge function. When this function is enabled, the vehicle can continue to provide power externally even after it is locked. This ensures vehicle security and prevents power supply from being interrupted due to automatic relocking.

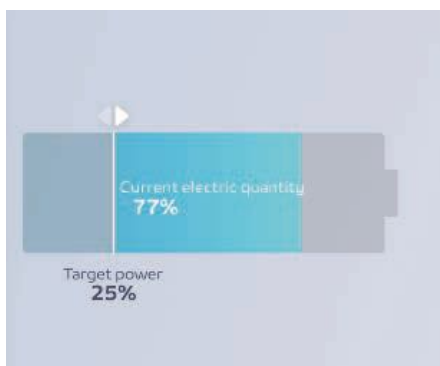

Move the target power scale left and right to set the discharging level. When the remaining power of the battery reaches the target power, it will stop discharging.



- If the charger is not plugged in, the multimedia display prompts that it will stop the external discharge function after a period of time.
- When the remaining power of the battery is less than 25%, the target power cannot be set and the external discharge function cannot be activated.
- After the vehicle is powered off, the lock discharge function is automatically switched off and needs to be reset when using.

Electronic lock

This vehicle is equipped with an electronic lock function for the AC discharger to prevent the unplugging of the charger while it is carrying a high current. It also serves as an anti-theft measure for the charger. The electronic lock is installed on the charging port and controls the extension and retraction of the cylindrical lock bolt to ena-

ble locking and unlocking.

Locking

The electronic lock automatically locks when you insert the charger and meet the charging conditions.

Unlocking

There are two ways to unlock:

1. When the start switch is in the OFF position, press the unlock button on the intelligent key or the central control unlocking key to unlock.
2. When the start switch is in the ACC/ON position, only the central control unlocking key is effective for unlocking. Use the central control unlocking key to unlock.
3. In case the key unlocking is not working, you can unlock it by pulling the emergency charging port cable.

3

Power supply for cargo compartment (If equipped)

GB standard type



1. Power switch

The power supply for the cargo compartment is located on the right side of the cargo area. Long press the power switch after unlocking the vehicle with the remote key or opening the door, the power indicator will illuminate, in-

Meter and Control

dicating that the cargo compartment power supply is now providing 220V AC power. Press the power switch again, and the power indicator will turn off, indicating that the cargo compartment power supply is disconnected.

The 6-plug cargo compartment power source includes two 220V 10A five-pin sockets, two 220V 16A three-pin sockets, and two 12V 120W DC power supply outlets.

European standard type



1. Power switch

The power supply for the cargo compartment is located on the right side of the cargo area. Long press the power switch after unlocking the vehicle with the remote key or opening the door, the power indicator will illuminate, indicating that the cargo compartment power supply is now providing 220V AC power. Press the power switch again, and the power indicator will turn off, indicating that the cargo compartment power supply is disconnected.

The 6-plug cargo compartment power source includes four 220V three-pin sockets and two 12V 120W DC power supply outlets.




- When using the AC 220V discharge function: the starting current of the motor (Inductive load) is greater than 3 times the rated current. Therefore, overload protection of the vehicle is triggered due to too much current when using electrical equipment such as cable drilling, electric hand drills, cutting machines, chainsaws, hair dryers, locked-rotor, and low power switching to high power.
- Before connecting the electrical equipment, the vehicle discharging function is switched off. After the discharging function is switched on and the voltage to stabilize the output, connect the electrical equipment and gradually increase the power (Such as the hair dryer, gradually moving the cold air to the warm air).
- During the discharging, in the event of an abnormal power failure of the electrical equipment, disconnect the electrical equipment from the vehicle first; After the vehicle has been discharged and restarted with a stable voltage output, reconnect the electrical equipment and run it on a low power gear as far as possible.



- When using the discharging function, keep children away from the power supply and discharging equipment of the cargo compartment to prevent accidental electric shock. This can cause serious accidents and fatal injuries.
- Never use the power supply for the cargo compartment in situations where water may enter the panel (Such as using the discharging function outdoors in rainy weather) to avoid leakage accidents.
- After using the power supply for the cargo compartment, switch off the power and keep the socket dry and clean to prevent serious or fatal injuries.
- Please choose the 10A and 16A sockets according to the electrical appliance. The 10A and 16A sockets cannot be mixed. Do not force operation! This can cause socket damage and electrical appliances to burn out, and in severe cases, circuit overload causes fire.

USB Port

Front USB port (Type I)

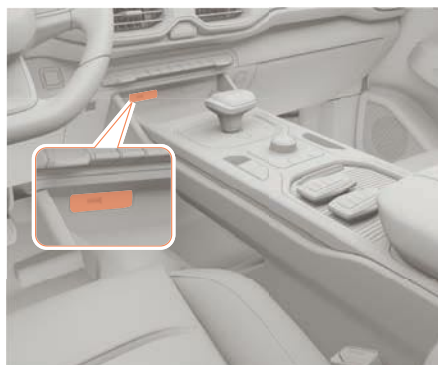

3


Front USB port (Type II)



The vehicle is equipped with one USB port in the front of the sub-dash panel for data transmission and charging.

Meter and Control

Rear USB port (If equipped)

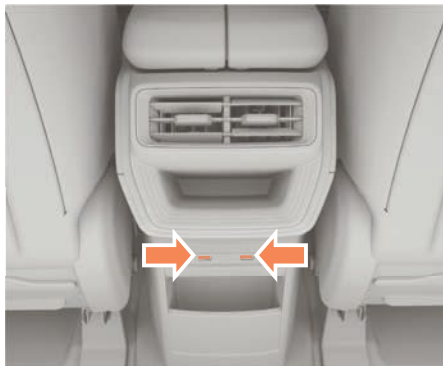

There are two USB ports on the back of the sub-dash panel for charging.

 Never use the USB port to connect high-powered electrical equipment.

Interior Handles



The vehicle is equipped with interior handles on both the driver side and passenger side, as well as on both sides of the rear seats, for passengers to use in special situations. There is a spring mechanism inside the interior handles, which will automatically return to its original position when released.

Coat Hook



Both rear grab handles in the vehicle are equipped with coat hooks for the convenience of passengers.

 Do not hang heavy objects on the coat hook as this may cause damage.

 Do not hang clothes with hangers on the hook, otherwise it will affect the protective effect of the safety curtain airbags

Magazine Pocket



Magazine pocket is located on the back of the front seat and is used to store small items such as newspapers and maps.

 Do not place any heavy or sharp objects in the magazine pocket to prevent damage.

Cargo Compartment



1. Unlocking switch for the tailgate of the cargo compartment

The cargo compartment is suitable for loading larger or heavier objects. After the tailgate is pre-unlocked, press the unlocking switch for the tailgate of the cargo compartment and pull it back to open the tailgate for easy loading and unloading. Push back the tailgate of the cargo compartment hard to lock it.

 For detailed information about pre-unlocking of the tailgate, please refer to the section "Opening and Closing Tailgate" in the chapter "Starting and Driving".

Loading heavy objects

Objects in the loading area will move in the event of a traffic accident or emergency braking. Therefore, the object should be placed as far forward as possible and fixed with the help of ropes and hooks as much as possible.

Loading higher objects

When loading higher objects, the height of the objects must not exceed the height of the vehicle. At the same time, fix the objects on the vehicle to ensure driving safety.

Loading larger objects

When loading larger objects, the length of the objects must not exceed the size of the cargo compartment. At the same time, fix the objects on the vehicle to ensure driving safety.

3

Exterior Equipment

Roof Carrier



Roof carriers are located on both sides of the roofs.


i The roof carrier of this vehicle is a load-bearing roof carrier with a static carrying capacity of 50 kg. Considering that full acceleration, sudden braking, and fast cornering during driving will cause additional load on the roof carrier, please reduce the weight according to actual driving habits. Always strictly follow the relevant requirements for use. If damaged, please contact Geely Automobile Service Center.

Heating, Ventilation and Air Conditioning

Front Air Conditioner Control System

Multimedia electric air conditioning control

This type of air conditioning can only be controlled through a multimedia display.

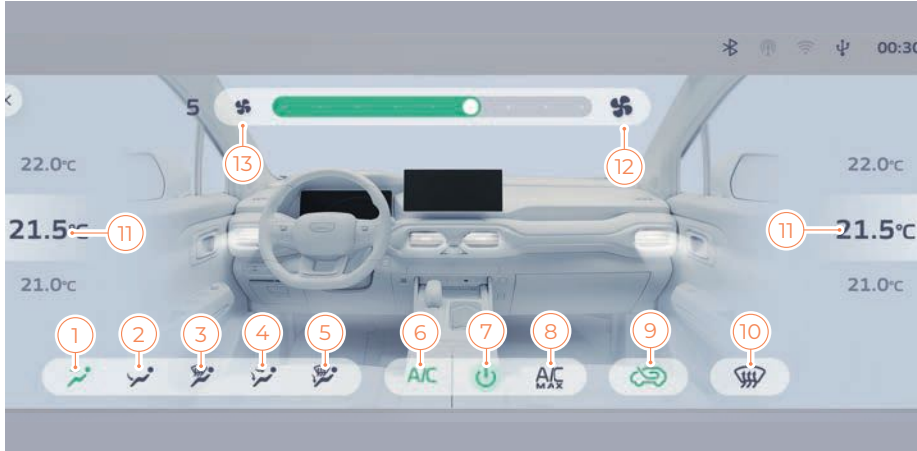

- | | |
|------------------------------|--|
| 1. Face mode button | 8. A/C MAX button |
| 2. Foot mode button | 9. Fresh/Circulating air button |
| 3. Window mode button | 10. Front windshield defrosting and defogging button |
| 4. Face + Foot mode button | 11. Temperature adjustment button |
| 5. Foot + Window mode button | 12. Air volume increase button |
| 6. A/C button | 13. Air volume decrease button |
| 7. ON/OFF button | |

i In the controls for the air conditioning system on the multimedia display, the buttons for face mode button, foot mode button and window mode button can be used separately.

Air Conditioning System

Description

1. Face mode button

Press this button, and when the indicator lamp lights up, face mode is activated.

2. Foot mode button

Press this button, and when the indicator lamp lights up, foot mode is activated.

3. Window mode button

Press this button, and when the indicator lamp lights up, window mode is activated.

4. Face + Foot mode button

Press this button, and when the indicator lamp lights up, face +foot mode is activated.

5. Foot + Window mode button

Press this button, and when the indicator lamp lights up, foot + window mode is activated.

6. A/C button

Press this button, when the button indicator is on, the cooling function of the air conditioner compressor is enabled.

7. ON/OFF button

When the air conditioner system is working, press this button and the air conditioner system is switched off.

8. A/C MAX button

Press the button, and when the button indicator is on, you can quickly cool down.

9. Fresh/Circulating air button

Press this button to switch between the outer loop and inner loop modes. When in inner loop mode, the button indicator lights up. The inner loop mode enables the inter-

nal circulation of air in the vehicle, helping to quickly cool or heat the air in the car and prevent outside air and odors from entering.



Using the air recirculation mode over a long period may cause the air inside the vehicle to be dirty or the glass to fog.

10. Front windshield defrosting and defogging button

After the defrosting and defogging function is enabled, the wind blows the front window and switches to the outer loop mode. After the AC is turned on, pressing the wind speed adjustment button in the defrosting/defogging state will increase or decrease the wind speed accordingly, and the air discharge mode will keep blowing the front windshield. When switching off the defrosting and defogging function, the blower speed and air distribution mode return to the original setting.

11. Temperature adjustment button

To adjust the temperature inside the vehicle, moving down decreases the temperature, while moving up increases the temperature. The temperature adjustment button adjusts each bar to 0.5°C. The temperature setting range of the air conditioner is 17.5°C-31.5°C. Temperatures set above 31.5°C will display as HI, and temperatures set below 17.5°C will display as LO.

12. Air volume increase button

Press this button to power on the fan or increase the fan speed. When the fan is at level 8, further attempts to increase the fan speed will be ineffective.


Air Conditioning System

13. Air volume decrease button

Press this button to power on the fan or decrease the fan speed.


When the fan is at level 1, further attempts to decrease the fan speed will be ineffective.

Dash panel automatic dual-zone air conditioning control

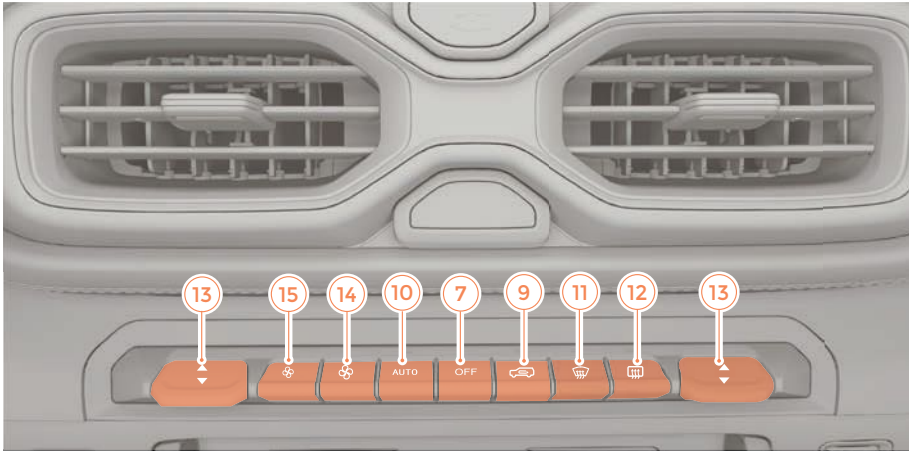

4

Multimedia automatic dual-zone air conditioning control

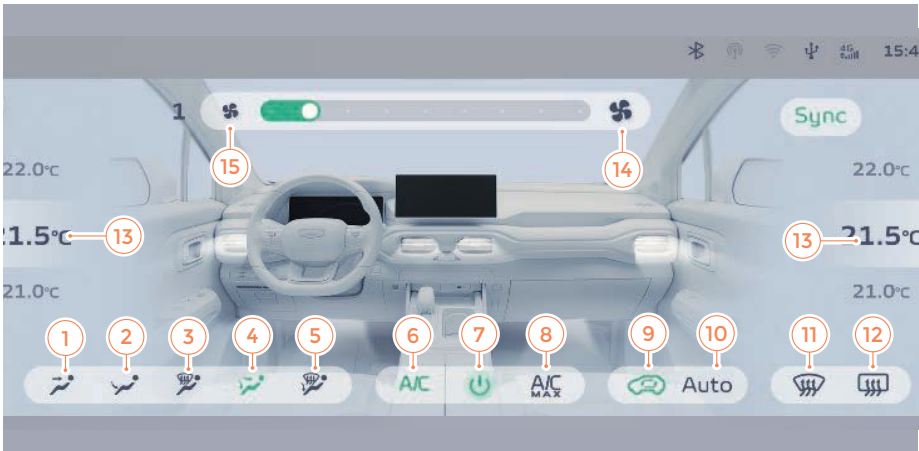

1. Face mode button

2. Foot mode button

3. Window mode button

4. Face + Foot mode button

5. Foot + Window mode button

6. A/C button

7. ON/OFF button

8. A/C MAX button

9. Fresh/Circulating air button

10. AUTO button

11. Front windshield defrosting and defogging button

Air Conditioning System

- 12. Rear windshield/Exterior rearview mirror defrosting button
- 13. Temperature adjustment button
- 14. Air volume increase button
- 15. Air volume decrease button

 In the controls for the air conditioning system on the multimedia display, the buttons for face mode button, foot mode button and window mode button can be used separately.

Description

- 1. Face mode button
Press this button, and when the indicator lamp lights up, face mode is activated.
- 2. Foot mode button
Press this button, and when the indicator lamp lights up, foot mode is activated.
- 3. Window mode button
Press this button, and when the indicator lamp lights up, window mode is activated.
- 4. Face + Foot mode button
Press this button, and when the indicator lamp lights up, face +foot mode is activated.
- 5. Foot + Window mode button
Press this button, and when the indicator lamp lights up, foot + window mode is activated.
- 6. A/C button
Press this button, when the key indicator is on, the cooling function of the air conditioner compressor is enabled.
- 7. ON/OFF button
When the air conditioning system is working, press this button and the air conditioner system is switched off.
- 8. A/C MAX button
Press the button, and when the button indicator is on, you can quickly cool down.

- 9. Fresh/Circulating air button

Press this button to switch between the outer loop and inner loop modes. When in inner loop mode, the button indicator lights up. The inner loop mode enables the internal circulation of air in the vehicle, helping to quickly cool or heat the air in the car and prevent outside air and odors from entering.



Using the air recirculation mode over a long period may cause the air inside the vehicle to be dirty or the glass to fog.

- 10. AUTO button

Press the button, when the button indicator light is on, the air conditioning system will enter the automatic control state according to the set temperature.

- 11. Front windshield defrosting and defogging button

After the defrosting and defogging function is enabled, the wind blows the front window and switches to the outer loop mode. After the AC is turned on, pressing the wind speed adjustment button in the defrosting/defogging state will increase or decrease the wind speed accordingly, and the air discharge mode will keep blowing the front windshield. When switching off the defrosting and defogging function, the blower speed and air distribu-

tion mode return to the original setting.

12. Rear windshield/Exterior rearview mirror defrosting button

Press this button to turn on or off the rear windshield/external rearview mirror defrosting function. When the rear windshield/external rearview mirror defrosting function is turned on, the button indicator lights up. Press this button again to switch off the rear window heating function.

 Do not use a scraper or sharp tool to remove condensation or other substances from the inside of the front windshield and rear windshield. Otherwise, the rear windshield fogger grille may be damaged. Repairs resulting from this are not covered by the warranty. Make sure all objects are at a safe distance from the vehicle windows.

13. Temperature adjustment button

To adjust the temperature inside the vehicle, moving down decreases the temperature, while moving up increases the temperature. The temperature adjustment button adjusts each bar to 0.5°C. The temperature setting range of the air conditioner is 17.5°C-31.5°C. Temperatures set above 31.5°C will display as HI, and temperatures set below 17.5°C will display as LO.


14. Air volume increase button

Press this button to power on the fan or increase the fan speed. When the fan is at level 8, further attempts to increase the fan speed will be ineffective.

15. Air volume decrease button

Press this button to power on the fan or decrease the fan speed. When the fan is at level 1, further attempts to decrease the fan speed will be ineffective.

Ambient Light and Sunlight Sensor (If Equipped)

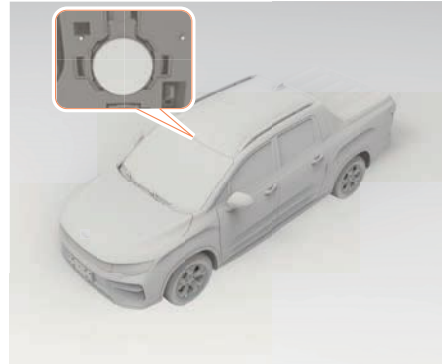

4

The ambient light and sunlight sensor behind the front windscreen sends information about the measured sunlight radiant intensity, then the air conditioning system evaluates it to control the temperature in the vehicle. At the same time, the signals collected by the sensor are also used to turn the automatic lights on and off.

 Keep the sensor clean and do not place foreign articles such as labels on. Otherwise, the automatic temperature control system and automatic lighting will not work properly.

Air Conditioning System

Air Conditioning and Ventilation System


Air inlet



Clear any obstructions from the air inlet under the front grille to ensure proper airflow into the vehicle.

Air outlet


Front air outlet

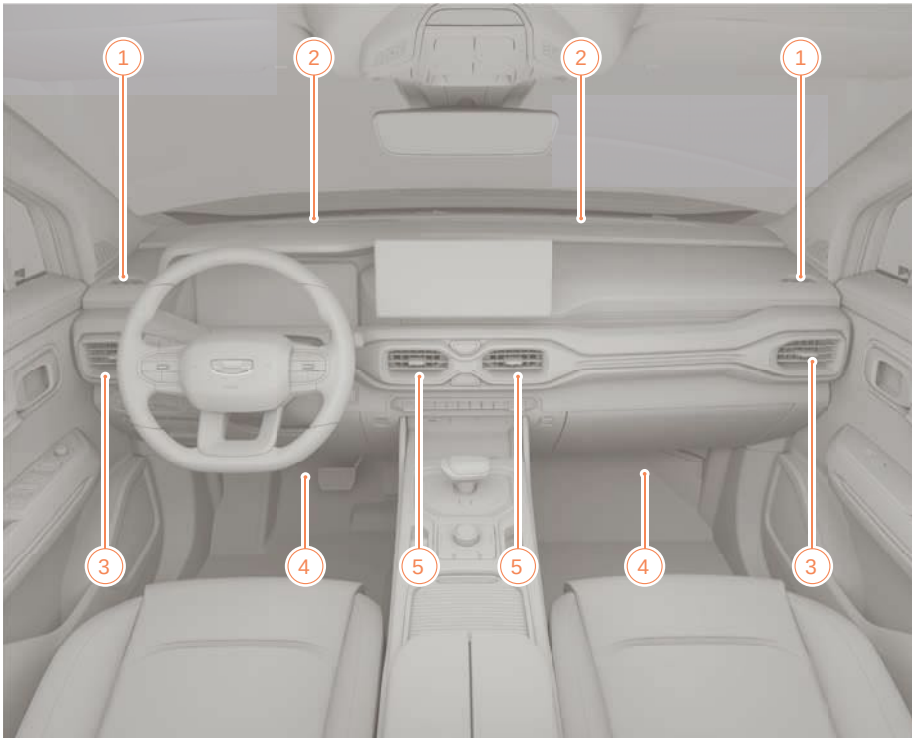

- | | |
|---|----------------------------|
| 1. Vent for side window defrosting | 4. Vent for front footwell |
| 2. Vent for the front window defrosting | 5. Middle vent |
| 3. Side vent | |

Air Conditioning System

Rear air outlet

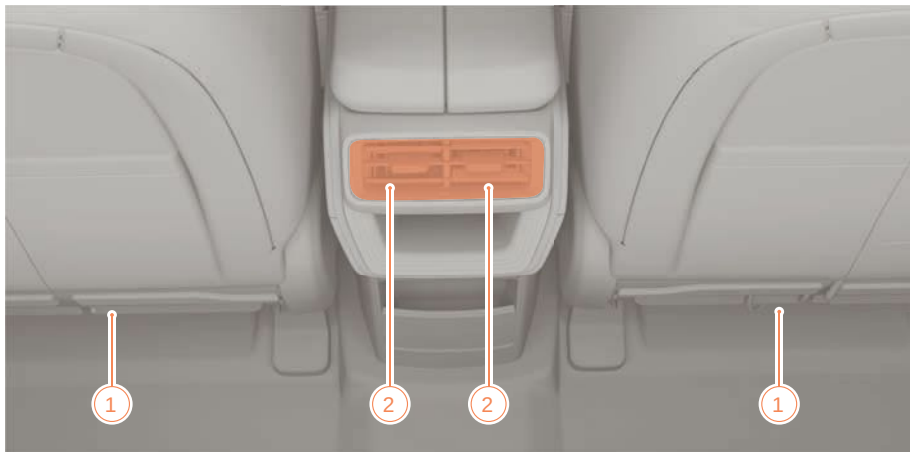


1. Vent for rear footwell

2. Rear vent (If equipped)

Vent Adjustment


Adjust the vent

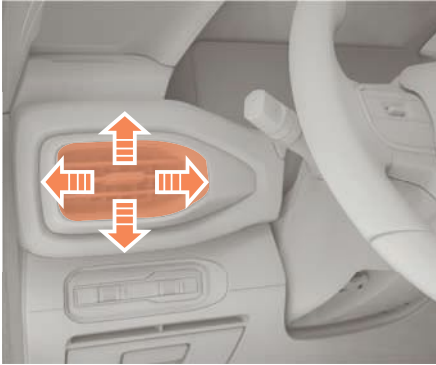

Change the direction of the airflow by adjusting the grille in the up, down, left, and right directions.

Air Purification System

Air conditioning filter

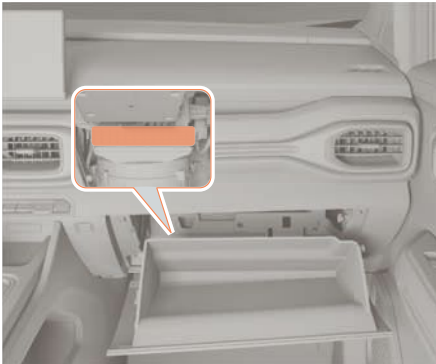

Air conditioning filter is located at the rear of the stowage compartment. The filter can effectively block and filter very small particles ($0.3\mu\text{m}$ level) such as dust, pollen, and dust inhaled into the vehicle from the outside, and has a sterilization function. To maintain optimal filtration, check and replace the filter element regularly in accordance with the Warranty Maintenance Manual.

Air conditioning system maintenance

- If the vehicle is parked under direct sunlight for a long time, the temperature in the vehicle can rise very high. In this case, open all windows first to let the hot air out of the vehicle and switch on the Max A/C function. When the interior temperature becomes cooler, close the windows and adjust the interior temperature as required or simply press the AUTO.
- In wet weather, cold air should not be blown directly into the front windscreen to avoid condensation on the window due to the temperature difference between the inside and outside of the window.
- When driving on dusty roads, close all windows and it is recommended to keep the air recirculation mode running.
- Do not smoke when the air conditioning is working, otherwise, it will cause eye stinging.
- Do not let leaves or other debris block the air inlet.
- Keep the underside of the front seats clear to facilitate air circulation.

4

Long-term storage

If the vehicle is to be stored or not used for more than two weeks, leave the air conditioning system running for five minutes at idle in the exterior air recirculation mode and maximum air flow mode. This allows the air conditioning system to be fully lubricated and minimizes the possibility of damage to the air conditioning system when the system starts up again.

Air Conditioning System

Seats


Front Seat

Adjust the front seat head restraints



Adjust the head restraints so that the upper edge of the head restraints is equal to the top of the head. This can reduce the risk of neck injury in the event of accidents.

! Correctly install and adjust the head restraints before driving to avoid serious injury or death in the event of an accident.

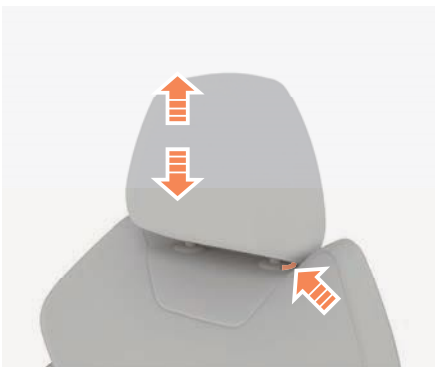

To adjust the head restraints height, simply lift it up; Press and hold the adjustment button on the side of the


head restraints to adjust them to the desired height, then release the button. Gently press or lift the head restraints again until you hear a click to ensure the head restraints is stuck in place.

! Do not adjust the seat while the vehicle is in motion. This can cause the vehicle to lose control, greatly increasing the risk of accidents.

Electrically adjustable driver seat

The driver seat can be electrically adjusted in six directions, and the adjustment switch is located on the left side of the seat.

! Do not place anything under the electric seat or deliberately hinder the adjustment of the seat, otherwise it can lead to damage the electric seat.

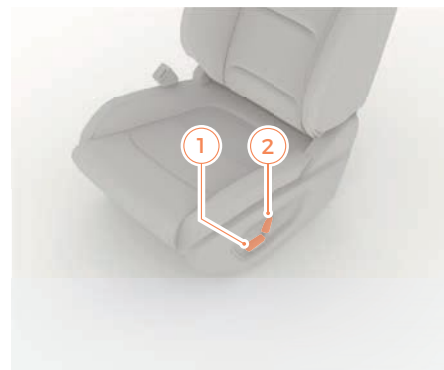

1. Seat back and forth/height adjustment switch
2. Backrest angle adjustment switch

Seats and Protective Devices

Adjust the seat back and forth



Press the switch in the direction of arrows to adjust the seat back and forth.

! Under normal temperature conditions (25 °C), if the movement motor experiences overheating protection and cannot operate, it will automatically reset after a period of time.

Adjust the backrest angle



Press the switch in the direction of arrows to adjust the tilt of the backrest.

Manually adjust the front passenger seat (If equipped)

The front passenger seat can be adjusted in four directions, and the adjustment lever and rod are located on the right and front sides of the seat respectively.

Adjust the seat height



Press the switch in the direction of arrows to adjust the seat height.




1. Seat back and forth adjustment lever
2. Backrest angle adjustment handle

The front passenger seat adjustment method is the same as the manual adjustment for the driver seat, including the seat back and forth adjustment and the backrest angle adjustment.

Electrically adjust the front passenger seat (If equipped)

The front passenger seat can be electrically adjusted in four directions, and the adjustment switch is located on the right side of the seat.

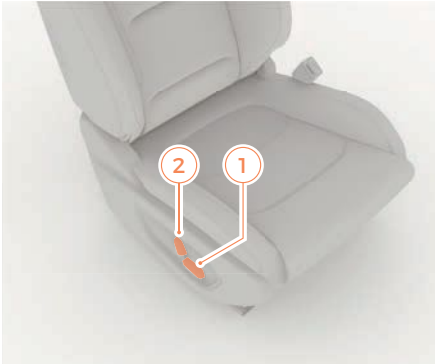

1. Seat back and forth adjustment switch
 2. Backrest angle adjustment switch
- Adjust the seat back and forth



Press the switch in the direction of arrows to adjust the seat back and forth.

Adjust the backrest angle



Press the switch in the direction of arrows to adjust the tilt of the backrest.

! Under normal temperature conditions (25 °C), if the backrest angle adjustment motor experiences overheating protection and cannot operate, it will automatically reset after a period of time.

Rear Seat

Adjust the rear seat head restraints



The head restraints can be adjusted upwards by lifting them upwards directly; Press the adjustment button on the side of the head restraints and the

Seats and Protective Devices

head restraints can be moved downward until a click is heard to ensure the head restraints are stuck in place. Press and hold the adjustment button to install or remove the head restraints.

i Some models do not have rear middle seat restraints.

Fold the rear seat backrest



There is a collapsible belt on the right side of the rear seat backrest. Put the rear seat head restraints in the lowest position, pull the collapsible belt up as far as possible, release the rear seat, and fold the rear seat into place.



After the seat backrest is folded, ensure that there is a certain space between the rear seat head restraints and the front seat.

Fold back the rear seat backrest

To turn the rear seat backrest to its original position, fold back the rear seat backrest and push back hard until you hear it lock.

Fold the rear seat cushion



The rear seat cushions have a 4/6 folding function, and collapsible belts are installed on each side. Pull the collapsible belts up as far as possible, and the corresponding cushion automatically turns up completely.

! When pulling out the collapsible belts, the rear seat cushion will turn up quickly. Please hold the seat cushion to slowly turn up to avoid unnecessary losses.

i If the collapsible belts are not completely pulled to the end, the corresponding side cushion will not be completely turned up; To turn it up completely, pull the collapsible belts again.


Fold back the rear seat cushion

To turn the cushion to its original position, pull out the collapsible belts and move the seat cushion backwards, and press downwards hard until you hear it lock.

! When the vehicle is in motion, the occupant is not allowed to sit on the folded seat, and the seat should be used safely. When the seat backrest is restored to the initial position, the following precautions should be observed to prevent injury in the event of a collision or emergency brake:

- Push the top of the seat backrest forward and backward to ensure the seat backrest is firmly locked. Otherwise, it will affect the normal operation of the seat belt.
- Make sure the seat belt is not twisted or clamped under the seat but is placed in place for use.
- When the seat cushion is folded and locked, move the latches forward to the lowest position.

Seat Adjustment Parameter

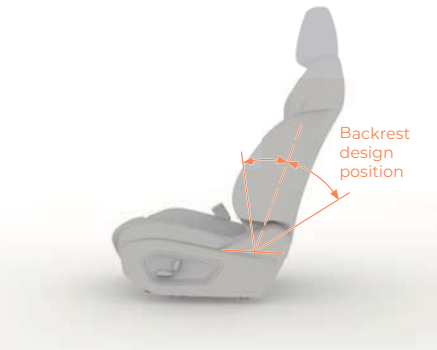

When the seat is in the original position, the adjustment parameters of the seat (When measuring cushion depth) are as follows:

Item		Parameter
Driver seat	Up and down adjustment	Total stroke 55 mm (27.5 mm upward, 27.5 mm downward)
	Back and forth adjustment	Total stroke 220 mm (190mm forward, 30mm backward)
	Backrest adjustment	Total stroke 88° (30° forward, 58° backward)
Front passenger seat	Back and forth adjustment	Total stroke 220 mm (190mm forward, 30mm backward)
	Backrest adjustment	Total stroke 88° (30° forward, 58° backward)

Seat Belt

Overview of Seat Belt


! Improperly wearing a seat belt or not wearing a seat belt can cause serious injury or death!

No occupant is allowed to sit in the area without seat and safety belt or on the seat with damaged safety belt.

All occupants should properly fasten their seat belts while driving. Proper seat belt usage can significantly reduce the severity of injuries in case of emergency braking or an accident.

Why are Seat Belts Protective


When the occupant sits inside or on an object, the occupant shares the same speed as the object.

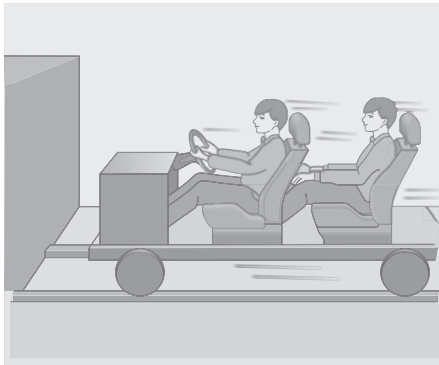

Consider the vehicle as a seat with wheels shown in the illustration above. Let the occupants sit on it, speed it up and stop again, the occupants on the vehicle won't stop.



The occupants continue to move forward at the speed before the collision until the movement is stopped by an object. In a real case, the object might be hard objects such as windscreen, dash panel, or seats.

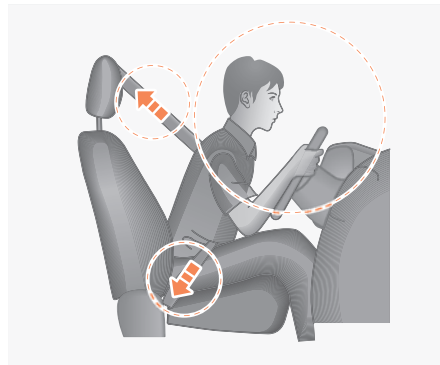

When the seat belt is fastened, the occupant slows down with the vehicle. The occupants will have more time and longer distances to stop the movement.

Correct sitting position

The importance of the correct sitting position

Proper seating posture is crucial for the optimal functioning of seat belts and airbags. The driver and front seat passenger can make various adjustments to their seats based on their body re-

quirements. Correct sitting posture ensures:


- Precise, effective, and safe vehicle control.
- Proper support for the body, preventing driver fatigue.
- Maximizing the protective capabilities of seat belts and airbags.



When driving, do not tilt the seat backrest too much, put your head or arms out of the window, or lean forward too close to the airbag to avoid serious injury or death.

Correct sitting position of the driver

The correct sitting position of the driver is essential for safe driving. The recommended adjustments for the driver are as follows:

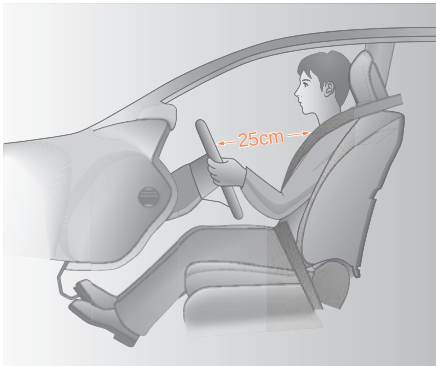


- Adjust the steering wheel so that the distance between the chest and the steering wheel is at least 25 cm.
- Adjust the front and rear positions of the driver seat so that the driver can effectively press the pedals to the bottom.
- Adjust the seat backrest to the upright position so that the back can be fully fitted with the backrest.
- The head restraint should be properly

adjusted according to height.

- Wear the seat belt correctly.

Correct sitting position of the front seat passenger

The recommended adjustments for the front seat passenger are as follows:

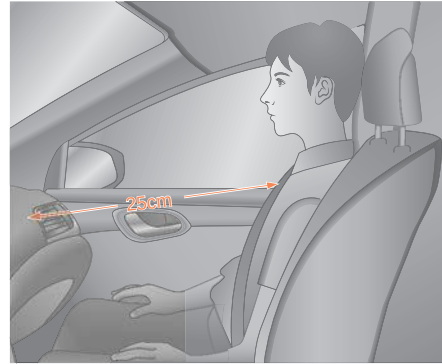


- The front passenger must be no less than 25 cm from the dash panel.
- Adjust the seat backrest to the upright position so that the back can be fully fitted with the backrest.
- Properly adjust and fasten the seat belt.

5

How to fasten the seat belt correctly

This section is for adults only.

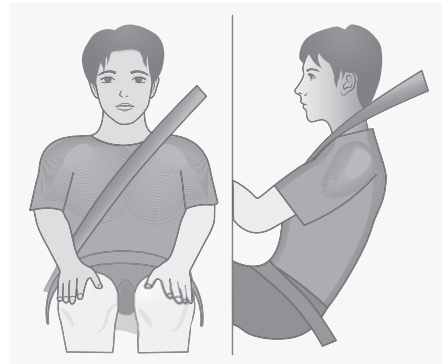

Seat belts have different protection

Seats and Protective Devices

regulations and special requirements for children and infants. For detailed information, refer to “Senior children” or “Infants and toddlers” in this chapter. All occupants should wear their seat belts to avoid injury in the event of traffic accidents.


Sit up straight and keep both feet in their respective foot space at all times while driving. The lap belt should be positioned low and snugly across the hips for added stability, preventing occupants from shifting during sudden movements and reducing the risk of severe injury in case of a traffic accident. The shoulder belt should go over the shoulder and must be placed in a suitable part of the chest. In case of emergency braking or accidents, the shoulder belt locks to protect the occupant.

How do pregnant women use seat belts




Pregnant women should wear seat belts correctly, positioning the lap belt as low as possible below the protruding abdomen. Sitting upright and positioning themselves away from the steering wheel or dashboard can reduce the risk of injury to both the pregnant woman and the fetus in case of a collision or airbag deployment.

Three-point seat belt

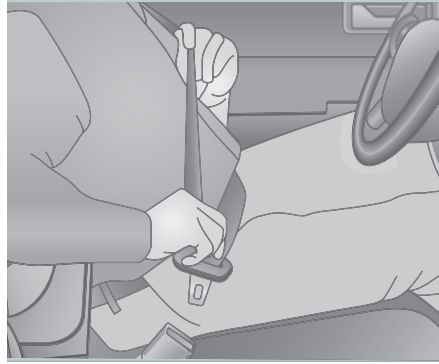

1. Pick up the latch plate and pull the safety belt across your body. Do not kink the safety belt.

The three-point safety belt may be locked when being pulled over body too fast. Then, the safety belt can be unlocked by shrinking it a little, and then pull the safety belt across your body.

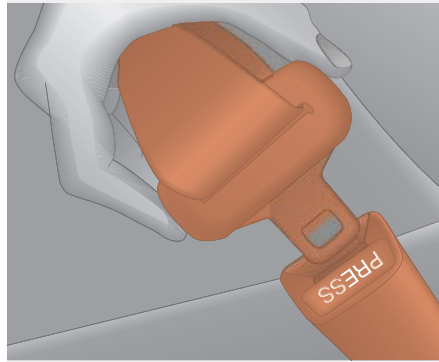


2. Press the latch plate into the belt buckle until you hear a click.

Pull the latch plate to ensure it is locked. Ensure the position of the release button on the latch plate so that the seat belt can be quickly unbuckle if necessary. If the shoulder belt height adjuster is equipped, adjust it to the appropriate height

“Shoulder Belt Height Adjuster” in this chapter.

3. Pull the shoulder belt up to tighten the crotch part.

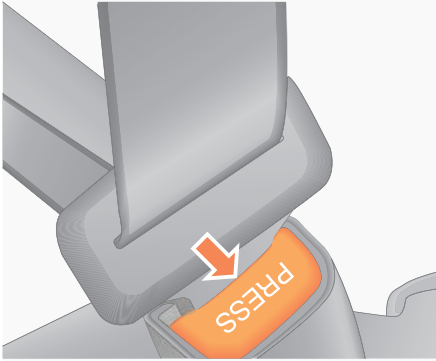

4. Press the red button on the latch plate to unbuckle the seat belt. The seat belt should be rolled back to its original position.

! Take care to prevent foreign objects such as food scraps, nut shells, buttons, coins, viscous liquid from falling into the safety belt buckle. It may lead to the failure of the reminder function of unfastened safety belt and the locking or unlocking function of the buckle.

! It is forbidden to insert objects other than the vehicle's latch plate into the buckle, otherwise, it may cause the buckle to malfunction. This will reduce the protective effect of the safety belt and may cause serious casualties.


! In order to prevent the seat belt from being rewound back too fast and hurting the occupants or getting stuck, please return the seat belt to its original position after unbuckling the seat belt.

! Before closing the door, make sure that the seat belt is not trapped by the door. Otherwise, the seat belt and door will be damaged.

Rear middle seat belts


The rear middle seat belt is a three-point belt, and the operation of wearing and unbuckling is as follows:

1. Insert the seat belt latch plate 1 into the left buckle of the rear middle seat; Then insert the seat belt latch plate 2 into the right buckle of the rear middle seat.

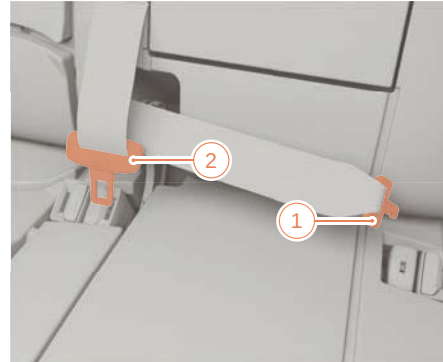

2. Press the right seat belt buckle of the middle rear seat, unbuckle the middle rear seat belt latch plate 2, then turn up the rear seat cushion assembly. Insert the seat belt latch plate 2 into the buckle to release the seat belt latch plate 1, and recover the rear seat belt assembly.

Seats and Protective Devices

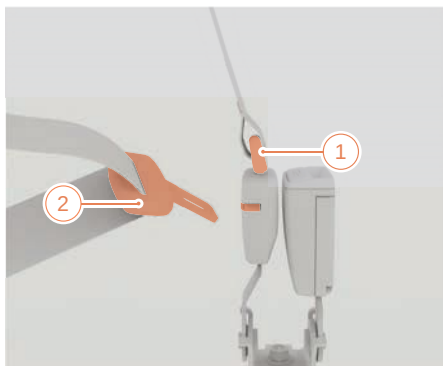

Shoulder belt height adjuster

The vehicle is equipped with a shoulder belt height adjuster in the driver and front passenger seats.

The shoulder belt must be in the center of the passenger's shoulder. The seat belt should be kept away from the face and neck and should not slip under the shoulder. Incorrectly adjusting shoulder belt height can reduce the effectiveness of seat belts in protecting occupants in the event of accidents.



Press the button as shown in the image above and adjust the height adjuster to the desired position. The adjuster moves up by pressing the button and pushing up the slider control. After adjusting the adjuster to the desired position, release the button and try to

move the adjuster down to make sure it is locked in place.

Seat belt warning lamp

The vehicle is equipped with a seat belt warning light and buzzer for the driver seat and front passenger seat to remind the driver and front passenger to fasten their seat belts.

Warning lamp and buzzer

- When the start switch is in ON, if the vehicle is driven at a speed of less than or equal to 10 km/h and at a distance of less than or equal to 300 meters, or when the gear is in position R, and the driver or occupant doesn't fasten the seat belt, the seat belt warning lamp lights up. The warning lamp goes out when the driver and occupant have fastened their seat belts.
- When the vehicle is driven at a speed greater than 10 km/h and less than or equal to 25 km/h or at a distance greater than 300 meters, if the driver or occupant's seat belt is not fastened or the fastened seat belt is unbuckled, the warning lamp flashes and the buzzer alerts with a level-1 sound until the seat belts are fastened, then the warning light goes out and the buzzer stops.
- When the vehicle is driven at a speed greater than 25 km/h, if the driver or occupant's seat belt is not fastened or the fastened seat belt is unbuckled, the warning lamp flashes and the buzzer alerts with a level-2 sound until the seat belts are fastened, then the warning light goes out and the buzzer stops.

 Ignoring the warning lamp, prompts, and warning instructions may result in serious injury, vehicle damage, or traffic accidents.

Correct use of seat belts can reduce the risk of injury during emergency braking and traffic accidents. Therefore, always properly fasten seat belts while the vehicle is in motion.

Seat Belt Maintenance and Replacement

System check for seat belt

Check your seat belt system regularly:

- Check that the warning lamp, seat belts, latch plates, buckles, retractors, and fixtures are working properly.
- Check the belt system for other loose or damaged parts that may affect the proper functioning of the seat belt system.
- If the seat belt is cracked or worn, replace it immediately.
- Make sure the warning light is working properly.
- Verify whether the seat belt is clean and dry.

Seat belt maintenance

Keep the seat belt clean and dry.

 Avoid using bleach or staining the seat belt as it can significantly weaken the integrity of the seat belt. In the event of a collision, the seat belt may not provide adequate protection. Clean the seat belts with mild soap and warm water only. Ensure that the seat belt is completely dry before using it again.

Seat belt replacement

After an accident, go to the Geely Automobile Service Center to check or replace the seat belt assembly. Replace and repair the parts even if the seat belt system is not in use at the time of the accident.

 In the event of a collision, the seat belt system inside the vehicle may be damaged. It is essential to promptly visit the Geely Automobile Service Center for replacement.

Airbag

Overview of Airbag

The airbag is one part of the passive safety system and never replace seat belts. Otherwise, it will not be able to play its protective role effectively in the event of an accident.

 Without seat belts, rapid inflation and deployment of airbags can lead to more serious injuries. Therefore, all occupants should fasten their seat belts while driving.

Airbags do not trigger in all accidents due to factors such as the position and angle of impact, the degree of impact, and the characteristics of the collider. The airbag triggers with great force, so the driver and front seat passenger should adjust the seat to the front airbag at a sufficient distance and fasten the seat belt to avoid serious injuries.

 There must be no obstacles in the inflating area where the airbag triggers. Nothing should come between the occupant and the airbags. If there is an obstacle between the occupant and the airbags, the airbags may not inflate properly, or throw objects at the occupant when it is activated. This may lead to serious injuries or fatal death.

Do not touch the airbags after expanding to avoid burns.

When the airbags are triggered, a small amount of smoke may be released, which may irritate the skin and eyes. Please seek medical attention in case of serious discomfort.

 Do not maintain, repair, or replace any part of the airbags system without authorization. Otherwise, the system may fail to work properly, resulting in serious injury or death.

The airbags can only trigger once! If the airbags have been activated, it must be replaced immediately at the Geely Automobile Service Center.


 Due to its considerable speed and force, do not let infants and children hold them in the front seat, so as to avoid serious injury or death.

Location of Airbags

Front airbags

When a frontal collision occurs, the front airbag combined with the seat belt can effectively protect the driver and front passenger from the frontal impact injury.

In the event of a moderate to severe frontal collision or near-frontal collision with the vehicle, the airbag system trigger condition is met, causing the airbag to fill with gas to cushion the driver and front passenger from the impact and prevent the driver and front passenger from hitting the steering wheel and dash panel directly.

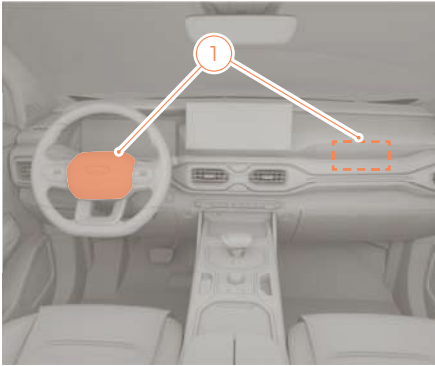

1. Installation position of front airbags
Two front airbags are respectively installed in the center of the steering wheel and in the dash panel, marked with the letters "AIRBAG".

 Frontal airbags are not designed for rear impact, slight frontal impact, or vehicle overturning, and are not triggered in emergency braking.

The expansion and contraction of the airbag takes place in a very short period of time and does not provide protection against the effects of a possible subsequent second impact.

To make full use of frontal airbag protection, all occupants must fasten their seat belts correctly and sit in the correct position when driving.

 Do not place any objects or pets in front of the dash panel or stowage compartment, or on the steering wheel with the airbag, which could occupy the airbag expansion space. This may cause serious injury or death to the occupant due to the impact of the high-speed expansion when airbags are triggered. Never add or modify, remove, strike, or open any front airbag component or wiring. This may cause the airbag to suddenly inflate or fail to function, leading to serious injury or death.

 Do not sit on the edge of the seat or lean on the dash panel while the vehicle is in motion. This may cause serious injury or death to the occupant who is leaning upright or very close to the airbag when it expands. The driver and front passenger must keep at least 25 cm away from the airbag.

 Contact the Geely Automobile Service Center immediately in the following cases:

- After the front airbags expand.
- The front of the vehicle was impacted, but the front airbags are not triggered.
- The front airbag cover is cracked, scratched, or otherwise damaged.

Side airbag

Based on the safety protection provided by seat belts, side airbags provide further protection for the driver and front passenger. In the event of a moderate to severe side impact, side airbags reduce injuries by inflating and working simultaneously with seat belts.

Seats and Protective Devices

Side airbags mainly help reduce chest injuries to the driver or front passenger.



Side airbags are installed inside the backrest of the driver seat and front passenger seat, marked with the letters "AIRBAG".

! Due to the considerable speed and force of the side airbag when expanded, never put the head, hands outside the window, or head close to the airbag expansion range when the vehicle is in motion, otherwise, it may cause serious injuries or death.

! Never install the seat cover on the seat equipped with the side airbag, otherwise, it will affect the normal function of the side airbag.

! Contact the Geely Automobile Service Center immediately in the following cases:

- Side airbags are triggered.
- The door was impacted, but the side airbags are not triggered.
- When the front pillars, rear pillars, roof side beam decorations, or headliner containing side curtain airbags have been cracked, scratched, or otherwise damaged.

! Do not perform the following operations without inquiring the Geely Automobile Service Center personnel, so as not to affect the normal function of the side airbag:

- Installation of electronic equipment such as mobile two-way radio communication devices.
- Modifications to the side structure of the passenger side.

Side curtain airbag (If equipped)

Based on the safety protection provided by seat belts, side curtain airbags provide further protection for the front seat and the outside rear seat. In the event of a moderate to severe side impact, side curtain airbags reduce injuries by inflating and working simultaneously with seat belts. Side curtain airbags mainly help reduce head injuries to the driver, front passenger, and outside rear passenger.



Side curtain airbags are installed in the center of the steering wheel and in the dash panel, marked with the letters "AIRBAG".

! Due to the considerable speed and force of the side airbag when expanded, never put the head, hands outside the window, or head close to the side curtain airbag expansion range when the vehicle is in motion, otherwise, it may cause serious injuries or death.

! Never install any decorative parts around the side curtain airbags such as the windscreen, windows, side pillars, and roof sides, or attach microphones or any other devices to the interior of the roof and auxiliary handles. When the side curtain airbags are triggered, these items will be thrown out under the side curtain airbags expansion, resulting in injury or affecting the normal function of the side curtain airbags.

! Contact the Geely Automobile Service Center immediately in the following cases:


- Side curtain airbags are triggered.
- The door was impacted, but the side curtain airbags are not triggered.
- The side curtain airbags installed in the front pillars, rear pillars, and roof side trim, or roof have been scratched, cracked, or otherwise damaged.

! Do not perform the following operations without consulting with personnel from the Geely Automobile Service Center. Otherwise, it may affect the normal function of the side curtain airbags:

- Installation of electronic equipment such as mobile two-way radio communication devices.
- Modification of the vehicle suspension.
- Repairs near or involving the subframe.

Airbag deployment


Front airbag deployment

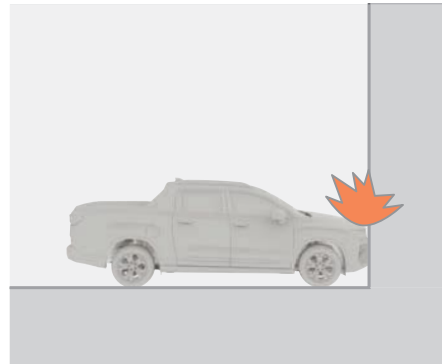

The front airbags expand in the event of a frontal collision with a solid wall at a speed of 25 km/h and above.


! In order to reduce the injury caused when the airbag is triggered, the seat belt must be fastened at all times while the vehicle is in motion. Keep safe distance between the driver and front passenger, and the airbags.

Seats and Protective Devices

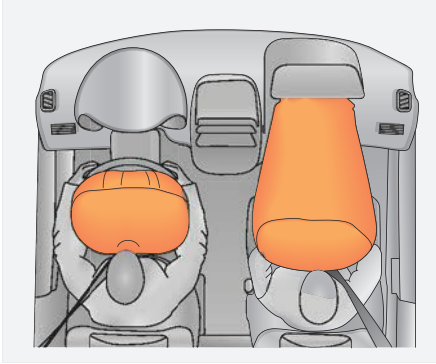

In the event of a collision, whether the airbag works depends on the collision object, the collision direction and the speed deceleration of vehicle caused by the collision. In case of severe frontal collision, the front airbag will deploy.

Deployment of side airbags and side curtain airbags (If equipped)

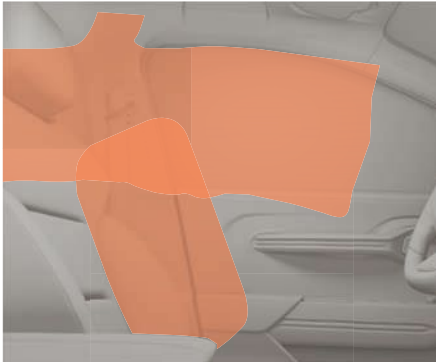


In the event of a moderate to severe side impact that meets the design criteria, the side airbags and side curtain airbags (If equipped) can be triggered.

The deployment of the side airbags and side curtain airbags in a side impact can significantly reduce the risk of injury to the upper body and pelvis.


Front airbags non-deployment scenarios




- Vehicles that are not started.
- Colliding with easily deformable objects such as trees.

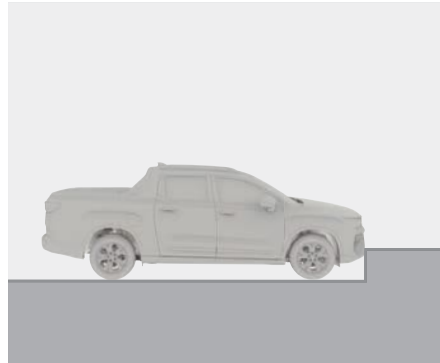

- Strong impact with low obstacle like curb while driving.

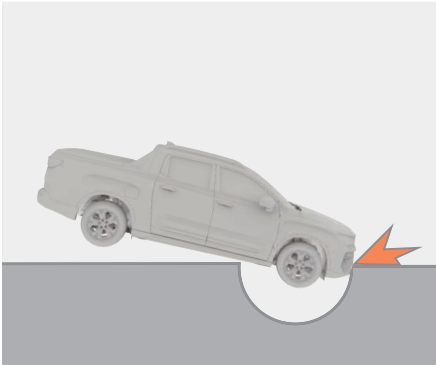

- Falling into a deep pit or ditch.

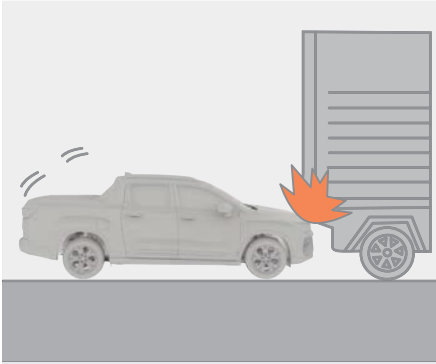


- Having a rear-end collision with a truck.




- Vehicle rollover.
- In a side impact, rear impact, or minor frontal collision.

- Faulty airbag system.
- Other special circumstances.

Side airbags and side curtain airbags non-deployment scenarios (if equipped)

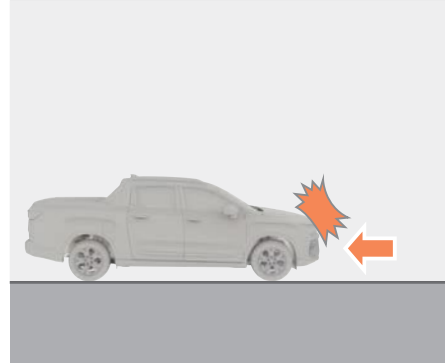

- In a front or near-frontal collision.

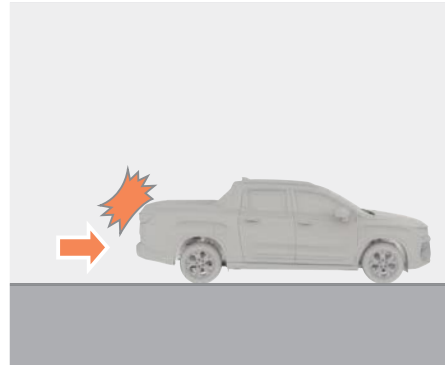

- In a rear collision.

Seats and Protective Devices



- Vehicle rollover.
- In a minor side impact.
- Faulty airbag system.
- Other special circumstances.

Airbag Maintenance and Replacement

Airbag fault warning lamp

i If the airbag fault warning lamp continues to light up after the vehicle starts or lights up while driving, it indicates a malfunction in the airbag system. This can lead to improper airbag deployment or deployment at inappropriate times. To avoid injuries, contact Geely Automobile Service Center as soon as possible.

Airbag replacement

! The collision may damage the airbag system in the vehicle. After the collision, go to the Geely Automobile Service Center promptly for a replacement.

Disposal of vehicles

When selling the vehicle, ensure that the new owner is aware of the replacement date of the airbag installed in the vehicle and the airbag system. If the vehicle is scrapped, the unexpanded airbag is a potential hazard, so it must be safely handled by a professional before being scrapped.

Installation of Child Seat Protective Devices

Selection of Child Seat Protective Devices

When all child seats are fixed with safety belts, the applicability information of child seats on each seat:

Group	Child weight	Front passenger seat	Rear outboard passenger seat	Rear middle passenger seat
0	<10KG	X	U	X
0+	<13KG	X	U	X
I	9-18KG	X	U	X
II	15-25KG	X	U	X
III	22-36KG	X	U	X

The meanings of the keywords in the above table are: U = suitable for general child protection devices certified by this class; X = this seat position is not suitable for child protection devices of this class.

Information on the suitability of the child seat on the different seats in the case of ISOFIX child restraints:

Group	Child weight	Size category	Fixed module	Front passenger seat	Rear outboard passenger seat	Rear middle passenger seat
Portable bed	-	F	ISO/L1	X	X	X
		G	ISO/L2	X	X	X
0	<10KG	E	ISO/R1	X	IL	X
0+	<13KG	E	ISO/R1	X	IL	X
		D	ISO/R2	X	IL	X
		C	ISO/R3	X	IL	X
I	9-18KG	D	ISO/R2	X	IL	X
		C	ISO/R3	X	IL	X
		B	ISO/F2	X	IUF	X
		B1	ISO/F2X	X	IUF	X
		A	ISO/F3	X	IUF	X

The meanings of the keywords entered in the table above are: IL= this seat is suitable for installing ISOFIX child restraint system of semi universal category according to the vehicle list attached to the child seat; IUF= this seat is suitable for the installation of ISOFIX child restraint system which is of general category and fixed with the fixing belt TOPTETHER; X= this seat is not equipped with the fixing ring for the ISOFIX system.

Use of Child Protective Devices

Infants and senior children

Infant

! If the shoulder belt twines around neck of a child, the child will be severely injured and even killed when the safety belt is tightened gradually. Do not leave children in vehicle alone and do not allow them play with safety belts.

Neither seat belt system nor airbag system in vehicles are designed to protect infants and young children. Infants or younger children shall be always protected with corresponding child protective devices.



! Do not hold infants or young children while riding. In the event of a crash, infants and young children cannot be held due to the impact of the crash, and they should be fixed in appropriate child restraint systems.



! Do not use rear-facing child seat in a seat protected by a front airbag (Activated)!

Do not let infants and young children cling to or get too close to an airbag. This can cause serious injuries and death when the airbag inflates. Never install rear-facing child seat in the front passenger seat. Rear-facing child seat and front-facing child seat should be secured to the rear seat.

! The neck of infants and young children is not fully developed, and their head is heavier than other parts of the body. In order to reduce the risk of neck and head injuries in a crash, infants and young children need comprehensive support. In the event of accidents, infants seated in rear-facing child seats will remain securely positioned within them, and the collision's impact force will be evenly distributed across the infant's sturdy back and shoulders. It's imperative to consistently secure infants in rear-facing child seats. Because infants have small hip bones, standard vehicle seat belts may not properly secure them around the

hips and instead tend to move upward, fastening across the infant's abdomen. This could result in severe injuries or fatalities in the event of a collision. Hence, it is essential to always use the appropriate child seat for infants. It is recommended that children under four years old use rear-facing child safety seats.

Senior children

Senior children who are beyond the range of child safety seats shall wear safety belts.



Senior children should fasten seat belts correctly. It is forbidden to put the seat belt across the child's face or neck and the seat belt must be held close to the children's hips to provide additional protection in the event of accidents.

Never wear a seat belt around the abdomen. This may cause serious injury in the event of accidents.

In the event of accidents, children who are not wearing seat belts can hit others or be thrown out of the vehicle, resulting in serious injury or death.



5

The instructions attached to child restraint system states the weight and height limits for the child sitting in it. Children who meet the following applicable conditions are required to use a child seat in conjunction with a seat belt:

- Sit as far back in the seat as possible. Children should not bend their knees at the edge of the seat.
- Fasten the seat belt. Shoulder strap should not be placed on children's shoulders.
- The seat belt should not be worn down and close to the child's hip.
- Failure to keep the seat belt on properly while driving.

 It is forbidden for two children to share a safety belt, otherwise the safety belt will not be able to disperse the impact force correctly, which will cause serious casualties in the event of a crash.




Seats and Protective Devices

! When a child wears a safety belt, do not let the safety belt press behind the child. Otherwise, serious casualties may be caused in the event of a crash. The seat belt should go over the shoulder and across the chest.

Instructions for child seat


Rear-facing child seat

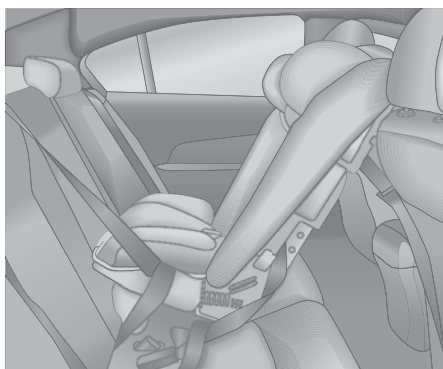

Rear-facing child seat provides protection by placing the seat close to the children's back. The seat belt will hold the children in place so that they can stay in the child seat in the event of accidents. It is recommended to install ISOFIX child seat that meets regulatory requirements or certified by Geely Automobile.


! Do not use rear-facing child seat in a seat protected by a front airbag (Activated)!

Front-facing child seat

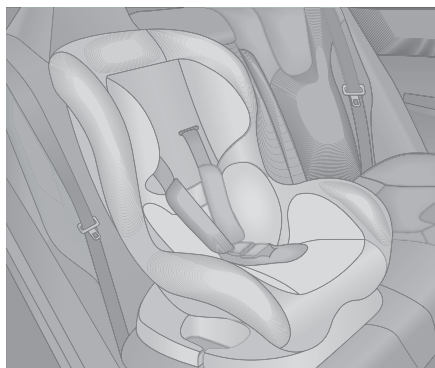

A front-facing child seat provides protection by securing the child's body with a seat belt. It is recommended to install ISOFIX fixed child seat that meets regulatory requirements or certified by Geely Automobile.

Auxiliary seat

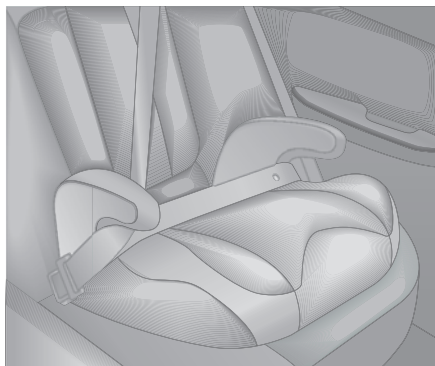

An auxiliary seat is a child protection device designed to improve the applicability of vehicle seat belts.

Installation of children protective devices

Children and infants are safer when properly secured in child seats in the rear seat.


! When installing the child seat to the rear seat, please read the instructions to ensure that it is suitable for use in this vehicle and is correctly installed.




There are warning labels on the front and back of the front passenger visor, indicating that the vehicle is equipped with a front airbag. Please pay attention to relevant matters.

Seat belt installation

Installation of the rear-facing child seat

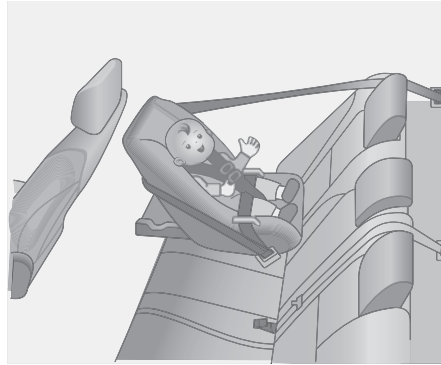


Installation of the rear-facing child seat in a rear-facing position.

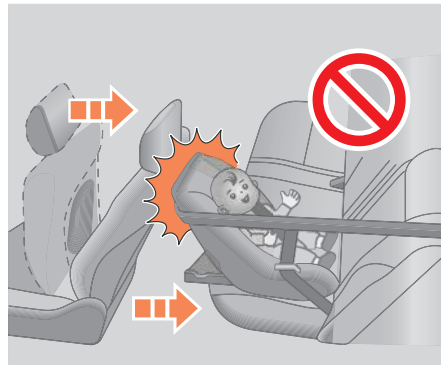

! Rear-facing child seat should not be installed in the rear seats if the installation of a rear-facing child seat would interfere with the adjustment of the front seats. Otherwise, in the event of emergency braking or collision, it may cause serious injuries and deaths to children and front seat passenger.


Seats and Protective Devices

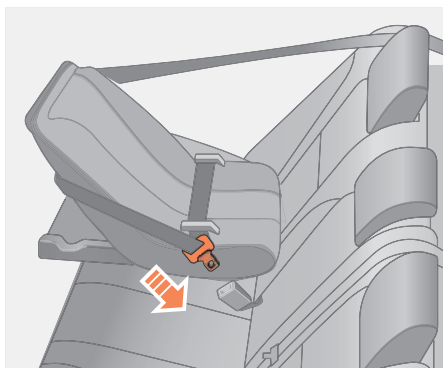


According to the instructions provided by the rear-facing child seat manufacturer, pass the seat belt through or around the rear-facing child seat, and insert the latch plate into the belt buckle, taking care not to twist the belt. Keep the seat belt tight.

! After inserting the latch plate, ensure that the latch plate and buckle are firmly locked and that the belt is not twisted. Do not insert coins, paper clips, and other objects into the belt buckle to prevent the obstruction of the latch plate and the belt buckle from latching properly.

If the belt buckle is not working properly, go to the Geely Automobile Service Center for repair immediately. Do not occupy the seat until the lock is repaired.

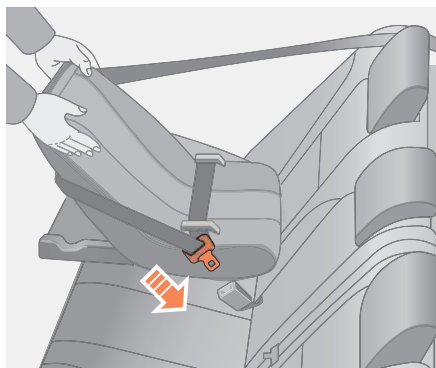

Push and pull the rear-facing child seat in different directions to ensure that it is secured.

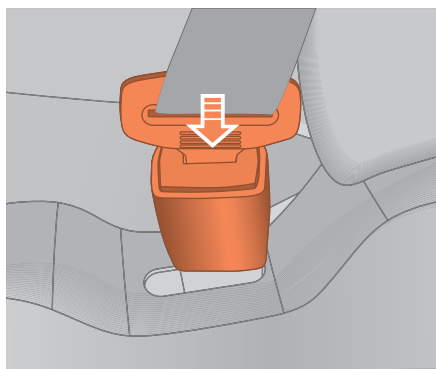

To remove the rear-facing child seat, press the release button.


Installation of the front-facing child seat

When installing a front-facing child seat, it is recommended to install it on the ISOFIX fixed point of the rear seat.


Seats and Protective Devices





Pull the seat belt completely out to the locked position. When the seat belt retracts slightly, it cannot be pulled out again. Before it retracts, make sure it is locked so that the front-facing child seat is secured.

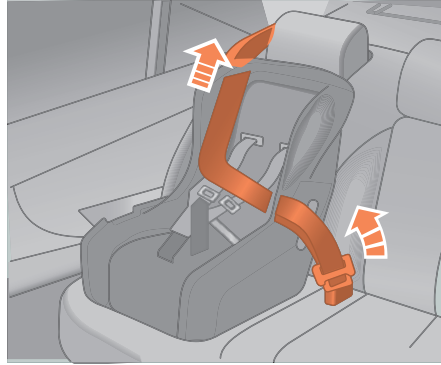

When pressing the front-facing child seat towards the seat cushion and seat backrest, allow the seat belt to fully retract and secure the front-facing child seat tightly.

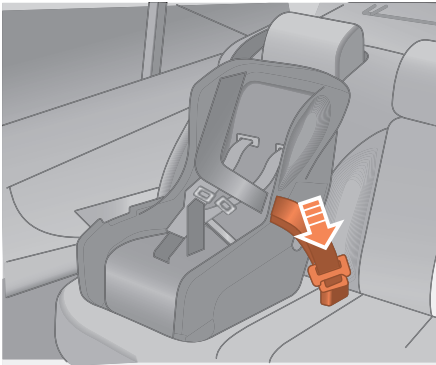


According to the instructions provided by the manufacturer, pass the seat belt through or around the front-facing child seat, and insert the latch plate into the belt buckle, please notice that the seat belt is not twisted, and pull the seat belt tight.

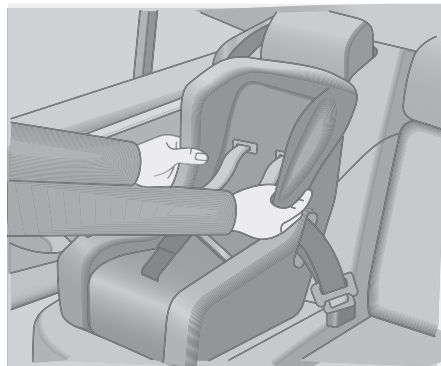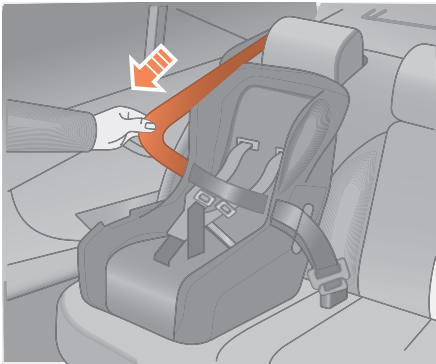

Push and pull the front-facing child seat in different directions to ensure that it is secured.

Seats and Protective Devices

Installation of the auxiliary seat

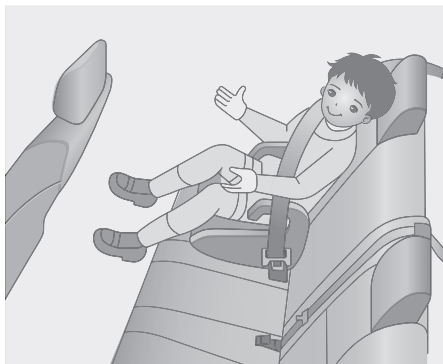

According to the instructions provided by the manufacturer, pass the seat belt around the child, and insert the latch plate into the belt buckle, noticing that the seat belt is not twisted. Ensure that the seat belt is properly placed over the child's shoulders and secured at the child's hips. For details, refer to the section "Seat Belt". To remove the auxiliary seat, press the release button.

⚠ Ensure the seat belt is positioned in the center of the child's shoulder. Keep the seat belt away from the child's neck, but do not place it underneath the child's shoulders and arms, as this could result in severe injury or fatality.

Installation of ISOFIX children protective devices



ISO standard-specific fixing points are located in the gaps between the seat cushions and backrests of the two rear seats. These fixing points are designed for securely attaching standard ISO-compliant child seats to the rear seats. When installing and using child seats with these fixing points, it is crucial to strictly follow the manufacturer's instructions to ensure proper and effective installation.


⚠ It is essential to verify with the child seat manufacturer whether the seat is suitable for use in the specific vehicle model.

Install a child seat with a top tether (taking LACTH seat installation as an example) according to the following procedure:


1. Put the child seat on the rear seat.
2. Turn the child seat over.
3. Make the gap between the seat cushion and the seat backrest wider and confirm the position of the ISOFIX fixed points near the latch plate.
4. Hold the seat upright and insert the ISOFIX fixing part of the child

seat into the corresponding ISOFIX fixing point at the back of the seat.


5. Check whether the buckle is locked correctly.

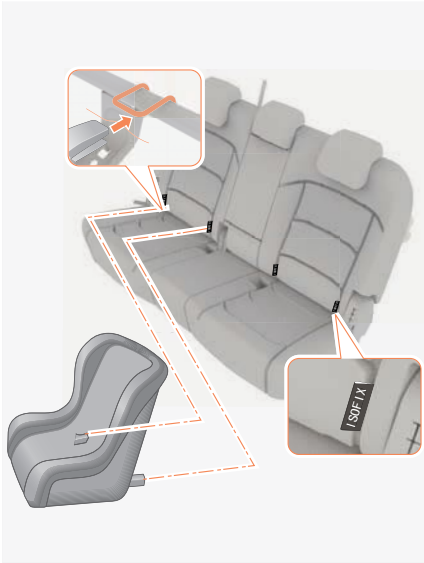

6. Raise the head restraint to its highest position, then pass the fastening strap through the head restraint and lock it to the hooks in the back.

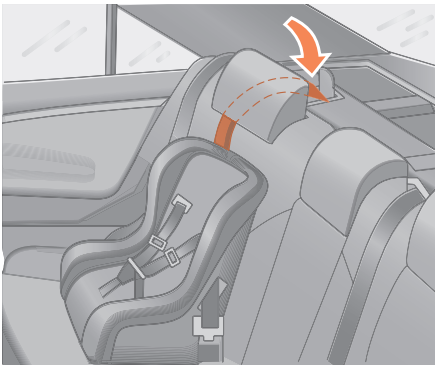

7. Tighten the LATCH seat belt.

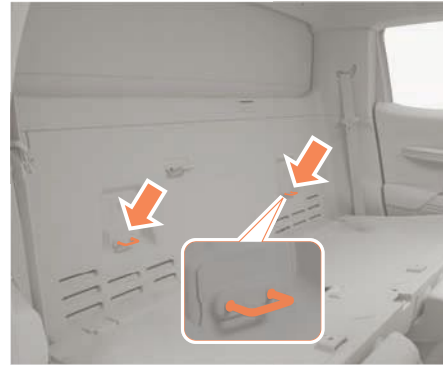

8. Adjust the head restraint to the lowest position to press down on the LATCH seat belt.
9. Make sure any unused seat belt that a child can reach is buckled.

i Make sure the top tether is tightly fastened and check that the child seat is secured by pushing and pulling in different directions, following the instructions provided by the manufacturer.

If the child seat is not properly installed to the ISOFIX fixing points, the child seat may not work properly, resulting in serious injury or death to the child. Always observe the manufacturer's instructions when installing the child seat.

Seats and Protective Devices

 Child seat fixing points are designed only to carry loads imposed by properly installed child seats. Do not attach any other objects in the vehicle by using seat belts, wiring harnesses, or other items under any circumstances.

Be sure to install child seats when the vehicle is stationary. When the ISOFIX child seat is properly fixed to the ISOFIX fixing points, a "click" sound will be heard.


Key

Smart Key

Introduction to key buttons

The smart key has been paired to the vehicle system. If the smart key is lost, damaged, or stolen, please contact the Geely Automobile Service Center as soon as possible. The control functions such as starting, locking and unlocking will be canceled for the lost, damaged or stolen smart key. If the smart key is retrieved again, its function can be activated again by Geely Automobile Service Center.

i The new smart key cannot be available immediately. It takes some time for Geely Automobile Service Center to match new a smart key with your vehicle.

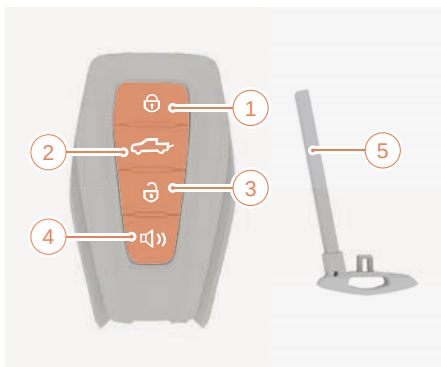

1. Lock button
2. Tailgate unlock button
3. Unlock button
4. Vehicle locating button
5. Mechanical key

! When exiting the vehicle, always take the key with you. Leaving the key inside the vehicle with the start switch in the unlock position can lead to potential risks, unauthorized access, or accidental use.

Models with Bluetooth modules can use mobile phone Bluetooth function to unlock and start the vehicle.

Take out the mechanical key



Press the release button on the back of the smart key to remove the mechanical key in the direction of the arrow.

Smart key battery replacement

When the smart key is very close to the vehicle but cannot control the vehicle, or when the vehicle fails to recognize the smart key due to a low battery, the battery in the smart key needs to be replaced:

1. Take out the mechanical key, gently insert it into the middle of the opening, and then hold the handle to pry open the back cover of the key.

Starting and Driving



2. After opening the smart key case, replace the new battery and make sure that the positive electrode of the battery is in the correct position.



3. Snap the two halves of the smart key case into place.
4. Smart key battery type: 3V CR2032.

! The smart key is equipped with precise circuitry that must protect against shock, water, heat, humidity, direct sunlight, solvents, waxes, and scrubbing agents.

! To prevent potential issues with the smart key's battery, it's advisable to avoid prolonged exposure to cold environments. Extended exposure to low temperatures can trigger a low battery warning, which may impact both the smart key's functionality and the vehicle's operation.

! If the smart key is interfered with by other signals, the vehicle may experience issues such as not detecting the key, being unable to start, unlock, or lock.

- Covered by metal objects, such as smart keys and mobile phones with metal protective cases.
- When external devices and equipment are working with a backup power supply, place the smart key next to the backup power supply or within the range where it is disturbed.
- Place smart keys next to electronic products with strong interference, such as laptops, Bluetooth headsets, working power conversion heads with chargers, Bluetooth access cards, walkie-talkies, and other devices with strong interference.

Immobilizer System

Drive Motor Anti-theft

The vehicle is equipped with a passive anti-theft system. The system does not need to be manually activated or deactivated. The motor deactivating system is automatically deactivated when the start switch is pressed and a valid smart key is found in the vehicle.

If the drive motor does not start by either of the following methods, please contact the Geely Automobile Service Center.

- Try using other smart keys.
- Start by placing the smart key in the designated position. For details, refer to "Start Operations".



Do not leave the smart key in the vehicle.

If the smart key is interfered with by other signals, the vehicle may not start. For detailed information, refer to Smart Key.

When the anti-theft system is activated but cannot be deactivated, the vehicle will issue an alarm notification.

Vehicle Locking and Unlocking

Locking and Unlocking

Smart key



Smart keys only work within certain limits. For safety reasons, always verify the success of the vehicle locking operation.

When the start switch is in the OFF position and all doors are closed, the vehicle can be locked with the smart key.

If the unlocked vehicle is parked for a long time, it may cause the low-voltage battery of the vehicle to run out of power and prevent the vehicle from starting.



When the smart key or central control door lock fails, the left front door can be unlocked or locked with the mechanical key.

Starting and Driving

Remote locking and unlocking

Remote unlocking

If you set the driver unlock in the multimedia, short press the smart key unlock button for the first time, the driver door will unlock, the rearview mirror will unfold, and the turning signal light will flash three times. Short press the smart key unlock button again, the four doors will unlock and the turning signal light will flash three times.

Remote locking

Short press the smart key lock button, the four doors will lock, and the turning signal light will illuminate for a few seconds. If any of the four doors is not closed, press the smart key lock button, the vehicle will sound an alarm and the turning signal light will flash to remind the driver.



Never leave smart keys inside the vehicle or where children can access them. Children might accidentally operate vehicle controls like parking brakes or window controllers, which could result in serious injuries or fatalities.

Keyless access system



- The keyless entry function requires the start switch to be in the OFF position with all doors closed for use.
- When the vehicle is in a substation, mobile phone base station, TV tower, charging pile and other interference environment, the keyless entry function may fail. When the function fails, please use the mechanical key to lock or unlock.
- When electronic devices such as mobile phones, laptops, Bluetooth headphones, and Bluetooth access cards are placed together with the smart key, the keyless entry function may fail. When the function fails, keep the smart key at a certain distance from the electronic devices. You can also lock or unlock the device with a mechanical key.
- After repeatedly unlocking and locking the vehicle, the door lock system will automatically enter the protection state, and the operation will be unresponsive. After dozens of seconds, the door lock can respond to unlock or lock action again.
- When the smart key battery is too low, the keyless entry function may fail. It's necessary to use mechanical key to unlock or lock the door on the main driver side, and promptly go to the Geely Automobile Service Center to replace the smart key battery.

Keyless unlocking



Unlock sensor area

When you approach the vehicle with a valid smart key, simply place your hand in the unlock sensor area on the driver door handle. This action will trigger the automatic unlocking of all four doors. Pull the door handle, and the door will open effortlessly. Once all four doors are unlocked, the turn signal lights will flash three times.

i If your vehicle's passenger door is equipped with a keyless entry system, the passenger door can also be unlocked keylessly.

If the vehicle remains unused for an extended period, approximately one week, this feature will automatically deactivate. To reactivate the system, simply restart the vehicle. Additionally, if the driver carries the smart key and remains in close proximity to the vehicle without any vehicle-related actions for several minutes, this feature will also automatically deactivate. In this case, alternative methods can still be used to unlock the vehicle.

Keyless locking



Lock sensor area

When you approach the vehicle with a valid smart key, simply place your hand in the lock sensor area on the driver door handle. This action will trigger the automatic locking of all four doors. When the vehicle is locked, the turn signal lights will flash once.

i If your vehicle's passenger door is equipped with a keyless entry system, the passenger door can also be locked keylessly.

If the vehicle remains unused for an extended period, approximately one week, this feature will automatically deactivate. To reactivate the system, simply restart the vehicle. Additionally, if the driver carries the smart key and remains in close proximity to the vehicle without any vehicle-related actions for several minutes, this feature will also automatically deactivate. In this case, alternative methods can still be used to unlock the vehicle.

Starting and Driving

Locking and unlocking using mechanical key

 When the smart key or central control door lock fails, the vehicle door can be unlocked or locked with the mechanical key.

The door check needs to be greased regularly, otherwise the opening and closing of the door may make an abnormal noise.

Lock/Unlock the driver's door with the mechanical key

1. Remove the mechanical key from the smart key.



2. Lift the cover of the driver's door lock and remove it, then insert the mechanical key into the keyhole.



3. Insert the mechanical key into the driver's door lock and turn the mechanical key to unlock/lock the door.


Lock the front passenger side door and rear doors with the mechanical key



In case of vehicle power failure, the mechanical key can be used to lock the front passenger side door and rear doors follow the steps below:

1. Remove the mechanical key from the smart key
2. Insert the mechanical key into the groove at the door lock latch, and push it downward.
3. Pull out the mechanical key and close the door to complete the locking process.

Locking and unlocking inside the vehicle

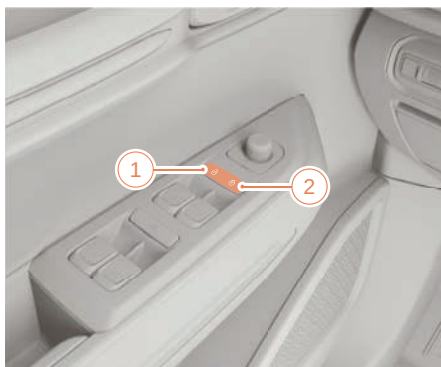

1. Unlock button
2. Lock button

When all four doors are closed, press the lock button to lock all doors.

When all four doors are locked, press the unlock button to unlock all doors.

! The unlocking of the central control button in the vehicle can only be executed in the anti-theft release state.

Automatic locking and unlocking

Automatic relocking

Unlock all four doors with a smart key/keyless entry while the vehicle is locked. If the four doors are not opened within 30 seconds, the vehicle automatically locks.

Automatic door locking while driving

When the start switch is in the ON position and the vehicle speed is greater than 20km/h (Actual speed), the four doors will be automatically locked.

i Open/close/speed values can be set for automatic door locking function in the multimedia settings.

Reminder to unlock when key left inside vehicle

When the start switch is in the OFF position and the key is left inside the vehicle, if you exit and close the door while attempting to lock it using the keyless entry, the vehicle will provide a reminder that the key is inside and prevent locking. If you use another key to lock the vehicle, it will also provide a reminder that a key is inside and disable locking until the forgotten key is removed. To re-enable the previously disabled key inside, simply unlock the vehicle with a key.

Automatic unlocking on power off

After the vehicle is automatically locked, if the vehicle is stopped and the start switch is turned off, the doors are automatically unlocked.

Automatic unlocking on collision

In the event of a severe collision during driving, all four doors will automatically unlock, allowing occupants to quickly exit the vehicle.

Vehicle tracking function

When you cannot confirm the location of your vehicle, you can use this function to find the specific location of your vehicle.

The start switch is in the OFF position and the door is closed and locked, quickly press the vehicle locating button on the smart key to activate the vehicle locating function and remind you of the vehicle's location.

Starting and Driving

One-click window opening function (If equipped)

When you need to open the window in advance, press and hold the unlock button within the effective range of the smart key, and the window will open automatically.

One-click window closing function (If equipped)

When you need to close the window in advance, press the lock button within the effective range of the smart key, and the window will close automatically.

Open and close vehicle cargo canopy (If equipped)

Open vehicle cargo canopy (Flat cover type)

1. Insert the mechanical key into the lock cylinder of the cargo canopy and turn clockwise to unlock the canopy.



2. Press the left side of the handle to raise the handle, pull the handle back, and the canopy of the cargo will open.



3. Lift the cargo canopy slightly, and under the action of the left and right pneumatic struts, the cargo canopy will open to the maximum position.



i Do not install accessories on the cargo canopy, otherwise the pneumatic struts may not open properly.

The mechanical key in the smart key can also lock and unlock the cargo canopy.

Close vehicle cargo canopy (Flat cover type)

Close the cargo canopy down, press both sides of the cargo canopy, when you hear a “click” sound, it means that the cargo canopy is completely closed;

Use the mechanical key to lock the cargo canopy by turning it counter-clockwise.



- It is forbidden to drive the vehicle with the cargo canopy opening.
- When opening or closing the cargo canopy, pay attention to the surrounding environment to ensure that no injuries will be caused.
- When closing the cargo canopy, do not allow clothing to be trapped or leave valuables in the cargo.
- Do not allow children to operate the cargo canopy to prevent accidental injury.
- Do not place any part of your body within the movement range of the cargo canopy to prevent clamp injury or other accidental injuries.

Open and close the cargo tailgate

Unlocking cargo tailgate inside the vehicle



When the vehicle is stationary and the external anti-theft alarm system is disarming, short press the tailgate opening switch to pre-unlock the tailgate, and press the tailgate unlocking switch within 30 seconds to open the tailgate.

Unlocking cargo tailgate using central control



When the vehicle is stationary and the external anti-theft alarm system is disarming, short press the central locking unlock switch to pre-unlock the tailgate, and press the tailgate unlocking switch within 30 seconds to open the tailgate.

Starting and Driving

 There is no time limit after the central locking pre-unlocks the cargo tailgate.

Unlocking cargo tailgate using smart key



When the vehicle is stationary and the external anti-theft alarm system is disarming, short press the smart key tailgate opening switch to pre-unlock the tailgate, and press the tailgate unlocking switch within 30 seconds to open the tailgate.

Close pre-unlocking

During the pre-unlock timing period, the central control will close the pre-unlock timing after locking. Pressing the tailgate unlocking switch will not open the tailgate.

Close the cargo tailgate




Lift the edge of the tailgate, and force the tailgate forward to lock it.

After closing the cargo tailgate, verify that it is fully locked by trying to push and pull the upper edge of the cargo tailgate.

 If your vehicle is equipped with a cargo canopy, ensure that the cargo canopy is open before closing the tailgate. Only close the cargo canopy after ensuring that the tailgate is securely closed. Failure to do so may damage the cargo canopy sealing system.

Door handle

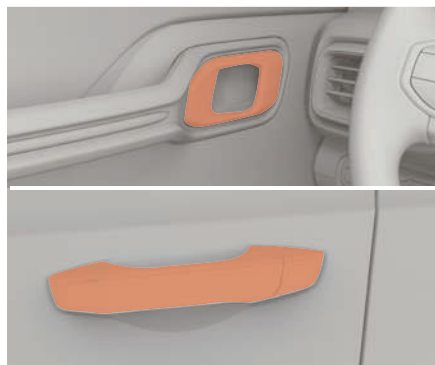

When the door is unlocked, you can open the door by using the inside and outside handles.

Child safety lock



The left and right rear doors of this vehicle are equipped with child safety locks. When there are children sitting in the rear seats on either side, please use the child safety locks.

The child safety lock switch is located on the outer edge of the rear door. Insert the mechanical key into the child safety lock and rotate it in the direction shown in the diagram. This will place the child safety lock in the "open" position, preventing the doors from being opened from the inside of the vehicle. For the safety of child passengers, the doors can only be opened from the outside.

! After setting the child safety lock, be sure to test whether you can open the door from inside the vehicle to ensure that the child-protection lock is working properly.

Vehicle Start

Start Switch (Keyless Start)



The vehicle is equipped with a start switch for push-button start. To activate the system, the smart key that matches the vehicle must be in the vehicle and detected.

The status of the start switch can be classified into:

OFF: This position turns the vehicle off. When the start switch is in the OFF power mode, press the brake pedal and press the start switch to directly start the vehicle.

i If the push-button start does not work, it may be that the vehicle is near a strong electromagnetic signal, which interferes with the keyless start.

ACC: This position allows partial electrical use when the vehicle is not starting. When the vehicle is not started, press the start switch once, if the brake pedal is not pressed, the start switch will be in the ACC position. When the start switch is in the ACC power mode, press the brake pedal and press the start switch to start the vehicle, the vehicle enters the drivable state.

Starting and Driving

ON: when the start switch is in the ACC position, press the start switch once, if the brake pedal is not pressed, the start switch will be in the ON position. Press the switch again, the start switch is back to the OFF position.

START: This position is used to start the vehicle.

 Do not leave the smart key inside the vehicle or within the reach of children, as children could potentially operate the vehicle, resulting in serious injury or death.

Start operation

Depress the brake pedal and press the start switch to start the vehicle. If the smart key is not inside the vehicle or is subject to some interference, the instrument cluster displays a reminder that the key has not been detected. If the battery in the smart key needs to be replaced, refer to the “Smart Key Battery Replacement” section in this chapter.


 As long as all start conditions are met, the vehicle will start after the start switch is pressed. After the vehicle starts, the READY light of the instrument cluster lights up, and the vehicle enters the drivable state.

 When electronic devices such as mobile phones, laptops, are placed together with the smart key, the keyless entry function may fail. When the function fails, keep the smart key at a certain distance from the electronic devices. Please try to place the smart key near the armrest box of the auxiliary instrument panel.

Backup start function

If the vehicle is in a strong signal interference area, the smart key battery is low, or the keyless start function fails, if you try to start the vehicle and press the start switch, the instrument cluster may have a text message indicating that the vehicle cannot be started through the push-button start procedure.

Please follow the steps below to start the vehicle:

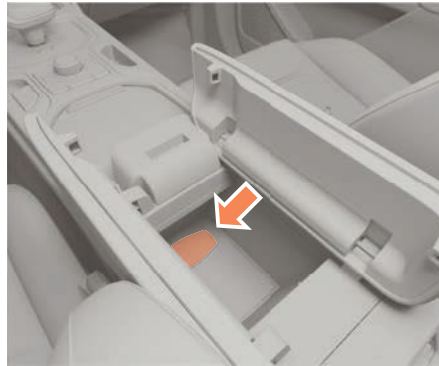

1. Put the vehicle in park (P) or neutral (N).
2. The smart key is placed flat in the storage box below the front center armrest with the key sign position.
3. Depress the brake pedal.
4. Press the start switch.

When Vehicle Unable to Start

Before carrying out the inspection, it is necessary to start the vehicle in accordance with the correct starting procedure, and confirm whether the power battery and low-voltage battery have enough power.

This vehicle is equipped with electronic anti-theft system. Check whether other smart keys can start the vehicle. If the vehicle can be started, the smart key may be faulty. Take the smart key to the Geely Automobile Service Center for inspection. If all smart keys fail, the system may fail. Contact the Geely Automobile Service Center for inspection as soon as possible.

If the vehicle occasionally fails to start:

1. Check if the low-voltage battery terminals are tightened and clean.
2. If there is no problem with the terminal of the low-voltage battery, turn on the indoor light. When starting the vehicle, if the indoor lighting does not light up, dims, or goes out, it indicates that the low voltage battery has run out of charge. You can try to start it by jumping it, please refer to the "Jumping Start" section in "Faults on the Road".

 If the indoor lighting is in normal condition, but does not start, please contact Geely Automobile Service Center for inspection.

Driving

In the following cases, special attention should be paid to the lower positioned parts on the vehicle to avoid scratching the vehicle chassis.

- When driving on roads in poor condition.
- When driving over the road edge.
- When driving on steep ramps.

 Special care should be taken when the vehicle is fully loaded.

Vehicle running-in

The running-in of the new vehicle is mainly to improve the surface quality and friction and wear status of the moving parts, extend the service life and reduce the power consumption. During the running-in period of the new vehicle, the following requirements should be complied with when using:

- Avoid pressing the accelerator pedal to the bottom when starting and driving.
- During the running-in period, the vehicles should be driven on flat roads, avoiding muddy roads or sandy roads.
- Avoid idling the drive motor.
- Avoid rapid acceleration.
- Avoid emergency braking within the first 300 kilometers.
- Do not drive at the same speed for a long time.

6

Driving vehicle

1. Depress and hold the brake pedal, shift the gear from N to D, and the shift position indicator on the instrument cluster will display D.
2. Release the electronic parking brake.

Starting and Driving

3. Release the brake pedal and the vehicle begins to creep; Depress the accelerator pedal and the vehicle begins to move.
4. If accelerating, gradually depress down on the accelerator pedal; If driving at a constant speed, keep the accelerator pedal at a certain opening.
5. If braking, depress the brake pedal.
6. If reversing, depress the brake pedal until the vehicle comes to a steady stop and remains stationary; Switch the electronic shift lever to R gear, release the brake pedal, lightly depress the accelerator pedal, and the vehicle begins to reverse.



Do not step on the accelerator pedal during a gear change to avoid losing control of the vehicle.



Do not depress the brake pedal and accelerator pedal at the same time.



Emergency braking should be avoided during driving. The vehicle should slow down as much as possible during turns, and sharp turns are prohibited.



When the vehicle is in READY state and the electronic shift lever is in D gear, be sure to depress the brake pedal or use the parking brake, otherwise the vehicle will creep; If parking and leaving the vehicle, always use the parking brake and switch the electronic shift lever to P gear.

Economic driving

Vehicle driving range and power battery capacity are affected by driving habits, storage conditions, charging methods and power battery temperature, etc. Good usage habits and driving style can improve the vehicle's driving range.

1. Smooth start and acceleration: High power consumption during start and acceleration. When driving, try to avoid depressing the accelerator pedal sharply to start and accelerate. Smooth starting and acceleration are beneficial for saving power.
2. Avoid unnecessary braking: Control the following distance from the vehicle in front and try to avoid frequent braking; Slow down at red lights and allow the vehicle to slide to avoid sudden braking.
3. Keep the vehicle's wind resistance low: Opening windows at high speeds can significantly increase the vehicle's wind resistance, leading to higher power consumption. Keep the windows closed when the vehicle speed is above 80 km/h.
4. Maintain the correct tyre pressure: Check the tyre pressure regularly, too low tyre pressure will increase the tyre rolling resistance and lead to increased power consumption.
5. Minimize the use of air conditioning: Whether cooling or heating air conditioning will accelerate the power battery consumption, please use air conditioning when necessary. Windows can be opened for ventilation at low speed. It is more energy efficient to use the internal cycle mode when using the air conditioner.

6. Reduce the weight of the vehicle: Every extra kilogram of weight can increase power consumption, and regularly clean unnecessary luggage and items on the vehicle.
7. Plan the driving route: Optimize the route and try to avoid congested roads. This saves time and reduces power consumption.
8. Do not arbitrarily change the size of the tyres: Using larger or wider tyres can lead to higher power consumption.
9. Driving mode selection: Using ECO mode while driving can reduce the power consumption of the vehicle and increase the driving range. On the contrary, choosing the SPORT mode will increase the power consumption of the vehicle and shorten the driving range.

 When driving a vehicle, it's necessary to ensure safe driving and comply with traffic laws and regulations, and avoid disrupting others or the flow of public traffic.

Parking on combustibles

 Do not park on paper, leaves, hay, or other flammable materials to avoid catching fire and accidents caused by the contact of combustible materials with high-temperature parts of the vehicle.

Careful driving

The first step of careful driving is to fasten seat belt.

 **Defensive driving:** The driver can accurately "foresee" the danger caused by other drivers, pedestrians, bad weather or road conditions during driving, and can take necessary, reasonable and effective measures in time to prevent accidents.

 Pay special attention to pedestrian safety, as electric vehicles are less noisy and pedestrians may not be aware when the vehicle is approaching. Anticipate risks in advance and be prepared.

 Before driving, please confirm that the charging port cover is fully closed and the charging cable is disconnected.

 Before driving, please check the driving range on the instrument cluster to confirm whether the remaining battery power can meet the driving demand. If the battery is low, please charge it in time.

 Keep safe distance and focus on driving. Driver's distraction may cause a collision, leading to injury or death.

Starting and Driving

Drunk driving

 Drunk driving is very dangerous. Alcohol affects drivers' judgement, muscle coordination, vision and concentration. Drunk driving not only causes accidents but also leads to serious personal injuries and death. The traffic department will punish drunk driving in accordance with the provisions of the "Road Traffic Safety Law".

Vehicle wading



To avoid damage to vehicles when wading (e.g. when the road is flooded), the following precautions should be taken:

1. Determine the water depth before wading. The recommended wading depth should not exceed 450mm (Approximately at the position of the chrome strips on the door shown in the figure).
2. Drive at a low speed, otherwise waves may form in front of the vehicle, damaging components such as the motor controller, and preventing the vehicle from moving.
3. Do not stop or reverse in water under any circumstances.



- When wading or driving on muddy roads, the braking effect may be affected and the braking distance may be extended, so there is a risk of accidents!
- After wading, avoid sudden emergency braking operations immediately.
- After wading, the brakes must be cleaned and dried by intermittent braking.



- The wave caused by the oncoming vehicle may exceed the allowable water height of the vehicle.
- There may be hidden potholes, mud holes or rocks in the water, which can make wading more difficult.
- Do not wade through salt water. Salt can cause rust and corrosion in vehicles. Immediately flush all vehicle parts that have been in contact with salt water with fresh water.

After wading through the water, it is recommended to go to the Geely Automobile Service Center for a comprehensive inspection of the vehicle, in order to check hidden dangers and ensure driving safety.

Stopping or parking

- The vehicle should be parked on a road that is flat, solid, safe and does not affect the passage of other vehicles.
- When parking, depress the brake pedal before using the electronic parking brake until the vehicle comes to a slow stop and remains stationary, then switch the electronic shift lever to P.
- The vehicle has an intelligent charging function, when the start switch is in the OFF position and the low-voltage battery is low, the vehicle will automatically charge it.
- When using a vehicle that has not been used for a long time for the first time (More than two weeks), please confirm whether the instrument cluster has an alarm. If there is an alarm, please contact the Geely Automobile Service Center for maintenance as soon as possible.



Never leave children or people with disability in the vehicle. They may release the parking brake, manipulate the electronic shift lever and cause the vehicle to move, resulting in personal injury or death.

Requirements for long-term unused vehicle

If the vehicle is not used for a long time, please be sure to maintain it regularly, otherwise it will cause a reduction in the performance of the power battery.

- When parking vehicles in summer, please park them in a cool environment, try to avoid direct sunlight and keep them away from heat sources.
- If the vehicle is left standing for a long time, the power battery charge should be maintained at 50%~80% (About 50% is optimal).
- Full charge maintenance must be carried out every three months. After the full charge, please run the vehicle or directly turn on the air conditioning or other high-powered appliances for power consumption until the power reaches between 50% and 80% before continuing to place the vehicle.
- Noise during operation of drive motor and reducer.
- Noise is generated when the compressor and cooling fan of the electric air conditioner are running.
- Noise and vibration are generated by opening and closing of relay when starting and closing high voltage system.
- The sound of the pedestrian warning system when the vehicle is moving at low speed.
- The noise of the water pump and cooling fan during charging.




If your vehicle is equipped with a vacuum booster, there will be intermittent noise when the electric vacuum pump operates.


Automatic Shifting Operation

Electronic Shift Lever

Electronic shift lever (Type 1)

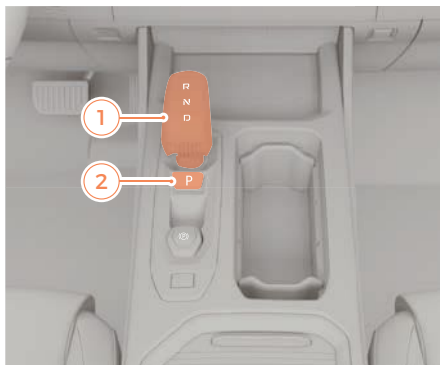

Electronic shift lever (Type 2)

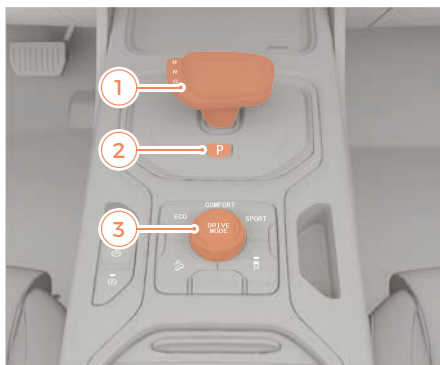

1. Electronic shift lever
2. Gear P button
3. Driving mode knob

Gear Position

P (Parking)

Assisted parking is provided when the gear is in parking (P). When the vehicle is stationary, press the P button to engage the parking (P) gear.

If you shift Parking (P) into Neutral (N), you must depress the brake pedal and push the electronic shift lever forward or backward to shift into Neutral (N).

When the vehicle is started, if you want to shift Parking (P) into Drive (D), you must first shift into Neutral (N), then press the brake pedal and pull the electronic shift lever backward to shift into Drive (D).

i When the vehicle changes from the starting state to the non-starting state and the electronic parking brake works, the reducer will automatically enter the Parking (P) gear.

D (Drive)

This position stands for normal driving. When the electronic shift lever is in Drive (D), if the brake pedal is released and the parking brake is disengaged, the vehicle will begin to creep at a speed of approximately 7 km/h.

When the vehicle is stationary and already started, if you want to shift Drive (D) into Parking (P), you only need to press the P button without pushing the electronic shift lever; To shift Drive (D) into Neutral (N), simply push the electronic shift lever forward.

! If the slope is steep, the vehicle may not be able to creep or even reverse.

R (Reverse)

This position stands for moving backwards.

When the electronic shift lever is in Reverse (R), if the brake pedal is released and the parking brake is disengaged, the vehicle will begin to creep at a speed of approximately 5 km/h.

When the vehicle is stationary and already started, if you want to Reverse (R) into Neutral (N), you only need to pull the electronic shift lever backward.

N (Neutral)

When the electronic shift lever is in Neutral (N), the drive motor is unable to output power.

When the vehicle is stationary and already started, if you want to shift Neutral (N) into Reverse (R) or Drive (D), you must press the brake pedal and push the electronic shift lever forward to shift into Reverse (R) or pull the electronic shift lever backward to shift into Drive (D).

i The instrument cluster has an indication of the current gear position.

Instructions for Use

Shifting operation

Parking

When it is necessary to park: When the vehicle is completely stopped, switch the electronic shift lever to Neutral (N) and press the P button.

Drive

To start the vehicle, depress the brake pedal, switch the electronic shift lever to Drive (D), then release the brake pedal and lightly press the accelerator pedal.

! Engage the gear first before depressing the accelerator pedal. Do not depress the accelerator pedal while engaging the gear or engage the gear after depressing the accelerator pedal.


Reverse

When the vehicle is stationary, depress the brake pedal, switch the electronic shift lever to Reverse (R), then release the brake pedal and lightly depress the accelerator pedal.

Comfort mode

Comfort mode is the default driving mode of the vehicle.


Entry (Type 1)

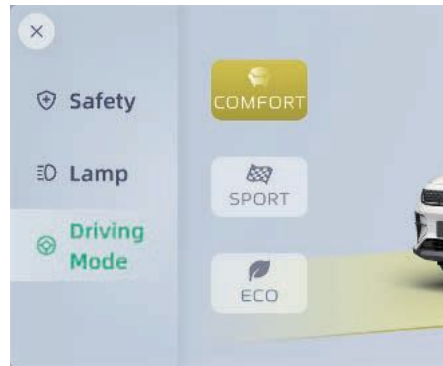

Starting and Driving

Click Vehicle Settings → Driving Mode on the multimedia display screen, select Comfort Mode, the comfort mode indicator on the instrument cluster will light up, indicating that the vehicle is in Comfort Mode.

Entry (Type 2)

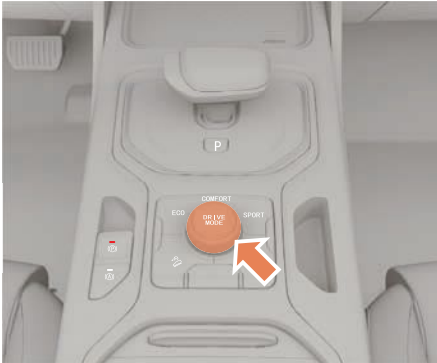


Rotate the driving mode knob on the auxiliary console to switch to Comfort Mode, the comfort mode indicator on the instrument cluster will light up, indicating that the vehicle is in Comfort Mode.

i The switching of driving mode is unique, for vehicles equipped with a driving mode knob, driving mode cannot be selected in multimedia settings.

Economic mode


In the Economic Mode, priority should be given to the economy of power usage, ensuring driving quality while reducing power consumption.

Entry (Type 1)

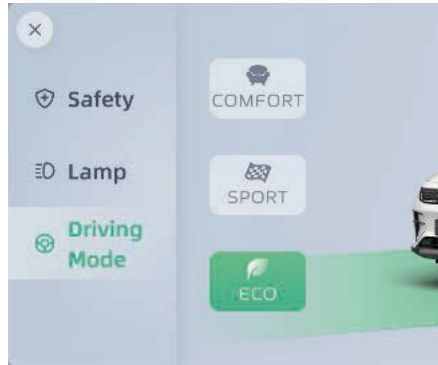

Click Vehicle Settings → Driving Mode on the multimedia display screen, select the Economic Mode, the economic mode indicator on the instrument cluster will light up, indicating that the vehicle is in Economic Mode.

Entry (Type 2)

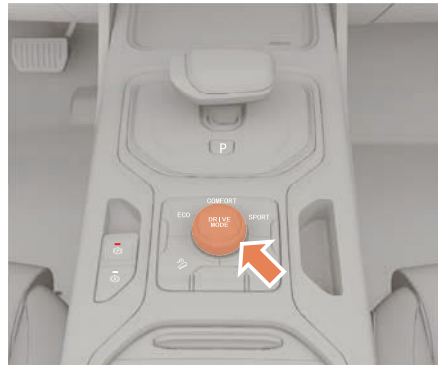


Rotate the driving mode knob on the auxiliary console to switch to Economic Mode, the economic mode indicator on the instrument cluster will light up, indicating that the vehicle is in Economic Mode.

Sport mode

Sport mode is used when the vehicle needs good dynamic performance. In this mode, the control system will enable the vehicle to have better dynamic


performance and optimize acceleration performance by rapidly increasing the output power, while the power consumption will increase and the driving range will be reduced.

Entry (Type 1)

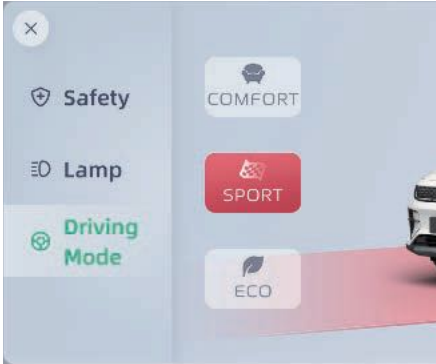

Click Vehicle Settings → Driving Mode on the multimedia display screen, select the Sport Mode, the sport mode indicator on the instrument cluster will light up, indicating that the vehicle is in Sport Mode.

Entry (Type 2)

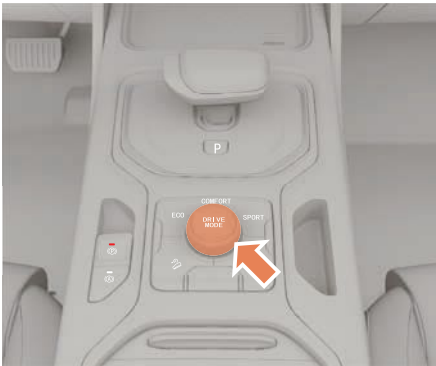

Rotate the driving mode knob on the auxiliary console to switch to Sport Mode, the sport mode indicator on the instrument cluster will light up, indicating that the vehicle is in Sport Mode.

Brake and Electric Auxiliary System

Brake System

The actual braking distance of the vehicle during operation may vary due to factors such as road conditions, vehicle weight, and the magnitude of applied braking force. To ensure safety, maintain a sufficient following distance from the vehicle in front to avoid sudden or emergency braking.

! Do not install non-original accessories to avoid affecting vehicle performance and causing traffic accidents.

! When the brake pedal is pressed, if there is a sharp metal frictional sound in the vehicle brake, please immediately go to the Geely Automobile Service Center for maintenance.

! Do not place your feet on the brake pedal while driving. Otherwise, it will cause wear and tear and overheating of the brake components, as well as extend the braking distance.

! When driving downhill on long or steep slopes, simply use the brake pedal to maintain a safe and consistent speed. Try to minimize frequent or continuous use of the brake pedal to prevent potential brake overheating or fading.

Parking Brake

Electronic Parking Brake (EPB) (Type 1)



Electronic Parking Brake (EPB) (Type 2)



The EPB switch is located on the auxiliary console switch assembly.

EPB manual release

When the start switch is in the ON position and the electronic shift lever is not in the position, depress the brake pedal and simultaneously press the EPB switch to release the EPB. The EPB switch indicator light will go off.

EPB automatic release

Start the vehicle, close the driver's side door, and fasten the seat belt. Depress

the accelerator pedal when the vehicle is in Drive (D), the EPB will be automatically released and the EPB switch indicator will be turned off.

EPB manual parking

The start switch is in the ON position, the EPB switch is pulled up when the vehicle is stationary, the EPB switch indicator is on and the manual parking is completed.

! Once the EPB is enabled, the parking brake warning light on the instrument cluster illuminates. If the warning light doesn't illuminate, please contact the Geely Automobile Service Center for inspection as soon as possible.

EPB automatic parking

When the vehicle is stationary, the start switch is in the OFF position or the vehicle is powered off or shifted to the P position, the EPB automatically parks the vehicle.

Disable the EPB automatic parking function (Car wash mode)

In the process of Tunnel Automatic Car Washing, because the vehicle needs to follow the tow chain of the car washing equipment, it is necessary to put the vehicle in Neutral (N) and manually release the EPB and release the brake pedal.

! If the Electronic Parking Brake System (EPB) fault indicating light is on, it indicates that the electronic parking brake system is faulty. Please contact the Geely Automobile Service Center for inspection.

! If the EPB fails to be enabled, the rear wheels should be locked if necessary to prevent the vehicle from moving.

! Improper use of electronic parking brake may cause accidents and serious personal injuries and death.

Do not use the electronic parking brake for the braking while driving, except in emergencies. Because only the rear wheels are braked, the braking distance becomes longer, which affects the braking effect and may cause serious danger. When EPB is enabled, do not depress the accelerator pedal when the vehicle is in D position and the operational readiness indicator is on.

! When the EPB is released, the vehicle will lose its parking function. To avoid vehicle damage, serious injury or even fatal accidents, do not perform this operation on roads with slopes.

! When the vehicle is washed automatically and the vehicle needs to move, it is necessary to put the start switch in the ON position, switch the electronic shift lever into Neutral (N), and manually release the EPB.


AUTO HOLD (If equipped)

Type I



The AUTO HOLD switch is located on the auxiliary console switch assembly.

Type II

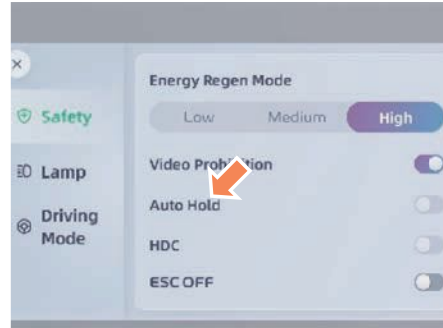

The function can be found on the multimedia display: Settings → Safety, and ON or OFF modes for the AUTO HOLD function can be selected.

The AUTO HOLD function can help drivers start more comfortably on the ramps. When the vehicle stops on the ramp, after releasing the brake pedal, the system continues to brake, allowing the driver enough time to depress on the accelerator pedal to start, thereby reducing the impact of slope sliding.



Depending on the force, the vehicle may also move when automatic parking is enabled.

Enabling AUTO HOLD function

Start the vehicle, close the driver's side door and fasten the seat belt. Press the AUTO HOLD switch, the AUTO HOLD function is enabled and the switch indicator illuminates.

Disabling AUTO HOLD function

Press the AUTO HOLD switch, the AUTO HOLD function is disabled and the switch indicator is turned off.

AUTO HOLD function activation and deactivation

1. The READY indicator light is on, the driver's side door is closed and the safety belt is fastened. When the AUTO HOLD function is enabled and the vehicle speed is zero, depress the brake pedal, if the electronic shift lever is not in Reverse (R), the AUTO HOLD is activated;



The AUTO HOLD function cannot be activated when the vehicle is in Reverse (R).

2. Shift the electronic shift lever into Drive (D)/Reverse (R), lightly depress the accelerator pedal, the AUTO HOLD will be automatically released;
3. When the AUTO HOLD function is activated, if the accelerator pedal is not pressed for more than 10 minutes, it is switched to EPB mode, and the parking brake warning light illuminates in red.


AUTO HOLD force-quitting

If the AUTO HOLD function is activated, unfasten the seat belt and open the driver's side door to perform EPB electronic parking.

Electronic Stability Control (ESC)

Electronic Stability Control (ESC) is an active safety technology that assists the driver to control the vehicle, including anti-lock braking system (ABS), which can automatically correct the instability of the body of the vehicle and help prevent accidents. The electronic stability control system applies sensing technology to determine the driver's intention in the direction of travel. When the vehicle begins to deviate from the road, the system will apply targeted braking force to the wheels or reduce the torque of the drive motor to guide the vehicle back to the correct route.

The Electronic Stability Control (ESC) fault indicating light on the instrument cluster flashes when the ESC is enabled. This also happens when the Traction Control System is enabled. You may hear some noise or feel a vibration in the brake pedal. This is normal. Continue to steer the vehicle in the direction you wish. If the Electronic Stability Control System failure is detected, the Electronic Stability Control System (ESC) fault indicator light will illuminate and the system cannot work properly. Adjust the driving mode accordingly, and contact the Geely Automobile Service Center as soon as possible. The Electronic Stability Control System will be automatically enabled when starting the vehicle. To maintain control over the direction of the vehicle, the ESC system should always be left on.

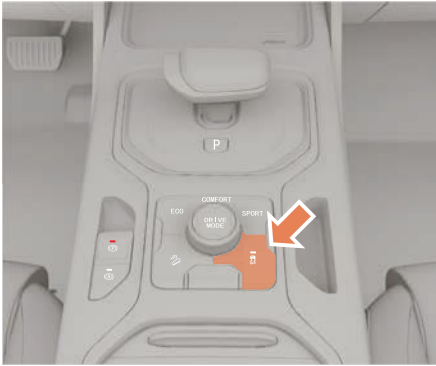

Disabling ESC

Press the ESC OFF switch located on the auxiliary console switch assembly, the Electronic Stability Control System will be disabled, and the Electronic Stability Control System off-indicator on the instrument cluster will illuminate.

 Disable the ESC function in the following special situations:

- When driving with tyre chains;
- When driving on deep snow or soft roads;
- When vehicle is stuck in muddy road or other road conditions and needs to be moved back and forth for getting rid of trap.

Enabling ESC

When the ESC function is disabled, press the ESC OFF switch to restart the system. The ESC off-indicator on the instrument cluster is extinguished.

Every time the power switch switches from ACC to ON.

When the vehicle speed is higher than or equal to 85 km/h, the ESC function is automatically enabled.

Anti-lock Braking System (ABS)

The Anti-lock Braking System (ABS)

can prevent slipping during braking. When starting the vehicle and driving away, the Anti-lock Braking System performs a self check. When the self check is carried out, you will hear a momentary motor running sound or “click” sound, and even notice a slight movement of the brake pedal, which is a normal phenomenon.

 Too high or too low tyre pressure or mixing different sizes of tyres on a vehicle can lead to a loss of braking effectiveness.

Use the anti-lock function

Do not perform cadence braking. As long as the brake pedal is firmly pressed, the anti-lock function will be automatically enabled. You may hear the sound of the anti-lock brake pump or motor and feel the vibration of the brake pedal, but this is normal.

Braking in case of emergency

The Anti-lock Braking System allows the driver to steer and brake simultaneously. In most emergencies, steering is more effective than braking.

Electronic Brake Assist System (EBA)

During emergency braking, the Electronic Brake Assist System (EBA) increases the driver's braking force and reduces the braking distance. Most drivers are able to brake in time in dangerous situations, but they do not press the brake pedal with enough force, so the brake system does not generate maximum braking force, resulting in increased braking distance.

The EBA is enabled when the brake pedal is pressed quickly while the vehicle is moving. At this point, the EBA will

Starting and Driving

generate a greater brake pressure than normal braking, allowing the brake system to generate the pressure required for maximum deceleration of the vehicle in the shortest possible time. The EBA utilizes the rapidly generated pressure within the braking system to help drivers achieve shorter braking distances in emergency situations. When the brake pedal is released, the EBA will be automatically disabled and the brake system returns to normal operation.

! EBA can only help the driver increase braking force, which does not mean it can avoid accidents. Therefore, it's necessary to always pay attention to maintaining distance between vehicles and driving carefully.

Hill Descent Control (HDC)

The vehicle is equipped with Hill Descent Control function, it can automatically brake to limit the speed of the vehicle without driver intervention during the downhill process and assist the driver to go downhill.



The HDC switch is located on the auxiliary console switch assembly.

When the vehicle speed is less than 35

km/h during downhill driving, press the HDC switch, and the HDC indicating light on the instrument cluster illuminates. Without driver intervention, the vehicle speed is automatically limited by braking, and the driver is assisted to go down the steep slope.

! Pressing the HDC switch is effective only when the vehicle speed is less than 35 km/h.

During the downhill process, the driver can control the speed through the accelerator pedal/brake pedal or LIM button on the steering wheel; Adjustable speed range is: 4 ~ 35 km/h; When the driver depress on the accelerator pedal to increase the speed by greater than 35 km/h and less than 60 km/h, this function is temporarily disabled. When the speed is reduced to 4 ~ 35 km/h, the HDC function is enabled; This function can be disabled by the HDC switch or by accelerating to greater than 60 km/h.

! When the HDC function is temporarily unavailable due to high brake temperature, the following situations will occur:

- When the HDC function is enabled, the HDC indicating light on the instrument cluster will extinguish and the system shuts down.
- When the HDC function is disabled, press the HDC switch, the HDC indicating light on the instrument cluster does not illuminate and the system cannot be turned on.

Hill Hold Control (HHC)

Hill Hold Control (HHC) allows the driver to prevent vehicles from sliding downhill after releasing the brake pedal. The HHC maintains the brake pressure applied by the driver, allowing the driver up to two seconds to move his foot from the brake pedal to the accelerator pedal, and then the brake pressure will be automatically released afterwards.

When reversing downhill (With the front of the vehicle facing downwards), it is also considered an uphill behavior, the HHC function is enabled at this point.



The HHC function can only be activated when the ESC system is enabled and the parking brake is fully released.



The HHC function only maintains the pressure for a short time when the driver releases the brake pedal. If the accelerator pedal is not pressed or the parking brake is not activated, the vehicle may slide down the slope after two seconds. Therefore, you should drive carefully when starting on the slope!

Traction Control System (TCS)

The Traction Control System prevents the driving wheels from slipping during acceleration and ensures the stable driving of the vehicle. The Traction Control System optimizes the target slip rate of the driving wheel according to the vehicle's demand for the longitudinal and lateral force on the driving wheel. By controlling the driving torque of the driving system

and the braking torque on the driving wheel, the slip rate of the driving wheel is controlled to improve the vehicle's acceleration and stability performance under various driving conditions. The control forms include ETCS and BTCS: ETCS prevents the vehicle from side-slip by reducing the torque of the drive motor; BTCS improves the acceleration performance of the vehicle by applying braking force to the slipping wheels.

When the Electronic Stability Control System is disabled, the Traction Control System will also be disabled, and the Electronic Stability Control System (ESC) off-indicator on the instrument cluster will illuminate. When the Electronic Stability Control System is enabled again, the Traction Control System will also be enabled.



When the start switch is in the ACC/ON position, the system performs a self-check, at which time the Electronic Stability Control (ESC) off-indicator on the instrument cluster illuminates, if there is no fault, it will extinguish after a few seconds. When the Traction Control System fails, the Electronic Stability Control (ESC) fault indicating light on the instrument cluster will illuminate. If the fault is not resolved, the indicating light will remain on. If the fault is not resolved, please contact the Geely Automobile Service Center for inspection as soon as possible.

Smart Parking Assist System

Parking Sensor System

The Parking Sensor System helps drivers avoid colliding with objects during the parking process.

The sensors on the rear bumper can be used to detect objects up to 1.5 meters behind the vehicle.

The Parking Sensor System cannot replace the driver's observation.

- The Parking Sensor System cannot detect objects under the bumper and the vehicle, or objects that are too close or too far from the vehicle.
- The Parking Sensor System may not be able to detect children, pedestrians, cyclists, or pets.
- The Parking Sensor System cannot detect very small objects.
- If you do not pay attention to the surrounding conditions of the vehicle before or during reversing, it may lead to personal injury and property damage. Even if the Parking Sensor System is equipped, the driver must carefully observe whether there are obstacles and pay attention to the rearview mirror of the vehicle before reversing.

How the system works

When the Parking Sensor System is working, if any obstacles appear within the detection range, the buzzer will sound to alert. The buzz indicates an obstacle behind the vehicle. The closer the vehicle approaches the obstacle, the faster the buzz sounds. When the distance is less than 30 cm, a continuous buzz will be heard. Only objects that are at least 20 cm above the ground and below the height of the

cargo box can be detected. The object must be within 1.5 meters of the rear bumper. In hot or humid weather, the distance at which objects are detected may decrease.

Enabling and disabling system

Enabling

Shift the shift lever into Reverse (R), the system is enabled.

Disabling

Move the shift lever out of Reverse (R) and the system will be disabled.


When the system fails to work properly

The Parking Sensor System may fail to alarm or false alarm in the following situations:


Inability to detect obstacles




- The Parking Sensor System sensors cannot detect mesh objects such as wires, cables and blockages.

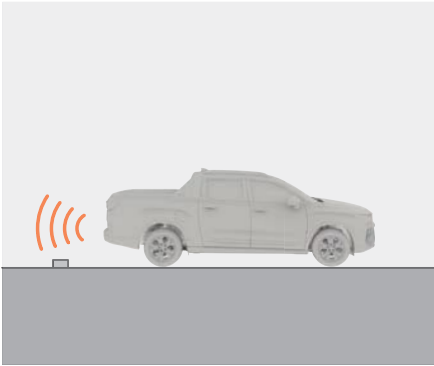


- The Parking Sensor System sensors cannot detect low objects such as rocks and wooden blocks.

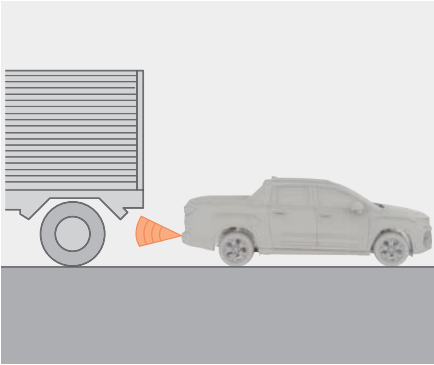

- The Parking Sensor System sensors cannot detect vehicles with a higher chassis.

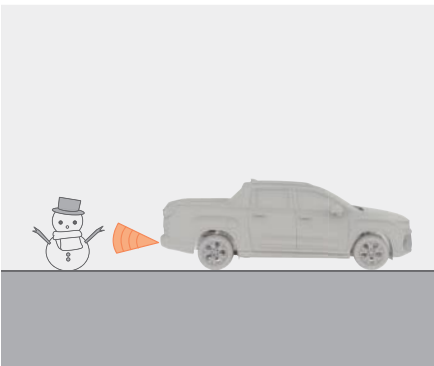

- The Parking Sensor System sensors cannot detect loose snow, cotton, sponges and other objects that tend to absorb ultrasound.

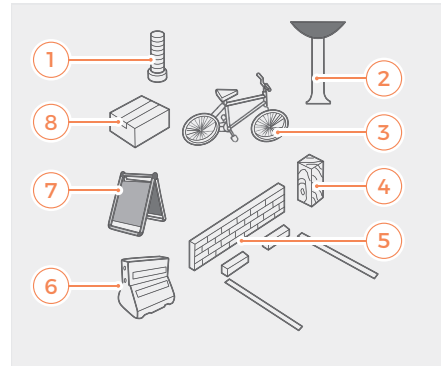

- The Parking Sensor System sensors may not be able to detect certain obstacles with particular shapes.


1. Pillar
2. Small trees
3. Bicycle
4. Angle bar
5. Cornerstone
6. Road barrier
7. V-shaped parking sign
8. Corrugated paper

Possible situations of false alarms



- The iced surface on the Parking Sensor System sensors.


Starting and Driving

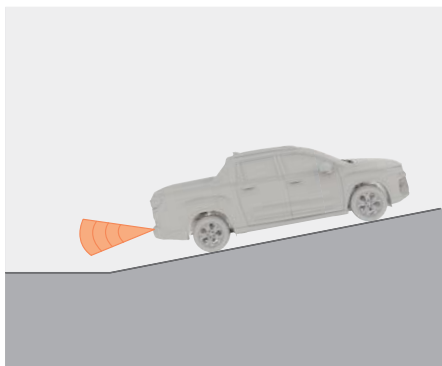

- The vehicle is on a steep slop.




- High frequency radios or antennas are installed on or near the vehicle.

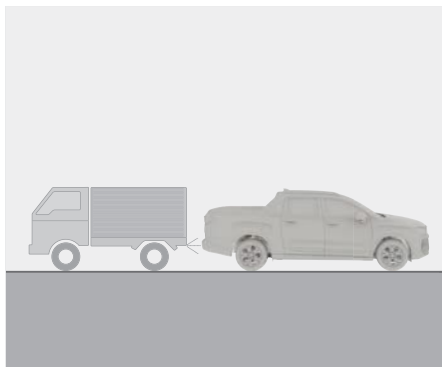

- Sounds such as the horns of other vehicles, the roar of the engine, and the exhaust of the vehicle are too close to the sounds of the Parking

Sensor System sensors.

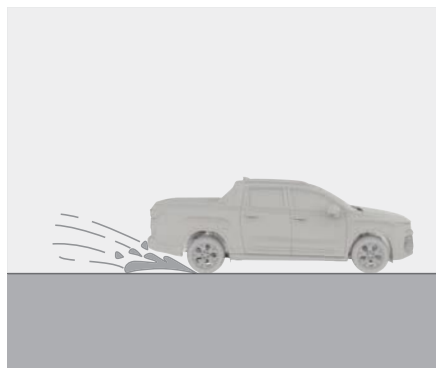

- Driving in snow or rain.

If the vehicle approaches an obstacle and the system still does not alarm, please contact the Geely Automobile Service Center for inspection when it is confirmed that the above situation is not causing it.



When there are multiple obstacles, the Parking Sensor System can only detect the nearest obstacle.



Do not use high-pressure water such as a water gun to directly spray or use other methods to squeeze or impact the surface of the Parking Sensor System sensor, otherwise it may cause failure.

Reverse Camera System

The Reverse Camera System assists the driver in reversing by displaying the image behind the vehicle.



Drivers must carefully observe whether there are obstacles around the vehicle before reversing, otherwise it may lead to personal injury and property damage. The Reverse Camera System cannot replace the driver's observation, do not rely solely on the Reverse Camera System to reverse.

- The distance displayed on the multimedia display screen is different from the actual distance.
- The reverse camera cannot detect objects outside the camera's visual range, such as objects under the bumper or vehicle.
- The Reverse Camera System may not be able to detect children, pedestrians, cyclists, or pets.
- It is prohibited to use the Reverse Camera System during long-distance and fast reversing or in areas with crosswise passing vehicles.

The reverse camera is located on the cargo tailgate. The reverse camera has a limited range and cannot capture objects near corners or under the bumper. The images displayed will vary depending on vehicle direction or road conditions. There is a difference between the distance in the image on the screen and the actual distance.

Reversing assistant line



The Reverse Assistant Line is a dynamic trajectory line that adjusts the indicated direction according to the angle change of the steering wheel rotation; When reversing, the Reverse Assistant Line covers the road surface behind the vehicle and rotates left and right according to the rotation of the steering wheel. Its indicated direction is the same as the actual trajectory of the vehicle, helping the driver plan the reversing route.

Enabling and disabling system

When the vehicle shifts into R gear, it can access the reverse camera interface.

- When the electronic shift lever is put into R gear, the Reverse Camera System is enabled, and the image will be automatically displayed on the multimedia display screen.

Reverse camera position



Starting and Driving

- When the electronic shift lever is moved out of R gear, the Reverse Camera System is disabled, and the multimedia display screen is delayed for a while before switching back to the interface previously displayed.

Reverse camera connection interruption


When the reverse camera does not work properly or the connection is interrupted, a message box will pop up on the multimedia display screen. Please contact the Geely Automobile Service Center for inspection as soon as possible.

Intelligent Driving System

Cruise Control System (CCS)

With cruise control, the speed can be maintained at any speed between 30 and 150 km/h without constantly depressing the accelerator pedal.

! Where cruise control is used, it may be dangerous if you cannot safely travel at a constant speed. Therefore, do not use cruise control on winding roads or in heavy traffic. Cruise control is also dangerous when driving on slippery roads. On such road surfaces, sharp changes in tyre traction can lead to unnecessary idling of the wheels, and the vehicle may lose control. Never use cruise control on slippery roads.

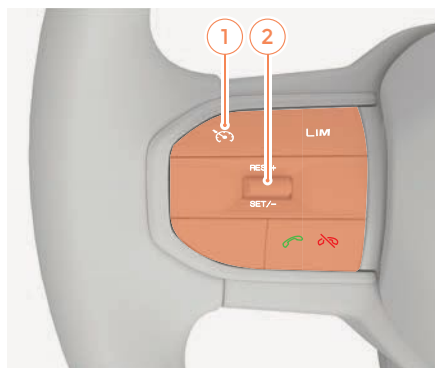

The cruise control buttons are located to the left of the steering wheel.

- Cruise control button:
Cruise control can be turned on/off by pressing the cruise control button.
- Speed adjustment and setting buttons:
 - Push this button up to restore the cruise speed to the original setting or increase the cruise speed.

- Push this button down to set the current speed to the cruise speed or reduce the cruise speed.
- If the cruise control system is enabled, push the speed adjustment and setting buttons upward and hold them, and the cruise speed will be adjusted to an integer multiple of 5 and then in continuous increments of 5 km/h. If you want to accelerate slightly, push the speed adjustment and setting buttons upwards. Each push will increase the cruising speed by 1 km/h.



If you leave the cruise control system on all the time, you may accidentally push the button and enter the cruise state. It may frighten and cause the vehicle to lose control. Therefore, turn off the cruise control switch when you do not need to use cruise control.

Set vehicle speed

1. Press the cruise button to activate cruise control.
2. Push the Speed Adjustment and Set button down, then release, and the current speed will be set to the cruising speed.
3. Push the Speed Adjustment and Setting buttons up or down to set the desired cruising speed.

Reset speed

If the cruise control is set at the desired speed and the brake pedal is pressed, the cruise control is removed and the stored speed remains in the memory. To restore the preset speed, push the speed adjustment and setting button upward when the speed reaches about 30 km/h or above. So the vehicle reaches a preset speed.

Speed up when using cruise control

There are two ways to speed up:

- Pressing the accelerator pedal will increase the speed of the vehicle. To make the increased speed remembered as cruising speed, push the speed adjustment and setting buttons down.

Slow down when using cruise control

If the cruise control system is enabled, push down the speed adjustment and setting button and hold it, and the cruise speed will be adjusted to an integral multiple of 5 before decreasing at 5 km/h. If you want to slow down slightly, push down the speed adjustment and setting button, each push will reduce the cruise speed by 1 km/h.

Overtaking when using cruise control

Depress the accelerator pedal to increase the speed. When the foot leaves the accelerator pedal, the vehicle slows to a pre-set cruise control speed.

Use cruise control on ramps

The performance of the cruise control system on the ramp depends on the speed, the load, and the slope of the ramp. When climbing a steep hill, you may need to hold the accelerator pedal to maintain your speed. When going downhill, it may be necessary to brake or drop into a low gear to maintain speed. Cruise control is turned off when the brakes are activated.

End cruise control

The following methods can end cruise control:

Starting and Driving


- Press the brake pedal, but the cruise status indicator does not go off.
- Hang into neutral (N).
- Press the cruise control button to turn off the cruise control completely.

Clear speed memory

When the cruise control is turned OFF or the start switch is set to off, the cruise control set speed memory is erased.


Hazard Warning Device

Hazard Warning Light

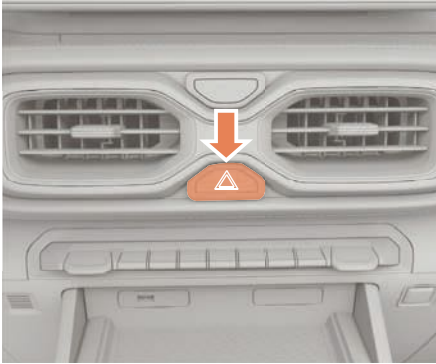


When the vehicle needs to be decreased or stopped in an emergency during driving under special circumstances, press the hazard warning light switch, and the indicator left and right turning signal lights blink at the same time to warn others. Press the switch again to turn off the hazard warning light.

Warning Triangle Plate

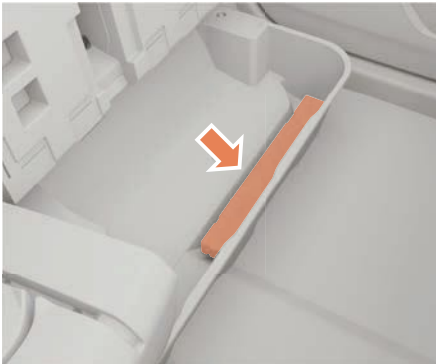

The warning triangle plate is stored under the left rear seat and can be seen by turning back the seat cushion.

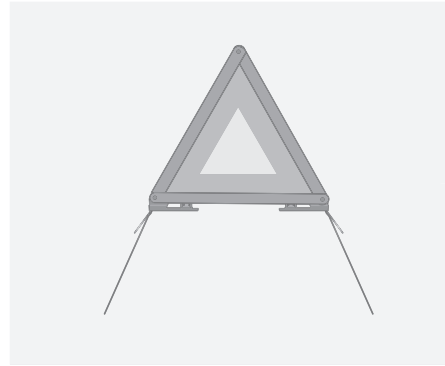

On conventional roads, the warning triangle plate should be set at 50 to 100 meters behind the vehicle; On the highway, it is necessary to set the warning sign at 150 meters behind the vehicle, and in case of rain and fog, the distance has to be increased to 200 meters.

Reflective vest



Reflective vest is stored in the storage box and it can be seen after opening the storage box.

! In an emergency, the driver should wear a reflective vest in the vehicle before exiting the vehicle to protect personal safety.

Jump Start

Jump Start

The vehicle is equipped with an intelligent recharge function which recharges the low-voltage battery automatically from the power battery when the low-voltage battery is depleted. If the low-voltage battery is depleted for other reasons and the vehicle needs to be jump-started, make sure to perform the following operations to ensure safety.



Improper use of jumper cable may lead to low-voltage battery explosion, resulting in serious injury or death! To reduce the risk of accidents, be sure to follow the following instructions:


- When working in the engine compartment, always carefully read and observe the related safety warning instructions.
 - Be sure to carefully read and observe the safety warning instructions related to low-voltage battery operation.
 - The voltage of the low-voltage power supply battery must be the same as that of the depleted low-voltage battery (12V), and the capacities of the two low-voltage batteries should also be the same as possible (See the specifications marked on the low-voltage battery), otherwise, it may cause an explosion!
- If the low-voltage battery freezes, do not use the jumper cable to start the vehicle, otherwise, it is extremely easy to cause an explosion! Even after the low-voltage battery is thawed, the electrolyte in it may leak, resulting in chemical ablation. Therefore, the frozen low-voltage battery must be replaced!
 - Strictly observe the operating instructions provided by the jumper cable manufacturer.
 - Do not connect the negative cable directly to the negative terminal of the depleted low-voltage battery, otherwise the gas generated by the low-voltage battery may be ignited by the electric spark, causing an explosion!
 - There should be no static electricity near the low-voltage battery, because the gas in the low-voltage battery may be ignited by the electric spark generated by static electricity, causing an explosion!
 - Do not connect the negative cable to the brake hose/line.
 - The uninsulated area on the wire clamp should not contact each other, besides, the jumper cable connected to the positive terminal of the low-voltage battery must not be in contact with the metal parts of the vehicle. Otherwise, it may cause a short circuit.
 - Place the jumper cable properly, taking care to avoid contacting with the moving parts in the engine compartment.

Fault Happened When Driving

- Never lean over the low-voltage battery during operation, and be care not to be burned by acid fluid!

1. With the start switch in OFF, turn off all lights and electrical accessories of the vehicle except the hazard warning lights (If necessary).

! Using an open flame near the low-voltage battery may cause the gas in the low-voltage battery to explode, resulting in serious injury or death. The acid fluid in the low-voltage battery will burn the human body, so do not let the acid fluid splash on your body. If the acid fluid spills into your eyes or on the skin, immediately rinse with water and seek medical attention.

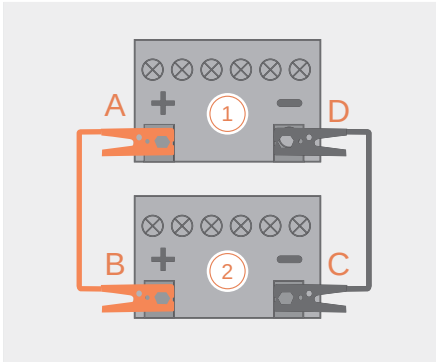

1. Depleted low-voltage battery
2. Charged low-voltage battery
2. Connect one end of the red positive (+) cable to the positive (+) terminal (A) of the depleted low-voltage battery.
3. Connect one end of the red positive (+) cable to the positive (+) terminal (B) of the charged low-voltage battery.
4. Connect one end of the black negative (-) cable to the negative (-) terminal (D) of the depleted low-voltage battery.

terminal (C) of the charged low-voltage battery.

5. Connect the other end of the black negative cable to the negative (-) terminal (D) of the depleted low-voltage battery.
6. Try starting the vehicle with a depleted low-voltage battery. Please contact the Geely Automobile Service Center if it doesn't start after several attempts.

! Connect or remove the jumper cable in correct order, and ensure that the cables do not touch each other or touch other metals. If the jumper cable is connected or removed in wrong order, an electrical short circuit may occur and the vehicle may be damaged, resulting in repairs that are not covered by the warranty.

To disconnect the jumper cable from both vehicles:

1. Disconnect the black negative (-) cable from the depleted low-voltage battery.
2. Disconnect the black negative (-) cable from the charged low-voltage battery.
3. Disconnect the red positive (+) cable from the charged low-voltage battery.
4. Disconnect the red positive (+) cable from the depleted low-voltage battery.

Towing Your Vehicle

Towing Tips

This is a battery electric vehicle with rear-wheel drive, and you can choose a platform device to tow the vehicle. The operator loads your vehicle onto the truck. This is the best way to transport your vehicle.

 The trailer and the towing vehicle shall turn on the hazard warning lights.

 Do not tow the vehicle, otherwise it will cause serious damage to the vehicle.

Towing Eyelet

The towing eyelet is located in the tool bag under the right rear seat and can be used to tow a faulty vehicle.

When using the towing eyelet, follow the instructions in "Towing Tips" and "Precautions when using the towing eyelet" in this section.



Precautions when using the towing eyelet

- Ensure that the towing eyelet is firmly and reliably screwed into the mounting hole.

- It is recommended to install a licensed towing bar or rope on the towing eyelet.
- Do not use the towing eyelet to tow the vehicle to the platform rescue vehicle.
- Do not use the towing eyelet to rescue the trapped vehicles.

 Keep a safe distance from the vehicle when using the towing eyelet.

- Do not use a towing chain/belt on the towing eyelet. The towing chain/belt may break, resulting in injury or death.
- Failure to follow the correct instructions for the use of the towing eyelet may result in a rupture of the component, which may result in injury or death.

 The towing eyelet is only for road rescue and shall not be used for other purposes.


- When using the towing eyelet, be sure to use the corresponding equipment (Such as rigid towing bar or towing rope) in accordance with road traffic regulations to pull the vehicle to the nearest maintenance point over a short distance.
- The towing eyelet must not be used to tow vehicles on off-highway or road surface with obstacles.
- When using the towing eyelet, the trailer and the towing vehicle must be kept on the same center line as possible. Failure to follow the above instructions may result in damage to the vehicle.

Fitting the front towing eyelet

The mounting hole for front towing eyelet is located on the right side of the front bumper.



When installing the front towing eyelet, pry up the towing hole cover plate at its lower edge, and then screw the towing eyelet into the mounting hole to ensure that the towing eyelet is fully tightened.

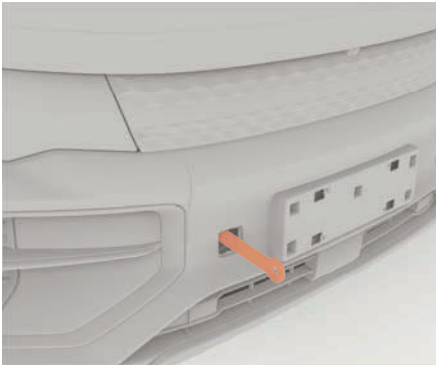

Drive the vehicle slowly, or too much traction will damage the vehicle.

Fitting the rear towing eyelet

The mounting hole for the rear towing eyelet is located on the right side of the rear bumper.



When installing the rear towing eyelet, pry up the towing hole cover plate at its lower edge, and then screw the towing eyelet into the mounting hole to ensure that the towing eyelet is fully tightened.



Towing Mode (If Equipped)

When trailing an RV, the driver is required to have the relevant qualifications. Before using the trailer function, first check the regulations about the relevant motor vehicles in that region, because the regulations are different in each region, you need to select the RV that meets the specifications, and you can also consult the Geely Automobile Service Center before trailing.

Fault Happened When Driving



- Be sure to make a smooth start-off and avoid rapid acceleration or emergency braking on slippery roads, preventing the vehicle from being out of control due to slip.
- Sidewind and rough roads may cause the vehicle to swing, seriously affecting the handling of the vehicle. In any case, if you notice slight vehicle sway, be sure to hold the steering wheel with both hands and slowly reduce the speed.
- When towing a vehicle, the braking distance of the vehicle will be increased. Therefore, you should increase the distance from the vehicle in front.
- When overtaking with a towing vehicle, it needs to drive a longer overtaking distance before it returns to the original driving lane.
- When towing a vehicle, be sure to smoothly turn, try to avoid bumps or sudden operation of the steering wheel, and turn on the turning signal light in advance.
- When the towing vehicle is driving to a steeper or longer slope, slow down in advance. The speed is controlled according to the mass of the towed vehicle and the slope of the road.
- Try to avoid parking on the hill, if it cannot be avoided, place a stopper under the tyres of the towing vehicle and the towed vehicle, and apply the parking brake.

- Do not tow the RV with a large load, so as to avoid the trailer function failure.
- After waterlogging, please check and clean the trailer socket in time to ensure that the socket is dry and clean.
- When installing and using the trailer socket, do not twist the shell at will to avoid socket failure.
- Prohibit to remove and reassemble the trailer socket without permission, so as to avoid the failure of the trailer socket.




Before driving, make sure the tyre pressure, lighting and connection devices of the towed vehicle and trailer are normal.

- When towing an RV, please comply with the relevant local laws and regulations, and it is strictly prohibited to modify it without permission.
- Make sure the cargo is securely secured to the trailer and that the trailer is level.
- During the new vehicle run-in period, do not tow an RV.
- The RV equipped with electric service brake is not allowed to be towed.

Electric joint

The electric joint is installed at the left-center position on the rear bumper and can be used after opening the protective cover.

Fault Happened When Driving

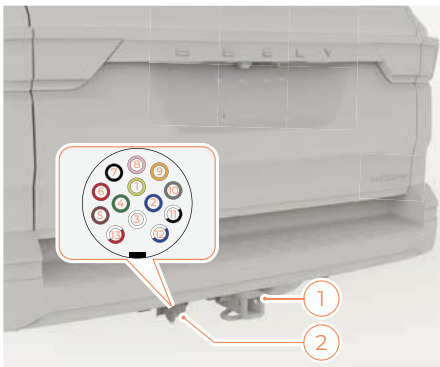

1. Towing hook
2. Electric joint

! When the electric joint is not connected to the RV port to be towed, do not use the high pressure water gun to clean the electric joint directly, which may cause water to enter into the joint and cause damage to it.

The electric joint equipped on this vehicle is a 13-core coil, and the corresponding standard of the electrical outlet is ISO 11446:2004. The specific pin functions are as follows:

PIN	Function
1	Left turn signal light
2	Rear fog light
3	General ground wire
4	Right turn signal light
5	Right position light
6	Brake light
7	Left position light
8	Back-up light
9	Connecting battery
10	Switch power source

PIN	Function
11	Switch ground
12	Blank
13	Power source ground

Trailer mode on and off

When the vehicle is in P gear, the trailer mode is actively turned on after connecting the electric joint, and the trailer mode is turned off when the joint is disconnected.

! Before turning on trailer mode, make sure the shift position is in P gear.

Technical parameters

The towing capacity of the vehicle depends on vehicle specifications, load, road conditions and trailer specifications, etc. Please refer to the table below for specific parameters.

Item	Parameter
Allowable maximum towing mass (With braking) (kg):	2500
Allowable maximum towing mass (Without braking) (kg):	750
Size limit for allowable towed center axle trailer (mm):	Not exceeding its own body width (≤ 1900)
Connecting ball joint:	Comply with the size requirements of ECE R55 A CLASS ball joint

Tyre Replacement

Tyres

Overview

If you have any questions about the tyre warranty and repair points, please refer to the vehicle's Warranty and Maintenance Manual for details. For additional information, please contact the tyre manufacturer.

! It is very dangerous if the tyres are poorly maintained and improperly used. Tyre overload or underinflation can cause tyre deformation, leading to serious injury or death.

Be sure to check all tyres frequently to maintain the recommended pressure values. Check the tyre pressure when the tyres are cold. Please see "Tyre Pressure (Cold)" in "Technical Data". Overinflated tyres are more likely to be scratched, punctured or burst by sudden impact. Therefore, the tyre should maintain the recommended pressure value.

Old tyres can cause accidents. If the tyre tread is seriously worn or the tyre has been damaged, replace it in time.

Tyre pressure

The tyre cannot work effectively unless it has the correct inflation pressure.

! Underinflation or overinflation of the tyre may affect the tyre and the vehicle driving. If the tyre is underinflated, the following will occur:

- Overdeformation
- Overheating
- Tyre overload
- Premature or irregular wear
- Poor maneuverability

If the tyre is overinflated, the following will occur:

- Abnormal wear
- Poor maneuverability
- Poor riding comfort
- Unnecessary damage due to dangerous road conditions



The vehicle is labeled with tyre pressure. The label is located below the outside of the left center pillar and indicates the recommended tyre pressure.

Tyre pressure monitoring system

The tyre pressure monitoring system alerts the driver to check the tyre pressure by turning on the abnormal tyre pressure warning light. After the tyre is cold and inflated to the pressure recommended on the tyre pressure label, each tyre should be checked once a month.

If the abnormal tyre pressure warning light turns on, it indicates that one or more tyres have abnormal tyre pressures. At this time, stop the vehicle as soon as possible, check the tyre pressure and deflate the tyre to the correct tyre pressure. The tyre pressure label attached to the vehicle indicates the tyre pressure when the tyre is cold. The vehicle's tyre pressure monitoring system can alert you to abnormal tyre pressure, but it is not a substitute for normal tyre maintenance, as described in the "Tyre Inspection and Rotation" section of this chapter.

When the tyre is replaced or rotated, the position of the tyre pressure sensor should be correctly matched to that of the tyre.

i When the vehicle is driving in winter, if all four tyres are replaced with snow tyres (The sensor is not installed on the tyre), the instrument cluster indicates that the sensor is lost and gives a system failure alarm.

Tyre inspection

When should tyres be inspected

Check the tyres at least once a month. Please refer to the "Tyre Pressure (Cold)" section in the "Technical Data" for tyre inflation pressure.


How to check tyres

Check the tyre pressure with a premium pocket tyre pressure gauge.

Check the tyre inflation pressure when the tyre is cold. Remove the valve cap from the tyre valve. Press the tyre pressure gauge firmly against the valve to measure the pressure reading. If the cold tyre inflation pressure meets the recommended pressure value on the tyre pressure label, adjustment is unnecessary. If the inflation pressure is too low, continue to inflate to the recommended pressure. If the tyre is overinflated, press the metal valve core of the tyre valve to deflate the tyre. Use the tyre pressure gauge to check the tyre pressure again. Be sure to put the valve cap back on the valve core. The valve cap can prevent dust and moisture from entering.

When should the tyre be replaced with a new one

Many factors such as maintenance, temperature, driving speed, vehicle load and road conditions will affect the tyre service time.

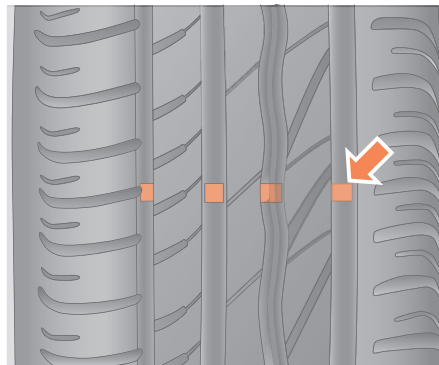

One way to judge when replacing with a new tyre is to check the tread wear indicator, which appears when the wheel is worn to a total tread thickness of about 9.4mm.

Fault Happened When Driving

If any of the following conditions occurs, replace with a new tyre:

- A wear indicator appears on the tyre.
- The cord thread or fabric appears by penetrating through the tyre rubber.
- The tread or sidewall is broken, cut or has a split deep enough to see cord thread or fabric.
- The tyre has a bulge, swollen or layering. The tyre is punctured, cut, or otherwise damaged and cannot be fully repaired due to the damage area or location.

If it cannot be determined when you need to replace the old tyres, check with the tyre manufacturer for more information.



Please dispose of the tyres in accordance with relevant environmental protection laws.

Purchase new tyres

When purchasing a new tyre, ensure that the size, load range, rated speed and structure type of the new tyre are the same as the original tyre. It is recommended that all four tyres should be replaced together. Please refer to the “Tyre Inspection and Rotation” section in this chapter for information on tyre rotation.



By mixing different sizes or types of tyres (Radial tyre or belted bias tyre), it may cause traffic accidents and damage the vehicle due to poor handling. All wheels should use the correct size and type of tyres.



This vehicle can only use radial tyres, otherwise it may be suddenly out of control, causing an accident.

Tyres and wheels with different sizes


If the used wheels or tyres are different in size from the original wheels and tyres, the performance of the vehicle or the functionality of the electronic system may be affected.



If choosing a tyre that is not the recommended specification in this manual, it may not be able to provide better performance and safety guarantees, increasing the risk of traffic accidents.

Tyre inspection and rotation

Check the vehicle's tyres regularly for signs of wear or damage. Please refer to “When should the tyre be replaced with a new one” in this chapter for details. It is recommended that tyre rotation should be performed every 10,000 kilometers or so. The purpose of regular tyre rotation is to make all the tyres of the vehicle evenly wear. As soon as abnormal wear is found, tyre rotation should be performed as soon as possible and inspect the wheel alignment. Also check the tyres or wheels for damage. Please refer to “When should the tyre be replaced with a new one” and “wheel replacement” in this chapter.

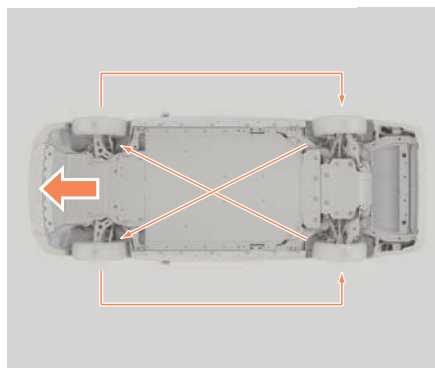

When performing tyre rotation, be sure

to follow the correct rotation pattern shown in this figure. After performing tyre rotation, adjust the inflation pressure of the front and rear tyres according to the instructions on tyre pressure label of the vehicle. Please refer to "Tyre Pressure" in this chapter.

 The wheel nut will become loosened after a certain amount of time due to the rust or dirt on the wheel or wheel attachment. The wheels may come off, causing an accident. When replacing the wheel, remove the rust or dirt from the connecting part between the wheel and the vehicle.

 It is very dangerous to use improper wheels and wheel nuts on this vehicle. It will affect the braking and handling performance of the vehicle, which may cause accidents, resulting in injury or death. Therefore, be sure to replace the wheels and wheel nuts with the correct ones.

 The wrong wheel can also cause problems in the aspects such as service life of bearing, brake cooling, speedometer or odometer calibration, and clearance between the tyre or tyre chain and the body and chassis.

Wheel alignment and tyre balance

If abnormal tyre wear or vehicle pull is found, inspect the wheel alignment. If the vehicle is bumpy while driving on a flat road surface, it may be necessary to balance the tyres and wheels again. Please contact Geely Automobile Service Center for inspection and repair as soon as possible.

Wheel replacement

Replace the wheels that are bent, cracked, severely rusted or corroded. If the wheel nuts become loose frequently, replace the wheel, hub and wheel nuts. If any of the wheels, wheel nuts or tyre pressure monitoring system sensors need to be replaced, replace it with original parts. Ensures that the wheels, wheel nuts and tyre pressure monitoring system sensors match the vehicle.

Use old wheels

Do not use old wheels, or it will cause an accident. If you need to replace the wheel, use the new original wheel.

Winter tyre

Winter tyres are used to increase the friction on icy or snowy roads. If the winter tyres are used, there may be a decrease in driving traction on dry roads, an increase in road noise and a shortened tyre service life. Also pay attention to changes in vehicle handling and braking.

For details on the availability of winter tyres and the selection of suitable tyres, please contact the Geely Automobile Service Center. If you choose winter tyres:


- All four wheels use the tyres with the same brand and tread pattern type.
- Use only radial tyres that have the same size, load range and rated speed as the original tyres.
- Do not exceed the maximum rated speed of the tyre.

Fault Happened When Driving

! Because snow tyres and other tyres are not original specifications, there may be unexpected and wrong tyre pressure warnings

Tyre chain

i The tyre chain does not belong to the equipment scope of this vehicle, the following information is for reference only.

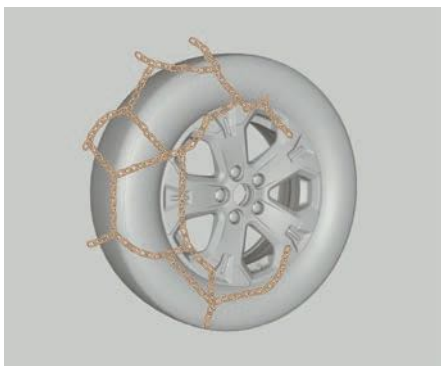

Determine whether to add tyre chains based on the actual road conditions.

When using tyre chains, try to avoid a full load of vehicles. In addition, drive cautiously at a low speed. Otherwise, it will damage the vehicle or affect the handling performance of the vehicle.

When installing tyre chains, be sure to choose a chain that is suitable for the size of the vehicle tyre, and strictly observe the manufacturer's instructions when installing the chain.

! Do not use the chain on dry road surfaces.

When the tyre is flat

When the tyre bursts or breaks during driving, please hold the steering wheel

and gently depress the brake pedal to slow down. Emergency braking or turning the steering wheel sharply are easy to make the vehicle out of control. If the tyre is found to be leaking, perform the operations as follows:

1. Drive the vehicle slowly to a safe flat area to avoid further damage to the tyres and wheels.
2. Turn on the hazard warning light and place a triangle warning plate at an appropriate position.
3. Repair the tyre with a quick tyre repair device.

! To prevent the vehicle from moving, take the following methods:

- Activate the parking brake.
- Shift the electronic shift lever to park (P)/neutral (N).
- Do not leave occupants in the vehicle.
- Before repairing the tyre with a quick tyre repair device, place a stopper in front and back of the remaining tyres.

Rapid tyre repair



i Stop the vehicle on a safe, level, and firm road surface and use a quick tyre repair tool. Turn on the hazard warning lights and place a triangle warning plate within the specified distance.

! The quick tyre repair device is only suitable for sealed tyres with puncture in the tread.

! After using the quick tyre repair device, the driving speed should not exceed 80 km/h (The maximum driving distance is 200 km). And visit the Geely Automobile Service Center as soon as possible to check whether the sealed tyre needs to be repaired or replaced.

Introduction for quick tyre repair device

The quick tyre repair device is stored under the rear right seat.

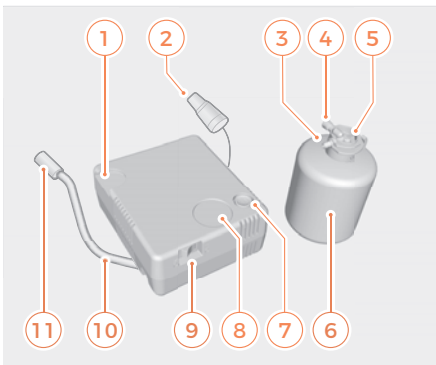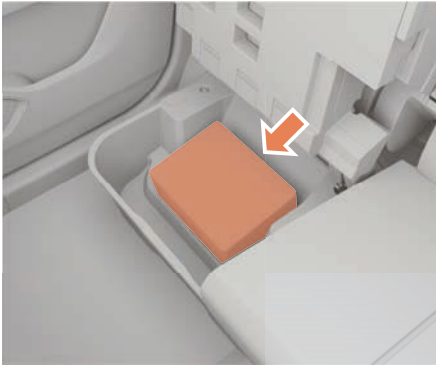


1. Air pump groove
2. Cable
3. Tyre repair fluid air tube
4. Tyre repair fluid valve
5. Tyre repair fluid cap

6. Tyre repair fluid tank
7. Pressure reduction valve
8. Pressure gauge
9. Switch
10. Air hose
11. Air hose protective cover

The quick tyre repair device is used to repair punctured tyres, check and adjust the tyre pressure. The tyre repair fluid tank must be used before the expiration date and replaced after use.

! The quick tyre repair device has a limited ability to seal the punctured tyre and is only used as a temporary emergency repair. If the tyre has large slits, cracks or similar damage, it is prohibited to use a quick tyre repair device to seal the tyre.

Seal the punctured tyres

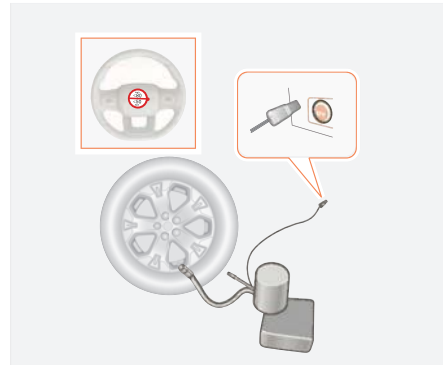

1. Remove the label for maximum allowable speed (Attached to the bottom of the tyre repair fluid tank) and attach it to the steering wheel.

i Do not damage the tyre repair fluid tank before use. The seal is opened when the tank is screwed in.

Fault Happened When Driving



The tyre repair fluid irritates the skin. Wash immediately with soap or water after contacting with the skin.

2. Check that the electric air pump switch is in O position, then take out the wire and air hose.
3. Connect the air tube of the electric air pump to the tyre repair fluid valve.
4. Insert the tyre repair fluid cover from the side into the air pump groove.
5. Connect the tyre repair fluid pipe to the tyre valve.
6. Plug the cable into the 12V power socket and start the vehicle.



Do not leave children unattended in a vehicle while the drive motor is running.

7. Turn the electric air pump switch to position I.



Do not stand next to tyres while operating electric air pump. If any cracks or unevenness occur, turn off the electric air pump immediately. Do not continue to drive the vehicle. Please contact Geely Automobile Service Center for inspection and repair as soon as possible.



When the electric air pump is started, the pressure will increase to 6 bar, but it drops after about 30 seconds.

8. Inflate the tyre for a few minutes.



The operating time of the electric air pump should not exceed 10 minutes, otherwise there is a risk of overheating.

9. Turn off the electric air pump and check the pressure on the pressure gauge. The minimum pressure is 1.8 bar, and the maximum pressure is 3.2 bar.



If the tyre pressure is too high, release some air through the pressure reduction valve.



If the pressure is lower than 1.8 bar, it means that the puncture is too big to drive. It is recommended to contact Geely Automobile Service Center for inspection and repair.

10. Turn off the electric air pump and remove the wire from 12V power socket.
11. Remove the tyre repair fluid hose from the electric air pump.
12. Drive the vehicle immediately for 10 minutes or 8 km at a speed of no more than 80 km/h to allow the tyre repair fluid to seal the tyre evenly.

Recheck the tyre

1. Reconnect the air tube of the electric air pump to the tyre valve.
2. Read the tyre pressure on the gauge.
 - If the tyre pressure is below 1.8 bar, it means that the tyre is not completely sealed. Do not continue to drive at this time. Please contact Geely Automobile Service Center.
 - If the tyre pressure exceeds 1.8 bar, inflate the tyre to the pressure specified in the tyre pressure table. If the tyre pressure is too high, release the air with the pressure reduction valve.
3. Make sure the electric air pump is off. Separate the air hose and cable. Install valve cap.

 After the tyre is inflated, be sure to reinstall the dust cap to prevent the tyre valve from being damaged by gravel or dust. Only plastic dust cap can be used. Metal dust cap may be rusted and become difficult to loosen.

 The tyre repair fluid tank and hose must be replaced after use.

 Check the tyre pressure regularly.

Tyre Inflation

The original tyres can be inflated with an electric air pump.


1. The electric air pump must be turned off. Check that the switch is in position O and take out the cable and air hose.
2. Loosen the wheel valve cap and screw the joint of the air pump tube into the thread at the bottom of the tyre valve.
3. Connect the cable to the backup power supply and start the vehicle.
4. To start the electric air pump, please turn the switch to position I.
5. Inflate the tyre to the pressure specified on the tyre pressure label (If the tyre pressure is too high, use the pressure reduction valve to release air).
6. Turn off the electric air pump. Separate the air hose and cable.
7. Reinstall the electric air pump into the mounting groove.

Fault Happened When Driving

Changing Fuses


Fuse Position and Identification

Protect the wires and electrical equipment by fusing the fuse to prevent the circuit overload. If the circuit fails and stops working, the fuse can be removed from the fuse box to check if the metal wire in the fuse is blown.

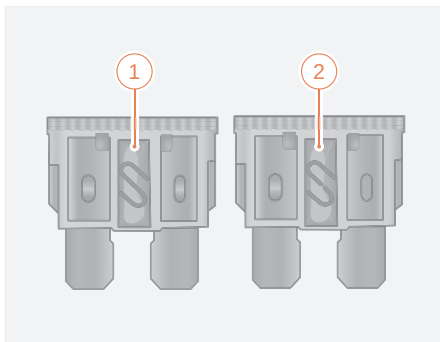

1. Good fuse
2. Blown fuse

The fuse is located in the compartment fuse box on the left side of the engine compartment and the interior fuse box on the left side of the instrument panel. There are three different types of fuses:

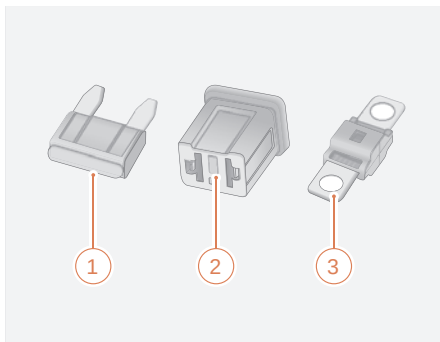

1. Blade fuse - fast acting, plug-in type, rated current range 5-30A.


2. Square fuse - slow acting, plug-in type, rated current range 20-60A.
3. Bolted type fuse - high current slow acting, bolted type, rated current range 30-200A.

The color represents the ampere value of the fuse, which is also labeled on the fuse.

⚠ For the blown fuses, do not try to repair or replace them with fuses that are inconsistent in colour or ampere value, otherwise it will cause damage to the electrical system or fire due to wire overload.


Engine Compartment Fuse Box

1. Open the engine hood.
2. Open the engine compartment fuse box outer cover.

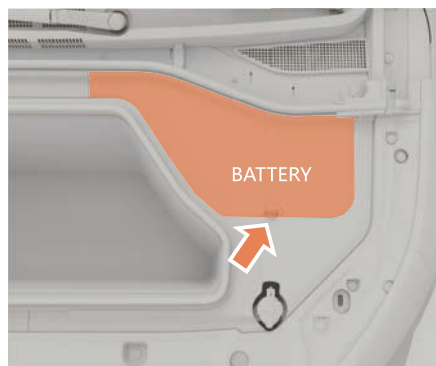

3. To check the fuse, loosen the side lock striker shown in the figure and remove the fuse box cover.

 Exposure to liquids can damage all electrical parts on the vehicle. Be sure to close the covers of all electrical parts.

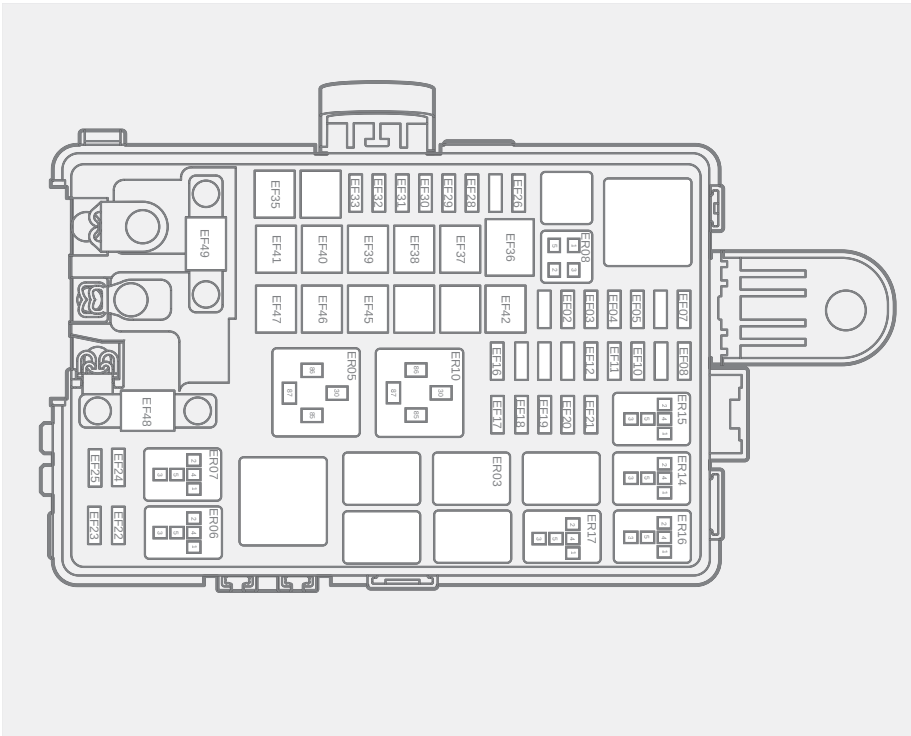

7

Fuse number	Name	Amperage	Remark
EF01	Intelligent power supply (If equipped)	10 A	
EF02	Front through light fuse (If equipped)	5 A	-
EF03	Vehicle control unit VCU fuse	10 A	-
EF04	BCM door lock power supply fuse	25 A	-

Fault Happened When Driving

Fuse number	Name	Amperage	Remark
EF05	BCM external light power supply fuse	25 A	-
EF07	Horn fuse	15 A	-
EF08	Battery electronic water pump fuse	15 A	-
EF10	Motor electronic water pump fuse	15 A	-
EF11	VCU main relay power supply fuse	25 A	-
EF12	Brake switch fuse	5 A	-
EF16	Charging wake-up fuse (If equipped)	10 A	-
EF17	Low speed siren fuse	5 A	-
EF18	Electronic stability system ESC fuse	5 A	-
EF19	EVCC (If equipped)/Vehicle control unit/ Power battery pack/High and low voltage charging system assembly/Electric drive system fuse	10 A	-
EF20	Electronic brake booster fuse (If equipped)	5 A	-
EF21	Exterior rearview mirror heater fuse (If equipped)	10 A	-
EF22	Left low beam light fuse	10 A	-
EF23	Right low beam light fuse	10 A	-
EF24	Left high beam light fuse	10 A	-
EF25	Right high beam light fuse	10 A	-
EF26	Three-state pressure switch fuse	5 A	-
EF28	Front wiper motor fuse	30 A	-
EF29	High and low voltage charging system assembly fuse (If equipped)	10 A	-
EF30	Thermal management relay fuse	10 A	-
EF31	Electric drive system MCU fuse	10 A	-
EF32	Rear defroster fuse (If equipped)	25 A	-
EF33	EVCC (If equipped)/ Power battery pack fuse	5 A	-
EF35	Center power distribution box B + fuse	50 A	-
EF36	Cooling fan fuse	80 A	-

Fault Happened When Driving


Fuse number	Name	Amperage	Remark
EF37	Electronic brake booster fuse (If equipped)	60 A	-
	Electronic vacuum pump fuse (If equipped)	30 A	-
EF38	Blower fuse	40 A	-
EF39	Driver power seat fuse	30 A	-
EF40	Passenger power seat fuse (If equipped)	30 A	-
EF41	Ripple anti-pinch module 2FL&RR fuse	30 A	-
EF42	Towing hook fuse (If equipped)	30 A	-
EF45	Body stability system motor ESC fuse	40 A	-
EF46	Body stability system excitation fuse	40 A	-
EF47	Center power distribution box (IG1/ ACC) fuse	50 A	-
EF48	Electric power steering system EPS fuse	80 A	-
EF49	DC power supply DCDC fuse	200 A	-

Fault Happened When Driving

Interior Fuse Box



The interior fuse box is located on the left side of the instrument panel. Uncover the instrument panel storage box to view the fuse.

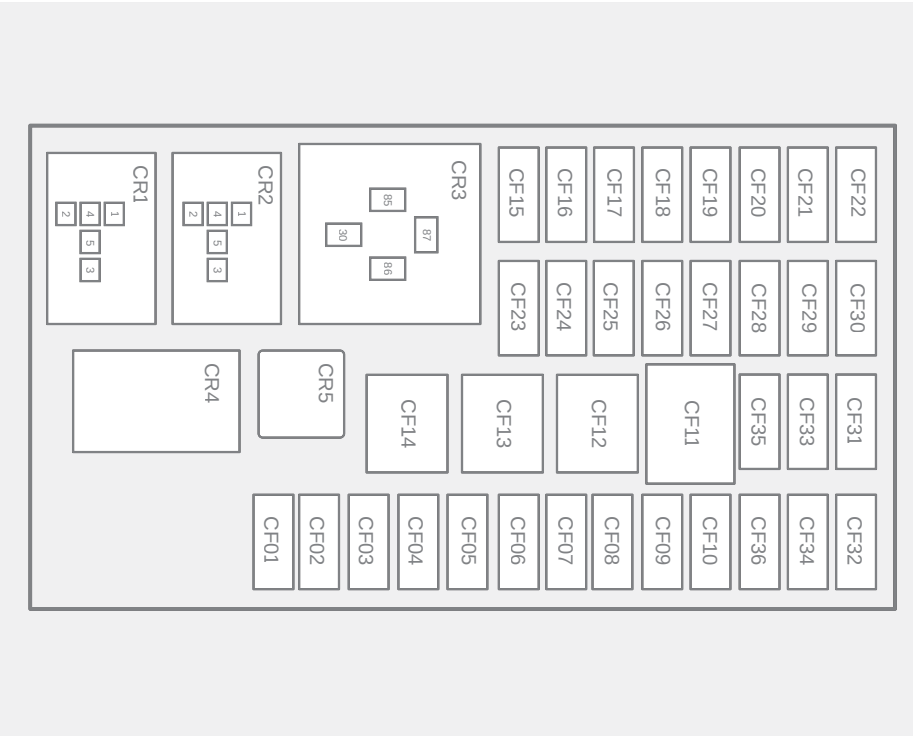

Fuse number	Name	Amperage	Remark
CF01	Brake switch fuse	5 A	-
CF02	BCM interior light fuse	20 A	-

Fault Happened When Driving


Fuse number	Name	Amperage	Remark
CF03	Rear view mirror folding fuse (If equipped)	10 A	-
CF04	Front washer fuse	15 A	-
CF05	High voltage power distribution box relay discharge platform fuse (If equipped)	5 A	-
CF06	Towing hook module B2 + fuse (If equipped)	30 A	-
CF07	Electronic shifter fuse	5 A	-
CF08	Diagnostic port fuse	10 A	-
CF09	Door handle antenna/Air conditioner switch/EPB switch fuse	5 A	-
CF10	Gateway fuse	5 A	-
CF11	Shipping fuse	20 A	-
CF12	Power window 1 fuse	30 A	-
CF13	Sunroof fuse (If equipped)	20 A	-
CF14	Towing hook module B1 + fuse (If equipped)	30 A	-
CF15	Towing hook power source IG2 fuse (If equipped)	30 A	-
CF16	Reserved	-	-
CF17	USB charging port fuse (If equipped)	10 A	-
CF18	Discharge panel cigarette lighter 1 fuse (If equipped)	15 A	-
CF19	Discharge panel cigarette lighter 2 fuse (If equipped)	15 A	-
CF20	Multimedia host/Exterior rearview mirror switch/Drive recorder/ BCM ACC feedback signal fuse	10 A	-
CF21	12V backup power source fuse	15 A	-
CF22	Reserved	-	-
CF23	Rotation angle sensor/Electronic power steering system/Driving mode switch fuse	5 A	-
CF24	Airbag module fuse	5 A	-

Fault Happened When Driving

Fuse number	Name	Amperage	Remark
CF25	Instrument cluster/Electronic shifter fuse	5 A	-
CF26	Engine compartment fuse box fuse	15 A	-
CF27	Matrix headlight fuse (If equipped)	10 A	-
CF28	Reserved	-	-
CF29	Gateway/BCM fuse	5 A	-
CF30	ETC fuse (If equipped)	5 A	-
CF31	Reserved	-	-
CF32	Reserved	-	-
CF33	Entertainment display/ETC/ Drive recorder fuse	10 A	-
CF34	Reserved	-	-
CF35	Instrument cluster/Air conditioner/ Rain sensor fuse	10 A	-
CF36	Reserved	-	-

Inspect or Replace the Fuse

1. Turn off the start switch and all electrical equipments, disconnect the negative cable from the low voltage battery.

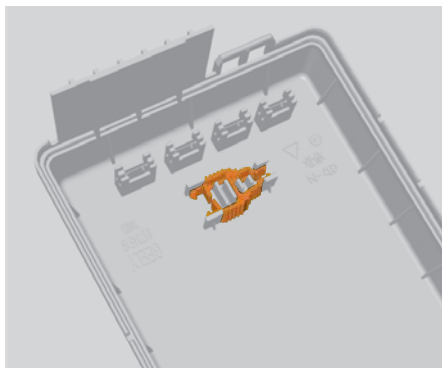

2. Use a fuse clip to hold the fuse head and remove the fuse. Check whether the metal wire is blown.

3. Replace the fuse with a new one of the same type.



If the newly replaced fuse immediately becomes damaged, contact Geely Automobile Service Center for inspection and repair as soon as possible.

Light Bulb Replacement

Bulb Specifications

Replacing light bulbs often requires the removal of specific vehicle parts, so it should be performed by a professional with the necessary skills. It is recommended that you go to Geely Automobile Service Center to replace the bulb.

Part name	Bulb name	Bulb type	Power
Front combination light (High grade)	High beam light	LED	40W
	Low beam light	LED	30W
	Turning signal light	LED	7.5W
	Front position light	LED	27W
	Daytime running light	LED	27W
Front combination light (Low grade)	High beam light	LED	19W
	Low beam light	LED	22W
	Turning signal light	LED	33W
	Front position light	LED	33W
	Daytime running light	LED	33W
Rear combination light (High grade)	Rear position light	LED	2.5W
	Rear turning signal light	LED	7.5W
	Back-up light	LED	8.5W
	Brake light	LED	7.5W
Rear combination light (Low grade)	Rear position light	LED	5.5W
	Rear turning signal light	LED	9.5W
	Brake light	LED	8W
High mount brake light	High mount brake light	LED	5W
Rear fog light	Rear fog light	LED	4.5W
Through front combination light assembly	Through front combination light assembly	LED	18W
License plate light	License plate light	W5W	5W
Map light	Front map light	LED	1W
	Rear map light (If equipped)	LED	0.5W

Handling in Emergency

Drive Motor or Motor Controller Overheat

Vehicle overheat actually refers to high coolant temperature, if the motor and controller overheating warning light on the instrument cluster is on, indicating that the drive motor is overheated, perform the following procedures:

1. Drive the vehicle safely off the road to a safe place, then stop the vehicle and turn on the hazard warning light, shift into park (P), and press the EPB switch. If the air conditioner is operating, turn it off.
2. Visually inspect the radiator, hose, and under the vehicle for significant coolant leaks. However, if there are water droplets from the air conditioner in use, it is a normal phenomenon.
3. If the coolant leaks, stop the vehicle immediately and contact Geely Automobile Service Center for inspection and repair as soon as possible.
4. If there is no obvious leak, check the coolant expansion tank. If it is dry, add coolant to the coolant expansion tank until it reaches between the MIN and MAX marks while the vehicle is started.
5. If there is no coolant leak and the coolant level in the expansion tank is normal, please contact Geely Automobile Service Center for inspection and repair as soon as possible.
6. After the coolant temperature drops to normal temperature, check the coolant level in the coolant expansion tank again. If necessary, add the coolant until it reaches between the MIN and MAX marks. Severe coolant loss indicates a leak in the

system. Please contact Geely Automobile Service Center for inspection and repair as soon as possible.

7. After parking in summer, the cooling fan often automatically operates, or even continues to operate for a long time, which is a normal phenomenon. When the temperature of the drive motor or motor controller drops to a temperature that does not require the cooling fan to operate, the cooling fan will automatically shut down.



To avoid injury, keep the engine compartment hood closed until there is no steam, and the outflow of steam or coolant indicates high pressure. Personnel should stay away from the rotating cooling fan.

Vehicle Involved in a Collision

In the event of a vehicle collision (Including front, rear, left, right and ground impact), the vehicle should be shut down immediately after stopping and then evacuate the passengers.

- In the event of a collision, the vehicle control system will power off the high voltage system, the READY indicator goes off, and the vehicle cannot continue to drive, please contact the Geely Automobile Service Center immediately.
- If the damage to the vehicle cannot be estimated, do not touch the vehicle. Keep away from the vehicle, and immediately contact the Geely Automobile Service Center for inspection and repair. It is crucial to promptly inform emergency responders that the vehicle is an electric car. One else should approach, touch, or move the vehicle.

- In any case, nobody is allowed to repair the vehicle before the vehicle is completely powered off.
- Check whether the high voltage components and wiring harnesses of the vehicle are damaged or exposed (The component positions can be determined by the high voltage component layout diagram). To avoid injury, do not touch the high voltage wiring harnesses, connectors and other high voltage components (Such as motor controller and power battery). Do not touch the damaged or exposed wiring harnesses to avoid high voltage electric shock. In particular, if the bottom plate of the vehicle scratches with the ground, carefully check the high voltage wiring harness distributed on the bottom plate for damage. If it is necessary to touch any high voltage cables or components, wear an insulating protective equipment (Including insulation gloves, shoes and clothes) with a voltage resistant of 1000V.
- If the driver and passengers are trapped, try to cut the vehicle after being confirmed by professional. Do not touch the high voltage cable (Which is typically marked with yellow or orange-yellow insulation) during cutting.
- If the vehicle needs to be repaired or painted after collision, it must be performed at Geely Automobile Service Center. Unauthorized disassembly is strictly prohibited. Before painting, remove the battery, high voltage wiring harness, motor controller and other high voltage components. If the battery is exposed to a high temperature painting room, the battery service life may be af-

fectured. In addition, if the battery on the vehicle is not removed, it may bring safety risks to maintenance personnel who are not professionally trained in electric vehicle maintenance.

Vehicle on Fire

If the vehicle is on fire, turn on the hazard warning light immediately, stop the vehicle, evacuate all personnel in the vehicle to a safe area, and set up a triangle warning plate according to the regulations. Please refer to the "Warning Triangle Plate" section in this chapter. Then call the police according to the actual situation. In the case of conditions to ensure personal safety, contact the Geely Automobile Service Center and perform the following operations under the guidance of professional personnel:

1. If the battery wiring harness smokes and catches fire, follow the guidance of professionals to use a carbon dioxide or dry powder fire extinguisher at a safe distance from the upwind to extinguish the fire, and get the next power battery treatment advice.
2. If the power battery catches fire, follow the guidance of professionals to use a high pressure water gun at a safe distance to extinguish the fire, and get the next power battery treatment advice.

If any smoke is inhaled accidentally, evacuate and seek medical attention as soon as possible.

Fault Happened When Driving



Electrolyte leakage or damage to the power battery may cause a fire. If this happens, contact Geely Automobile Service Center immediately for inspection and repair. Do not touch the leaking electrolyte with hands. If the electrolyte comes into contact with your skin or eyes, rinse with plenty of water and seek medical attention immediately. If the vehicle is on fire, leave the vehicle immediately.

Get Rid of the Trapped Situation

If the vehicle gets stuck in snow, mud or other soft roads, please follow the following steps to get out:

1. Turn the steering wheel left and right to create an area around the front wheels.
2. Repeatedly move the vehicle forward and backward, reducing wheel idling as much as possible, and gently depress the accelerator pedal.
3. If the vehicle can't get out of trouble after several attempts, tow the vehicle.



Before getting rid of the trapped situation, be sure to check whether there are people or obstacles around the vehicle, because the vehicle may suddenly move forward or backward during operation, causing injury.



If the vehicle is to be shaken, in order to prevent damage to the drive motor and other components, the following precautions must be observed:

- Do not depress the accelerator pedal until the electronic shift lever is shifted to drive (D) or reverse (R).
- Do not keep the wheel idling at high speed, which may burst the tyre, resulting in injury; Drive motors or wheel parts may be also overheated, causing damage to components or.
- If the vehicle cannot get out of trouble after shaking for a period of time, use other methods such as towing.

Care and Maintenance

Regular Maintenance

 The Maintenance Manual is an important part of this manual, and the maintenance intervals, inspections, overruns, and recommended oils and lubricants specified in this manual are necessary to maintain the vehicle in good condition. Any damage caused by failure to follow regular maintenance is not covered by the vehicle warranty.

Proper vehicle maintenance not only helps keep the vehicle in good condition, but also benefits the environment. All recommended maintenance items are important. To protect the environment and keep your vehicle in good condition, it is important to maintain your vehicle properly.

Service maintenance plan

Maintenance needs can vary due to the diverse ways in which people use their vehicles. You may need to adjust the inspection and replacement frequency accordingly.

If you have questions about how to keep your vehicle in good condition, please consult the Geely Automobile Service Center. This maintenance plan applies to the following vehicles:

- A vehicle transporting passengers and cargo within a specified load-range.
- A vehicle travelling within the speed limit permitted by law on an appropriate road surface.

 Vehicle maintenance operations are complex and can be dangerous. Attempting certain maintenance tasks without the necessary experience, tools, and equipment can lead to serious injuries. Only individuals with sufficient maintenance expertise and the required tools and equipment should attempt maintenance work on their own. If you are not for sure, you should go to the Geely Automobile Service Center for maintenance operations.

Maintenance record

For details, refer to the Maintenance Manual. After each maintenance, be sure to have the Geely Automobile Service Center sign and stamp the maintenance record form.

The owners' care and maintenance

 When the vehicle is found to have a significant or sudden drop in liquid level, or uneven tyre wear, it should be immediately sent to the Geely Automobile Service Center for maintenance.

In addition to the maintenance mentioned earlier, the driver should also carry out some simple checks frequently. The recommended maintenance schedule is listed below.

Daily check:

- Functions of lights, horns, wipers, washers, and warning lights.
- Functions of seat belts and brakes.
- Check for any signs of fluid leakage under the vehicle.
- Check the appearance of tyres.

Repair and Maintenance

Weekly check:

- Coolant level.
- Brake fluid level.
- Windshield washer fluid level.
- Tyre pressure and condition.
- Air conditioning system

Five rules for preventing vehicle accidental fires



1. Avoid storing flammable items like lighters inside the vehicle, as they can expand or explode due to heat, potentially causing fires.
2. Do not install extra decorative lights beyond the vehicle's original equipment. The usage of appliances with higher power than the rated power will cause short circuits due to excessive load, which may cause a fire.



3. When modifying or adding wiring for the multimedia system, wires with different rated power will generate a large amount of heat, which may cause a fire.
4. Use only specified light bulbs, as exceeding the rated capacity can overload the wiring and increase the risk of fires.
5. Always ensure cigarette butts are completely extinguished after smoking to prevent potential fires.

Toxic fluid

Liquids used in vehicles are toxic and should not be swallowed or come into contact with open wounds.

Toxic liquids include acid from low-voltage batteries, coolant, brake fluid and front windscreen washing liquid.

For the safety of the driver, please read and follow the instructions printed on the label and container carefully.

Engine Compartment


Engine Hood

Open the engine hood

! Ensure that the wiper arms are not raised when opening the engine hood.



1. Pull the front engine hood release handle located on the lower left side of the driver's dashboard.

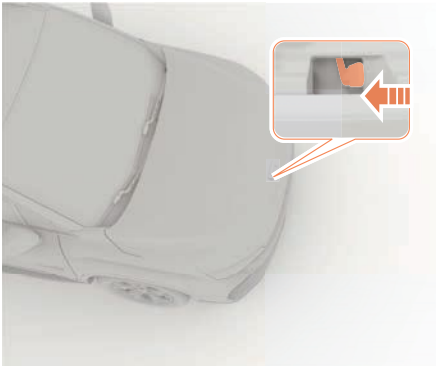

2. Push the safety hook handle of the engine hood in the direction of the arrow. This handle is located in the middle of the radiator grille.



3. Lift the engine hood slightly and it will be opened to the maximum position under the action of the left and right pneumatic brace.

! Do not attempt to open the engine hood on your own if the vehicle experiences a breakdown or accident in the rain.

Close the engine hood


! Before closing the engine hood, check for any forgotten tools, pieces of cloth, or other objects inside the front hood and ensure all filler lids are covered.

Push the engine hood downwards, and a “clicking” sound indicates that the engine hood is locked.

After closing the engine hood, gently lift the edge to ensure it is securely locked in place.

! Do not drive when the engine hood is not properly closed. The engine hood may suddenly open and block the driver's view, resulting in injury and property loss.

Engine Compartment

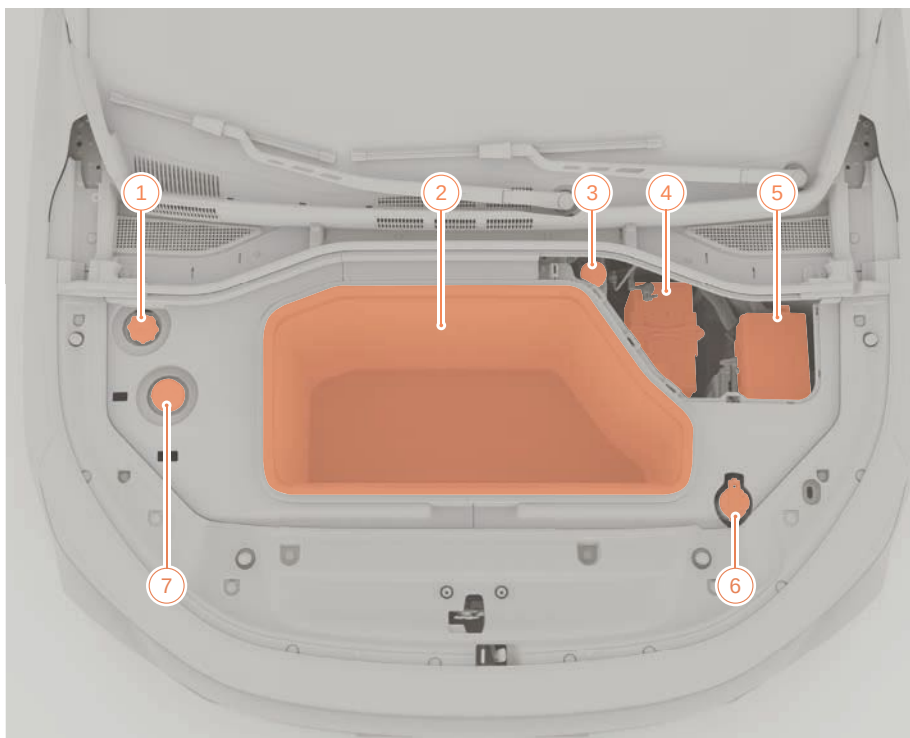

- | | |
|-------------------------------------|---|
| 1. Warm air system expansion kettle | 5. Engine hood fuse box |
| 2. Engine compartment storage box | 6. Washing liquid reserve tank |
| 3. Brake reservoir | 7. Electric drive system expansion kettle |
| 4. Low-voltage battery | |

Cooling System

Cooling System Introduction

The coolant added to the new vehicle not only provides anti-freeze protection at low temperature, but also protects all components in the cooling system from corrosion. In addition, it prevents deposits and significantly increases the coolant boiling point.

For details about the coolant replacement interval, refer to the Maintenance Manual.



Do not replace the coolant with other liquids. It is recommended to use the coolant specified by the manufacturer.



Even though the vehicle is not started, the cooling fan under the engine hood can start and cause injury. Therefore, keep body parts, clothing, and tools away from the cooling fan under the engine hood.



Do not touch the radiator, the radiator hose, and other drive motor parts, otherwise you will be burned. Do not start the vehicle if there is a coolant leak. This may lead to a vehicle fire, causing personal injury and property loss.



Dispose of used coolant in accordance with relevant environmental protection laws.

Check the Coolant

Warm air system expansion kettle



Electric drive system expansion kettle




The vehicle must be parked on a flat surface while checking the coolant level. Check the coolant level in the coolant expansion kettle and make sure it falls between the MAX and MIN markings. If the coolant in the expansion kettle is boiling, never do anything until it cools down. If the coolant level is below the MIN mark or the expansion kettle is empty or there is no coolant, fill the coolant expansion kettle according to the prescribed procedure.

Repair and Maintenance

Add coolant

The pressure cap on the coolant expansion kettle and the upper radiator hose should only be opened after the cooling system has completely cooled down.

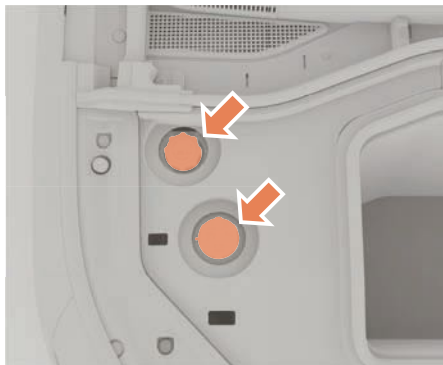

1. Slowly turn the pressure cap on the expansion kettle counterclockwise. If you hear a hissing sound, wait until the sound disappears before opening it. Hissing indicates that there is still pressure inside.
2. Continue turning the expansion kettle pressure cap and remove it.

! Steam and boiling liquid from a hot cooling system can splash out and cause severe burns. The coolant is pressurized, and even a slight loosening of the coolant expansion kettle pressure cap can result in boiling coolant spraying out. Do not open the pressure cap on the cooling system, including the pressure cap of the coolant expansion kettle, when they are still hot. If you need to open the pressure cap, you must wait for the cooling system and cooling expansion kettle pressure cap to cool down before opening it.



3. Fill an appropriate amount of coolant into the coolant expansion kettle to reach the position between MAX and MIN markings on the coolant expansion kettle.

! If you spill coolant on hot parts, you may get burned.

! Do not mix coolants of different brands and specifications.

Avoid mixing different brands of coolant with varying chemical compositions, including preservatives and anti-rust agents. Such mixing can lead to chemical reactions causing sedimentation, scaling, and corrosion, which can significantly impact the vehicle's longevity and performance.

! Please fill with glycol coolant certified by Geely. Damage or failure caused by the use of inferior coolant or non-compliant coolant mixture is not covered by Geely Automobile warranty.

4. With the coolant expansion kettle cap open, start the vehicle and let it run until the upper radiator hose begins to warm up. During this pro-

cess, the coolant level inside the expansion kettle may decrease. If the coolant level is decreased, add an appropriate amount of coolant until the liquid level reaches the position between MAX and MIN markings on the coolant expansion kettle.

5. Reinstall the cap. Make sure the pressure cap is securely tightened and fully seated.

 If the pressure cap is not tightened, it may cause coolant loss and damage the drive motor. Make sure the pressure cap is properly secured. If the coolant level drops significantly in a short period of time, it indicates that the cooling system may have leakage problem, please contact the Geely Automobile Service Center as soon as possible.

Brake System

General Information

Vehicles with good braking performance is required to reduce the speed or stop in a short time and distance after braking at any speed. Good braking performance plays an important role in driving safety.

Abnormal or excessive wear of the brake pad can not effectively brake the vehicle, and the wear degree of the brake pad mainly depends on the vehicle conditions and driving mode. If the vehicle is used for regular urban trips or short journeys, it is recommended to increase the checking frequency of the brake pads according to the Warranty and Maintenance Manual.

Replace the brake fluid according to the maintenance cycle specified in the Warranty and Maintenance Manual. If the brake fluid remains in the brake system for too long, it may produce air resistance in the system pipeline during braking, which severely affects the braking performance.

 When the vehicle is driving on narrow roads, rain, snow, ice, and muddy roads, emergency braking doesn't work. Drive carefully and hold the steering wheel tightly while braking.

When driving on wading roads, step on the brake pedal continuously and gently for several times to eliminate the moisture on the brake pad and recover the braking performance.

! Be sure to replace the brake pad in the Geely Automobile Service Center so as to guarantee the best braking performance and minimum wear between the brake pad and the brake disc.

New brake pads have run-in period within the first 300 km, so the brake pedal must be stepped with a stronger force to increase the braking effect. When driving with new tyres and new brake pads, do not follow other vehicles too close or brake suddenly, which may cause traffic accidents, resulting in serious injury or death.

Energy recovery

When the vehicle is under Drive (D) mode, coasting or braking, the kinetic energy is converted into electric energy, which is charged to recover energy and increase the driving mileage.

In the process of energy recovery, the anti-dragging drive motor in the wheel is working, and the drive motor and the service brake system jointly achieve vehicle deceleration.

i It is normal for the vehicle to slow down with slight frustration and motor noise.

Energy recovery level adjustment



Energy recovery level control switch can be found on the multimedia display: Settings → Safety, and High, Medium and Low modes can be selected.

Brake Pedal Travel

If the brake pedal does not return to its normal height or the brake pedal travel increases too quickly, please contact the Geely Automobile Service center for inspection as soon as possible.

Brake disc rusting and the resulting brake judder problem

After the vehicle is left unused for a long time, the surface of the brake disc will rust, resulting in judder problem during the braking process. At this time, it is necessary to remove the rust, and the temperature of the brake system should be controlled not to be too high during the running-in process. Contact the Geely Automobile Service Center for instruction.

Brake squeal

When driving on wet road, or it is cold, snowy or rainy, depress the brake pedal, make the front and back brakes work at the same time, squeal appears now and then, which is normal.

Creep groan appears when starting

It is normal to hear the friction sound between the brake disc and the brake pad when the brake pedal is released. When the gear lever of automatic vehicles is under D mode, the braking torque is greater than the starting torque, the front wheel will produce "creak" sound when the brake pedal is released. The sound will be louder if the brake disc is wet after washing the vehicle.

The sound caused by depressing the brake pedal while turning the steering wheel in place

When the vehicle is still, the wheel is also moving when the steering wheel is turned. If the brake pedal is depressed at this time, the wheel will be prevented from moving. With the steering force and braking force, the vehicle accumulates some energy, so that the brake disc produces peristalsis under the clamping state to release this energy. Thus, the vehicle produces "creak" sound, which is a normal phenomenon.

The brake disc heats up after use

Vehicle braking is achieved by the friction between the brake disc and the brake pad, which generate heat and the heat will concentrate on the brake disc, so the brake disc heating is a normal phenomenon.



Do not touch the brake disc with your hand after the vehicle stops to avoid burning.

Electronic Stability Control system (ESC) operating sound

When the ESC is working, you may hear some noise or feel the brake pedal vibrates, which is normal. Please drive your vehicle as you wish.

Replace Brake System Parts

The brake system of a vehicle is very complex. Many parts must be of high quality, and they must be accurately matched to achieve the optimum braking effect. To replace the brake system parts, be sure to use the approved replacement parts. If you do not do that, the brake system may not work properly. If the wrong brake replacement parts are installed, the expected braking performance can change in other ways.

Item	Unit	Value
Standard thickness of the front brake pad	mm	10.0
Minimum thickness of the front brake pad	mm	1.5
Standard thickness of the rear brake pad	mm	10.0
Minimum thickness of the rear brake pad	mm	2.0

Brake Fluid

i Wear of the brake pad will cause the brake fluid level to drop. After replacing the brake pad, the liquid level can return to normal.

! The brake fluid leakage will cause the level to drop. Please contact the Geely Automobile Service Center for an overhaul as soon as possible.

! Do not add brake fluid when the brake pad is worn and the brake fluid leaks. After repair, add or reduce brake fluid as needed. If too much brake fluid is added, it may splash onto the hot parts of the engine hood, and if the temperature is high enough, it may burst into flames causing injury and property loss.

i When the brake level is low, the brake system failure warning light will be on.

! Do not let brake fluid spill on the vehicle paint. If it does, clean it immediately.

Brake fluid tank should be filled with DOT4 brake fluid.



The brake fluid level must always be between MAX and MIN markings on the brake fluid tank.

! Use the brake fluid of the manufacturer and brand specified by the Geely Automobile Service Center, otherwise it will seriously damage the brake hydraulic system components, affecting the braking performance and distance.

Steering System

Electric Power Steering System (EPS)

The steering system of a vehicle is an important part of a vehicle. The performance of the steering system directly affects the handling stability of the vehicle, and plays an important role in ensuring the safe running of the vehicle, reducing traffic accidents and protecting the safety of the driver.

When the driver detects it hard to steer, please contact the Geely Automobile Service Center for overhaul as soon as possible.



It is forbidden to adjust the height of the electric steering column when driving the vehicle. Do not make the vehicle coast when power off, otherwise the steering has no power, which is likely to cause accidents.



The steering wheel should not be in the steering limit position for more than 5 seconds, otherwise the motor may be damaged.

External Lights

External Light Fogging

The external light fixtures ventilation design to adapt to the normal pressure changes within the automotive lighting. Therefore, fogging is a normal phenomenon. Under normal operating conditions, the mist will dissipate automatically after driving or turning on the external lamp for a period of time. The following conditions are normal:

- Mist appears (No water streaks, drops, or droplets).
- The mist covers less than 50% of the exterior lighting cover.

Please contact Geely Automobile Service Center in time when the following situations occur (Usually caused by water leakage of exterior lamps):

- There are puddles of water inside the external lighting.
- There is a large area of water droplets, drop marks or water streaks inside the external lighting cover.

Battery

Maintenance of the Low-voltage Battery

The vehicle is equipped with maintenance-free low-voltage battery. Refer to the “Engine Hood” section in this chapter to locate the low-voltage battery.



Low-voltage battery terminals and related accessories contain lead and lead compounds which may harm health. After contact, wash your hands with soap and clean thoroughly with water.

To extend the life of the low-voltage battery and maintain the normal operation of the vehicle electrical system, the following suggestions will be provided:


- Prevent the low-voltage battery from overcharging or long-term power loss.
- Low-voltage batteries should be kept away from heat sources and open flames, and should be ventilated when charging and using it to prevent combustion and accidents.
- When the voltage of the low-voltage battery is insufficient and the light is dim, and it can not be started, the external charging should be carried out in time.
- The low-voltage battery should be firmly installed on the vehicle to reduce vibration.
- Often check whether the low-voltage battery pole clamp is firm and in good contact to prevent sparks and cause the explosion of the low-voltage battery. The oxides and sulfates produced by the clamp of

the low-voltage battery must be scraped and coated with Vaseline to prevent further corrosion.

- When the vehicle is driving in cold areas, it is necessary to avoid the complete discharge of the low-voltage battery to avoid the freezing of the electrolyte.

Check of the Low-voltage Battery

The vehicle is equipped with maintenance-free low-voltage batteries, so there's no need to fill high-voltage battery solutions. Please visit the Geely Automobile Service Center regularly to check the status of your low-voltage battery.

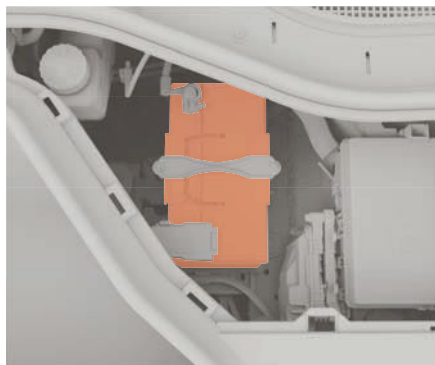

Replacement of the Low-voltage Battery

Low-voltage batteries of the same model and specifications must be used for replacement. Contact the Geely Automobile Service Center for disassembly, replacement and installation of the low-voltage battery.



After replacing the low-voltage battery, please take the old low voltage battery to the Geely Automobile Service Center for disposal, or to the recycling station that meets the relevant environmental protection law. The low-voltage battery contains corrosive toxic substances. Keep the battery face up during transportation and storage.



Low-voltage battery acid can cause burning, and the gas produced is explosive, which can cause injury or death. For details, see the "Faults on the Road" chapter in "Jump Start" section.

Washing Liquid and Wiper Blade

Washing Liquid

How to use washing liquid

When using windscreen washing liquid, be sure to read the manufacturer's instructions before use. If you are driving in an area where the temperature is likely to drop below zero degrees celsius, you should use a washing liquid with adequate anti-freezing capacity.



The freezing temperature of the washing liquid should be more than 10°C lower than the local lowest temperature.

Vehicle Storage

Due to the weak current consumption of the vehicle circuit system when parking, the long-term storage of the vehicle will cause the low-voltage battery to run out of power, so if you want to store the vehicle for a long time, you should disconnect the black negative (-) cable on the low-voltage battery to prevent the discharge of the low-voltage battery.

The vehicle should be stored in a cool, ventilated, clean and dry environment. If the vehicle is parked in a closed humid environment for a long time, it will accelerate the rust and aging of the vehicle parts. Please carry out regular maintenance of the vehicle in a timely manner according to the suggestions and requirements in the Warranty and Maintenance Manual.

Add washing liquid



Open the filler cap of the washing liquid tank to add the liquid.

 If using concentrated washing solution, dilute it according to manufacturer's instructions.

Do not add water to the ready-to-use washing liquid, otherwise the washing solution may freeze so as to damage the washing liquid tank and other parts of the scrubber system.

Do not top up when the weather is very cold. To avoid damage to the liquid tank due to the freezing of the washing liquid after topping up.

Washing liquid tank should not be added with coolant. Otherwise it will damage the vehicle's windscreen cleaning system and vehicle paint.

Wiper Blade

 Grease, silicon and petroleum products can easily weaken the wiper blade's effect. Clean the wiper blade with warm soapy water and check its condition regularly.

Often clean the windscreen, and avoid removing sand on the windscreen with wiper blade, so as not to affect the wiper blade performance and shorten its service life.

If the rubber hardens or cracks, or the wiper leaves scratches on the glass or fails to clean an area, the wiper blade needs to be replaced.


Use approved windscreen washing liquid regularly to clean the windscreen and ensure that the windscreen is thoroughly cleaned before replacing the wiper blade.

Use the same size wiper blade as the original package.

If the wiper or windscreen is covered or frozen with snow and ice, clean the snow and ice on the wiper and glass before using the wiper to avoid damage to it.

When the windscreen is dry and there are hard things on the surface, do not use the wiper, otherwise it will damage the windscreen and the wiper blade.

Replace the front wiper blade

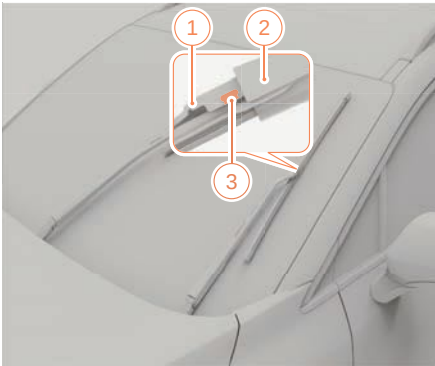


1. Wiper arm
2. Wiper blade
3. Clip

The wiper blade should be checked for wear or breakage. If you want to replace the wiper blade:

1. After the start switch is switched from ON to OFF/ACC for 30 seconds, immediately switch the wiper switch from OFF to LO or INT to perform wiper maintenance mode.
2. Pull the wiper blade assembly away from the windscreen.

! When the wiper blade is erected, the engine hood should not be opened, otherwise it will collide with the wiper blade, resulting in damage to the wiper blade or the engine hood. Any damage caused by it is not covered by the vehicle warranty.

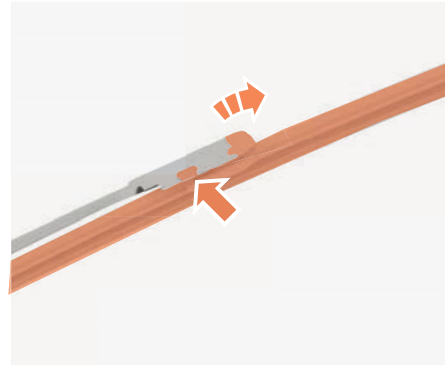

3. Press the clip of the wiper as shown. Pull the wiper blade in the direction of the arrow to release it from the wiper arm. Remove the wiper blade

! When the wiper blade is not installed, allowing the wiper arm to touch the windscreen glass will damage the windscreen. Any damage caused by it is not covered by the vehicle warranty.

4. Install the wiper blade in reverse order of steps 2 to 3.

Vehicle Cleaning and Maintenance

External Cleaning

Washing the vehicle frequently helps to protect the appearance. When washing the vehicle, the start switch must be turned off first and wash it in shade, not in direct sunlight. If the vehicle is placed in the sun for a long time, it is necessary to wait for the surface to cool down before cleaning.

With an automatic washing machine is used, be sure to follow the instructions of the operator.

 To avoid damage to the vehicle paint, corrosive substances (Bird droppings, resins, insects, asphalt spots, road salt, industrial dust, etc.) should be removed immediately. If necessary, remove asphalt spots and stubborn oil stains with industrial alcohol, then immediately wash away the alcohol with water and a mild neutral soap solution.

Use high-pressure washing machine to wash the vehicle

- Before washing the vehicle, check and confirm that the vehicle charging port cover is properly closed.
- Be sure to clean the vehicle strictly according to the instructions of the high-pressure washing machine, and pay special attention to the working pressure and spray distance. If a high-pressure washing machine is used, the nozzle must be at least 30 cm away from the surface of the body. Keep the nozzle moving, and do not spray water in a certain part all the time, otherwise high-pressure water will flow into

the vehicle parts and cause chronic damage. Do not spray water towards the charging port.

- Do not use "cluster nozzles" to clean vehicles.
- Do not use the nozzle to directly or indirectly flush the engine compartment. High pressure water flow can cause damage to the electrical components in the engine compartment or cause some components to work abnormally.
- Do not flush the chassis connector of the vehicle with the nozzle (Especially when it is connected to the orange high-voltage harness connector).
- Do not use a high-pressure washing machine or steam cleaner to clean the camera and sensors to avoid damage.
- Do not flush painted bumpers and soft parts such as rubber hoses, plastic parts, and insulation materials at close range.

Wash the vehicle with automatic washing machine

- Before automatic vehicle washing, check the vehicle with the car washing operator for additional installed parts and follow the professional advice provided by the operator.
- Fold the external rearview mirror before washing the vehicle.
- The body paint is strong enough to withstand the washing of the automatic cleaning machine, but pay attention to the impact on the paint. The degree of impact mainly depends on the structure of the cleaning machine, the cleaning brush, the filtering state of the

cleaning water and the type of cleaning agent and wax solvent. If the body paint is darkened or scratched after the car washing, tell the operator to make corrections immediately.

- If the automatic car washing machine is available, try to use non-contact car washing machine. This type of car washing machine does not touch the external parts (Brushes, etc.).

Internal Cleaning

Cleaning the interior often helps to improve the internal environment. Dust and dirt on the interior can cause surface damage to carpets, fabrics, leather and plastic products. Stains should be removed quickly, especially those on light-colored interiors, otherwise extreme heat will cause them to cure quickly.

Use a small soft brush to dust buttons and knobs.

Only use professional detergent to clean the interior surface of the vehicle, otherwise it may cause permanent damage to the vehicle. To prevent overspray, spray the detergent directly onto the cleaning cloth. If you accidentally spray detergent on other surfaces in the vehicle, wipe it off immediately.

The temperature of the drying gun used to paste the glass protective film is very high. Pay attention not to bake the interior when pasting the protective film, otherwise the interior will be damaged.

 When cleaning the glass of the vehicle, only use soft cloth and glass detergent, and do not use abrasive detergent, otherwise it will scratch the glass and/or cause damage to the rear window fog removal feature.

The detergent contains solvents that will condense on the interior. Read and follow all safety instructions on the label before using the detergent.

When cleaning the interior, open the doors and Windows to ensure proper ventilation.

Please pay attention to the following when cleaning the interior:

- Do not use blades or other sharp objects to remove dirt from interior surfaces.
- Do not use a stiff brush. It may damage the surface of the interior.
- Do not press it or wipe it hard with a cleaning cloth. Wiping hard can't clean better, but will damage the interior.
- Only use mild neutral soaps. Avoid using strong detergents or oil soaps. Too much soap can leave traces and absorb dirt.
- Do not wet the interior when cleaning.
- Do not use organic solvents, such as naphtha, alcohol, etc., which will damage the interior of the vehicle.

Fabric/Carpet

Use a vacuum cleaner with a soft brush to remove dust and scum. For stubborn stains, use water or soda water first to try to remove the stain. Before cleaning, please choose the appropriate method to remove stains:

Repair and Maintenance

- For liquid stains: Gently wipe the residual stain with a paper towel, and let the paper towel to absorb the stains as much as possible.
- For solid dry stains: Remove them by hand as many as possible and then use a vacuum cleaner.

Cleaning procedures:

1. Soak a clean, lint-free white cloth with water or soda water.
2. Wring out the cloth to remove water.
3. When removing stains, scrub gently from the edge to the center until there are no stains.
4. If the stain cannot be completely removed, repeat the steps with mild soapy water.

If stubborn stains still cannot be completely removed, you can consider using chemical cleaner or detergent. Before using these products, first do a color fastness test in a small, inconspicuous place in the vehicle. If a certain part can be cleaned well, use it to clean the entire surface. After cleaning, use paper towels to absorb excess water from the fabric or carpet.

Clean the leather

A piece of soft wet cloth can be used to remove dust. For more thorough cleaning, use the soft cloth with neutral soapy water. Let the leather dry naturally, do not dry it, and do not use steam to clean the leather.

Do not use cleaners and polish agents on the leather, otherwise it may permanently change the appearance and feel of the vehicle interior. Do not use silicon-based, wax-based or products with an organic solvent to clean the vehicle interior, which may lead to uneven leather gloss, affecting the artistic

look of the interior. Never use shoe cream on leather.

Instrument panels and other plastic surfaces

Do not use cleaners and polish agents on plastic surfaces, otherwise it may permanently change the appearance and feel of the vehicle interior. Some products in the market may enhance the gloss of the instrument panel, but it may cause reflection on the windscreen, which may seriously affect the visibility of the windscreen.

Main Dimensions

Main Dimensions of the Vehicle

Item	Unit	ZB1030BEVRSD13	ZB1030BEVRSD1
Length	mm	5260	
Width	mm	1900	
Height	mm	1865	
Front wheelbase	mm	1614	
Rear wheelbase	mm	1620	
Wheelbase	mm	3120	

i According to GB1589-2016 specification, the measuring range of the external dimensions of the vehicle in this table does not include the parts that excluded in the measuring range of the length, width and height of the vehicle, such as: external signs, anti-collision rubber blocks, the parking assist system and handles. The values are approximate. The exact size will vary according to vehicle options and other factors.

Technical Data

Vehicle Weight Parameters

Item	Unit	ZB1030BEVRSD13	ZB1030BEVRSD1
Drive form	-	Rear-engine, rear-drive	
Rated passengers	Person	5	5
Curb weight	kg	2065	2090
Maximum total weight	kg	2840	2845
Payload	kg	775	755
Accelerator pedal's free travel	mm	< 4	
Brake pedal's free travel	mm	10 - 20	

Main Assembly Types and Parameters

Item	Unit	ZB1030BEVRSD13	ZB1030BEVRSD1
Rated power of the drive motor	kw	75	75
Peak power of the drive motor	kw	200	200
Rated torque of the drive motor	N·m	150	150
Peak torque of the drive motor	N·m	384	384
Rated speed of the drive motor	r/min	5100	5100
Peak speed of the drive motor	r/min	16000	16000
The reducer's main reduction ratio	–	10.294: 1	10.294: 1
Battery type	–	Lfp battery	Ternary lithium battery
Rated voltage of the battery pack	V	342	352
Working voltage range of the battery pack	V	270~394.2	268.8~417.6
Peak power (10s, 50%SOC, RT)	kW	208	306
Single battery voltage	V	3.16	3.67
Pack energy density	Wh/Kg	125	169.98
Battery pack type	–	1P108S	1P96S
Battery capacity	Ah	184	244
Total energy of the battery pack	kWh	63	86
Battery assembly size	mm	2040*1430*150	2040*1430*150
Battery assembly weight	kg	504	521
Battery assembly protection level	–	IP67/IPX9K	IP67/IPX9K
Battery assembly charging temperature range	°C	-20~55	-20~55
Battery assembly discharging temperature range	°C	-30~55	-30~55

Technical Data

Vehicle Power Performance

Item	Unit	Parameters
Maximum speed	km/h	185
Maximum gradability	%	40

Wheels and Tyres

Tyre model

Item	Parameters
Rim specification	17 × 6.5J
Tyre specification	225/65R17

Wheel dynamic unbalance degree

Item	Unit	Parameters
Front wheel inner side	g	≤10
Front wheel outer side	g	≤10
Rear wheel inner side	g	≤10
Rear wheel outer side	g	≤10

Tyre inflation pressure (Cold)

Wheel	Unit	Parameters
Front wheels	kPa	240
Rear wheels	kPa	290

Wheel alignment parameters (No-load)

Item	Parameters
Maximum turning angle of the front wheel (Inside/outside)	$37.1^{\circ} \pm 2^{\circ} / 31.7^{\circ} \pm 2^{\circ}$
Front toe-in	$0.16^{\circ} \pm 10'$
Rear toe-in	$12' \pm 10'$
Front wheel camber	$-0.25^{\circ} \pm 30'$ (Front wheel camber difference < 30')

Technical Data

Item	Parameters
Rear wheel camber	-51' 30 ' (Front wheel camber difference < 30')
Kingpin inclination angle	13° ± 45' (Kingpin inclination difference < 30')
Kingpin caster angle	3.3° ± 30' (Kingpin caster difference < 30')
Front toe-in (Single tyre)	0.08° ± 5 ' (Front wheel toe-in difference < 5')
Rear toe-in (Single tyre)	6' ± 5' (Rear wheel toe-in difference < 5')

Fluid

Recommended Oil and Volume

Item			Specification	Volume
Brake fluid			DOT4	750 ml
Reducer lubricant			IDEMITSU MOTF TS 1	1.6L
Windscreen washing fluid			Freezing point -25°C	≤2.5L
A/C refrigerant			R134a	675 ± 20g
Warm air system coolant			Freezing point -40°C	2L (Approximate)
Electric drive system coolant	ZB1030BEV RSD13	Standard	Freezing point -40°C	9.4L (Approximate)
	ZB1030BEV RSD1	Luxury		10L (Approximate)

Technical Data

Index

A

Air Conditioning and Ventilation System	78
Air Purification System	81
Airbag Maintenance and Replacement	100
Ambient Light and Sunlight Sensor (If Equipped)	77

B

Backup Power	66
Battery	14
Brake Fluid	180
Brake Pedal Travel	178
Brake System	131
Bulb Specifications	167
Buttons on the Steering Wheel	51

C

Cargo Compartment	71
Central Armrest	64
Charging Port (European standard type)	18
Charging Port (GB standard type)	16
Check of the Low-voltage Battery	182
Check the Coolant	175
Coat Hook	70

Cooling System Introduction...	175
Cruise Control System (CCS)	142
Cup Holder	65

D

Drive Motor Anti-theft	113
Drive Motor or Motor Controller Overheat	168
Driver Side Overview (Type 1)	21
Driver Side Overview (Type 2)	22
Driving	123

E

Electric Power Steering System (EPS)	181
Electronic Brake Assist System (EBA)	135
Electronic Shift Lever	128
Electronic Stability Control (ESC)	134
Engine Compartment	174
Engine Compartment Fuse Box	160
Engine Hood	173
Exterior Rearview Mirror	52
External Cleaning	186
External Light Fogging	181

F

Figure: System Position	11
-------------------------------	----

Front Air Conditioner Control System	73
Front Interior Light.....	59
Front Seat.....	83
Fuse Position and Identification	160

G

Gear Position.....	128
General Information	177
Get Rid of the Trapped Situation	170
Glasses Case (If Equipped).....	64
Glove Box.....	61

H

Hazard Warning Light.....	145
Hill Descent Control (HDC).....	136
Hill Hold Control (HHC).....	137
Horn.....	49

I

Illustration Information	5
Indicators (3.5 ").....	26
Information Center (3.5 ").....	28
Inspect or Replace the Fuse.....	166
Instructions for Use	129
Instrument Cluster Overview (3.5 ").....	25
Interior Fuse Box.....	164
Interior Handles.....	70
Interior Rearview Mirror	54
Internal Cleaning.....	187

J

Jump Start.....	146
-----------------	-----

L

Light Combination Switch.....	44
Location of Airbags.....	94
Locking and Unlocking	113

M

Magazine Pocket.....	70
Main Assembly Types and Parameters.....	191
Main Dimensions of the Vehicle.....	189
Maintenance of the Low-voltage Battery.....	182
Microwave Window	9

N

Notes to Owners	3
-----------------------	---

O

Overview of Airbag.....	94
Overview of Seat Belt	88

P

Panoramic Sunroof.....	57
Parking Brake.....	132
Parking Sensor System.....	138
Passenger Side Overview (Type 1).....	23
Passenger Side Overview (Type 2).....	24

Position of Drive Motor Code/ Identification Number.....	6
Power Window.....	55
Prompt Information.....	5

R

Rear Interior Light (If Equipped).....	61
Rear Seat.....	85
Recommended Oil and Volume	193
Regular Maintenance	171
Replace Brake System Parts	179
Replacement of the Low- voltage Battery.....	182
Reverse Camera System.....	141
Roof Carrier	72

S

Seat Adjustment Parameter	87
Seat Belt Maintenance and Replacement.....	93
Selection of Child Seat Protective Devices	101
Smart Key.....	111
Start Switch (Keyless Start).....	121
Steering Wheel Adjustment	50
Storage Box.....	61
Sun Visor and Make-up Mirror.	64
System Features.....	13

T

Towing Eyelet.....	148
--------------------	-----

Towing Mode (If Equipped).....	149
Towing Tips	148
Traction Control System (TCS)	137
Tyres.....	152

U

USB Port.....	69
Use of Child Protective Devices	102

V

Vehicle Identification Number....	6
Vehicle Involved in a Collision..	168
Vehicle Nameplate.....	9
Vehicle on Fire	169
Vehicle Power Performance	192
Vehicle Storage	183
Vehicle Weight Parameters.....	190
Vent Adjustment	81

W

Warning Lights and Indicators.....	40
Warning Triangle Plate.....	145
Washing Liquid.....	183
Wheels and Tyres.....	192
When Vehicle Unable to Start.....	123
Why are Seat Belts Protective.....	88
Wiper Blade.....	184
Wiper Combination Switch.....	47

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages