

HAVAL H6 Coupe

Owner's Manual

HAVAL H6 Coupe

HAVAL

en.carobook.com

Owner's Manual

HAVAL

en.carobook.com



Thanks for choosing a Haval vehicle.

Familiarizing yourself with your vehicle will make driving it easier and more comfortable. Thus, we ask you to:

Before starting your Haval vehicle, please read this owner's manual carefully. You will find in it important information concerning the operation of the vehicle, which will allow you to make full use of the technological advantages of the Haval vehicle. Additionally, you will find very useful information concerning the vehicle's safety features, traffic safety, and preserving the highest value for your Haval vehicle.

We sincerely wish you safe and happy travels!

16/11/11

Notices

Vehicle equipment

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

In vehicles with the driver's seat on the right, some of the operating components may not be located at the illustrated location.

Period of applicability for the owner's manual

All of the information in this owner's manual are the most up-to-date available at the time of its printing. Nevertheless, as Haval Motors continues to improve its products, the information in this manual will be updated accordingly, without notice, at that time.

The equipment in the vehicles illustrated may differ from that in your vehicle according to the specifications of the vehicle.

Audiovisual system

Please consult the Audiovisual System Owner's Manual accompanying the vehicle.

Accessories, spare parts, and modifications

Currently, we may buy spare parts and accessories suited to vehicles made by Haval Motors in addition to genuine parts from Haval Motors. If parts must be replaced, we suggest using genuine parts from Haval Motors as replacements, but other parts that meet quality standards may be used as well.

Haval Motors does not make any guarantees, or accept any responsibilities or obligations, for non-genuine parts or accessories, or for the replacement or installation of such. Additionally, any damage or performance problems caused by using non-genuine Haval brand parts or accessories do not fall within the quality guarantee.

en.carobook.com

Symbol

Warnings and cautions

WARNING

This indicates a warning. If you ignore these warnings, serious injury or death may result. Such warnings indicate that you must or must not do something to reduce the risk of serious injury or death to yourself and others.

CAUTION

This indicates a caution. If you ignore these cautions, the vehicle or other equipment may be damaged as a result. Such cautions indicate that you must or must not do something to avoid or reduce the risk of damage to the vehicle or other equipment.

Safety indications



Herein, a circle with a slash through it indicates “no,” “do not do this,” or “do not allow to such conditions to occur.”

Precautions

CAUTION

General precautions for driving

- › Please drive in a clear mental state. Do not drive after drinking or taking medicine (as this will affect your ability to control the vehicle).

Alcoholic beverages and some medicines will slow your reactions and affect your judgment and coordination. This may lead to accidents as well as serious injury and death.

- › Drive carefully: you must drive carefully. Always pay attention to the other drivers and pedestrians on the road, so that if they make a mistake, you can react in time and avoid an accident.
- › Pay attention to your driving: you must give driving your entire attention. Anything that divides the driver's attention, such as adjusting the controls, taking a call, or reading, can result in a collision and serious injury or death for you and the other passengers.


CAUTION

General precautions for child safety


- › Do not leave children unattended in the car, and do not allow children to carry or use the keys.
- › The children may start the vehicle or shift the gear optionally. Children who play with the windows, sunroof, or other equipment in the vehicle may injure themselves. Additionally, temperatures within the vehicle that are too high or too low may also injure children.

en.carobook.com

Pictorial index

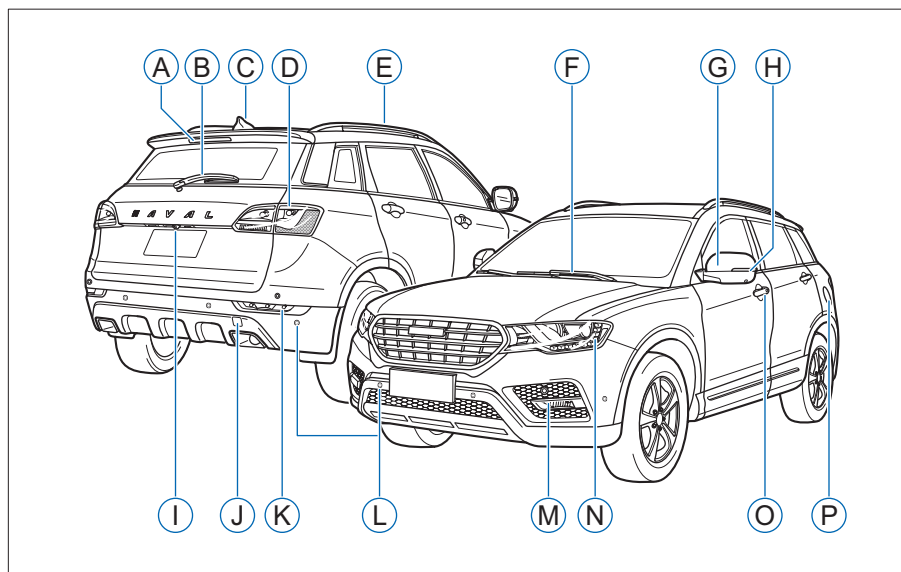

- A** High level brake lamp
- B** Rear wiper 57
- C** Antenna
- D** Rear combination lamp 49
- E** Roof rack 48
- F** Front wiper 56
- G** Exterior rearview mirror 45
- H** Side turn signal lamp 51
- I** Reverse video camera 110
- J** Rear tow hook installation hole cover plate 210
- K** Rear fog lamp assembly 49
- L** Radar sensor 107
- M** Front fog lamp 51
- N** Front combination lamp 49
- O** Door handle 23
- P** Fuel tank door 35

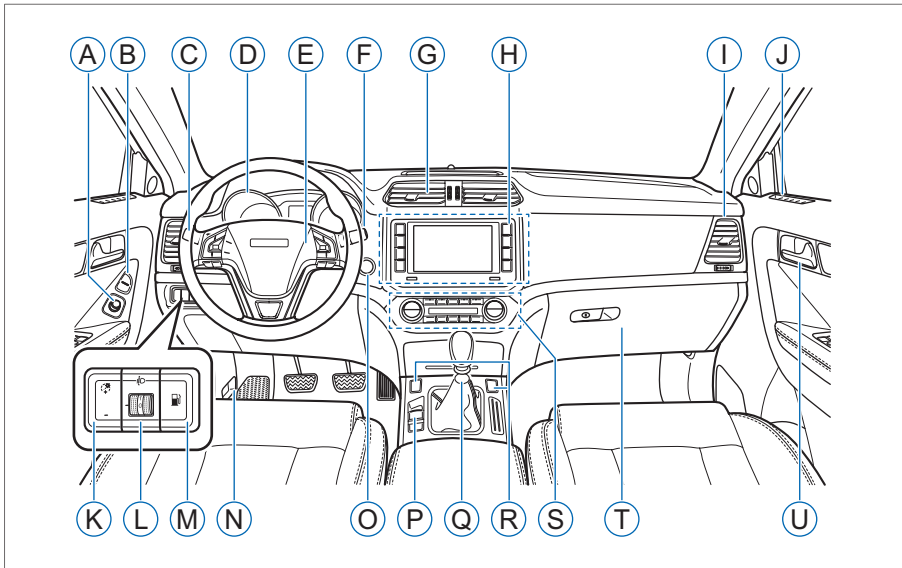

- | | |
|--|---|
| Ⓐ Exterior rear view mirror adjustment knob 45 | Ⓚ Dashboard brightness adjustment button 56 |
| Ⓑ Central lock button 24 | Ⓛ Light level adjustment knob 55 |
| Ⓒ Lighting-control combination switch 49 | Ⓜ Fuel tank door opening switch 35 |
| Ⓓ Instrument panel 133 | Ⓝ Hood opening handle 36 |
| Ⓔ Steering wheel 47 | Ⓞ ENGINE START-STOP switch 82 |
| Ⓕ Windshield-wiper switch 56 | Ⓟ Parking brake 87 |
| Ⓖ Central vent 63 | Ⓠ Shift lever 90 |
| Ⓗ Audiovisual control panel (please refer to the Audiovisual System Owner's Manual) | Ⓡ Seat heater 42 |
| Ⓘ Side vent 63 | Ⓢ Air-conditioning system control panel 60 |
| Ⓣ Side-window defroster vent 63 | Ⓤ Front passenger-side storage box 69 |
| | Ⓡ Interior handle 25 |

Contents

You can most quickly locate specific topics within this manual by using its index.

1 Operation

This Chapter introduces the methods for operating and using on-board vehicle equipment, such as keys, doors, windows, seats, and the combined switch.

2 Driving

This Chapter provides information about engine startup, gear shifting, and instrumentation, as well as the special functions of the vehicle.

3 Safety

This Chapter introduces the functional equipment which is used to protect the occupants and the vehicle, such as: the immobilization system, seat belts, and airbags.

en.carobook.com

4 Emergency

This Chapter introduces the methods for handling common roadside problems, such as: flat tires and an overheated engine.

5 Maintenance

This Chapter provides instructions on the routine inspection and periodic maintenance for the vehicle.

6 Technical data

This Chapter introduces basic parameters of fuel and supporting fluid types for the vehicle.

7 Index

Includes this manual's alphabetical index and the method for looking up indicators.

Operation

Key	16	Accidental pinch prevention function	33
About the key	16	Initialization	33
Introduction of buttons	16	Refueling	35
Replacing the battery	18	Hood	36
Passive Entry and Passive Start system	20	Opening	36
About the system	20	Closing	36
Effective operating zone	20	Seats	37
Factors that may affect normal operations	21	Headrest	37
Alarm function	22	Front seat	38
Locking and unlocking vehicle doors ...	23	Rear seats	41
PEPS locking and unlocking	23	Seat warming	42
Locking and unlocking with intelligent key	24	Rearview mirror	44
Locking and unlocking with mechanical key	24	Interior rearview mirror	44
Central lock locking and unlocking ..	24	Exterior rearview mirror	45
Doors emergency locking	25	Steering wheel	47
Open and close the back door	25	How to adjust	47
Child safety lock	28	Roof rack	48
Other functions	29	Lighting-control	49
Opening and closing vehicle windows ..	30	Lamp location	49
System turning on and off	30	Lighting-control combination switch	50
Other functions	31	Parking lamp	52
Sunroof	32	Hazard warning lights	52
Sunroof opening, closing	32	Daytime running light	52
Sunshade opening, closing	32	Follow-me-home function	53
		Courtesy function	53
		Front fog lamp auxiliary lighting	53
		Beam level adjustment	54
		Dashboard brightness adjuster	54

Interior lamps.....	55	Starting and shutting down the engine.....	84
Windshield-wiper switch	56	How to start the engine	84
Front wiper	56	Shutting down the engine.....	85
Horn	59	Parking brake	87
Air-conditioning system.....	60	Electronic Parking Brake (EPB).....	87
Introduction of buttons	60	Automatic parking.....	88
Air-conditioning system sensors	62	Manual transmission vehicles	90
Functions introduction.....	63	How to shift.....	90
Vents	63	Shifting prompt	91
Air purifier	65	Moving off	91
Interior equipment	67	Stopping the vehicle.....	92
Sun visor	67	Automatic transmission vehicles	93
Storage equipment.....	67	Gear and mode introduction.....	93
Coat hook.....	70	How to shift.....	95
Luggage hook	70	Run-in period.....	97
Power socket.....	71	Tire	97
Cigarette lighter	72	Friction lining of brake	97
Ashtray.....	73	Engine	97
Shelf	73	Driving in adverse conditions.....	98
		Driving in foggy weather.....	98
		Driving in rainy weather	98
		Fording drive	99
		Driving during the hot seasons	100
		Driving during the cold seasons	102
		Tire Pressure Monitoring System.....	104
		Collision avoidance radar.....	107
		Reverse video	110
		Blind-spot visualization system	112
Driving			
Driving norms	76		
Before driving.....	76		
While driving.....	77		
Precautions for passengers	80		
Parking the vehicle	80		
Economical driving	81		
Ignition switch	82		

Blind-spot detection system.....	114	Airbag	166
Intelligent Stop-Start System.....	116	Front airbag.....	166
Cruise control system	120	Side airbag.....	170
Hill descent control system.....	123	Side airbag curtain	172
Four wheel drive system	125	Child restraint system.....	174
Driving assist systems	127	Child seat type.....	174
Anti-lock Braking System.....	128	Fixing points on child seat	174
Electronic Brake-force Distribution system	128	Applicability of child seat	176
Brake Assist System.....	128	Installation of child seat	178
Electronic Stability Program.....	128	Engine electronic immobilizer system	183
Traction Control System.....	129	Vehicle immobilizer system	184
Hill-start Hold Control system	129	About the system	184
Emission control system	130	To turn on.....	184
Instrument panel	133	Turn off the alarm	185
Instruments.....	133	Alarm trigger conditions	185
Indicator lights, warning lights	135	To remove the alarm.....	185
Information center	144	Safety labels.....	186
Trailer towing	152	Safety labels inside the engine compartment.....	186
Driving instructions	152	Safety labels inside the cab.....	188
Technical requirements.....	154	Fuel shutoff system	190
Warning tones	158		

Safety

Seat belt.....	160	On-board tool kit	192
Wear the seat belt properly.....	160	Tool list	192
Front seat pretensioner seat belt ..	160	Triangular warning board.....	194
Adjust the height of front seat belt	163	Spare tire.....	195
Operation of seat belt	163	About the spare tire	195
		Storage location	195

Emergency

How to remove and store.....	195
Replacing tires	197
Preparing for tire replacement.....	197
Replace the tires	198
When the vehicle is stuck	203
Jump starting the vehicle.....	204
Symptoms of a drained vehicle battery.....	204
Jump starting the vehicle.....	204
Engine overheating	206
Symptoms	206
Handling method.....	206
Preventing overheating	207
Towing.....	208
In need of towing	208
Towing a broken down vehicle.....	210

Maintenance

Engine compartment	214
Oil level	216
Engine oil	218
Engine coolant.....	219
Brake fluid	220
Windshield-washer fluid.....	221
Radiator	221
Battery	222
Fuses	223
Lamp	225

Bulb inspection	225
Replacing bulbs.....	225
Wiper blade	226
Replacing the front wiper blade.....	226
Replacing the rear wiper blade.....	227
Tire.....	228
Tire inspection.....	228
Tire rotation.....	230
Sunroof	231
Frequency of routine maintenance	231
Routine maintenance procedure....	231
Exterior maintenance	233
Vehicle cleaning	233
Waxing	234
Repairing paint surfaces	234
Interior maintenance	235
Carpeting	235
Textiles.....	235
Leather	235
Vehicle window.....	236
Seat belt.....	236
Long-term storage of the vehicle.....	237

Technical data

Vehicle identification.....	240
Vehicle identification No.	240
Vehicle nameplate.....	240
Engine serial number	240

Color code label	241
Overall parameters	242
Power parameters	245
Engine	245
Transmission	245
Chassis parameters.....	246
Oil specifications.....	248
Engine oil	248
Recommended oil types and capaci- ty.....	250
Bulb specifications.....	252

Index

Alphabetical index.....	254
Indicator lamp index	256

en.carobook.com

1

Operation

Key..... 16

Passive Entry and Passive Start
system 20

Locking and unlocking vehicle
doors 23

Opening and closing vehicle
windows..... 30

Sunroof 32

Refueling 35

Hood 36

Seats 37

Rearview mirror 44

Steering wheel..... 47

Roof rack 48

Lighting-control..... 49

Windshield-wiper switch..... 56

Horn 59

Air-conditioning system 60

Air purifier 65

Interior equipment 67

en.carobook.com

⚠ VEHICLE EQUIPMENT


Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

⚠ CAUTION

About the key number tag

- › The key number tag is provided with code which is necessary for new key. If you carelessly lose your key, you can use your original key number tag at a service provider to purchase a genuine key.
- › The key number tag should be kept safe in a place outside of the vehicle.


About the key

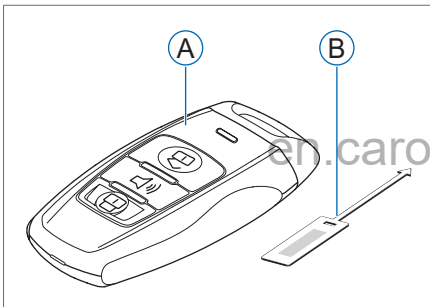

- Ⓐ Intelligent key
- Ⓑ Key number tag

Each vehicle is equipped with two intelligent keys and a key number tag.

Introduction of buttons

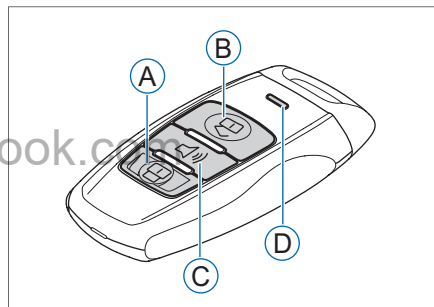

- Ⓐ Lock button
- Ⓑ Unlock button
- Ⓒ Searching button
- Ⓓ Mechanical key release button

⚠ CAUTION

- › It is strictly prohibited to modify the intelligent key's transmission frequency, boost the Key's transmission power (including by installing a power amplifier), connect an external antenna to the key or replace the original antenna;
- › During using process, it is strictly forbidden to use the key to interfere with various legal wireless communication services. Once such interference has been discovered, the use of the Key should be halted and measures should be taken to prevent such interference before resumption of use;
- › You must not use it on an airplane or near an airport;
- › You must not press the key buttons frequently to avoid its service life reduction. During switching the buttons, a interval of at least 1 second should be allowed between two buttons operations.

Lock button

- › When all the doors and back door are closed, ENGINE START-STOP switch is under LOCK, pressing the lock button can lock all the doors and back door, meanwhile all the turn signal lamps flash once at the same time.

- › When all the doors and back door are closed, ENGINE START-STOP switch is under ACC, pressing the lock button can lock all the doors and back door, meanwhile ENGINE START-STOP switch is switched into LOCK state.

⚠ CAUTION

When locking the doors, if the turn signal lamps did not flash, check if all the doors, back door and engine hood are closed completely, also the relevant prompts will displayed at the information center.

Unlock button


Press the unlock button to unlock all vehicle doors and the back door when the doors are under LOCK state. At this time, the left and right turn signal lamps will flash twice at the same time.

Searching button

When vehicle doors are locked, pressing the searching button will lead the turn signal lamps to flash and the horn to sound for three times.


During searching the vehicle, pressing any button of the key (lock button, unlock button, searching button) to disable the searching function.

Mechanical key release button

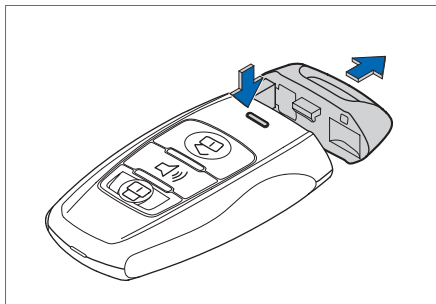


You may remove the mechanical key after pressing the key release button.

Replacing the battery

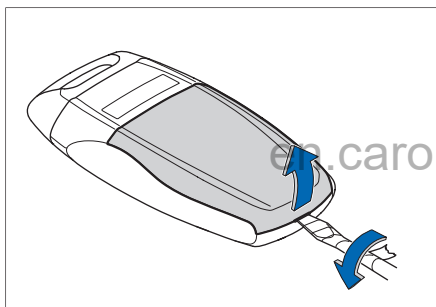


1. Pry open the cover using a flathead screwdriver and remove it.

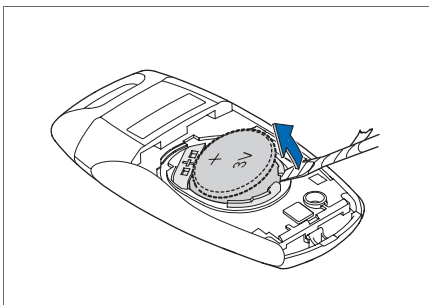

2. Take out the battery and insert a new battery in its place.

The positive pole of the battery should be facing upward.

Battery model: CR2032

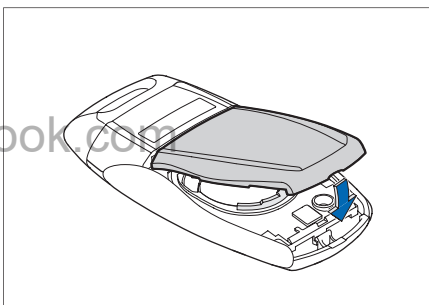

3. Install rear cover of key.

Insert the front of the cover into the groove. Press down gently to secure the cover.

CAUTION

To ensure that the intelligent key works normally following a battery replacement, please adhere to the following to avoid accidents:

- › Both hands must be dry during the process. Moisture may cause rusting of the battery within.
- › Do not touch or move any other component inside the intelligent key.
- › Make sure that the positive and negative poles of the battery are in their proper positions.
- › Take care not to lose any parts while replacing the battery.

WARNING

- › As batteries and other components removed are tiny, please place them in a place out of the reach of children. Accidental swallowing of these parts by children may lead to choking and death.
- › Please dispose of used batteries in accordance with local laws and regulations. Improper disposal of used batteries can pose a risk to the environment and human health.

en.carobook.com

Passive Entry and Passive Start system

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

About the system

The passive entry and start system is abbreviated as PEPS.

As long as you have the intelligent key with you, such as in your pocket, you will be able to do the following:

> Entry function

You will be able to lock and unlock vehicle doors without having to operate the key or key hole.


> Start function

When the key is inside the vehicle, you may start the engine or change the ENGINE START-STOP switch state.

⚠ CAUTION

Please make sure to carry the intelligent key with you.

Effective operating zone

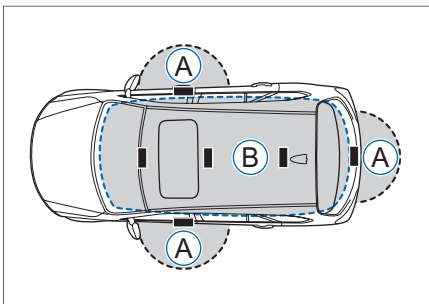

Ⓐ Door lock zone

Ⓑ Interior zone

The vehicle is equipped with six low-frequency antennas to maximize its coverage of intelligent key wireless signals.

- > When the intelligent key is located within 1.5 m of a vehicle door handle, it can be used to lock and unlock all vehicle doors and back door.
- > The intelligent key can be used to unlock the back door when it is within 1.5m of the back door handle.
- > When the intelligent key is inside the vehicle, you may start the engine or change the ENGINE START-STOP switch state.

⚠ CAUTION

- > Only vehicle doors that have detected the Key may be operated.
- > Anyone can lock or unlock the vehicle doors when intelligent key is within the scope of effective action.
- > If you operate the door handles wearing glove, it may can not be locked or unlocked.

Factors that may affect normal operations

The wireless signals used by the intelligent key and the Passive entry and passive start system are relatively weak. Communication between the intelligent key and the vehicle may be compromised under the following circumstances:

- › When the battery that powers the intelligent key is drained;
- › When the user is located near television broadcast towers, power stations, gas stations, cellular stations, giant screens, airports or other locations/installations where strong wireless signals or noise are being generated;
- › When the intelligent key is in contact with a metal object, or is being shielded by one;
- › When there are several intelligent keys in the immediate vicinity of the vehicle;
- › When the user is also carrying other wireless equipment such as portable radios, personal computers, mobile phones, wireless phones, etc.;
- › When the intelligent key is located too close to the ground or too high.

WARNING

- › Individuals with medical equipment implanted in their bodies such as pacemakers and cardiac defibrillators should stay far away from the antennas of the Passive Entry and Passive Start system. Wireless signals emitted may interfere with the normal functioning of these devices.
- › Users of medical equipment other than pacemakers and cardiac defibrillators should also inquire with the makers of their respective devices to find out if their devices may be affected by wireless signals. Wireless signals emitted may have an unpredictable effect on these medical equipment.

Alarm function

Warning: intelligent key not inside vehicle

When the ENGINE START–STOP switch is switched into ON state from LOCK state or the engine starts, if the intelligent key is not within the vehicle, this warning will be displayed on the instrument.

Warning: intelligent key left

When the ENGINE START–STOP switch is at the ON position, then open any door and close all the doors, and if the intelligent key is not inside the vehicle, the warning will be displayed on the instrument.

Warning: battery levels low in intelligent key

When the system detects that battery levels in the intelligent key are low, an alert will show in the dashboard. At this time, please replace the battery as soon as possible.

Warning: intelligent key not available

When ENGINE START–STOP switch is under ACC or LOCK position, open any door and then close all doors, if a intelligent key is detected inside the vehicle and the doors are locked by the lock button of the key or PEPS, the key left inside the vehicle will be disabled and a warning will be displayed at the instrument when the driver side door is opened.

Methods of release

Using another intelligent key outside of the vehicle to release the key by the following methods and meanwhile the warning will be displayed at the instruments:

- › Unlock the door by the unlock button of the key or PEPS successfully;
- › Start the engine successfully.

Warning: intelligent key left inside vehicle

When closing the back door with all the doors locked, if an available legal key is detected inside the vehicle by the system, the back door will not be closed, a warning will be displayed at the instrument, meanwhile the turn signal lamps flash and the horn sounds for 3 times.


en.carobook.com

Locking and unlocking vehicle doors

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

PEPS locking and unlocking

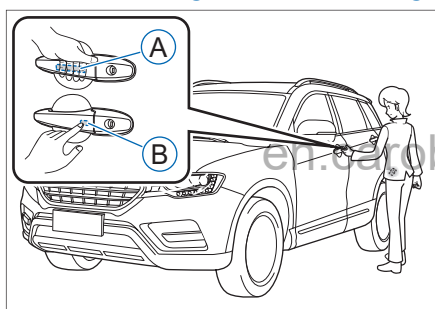

(A) Unlock sensor

(B) Lock sensor

When you have the intelligent key with you, you can lock and unlock the doors by passive entry system.

Locking: touching the lock sensor on the door handle can lock all the doors and back door. Then, the turn signal lamp flashes once.

⚠ CAUTION

If the turn signal lamps do not flash when locking doors, check if all doors, back door and compartment cover are totally closed. Information center will display related reminder.

Unlocking: holding the door handle can unlock all vehicle doors and back door. Then, the turn signal lamp flashes twice.

⚠ CAUTION

- › When unlocking the doors, please be sure to touch the unlock sensor behind the door handle.
- › Do not touch the unlock sensor and lock sensor on the handle at the same time.

Protection function of passive entry system

1. If you do not have the intelligent key with you, after the unlock and lock sensors or the back door have been operated continuously for 30 times with each interval less than 6 seconds, the corresponding passive entry system will stop working for 15 minutes. Then, you can recover the passive entry system by the following methods:

- › Press any button on the intelligent key;
- › Carry the intelligent key to unlock other doors or back door;
- › Turn the ENGINE START-STOP switch to the ON position, or start the engine inside vehicle.

2. The unlock function of the passive entry system will stop functioning for 3 seconds after locking the doors by using the lock button or PEPS.

Malice prevention function

> Activation

In case the lock time of all doors and the back door exceed 36 hours, the unlock sensor for the door handle at the front passenger's side will enter battery-saving mode, while if the lock time is over 72 hours, the unlock sensor for the door handle at the driver's side will enter battery-saving mode. You are unable to unlock the door by holding the door handle when it is in battery-saving mode.


> De-activation

De-activation can be performed when you press any button on the Intelligent Key.

Locking and unlocking with intelligent key

- > Locking: press the lock button on the key;
- > Unlocking: press the unlock button on the key.

Locking and unlocking with mechanical key

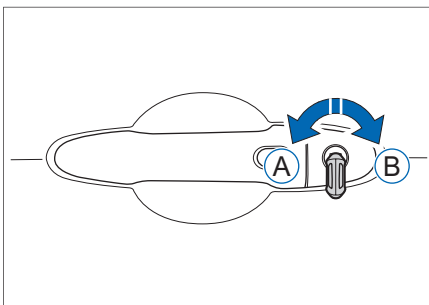


Ⓐ Door locking

Ⓑ Door unlocking

Insert the mechanical key into the lock hole of the driver side door and rotate it to lock and unlock the door.

In case of low voltage of intelligent key, the mechanical key can be used to lock and unlock all the doors and back door.

Central lock locking and unlocking

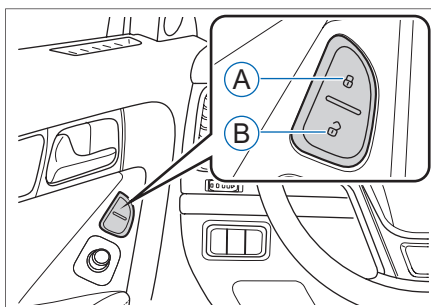

Ⓐ Lock button

Ⓑ Unlock button


The central lock button is located inside of driver side door.

When all doors is closed, pressing the corresponding central lock button can unlock and lock all the doors.

⚠ CAUTION

The central lock button fails when the vehicle immobilizer system activated.

Unlocking and opening vehicle doors with inside handle

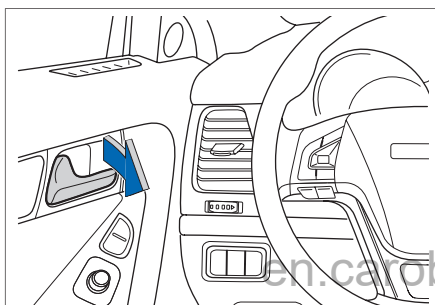


When a door is locked, pulling the inside handle once will unlock it. Pull the handle again to open the door.

⚠ CAUTION

When unlocking the rear doors with inside handle, please make sure that the child safety lock is not activated.

Doors emergency locking

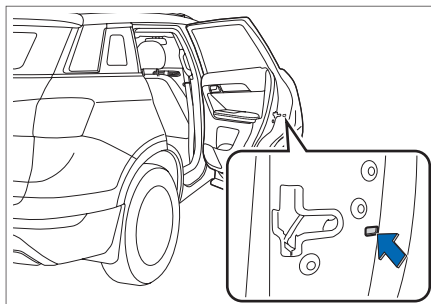


An emergency lock hole is provided near all the door locks.

When the doors can not be locked by electric door lock system due to vehicle power off or low voltage of intelligent key, insert a key or other proper tools into emergency lock hole and pull out after contacting emergency lock switch, then close the doors and the corresponding doors can be locked.

Open and close the back door

Opening

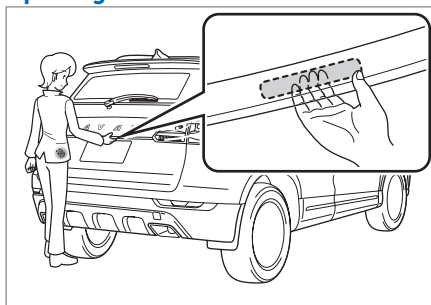

> Method 1:

When you have the intelligent key on your person and you are standing within 1.5m of the back door, press the back door switch once to open the door.

› Method 2:

Press the unlock button on the intelligent key and press the back door switch within 30 seconds, the back door is opened.

› Method 3:

When the driver side door is unlocked, directly press the back door switch to open the back door.


⚠ WARNING

Do not drive the vehicle with the back door opened.


⚠ CAUTION

- › Do not operate the back door with excessive force, otherwise the back door may be damaged.
- › Please be careful when opening and closing the back door in strong wind. Then back door may be excessively opened due to strong wind, thus causing deformation of back door.
- › When the ambient temperature is below zero degrees Celsius, the back door strut may not be able to support the door automatically. When such a situation occurs, you may lift the back door manually to open.
- › The back door must be used in its full open. If the back door is half-opened, injury will be caused due to its falling.

To close it

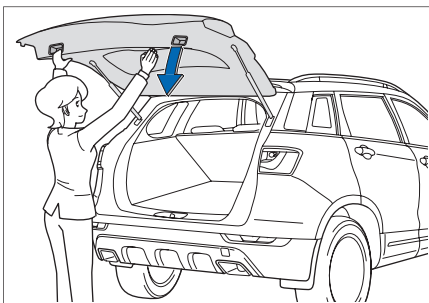

1. Pull the back door handle downwards and release the handle before the back door is fully closed.

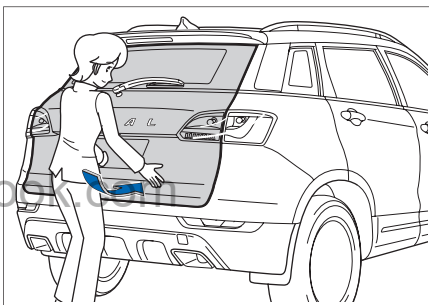

2. Press down on the back door from outside the vehicle to make sure that it is properly closed.

CAUTION

Please observe the precautions listed below in order to avoid damage of back door strut.


- › Do not allow the plastic sheet, sticker, viscous material to adhere at the pole of bracket, otherwise the bracket can not move smoothly. And its holding power may be compromised when opened.
- › Do not install any heavy objects on the back door. The support may fail to support the back door due to its over-weight when opened.
- › Do not pull the support by hands or pull it forcibly and laterally. Otherwise, the support may be bent, thus causing the back door not opened and closed.

WARNING


- › The back door must be pressed down from the outside of the vehicle to close properly. Relying on the handle to directly close the back door may lead to severe injuries to the user's hand.
- › When closing the back door, please pay attention to any bags, ties, etc., that you are carrying/wearing on your person so that they are not caught.
- › Do not allow children to open or close the back door. When closing the back door, there is the possibility of severe injury due to the inadvertent clipping of hands, heads, necks, etc.
- › No person is allowed in the luggage area.

Back door emergency unlocking

When the back door can not be opened by electric door lock system due to vehicle power off or low voltage of intelligent key, you may take the following emergency measures to open the back door from inside the vehicle.

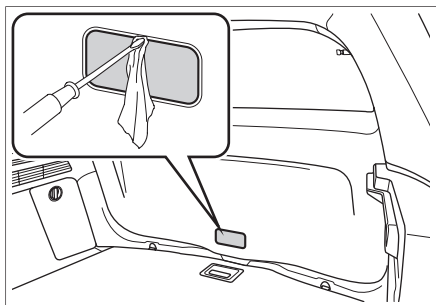


1. Push down the rear seat. Using a flat-head screwdriver covered with a piece of cloth, remove the back-door emergency cover plate.

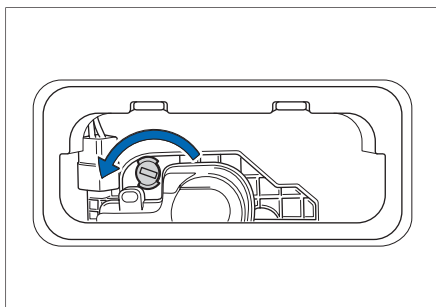

2. Insert the flathead screwdriver into the emergency opening device and rotate it counter-clockwise to open the back door.

Child safety lock

If there are child passengers within the vehicle, we recommend that they be seated in the comparatively safer rear seats where child safety locks are available with the corresponding vehicle doors to prevent child on the rear seat opening the door unexpectedly.

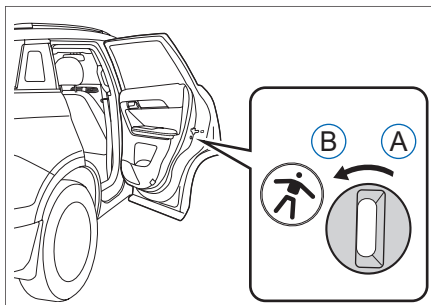

- (A) Turn off the child safety lock
- (B) Turn on the child safety lock

⚠ CAUTION

When the child safety lock is turned on, doors can only be opened from vehicle outside by pulling exterior door handle.

⚠ WARNING

Only the rear doors are equipped with child safety locks. If one or more children are sitting in the rear seat without an accompanying adult, please activate the child safety locks for the two rear doors to prevent inadvertent opening of the vehicle doors, which may then lead to accidents.

Other functions

Automatic reset

Once vehicle doors have been unlocked via the unlock button on key or the PEPS system, if there is no change in the status of the ENGINE START-STOP system, any vehicle doors, or back door within 30 seconds, all vehicle doors and the back door will automatically relock.

Automatic lock

If all vehicle doors and the back door are fully closed and unlocked, they will all be automatically locked once the speed of the vehicle exceeds 15km/h.

Auto unlock upon collision

Once the ENGINE START-STOP switch is in the ON position, the system will automatically unlock all vehicle doors when a collision is detected. Press the back door switch to open the back door.

Door unlock upon engine shutdown

When engine is turned off, once the ENGINE START-STOP switch is set to ACC or LOCK position, all vehicle doors will be unlocked. Press the back door switch to open the back door.

Opening and closing vehicle windows

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.


You can raise or lower the vehicle windows when the ENGINE START-STOP switch is in the ON position.

⚠ WARNING

Before closing any windows, you should make sure that passengers' heads and hands have all been removed from the window area. Otherwise grievous injury may occur.

System turning on and off

Driver-side switches

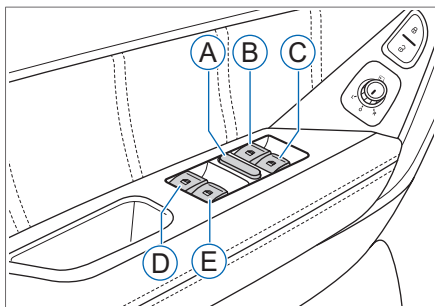

Door handle at driver side is equipped with an electric window master control panel.

- Ⓐ Window locking switch
- Ⓑ Driver side window control switch
- Ⓒ Front passenger side window control switch
- Ⓓ Rear window control switch (L)
- Ⓔ Rear window control switch (R)

To open windows

To open any vehicle window, press down the corresponding button and hold until the window has been lowered to the desired position.

To close windows

To close any vehicle window, press down the corresponding button and hold until the window has been raised to the desired position.

Window locking

Press the window lock switch on which the indicator lamp illuminate. At this time, all window switches in the rear doors will fail to operate and cannot be used to control the raising and lowering of vehicle windows. To turn off this function, press the switch again to pop it up.

⚠ WARNING

When there are child passengers inside the vehicle, press the window lock button to prevent any accidents or injury due to inadvertent operation by child passengers.

Front passenger and rear window switches

On the door on the front passenger side as well as on the handles of the two rear doors there is one power window switch which can be used to raise or lower the corresponding window.

One-push lowering function

Press down the window control switch with force and then release it, the window will automatically lower to the bottom. Simply pull up the switch momentarily if you wish to halt the operation mid-way.

One-push raising function

Pull up the window control switch with force and then release it, the window will automatically raise to the top. Simply press down on the switch momentarily if you wish to halt the operation mid-way.

Other functions

Window delay function

When the ENGINE START-STOP switch is switched from ON into LOCK or ACC, the window control switch is still can be used to lower and raise the window for a certain period.

Remote closing window

When the ENGINE START-STOP switch is under LOCK or ACC, long press the lock button more than 2 seconds to allow all the windows automatically close.

During closing, if you press the unlock and lock button of the key, the remote closing window function can be paused.

Accidental pinch prevention function

When the window is closed by using the One-Push Raising or remote window closing function, the window will be stopped and return back for a certain distance if a foreign object is detected between the window frame and the window.

WARNING

- › Do not use any part of your body to test accidental pinch prevention function.
- › The accidental pinch prevention function may not be fully deployed if a foreign object is caught just before the window is fully closed.

Initialization


If the battery is reconnected due to power off or low voltage, the initialization to the window must be performed as follows. Otherwise, One-Push Raising, One-Push Lowering and remote window closing function can not function normally.

1. The ENGINE START-STOP switch is in the ON position.
2. Pull up each window switch one by one and hold on for about 2~5 seconds, then release them.
3. Operate the window switch again to perform once raising and closing individually.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Sunroof opening, closing

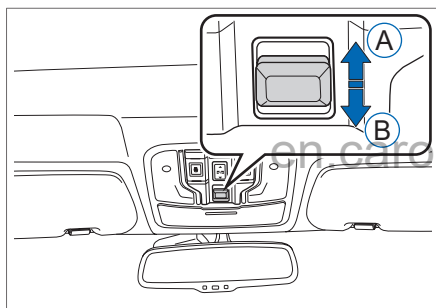

Ⓐ Opening the sunroof

Ⓑ Closing the sunroof


Manual opening, closing

- › Pull backward sunroof switch continuously to gradually open the sunroof and release the switch when the sunroof reaches a proper position, then the sunroof stops at that position.
- › Push forward sunroof switch continuously to gradually close the sunroof and release the switch when the sunroof reaches a proper position, then the sunroof stops at that position.

Auto opening, closing

- › If the sunroof is closed, pull backward sunroof switch quickly for once, the sunroof will automatically tilt to the maximum angle.
- › If the sunroof is at the maximum tilt angle, pull backward sunroof switch quickly for once, the sunroof will automatically open fully.
- › If the sunroof is tilted or opened, push forward sunroof switch quickly for once, the sunroof will automatically close fully.
- › To exit the auto running state, operate any sunroof switch again.

Sunshade opening, closing

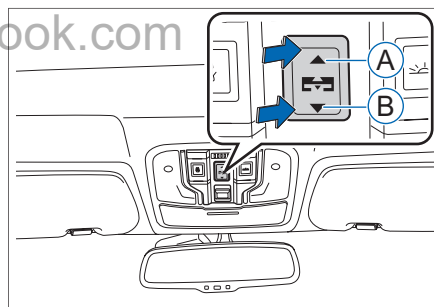

Ⓐ Open the sunshade.

Ⓑ Close the sunshade.

Manual opening, closing

- › Press the sunshade opening switch continuously to gradually open the sunshade and release the switch when the sunshade reaches a proper position, the sunshade stops at that position.
- › Press the sunshade closing switch continuously to gradually close the sun-

shade and release the switch when the sunshade reaches at a proper position, the sunshade stops at that position.

Auto opening, closing

- › Press the sunshade opening switch quickly, the sunshade will automatically open fully.
- › Press the sunshade closing switch quickly, the sunshade will automatically close fully.
- › To exit the auto running state, press any sunshade switch again.

Accidental pinch prevention function

When the sunroof encounters an obstruction while closing, it will return back for a certain distance. To close the sunroof, you must first remove the obstacle and then press the switch again.

Initialization

Sunroof initialization

When errors occur in the system, you can reset its operations by the followings:

1. Press and hold the sunroof closing button continuously and continue for 8 seconds after the sunroof reached closed position and then release it.
2. Press and hold the sunroof closing button again within 5 seconds and the glass begins running after 3 seconds from closed position to tilted position and then opened position, finally return back to closed position;

3. When the sunroof reaches closed position, release the sunroof closing button to complete the initialization.

Sunshade initialization

The methods of initialization for sunshade is the same as sunroof, you should perform it following that of sunroof.

WARNING


- › Do not extend your hands or head outside through the sunroof when the vehicle is driving. Accidental contact with outside objects or moments of emergency braking may cause severe injury or even death.
- › When closing the sunroof, take care not to clip the hands, head, neck, etc., of other passengers, as doing so may cause severe injury.
- › Do not sit right below the sunroof opening. When an accident occurs, this may cause the passenger in this position to be hurt or even killed as he/she is thrown out of the vehicle or in the event of a crushed roof.
- › Do not allow children to operate the sunroof. When closing the sunroof, there is the possibility of severe injury due to the inadvertent clipping of hands, heads, necks, etc.
- › Do not open the sunroof if the vehicle is running at a speed more than 120km/h.

CAUTION

- › Do not extrude sunroof sunshade forcibly to avoid falling or damage of sunshade.
- › When the sunroof is fully opened during driving, there may be an excessive amount of wind noise.
- › When placing the vehicle in extended storage, please close the sunroof sunshade. It would be best if you could park in the vehicle in a garage to prevent damage to the vehicle interior from long-term exposure to the sun and high temperatures.
- › Please avoid opening the sunroof when driving through dusty areas to prevent debris from accumulating in sunroof grooves. Such accumulation can cause damage to components as well as compromise sunroof drainage.
- › Conduct regular inspection of sunroof functions and drainage capabilities. Wash your vehicle often.
- › The sunroof must be fully closed when the vehicle is being cleaned at an automatic car wash facility. Do not aim a high-pressure hydraulic gun directly at sunroof seals. Doing so may cause leaks around the sunroof.


⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

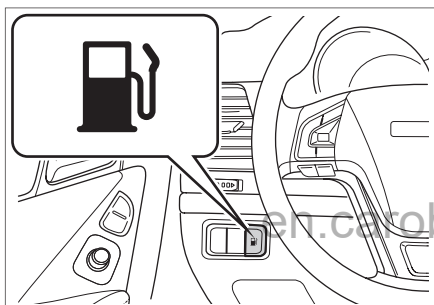

1. When the following conditions are met, press the fuel tank door opening switch to open the fuel tank door.

- › The vehicle is parked;
- › The central control must be unlocked;
- › The engine must be off.

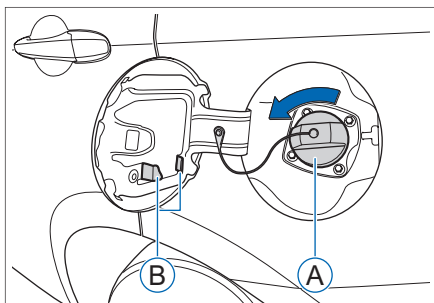

Ⓐ Fuel tank cap

Ⓑ Fixing bracket

2. Loosen the fuel tank cap by turning it counterclockwise. Remove the fuel tank cap and place it on the fixing bracket.
3. After refueling, tighten the fuel tank cap by turning it clockwise until you hear a "ta ta" sound. Close the fuel tank door.

⚠ CAUTION

Do not fill too much fuel and fill it to the first automatic stop of the filling gun. Otherwise, the fuel easily enters carbon canister and substantially shortens its service life.

⚠ WARNING

Precautions when loosening fuel tank cap:

Do not continue if you hear a hissing sound. Once the sound disappears you may then continue to open the cap slowly.

On hot days, high-pressure fuel may splash from the fuel tank, causing injuries.


Precautions when filling fuel

- › Only fill recommended fuels;
- › The engine must be off.
- › No smoking or naked flames in the vicinity of the vehicle;
- › Do not take any phone calls;
- › Adhere to all advisories put up at the gas station.


⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Opening

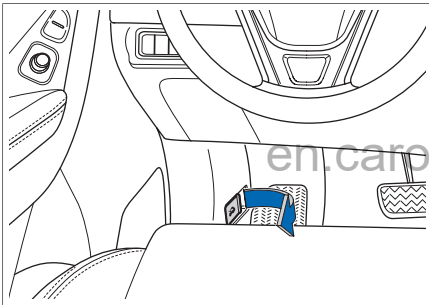


1. Pull the engine hood handle located below the instrument panel. The front of the engine hood will pop for a certain height.

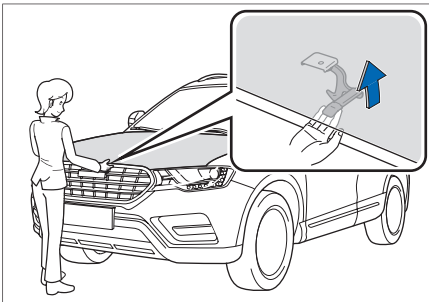

2. Lift the engine hood slightly. Insert your hand into the gap and pull the latch in

the counterclockwise direction to open the engine hood.

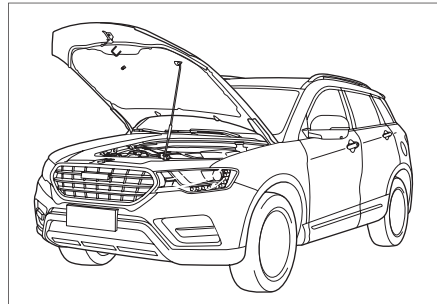

3. Secure the opened engine hood with strut.

The strut is located inside the engine hood and can be seen if you open the engine hood.

Closing

1. Lift engine hood slightly;
2. Remove the strut and return the hood to its original position;
3. Release the hood about 30 cm from the latch and allow it to descend without assistance;
4. Check that the hood is secured in place.

If the engine hood is not closed completely, a warning will be displayed at the information center.

⚠ WARNING

- › Before closing the engine hood, make sure that there is no debris left inside the engine compartment.
- › Make sure that the engine hood is fully closed and secured prior to driving. Failure to do so may lead to inadvertent opening of the hood in the course of the drive leading to accidents.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

⚠ WARNING


- › After adjusting the headrest, press the headrest to make sure that it has been locked into place.
- › Do not drive the vehicle with the headrests removed. Otherwise, in the event of collisions, the neck will suffer a severe impact, leading to serious injury or even death.
- › Do not adjust the headrest when driving.

1

Operation

Headrest

How to adjust

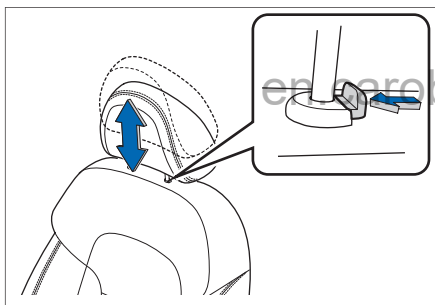


When you wish to position the headrest higher, you may wish to raise the headrest directly to the desired position.

When you wish to lower the headrest, press down on the headrest while pressing the headrest adjust button until the headrest reaches the desired position.


To remove the headrest, press on the headrest adjust button, hold, and remove the headrest.

Optimal position

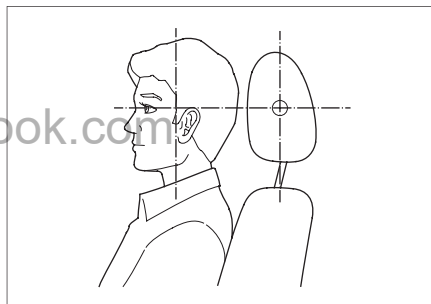

- › Adjust the headrest such that its center is aligned with the top of the driver's or passenger's ears. The headrest is at its maximum efficiency at this height.
- › The lowest position of the rear headrest can not be used; to use the headrest, be sure to raise it to the locked position.

Front headrest

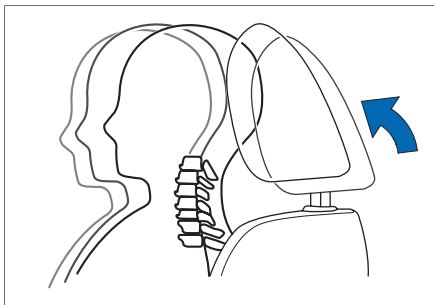

When the vehicle suffers an impact from the back, as passengers' backs are pressed against the backrest of their seats the headrest will move forward slightly to reduce the risk of injury to passengers' heads and necks.

When pressure on seat backrests is removed, the headrest will automatically revert to its original position for its next deployment.


⚠ CAUTION

Even if the backrest is subject to a mild-er impact the headrest may still move slightly.

Front seat


Manual seat adjustment

Forward/backward adjustment

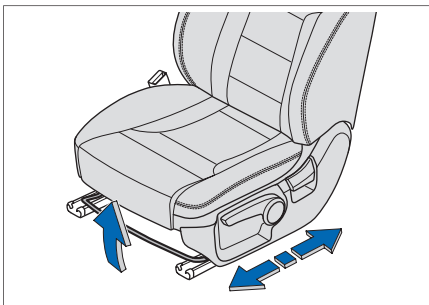

Hold the center of adjust lever and pull it up, then move the seat forward and backward to desired position, loosen the adjust lever.


Backrest tilt adjustment

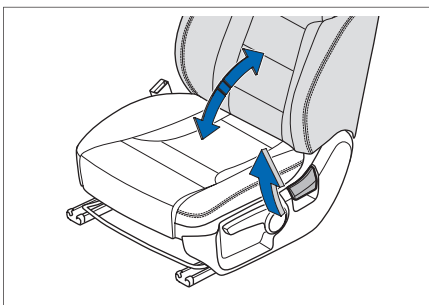

With your body against the backrest, pull the tilt adjustment lever upwards, then lean forward or back until the backrest reaches the desired degree of tilt. Release the lever.

⚠ CAUTION


Please lift the adjustment lever fully before making any adjustments. Otherwise, the seat mechanical malfunction may be caused.

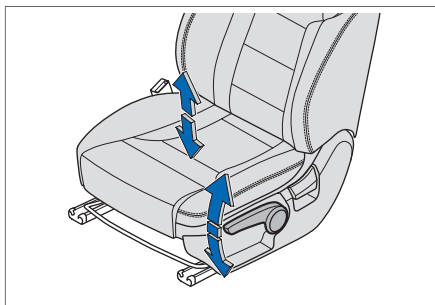Seat height adjustment (driver's seat only)

To raise the seat, pull the height adjustment lever upwards repeatedly. Every time the lever is pulled, the seat will be raised by a certain degree.

To lower the seat, push the height adjustment lever downwards repeatedly. Every time the lever is pushed, the seat will be lowered by a certain degree.

How to adjust the power seat

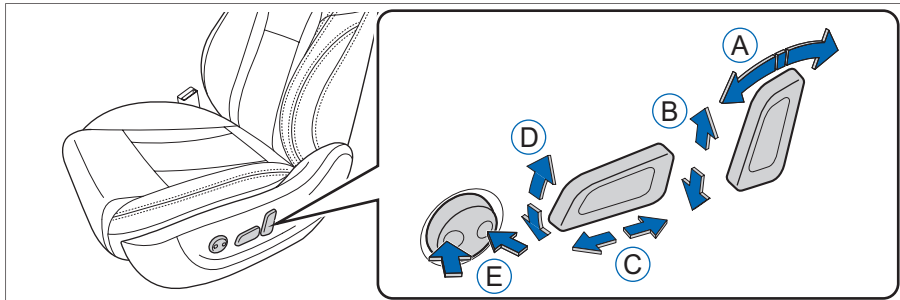

- Ⓐ Backrest tilt adjustment
- Ⓑ Seat height adjustment (driver's seat only)
- Ⓒ Forward/backward adjustment
- Ⓓ Seat-cushion angle adjustment (driver's seat only)
- Ⓔ Lower back support adjustment (driver's seat only)


⚠ WARNING

en.carobook.com

Please abide by the following. Failure to do so may lead to severe injury:

- › Make sure the driver's seat is in the correct position prior to driving;
If the seat is not in the proper position, the driver may be at risk of improper vehicle operation potentially leading to accidents. The safety performance of equipment such as the seat belt, airbag, and headrest, etc., may also be compromised.
- › After making manual seat adjustments, make sure that the seat is locked in place;
- › Never make seat adjustments in the course of the drive.
- › Do not tilt the seat backrest excessively to prevent the passenger from sliding out from under the seat belt when a collision happens. The seat belt can provide the maximum degree of protection only when the driver and front passenger are sitting upright with their backs properly seated against the backrest.

Front armrests

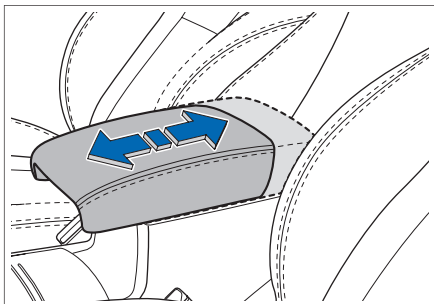


Slide the storage box cover to an appropriate position to provide support and greater comfort for the driver's and front passenger's forearms.

Rear seats

The rear seat comprises a single seat cushion and separate backrests. The seat cushion is fixed to the vehicle and cannot be flipped over.

How to adjust backrest angle

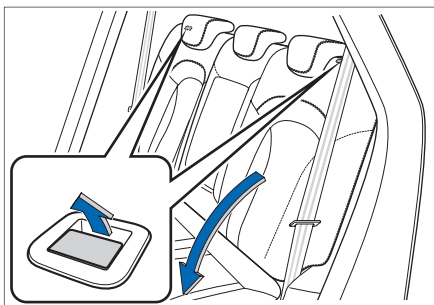

Pull the lock release handle at both sides of backrest and adjust the backrest to a proper angle.

Stowing

1. Adjust the seat headrest to the maximum height.
2. Click the seat belt into belt hook to avoid interference during backrest folding.
3. Pull up the lock release handle to flip over the unlocked backrest.
4. To recover the seat backrest to vertical position, it is also required to firstly pull up the lock release handle.

⚠ WARNING

When folding down rear seat backrests for stowing, please abide by the following to avoid severe bodily injury or even death:


- › Do not stow seat backrests in the course of the drive;
- › Do not allow anyone to sit on the stowed backrests or in the boot during the drive;
- › Do not allow children to enter the luggage area.

When returning rear seat backrests to the upright position, please abide by the following to avoid severe bodily injury or even death:

- › Shake the backrest gently from front to back to make sure that the backrest is locked into place;
- › Check to ensure that seat belts and belt buckles are not twisted or have not been trapped under the seat;
- › Place seat belts in the correct position, ready for use.


Seat warming

Front seat heating

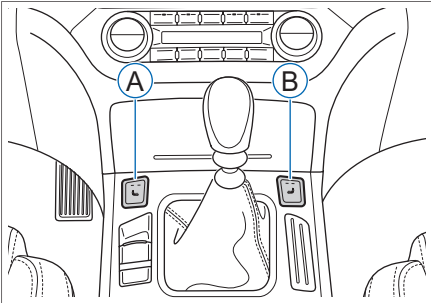

- Ⓐ Front left seat heating button
- Ⓑ Front right seat heating button

Rear seat heating

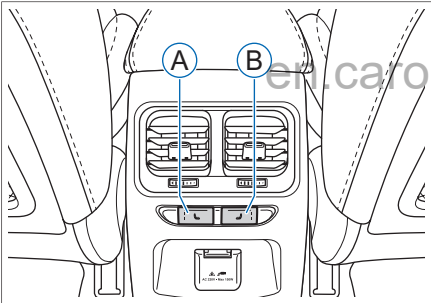

- Ⓐ Rear left seat heating button
- Ⓑ Rear right seat heating button

Instructions

The ENGINE START-STOP switch is at the position "ON", press the seat heating button repeatedly and the corresponding seat heating will be switched among High, Low and Off modes.

Mode	Introduction
High temperature mode	Two indicator lights will light up. The seat will be warmed up faster at a higher temperature.
Low Heat	One indicator light will light up. The seat will be warmed up more gradually at a lower temperature.
Off mode	Indicator lights are not lit. Seat warming function turned off.

⚠ CAUTION

- › Do not modify the seat, seat heater or electrical system. Otherwise, the function and service life of seat heater may be compromised.
- › To prevent seat overheating, do not place any mats, cushions or other insulating material on the seat when the heater is in use.
- › To prevent low voltage of battery, do not use seat heater for a long period with the engine off.

WARNING

Passengers should be extra vigilant when using the seat heating function, as the heater may lead to discomfort or even burn injuries (skin rashes, spots) even when ambient temperatures are low. The following groups of passengers must take extra care:

- › Infants, children, the elderly, the ill or the physically disadvantaged;
- › Individuals who suffer from skin hypersensitivity;
- › Individuals who are fatigued;
- › Individuals who are feeling drowsy due to consumption of alcohol or medications.

The seat heater may be damaged, please check and then use it when the following occurs:

- › A large amount of water left on the seat;
- › The seat is scratched by sharp items, such as pin or knife;
- › Odors is produced from seat or seat heater.

Rearview mirror

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.



Rearview mirrors must be kept clean. Prior to driving, make sure that the rearview mirrors are in the optimal viewing position.

⚠ WARNING

Do not adjust the interior rearview mirror during the course of the drive. Doing so may cause the driver to lose control of the vehicle, leading to an accident, injury or even death.

Interior rearview mirror

Auto anti-dazzle rearview mirror

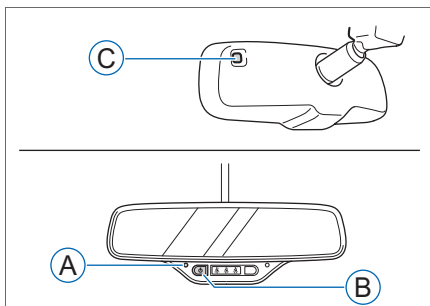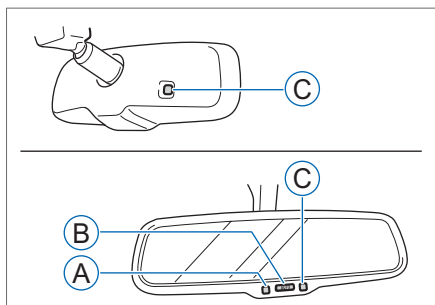

- Ⓐ Indicator lamp
- Ⓑ Auto anti-dazzle button (AUTO)
- Ⓒ Light sensors

Press the AUTO button while the ENGINE START-STOP switch is in the ACC or ON position to turn on or off the automatic anti-dazzle function.


If the indicator lamp illuminates, it means that automatic anti-dazzle function is activated, and the interior rearview mirror will automatically weaken the reflection of light depending on the intensity of head-lamp of the following vehicle.

If the indicator lamp goes off, it means that automatic anti-dazzle function is off.

⚠ CAUTION

- › The automatic anti-dazzle function is on by default.
- › Do not touch or cover the light sensors on the front and back of the rearview mirror to ensure normal operations.

Exterior rearview mirror

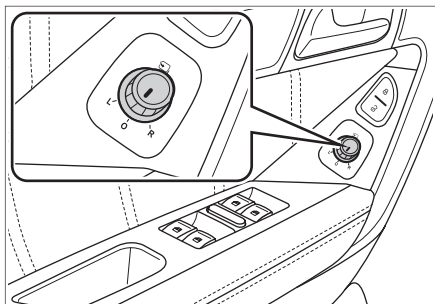

L: Exterior rearview mirror adjustment, left

0: Exterior rearview mirror adjustment off

R: Exterior rearview mirror adjustment, right

: Exterior rearview mirror automatic folding

How to adjust

The ENGINE START-STOP switch is in the ACC or ON position:

1. Turn the exterior rear view mirror adjustment knob to L or R.
2. Pull the knob to the front, rear, left and right to adjust the left and right exterior rear view mirror lens.
3. After the adjustment, return the exterior rearview mirror adjustment knob to 0.

How to stow

Electric type

> Method 1:

Turn the exterior rearview mirror adjustment knob to , and it will automatically fold.

Turn the exterior rearview mirror adjustment knob to other positions, it will automatically unfold.

> Method 2:

After the doors are locked by lock button of the key or PEPS, the exterior rearview mirror will automatically fold.

After the doors are unlocked by unlock button of the key or PEPS, the exterior rearview mirror will automatically unfold.

Thermal protection mode

After several continuous folding, unfolding operation of exterior rearview mirror, the system will enter thermal protection mode and the exterior rearview mirror will stop working.

Then, please wait for several seconds and perform next operation.

en.carobook.com

Exterior rearview mirror defroster

When the exterior rearview mirror lens is frosted, fogged, press the rear defrost button on the A/C panel, the indicator lamp illuminates and the exterior rearview mirror defrost function is on.

The exterior rearview mirror defrost and A/C system defrost share the same switch. Once the exterior rearview mirror defrost function has been activated, the rear windshield glass and exterior rearview mirror lens will rise in temperature. Do not touch these surfaces to prevent injury.

WARNING

- › Do not adjust the rearview mirrors while driving;
- › Do not drive the vehicle with the exterior rearview mirror folded, and before driving, you must unfold the rearview mirrors and adjust them appropriately.

en.carobook.com

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.


⚠ WARNING

- › The steering wheel is not allowed to be adjusted during driving.
- › The steering wheel must be confirmed that locked firmly after adjustment.

1

Operation

How to adjust

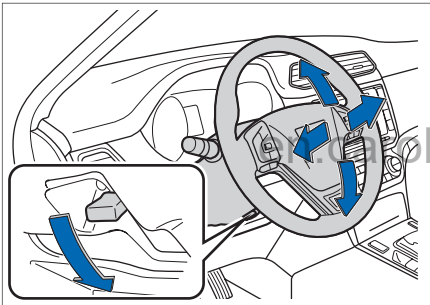

1. Push the adjustment lever beneath the steering wheel to the lowest possible position to release steering wheel position locking device;
2. Move the steering wheel upwards, downwards and/or towards the left and right until it is aligned with your chest;
3. Pull the adjustment lever up to lock the steering wheel;
4. Have a try to move the steering wheel upwards, downwards and/or towards the left and right to make sure that it is locked firmly.

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

To install a luggage rack on the guard bar, please read carefully the installation manual that comes with the luggage rack.

Roof bearing capacity

The driving performance of the vehicle may be affected by loaded objects.

Item	Values
Max. roof bearing capacity (kg)	35
Maximum driving speed (km/h)	70

CAUTION

Please consult a service provider before purchasing a roof rack.

WARNING

- › Items on the roof rack must be secured firmly in place. Otherwise, there is danger of an accident.
- › You may not, in any circumstances, exceed the vehicle's maximum load for the axles, maximum gross mass and the maximum total load of roof. Otherwise, there is danger of an accident.
- › When rather heavy or large objects are loaded on the roof rack, changes in the vehicle's center of mass and wind resistance may affect its handling, and there is danger of an accident. Because of this, you should adjust your driving style and speed according to the specifics of the current situation.


⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

1


Operation

Lamp location

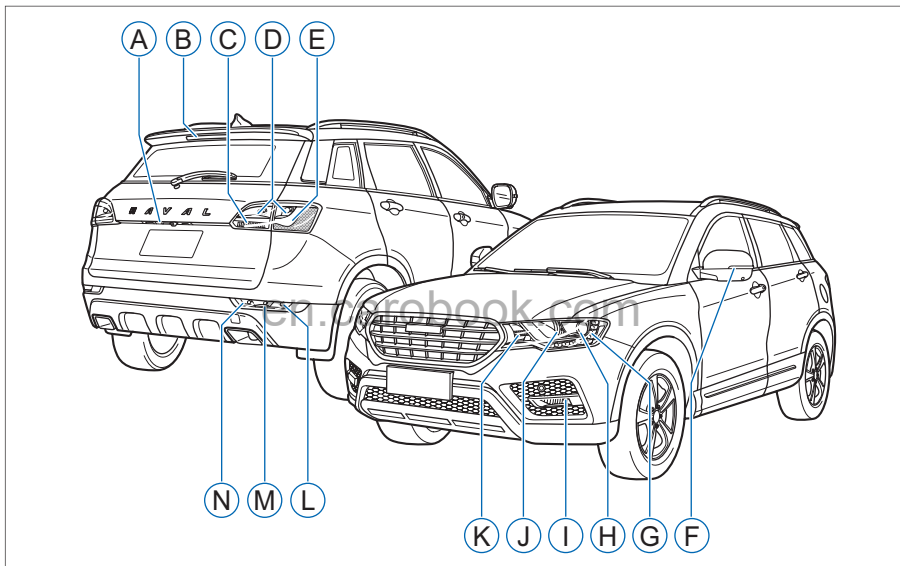

- | | |
|---|--------------------------|
| Ⓐ License-plate lamp | Ⓗ Low beam lamp |
| Ⓑ High level brake lamp | Ⓘ Front fog lamp |
| Ⓒ Rear position lamp/parking lamp | Ⓣ High beam lamp |
| Ⓓ Brake lamp | Ⓚ Front turn signal lamp |
| Ⓔ Rear position lamp/parking lamp | Ⓛ Rear turn signal lamp |
| Ⓕ Side turn signal lamp | Ⓜ Reverse lamp |
| Ⓖ Daytime running lamp/front position lamp/parking lamp | Ⓝ Rear fog lamp |

Lighting-control combination switch

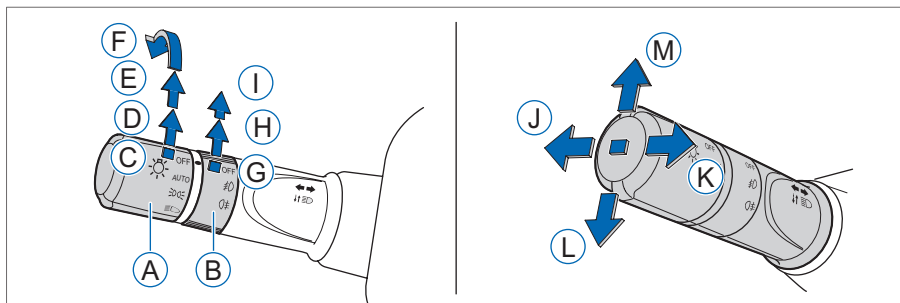

- Ⓐ Main lighting knob
- Ⓑ Fog-lamps knob
- Ⓒ All off
- Ⓓ Automatic lighting
- Ⓔ Clearance lamps (position lamp, license-plate lamp and backlamp)
- Ⓕ Low beam lamp
- Ⓖ Fog lamps off
- Ⓗ Front fog lamp on
- Ⓘ Rear fog lamp on
- Ⓣ High beam lamp
- Ⓚ Overtaking signal
- Ⓛ Left turn signal lamp on
- Ⓜ Right turn signal lamp on

High/low beam lamp

The ENGINE START-STOP switch must be in the ON position before the high/low beam lamps can be turned on.

Low beam lamp

Turn the main lighting switch to the low beam position to turn on the low beam lamp.

⚠ WARNING

During driving, do not use clearance lamps in place of the low beam lamp. Failure to do so may lead to an accident!

This is because position lamps do not have sufficient output to illuminate the road ahead or to draw the attention of other motorists. Therefore, please turn on the low beam lamp when it is getting dark around you, or when visibility is poor.

High beam lamp

When the low beam lamp has been turned on, press down on the control lever vertical to the steering wheel to turn on the high beam lamp.

Overtaking signal

Pulling up the control lever vertical to steering wheel, the high beam lamp comes on. After release, the control lever returns automatically.

When overtaking, you can repeat this operation for the purposes of speed warning.

Automatic lighting

When the ENGINE START-STOP switch is in the ON position and when the main light switch knob has been turned to the automatic lighting (AUTO) position, the clearance lamps and low beam lamps will automatically turn on or off depending on the atmospheric lighting conditions.

The rainfall and light sensor is located in the center of the front windshield and close to the interior rearview mirror (for details, Please refer to page 57). Please keep the glass surface on the sensor clean and free of foreign matters.

CAUTION

- › In the heavy fog and hazy weather that affects the visual field seriously, the lighting may illuminate automatically.
- › The automatic light control is only one of many driving aids available at your disposal. The driver remains responsible for vehicle lighting at all times.

Turn signal lamps

Turn signal function

Push the control lever downwards. The left side turn signal lamp will flash;

Pull the control lever upwards. The right turn signal lamp will flash.

Lane-change signal

When changing lanes, pull up or push down the control lever gently and release the control lever into position. The corresponding turn signal lamp and turn indicator will flash three times to act as a lane change signal.

Fog lamp

Front fog lamp

When the clearance lamps have been turned on, turning the fog lamps knob to the front fog lamp position will turn on the front fog lamps.

Rear fog lamp

When the front fog lamp has been turned on, turn the fog lamp switch knob to the rear fog lamp position and the rear fog lamp will come on (while the front fog lamp remains on); release the knob and it will return to the front fog lamp position.

To turn off the rear fog lamps, turn the fog-lamps knob again to the rear-fog-lamps position and then release it.

⚠ CAUTION

The rear fog lamp will not be turned off automatically when you turn off the front fog lamp. To turn off it, you need to turn the fog lamp switch knob to rear fog lamp position again or directly turn off the clearance lamp.

Parking lamp


If you need to park the vehicle as a matter of contingency with no passenger inside the vehicle, we suggest that you turn on the parking lamp to alert other motorists of the vehicle's position.

When the ENGINE START-STOP switch is turned off and main light switch knob is in OFF position, push down or pull up the light control combination switch to turn on left or right parking lamp.

⚠ CAUTION

- › Please abide by the relevant local laws and regulations when using the parking lamp.
- › When the parking lamp has been turned on, if battery voltage is too low, it will turn off automatically.

Hazard warning lights

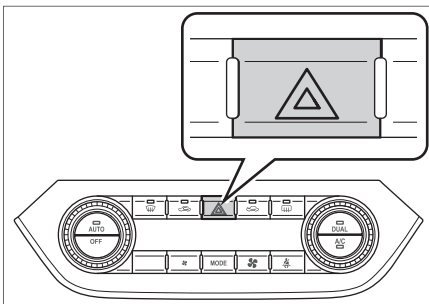

Hazard warning lamp switch is located at A/C panel. If the vehicle is malfunctioning or gets in to a traffic accident, etc. conditions, please turn on the hazard warning lamp to remind other vehicles.

Press the hazard warning lamp switch to make the turn signal lamps and the turn signal lamp indicators on the instrument panel flash. Press the switch again to turn them off.

⚠ CAUTION

To prevent low voltage of battery, do not use it for a long period with the engine off.

Daytime running light

To allow other motorists to better see your vehicle, every time the engine is started up the daytime running light will automatically come on.

The daytime running light will shut off under any of the following conditions:

- › When the clearance lamps are on.
- › Engine is turned off.

⚠ WARNING

The daytime running light is not designed for the needs of nighttime driving.

Follow-me-home function

When the ENGINE START-STOP switch is turned off, main light switch knob is in AUTO position, and all the doors are locked outside of the vehicle, the position lamp and low beam lamp will illuminate for a certain period automatically depending on the ambient lighting to make sure that you can leave the vehicle in dark.

Courtesy function

When the ENGINE START-STOP switch is in LOCK position, main light switch knob is in AUTO position, and all the doors are unlocked outside of the vehicle, the position lamp and low beam lamp will illuminate for a certain period automatically depending on the ambient lighting to make sure that you can return back to the vehicle in dark.

Front fog lamp auxiliary lighting

The front fog lamp auxiliary lighting can illuminate the ambient better when the vehicle is turning or parking.

- › The corresponding fog lamp will light up when the vehicle is going around a left or right bend;
- › When the vehicle is turning at R position, both front fog lamps will automatically come on.


Conditions for turning on

The following conditions must be met in order to turn on the front fog lamps for auxiliary lighting purposes:

- › When the vehicle is stationary with the engine running, or when the vehicle is traveling at a speed lower than 40km/h;
- › Low beam lamp is on;
- › When the turn signal indicator has been turned on, or when the steering wheel has been turned at an angle greater than 60° from its last position;
- › When the front fog lamp has not been turned on.

Beam level adjustment

Electric adjustment

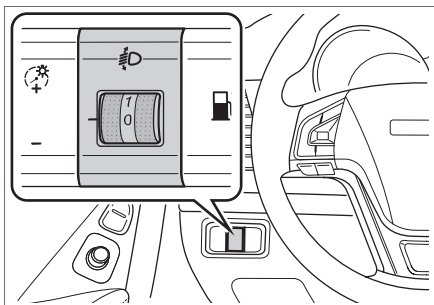

The vehicles equipped with a beam level adjustment knob can adjust the level of the headlamp beam based on the number of passengers and the load on the vehicle.

About beam level adjustment

Generally, the beam level adjustment knob is set to 0 position.

After the vehicle is loaded of passengers or cargo, the front of the vehicle raised and thus the illuminated area of the headlamp will uptilt gently comparing with usual. At this time, it needs to turn beam level adjustment knob to downtilt the beam of headlamp.


Knob position setting

Condition of loading		Knob position
Passenger	Luggage	
Driver	None	0
Driver and front passenger	None	1
All seats taken	None	2
All seats taken	Less than 40 kg	
Driver	Fully loaded	3

Auto leveling

For the vehicles equipped with Auto Leveling System (ALS) , the system will automatically adjust the level of the low beam lamp based on vehicle load.


Dashboard brightness adjuster

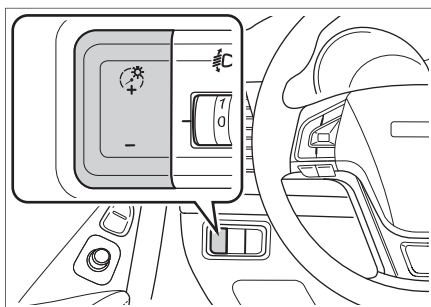

- › Press the upper part of the adjustment button to increase the brightness of the dashboard;
- › Press the lower part of the adjustment button to decrease the brightness of the dashboard.

Interior lamps

Reading light

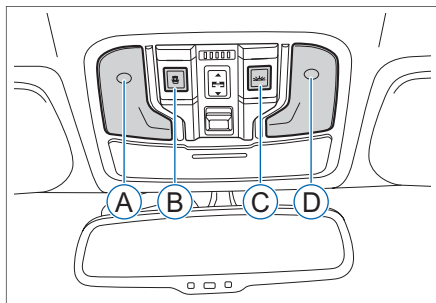

- Ⓐ Left side reading lamp switch
- Ⓑ Door control switch
- Ⓒ Main reading lamp switch
- Ⓓ Right side reading lamp switch

Left/right side reading lamp switch

Press the switch, you can turn on or turn off the corresponding reading lamp.


Door control switch

Press the switch, you can turn on or turn off the door control function. After turning on the door control function, the reading lamp will turn on or turn off automatically according to the door condition.

Main reading lamp switch

Press the main switch, you can turn on or turn off all the reading lamps.


Ceiling lamp

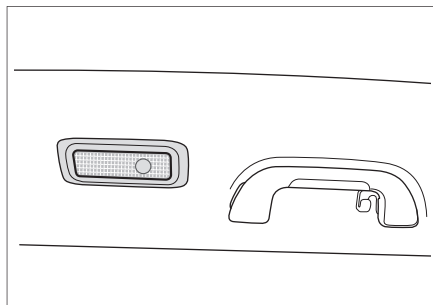

The ceiling lamp is located close to the rear ceiling armrest.

Press the contact switch to turn on and off the corresponding ceiling lamp.

Atmosphere lamp

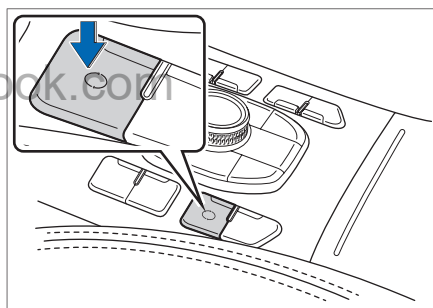

When the ENGINE START-STOP switch is at ON position and the light control combination switch is turned to clearance lamp, short press the atmosphere lamp switch to turn on the atmosphere lamp. Press it again to change the colour of atmosphere lamp.

Long press the atmosphere lamp switch to turn off the atmosphere lamp.

Windshield-wiper switch

⚠ VEHICLE EQUIPMENT


Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

When the ENGINE START-STOP switch is in the ON position, you may clean and wash the front and rear windshields.

⚠ CAUTION

- If there is ice or other foreign objects on the windshield glass, please turn off wiper operations and resume operations after such foreign objects have been cleared.
- When using the wiper in cold ambient conditions, check that the wiper blade is not frozen stuck to the windshield glass. If the wiper blade is frozen to the windshield glass, operating it at this point may cause damage to the motor.

Front wiper

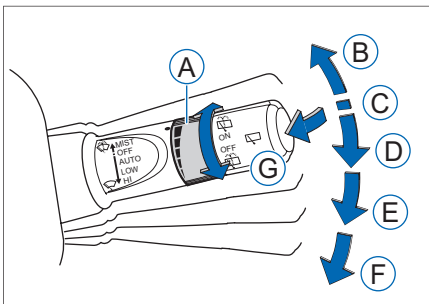

- Ⓐ Adjustment knob
- Ⓑ Front wiper inching (MIST)

Pull the wiper control combination switch upwards to the MIST position, and the front wiper will operate once and return to its original position after release.


- Ⓒ Turn off front wiper (OFF)
- Ⓓ Automatic wiper (AUTO)

In this mode, use the adjustment knob to change the sensitivity settings for the rainfall and light sensor in order to adjust the wiper frequency based on the amount of rain.

- Ⓔ Low speed (LOW)
- Ⓕ High speed (HI)
- Ⓖ Front windshield washing

Pull up the wiper control combination switch vertical to steering wheel and the front wiper will commence washing of the windshield with cleaning fluid.

Rainfall and light sensor

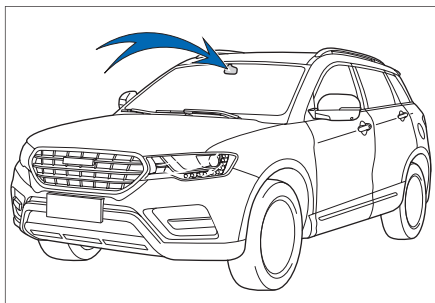

The rainfall and light sensor is located in the center of the front windshield and close to the interior rearview mirror.


⚠ WARNING

- › When the ENGINE START-STOP switch is in ON position or engine is running, push the wiper control combination switch to AUTO position and then if you contact the glass on the sensor by hands or wipe it with cloth, the wiper may run to hurt your hands.
- › When washing your vehicle, during the dry season or when there is no rainfall for days in a row, it is imperative that you turn off the automatic wiper system. Failure to do so may cause inadvertent wiper operations.

⚠ CAUTION

- › Should the wiper stop working due to issues such as accumulated snow, please turn off the wiper and park the vehicle in a safe spot. Then remove accumulated debris so that the wiper may continue to operate normally.
- › During snowy weather, even if snowflakes come in contact with the rainfall and light sensor, the sensor may not operate normally and the wipers may not function, as snowflakes come in different shapes. The snow melt may cause the auto wiping of wiper.
- › If there is dirt or ice on the glass above the sensor, the auto wipers will not operate normally. Please remove foreign objects from the glass.

Rear wiper

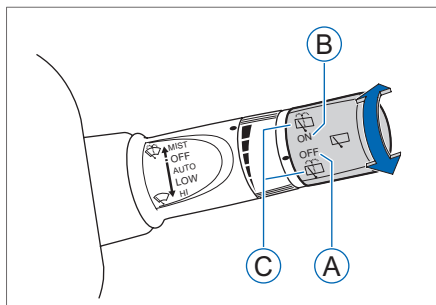

- Ⓐ Turn off rear wiper
- Ⓑ Turn on rear wiper
- Ⓒ Rear windshield washing


Turn the rear wiper knob upwards or downwards to the rear windshield washing position and hold. The rear wiper will commence washing of the windshield using cleaning fluid. Release the knob and it will return to its original position.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

1

Operation

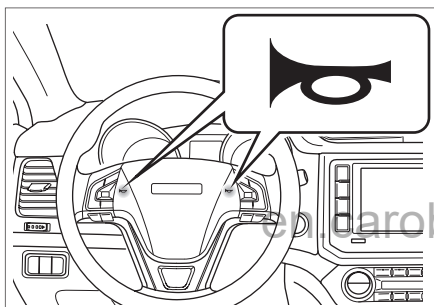

Locate the horn symbol by the steering wheel as illustrated in the diagram. Press down on the symbol to sound the horn.

⚠ CAUTION

After making adjustments to the steering wheel, please make sure that it has been locked into place. Failure to do so may cause the horn to be ineffective.


Air-conditioning system

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

1
Operation

Introduction of buttons

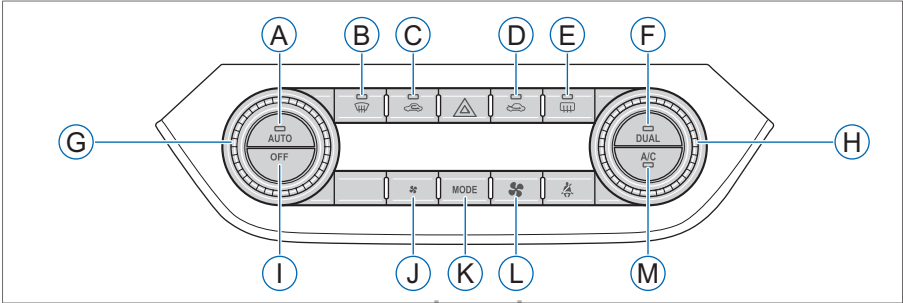

- | | |
|---|--|
| Ⓐ Automatic mode button | Ⓗ Right side temperature adjustment knob |
| Ⓑ Front defrost button | Ⓘ Close |
| Ⓒ Internal-circulation | Ⓣ Air decrease button |
| Ⓓ External-circulation | Ⓚ Mode |
| Ⓔ Rear defrost button | Ⓛ Air increase button |
| Ⓕ Zone button | Ⓜ A/C button |
| Ⓖ Left side temperature adjustment knob | |

Auto mode switch (AUTO)

Press the AUTO button, so that the indicator lights up. Select your desired temperature. The A/C system will automatically adjust air-out mode and air flow volume to achieve this temperature.

⚠ CAUTION

If the air-out mode and air flow volume adjusted by A/C system cannot meet your demand, you can perform self-adjustment; in this case system will exit AUTO mode, and the indicator will go off.

A/C button

Press the A/C button, so that the indicator lights up and the compressor is enabled, so as to reduce the interior temperature and humidity.

Off button (OFF)

When the A/C system is on, press this button to turn off the A/C system.

Temperature button

The temperature can be adjusted by turning the temperature adjustment knob.

The set temperature is increased by turning the knob clockwise;

The set temperature is decreased by turning the knob counterclockwise.

Air decrease button

Press this button to decrease the air of A/C system.

Air increase button

Press this button to increase the air of A/C system.

Internal-circulation

Press this button, the indicator lamp comes on and the vehicle enters internal circulation mode and no air outside of the vehicle is allowed to enter.

⚠ CAUTION

Please switch to internal circulation mode if you are driving in a tunnel, if you are stuck in a traffic jam, when the air outside the vehicle is heavily polluted or if you wish to maximize your enjoyment of the air-conditioning system output.

External-circulation

Press this button, the indicator lamp comes on and the vehicle enters external circulation mode and the air outside of the vehicle is allowed to enter.

⚠ CAUTION

In most situations, you should put the system in external-circulation mode, especially under the condition that the compressor is turned off.

When the compressor is off, keeping the system in internal-circulation mode can cause the windows to fog up.

Mode

It is used to adjust the air direction of A/C system, including face, feet, face&feet, feet&defrost.

Front defrost button

Press this button and the indicator lamp comes on, the A/C system starts and front defrost mode is on to gradually relieve the frosting, fogging of front windshield and door glass,

Press this button again, the indicator lamp

goes off to exit from frost mode and the A/C system will switch into the last stored operating state.

Rear defrost button

Press this button, the indicator lamp comes on, then the rear windshield heating system starts to gradually relieve the frosting of rear windshield.

Once the rear defrost function has been activated, it will work for 20 minutes and automatically shut down.

The exterior rearview mirror defrost and A/C system defrost share the same switch. Once the rear defrost function has been activated, the rear windshield glass and exterior rearview mirror surfaces will rise in temperature. Do not touch these surfaces to prevent injury.

⚠ CAUTION


Do not use the rear defrost function for extended periods of time when the engine is not running. Doing so may drain the vehicle battery.

Zone button (DUAL)

Press this button, the indicator lamp comes on and then you can separately adjust the left and right temperature adjustment button. Press this button again, the indicator lamp goes off and the temperature setting for the front passenger side will match that of the driver side.

When adjusting the front passenger side temperature knob, the indicator lamp on the zone button comes on automatically and when the zone button is pressed again, the front passenger side set temperature will make a change automatically to be same with driver side.

Air-conditioning system sensors

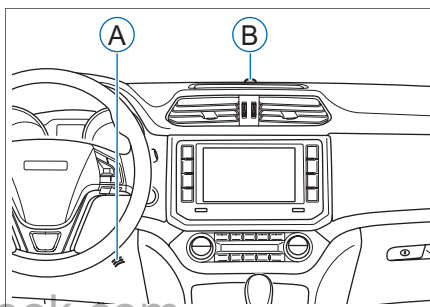

Ⓐ Cabin temperature sensor

Ⓑ Sunshine sensor

⚠ CAUTION

Do not cover or splash liquids on the sensors.

Functions introduction

Refrigeration

When the engine is turned on:

1. Press the AUTO button, so that the indicator lights up. The compressor will turn on or off according to temperature and conditions.
2. Select your desired temperature. The A/C system will automatically adjust air-out mode and air flow volume to achieve this temperature.
3. Selecting the internal circulating mode may increase the refrigeration speed and is helpful to improve the fuel economy and driving comfort.

Heating

When the engine is turned on:

1. Press the AUTO button, so that the indicator lights up. The compressor will turn on or off according to temperature and conditions.
2. Select your desired temperature. The A/C system will automatically adjust air-out mode and air flow volume to achieve this temperature.
3. Selecting the internal circulating mode may increase the heating speed and is helpful to improve the fuel economy and driving comfort.

Front defroster/ front defog

When the engine is turned on:

1. Select front defrost mode, and button indicator will illuminate.

2. Adjust airflow, temperature, turn on or off compressor, or switch between internal circulating and external circulating mode on demand.

⚠ CAUTION


Press the front defrost button again to return to previous mode.

⚠ CAUTION


- › It is recommended to switch to external circulating mode if interior air is heavily polluted or fog forms.
- › The engine coolant temperature is low when the vehicle is just started, and the A/C will not heat immediately even if you perform a heating operation.

Vents

Vent positions

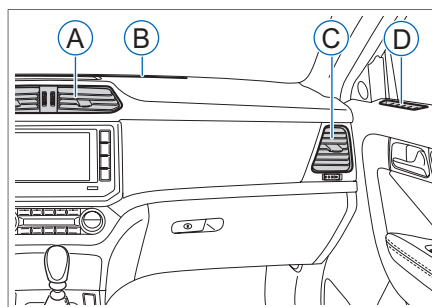


- Ⓐ Central vent
- Ⓑ Front windshield defroster vent
- Ⓒ Side vent
- Ⓓ Side-window defroster vent

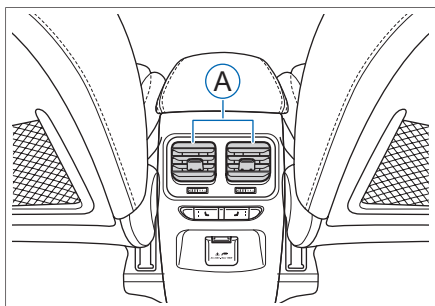

Ⓐ Rear vents

Vent adjustment

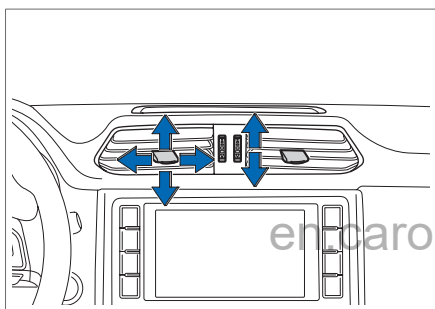

The central vent and the two side vents can be adjusted individually in terms of air flow and fan direction.

Adjusting the slats vertically or horizontally will determine the direction of air flow. The air flow can be adjusted by rotating the button near to air outlet.

⚠ CAUTION


- › Check the engine radiator and air-conditioning condenser on a regular basis. Please use low-pressure water or a soft brush to remove accumulated debris such as leaves, insects, and dirt. Such objects will impede air flow and thereby reduce the cooling effects.
- › The condenser and radiator blades are easily deformed. You can only use low-pressure water or a soft brush to clean them.
- › During the colder months, you should turn on the air-conditioning at least once a week for a minimum of 10 minutes at a time. Make sure that the air-conditioning is running while the vehicle is traveling at a constant speed and when the engine is running at a normal temperature.
- › If the cooling effect of the air conditioning system has been attenuated, please contact the service provider for repair.
- › Refrigerant can be recycled for later use. However, release of refrigerant into the atmosphere causes environmental pollution.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

The air purifier can rapidly reduce the amount of harmful chemical gases, dust, bacteria in the air, as well as minimize odors, thereby improving the air quality within the vehicle.

Instructions

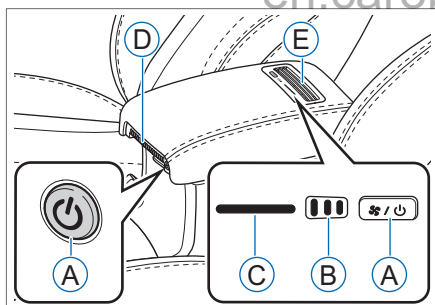

- A** Power button
- B** Operating state indicators
- C** Air quality indicators
- D** Air intake
- E** Vents

When the ENGINE START-STOP switch is at ON position, press any power button to start air purifier and run at low speed.

Repeatedly pressing either of power buttons will switch the speed of the air purifier in the order: low speed→medium speed→high speed→off→low speed.

Operating state indicators

Indicator lamp	Description
1 illuminated	Low speed
2 illuminated	Medium speed
3 illuminated	High speed
Off	Off

Air quality indicators

Colour of indicator lamp	Description
Blue	Good air quality
Yellow	Poor air quality
Red	Bad air quality
Flashing red followed by remaining lit	Please change the filter

WARNING

Operating the air intake from the driver's seat is forbidden.

Do not cover the air inlet or vent for the air purifier with items such as clothing or hats.

Washing or splashing the air purifier with liquids such as water, drinks, gasoline, or cleaning fluid is forbidden.

Do not allow children to play with the air purifier.

Changing the filter on your own is forbidden. If you need to replace it, please head to a service provider to have a professional perform the replacement.


en.carobook.com

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Sun visor

Adjusting the sun visor

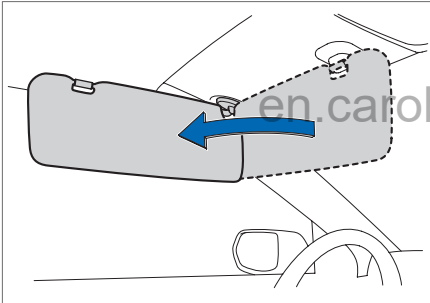


Simply turn down the sun visor above the driver's and front passenger's seat to use.

To block sunlight from straight ahead: turn down the sun visor.

To block sunlight coming in from the side: turn down the sun visor, unhook it, and push it to side.

Vanity mirror

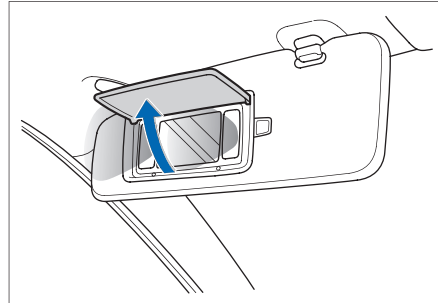


There is a vanity mirror installed to the side of the sun visor. Simply open the mirror cover to use. At the same time, the vanity mirror light will light up.

Please make sure that the mirror cover is closed when the vanity mirror is not in use.

Storage equipment


Front cup holder

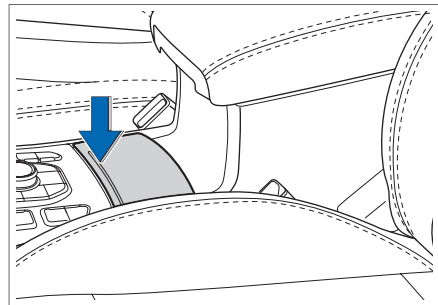

The front cup holder is equipped with cover and located at the front of front arm-rest.

Press the front end of the cover to open it.

Rear cup holder

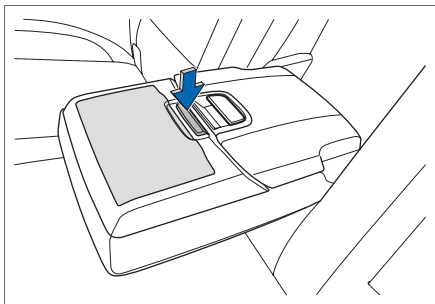


Rear cup holder is built-in inside the seat armrest. To use it, you need to lay down the armrest first and then press the button to open the cover for use.

Before returning the rear seat armrest, please make sure that no item is left in the cup holder and is covered.

⚠ CAUTION

- › Do not place small or unstable drink can in the cup holder, otherwise they may tip over.
- › Please make sure that the drink can is covered to prevent the liquid in it from splashing out.

Bottle holder

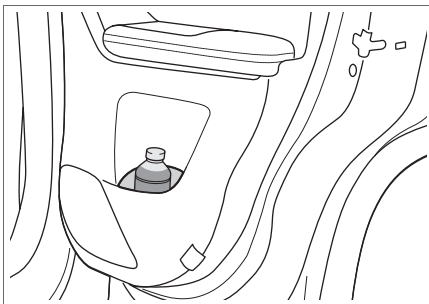


There is a bottle holder on the inside of the vehicle in each of the side doors.

⚠ WARNING

- › Do not place anything other than bottles inside the bottle holder. Otherwise, in the case of an accident or emergency braking, such items may be dislodged from the holder and lead to bodily injury.
- › Please make sure that the bottle is covered to prevent the liquid in it from splashing out.

Front armrest storage box

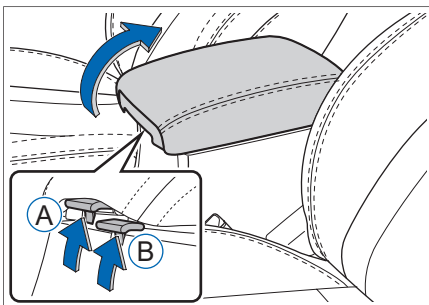


Ⓐ Storage tray switch

Ⓑ Storage box switch


The front armrest storage box consists of 2 luggage space, fold up the cover while pull the switch to open the corresponding storage tray or storage box.

Rear armrest storage box

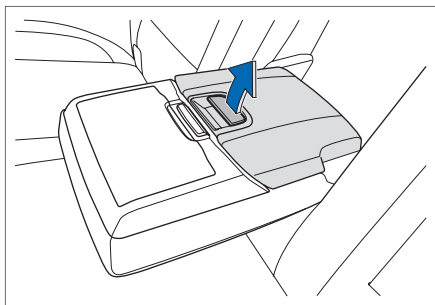

Push down the rear seat armrest, fold up the cover while pull up the latch to open the storage box.

Front passenger side storage box

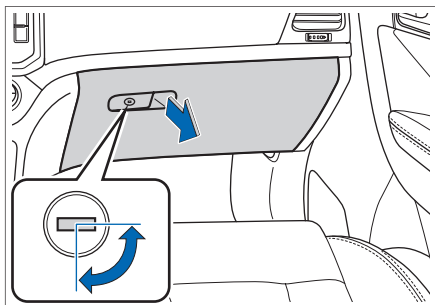

Locking and unlocking

Insert the mechanical key into the storage box keyhole. Turn the key clockwise to lock the glove box.

Insert the mechanical key into the storage box keyhole. Turn the key counterclockwise to unlock the storage box.

Open and close


Pull the latch of the storage box and then fold down the storage box to open it.

To close the storage box, fold up it until you hear it click into place.

⚠ WARNING

Please make sure that the storage box is closed while driving. Otherwise, the items in the box may be thrown out in the event of an accident or emergency brake and cause personal injury.

Spectacle case

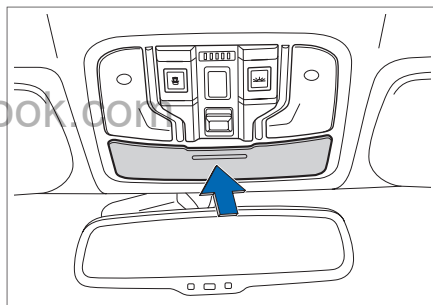


This case is used to hold sunglasses. Open the spectacle case by pressing on it in the direction indicated by the arrow.

⚠ CAUTION


- › Certain oversized sunglass models may not fit into this case.
- › Please make sure that the spectacle case is closed during the drive.

Card holder

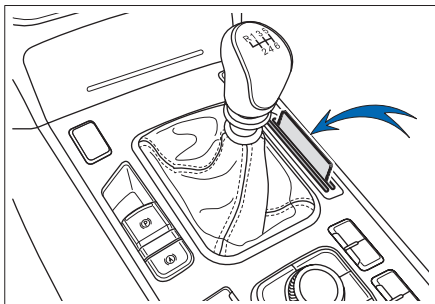

You can put such items as business card, bank card and so on into the card holder for your convenience.

Coat hook

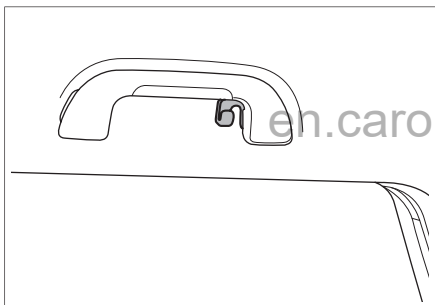


The coat hook is located inside of the rear ceiling armrest. You could directly put the clothes on it.

⚠ WARNING

Do not hang clothes hangers, heavy items or easily dislodged items on the coat hook. Otherwise, the above items may be thrown out in the event of an accident or emergency brake and cause accident.

Luggage hook

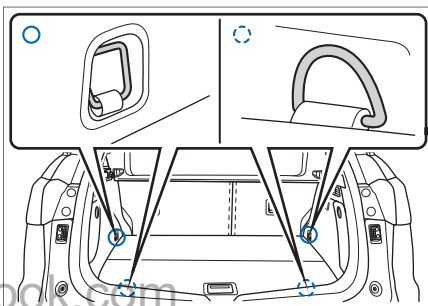


You can use the four luggage hooks in the luggage area to secure luggage.

⚠ WARNING

Before driving, make sure that all items have been secured.

Power socket

220 volt power socket

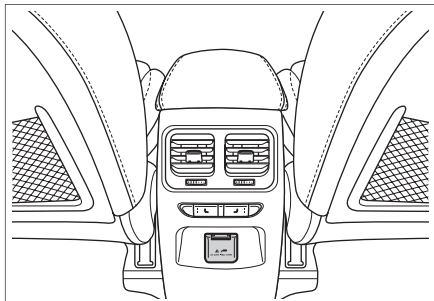

This socket is located at the rear end of the front armrest and can be used by opening it. To use this socket, the ENGINE START-STOP switch must be in the ACC or ON position.

The socket is to be used only with devices rated around 150W or less to provide 220V AC power.

If the indicator above the socket illuminates when a plug is inserted, it means that the power supply is working normally. If the indicator does not illuminate, it means that there is a problem with the power supply or that the battery voltage is too low for normal operation.

⚠ WARNING

To avoid electric shock, fire, please pay attention to the followings:

- › Do not remove the socket. Otherwise, it is easy to cause electric shock;
- › Do not use the power socket in humid or high-temperature environments;
- › Do not insert the metal object such as bare wire into the power socket;
- › Do not use this power socket together with any other power source either in series or in parallel.
- › Do not use the power accessories that exceed rated power, otherwise the fuse may be burnt out;
- › Do not operate the electrical equipments connected to power socket when driving to avoid accident;
- › Do not use this socket unmanned to avoid accident;
- › Do not use flammable gas around this socket to avoid fire;
- › If you discover any abnormality (e.g. unusually high temperatures, odors, etc.) in the course of use, please stop immediately and contact a service provider to arrange for inspection and repair.

⚠ CAUTION

- › We recommend that you do not use the device for long periods of time when the engine has been turned off to prevent battery drainage.
- › When the battery is drained the power supply will automatically be cut off.
- › Cover the power socket when it is not in use. If liquids such as beverages are spilled onto the socket, malfunctions or short-circuiting may occur.
- › Do not connect the accurate measuring equipment, strong inductive load (such as CRT colour TV or colour display, fluorescent lamp with ballast) and other important equipments to this power socket.

⚠ CAUTION

To avoid damaging power socket

The power socket cover should be closed when it is not in use. Otherwise, the foreign matters or liquid will enter power socket and cause a short circuit.


To avoid fuse burnt out

The electrical components used in vehicle should have a voltage of 12V, and its total current should not exceed 10A.

Preventing the battery from draining

Do not use the power socket for a long period of time while the engine not running.


12 volt power socket

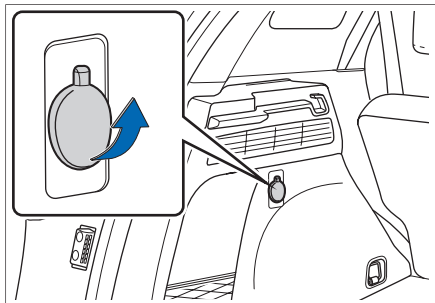

The socket is located at the trimming panel on the side of luggage area and to be used only with devices rated 120W or lower to provide 12V DC power.

When the ENGINE START-STOP switch is in the ACC or ON position, open the power socket cover for use.

Cigarette lighter

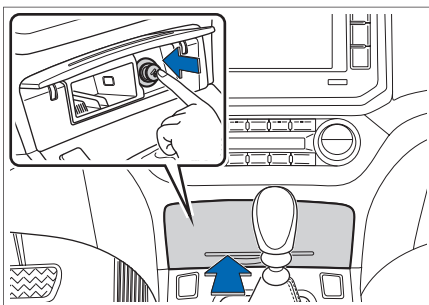

When the ENGINE START-STOP switch is in ACC, ON position or the engine is running, the cigarette lighter can be used.

The cigarette lighter is located at the storage box in the middle of instrument panel; to use it, you should press the storage box cover first to open it and then press the cigarette lighter handle; when it is heated and available for use, the handle will eject automatically.


⚠ WARNING

Do not touch the metal parts of the cigarette lighter to avoid burn injuries.

To prevent cigarette lighter malfunction and possible damage to surrounding items, please adhere to the following:

- › Do not press on the cigarette lighter for an extended period;
- › Do not install cigarette lighters from other vehicles onto the lighter base.
- › Don't connect other electrical devices to the cigarette lighter socket.

Ashtray

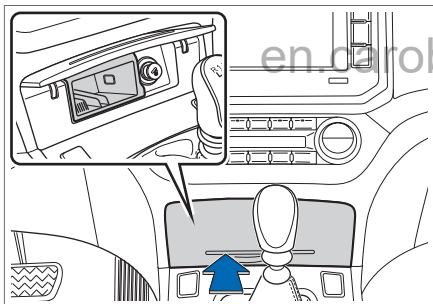


The ashtray is a removable one and located at the storage box in the middle of instrument panel. To use it, you should press storage box cover first to open it.

Pull the side of ashtray closed to cigarette lighter to remove the ashtray.

⚠ WARNING

- › Please place all matches, cigarette butts, etc., into the ashtray after they have been completely extinguished.
- › Do not place flammable items such as pieces of paper into the ashtray.

Shelf

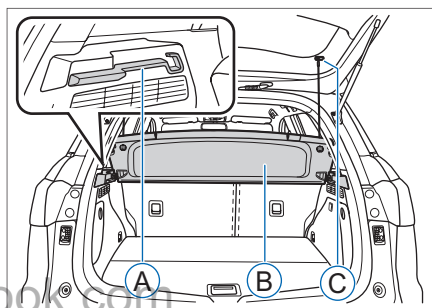

Ⓐ Guide slot

Ⓑ Shelf

Ⓒ Rope hook

Installation of shelf

1. Install the front end of shelf to guide slot;
2. Lower down the shelf;
3. Pull the rope at the rear end of shelf and hang it on the rope hook of back door.

CAUTION

- › After the shelf hanged, it will open a certain angle automatically when the back door is opened. Thus, do not place any item on the hanged shelf.
- › Do not place heavy items on the shelf, otherwise the shelf will be deformed or broken.
- › If there is too much luggage piled in the luggage area, please remove the parcel shelf to avoid its damage due to its failure to fall to the level state with the back door closed.

WARNING

When installing the shelf, please make sure that shelf is installed firmly. Otherwise, it may cause bodily injury in the course of a collision or emergency brake.

Removal of shelf

The removal of shelf is in the reverse order of installation.

2

Driving

Driving norms.....	76	Warning tones.....	158
Ignition switch.....	82		
Starting and shutting down the engine.....	84		
Parking brake	87		
Manual transmission vehicles	90		
Automatic transmission vehicles	93		
Run-in period	97		
Driving in adverse conditions	98		
Tire Pressure Monitoring System	104		
Collision avoidance radar	107		
Reverse video.....	110		
Blind-spot visualization system	112		
Blind-spot detection system.....	114		
Intelligent Stop-Start System	116		
Cruise control system	120		
Hill descent control system.....	123		
Four wheel drive system	125		
Driving assist systems	127		
Emission control system.....	130		
Instrument panel.....	133		
Trailer towing	152		

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Before driving

Remove miscellaneous items,

You can clear throughly all snow, dead leaves, etc., accumulated on the vehicle while waiting for the vehicle to be sufficiently warmed up.

Checking the condition of the vehicle

Before moving off, perform a routine inspection, making sure that the tires, oil levels, lights and exterior of the vehicle, etc., appear normal in order to ensure a safe and enjoyable drive.

If you think that your vehicle requires maintenance or repair, please get in touch with your nearest service provider in a timely manner.

Confirm that the car doors and engine-bay cover are closed

Prior to moving off, make sure that all vehicle doors are properly closed. If a vehicle door has not been closed properly, it

may open up during the course of the drive and cause a major accident.

Prior to moving off, if you have opened up the engine hood, check that the hood has been locked down. If the engine hood has not been secured and locked properly, it may open up during the course of the drive and lead to an accident.

Placing objects within the vehicle

On the dashboard

Do not place items on the instrument panel; items placed on the instrument panel may affect the driver's field of vision and even affect driving and the safety of the drive, thereby cause an accidents.

The driver's feet

Do not place any items at the driver's feet. Items placed at the driver's feet may become trapped between the floor and the brake/accelerator pedals, leading to accidents as the driver is unable to use one or both pedals fully.

If you want to place a floor mat, please select a suitable one, and if the floor mat selected is inappropriate, or if floor mats have been double stacked, brake and accelerator pedal performance may be affected, and cause a high risk of accident.

Underneath the seat

Do not place items under the seats. Items placed below the seat may affect seat adjustment or even impede locking into place, leading to accidents.

Backrest

Do not place items such as cushions between the seat backrest and the driver's or passenger's back. Failure to adhere to this advisory can compromise your driving posture. In the event of a collision, the performance of the seat belt and headrest will not be compromised, possibly leading to severe injury or even death.

On the vehicle window

Do not attach items such as decorative items using vacuum suction cups on vehicle windows.

Vacuum suction cups can invite the lens effect, leading to a higher risk of fires occurring.

While driving

No speeding

Do not drive the vehicle at a speed over what is indicated on speed limit signs or in road markings.

No overloading

It is extremely dangerous to drive an overloaded vehicle.

Do not carry more passengers or goods than what is on the indicated maximum limit. Do not carry passengers in the boot area.

No drunk driving

Drunken driving is extremely dangerous and even minor alcohol will affect judgment, view and attention of driver. It is likely to bring about severe accident.

No call

Accidents may occur when the driver picks up a call during the drive.

If you need to use a portable or mobile phone, please do so when your vehicle has been parked in a safe place.

No fatigue driving

Fatigue driving is extremely dangerous as the judgment, view and attention of driver in fatigue state will drop substantially. It is likely to bring about severe accident.

Turning off the engine is forbidden

The brake assist device and power steering system will not function when the engine does not work, which leads to deterioration of braking efficiency, or even causes severe accident.

Keeping the steering wheel fully engaged for an extended time is forbidden

Doing so may damage the power steering motor.

en.carobook.com

Braking

While driving, do not continuously depress the brake pedal or apply the parking brake.

Failure to adhere to this advisory may lead to premature wear-and-tear in the brake pad or overheating in the brakes, thereby affecting brake performance and possibly leading to accidents as a result.

The brake emits a warning sound

Do not continue driving the vehicle after the brake system has emitted warning sounds.

The disc brake will emit a warning sound when the brake pad needs to be replaced.

During the drive, if you hear a buzzing or rubbing sound from the brakes, it means that the brake pad is close to its wear-and-tear limit. Under such circumstances, please visit your nearest service provider to replace the brake pad. Otherwise it will severely wear the brake disc, damage the brake parts and affect the braking efficiency or even lead to accident.

Flat tire

It is strictly prohibited to continue driving the vehicle when one or more of its tires have punctured.

Driving with one or more flat tires is extremely dangerous, for it heightens the probability of an auto accident. In addition, doing so will also damage the tires, wheels, suspension and chassis. Therefore, it is imperative that you replace burst tires as soon as possible.

When any of the following situations occur, check if vehicle tires are punctured or have gone flat.

- › When the steering wheel vibrates;
- › When the vehicle vibrates abnormally;
- › When the vehicle is leaning at an abnormal angle.

If one or more vehicle tires bursts or goes flat during the course of the drive, please hold on to the steering wheel firmly and step gently on the brake pedal to decelerate. Emergency braking or sudden and forceful turning of the steering wheel at this juncture may lead the vehicle to go out of control.

The vehicle's undercarriage, tires, and wheels suffer a strong impact

When the bottom of the vehicle, its tires or wheels have suffered a significant impact, please stop the vehicle immediately in a safe place and inspect the vehicle.

Check that there is no leaking of brake fluid or gasoline, and that suspension parts, tires, wheels, drive shaft components, etc., are not leaked or damaged. If you discover signs of leakage or damage, do not continue to drive the vehicle. Failure to adhere to this advisory may lead to accidents.

When going downhill

Please use engine brake to complement the brakes

If you continuously engage the brake pedal while moving downslope, the brake may overheat, thereby compromising brake performance and making the occurrence of accidents more likely.

No turning off engine or neutral coasting

The braking assistance device and power steering system will not work when the engine has been turned off and thus the braking and steering performance will be compromised, causing an accident.

Driving on uneven road surfaces

Driving in the following conditions may cause damage to the bumper. Please slow down and drive carefully.

- › Where there are varying levels, such as at parking lot entry/exit points;
- › Where there are steep slopes, like in the case of multi-story parking lots;
- › Uneven road and road section with track;
- › Sections of road where there are potholes;
- › When moving from a flat surface onto a slope, or when moving from a slope onto a flat surface; or
- › When park on road with deceleration strip or along road shoulder.

Driving on slippery surfaces, such as wet, snow-covered, or icy roads

Emergency braking, sudden acceleration, or sudden and extreme turning of the steering wheel on slippery surfaces may cause vehicle tires to skid and the vehicle to go out of control, thereby causing an accident.

The engine speed changes substantially during upshift and downshift. In this case, the vehicle is likely to side-slip, which leads to accident.

In cold season, drive at a lower speed where ice typically accumulates, such as on bridge surfaces and in shaded areas.

Driving on flooded roads

Do not drive on flooded roads.

Driving through flood roads can lead to the engine stalled, short circuits or engine damage, all of which may cause a major accident.

If you are driving in a flooded area, the brake pads will become wet and braking effectiveness will be compromised, which can easily lead to accidents. Please lightly step on the brake pedal repeatedly to warm up the brakes until you confirm that they have returned to their normal condition.

Precautions for passengers

Moving within the vehicle is forbidden

Do not leave your seat or walk around in the vehicle when riding. Otherwise, during emergency braking, the passenger's body or head, etc., may be seriously injured.

Do not extend your hands or head outside the vehicle window or sunroof

Should you extend your hands or head outside the vehicle, you may suffer impact with the window or sunroof frame during emergency braking or when the windows are being closed. Such incidents can cause grievous hurt or even death.

Do not carry child passengers on your lap

When riding as a passenger, do not carry infant or child passengers on your lap even if you are already wearing a seat belt. Further, do not surround or enclose the infant or child using any part of the seat belt; this may cause grievous injury or even death during collisions or emergency braking.

Child passengers must not be allowed to operate equipment such as vehicle doors, vehicle windows and the sunroof.

If child passengers are allowed to operate such equipment, they are at risk of clipping their hands, heads, necks, etc., in the course of operation. All these can cause grievous hurt.

Should a vehicle door be opened when the vehicle is on the move, child passengers may be at risk of being thrown out of the vehicle, thereby causing severe injury or even death.

Please make full use of the child safety lock and window lock in order to prevent accidents due to erroneous or unintended operation by child passengers.

Parking the vehicle

Do not park the vehicle close to flammable objects

Do not park your vehicle near flammable objects such as areas with plenty of grass/hay or scrap paper. Fires may be triggered by contact between the hot exhaust pipe and flammable objects.

Please keep a distance when materials such as lumber or plywood is at rear. If the vehicle is parked too close to such material, a fire may be caused.

Do not allow the engine to idle for extended periods

Allowing the engine to idle for extended periods in poorly ventilated areas such as garages can cause exhaust gas build-up, thereby causing severe injury or even death by carbon monoxide (CO) poisoning.

Allowing the engine to run for extended periods when the vehicle is stationary can cause the engine or exhaust pipe to over-heat, thereby causing a fire.

Economical driving

Foreseeable driving

Maintain an appropriate distance with a vehicle ahead to avoid unnecessary acceleration and braking.

Stable speed can reduce fuel consumption.

Drive with an appropriate gear

Avoid driving vehicle with a high gear at a low speed or with a low gear at a high speed, and maintain the engine at a low speed to reduce fuel consumption and wear.

Reduce idling

If you need to park for a long time at traffic lights, a railroad crossing or during a traffic jam, turn off the engine to reduce unnecessary fuel consumption.

Avoid unnecessary load

Vehicle load and overload driving will increase fuel consumption.

Before driving, remove unnecessary items from the vehicle.

Regularly check tire pressure

Too small tire pressure will increase rolling resistance, thereby increasing fuel consumption while increasing tire wear.

Regular scheduled maintenance

Regular maintenance can ensure that your car has a longer life and optimum economy.

Turn off electrical components temporarily not required

Electrical components such as air conditioning, heated seats and rear window heater require a lot of energy and fuel consumption, therefore, turn them off if they are not used.

Turn off vehicle windows and sunroof


Opening vehicle windows or sunroof will increase wind resistance, thereby increasing fuel consumption, so turn them off when they are not needed.

Coast using inertia

In approaching a red light or driving down along a large slope, you should release the accelerator pedal to allow the vehicle to coast.


⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

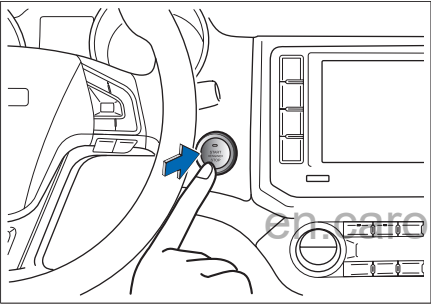

When the intelligent key is inside the vehicle, press the ENGINE START-STOP switch to change its state, turn on or off engine.

Electronic steering unlock

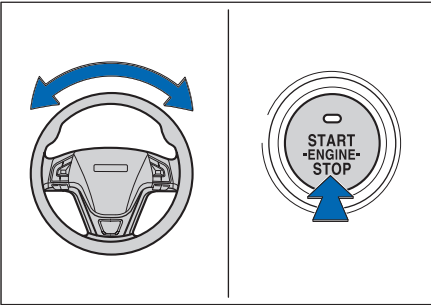

During vehicle start, if a piece of information displayed at information center

indicating that electronic steering unlock failed, you should shake steering wheel and press ENGINE START-STOP switch.

Selecting the switch position

- › For the vehicle equipped with manual gearbox, with the vehicle in a stationary position and with zero pressure applied on the clutch pedal, press the ENGINE START-STOP switch to switch between various modes.
- › For the vehicle equipped with automatic gearbox, with the vehicle in a stationary position and with zero pressure applied on the brake pedal, press the ENGINE START-STOP switch to switch between various modes.

Every press of the switch will change between modes in the following order. Confirm state of ignition switch according to color of its working indicator lamp.

Order	State	Indicator lamp	Effects of this status
1	LOCK	Off	Electric components are not in working state.
2	ON	Green	You can use all electrical parts
3	ACC	Red	Some of the electrical components, such as the audiovisual system, can be used.

⚠ CAUTION

If you press the ENGINE START-STOP switch too early, you will be unable to change its state sometimes. You can try pressing the switch again and check that the position selected is the one you want.

If the ENGINE START-STOP switch can not be switched from ON to ACC, you can perform the followings for normal use of vehicle:

- › For the vehicle equipped with manual gearbox, you need to depress the brake pedal while pressing ENGINE START-STOP switch for 2 seconds or pressing 2 times within 2 seconds to switch the mode.
- › For the vehicle equipped with automatic gearbox, you need to depress the brake pedal with the engine running while pressing ENGINE START-STOP switch for 2 seconds or pressing 2 times within 2 seconds to switch the mode.

the shift lever to P or N gear, and then press the ENGINE START-STOP switch to start the engine.

- › If the ENGINE START-STOP switch is in the ACC mode, it will automatically switch to LOCK mode if there are no operations for 30 minutes.

⚠ CAUTION

- › Do not place the intelligent key on the dashboard, on the ground, on the instrument panel, in the glove box, or between the rear seats and the luggage area. Otherwise, the ENGINE START-STOP switch may not be able to change its state.
- › When the engine is not running, do not keep the ENGINE START-STOP switch in the ON position for extended periods of time to prevent battery drainage.
- › Before leaving the vehicle, please switch the ENGINE START-STOP switch to LOCK and have the key with you.

Common sense

- › For the vehicle equipped with manual gearbox, no matter which mode the ENGINE START-STOP switch has been set to, simply depress the clutch pedal, shift the shift lever to N gear, and then press the ENGINE START-STOP switch to start the engine.
- › For the vehicle equipped with automatic gearbox, no matter which mode the ENGINE START-STOP switch has been set to, if you depress the brake pedal, shift

⚠ WARNING

While driving, do not switch the ENGINE START-STOP switch to the LOCK position.

Starting and shutting down the engine

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Automatic transmission vehicles


1. The intelligent key is within the effective operating zone.
2. Make sure that the shift lever is at P or N, depress the brake pedal and press the ENGINE START-STOP switch to start the engine.

Once the engine has been started up, the indicator light on the switch will turn green.

⚠ CAUTION

- › If the engine can not start, you should release the pedal and further depress the clutch pedal (manual) or brake pedal (automatic) with larger force than previous one and then press the ENGINE START-STOP switch again.
- › If the engine can not start in cold weather after pressing ENGINE START-STOP switch by following normal methods, you could long press (maximum 15 seconds) the ENGINE START-STOP switch until the engine starts.
- › Check the engine immediately if it shows signs of difficulty during start-up or if it stalls frequently.
- › Do not operate cold engine at high speed.
- › For the diesel engine vehicle, the engine may take slightly longer period to start at low temperature. Thus, you must depress the clutch pedal (manual) or brake pedal (automatic) until the engine starts.

How to start the engine

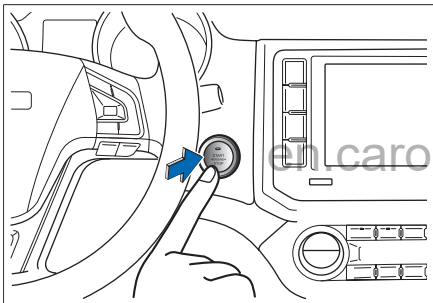


Manual transmission vehicles

1. The intelligent key is within the effective operating zone.
2. Make sure that the shift lever is at N, depress the clutch pedal and press the ENGINE START-STOP switch to start the engine.

Once the engine has been started up, the indicator light on the switch will turn green.

Starting the engine when the intelligent key battery is drained

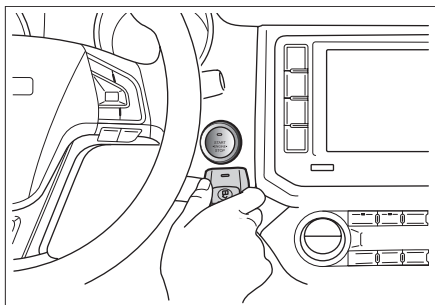

Manual transmission vehicles

1. Remove the mechanical key from the intelligent key.
2. Make sure that the shift lever is in N gear and depress the clutch pedal.
3. Press the ENGINE START-STOP switch and then hold the removable end of the intelligent key to the ENGINE START-STOP switch for at least 3 seconds to start the engine.

During the aforementioned procedure, if you did not depress the clutch pedal, switch the state of ENGINE START-STOP switch.

Automatic transmission vehicles

1. Remove the mechanical key from the intelligent key.
2. Make sure that the shift lever is in P or N gear and depress the brake pedal.
3. Press the ENGINE START-STOP switch and then hold the removable end of the intelligent key to the ENGINE START-STOP switch for at least 3 seconds to start the engine.

During the aforementioned procedure, if you did not depress the brake pedal, switch the state of ENGINE START-STOP switch.

⚠ WARNING

- › You must only start the engine after sitting in the driver's seat. Failure to do so may lead to accidents, bodily injury or even death.
- › Do not step on the accelerator pedal under any circumstances when starting up the engine.
- › Remember to start the engine even when you only need to move the vehicle slightly. Moving the vehicle downslope with only gravity and not the engine may cause accidents, bodily injury or death.

Shutting down the engine

Manual transmission vehicles

1. Park the vehicle completely and switch the shift lever to N;
2. Press the ENGINE START-STOP switch to turn off the engine.

Automatic transmission vehicles

1. Park the vehicle completely and switch the shift lever to p or N;
2. Press the ENGINE START-STOP switch to turn off the engine.

CAUTION

For engines equipped with a turbocharger, please pay attention to the following items:

- › When moving off, you must allow the engine to idle for 3 to 5 minutes under the following circumstances:

When the engine has not been operated for an extended time, or in cold season.

After engine oil has been replaced, or after engine maintenance.


- › Try to ensure that the engine does not run idle for long periods of time (maximum of 20 minutes).
- › When stopping the vehicle after the engine has worked at a high rotational speed for some time, allow the engine to either run at a low rotational speed or idle for some time (3 to 5 minutes) before turning off the engine. Doing so helps to protect the turbocharger apparatus.
- › Do not touch high-temperature components such as the engine, exhaust pipe and radiator immediately after turning off the engine. Failure to do so may lead to burn injuries.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.


Electronic Parking Brake (EPB)

Parking brake application

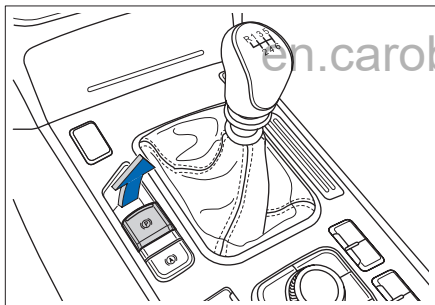

When the vehicle is stationary, no matter what mode the ENGINE START-STOP system is, you can pull up the EPB switch to apply the parking brake.

Parking brake releasing

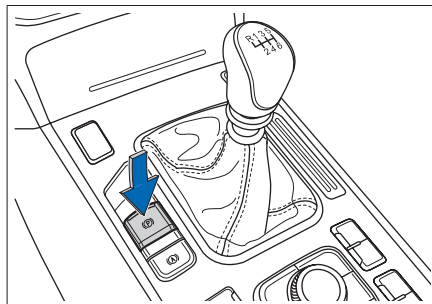

When the ENGINE START-STOP switch is in the ON position, depress the brake pedal and press the EPB switch to release the parking brake.

Automatic driving away function

When the vehicle is on the level road or ramps (slope not more than 20%) and the EPB is applied, the driver fastens the seat belt and depress the accelerator, after detecting the driver's purpose, the EPB will automatically release itself; to avoid coasting on the ramps, a much larger traction force of engine is needed.

Emergency braking

Release the accelerator and pull up the EPB switch and hold it there. That means that the EPB system will then be used to stop the vehicle in an emergency.

You can interrupt this braking midway by releasing the EPB switch or by depressing the accelerator pedal.

⚠ WARNING

The EPB system can be used to stop the vehicle only the emergency situations occur (such as hydraulic brake system malfunctioning or brake pedal blocked).

System initialization


After vehicle friction lining of brake have been replaced, you would need to pull up and press the EPB switch once to conduct system initialization automatically.

⚠ WARNING

- The parking brake must be applied when parking the vehicle, failure to do so may cause the vehicle to move on its own accord and may lead to accidents.
- When vehicle speed is more than 3km/h, performing an emergency brake using the parking brake switch will not stop the vehicle immediately, but slow the vehicle to stop it.
- Do not park the vehicle on the slope with the grade more than 30%.

Automatic parking

Operating principle

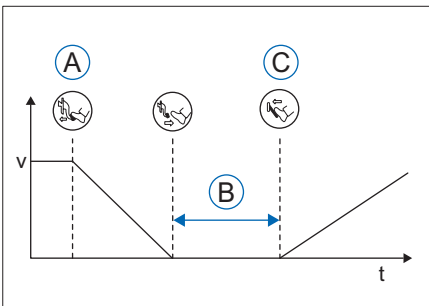

The automatic parking is a kind of additional function of ESP, and can improve the riding comfort. Operating principle is as follows:

- Depress the brake pedal to slow down the vehicle;
- When the vehicle is stationary, release the brake pedal, and thus the automatic parking function is activated to keep or properly increase the brake force to maintain the stationary state of vehicle;


The automatic parking system will switch automatically to Electronic Parking Brake after it is activated and working for a certain period.

- When the driver's start purpose is detected by the system, the vehicle will release the brake automatically to achieve comfort of start.

⚠ CAUTION

When the automatic parking system is under working state and detects that the vehicle is coasting, it will increase the brake force to maintain the stationary state of vehicle.

Operating conditions

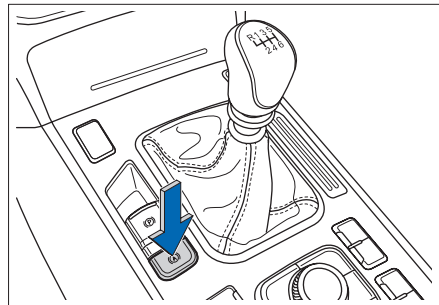

The ENGINE START-STOP switch is at ON position, the driver side door is closed, the seat belt is fastened, press the automatic

parking switch to turn on or off the automatic parking function.

The automatic parking system will be on standby after automatic parking function is turned on and is activated to start working when the following conditions are met;

1. Not more than 30% slope;
2. The vehicle is stationary;
3. The brake pedal is depressed and released;
4. The shift lever is in N gear or the clutch pedal is depressed.

CAUTION

When a vehicle is towed or being cleaned in an automatic car wash facility, turn off the auto parking brake function to prevent the vehicle from applying brake force automatically.

System turning off condition

1. If the automatic parking system is on standby, operate the automatic parking switch to turn off automatic parking function;
2. If the automatic parking system is working, operate the automatic parking switch to turn off automatic parking function. Meanwhile, the vehicle turns on electronic parking function automatically to apply brake force;
3. If the automatic parking system is working, and when the engine torque is large enough to start the vehicle, the automatic parking system releases the

brake force and has its state switched from working to standby to achieve comfortable start;

4. When the automatic parking system has worked continuously for more than 3 minutes, the automatic parking function is turned off. Meanwhile, the vehicle turns on electronic parking function automatically to apply brake force;
5. When the automatic parking system is working, and if the engine stalls, the automatic parking function is turned off. Meanwhile, the vehicle turns on electronic parking function automatically to apply brake force;
6. When the automatic parking system is working, and if the driver door is opened, the automatic parking function is turned off. Meanwhile, the vehicle turns on electronic parking function automatically to apply brake force;
7. When the automatic parking system is working, and if the automatic parking system detects that the vehicle is coasting, the automatic parking system will release the brake force immediately, the automatic parking function is turned off.

Manual transmission vehicles

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

⚠ CAUTION


- › If shifting to first gear proves to be a bit of a challenge, depress the clutch pedal and then try again.
- › During driving, do not place your foot on the clutch pedal. Doing so will cause unnecessary wear and even damage to the clutch.

2

Driving

How to shift

How to shift between forward gears

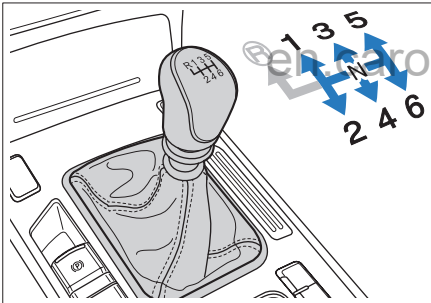


1. Depress the clutch pedal fully;
2. Place the gear stick in the appropriate gear;
3. Release the clutch pedal.

⚠ WARNING

Do not let the vehicle slide forward in neutral gear, as doing so may lead to accidents.

How to shift to R

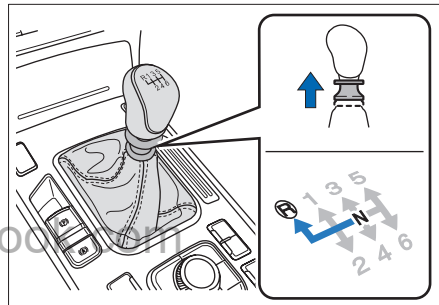


1. Make sure that the vehicle is stationary;
2. Depress the clutch pedal fully;
3. Pull up the reverse-gear lock under the head of the gear stick and hold it there;
4. Place the gear stick into reverse and then release the reverse-gear lock;
5. Slowly release the clutch pedal.

⚠ CAUTION

- › During driving, do not shift the shift lever into R gear. Doing so will cause severe damage to the transmission and lead the vehicle to go out of control.
- › To shift to R gear, you must pull up reverse gear lock, otherwise, the gear shift failed and forcibly shifting the gear will cause damage to the transmission.

Shifting prompt

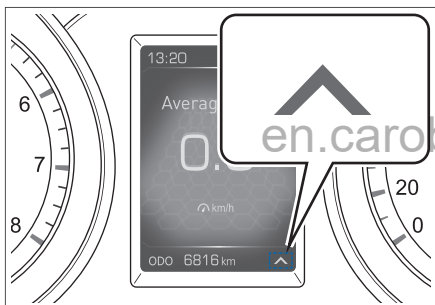

If the upshift or downshift conditions are met, the corresponding up or down arrow will be displayed at the information center to prompt the driver to perform the upshift or downshift operation.

⚠ CAUTION

- › The shifting prompt function is mainly an auxiliary prompt function designed for optimum economic fuel consumption area of this model and most drivers' driving habit and is only a auxiliary prompt and will not cause any restriction to the vehicle performance.
- › When using the cruise control, the system will turn off the shifting prompt function.
- › Please ignore the shifting prompt information when driving under the following conditions:
 1. Driving on slopes;
 2. Driving on urban road and long period of low speed driving is not allowed;
 3. Driving in R gear.

Moving off

Moving off normally

1. Start the engine. When the RPM of the engine is stable, step fully on the clutch pedal and shift to first gear.
2. Release the parking brake.
3. Slowly, release clutch pedal. At the same time, step gently on the accelerator pedal to pick up speed.

Moving off on a slope

1. Confirm that the parking brake has been engaged and then shift into first gear.
2. Release the clutch pedal slowly while stepping gently on the accelerator pedal at the same time.
3. Release the parking brake.

Stopping the vehicle

1. Step on the brake pedal while fully depressing the clutch pedal and then shift into neutral.
2. Engage the parking brake.
3. Shut down the engine.

CAUTION

Operate the shift lever based on the following situations in case of grade parking.

- › If the vehicle is facing an upslope, switch to first gear. Apply wheel blocks if necessary.
- › If the vehicle is facing a downslope, switch to reverse gear. Apply wheel blocks if necessary.


en.carobook.com

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

This vehicle is equipped with dual clutch transmission (DCT). What differs from conventional automatic transmission is that DCT has dual mechanical clutch disc.

Gear and mode introduction

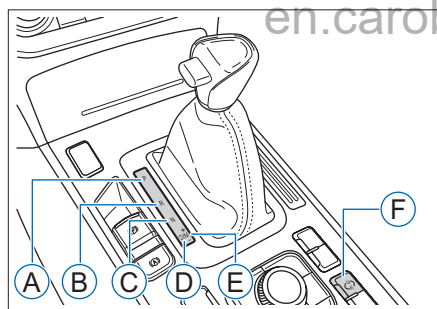

- A Park gear (P)
- B Reverse gear (R)
- C Neutral gear (N)
- D Automatic mode (D)
- E Manual mode (M)
- F Switch-driving-mode button

Park gear (P)

P gear is used for parking the vehicle and starting the engine.

While it is in park gear, the transmission will be mechanically locked, preventing the vehicle from moving on its own.

To park the vehicle, you should first switch the gear to P, and then apply the parking brake.

To prevent the vehicle from creeping forwards while starting it, you should depress the brake pedal fully when shifting the lever from P to another gear and then move the shift lever.

Reverse gear (R)

R is used for reversing the vehicle.

To shift the lever from another gear into R, you should first stop the vehicle completely before shifting into R.

Neutral gear (N)

You can start the engine while in neutral, but for safety, being in P is recommended when starting the engine.

If you must restart the engine after turning it off, or if you must temporarily stop the car while allowing the engine to idle, you can use neutral.

⚠ WARNING

When the shift lever is in neutral, the wheels and transmission are not engaged, and you must apply the parking brake or depress the brake pedal to prevent the car from being able to roll forwards, possibly leading to an accident.

Do not let the vehicle slide forward in neutral, as doing so may lead to accidents.

Automatic mode (D)

Automatic mode is used under normal driving conditions.

The transmission can automatically adjust the gear ratio based on the vehicle's current and desired speed for the best fuel economy.

Manual mode (M)

When it is necessary to increase the horsepower to accelerate the vehicle or go uphill, it is recommended to use manual mode.


The automatic mode (D) can be switched into manual mode (M) by shifting the shift lever towards right, thus the current gear information will be displayed at the information center which switched among 1~6 when performing upshift or downshift operation.

⚠ CAUTION

In manual mode, if the speed of the vehicle is too high or too low, the transmission will automatically shift to a suitable gear to protect the engine.

Using the gear selector to upshift and downshift


After entering manual mode, move the gear selector forwards or backwards to upshift and downshift.

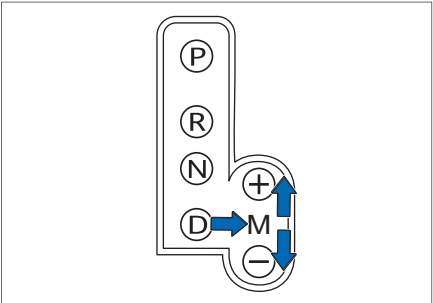

To upshift, lightly push the gear selector towards the "+".

To downshift, lightly pull the gear selector towards the "-".

Using the paddle shifters to upshift and downshift

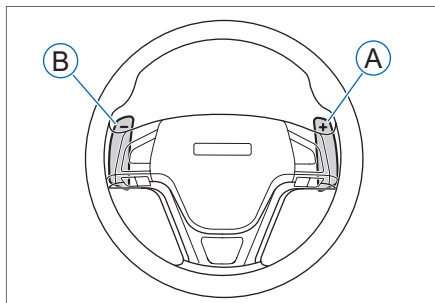

- Ⓐ Up paddle shifter
- Ⓑ Down paddle shifter

The paddle shifter can be used to upshift or downshift without removing your hands from the steering wheel.

While driving in automatic mode and when the engine RPM or vehicle speed meets the conditions for a particular shift, immediately move the paddle shifter to provisionally switch to manual mode. If the paddle shifter is not used within a certain time, the system will revert to automatic mode. To revert to automatic mode quickly, long press the up paddle shifter "+".


While the gear selector is in manual mode, you can upshift or downshift using the paddle shifters on the steering wheel.

Driving mode switching

The system defaults to standard mode. Press the driving mode switching button to switch the sport, economy, standard modes in cycle.

When the system is under sport or economy modes, the button indicator lamp comes on and goes off when under standard mode. Also, the corresponding prompt information will be displayed at information center.

How to shift

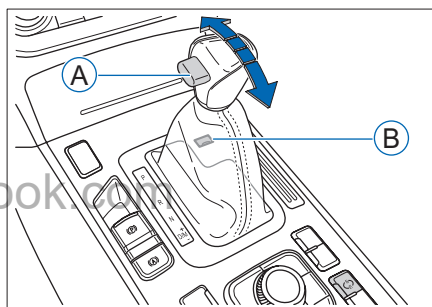

- Ⓐ Unlock button
- Ⓑ Shift-lock cover

Under normal conditions

The information center will display the current gear.

From ... shifting to ...	How to operate
P to R	1. Step on the brake pedal; 2. Press the unlock button on the gear selector. 3. Move the gear selector.
R to N	Move the gear selector directly.
N to D	
D to M	
M to D	
D to N	1. Press the unlock button on the gear selector. 2. Move the gear selector.
N to R	
R to P	

⚠ CAUTION


If the ENGINE START-STOP switch is in the LOCK or ACC positions, it is not possible to shift from P to another gear.

To avoid damaging the transmission, you must first completely stop the vehicle and then shift to P.

During a breakdown

If, under normal conditions, you cannot shift from P to another gear, you can use the following procedure:

1. Shut off the engine and engage the parking brake;
2. Remove the shift-lock cover;

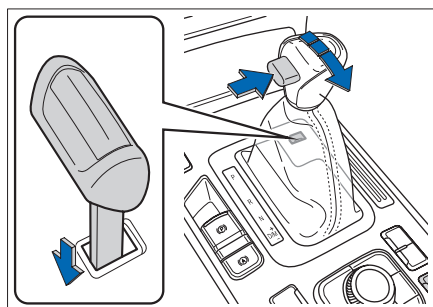

3. Insert the mechanical key into the shift-lock slot. Then, press the unlock button while pressing down on the key and move the gear selector to N.
4. Replace the shift-lock cover;
5. Step on the brake pedal fully and restart the engine.

⚠ CAUTION

If you must use this method to shift from P to another gear, it means that there is something wrong with your vehicle. You must go to a service provider for inspection and maintenance.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Tire

Take extra care in the first 500km when driving with a set of new tires.

New tires do not offer optimal grip until they have been run-in.

Friction lining of brake

New friction lining of brake will not reach peak performance until 400km or so into use.

New friction linings for the brakes must also be run-in to achieve the best brake performance. However, you can also compensate for lowered brake performance by stepping harder on the brake pedal.

During the run-in period, avoid applying extra load on the brake. For instance, refrain from emergency braking especially when the vehicle is traveling at high speed or when it is traveling on a slope.

Engine

The use life, reliability, economy, and initial run-in process of the engine are all

highly interrelated. Therefore, the user must perform a run-in process beginning with zero load and then incrementally increasing load with a new engine or an engine that has just undergone major repair. Running in the engine also allows the user to perform preliminary checks, adjustments and maintenance of the engine, and to ensure that each engine part has been appropriately seasoned. We recommend that you try to avoid unnecessary wear-and-tear and damage.

⚠ CAUTION

- › The run-in distance is 5,000 km.
- › For the first 300 km, refrain from stopping the vehicle suddenly; in the first 800 km, refrain from towing trailer or another vehicle.
- › During the run-in period, the vehicle should be driven in proper sequence and gradually. It should be started in the lowest gear, the gears should be increased step by step, and sharp acceleration should be avoided.
- › Be sure not to use a high gear while driving at low speeds or a low gear at high speeds. You should shift gears as appropriate for the driving situation.
- › During the run-in period, you should pay attention to the operating conditions of each engine system. If there is a breakdown or an abnormal occurrence, you should deal with it immediately and continue the run-in afterwards.

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Driving in foggy weather

Turning on the fog lamp

While driving in fog, you should turn on the fog lamps.

Use the horn to draw the attention of pedestrians and other drivers

When you hear horns sounded by other vehicles, respond with a single sound of the horn to indicate your position.

CAUTION

Inspect all vehicle parts before driving, for example: headlamp, fog lamp, etc. Doing so can help to prevent accidents on the road, bodily injury or death.

Drive slowly and safely

When driving in foggy weather, try to drive slowly as much as possible and maintain a safe distance from the vehicle in front of you.

Fog can form close to road surfaces with

low ambient temperatures and high humidity. In such circumstances, try to avoid the use of emergency brakes.

Do not attempt to wipe off any condensation that has accumulated on glass panels during the drive

As the temperature difference between the inside and the outside of the vehicle can be significant, water condensation may form on the inside surface of the windshield glass panel and affect the driver's field of vision. In this case, you can use the air-conditioning system or open a small gap in vehicle windows to equalize inside/outside temperatures, remove condensation quickly, and to prevent the formation of more condensation.

If you wish to wipe away the condensation on the windshield glass, please do so only after bringing the vehicle to a stop. Never try to do so while driving the vehicle.

Driving in rainy weather

Drive carefully on slippery surfaces

As poor view, foggy windshield and slippery road are likely to occur when running in rainy days, please drive carefully.

WARNING

Roads can be very slippery right after a rain shower or storm. Please drive carefully.

- › Tires may lose grip when you try to perform emergency brakes, speed up, or turn the steering wheel quickly on wet and slippery roads. In such circumstances, you will find it difficult to control the vehicle and an accident may occur as a result.
- › When shifting between gears, engine speed changes significantly. At these junctures, the vehicle is more prone to skidding, thereby causing accidents.
- › While driving in rain, a film of water is likely to form between the tire and the ground. At this time the tire is easy to lose grip, so slow down driving.

Fording drive

Precautions for fording

1. Do not conduct fording drive on the road surface with deep water or unknown deep.
2. When analyzing road conditions, do not allow the vehicle to enter an unknown region. Such regions may contain hidden obstacles, such as ditches or man-holes.
3. When driving through water, maintain a low speed (not exceeding 10km/h). Do not stop the vehicle midway. Also do not change the gear.
4. When the vehicle passes an intersection, try to avoid the waves generated by the preceding vehicle to prevent water from entering the front grille.
5. Should the engine stall unexpectedly, do not attempt to start the vehicle again. Otherwise, the engine may be severely damaged. Please contact a trailer company as soon as possible to have the vehicle towed to a dry place.

Inspection and maintenance of vehicle after fording

Once the vehicle has been safely driven through water, perform the following operations immediately:

1. Step on the brake pedal a few times consecutively, and check whether brake performance has been compromised.
2. Check the horn.
3. Check all vehicle lamps.
4. Please head to a service provider as soon as possible for routine inspection. If the vehicle passes through water, water may enter the drive system components and lead to attenuation of lubricant and also cause system malfunctions.

WARNING

- › You should only drive through water in an emergency. The vehicle is not designed for driving through water on a regular basis.
- › Driving through water can damage the engine and electrical components.

Driving during the hot seasons

Temperatures can be very high in hot season, and can compromise normal functioning of the vehicle as well as the health of the driver. To ensure that the vehicle continues to run smoothly, the driver should pay attention to the following:

To prevent engine overheating

The engine is prone to overheating in hot season due to higher ambient temperatures. Therefore, please step up on the inspection and maintenance of the engine cooling system in hot season. Remove any incrustation, as well as any debris that has accumulated between the radiator fins.

To prevent flat tires

Tire pressure increases in tandem with ambient temperatures. In hot season, high temperatures increases the chances that your tires would go flat.

If you experience a flat tire in the course of the drive, hold the steering wheel securely, step gently on the brake pedal to decelerate, and avoid actions such as emergency braking or sudden turning of the steering wheel. Failure to adhere to this advisory may cause the vehicle to go out of control.

To prevent heat stroke

The harsh sunlight and high temperatures in hot season can lead to heat stroke. Make sure that the interior of the vehicle is well-ventilated, and make time for breaks during the drive.

WARNING

Never leave a child in the vehicle unattended.

- › Leaving a child in the vehicle unattended in hot season may lead to dehydration, heat stroke injury, or even death.
- › Children left unattended in the vehicle may also cause in-car fires if they play with items such as matches, lighters or the cigarette lighter.

CAUTION

When parking the vehicle on hot days, do not leave items such as lighters, aerosol cans, soft drink cans, spectacles, etc., inside the vehicle.

- › As temperatures inside the vehicle can get very high, leakage of lighter/aerosol can contents or cracks in these containers can lead to fire.
- › Should a soft drink can burst inside the vehicle, its contents may splash onto electrical components and cause short circuit.
- › As temperatures can be high inside the vehicle, resin lenses or spectacle frames stored inside the vehicle may warp or crack.

Driving during the cold seasons

Snow tires

Please use winter tire with the same dimension of vehicle attached tire.

Test data shows that snow tires can perform more poorly than normal tires under normal driving conditions or on expressways due to their specific properties. Therefore, do not use snow tires under normal driving conditions.

Fit the same tire (brand and specifications) to all four wheels to ensure the safest drive, and the best possible brake performance as well as handleability.

You cannot reverse the tire-rotation direction.

Tire chains

Regulations regarding the use of tire chains vary according to location and type of road. Always check local regulations before installing chains.

Install tire chains on the front tires only. Do not install tire chains on only one tire. Install tire chains following the instructions provided with the tire chains.

Use the correct tire chain size when installing the snow chains which you can find on the "Technical Data" chapter on this owner's manual.

⚠ CAUTION

Observe the following precautions when installing chains:

- › Use tires of the size specified and ensure correct installation. Tire chains used on a vehicle without proper size or installation can cause damage to the pipes, suspension, body or tire.
- › Install and remove tire chains in a safe location. Turn on the emergency flashers, and set the warning triangle behind the vehicle.
- › Stop the engine and set the parking brake before installing the tire chains.
- › Don't use tire chains on the compact spare.
- › Don't install tire chains when the tire inflation pressure is low.
- › Don't damage aluminium alloy rim when using tire chains.

⚠ WARNING**Observe the following precautions when driving with tire chains:**

- › Do not drive in excess of the speed limit specified for the tire chains being used, or 40km/h, whichever is lower.
- › Please check the tire chains for proper installation after it is installed and has driven 0.5 ~ 1.0 km to ensure safety. Retighten or reinstall the tire chains if the tire chain is loosen.
- › Avoid sudden acceleration, turns and braking, as use of chains may adversely affect vehicle handling and cause accidents.
- › When driving, if you hear the tire chain knock on the vehicle body or chassis, please stop the vehicle and retighten the tire chain. If you can still hear the sound, slow down until the sound disappears
- › Avoid driving on bumpy road surfaces or over potholes.
- › Slow down before enter the curve, so you can control the vehicle.
- › Remove the tire chains when driving on road surfaces without snow, or it may affect driving performance and severely damage tire.

⚠ WARNING**Please shut down the engine when stopping the vehicle for sometime on a snowy road.**

If the engine is running with snow accumulated around it, exhaust gas may seep inside the vehicle interior, causing severe injury or even death by carbon monoxide (CO) poisoning.

When you sense that exhaust gas has entered the vehicle interior you should take the following steps:

- › Drive the vehicle to a well-ventilated area and open all vehicle windows;
- › Regulate A/C to recirculating mode and set the air volume to the maximum to induce fresh air into the vehicle.

Tire Pressure Monitoring System

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

⚠ CAUTION


The tire-pressure monitoring system (TPMS) cannot replace regular tire maintenance.

The user should inspect tires regularly and ensure that they are of the correct pressure levels even if the tire pressure monitoring system warning lamp (⚠) has not illuminate.

2

Driving

About the system

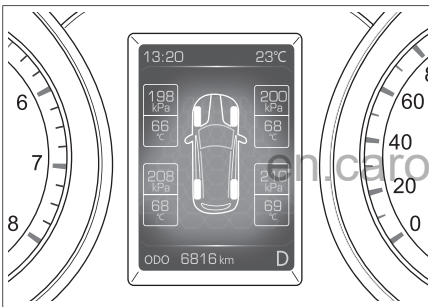

When the tire pressure monitoring system (TPMS) detects a malfunction or abnormal tire pressure or temperature, the tire pressure monitoring system warning lamp (⚠) on the combination instrument will illuminate. In this case, please stop the vehicle to inspect the tires as soon as possible and contact a service provider for assistance.

If the user continues to drive the vehicle when tire pressure is clearly insufficient, the tire may overheat and malfunction. Insufficient tire pressure will also lower fuel economy and tire use life. It may also affect the controllability and brake performance of the vehicle.

Abnormal-tire-pressure alarm

When the tire pressure is abnormal (too low or too high), the corresponding tire will turn red and an audible alarm will sound 5 times. Also, the tire pressure monitoring system warning lamp on the combination instrument comes on.

High temperature alarm

When the temperature of a tire is too high, the corresponding temperature reading on the information center will flash and an audible alarm will sound 5 times. Also, the tire pressure monitoring system warning lamp on the instrument comes on.

Main functions

Accident prevention

The tire-pressure monitoring system (TPMS) is an active safety device that can provide timely alarms when signs of danger appear in the tires. Such alarms serve to remind the driver to adopt the corresponding measures to prevent the occurrence of serious accidents.

Prolonging tire use life

The tire–pressure monitoring system helps the driver to keep the tires operating at acceptable pressure and temperature levels, thereby minimizing damage to them and prolonging their use life.

Promoting drive economy

When tire pressure is too low, the surface area that comes into contact with the ground increases. This means that friction will also increase. When tire pressure is 30% lower than recommended values, fuel consumption will go up by 10%.

Reduces wear of suspension system

When tire pressure is too high, the dampening performance of the tire will be compromised. This increases the load on the vehicle's dampening system, and will cause tremendous damage to the engine chassis and suspension system.

When tire pressure is uneven across the four tires, braking deviation may occur, leading to greater wear–and–tear of the suspension system.

⚠ WARNING

- › If the tire pressure monitoring system warning lamp (⚠) illuminates in the course of the drive, avoid performing sudden, acute turns and emergency brakes. Please reduce vehicle speed and drive to a safe spot and stop the vehicle as soon as possible.
- › Driving with insufficient tire pressure can cause damage to tires and increase the possibility of tire malfunction. Check the pressure of all four tires, and adjust tire pressure to the level marked on the tire. Once this is done, the tire pressure monitoring system indicator (⚠) will go off. In case of tire leakage, please replace with the spare tire as soon as possible.
- › After installing the spare tire or replacing vehicle tires, please contact a service provider as soon as possible to reset the tire–pressure monitoring system.
- › The tire pressure monitoring system can not inform you the sudden reduction of pressure, such as penetrated by foreign matters. In this case, please apply the brake carefully and stop the vehicle, please do remember that do not perform the sudden turn.

CAUTION


- › The tire pressure monitoring system does not monitor the pressure of the spare tire.
- › The tire-pressure monitoring system may not function properly when tire chains have been installed, or when tires are buried in snow.
- › Tire pressure can be affected by factors such as the heat generated from vehicle operations, the external environment, journey time, etc. Generally speaking, tire pressure can fluctuate by about 30kPa. This is normal.
- › High ambient temperatures and long drives can cause tire temperature to increase, leading to the tire pressure value shown on the information center to change. This type of situation can cause the tire pressure monitoring system warning lamp (!) illumination.
- › If the vehicle has been fitted with tires not approved by HAVAL Motors, the normal functioning of the tire-pressure monitoring system may be affected.
- › Do not inject any tire fluid or air-dissolved sealant into the tire. Doing so can cause the tire pressure sensor to malfunction.
- › If a radio signals transmitting device (such as on-board interphones, on-board radio station, unqualified automobile data recorder, radar detector, immobilizer alarm and on-board MP3 player) is used in the vehicle and nearby, the tire pressure monitoring system may be interfered.
- › If your vehicle is equipped with tire pressure monitoring system, an electrical components is installed, do not use assembling tool at valve area. Otherwise, the electrical components will be damaged.
- › When the vehicle is parked, the tire position and sunlight varies, the temperature in the tire will be different, and this is normal.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Position of sensor	Detection range (m)
Front side edges	0.7
Front center	1.0
Rear side edges	0.7
Rear center	1.5


About the system

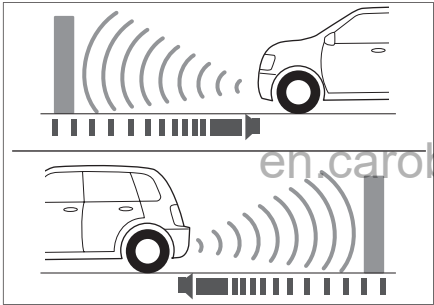

The collision avoidance radar system is a radar detection device. When the user is reversing or parking the vehicle, the sensor installed will work to detect any obstacles that are present in front of or behind the vehicle, as well as the distance between the vehicle and that obstacle. The system will provide the driver with audio prompts to help the driver reverse or park as easily and safely as possible, and to avoid collisions.

Detection range


The detection range of sensor mounted on bumper is mainly shown in the table below.

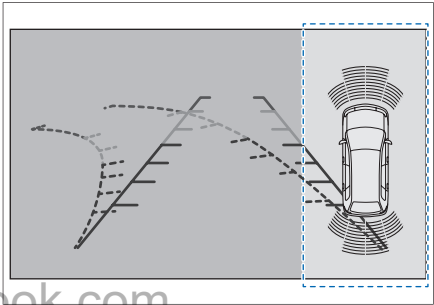

When the collision avoidance radar is activated, if the sensors detect obstacles in the detection range, the system will begin to alarm and increase its audio frequency gradually with the reduced distance between the vehicle and obstacles, and meanwhile the detection area displayed on the center display will close to the vehicle; when the distance between the vehicle and obstacles is within about 0.4 m, the system will make the long sounding alarm, and the detection area displays in red alarm, in this case, you should not continue to reverse the vehicle to avoid collision.

Operation method

Activation

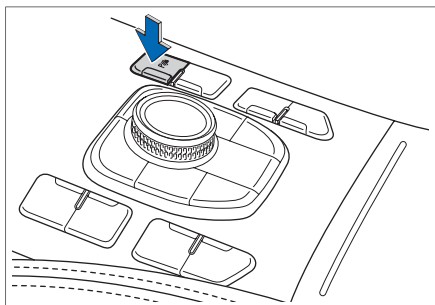

The collision avoidance radar system defaults to off state.

When the ENGINE START-STOP switch is at ON position or the engine is running, the collision avoidance radar system can be activated by the two methods below:

- › Shifting into R gear;
- › When the vehicle is running at a speed less than 10km/h, press the collision avoidance radar switch.

⚠ CAUTION

When the vehicle is in forward gear, only the front collision avoidance radar functions after the collision avoidance radar function is turned on.

The collision avoidance radar system will conduct continuously self-inspection and sounds for 3 seconds when the system is malfunctioning, meanwhile the corresponding malfunction is displayed on the display. If the malfunction still appears and the sensor is not covered by muddy water, please contact the service provider immediately.

Off

When the ENGINE START-STOP switch is at ON position or the engine is running, the collision avoidance radar system is activated, and it can be turned off by the following operations:

- › When the vehicle is running at a speed more than 15km/h;
- › The collision avoidance radar switch is pressed again.

⚠ CAUTION

- › When the vehicle is in a gear other than R, the collision avoidance radar on and off has no effects to the playing of radio or CD player.
- › The collision avoidance radar switch is only for the collision avoidance radar system on or off and has no effects to reverse imaging and blind-spot imaging system.

Function of mute

When the vehicle is in a gear other than R and obstacles are not within long sounding area, if the system detects that the relative distance between the vehicle and obstacles has no change within 5 seconds, the system will be in mute state and the alarm interface will be kept at alarm state and recover audible alarm immediately when the system detects that the distance has changed.

The collision avoidance radar is mute, the alarm interface is kept at alarm state when the parking brake is applied and immediately recover audible alarm when shifting out of P gear (release the parking brake for the manual transmission model).

⚠ CAUTION

- › Please keep the exterior of the sensor clean. If you discover any snow, water, frost, mud, dust, etc., covering the radar, please remove such matter in a timely manner in order not to affect the normal function of the system.
- › Do not use abrasive or sharp objects to clean the sensor of collision avoidance radar system.
- › When cleaning the sensor, please wipe it with a soft cloth or use water (low pressure water) to clean its surface and do not use high pressure water jet to flush it, also do not pinch or shock it.
- › When the system does not function normally, please contact the service provider immediately, and the sensor should not be removed by a person, except technicians.

⚠ WARNING

- › The collision avoidance radar is an auxiliary tool and cannot take the place of the driver in judging the safety of a maneuver. The driver must be careful while parking the vehicle or performing similar maneuvers. Please pay attention to the surroundings at such times.
- › The collision avoidance radar can not detect all the obstacles in the detection area due to the characteristic of ultrasonic and thus a blind spot appears. When reversing the vehicle, you must ensure that there are no children or animals in the vicinity of the vehicle, as the collision avoidance radar may not be able to detect them.
- › With the approaching of obstacles, the alarmed low and short obstacles may disappear from the detection area of system and the system will not alarm them again.
- › The collision avoidance radar cannot function properly when the speed of the vehicle exceeds 15km/h, thus the obstacles can not be effectively distinguished.
- › The characteristics of the object, its location, angle, size, material, the complexity of the background, and other such issues may reduce the detection range of the system, causing it to operate abnormally and fail to sound alarms or to sound alarms in error.

⚠ VEHICLE EQUIPMENT


Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

position, and the reverse imaging system will automatically activate.

Turning the system off

Shift out of R gear and the reverse imaging system will automatically turn off.

Reverse imaging camera

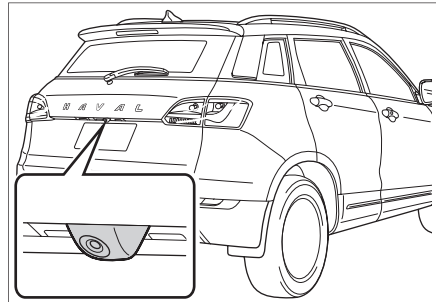


The camera is located at the back door, near the license plate lamp.

⚠ WARNING

- › The rear imaging is an auxiliary tool. The obstacles shown in images may be deformed, distorted, or not all obstacles in the field of vision can be displayed.
- › You should be responsible for the safety of the vehicle at all times. You must also pay special attention to your surroundings when performing maneuvers such as parking.
- › Please reverse the vehicle slowly and with care.

About the system

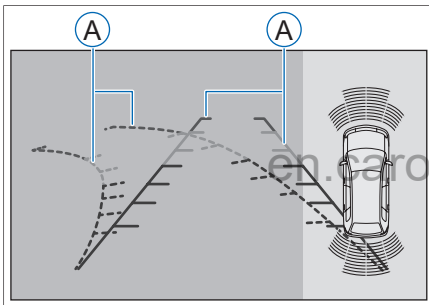

Ⓐ Dynamic guide line

The reverse imaging receives the scenery at the rear of vehicle by the camera and displays the dynamic guide line on the display to help the driver park the vehicle.

The dynamic guide line can accurately indicate the width of vehicle body and calculate the track the vehicle to travel according to the angle of steering wheel.

Operation method

Activating the system

Place the vehicle in R gear while the ENGINE START-STOP switch is in the ON

CAUTION

- › When reversing the vehicle, make sure that the back door has been secured.
- › Please keep the exterior of the camera clean. If you discover any snow, water, frost, mud, dust, etc., covering the radar, please remove such matter in a timely manner in order not to affect the normal function of the system.
- › When cleaning the vehicle with a high-pressure hydraulic gun, do not to aim the spray near the camera. Otherwise, water may enter the camera, causing system malfunction or fires, etc.
- › Do not knock on the camera. Doing so may damage the camera or even cause a fire/electrocution.
- › When the system does not function normally, please contact the service provider immediately, and the camera should not be removed by a person, except technicians.

Blind-spot visualization system


⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

⚠ CAUTION

- › Do not place any objects on the camera.
- › When cleaning the vehicle with a high-pressure water jet, take care not to aim the spray at the camera and in the vicinity of the camera. Otherwise, water may enter the camera, causing system malfunction or fires, etc.
- › Do not knock on the camera. Doing so may damage the camera or even cause a fire/electrocution.

About the system

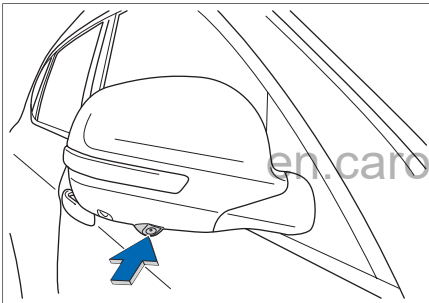


The blind-spot visualization system uses the principle of camera to capture images of the environment around the front wheel on the front passenger side and displays them on the display, thereby expanding the driver's field of vision and preventing collisions in that blind spot.

⚠ WARNING

The blind-spot imaging system is an auxiliary tool. The objects shown in images may be distorted, may not fully reflect reality, or may not show all objects in the field of vision. You should be responsible for the safety of the vehicle at all times. You must also pay special attention to your surroundings when performing maneuvers such as parking.

Instructions

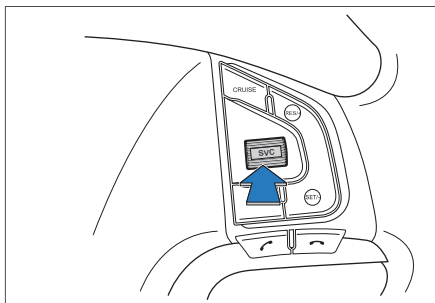

When the ENGINE START-STOP switch is in the ACC or ON positions and the vehicle is moving at 15km/h or less, short pressing the SVC button on the steering wheel will switch the screen to display images of the blind spot. Another press will turn it off.

When reversing the vehicle, the display defaults to display the image of rear of vehicle; you can short press the SVC button to switch the screen to display images of the blind spot, another press will return it back to reverse imaging screen.


Blind-spot detection system

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Driving speed [km/h]	Detection range A×B [m] (Reference value)
30	0
30×65	2.4×2.4
65×120	3×3
120	System off

Alarm grade

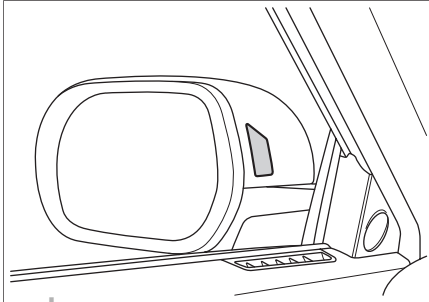


The blind spot detection system is divided into two alarm grades: information display and alarm.

- › Information display: when the system detects vehicle in the blind spot, the alarm lamp on the exterior rearview mirror comes on;
- › Alarm: when the system detects vehicle in the blind spot and you turn on the turn signal lamp at the same side with that of the vehicle in the blind spot, the alarm lamp on the exterior rearview mirror remains on with alarm prompt tone, and it is dangerous to change the lane at this time.

About the system


The blind spot detection system can effectively reduce the number of accidents due to visual blind spot by detecting the vehicle in the blind spot of rearview mirror and sending an alarm when merging road or overtaking.

Detection range

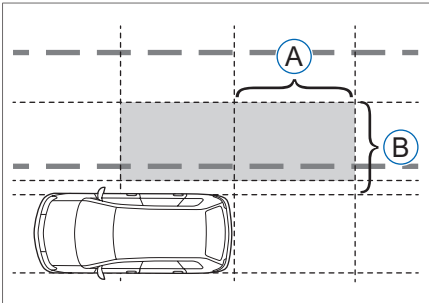

When the blind spot detection system is turned on, if the sensor mounted on the bumper detects the obstacles in the detection range, the system will send an alarm. The illustration is an example of right sensor, and its detection range is as follows:

Operation method

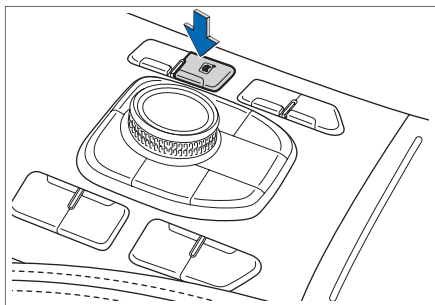

The blind spot detection system defaults to off.

When ENGINE START-STOP switch is at ON position, press the blind spot detection switch button on the console panel switch to turn on or off the blind spot detection system.

When the blind spot detection system is turned on, the state indicator lamp on the button comes on and begins to monitor the blind spot when the vehicle speed is more than 30km/h.

Precautions

1. Under normal conditions, the system can detect all the vehicles stayed in the blind spot, such as passenger vehicles, truck, bus, motorcycles, but for the mini boost motorcycles, its detection ability are not 100%.
2. In order not to affect the function of blind spot detection system, please keep the sensor surface clean and free from foreign matters such as ice and snow, mud.
3. The radar sensor monitors the left and right adjacent lane and the system functions based on the fixed width of lane,

however, when the lane is narrow, not center driving, or driving into a curve, the system may acts to the vehicles that are not driving at the directly adjacent lanes.

4. The sensor can not detect all the vehicles at any condition.
5. If the vehicle behind is at high speed, the system can not alarm immediately.
6. The detection area of the sensor may be reduced due to rain, snow and water splashed, and may cause the blind spot detection system not detect the vehicle in the blind spot immediately, and even can not, so please pay attention to the surroundings before changing the lane.
7. The blind spot detection system can not act as a driver to judge the situation outside the vehicle; the driver still needs to pay attention to the lane change or similar driving operation and observe the surroundings.

Intelligent Stop-Start System

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.


Manual transmission vehicles

About the system

The "Intelligent Stop-Start" system makes use of parts such as the engine control unit, the boosted starter battery, and battery level sensor to turn off the engine automatically when it idles and to provide a quick start of the engine when the need to drive is present.

During the course of the drive (vehicle speed is more than 10km/h after moving off, and the green indicator lamp (SS) on the combination instrument comes on), when the vehicle stops at a red light and shift to N range and release the clutch pedal, so the engine stops automatically; When the driver is ready to move off and depressing the clutch pedal or accelerator pedal, the engine starts automatically. Then, select the right gear to move off.

Buttons

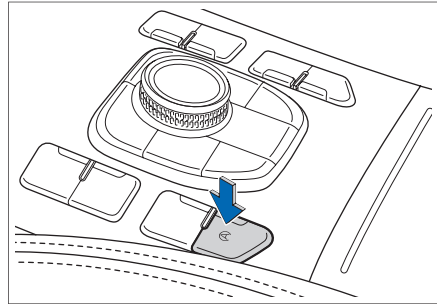

When the ENGINE START-STOP switch is in the ON position, the intelligent start-stop system will automatically activate. Every press of the intelligent start-stop switch will switch the system between off and on.

Introduction of system indicator

Green light (SS) on: indicates that the Intelligent Stop-Start system has been activated, with Intelligent Stop-Start allowed under current operating conditions.

If the (SS) is not lit, one or more of the current start-stop conditions are not satisfied.

If the information center indicates that the stop-start system is malfunctioning, please head to a service provider as soon as possible for inspection.

Conditions of automatic stop

1. The engine is idling and the vehicle is in neutral;
2. The speed of the vehicle is less than 3km/h;
3. The clutch pedal is fully released;
4. The accelerator pedal has been fully released;
5. Battery level is enough for next starting;
6. The door on the driver side is closed;
7. The water temperature has reached 60 degrees Celsius;
8. The hood is closed;
9. There is sufficient power in vacuum booster pump.

After the above conditions are met, the engine stops running automatically.

CAUTION

Intelligent Stop–Start will not work under the following circumstances, which means that the engine will not stop running automatically:

- › The steering wheel is overturned;
- › Request of A/C (when heating, refrigeration or defrosting is needed).

Conditions of auto start

When the vehicle is ready to travel, you depress the clutch or accelerator pedal. At this point, the Intelligent Stop–Start system will check that:

1. The door on the driver side is closed;
2. The transmission is in neutral;
3. The hood is closed.

Once these conditions have been found to be met, the engine will start up quickly. Shift to the proper gear and depress the accelerator pedal, the vehicle begins to travel.

CAUTION

After the engine automatically stops (and the shift lever is in the N position, and the door on the driver's side and the engine hood is closed) by Intelligent Stop–Start system, once the following situations appeared, the engine will start automatically again:

- › When battery levels are less than the determined value;
- › There is insufficient power in vacuum booster pump;
- › When the vehicle is "creeping" forward or backward at a speed more than 3km/h;
- › Request of A/C (when heating, refrigeration or defrosting is needed);
- › Turn off the Intelligent Stop–Start switch.


Automatic transmission vehicles

About the system

The "Intelligent Stop-Start" system makes use of parts such as the engine control unit, the boosted starter, battery, and battery level sensor to turn off the engine automatically when it idles and to provide a quick start of the engine when the need to drive is present.

During driving (all the conditions for the start and stop of the vehicle and the engine are met and the vehicle speed recorded after starting has exceeded 10km/h with the green light  on the instrument cluster being lit), the vehicle will stop by stepping on the brake pedal if the vehicle encounters a red light (if auto-parking feature is enabled, you can release the brake pedal), and the engine will automatically stop; release the brake pedal (if auto-parking feature is enabled, simply step on the accelerator pedal), and the engine will automatically start, and the vehicle will start.

Buttons

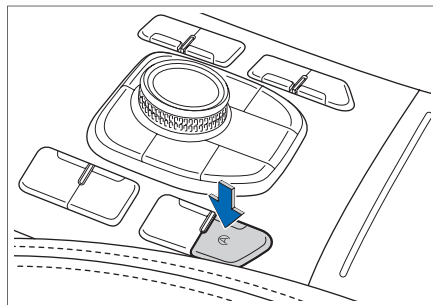

When the ENGINE START-STOP switch is in the ON position, the intelligent start-stop system will automatically activate. Every press of the intelligent start-stop switch will switch the system between off and on.

Introduction of system indicator

Green light  on: indicates that the Intelligent Stop-Start system has been activated, with Intelligent Stop-Start allowed under current operating conditions.

If the  is not lit, one or more of the current start-stop conditions are not satisfied.

If the information center indicates that the stop-start system is malfunctioning, please head to a service provider as soon as possible for inspection.

Conditions of automatic stop

1. Shift lever is in D position;
2. The speed of the vehicle is less than 0.5km/h;
3. The accelerator pedal has been fully released;
4. The battery sensor determines that the battery state allows shutdown;
5. The door on the driver side is closed;
6. The water temperature has reached 60 degrees Celsius;
7. The hood is closed;
8. There is sufficient power in vacuum booster pump;
9. The transmission system allows shutdown.

After the above conditions are met, the engine stops running automatically.

CAUTION

Intelligent Stop–Start will not work under the following circumstances, which means that the engine will not stop running automatically:

- › The steering wheel is overturned;
- › Request of A/C (when heating, refrigeration or defrosting is needed).

Conditions of auto start

Release the brake pedal to let the vehicle start (simply step on the accelerator pedal if auto–parking feature is enabled), and the intelligent start–stop system will automatically detect at this time:

1. The door on the driver side is closed;
2. The hood is closed.

Once these conditions have been found to be satisfied, the engine will start up quickly and the vehicle can move off.

CAUTION

After the engine automatically stops (and the shift lever is in the D position, and the door on the driver's side and the engine hood is closed) by Intelligent Stop–Start system, once the following situations appeared, the engine will start automatically again:

- › When battery levels are less than the determined value;
- › There is insufficient power in vacuum booster pump;
- › When the vehicle is "creeping" forward or backward at a speed more than 3km/h;
- › Request of A/C (when heating, refrigeration or defrosting is needed);
- › Turn off the Intelligent Stop–Start switch.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

⚠ WARNING


- › To avoid a misuse of the cruise control system, turn it off when it is not in use.
- › Incorrect use of the cruise control system can lead to crashes.
- › The cruise control system can be used only when you are driving on a smooth highway in good weather conditions.
- › Use of the cruise control system in urban areas, on winding or slippery roads, or in adverse weather conditions like heavily rainy days is not recommended.
- › When driving on sloping roads, do not use the cruise control system.
- › If the cruise control system is started, the driver is prohibited to leave the driving position.
- › To ensure the vehicle fuel economy, do not drive in high gear at low speed, or in low gear at high speed.
- › After starting the cruise control system, you should depress the brake pedal as usual if you want to decelerate the vehicle as soon as possible.

System overview

When driving on a straight, smooth highway, the cruise control system allows you to maintain the vehicle at the set speed without stepping on the accelerator pedal.

en.carobook.com

How to use

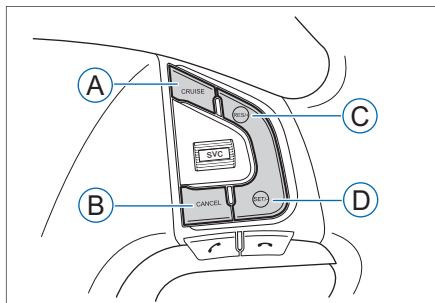

- Ⓐ Turning on/turning off button (CRUISE)
- Ⓑ Button to cancel vehicle speed setting (CANCEL)
- Ⓒ Button to resume vehicle speed setting/accelerate (RES/+)
- Ⓓ Vehicle speed setting/deceleration button (SET/-)

Turning on

1. Press the CRUISE button, and the indicator  on the combination instrument will light up.
2. Adjust to the desired speed (40 to 180 km/h). Press the SET/- button, and the current vehicle speed will be set and maintained. The cruise speed setting information will be displayed on the information center.

The minimum cruising speed for Gear 2–4 is 40 km/h. It is recommended that the cruising speed be set at a speed of more than 65 km/h for Gear 5, and more than 75 km/h for Gear 6, otherwise vehicle speed instability is likely to be caused.

⚠ CAUTION

- › Use of Gear 1 for cruise control is prohibited for a manual transmission vehicle.
- › For an automatic vehicle, the shift lever should be placed in the automatic mode (D) or Gear 2 and above for manual mode for cruise control.

Increasing vehicle speed

There are the following three ways to increase the set speed:

- › Press and hold the RES/+ button to increase the vehicle speed continuously, and release the button when the desired speed is reached.
- › Press the RES/+ button, and the vehicle speed will be increased by about 1 km/h for each press.

- › Step on the accelerator pedal to accelerate the vehicle to the desired speed, then press the SET/- button to set a new speed.

Reducing the speed

There are the following three ways to reduce the set speed:

- › Press and hold the SET/- button to reduce the vehicle speed continuously, and release the button when the desired speed is reached.
- › Press the SET/- button, and the vehicle speed will be reduced by about 1 km/h for each press.

en.carobook.com

- › Step on the brake pedal to decelerate to the desired speed (more than 40 km/h), and then press SET/- button to set a new cruise speed.

Temporary acceleration

If you want to temporarily accelerate when the speed is set, you can step on the accelerator pedal. After acceleration, releasing the accelerator pedal will restore the set speed.

Canceling set speed

There are the following two ways to cancel the set speed:

- › Step on the brake pedal or clutch pedal;
- › Press the CANCEL button.

After the set speed is canceled, the cruise speed setting information on the information center will disappear, but the system will not be turned off, and the indicator  on the combination instrument will still light up.

Restoring set speed

After the speed setting is canceled, the cruise control system will not be turned off. When the vehicle speed is more than 40 km/h, pressing the RES/+ button will automatically resume the speed set before the cancellation, and the cruise speed setting information will be displayed on the information center again.

Turning off the system

Press the CRUISE button, and the cruise control system will be turned off, and the previously set speed will be canceled. The indicator  on the combination instrument will go out.

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

About the system

The Hill Descent Control (HDC) system automatically provides a low and steady speed when the vehicle is moving downslope, and allows the vehicle to maintain a steady speed for a safe descent.

After the system has been activated, the vehicle will maintain a certain speed and the driver does not have to depress the accelerator and brake pedal.

WARNING

The hill descent control system cannot function in all situations and is intended only to be an aid. The driver ultimately holds the greatest responsibility for the safety of the drive.

Operating conditions


1. The slope is less than or equal to 50%;
2. Vehicle speed is between 8 and 35km/h;
3. The vehicle is in low gears, N or R;
4. The ENGINE START-STOP switch is in the ON position.

CAUTION

- › We recommend that you engage a lower gear to make effective use of the system.
- › When vehicle speed is more than 35km/h but less than 60km/h, the system goes into standby mode. When vehicle speed heads into the 8–35km/h range again the system will automatically shift into operating mode.
- › The vehicle speed should not be less than 8km/h.

Operation method

Activating the system

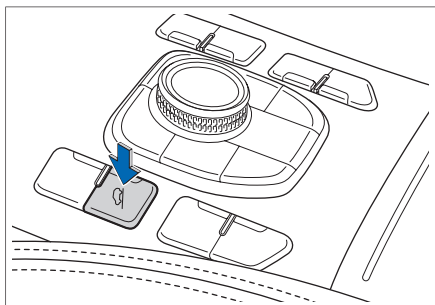

When system operating conditions have been met, press the system switch to activate the function. Once the system is activated, the indicator located at the upper part of the display of information center will flash while the vehicle's brake lamps will also come on.

When operating conditions have not been met, pressing the system switch will not activate the function. The system goes into standby mode and the indicator comes on. When all operating conditions have been met the system will automatically shift into operating mode.

System off

- › Press the system switch again to turn off the system.
- › The system turns off automatically when vehicle speed is more than 60km/h.

After the system is turned off, the indicator will go off.

Adjusting vehicle speed

When the system is in operating mode you can still make changes to the vehicle speed by stepping on the accelerator pedal or the brake pedal.

You can adjust the vehicle speed to anywhere between 8 and 35km/h.


en.carobook.com

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Intelligent four-drive

Introduction to drive mode

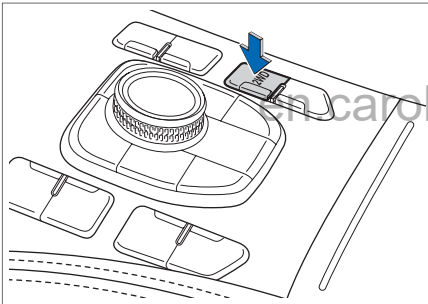

› Two-wheel drive mode (2WD)

2WD mode when driving on the expressway, it is recommended to use 2WD mode.

› All-wheel drive mode (AWD)

In all-wheel drive mode, the entire driving force of the vehicle will be automatically distributed to the front and rear drive wheels as driving conditions on the road dictate. When driving on the slippery road or rough road, it is recommended to use AWD mode.

How to switch between driving modes

The drive modes can be switched when the ENGINE START-STOP switch is in the ON position.

Under normal conditions, the vehicle will automatically be in AWD mode.

You can turn on or off 2WD mode by pressing the 2WD button. After starting 2WD mode, the 2WD indicator on the button will illuminate.

⚠ CAUTION

- › The drive modes can be switched when the vehicle is static or moving, and if AWD malfunction alarm interface is displayed at information center during driving, please decrease the vehicle and visit the service provider for inspection as soon as possible.
- › During drive mode switching, there will be a delay of several seconds from pressing of target drive mode button to actual completion of switching.
- › During drive mode switching, there may be minor mechanical clash sound, which is normal.

⚠ WARNING

Do not start engine or rotate tire when the vehicle under four-wheel drive is lifted by jack. Otherwise, it may cause vehicle separating from jack, which is extremely dangerous.

CAUTION

- › Please do not drive in sand, mud, or in other areas where the car wheels can easily slip for an extended time. This can cause the all-wheel drive system to overheat internally, damaging parts of the all-wheel drive system.
- › Normally, you should use tires of the same brand, model, and specifications, and should maintain the regular tire pressure. Otherwise, the all-wheel drive system may not be able to function normally.
- › When using a chassis dynamometer to measure the speed, you must ensure that the front and rear wheels are rotating at the same rate. If the front or rear wheels are stationary, or if the front and rear wheels are rotating at different speeds, parts of the all-wheel drive system may be damaged.
- › Tow the vehicle equipped with intelligent four-wheel drive system using a flatbed truck.

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations.

- › Anti-lock Braking System (ABS);
- › Electronic Brake-force Distribution (EBD) system;
- › Brake Assist System (BAS);
- › Traction Control System (TCS);
- › Electronic Stability Program (ESP);
- › Hill-start Hold Control (HHC) system.

CAUTION

About traffic safety

Never take a risk in driving because the vehicle is equipped with driving assist systems and always ensure that the speed and driving style adapt to vision, weather, road and traffic conditions.

About modification

Suspension modification or use of tires or wheels of non-specified size will impact driving assist systems and may cause system malfunctions.

About sound and vibration

- › Some driving assist systems (such as ABS) may create a vibration during work or the sound of the motor during working may be heard, which does not indicate a malfunction.
- › When you jump-start the vehicle due to battery power loss, the engine may not run smoothly and the ABS or the ESP warning lamps may light up, which is caused due to the low battery voltage, and does not mean that the ABS or the ESP is failed.

Anti-lock Braking System

When brake is applied or the vehicle is braked during driving on slippery road surface, the ABS helps prevent wheels from locking to maintain steering control of the vehicle.

⚠ CAUTION

During emergency braking, do not step on the pedal several times and gently. Otherwise, it will lengthen the braking distance.

The ABS is not designed to shorten the braking distance of the vehicle. Especially in the following cases, compared with vehicles not equipped with the ABS, your vehicle may require a longer braking distance. Be sure to maintain adequate safe distance from the vehicle traveling in front:

- › When driving on muddy, gravel or snowy road;
- › When driving with tire chains in place;
- › When driving on bumpy road;
- › When driving on potholes or uneven road.

The ABS may not work effectively in the following conditions:

- › When the limit of tire grip performance is exceeded (like using excessive wear tire on snowy road);
- › When driving at a high speed on wet road.

Electronic Brake-force Distribution system

The Electronic Brake-force Distribution (EBD) system is capable of automatically adjusting the front and rear brake force ratio to enhance braking performance. It complements the ABS for greater braking stability and thereby vehicle stability.

Brake Assist System

Stepping on brake pedal very quickly can trigger the Brake Assist System to help increase the braking effect and shorten the braking distance during emergency braking.

Electronic Stability Program

ESP can help reduce the risk of skidding, and improve driving stability by braking individual wheels under certain driving situation.


When ESP works, the indicator  flashes on the instrument. Make sure to be careful at this time.

Generally speaking, ESP is activated throughout the drive. You may only turn off the system under the following special circumstances:

- › When driving with snow chains in place;
- › When driving in deep snow or on soft ground;
- › When the vehicle is stuck and you need to free it.

Restart ESP upon finish of above conditions.

Close / Open method

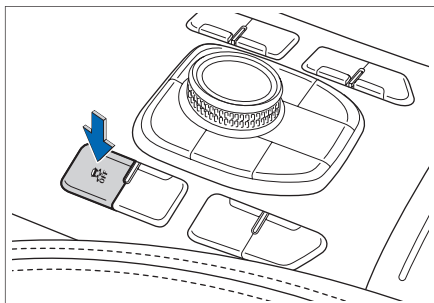

After the engine starts, press the button  on the control panel, and the indicator  in the instrument cluster will light up, indicating that the system is turned off; press the button  again, and you can re-start the ESP.

CAUTION

The ESP will automatically start in the following conditions:

- › Every time the engine starts;
- › When the speed is over 80 km / hour.

Traction Control System

When you start or accelerate on a slippery road, the TCS helps keep a driving force and avoid driving wheel spinning.

CAUTION

The TCS and the ESP will be on or off simultaneously.

Hill-start Hold Control system

When the driver starts on a slope and releases the brake pedal, the HHC can maintain the braking force for about 1.5 seconds to effectively avoid slipping.

WARNING

When the driver starts on a slope greater than 30%, the vehicle may still slip. Therefore, do not rely excessively on this feature. Please pay attention to the safety of the drive.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

The main components of the emission control system include the following:

Oxygen sensor;

Catalytic converter;

Exhaust gas recirculation device (EGR);

Supercharger;

Fuel evaporation control unit (EEC);

Crankcase exhaust control unit (PCV valve);

On-board diagnostic system (OBD).

⚠ CAUTION

The emission control system may vary with different engine models. For the particular equipment, please see the actual vehicle.

Do not modify any part of the engine or emission control system.

Oxygen sensor

The oxygen sensor measures the concentration of oxygen in the exhaust gases and reports that information to the engine ECU in order to regulate the engine's fuel-air ratio for optimum combustion efficiency and to reduce the amount of carbon monoxide, hydrocarbons, and nitrogen oxides contained in the exhaust.

Catalytic converter

The catalytic converter is the most important external purifier installed in the vehicle's exhaust system. The catalytic converter contains metallic catalysts that convert harmful gases such as carbon monoxide, hydrocarbons, and nitrogen oxides into harmless carbon dioxide, water, and nitrogen gas through oxidation and reduction reactions.

The catalytic converter only needs to be used correctly and generally does not require maintenance. Thus, it should not be disassembled without cause. If it needs to be replaced, it must match the engine.

⚠ CAUTION

To avoid damaging the catalytic converter, please pay attention to the following items:

- › Do not use leaded gas or gas with more than the standard amount of manganese or sulfur.
- › Do not drive the vehicle when the fuel level is extremely low.

If the fuel is exhausted, it will cause the engine to misfire (this may be confirmed by unstable engine operation or a loss of power), damaging the catalytic converter.

- › Do not idle the engine at high speed for an extended time (5 minutes or longer).
- › When a problem with the engine is indicated (such as by a stall or performance degradation), do not continue driving the vehicle.
- › Do not operate the engine with the spark plugs removed.
- › Do not start the vehicle by pushing or pulling it.
- › Do not add too much engine oil;
- › Please avoid striking the catalytic converter.

Exhaust gas recirculator

The exhaust gas recirculator feeds a portion of the exhaust back into the intake, mixing it with new air to be combusted within the cylinder. By recirculating the exhaust in this way the amount of nitrogen compounds expelled is effectively reduced.

Supercharger

The supercharger can improve the combustion efficiency of the engine and reduce the output of harmful compounds such as particulates and nitrogen oxides in the engine exhaust.

Fuel evaporation control unit

The fuel evaporation control unit can prevent fuel vapor produced inside the fuel tank from escaping into the atmosphere.

The fuel vapors produced inside the fuel tank are absorbed and temporarily stored within an activated carbon canister. While the vehicle is being driven, the fuel vapors stored within the activated carbon canister are sucked into the engine and combusted.

Crankcase exhaust control unit

The crankcase exhaust control unit guides the mixed gases within the crankcase (such as uncombusted fuel vapors, water vapor, and exhaust) through a connected pipe into an appropriate place in the air-intake pipe to return them to the cylinders and be combusted again. Thus, exhaust emissions can be reduced while also increasing the engine's fuel economy.

On-board diagnostic system


The engine malfunction indicator is part of the vehicle's diagnostic system, for more details, Please refer to page 136.

The engine electronic control unit equipped with the on-board diagnostic system stores various fault information (especially when it comes to exhaust-emissions fault information). The fault information will be cleared if the battery cables are disconnected, making a rapid diagnosis difficult. Thus, do not disconnect the battery cables when investigating why the engine-malfunction indicator has illuminated.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Instruments

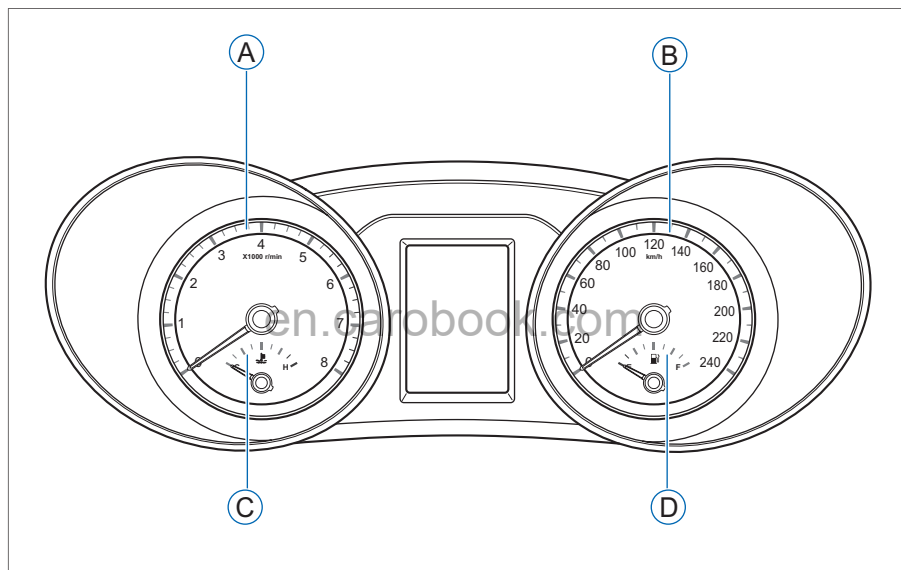

- Ⓐ Tachometer
- Ⓑ Speedometer
- Ⓒ Water temperature gauge
- Ⓓ Fuel gauge

⚠ CAUTION

As vehicle models differ, the instrument exterior may also differ slightly. Please refer to the actual vehicle.

Tachometer

Shows engine speed per minute.

CAUTION

- ▶ Do not operate engine in the red alarm zone (i.e., where permissible engine speed has been exceeded).
- ▶ If the engine is operated for an extended period of time when the indicator needle in the red alarm zone, the engine will be affected adversely and may even be damaged.

Speedometer

Indicates current traveling speed (in km/h).

Water-temperature gauge

When the ENGINE START-STOP switch is in the ON position, the water-temperature gauge shows an approximation of the engine coolant temperature.

WARNING

When the indicator needle is close to the red alarm zone, slow down your vehicle immediately and find a safe spot to park your vehicle for checks. Restart the engine only after water temperature in the engine has returned to normal.

Fuel gauge

When the ENGINE START-STOP switch is in the ON position, the fuel gauge shows roughly the amount of fuel remaining.

When the ENGINE START-STOP switch is in the LOCK position, the indicator needle returns to the "E" position and will not point to remaining fuel levels.

CAUTION

When driving for an extended time on a slope or around a curve, the fuel gauge needle may become inaccurate as fuel moves around in the tank.

Indicator lights, warning lights



Engine oil pressure warning light

When engine oil levels or engine oil pressure levels are too low, this warning lamp will illuminate and the buzzer sounds. At this juncture, please contact a service provider. If the engine continues to work in this situation it may become severely damaged.

When the engine is running, this indicator may flash occasionally. This does not have any negative impact on the engine system.

The indicator does not indicate low oil levels. You would need to check engine oil levels using the dipstick.



Front fog lamp indicator

This indicator will turn on when the front fog lamp has been turned on.



Rear fog lamp indicator

This indicator will turn on when the rear fog lamp has been turned on.



Lighting-on indicator

This indicator will illuminate when the main light switch is in the on position.



Braking system malfunction warning lamp

This indicator will illuminate accompanied by an audio alarm when there is a park system malfunction.

At this juncture, please stop the vehicle and contact a service provider.



Parking brake indicator

Normally, this indicator will illuminate when applying the parking brake.

Release the parking brake. The indicator will go off.

This indicator flashes when the brake is applied by brake caliper.



Cruise control indicator

This indicator will light up when the cruise control function has been activated.



Engine-malfunction indicator

When the ENGINE START–STOP switch is in the ON position, this indicator comes on and then goes off after the engine has been started up if there are no issues with the system. If this indicator remains lit after the engine has been started up, it means that there is a malfunction in the engine that impacts emissions. At this juncture, please contact a service provider for service.



Transmission overheated warning lamp

When the ENGINE START–STOP switch is in the ON position, this indicator will come on and then go off after several seconds if there are no issues with the system.

When the transmission oil temperature is higher than specified temperature, this indicator illuminates. At this point, please stop the vehicle for checks. Failure to do so will damage the transmission.



Water-temperature warning light

This indicator will light up accompanied by an audio alarm when engine coolant temperature is excessively high. At this point, please stop the vehicle for checks. Failure to do so will damage the engine.



Vehicle immobilizer system indicator

The vehicle immobilizer system will be activated when all vehicle doors are locked and the ENGINE START–STOP switch is in the LOCK position. In this case, the indicator will begin to flash.



Water separator indicator

This applies to models equipped with a diesel engine.

This warning light will illuminate when the amount of water in the oil–water separator exceeds the standard value. At this point, promptly stop the vehicle for inspection and to discharge the water.




EPS malfunction indicator

During the engine start-up process, as the amount of power supplied by the battery goes down momentarily, there may be instances where the power steering module does not receive sufficient power and fails to provide sufficient steering assistance. At this point, you would need to turn off the engine (by positioning the ENGINE START-STOP switch in the LOCK position) and then re-start the engine.

During the course of the drive, this indicator comes on indicating that the power steering system has been turned off. At this point, stop the vehicle in a safe spot and turn off the engine (by positioning the ENGINE START-STOP switch in the LOCK position). Then, re-start the engine. If the indicator comes on again, please head to a service provider in a timely manner for service.

CAUTION

- › If the power steering system indicator comes on, it means that the power steering system has been turned off. At this point, you would need more effort to turn the steering wheel although the steering function is still available. There is no safety risk under such circumstances.
- › Do not turn the steering wheel fully in either direction and hold it there for an extended period of time. Keeping the steering wheel in the full-lock position for extended periods of time may lead to overheating of the EPS, possibly even damage.
- › The EPS system may become less efficient when the steering wheel has been turned frequently for an extended period of time. Under such circumstances, the steering wheel will feel 'heavier' to turn. Should such a situation arise, the driver should try to cut down on the frequency of wheel turning, or to stop the vehicle in a safe spot and turn off the engine, and the system will return back to normal within 10 minutes.

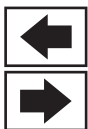

Turn-signal lamp and hazard-warning lamp

When the left turn signal lamp is on, the left turn signal indicator on the dashboard will flash.

When the right turn signal lamp is on, the right turn signal indicator on the dashboard will flash.

When the hazard warning button is depressed, the hazard lights and all external turn lamps will flash in unison.

CAUTION

When the turn indicator does not flash or flashes quickly, it usually means that one of the bulbs inside the lamp has burned out. Replace it as soon as possible. Otherwise, other motorists on the road will not be able to see your turn signals.



Parking indicator

When the parking lamp is on, this indicator will be illuminated.



Anti-lock braking system (ABS) malfunction warning light

When the ENGINE START-STOP switch is in the ON position, this indicator will come on and then go off after several seconds if there are no issues with the system.

This indicator will light up when there is an ABS malfunction. At this juncture, please contact a service provider for service. When this indicator lights up, the vehicle can still be braked normally although the anti-lock function is not available.

CAUTION

When this warning lamp and braking system malfunction warning lamp illuminate at the same time, also the parking brake is released completely, it means that electronic brake-force distribution (EBD) system is also turned off, please stop the vehicle at a safe place immediately and contact service provider.



Charging warning light

When the ENGINE START–STOP switch is in the ON position, this indicator comes on and then go off after the engine has been started up if there are no issues with the system. If this warning light remains lit after the engine has been started, it means that there is a problem with the charging system. At this juncture, please contact a service provider for service.



High-beam indicator

This indicator will illuminate when the high beam lamp has been turned on.



Position indicator

This indicator will light up when the front or rear position lights or the license–plate lamp have been turned on.



Brake system warning light

When the ENGINE START–STOP switch is in the ON position, this indicator will come on and then go off after several seconds if there are no issues with the system.

In the following situations, the brake–system warning light will turn on:

- › When the brake fluid is low;
- › EBD system is malfunctioning;
- › When the ABS, ESP, or ESP OFF indicators are damaged.

⚠ CAUTION

The brake fluid level should be between Min. and Max. line, and when the level drops to a position near the Min. line, the brake system malfunction alarm may be triggered due to the operations such as emergency brake, sharp turn, thus please add the brake fluid in timely when the level is low.

⚠ WARNING

Do not continue to drive the vehicle after the brake system warning light comes on.

When the brake system warning light comes on, stop the vehicle in a safe spot and get in touch with your nearest service provider immediately. Otherwise, there will be a serious accident.



Warning lamp for airbag fault

When the ENGINE START–STOP switch is in the ON position, this indicator will come on and then go off after several seconds if there are no issues with the system.

This indicator will light up when there is an airbag malfunction. At this juncture, please contact a service provider .



Engine maintenance warning light

This indicator will light up if a non-emissions related engine issue has been detected. At this juncture, please contact a service provider .

⚠ CAUTION

- › If this indicator lights up in the course of the drive, you should stop the vehicle in a safe spot and then turn off the engine. Then, restart the engine and check that the indicator does not light up again. If the indicator does light up, please head to a service provider for service as quickly as possible. Please drive carefully before the malfunction has been identified and do not depress the accelerator pedal fully and conduct a high speed driving.
- › When the indicator lights up, if you cannot raise engine speed by stepping on the accelerator pedal it means that it may be a problem with the electric control system. Under such circumstances, although you can still drive the vehicle normally at times, vehicle vibration will intensify. Please resort to the service provider of HAVAL Motors for inspection at the earliest possible moment.



ESP indicator

When the ENGINE START–STOP switch is in the ON position, this indicator will come on and then go off after several seconds if there are no issues with the system.

This indicator will light up when ESP is functioning.

This indicator will light up when there is an ESP malfunction.



Driver seat belt unfastened warning lamp

When the ENGINE START–STOP switch is in the ON position, if the engine isn't started or the vehicle speed doesn't reach 20km/h, if the driver has not fastened the seat belt, the warning lamp will light up.

When speed of the vehicle reaches or exceeds 20km/h, this warning lamp will flash for a period of time accompanied by an audible alarm and then remain illuminated if the seat belt is unfastened. This warning lamp will go off and the audible alarm will stop when the seat belt is properly fastened.



Tire Pressure Monitoring System (TPMS) warning lamp

When the ENGINE START–STOP switch is in the ON position, this indicator will come on and then go off after several seconds if there are no issues with the system.

This warning lamp will illuminate when the tire pressure monitoring system is malfunctioning or the tire pressure or temperature is abnormal. At this juncture, please stop the vehicle and contact a service provider.



ESP OFF indicator

When the ENGINE START–STOP switch is in the ON position, this indicator will come on and then go off after several seconds if there are no issues with the system.

This indicator will light up when ESP has been turned off.



Warning light for low fuel level

When there is not enough fuel, this warning lamp will illuminate to prompt you to fill the fuel.

On slopes or when driving around bends, the indicator may light up prematurely due to unstable fuel levels inside the fuel tank.



Intelligent Stop-Start System ON indicator

Green light  on: indicates that the Intelligent Stop-Start system has been activated, with Intelligent Stop-Start allowed under current operating conditions.



Engine preheating indicator

This applies to models equipped with a diesel engine.

This indicator will remain lit while the preheater is working. The duration of the preheating period varies based on the temperature of the engine and coolant. Once the heater plug is fully preheated, this indicator will turn off. This means that the engine can be started.

If the preheating indicator flashes while driving, this means that there is a fault in the electrical control system for the engine. You should immediately inspect the engine.


If the ENGINE START-STOP switch is in the ON position but this indicator has not yet turned on, then there may be a problem with the preheater. You should inspect the engine immediately.



120km/h warning lamp

This warning lamp will illuminate and an audible warning will sound when the speed of the vehicle exceeds 120km/h.

Warning lamp on A/C panel

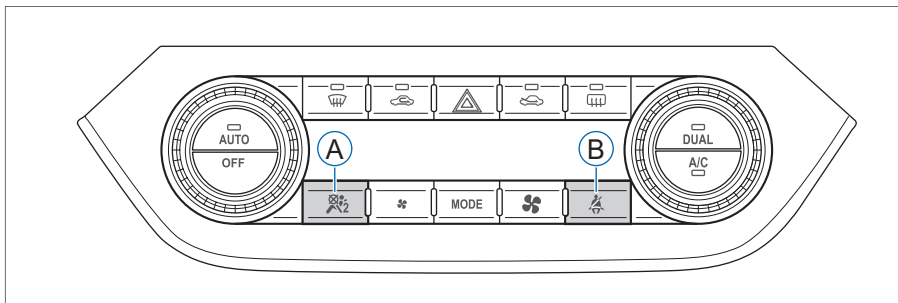

A Front passenger side airbag off warning lamp


This warning lamp illuminates when the front passenger side airbag is off and goes off when the front passenger side airbag is on. For the methods to turn off the front passenger side airbag, please refer to page 173.

B Front passenger seat belt unfastened warning lamp

When the ENGINE START-STOP switch is in the ON position, if the engine isn't started or the vehicle speed doesn't reach 20km/h, if the front passenger has not fastened the seat belt, the warning lamp will light up.

When vehicle speed reaches or exceeds 20km/h, if the front passenger hasn't fastened the seat belt, the indicator will flash accompanied by an audio alarm. When the seat belt in question has been properly fastened, the warning lamp will go off and the audio alarm will stop.

Rear seat belt unfastened indicator

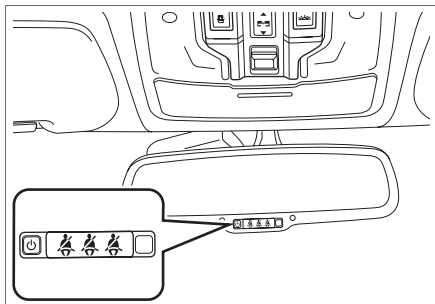

There are 3 indicators on the interior rearview mirror, each one corresponding to the position of the rear seats.

When the ENGINE START-STOP switch is in the ON position, if the engine isn't started or the vehicle speed doesn't reach 20km/h, if the passenger(s) in the rear seats has(have) not fastened the seat belt, the corresponding warning lamp(s) will light up.


When vehicle speed reaches or exceeds 20km/h, if the passenger(s) in the rear seats hasn't(haven't) fastened the seat belt, the corresponding warning lamp(s) will flash accompanied by an audio alarm.

When the seat belt(s) in question has(have) been properly fastened, the corresponding warning lamp(s) will go off and the audio alarm will stop.

Information center

The information center is located on the dashboard, on the display between the tachometer and speedometer. It is helpful for the driver to know the following information:


- > Trip computer information;
- > Alarm prompt messages;
- > Menu settings information;
- > Fixed display information.

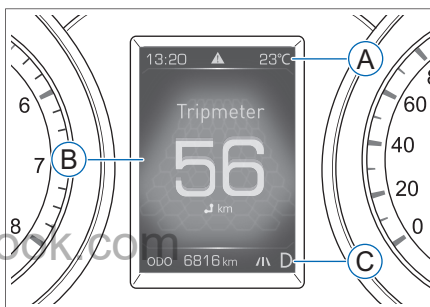

The information center comprises the following three information zones:

- Ⓐ Displays the clock, automatic parking indicator, secondary alarm information, hill descent control indicator and outside temperature.
- Ⓑ Shows trip computer messages, menu settings, and alarm prompt messages.
- Ⓒ Displays the millage (ODO), driving mode and gear information.

Information-center control switch

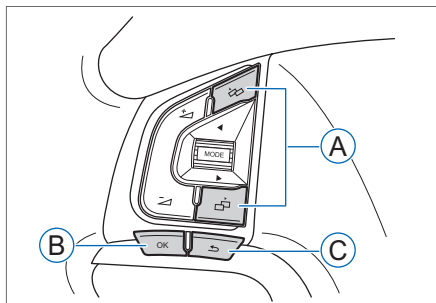

- Ⓐ Menu settings key
- Ⓑ OK button
- Ⓒ Back key

Menu adjustment button

Press the Up and Down adjustment keys to switch between various trip computer interface or to scroll through various information center items.

OK button


Press the OK button on the Trip Computer interface to enter the settings menu;

Press the Enter key on the settings menu to enter the next-level sub-menu for the currently selected item and adjust settings.

Back button

Press the Back button to return to the superior menu.

Trip computer interface

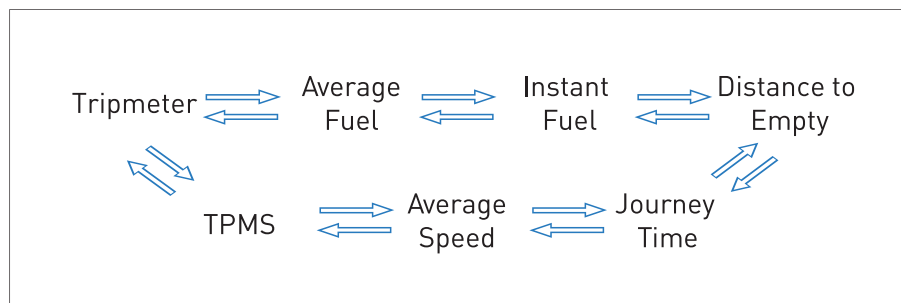


Press the Up and Down buttons to toggle between various trip computer message interfaces in sequence.

With any of the trip computer message interfaces, press the OK button on the ECU interface gently to enter the settings menu.

You can reset current counts in the Tripmeter, Average Fuel, Journey Time and Average Speed interfaces with a long press of the OK button.

en.carobook.com

Tripmeter interface

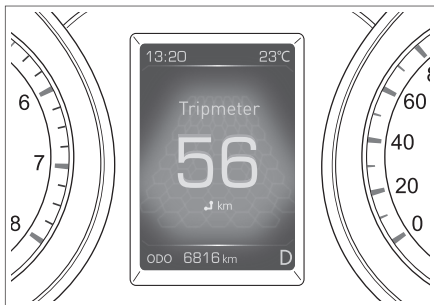

Shows the mileage clocked so far in current trip.


Unit range: 0 – 999.9km.

You can select your preferred mileage unit after entering settings menu.

The Tripmeter will be reset after battery power has been cut off.

When the value to display exceeds 999.9 km, the Tripmeter will reset.


Average Fuel interface

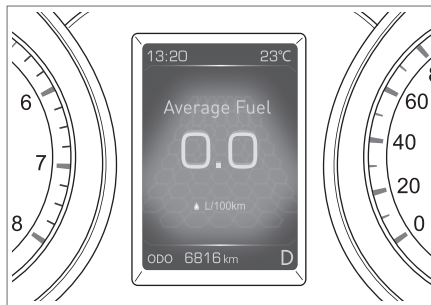

The Average Fuel is calculated and shown based on the accumulated mileage and fuel consumption.

Display range: 0.0 – 29.9 L/100km.

Instant Fuel interface

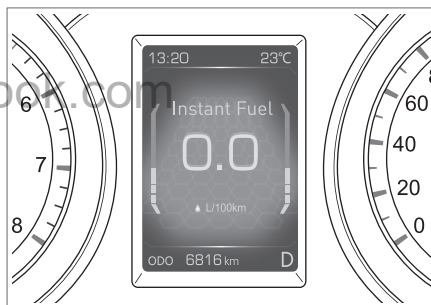


Displays current fuel consumption information.

Display range: 0.0 – 29.9 L/100km.

This information can help you to adjust your driving behavior to achieve your desired fuel consumption level.

Distance to Empty interface

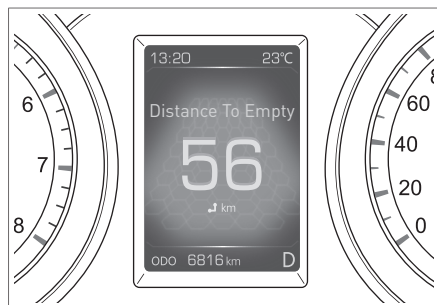

Shows the estimated Distance to Empty based on current fuel levels and driving mode.


Unit range: 50 – 999km.

When the distance to empty is less than 50 km, the display will read "----".

CAUTION

- › After refueling, the distance to empty will be recalculated.
- › The actual driving distance will vary depending on driving habits and road conditions.
- › When the low fuel level warning comes on, you must top up the fuel tank even if display information claims that the vehicle should be able to go further.


Journey Time interface

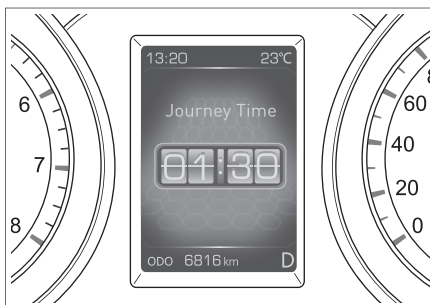

Unit range: 0 – 99 hours and 59 minutes.

The journey time will automatically reset when it reaches its maximum limit.


Average Speed interface

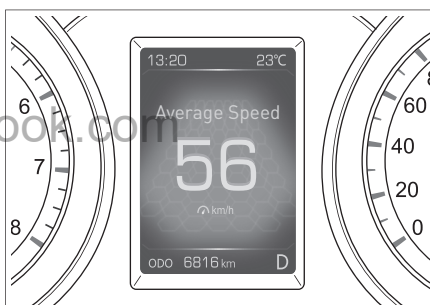

The Average Speed is calculated and shown with the engine running based on the accumulated mileage and running time.

Display range: 0 – 240km/h.

TPMS interface

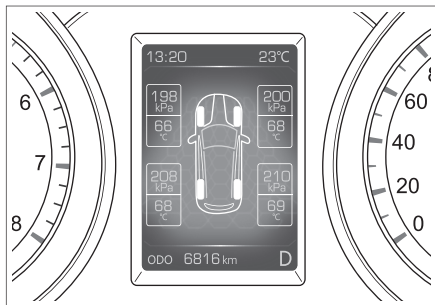


Shows tire pressure values as well as tire temperature.

You can refine pressure and temperature unit settings through the interface settings menu.

When there is a high or low tire-pressure alarm or high temperature alarm, the corresponding tire will be shown in red on the interface. Once the cause for alarm has been removed, the tire will return to normal displaying color.

Menu Settings interface

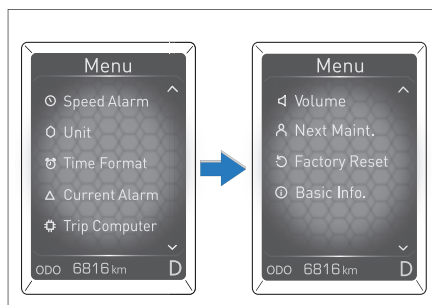

With any of the trip computer interface, short press the Enter key to enter the settings menu.

The Menu Settings interface contains the following items:

- > Speed alarm;
- > Unit;
- > Time format setting;
- > Current alarm;
- > Trip computer;
- > Volume;
- > Next maintenance;
- > Factory reset;
- > Basic info.

Speed alarm

You can choose to turn on or turn off the speed alarm function.

You can set the speed alarm value by turning the adjustment key up or down. When the vehicle is traveling exceeds the setting value, a warning will appear on the instrument to remind you overspeeding. Please drive carefully.

Speed alarm range: 30 – 240km/h.

Unit

You can set the pressure, temperature, mileage, and fuel-consumption units here.

Time format setting

You can set the time to either 12 hour or 24 hour display.

Current alarm

You can access current secondary alarms here. When the cause for alarm is removed, the alarm will be removed from the list. When all alarm messages have been removed, the menu will automatically jump to the superior menu.

Trip computer setting

1. You may select the kinds of information you wish to see on the trip-computer interface.
2. Using the "Reset All" in the trip-computer interface to reset all counters/clocks in the Tripmeter, Average Fuel, Journey Time, and Average Speed interfaces.

Volume

You can turn the adjustment key up or down to adjust the alarm volume.

Next maintenance

Here, you can check the due date for the next maintenance visit.

This information should only be used as a reminder for vehicle maintenance. Please carry out regular maintenance strictly following the regular maintenance table.

Factory reset

Press the Enter key to reset all information center data (except total mileage, distance to maintenance, distance To empty) and settings to factory condition.

Basic information

You can check the relevant instrument information here.

Warning notifications

Most dashboard alarm information items are accompanied by a corresponding indicator. The alarm indicator will light up when alarm information is shown.

If multiple alarm information have been activated, they will rotate on the display in sequence. Each information will be shown for 3 seconds.

Alarm messages are prioritized over trip computer messages. Once the ENGINE START-STOP switch is in the ON position alarm messages will be shown first.

Please perform all and any operations strictly in accordance with instructions contained in alarm messages. If there are no relevant instructions available, please stop the vehicle for checks or contact a service provider for assistance.

WARNING

Do not ignore alarm prompt messages.

Failure to heed alarm messages can cause severe damage to the vehicle.

If a warning indicator lights up, please stop the vehicle as soon as possible, while paying extra care to safe driving.

Important alarm messages

1. The important alarm information on display can be shielded temporarily with a long press of the Enter key.

2. If there are multiple important alarm information, the unshielded alarm information will continue to rotate.

If there is only one alarm message for the driver, the message will show continuously on the display.

If all alarm messages have been hidden, the display will show normal trip computer messages.

3. Alarm information that have been shielded temporarily will show again in rotation when there has not been any button operation for 60 seconds. The display sequence is the same as the sequence before they were shielded.

4. After the cause for alarm has been removed, the corresponding alarm message will also disappear from the display.

Secondary alarm messages

1. When one or more secondary alarm information appears, an alarm icon will appear above the center part of the display.

2. Secondary alarm messages automatically disappear after being displayed for 3 seconds.

3. You can access all secondary alarm messages via the "Current Alarm" interface in the settings menu.

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

When you decide to tow a trailer, you should first check whether there are any relevant automotive laws in your area before deciding on the towing method.

As regulations governing towing and usable equipment vary from place to place, please consult your local Service provider before towing.

CAUTION

- › When towing a trailer, please observe all relevant laws and regulations. Unauthorized modification of the equipment is strictly forbidden.
- › Do not tow a trailer while breaking in a new vehicle.
- › Please remove the trailer hitch when not towing a trailer.
- › The exterior rear-view mirrors of the towing vehicle must satisfy the legal requirements. If they do not, then install suitable trailer rear-view mirrors.

Driving instructions

Towing a trailer will affect items such as your vehicle's handling, braking performance, and fuel consumption. Please abide by the following driving recommendations for the safety of your passengers and to ensure the safe towing of the trailer.

Starting the vehicle

Before driving, please ensure that the tire pressure, lights, and connecting equipment for both the towing vehicle and the trailer are normal.

Please securely load all items in the trailer, ensure that all items are safely and securely affixed within the trailer, and ensure that the trailer is kept level. If you cannot, do not drive the vehicle.

Start the vehicle gradually, and avoid rapid acceleration and sudden braking, especially while driving on slippery roads, as skidding may lead to an accident.

Crosswinds and rough roads may cause the vehicle to sway, seriously impairing control of the vehicle. If you notice that the vehicle is swaying even slightly, under any circumstances, grip the steering wheel firmly with both hands and immediately start slowly reducing the speed of the vehicle. Do not attempt to stop the swaying of the vehicle by speeding up.

Whenever possible, avoid towing a loaded trailer with an empty vehicle. If it is unavoidable, you should drive slowly because of the unbalanced load distribution.

Braking

The braking distance of the vehicle will be increased when towing a trailer. Thus, you should leave more room between you and the vehicle ahead of you.

CAUTION

- › If your trailer is equipped with a brake system, please observe the relevant local regulations, and install and use the system correctly.
- › Do not connect the brake system for the trailer to that of the towing vehicle.

Passing

While towing a trailer, the effective length of the vehicle will be increased by the length of the trailer. Thus, you must pull ahead of other vehicles farther than you normally would while passing before re-turning to your original lane.

Reversing

Reversing while towing a trailer is not the same as normal reversing, and is in fact harder. You should be especially careful and practice the maneuver.

While reversing, grip the bottom of the steering wheel with a single hand and then turn your hand to the left. The trailer will then turn to the left. Likewise, turning to the right will turn the trailer to the right. You must reverse slowly, and you can ask others to help you if possible.

Turning

You must turn smoothly while towing a trailer, and avoid bumps and sudden turning as much as possible. Additionally, you should activate your turn-signal lamps early. While turning, you must reserve more space than you would when not towing a trailer. In this way, you can avoid bumping the trailer into the curb, road signs, trees, or other objects.

Driving on slopes

You should downshift ahead of time while towing a trailer on a relatively steep or long slope. Adjust your speed based on the weight of the trailer and the steepness of the slope to avoid the possibility of overheating the engine and the transmission.

Avoid parking on a slope whenever possible. If you must do so, you must place blocks under the wheels of the trailer and the towing vehicle in addition to engaging the parking brake.

WARNING

- › While towing a trailer on a steep slope, you must pay close attention to the water-temperature gauge for the engine to ensure that the engine is not overheating.
- › If the engine's water temperature is too high, you should immediately stop the vehicle for your safety and allow the engine to idle until it cools down.

Technical requirements

Trailer hitch

The fixing points for the trailer hitch are located at the ends of the left and right longitudinal beams at the rear of the vehicle. The exact number and locations vary slightly between different models.

If the vehicle already has a trailer hitch provided by Great Wall Motors installed, then the technical and legal requirements are satisfied by it.

If a trailer hitch must be installed after the purchase of the vehicle, you must follow the instructions provided by its manufacturer. We recommend that you have it installed at a service provider.


en.carobook.com

Technical specifications

The towing capacity of the vehicle will depend on factors such as the specifications of the vehicle, its load, road conditions, and the specifications of the trailer. To ensure the safety of the drive, do not overspeed or drive while the vehicle is overloaded. For details, consult the table below.


Item		Data	
Engine Model		GW4C20	
Transmission Model		6MT	
Drive mode		2WD	4WD
Maximum total mass (kg)		4260	4279
Maximum total permissible front / rear axle load (kg)		1110/1100	1130/1150
Trailer mass (kg)	Without brakes	750	750
	With brakes	2000	2000
Static vertical load on the connecting points (kg)		80	80
Maximum rear overhang of the trailer hitch (mm)		1115	1115
Rear tire pressure for the towing vehicle (kPa)		240±10	240±10

Maximum total mass

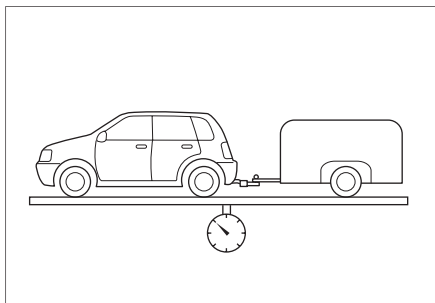


The maximum total mass is the maximum permissible mass for the combination of the towing vehicle (including its passengers and contents), the trailer hitch, and the trailer (including its contents).

Maximum total permissible front and rear axle load

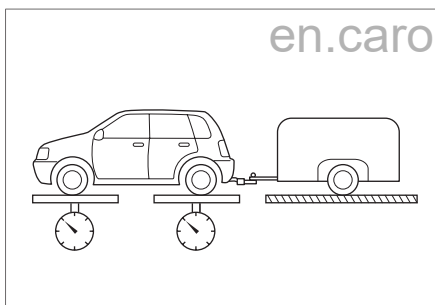


The maximum total permissible front and rear axle load is the maximum load capacity permitted for the front and rear axles of the towing vehicle.

Trailer mass

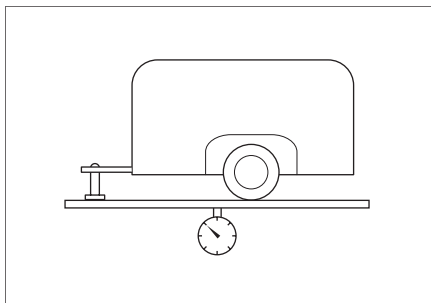

The trailer mass is the permissible total mass of the trailer, including the mass of both the trailer and its contents.


Static vertical load on the connecting points

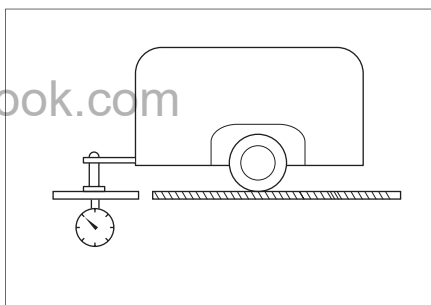

The static vertical load on the connecting points is the maximum vertical load that the connection between the trailer and trailer hitch can bear under static conditions.

en.carobook.com

Maximum rear overhang of the trailer hitch

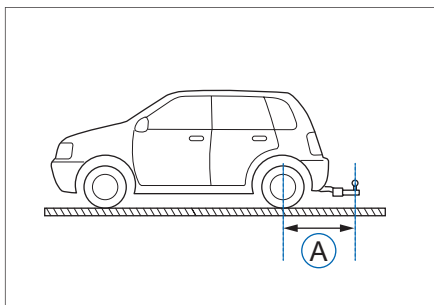

- Ⓐ Maximum rear overhang of the trailer hitch

The maximum rear overhang of the trailer hitch is the maximum permissible horizontal distance between the center of the rear axle and the center of the trailer hitch connecting point.

en.carobook.com

Warning tones

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

2

Driving

In the following situations, the vehicle may sound an alarm tone.

› **When the engine is started or during driving:**

If you do not fasten the seat belt.

If the speed exceeds the preset alarm speed.

If alarm messages appear in the information center.

› **When all the doors are locked and the back door is closed:**

If there is a legitimate intelligent key in the luggage area.

en.carobook.com

3

Safety

Seat belt.....	160
Airbag.....	166
Child restraint system.....	174
Engine electronic immobilizer system	183
Vehicle immobilizer system.....	184
Safety labels	186
Fuel shutoff system	190

en.carobook.com

Seat belt

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

⚠ WARNING


During the drive, all passengers must fasten their seat belts in the correct fashion. Failure to do so can lead to severe injury or even death from collisions or emergency braking as passengers' bodies are not sufficiently bound to seats.

Wear the seat belt properly




- › Adjust seat backrest until it is vertical or near-vertical and provides adequate back support;
- › The seat belt should lie flat;
- › The shoulder belt should lie flat on the center of the shoulder (and not on the neck or elsewhere away from the shoulder);
- › The lap belt should be, as much as possible, fastened around the lower part of the hip bone.

Front seat pretensioner seat belt

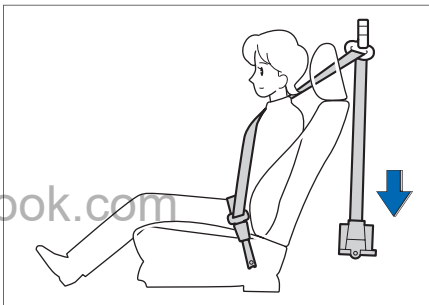

Front seat passengers are most vulnerable to impact coming from the front of the vehicle. When a collision occurs, the pretensioner can retract the seat belt in an instant to secure the passenger to the seat as much as possible.

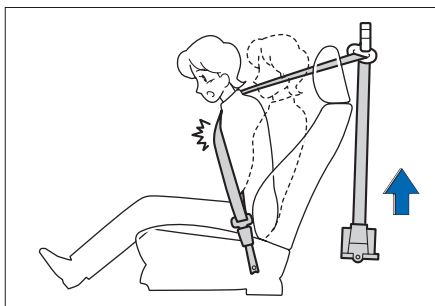


The force limiter can maintain seat belt load at an acceptable level and reduce force exerted on the passenger's chest.

Operating conditions


The pretensioner seat belt works when the vehicle receives a significant impact from the front.

It may does not function when the following minor collisions occur.

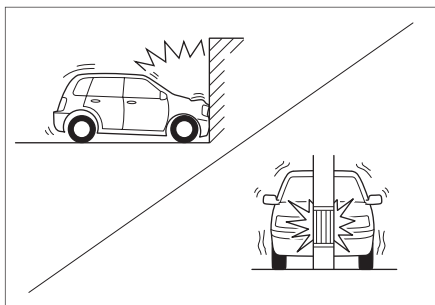

- › When the vehicle hits a concrete wall square at a speed below 25km/h.
- › When the vehicle collides with an object with a small surface area, such as a fixed electrical pole or tree, at a speed lower than 35km/h.

The pretensioner seat belt may not work at its maximum safety capabilities when the vehicle receives a significant impact as follow.

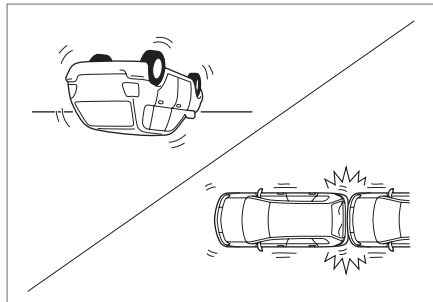

- › When the vehicle has rolled 90 or 180 degrees.
- › Where the collision is coming from the side or rear of the vehicle.

WARNING


- › When using the pretensioner seat belt, please adjust the seat to the optimal driving position. Failure to do so will undermine seat belt performance, leading to an increased risk of severe bodily injury and death.
- › If you wish to install, remove or dismantle the pretensioner seat belt, it is mandatory that you contact service provider to do so. If the pretensioner seat belt is not used correctly, it will not function as normal. It may cause severe injury or even death in an accident.
- › The pretensioner seat belt cannot be deployed repeatedly.

After the pretensioner has been deployed during the first collision, do not extend or retract the seat belt again. At this point, be sure to contact service provider for assistance. Failure to do so leaves you at risk as the pretensioner will not deploy again during subsequent collisions.

WARNING

- › When the pretensioner is deployed, there may be loud sounds and white smoke emanating from the device. This will not lead to a fire or cause harm to the human body.
- › Please contact service provider when a pretensioner seat belt needs to be replaced and disposed of. Inadvertent/accidental movements of the pretensioner seat belt can cause harm to the human body.

Adjust the height of front seat belt

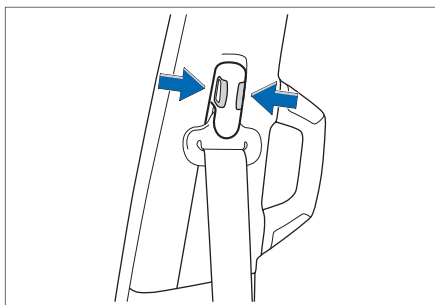

When the seat belt is close to the passenger's neck or has slid down from the passenger's shoulder, you can use the height adjuster for the seat belt to make the necessary adjustments so that the seat belt lies on the center of the shoulder as much as possible.


Simultaneously press the adjustment switches on both sides, adjust the seat belt height adjuster to the necessary height, and then release the switch.

WARNING

After completing your adjustments, please make sure that the seat belt height adjuster has been locked into the appropriate position.

Operation of seat belt

Three-point seat belt

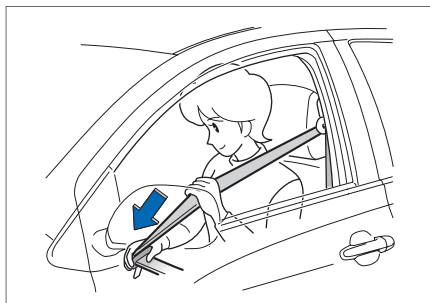


1. Hold the lock pin and pull the seat belt out of the retractor. Make sure that you do not twist the seat belt in the process.

If you are unable to pull the seat belt out of the retractor, you will need to first pull hard at the seat belt and then release it. Doing so will trigger the retractor and allow you to pull out the seat belt smoothly.




2. Insert the lock pin into the buckle until you hear a 'click' sound.

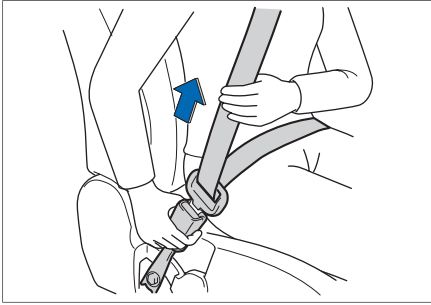

3. Pull up the shoulder belt until the waist section sits securely on the body.

Thus, the pelvis is better secured and the risk of injury during moments of impact is reduced.

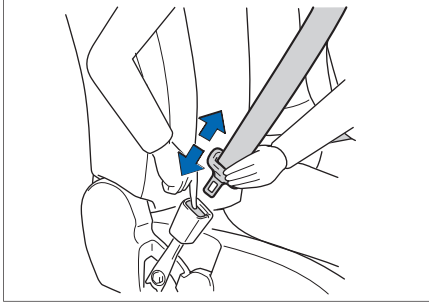

5. Press unlock button on the buckle to retract seat belt.

After the lock has been released, hold on to the lock pin until the belt has been fully retracted. Take care that the lock pin does not knock the other passenger or any nearby objects.



4. Check that the shoulder belt is sitting across the chest and on the center of the shoulder.

Thus, any impact will be distributed across the upper skeleton.

⚠ WARNING

- › The shoulder belt must not sit on the neck area, or pass under the armpit area.
- › The lap seat belt must be secured as firmly as possible around the lower part of the hip bone.
- › More than one person (including children) must not share the same seat belt.
- › The seat belt should not be twisted or slack.
- › Do not wrap the seat belt around objects with sharp corners, or it may be damaged during an accident.

⚠ WARNING

- › The use of a seat belt that has undergone strong impact from an accident or which is otherwise damaged is strictly prohibited.
- › Do not remove, disassemble or alter seat belts.
- › Do not use the seat belt with foreign object in the buckle.
- › Do not use organic substances, such as benzene or gasoline, to clean the seat belts, and do not bleach or dye them.
- › Child passenger(s) must be forbidden from playing with the seat belt.

The passenger may hurt himself or herself inadvertently while playing with the seat belt. There is also the risk of death should the belt jam. In such circumstances, if the seat belt cannot be released in time, use a pair of scissors to cut the seat belt free.

- › Interior seat belt design is mainly based on adult size, so please install proper child restraint system for children.

When the seat belt is being used correctly, if the belt is in contact with the child's neck or jaw area with some slack to the belt, please switch to a child safety seat instead.

If the child is old enough to use interior seat belt, he (she) should wear the belt properly.

⚠ WARNING

- › Precautions for riding of pregnant women.

We strongly recommend that you make use of the seat belt. You may also wish to speak to your physician for more tips. The recommended way of wearing the seat belt for pregnant passengers is fundamentally the same as for other passengers. However, such passengers should take note of the following:

- 1) The lap belt should be positioned as low as possible in the abdomen area, below the bulge of the belly;
- 2) The shoulder seat belt should run over the passenger's shoulder, over the chest area but avoid the passenger's abdomen area.

If the seat belt is worn incorrectly, during emergency braking or collisions, the seat belt may tighten over the abdomen area, causing injury or even death to the pregnant mother and unborn child.


- › We strongly recommend that passengers who are ill or disabled make full use of the seat belt. You may also wish to speak to your physician for more tips.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Front airbag

Introduction

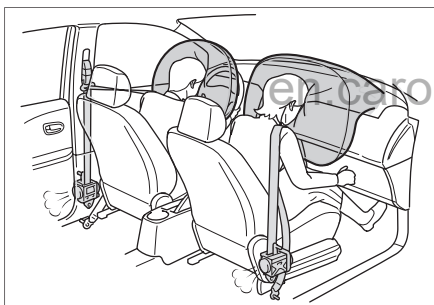


When the vehicle encounters a significant front collision, the seat belt will tighten. At the same time, the airbags in front of the driver and front passenger will deploy in order to distribute and cushion any force directed towards the head and chest.

⚠ WARNING

- › The airbag is an auxiliary device that serves to protect the passenger. It is designed to be used in tandem with the seat belt apparatus. To make full use of airbag capabilities, passengers must wear seat belts correctly and adopt the correct sitting position.
- › Correct use of the airbag can maximize its safety capabilities. Incorrect use of the airbag not only compromises its safety capabilities but may also cause harm to the passenger.
- › Do not apply force where the airbag may deploy, such as on the steering wheel or the instrument panel. Failure to adhere to it, front airbag may not work properly, causing serious injury or death.
- › Please get in touch with service provider if you need to install wireless equipment. Electromagnetic waves emitted by wireless equipment have a significant impact on the control unit of front airbag.
- › Do not use the front airbag for any other purposes.

Working principle

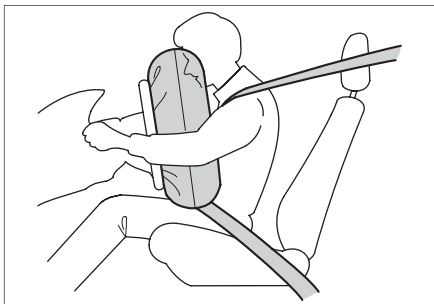

When a head-on collision resulting in moderate to severe impact occurs, the sudden deceleration of the vehicle will be noted by a sensor. At this time, the control module will immediately deploy the airbag.


⚠ WARNING

- › Do not touch airbag components when the airbag has been deployed. As airbag components heat up during the course of deployment, touching these parts may cause burn injuries to your person.
- › When the airbag is being deployed you will notice some loud sounds and smoke. This is normal and will not lead to a fire. The gas released, however, may cause breathing difficulty when inhaled by individuals suffering from asthma or other respiratory conditions. At this point, it is safer for passengers to evacuate from the vehicle. If you are unable to evacuate from the vehicle, open vehicle doors or windows to let fresh air in.
- › When any debris (or gas) released by airbag deployment comes in contact with the eyes or skin, clean such material off using water as soon as possible. Otherwise, individuals with skin hypersensitivity may experience a skin reaction.


en.carobook.com

Precautions

- › The airbag may deploy when the bottom of the vehicle encounters the following kinds of severe impact.

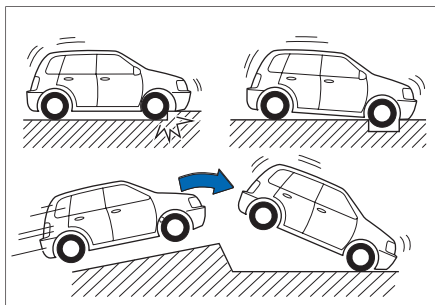


- › When the vehicle runs into the curb;
- › When the vehicle falls into, or runs over a deep pit or drain.
- › When the vehicle runs over steps or runs into/falls onto a road surface.
- › **The airbag may deploy in the following situations. However, it will not be able to function to its full capabilities.**

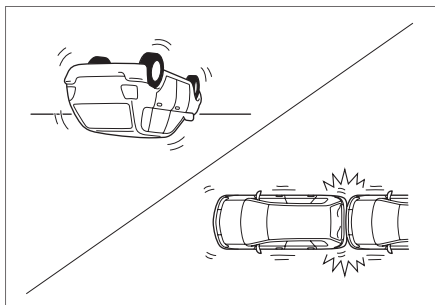


- › When the vehicle flips over by 90° or 180°.
- › Where the collision is coming from the side or rear of the vehicle.

- › The airbag may not deploy when the vehicle encounters the following kinds of severe impact.

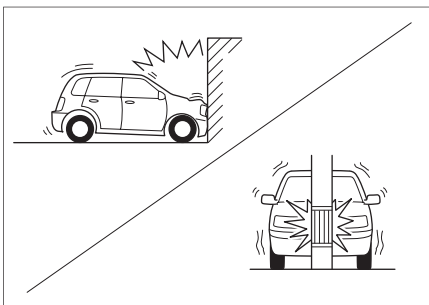


- › When the vehicle hits a concrete wall square at a speed below 25km/h.
- › When the vehicle collides with an object with a small surface area, such as a fixed electrical pole or tree, at a speed lower than 35km/h.
- › **If the object impacted changes shape or moves, the force from the collision will be reduced. In this case, the airbag may not deploy.**

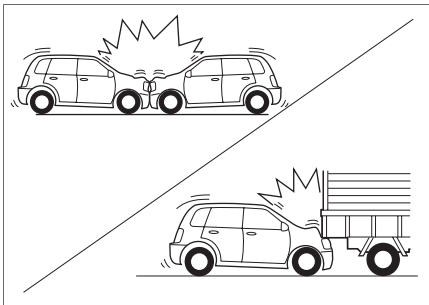

- › The airbag may not deploy when a front collision occurs with the vehicle stationary of similar mass.
- › When the vehicle collides into a truck from the back, the vehicle will run into the container body. As the collision impact would hence be cushioned, the air-

bag may not deploy.

- › **The airbag may also not deploy depending on the angle and direction of collision, even when vehicle speed is relatively high.**

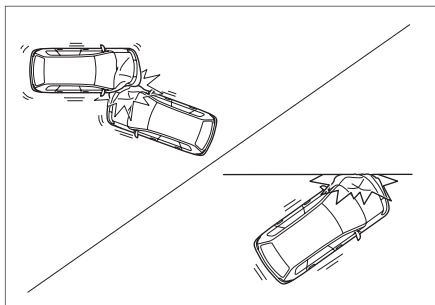

- › **Do not allow your body to get too close to the steering wheel or to the lower part of the instrument panel.**

The driver maintains the correct driving posture as far away from the steering wheel as possible during normal driving operations.

The front seats should be as far from the instrument panel as possible.

All passengers should be belted up in the correct fashion for optimal protection.

- › **Do not sit on the edge of the seat or lean on the instrument panel while the vehicle is in motion.**

This is because the front airbag deploys at a high speed and with great force. If the passenger is too close to the airbag at this point he or she may suffer severe injury or even death.

- › **Do not allow children to stand in front of the airbag.**

When the front airbags deploy, it may cause severe injury or even death to child passengers. All children should be seated in the rear and be protected with the correct restraints.

- › **Please adhere to the following rules, otherwise these items may cause severe injury to passengers during airbag deployment.**

Do not place objects on the instrument panel or lean umbrellas, etc. on it.

Do not leave objects exposed in the storage box.

Do not hang any objects on vehicle windows or on the interior rearview mirror.

Do not install any decorations on the steering-wheel horn cover.

Do not place luggage, pets, or other objects between the airbag and the driver or front passenger.

- › **Do not clean the inside of the vehicle with water or a cleaning solution.**

Gas generator in airbag is a priming device. If it becomes damp, its normal operation will be affected or even cause serious injuries or death.

- › **Do not apply wax, stickers, or similar items to the airbag cover.**

Failure to adhere to this advisory can impede airbag deployment.

- › **Do not damage airbag cover.**

Otherwise, it will not work normally. Therefore, do not open or damage the airbag cover.

- › **Do not dismantle, modify, or install equipment such as airbags, instrument panel and steering wheel.**

Improper operations can cause the airbag to malfunction or deploy by mistake, thereby causing severe injury or even death.

- › **Do not modify the suspension.**

If the vehicle is too high or if suspension stiffness is changed, the airbag may deploy by accident and cause injuries or even death.

- › **Please contact service provider for assistance when you need to install a fender panel and /or baf fle at the front of the vehicle.**


Modifications to the front of the vehicle can cause distortion to collision signals sent to the airbag sensor, thereby triggering accidental deployment of the airbag, which may cause serious injuries or even death.

- › **You must contact service provider for assistance should you need to make repairs to the front of the vehicle or the driving cab.**

Improper repairs can cause distortion to collision signals sent to the airbag sensor, thereby leading to airbag malfunctions, which may cause serious injuries or even death.

Side airbag

Introduction

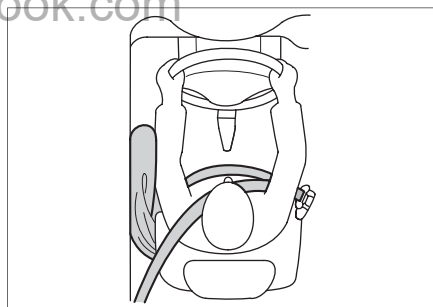

Side airbag is located inside the seat backrest outside liner, and airbag mark will be made on the seat backrest. Side airbag is the supplement of seat belt. In case of side collision, side airbag will reduce the damages to interior passenger and prevent subsequent collisions.

WARNING

- › It is forbidden to strike or squeeze side airbag position.

Avoid the condition that side airbag cannot work normally during accident or accidental deployment of side airbag in normal driving, which will cause serious injuries to passengers or even death.

- › Please get in touch with service provider if you need to install wireless equipment. Electromagnetic waves emitted by wireless equipment have a significant impact on the side airbag control units.
- › Do not use the side airbag for any other purposes.

Working principle

When the vehicle encounters impact from the side, the sensor will detect an acute change in vehicle speed and then send a signal to the control module. If airbag work condition is met, the side airbag will initiate instantaneously.

When a side collision occurs, only the airbag on the side of impact will deploy. If the impact occurs on the front passenger's side of the vehicle, even if there is no one in that seat, the front passenger side airbag will still deploy.

Precautions

- › **The side airbag may not deploy when the vehicle encounters mild impact such as described below:**

Front collision;

When electronic control unit receives a weak signal of mild impact;

Rear collision;

Rollover.

- › **Do not place any object over side airbag.**

Otherwise, it will disturb the normal work of the airbag.


- › **Never attach any object around the side airbag deployment area.**

Failure to adhere to this can cause such objects to dislodge when the side airbags deploy.

- › **Do not remove, repair or modify seat with side airbag and parts around the side airbag deployment area.**

Side airbag curtain

Introduction

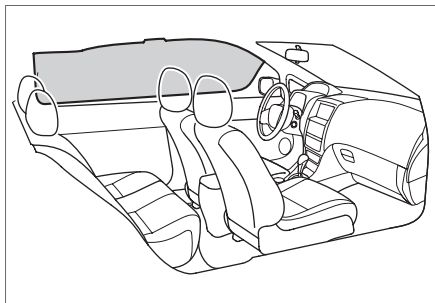

Side airbag curtain is located on the roof lower edge; you can find airbag marks on pillar. Side airbag curtain is the supplement of seat belt. In case of side collision, side airbag curtain will reduce the damages to interior passenger's head and prevent subsequent collisions.

⚠ WARNING

- › It is forbidden to strike or squeeze side airbag position.

Avoid the condition that side airbag cannot work normally during accident or accidental deployment of side airbag in normal driving, which will cause serious injuries to passengers or even death.

- › Please get in touch with service provider if you need to install wireless equipment. Electromagnetic waves emitted by wireless equipment have a significant impact on the side airbag control units.
- › Do not use the side airbag for any other purposes.

Working principle

When the vehicle encounters impact from the side, the sensor will detect an acute change in vehicle speed and then send a signal to the control module. If airbag work condition is met, the side airbag will initiate instantaneously.

Precautions

- › **The side airbag curtain may not deploy when the vehicle encounters mild impact such as what is described below:**

Front collision;

When electronic control unit receives a weak signal of mild impact;

Rear collision;

Rollover.

- › **Do not remain close to the vehicle doors, door pillars or side of the roof, or kneel on a front seat.**

Failure to adhere to this advisory can cause passengers' heads to suffer a severe impact when the side airbag curtains deploy, which may cause serious injuries or even death.

Please take extra caution when there are child passengers in the vehicle.

- › **Never at touch any object around the side airbag curtain deployment area.**

Failure to adhere to this can cause such objects to dislodge when the side airbag curtains deploy.

- › **Do not hang heavy or sharp objects on the coat hook.**


Do not use clothes hangers if you wish to hang your clothing, and opt for the coat hook directly instead.

Failure to adhere to this advisory can cause clothes hangers to dislodge when the side airbag curtains deploy.

- › **Do not remove, repair or modify parts around the side airbag deployment area.**

Do not modify roof, roof hand rail, roof hand rail bracket and side roof lamp.

Front passenger airbag switch

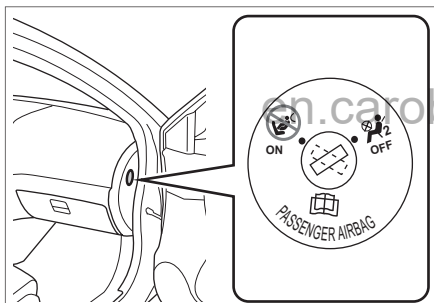

- › Use a key to turn the front passenger airbag switch to the OFF position to turn off the front passenger airbag. The front passenger airbag OFF warning lamp on the air conditioning panel will then illuminate.
- › Use a key to turn the front passenger airbag switch to the ON position to turn on the front passenger airbag. The front passenger airbag OFF warning lamp on the air conditioning panel will then go off.

⚠ WARNING

- › Be sure not to place a rear-facing child seat on the front passenger seat while the front passenger airbag is operational. Otherwise, there will be a serious accident or even death.
- › If, under special circumstances, it is necessary to install a rear-facing child seat on the front passenger seat, please turn off the front passenger airbag. Otherwise, there will be a serious accident or even death.
- › In other conditions, you are not free to turn the front passenger airbag lock to the OFF position, as the front passenger airbag would not be able to deploy if there was an accident.


Child restraint system

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Child seat type


Group 0/0+ child seat

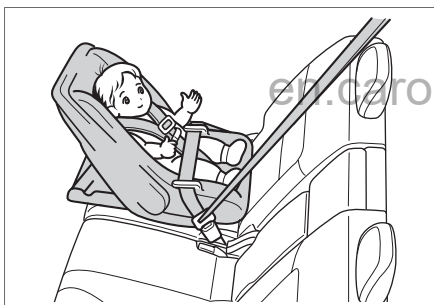

Group I child seat




Group II/III child seat

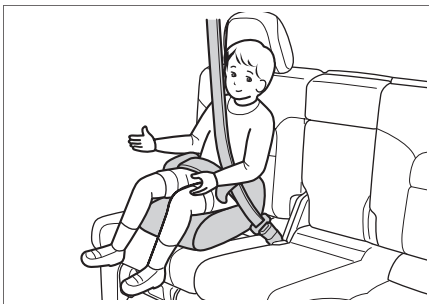


Fixing points on child seat


Lower fixing points on child seat

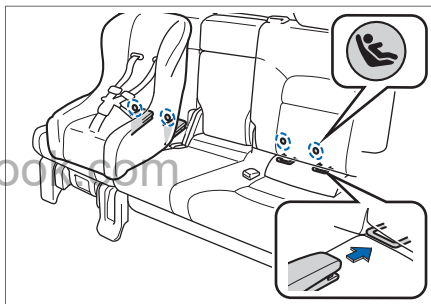

There are 4 child seat lower fixing points located between the back and cushion of the rear row seat.

Child seat top strap fixing point

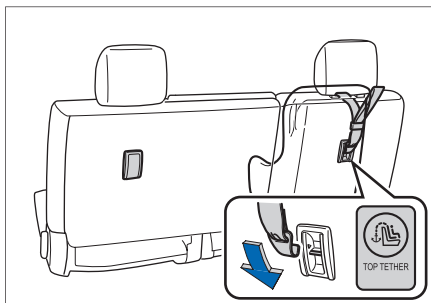

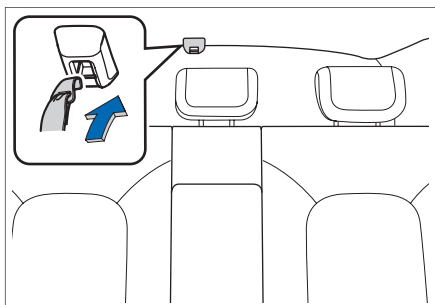

There are 2 child seat top strap fixing points located on the rear row seat back.

But there is also a seat top strap fixing point located at the rear of vehicle roof (in the luggage area) for Australia market.

⚠ CAUTION

Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seatbelts, harnesses, or for attaching other items or equipment to the vehicle.

Applicability of child seat

Only child seats that meet ECE No. 44 specifications may be installed in the vehicle.

According to ECE No. 44 specifications, child seats can be categorized into five groups.

- › Group 0: Maximum 10 kg (0~9 months)
- › Group 0+: Maximum 13 kg (0~2 years)
- › Group I: 9 to 18 kg (9 months ~ 4 years)
- › Group II: 15 to 25 kg (4 years~7 years)
- › Group III: 22 to 36 kg (6 years~12 years)

Use of various vehicle seats with a child seat

Weight category	Seat position			
	Front passenger side		Rear seats	
	Front passen- ger side Airbag ON	Front passen- ger side Airbag OFF	Rear side seat	Rear center seat
Group 0	X	U	U	X
Group 0+	X	U	U	X
Group I	X	U	U	X
Group II	X	U	U	X
Group III	X	U	U	X
Note: Explanation of codes used in the table: U – Suitable for use with the universal child restraint system in this weight class. X– This seat is not suitable for use with child restraint systems in this weight class.				

Compatibility of vehicle ISOFIX positions with ISOFIX child safety seats

Weight category	Dimensions/model	Fixing module	Vehicle ISOFIX position
			Rear side seat
Portable bed	F	ISO/L1	X
	G	ISO/L2	X
Group 0	E	ISO/R1	IL
Group 0+	E	ISO/R1	IL
	D	ISO/R2	IL
	C	ISO/R3	IL
Group I	D	ISO/R2	IL
	C	ISO/R3	IL
	B	ISO/F2	IUF
	B1	ISO/F2X	IUF
	A	ISO/F3	IUF

Note: Explanation of codes used in the table:

IUF – Suitable for use with front-facing ISOFIX child restraint systems in this weight class.

IL – Suitable for the specific listed child restraint systems. These systems may be of the vehicle-specific, restricted, or semi-universal categories.

X – The ISOFIX position is not suitable for use with this weight class and/or ISOFIX child restraint systems of the dimensions.

Installation of child seat


CAUTION

- › If the rear seat back angle is adjustable, adjust it to the most forward position, so that the cushion and back of the child seat can fit closely with rear seat.
- › To install and remove child seat, please carefully read install instructions and precautions attached with the child seat.


Install child seat with the ISOFIX

The ISOFIX or LATCH are standard protective systems designed for child seat. You can install child seats on either of the 2 side seats in the rear with ISOFIX or LATCH.


1. Move the front seat as far forwards as possible.

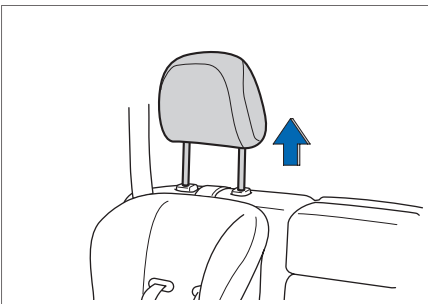

2. Raise or remove the headrest from the seat where the child seat is to be installed.

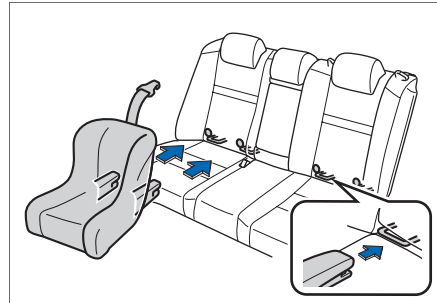


3. Slide the child seat lock mechanism into the bottom attachment point, ensuring that the 2 ISOFIX lock mechanisms are securely fixed.

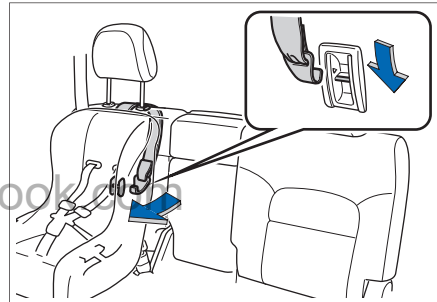


4. Route the top strap over the seat back and attach to the corresponding child seat top strap fixing point, being careful not to twist the strap. When securing, you must make sure that the top strap passes through the the seat headrest.
5. Shake the child seat gently to make sure that it has been properly secured.

Installing a child seat using the seat belt


Child seat installed on both sides of rear seats

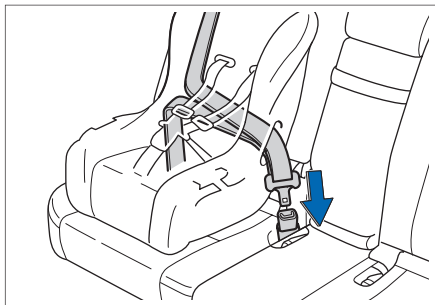

1. Pull out the shoulder belt, run the seat belt along the indicated route on the child seat and insert the lock pin into the buckle until you hear a 'click' sound.

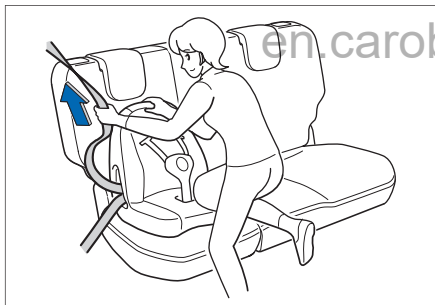


2. With your body weight pressing down on the child seat, allow the shoulder belt to retract and tighten. There must be no signs of slack to the seat belt.

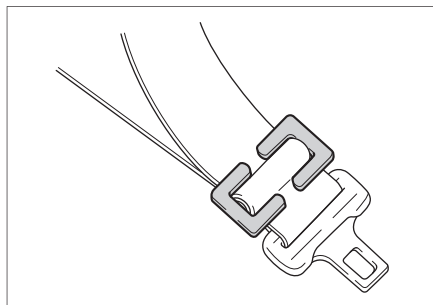

3. If the child seat is not equipped with seat belt fixing devices, you can buy fixing clip to fix the seat belt.
4. Shake the child seat gently to make sure that it has been properly secured.

Put the child seat in the middle of rear seat (Australia market)

1. fasten upper belt with upper anchorage at the rear of car roof.

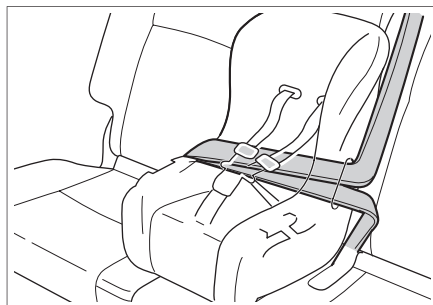

2. Install seat belt with child seat in right way. Make sure buckle in and "click".
3. Press down the child seat with body weight. Fasten seat belt and keep it tight. Loose condition is not acceptable.
4. Shake the child seat gently and make sure it remain steady.

Precautions for installing child seats

- › **Properly fasten the child seat inside the vehicle.**

If you are unable to install the child seat correctly, in the event of emergency braking or accident, severe injury or even death may occur.

- › **If the child seat is not used for a long time, remove it from the vehicle.**

Because if you leave it inside the vehicle, it may come into contact with passengers or other objects in the event of emergency braking or severe impact, causing a severe injury or even death.

- › **Do not install a child seat on the front passenger seat.**

This places the child passenger too close to the airbag. In the event of airbag deployment this can cause severe injury or even death to the child passenger.

- › **If the child seat must be installed on a front passenger side seat under special circumstances, please pay attention to the following points:**

If front passenger side airbag switch is installed on the vehicle, please be sure to turn off the switch; otherwise it will endanger the child when airbag deploys.

Please move the front passenger side seat as far back as possible.

Do not install a rear-facing child seat on the front passenger side seat.


- › **You should select an appropriate child seat based on your child's age and weight, and secure the child seat on the rear seat.**

Accident statistics show that compared to child passengers seated in the front seat, child passengers are safer when they are seated in a rear seat and secured with the appropriate protective measures.

Carrying the child in your lap is not the same as securing the child in a child seat. In the event of an accident, the child may be thrown towards the windshield glass or crushed between you and the vehicle interior.


- › **Even when the child has been seated in a child seat, take care that his or her head or body is not leaning against the door pillars or side of the sunroof.**

When the side airbag curtain fully deploys, it can be very dangerous in this scenario as the deployment force may cause severe injury or even death to the child.

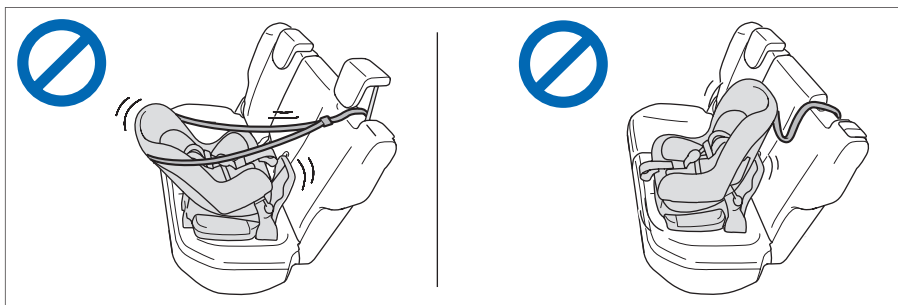


- › If child seat equips a top strap, make sure to tighten the top strap according to install instructions and precautions attached with the child seat.

If the top strap is not properly tightened, in the event of emergency braking or collision it may cause severe injury or even death.

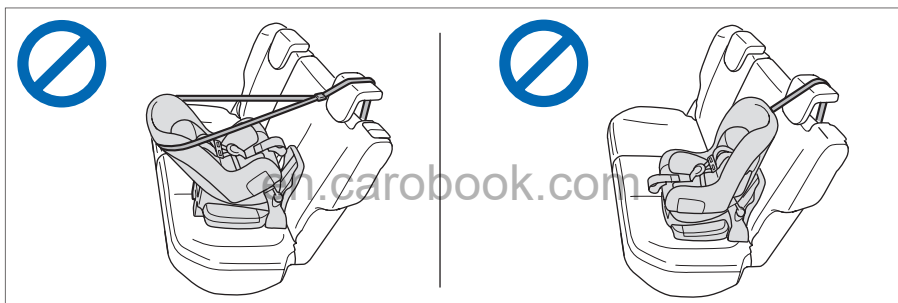

- › Raise the headrest to install the child seat, as the top strap must pass through the lower part of the headrest.

Otherwise the child seat cannot be fixed securely; in the event of emergency brake or collision it may cause severe injury or even death.

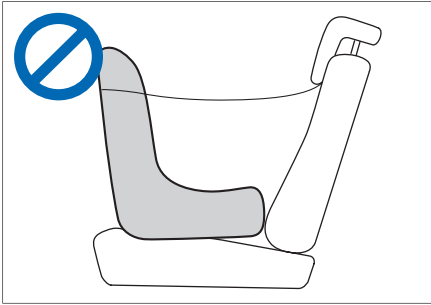

- › **When installing the child seat with the headrest raised, do not allow the headrest to fall back into place after securing the child seat to the top strap fixing point.**

If the headrest is allowed to fall back into place, it may come into contact with the fixing strap and loosen the strap as a result. In the event of emergency braking or collision, this can cause the child seat to dislodge, causing severe injury or even death.

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

About the system

As an anti-vehicle theft measure, the key is designed with a transmitter inside. You will not be able to start the engine unless you are in possession of a legal key.

CAUTION

- Do not place strong magnets in the vicinity of the ENGINE START-STOP switch;
- Do not store the key in a high-temperature or low-temperature environment;
- Do not allow the key to fall to the ground;
- Do not place heavy objects on the key.

If you are unable to re-start the engine

At this point, please:

1. Check whether your key is valid.
2. Perform normal starting operations

according to information on the instrument.

If the above factors have been ruled out, please contact a service provider for assistance with the engine immobilizer system.

Security envelope

1. Documentation for vehicles equipped with an engine immobilizer system will also include a security envelope that contains the SC for the engine immobilizer system. If you lose your key or when there is damage to the PEPS controller, electronic steering lock assembly, ECU, etc., you would need to re-program the engine immobilizer system. To do so, first open the security envelope to retrieve the security code. Inform maintenance personnel of this security code so that they may proceed with system repair.
2. If you have received a security envelope that has already been opened, it means that the SC may have been stolen and that the immobilizer system may be vulnerable to illegal activity. Please contact your local distributor immediately for the safety of your vehicle.
3. Please take good care of the engine immobilizer security envelope and keep it in a safe place. Please keep the security code confidential (although you would need to inform maintenance personnel of this code when a system malfunction arises). Please contact a service provider for assistance immediately if you lose the security envelope.

Vehicle immobilizer system

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

About the system

The vehicle immobilizer system works to prevent theft of your vehicle and valuables. The vehicle immobilizer system will emit alarm sounds if someone tries to enter the vehicle by force.

Alarm format

- › The horn sounds accompanied by flashing of the turn signal lamps.
- › The alarm will sound once every 3 seconds, with each alarm lasting 27 seconds for a total of 6 times.

⚠ WARNING

Do not attempt to modify the vehicle immobilizer system or add other equipment.

To turn on

1. Vehicle goes into pre-arm mode when the ENGINE START-STOP switch is in LOCK mode and when all vehicle doors, back door and hood have been closed and locked. The turn signal lamps will flash once while the immobilizer indicator will also begin to blink.

In pre-arm mode, you can still operate the vehicle without triggering the immobilizer alarm.

2. Once pre-arm mode has been activated for 15 seconds, the vehicle will then be armed and the immobilizer function, activated.

⚠ CAUTION

- › Please check whether all the vehicle doors, back door and engine hood are completely closed. Otherwise, the immobilizer system cannot be activated.
- › When the immobilizer system has been armed, the central lock button cannot be used for locking and unlocking.

Turn off the alarm

- › In pre-arm mode, unlock vehicle doors. Doing so will cancel pre-arm mode and the vehicle immobilizer function is de-activated.
- › In pre-arm mode, unlocking vehicle doors by unlock button on key or PEPS will cancel pre-arm mode and the vehicle immobilizer function is de-activated.

Alarm trigger conditions

The following situations can trigger the alarm when the immobilizer system is armed:

- › Open any door (including all doors, back door, hood) without operating unlock button on the key and the PEPS.
- › When the mechanical key or interior handle is used to open a vehicle door.
- › When there are changes to the ENGINE START-STOP switch position.

To remove the alarm

When the alarm is triggered, you can remove the alarm by performing the following steps:

- › When the ENGINE START-STOP switch is in the LOCK position, pressing the unlock button on the key or using the PEPS to unlock doors, so the arm is de-activated.
- › Start the engine successfully.

CAUTION

In case ENGINE START-STOP switch is in ACC or ON position, the alarm cannot be de-activated by operating unlock button on the key or the PEPS.

Safety labels


⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Safety labels are there to remind you of potential dangers that may lead to serious injury. Please read them carefully.

If the label peels off or becomes illegible, please get in touch with a service provider .

Safety labels inside the engine compartment

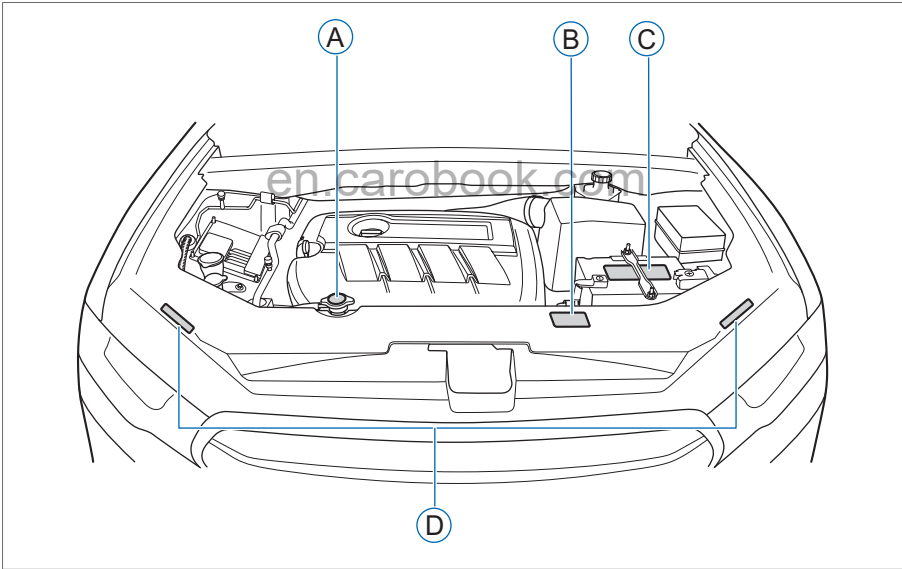


- A** Radiator cover warning label
- B** Engine compartment warning label
- C** Battery warning label
- D** Xenon headlamp warning label

Engine compartment warning label



The label is located on the interior trim panel inside the engine compartment. It serves to remind you that "Do not place your hand inside the fan cover as the cooling fan may start up at anytime". Failure to adhere to this advisory can cause severe injury should the fan start up unexpectedly.

Radiator cover warning label

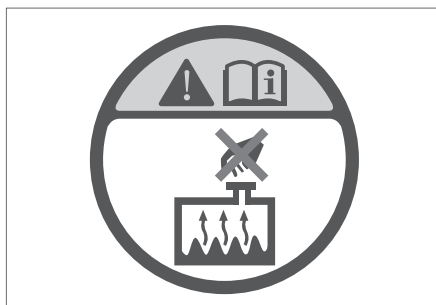

The label is located on the radiator cover. It serves to remind you to refrain from opening the radiator over when the engine is overheated. Otherwise there is a risk of burn injury to the hand or coolant spillage.

Battery warning label



Located on the battery, the label is to prompt that you should note the following before the installation, removal or inspection of the battery:

- › Children should be kept away from the battery;
- › The battery may produce flammable gases while being used or charged, and should be kept away from high temperature heat sources and open flames, otherwise it may cause fire or explosion;
- › The battery contains corrosive liquid inside;
- › Take necessary measures (e.g. wearing protective goggles) during operation.

Xenon headlamp warning label



This warning label is on the top of the headlamp. Do not turn on the lamp when replacing xenon lamp bulb. Otherwise, high voltage may cause serious personal injury.

Safety labels inside the cab

Front airbag warning label




The label is located on the sun visor on the front passenger’s side. It serves to remind you that the vehicle is equipped with front airbags and to pay attention to the relevant issues.

WARNING

Do not use a backward child restraint system on seats with front airbag protection (activated state)!

Side airbag warning label

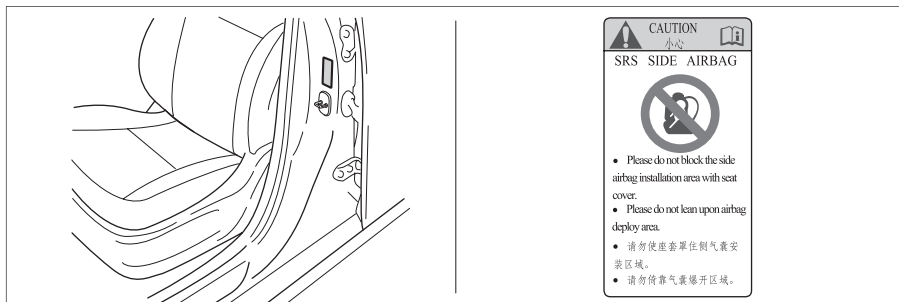

The label is located on the side outer panel. It serves to remind you that the vehicle is equipped with side airbags and to pay attention to the relevant issues.

en.carobook.com

Fuel shutoff system

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

When the engine has been shut off or when airbags are being deployed in the case of a collision, the fuel shutoff system will cut off all fuel supply to the engine to minimize the risk of fuel leakage.

After the system has been activated, please take the following steps to re-start the engine.

1. Switch the ENGINE START-STOP switch to ACC or LOCK position.
2. Restart the engine.

WARNING

Before re-starting the engine you must check the condition of the ground beneath the vehicle. If you discover any fuel on the ground, it means that the fuel system is damaged and requires maintenance. Do not re-start the engine at this point.

4

Emergency

On-board tool kit.....	192
Spare tire	195
Replacing tires.....	197
When the vehicle is stuck.....	203
Jump starting the vehicle	204
Engine overheating	206
Towing	208


en.carobook.com

On-board tool kit

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Tool list

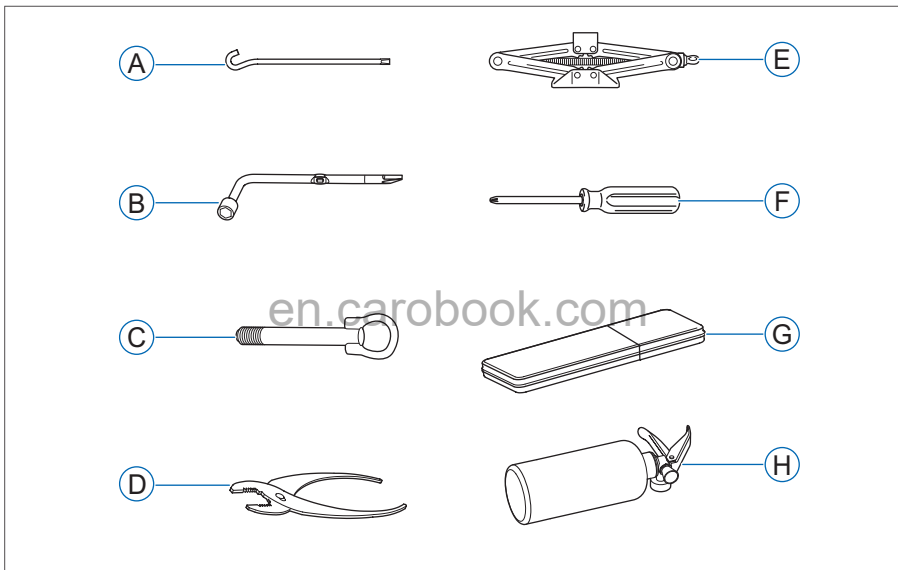

A Jack adjustment lever

B Wheel-nut wrench

C Tow hook

D Fish-lip pincer


E Jack

F Dual-purpose screwdriver

G Triangular warning board and box

H Fire extinguisher

Storage location

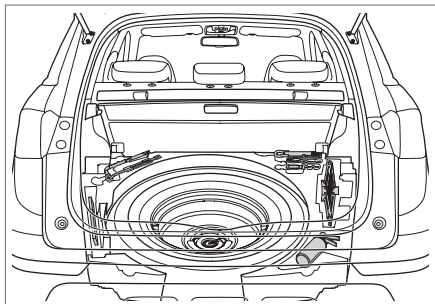

On-board tool kit are located on the tray below the tonneau cover. You can see it as soon as you open the tonneau cover.

CAUTION


- › Driver must be familiar with the position and usage of the jack, etc. on-board tools, so as to deal with emergencies.
- › The jack equipped with the vehicle is a special tool. Do not employ this jack with other vehicles, and do not use jacks designed for other vehicles with your vehicle.
- › You must return the on-board tools to their designated positions after use and fix them firmly. Improper storage may lead to the occurrence of an accident.

WARNING

You must observe the following when using the jack:

- › The vehicle should be parked at a flat place, the tire that forms a diagonal with the jack must be stabilized using a tire stop.
- › Turn off the engine. Failure to do so may cause the jack to shift due to engine vibrations and cause severe injury.
- › Do not use the jack when there are passengers inside the vehicle.
- › Make sure the jack is fixed in the lift position, do not place any objects on the top or bottom of the jack.
- › Do not climb under the vehicle after lifting the vehicle with the jack.
- › The vehicle should be lifted to a height amenable to the process of tire replacement.

Triangular warning board

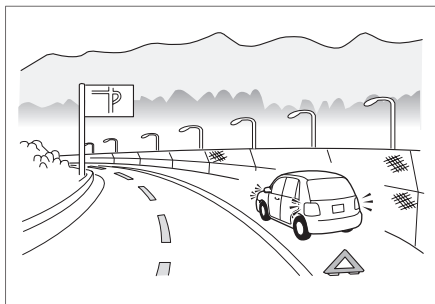

When you have to stop the vehicle by the side of the road due to malfunctions, to warn other motorists please place the triangular warning board behind your vehicle and turn on your hazard warning lamp.

Please place the triangular warning board as dictated by local traffic laws and regulations.

en.carobook.com

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.


About the spare tire

The spare tire equipped with this vehicle is a subsize tire.

⚠ WARNING

- › The subsize spare tire are supposed to be use temporarily, only when standard tire is worn. Please repair standard tire as soon as possible and replace the subsize spare tire. Otherwise, there will be potential safety hazard.
- › As the spare tire has a different from standard tire, so the vehicle height will change after installing spare tire, so make sure to driver carefully.
- › You must check the condition of the spare tire. Never install a spare tire in abnormal condition.
- › Only one spare tire should be installed on the vehicle at any time, and do not use spare tires other than the specified ones.
- › While driving a vehicle on a spare tire, keep the speed to 80km/h or less.


Storage location

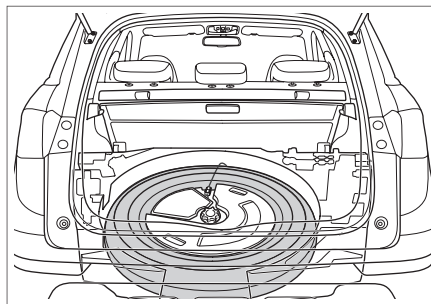


Spare tire is located on the tray below the tonneau cover. You can see it as soon as you open the tonneau cover.

How to remove and store

Type 1:

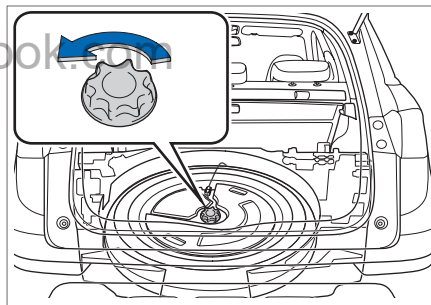


1. Rotate the handle counterclockwise to remove it.

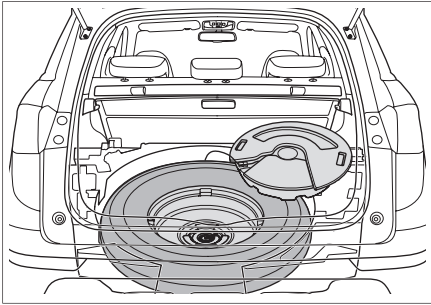

2. Move away the horn, take out the spare tire base, then remove the spare tire.
3. Put the spare tire back in the reverse order.

Type 2:

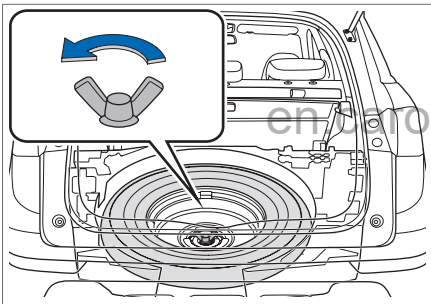

1. Rotate the fixing bolts counterclockwise, and remove the bolts together with the washers.
2. Take out the spare tire base, then remove the spare tire.
3. Put the spare tire back in the reverse order.

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Preparing for tire replacement

1. All passengers must exit the vehicle.
2. Park the vehicle on a flat, solid ground.

Park the vehicle on a hard, level place where it will not impede the normal flow of traffic and where you will be able to work safely.

3. Engage the parking brake.
4. Shut down the engine.

For MT model, shift the shift lever to R range and turn off the engine.

For AT model, shift the shift lever to P range and turn off the engine.

CAUTION

When any of the following situations occur, check if vehicle tires are punctured or have gone flat.

- › When the steering wheel vibrates;
- › When the vehicle vibrates abnormally;
- › When the vehicle is leaning at an abnormal angle.

If one or more vehicle tires bursts or goes flat during the course of the drive, please hold on to the steering wheel firmly and step gently on the brake pedal to decelerate. Emergency braking or sudden and forceful turning of the steering wheel at this juncture may lead the vehicle to go out of control.

WARNING

Do not lift the vehicle with the jack when the shift lever is in N. Otherwise, the jack will not be able to stably support the vehicle, resulting in an accident.

5. Indicate that your vehicle is stationary.

Use your hazard warning lamps and place the triangular warning board as necessary.

6. Ready the jack, jack adjustment lever, and the wheel-nut wrench.
7. Ready the tire stop.

You need to use the tire stop together with the jack.

The tire stop can be purchased at a service provider. Please contact a dealer for the relevant details.

In addition, if you do not have a tire stop handy, you can use a piece of rock large enough to stabilize the tire instead.


8. Prepare the spare tire.

⚠ WARNING

After a flat, replace the tire immediately.

Do not continue driving with a flat for any reason. Doing so can cause instability in your drive and lead to an accident. In addition, doing so can cause damage to tires, wheels, the suspension and the chassis, etc.

Replace the tires

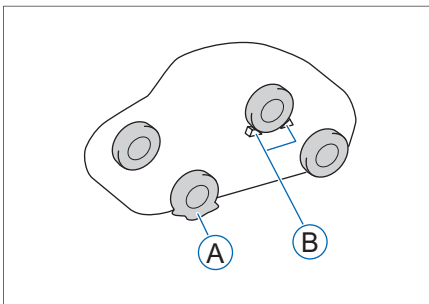


Ⓐ The tire to replace

Ⓑ Tire stop

1. Secure the tire.


Use the tire stop to hold the tire in place by positioning it diagonally.

Lock the rear wheels before lifting the front wheels, and lock the front wheels before you attempt to lift the rear wheels. The illustration above shows the situation when lifting the front left wheel.

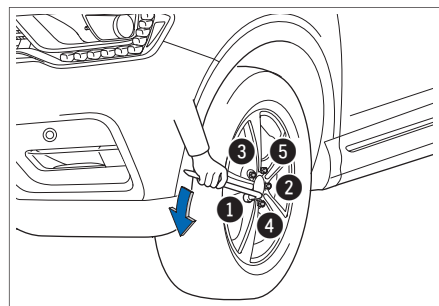

2. Loosen the nuts.


As shown in the figure, use the wheel-nut wrench to turn the nuts in a counter-clockwise direction until they are loose enough to be removed by hand. Do not remove the nuts now.

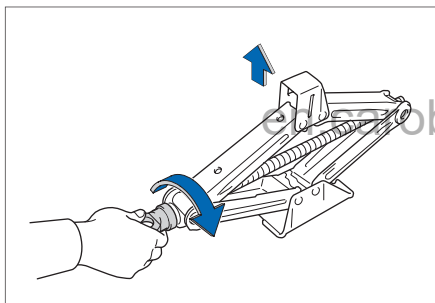

3. Adjust the height of the jack.


Place the jack on solid and flat ground.

Rotate the adjustment knob of the jack in clockwise direction, so that the jack is near to vehicle lifting position.

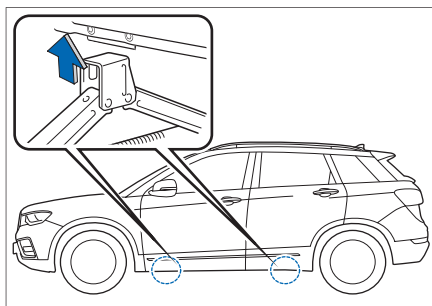


4. Place the jack at the place under the lifting position.

Adjust the position and height of the jack, ensuring that the jack has been securely fixed to the lifting position.

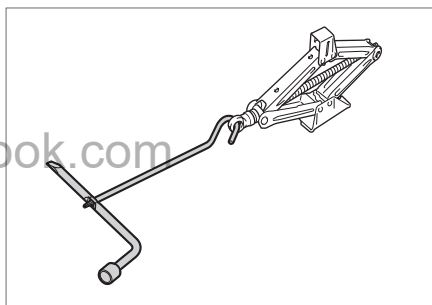

5. Install the jack adjustment lever.

Combine the jack adjustment lever and the wheel-nut wrench in the form show in the illustration above, and then insert the lever into the jack adjustment hole.

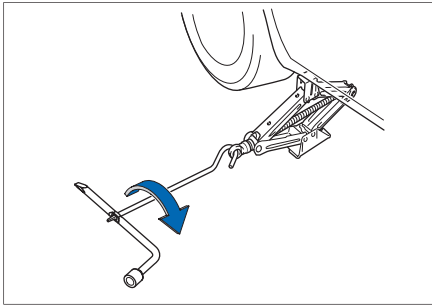

6. Raise the vehicle with the aid of the jack.

Turn the assembly in a clockwise direction to lift the tire off the ground slightly.

⚠ CAUTION

When using the jack, you should first lift the vehicle up slightly. Carefully check whether everything seems normal, and then continue raising the vehicle.

⚠ WARNING

You must observe the following when using the jack. Otherwise, the vehicle may be damaged or the jack may shift, resulting in serious injury.


- › You must turn off the engine when using jack. Failure to do so may cause the jack to shift due to engine vibrations and cause severe injury.
- › Do not use the jack when there are passengers inside the vehicle.
- › When using the jack, do not place any objects on the top or bottom of the jack.
- › When using the jack, you must ensure that the jack is in the proper lifting position.
- › The vehicle should be lifted to a height amenable to the process of tire replacement.
- › Do not climb under the vehicle after lifting the vehicle with the jack. Otherwise, should the jack shift position, you may be crushed by the underside of the vehicle, resulting in serious injuries or even death.
- › When lowering the vehicle, you must pay attention to your surroundings to avoid injury to the operator and other individuals.

7. Remove the tire.

Loosen the nuts by turning them counterclockwise. Then remove the tire.

⚠ CAUTION

When placing the aluminum wheel on the ground, please remember to position the decorated side upwards to prevent damage.

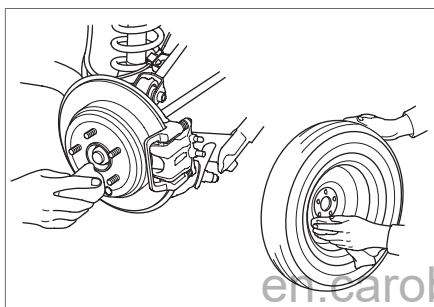

8. Install the spare tire.

Before installing the spare tire, remove any dirt that is on the tire installation surface.

⚠ WARNING

If there are dust on wheel panel and wheel inner face, nuts might loosen in during driving, leading to one or more wheels falling off and thereby causing an accident.

9. Secure the nuts temporarily.


Install the wheel nuts to secure the wheel, preventing wheels from falling off.

10. Lower the vehicle.

Lower the vehicle by turning the top of the jack counterclockwise.

⚠ CAUTION

When lowering the vehicle, you must pay attention to your surroundings to avoid injury to the operator and other individuals.

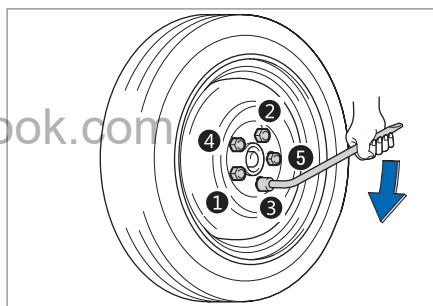

11. Tighten the nuts.

Using wheel-nut wrench, tighten the wheel nuts in the order shown in illustration.

Tightening torque: 110 ± 10 N·m.

12. Replace the tool kit, jack, and tire.

13. Check the tire pressure.

14. Please visit a service provider as soon as possible for tire-pressure system etc. initialization and adjustment.

Precautions

- › Do not use a damaged or deformed nut or tire.
- › Clamp the nut securely when using wheel–nut wrench, otherwise, injury may occur if the sleeve were to slip from the nut.
- › Do not step on the wheel–nut wrench or use other tools to over–tighten the nuts. Doing so may damage the wheel nuts.
- › Make sure that the wheel nuts have been securely tightened. Otherwise, they may become damaged or damage brake components or even lead to wheels falling off, thereby causing an accident.
- › When installing nuts for the tires, do not apply lubricant or grease. Over–tightening can damage the nuts and the wheel. A loose nut can cause the wheel to fall off during the course of the drive, leading to an accident.
- › When wheel nuts or bolts are damaged or cracked, please head to a service provider for checks. Damage or cracks can make it impossible for you to tighten nuts sufficiently, and may cause the wheel to fall off, leading to an accident in the process.
- › When changing tires, please use replacement tires of the same size (all four tires of the size specified) from the same manufacturer and of the same brand and tire tread (including groove pattern).
- › When installing aluminum wheels, please use aluminum nuts that meet the specifications. Otherwise, nuts might loosen in the course of the drive, leading to one or more wheels falling off and thereby causing an accident.
- › After changing out a tire, if you discover any steering wheel or chassis vibrations in the course of the drive, please head to a service provider for a balance check.
- › After changing out a tire, please head to a service provider as soon as possible to tighten the nuts to the correct torque specifications using the torque wrench provided.

CAUTION

Unauthorized burning of tires can lead to the release of poisonous gases. Please head to a service provider for service.

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Drive carefully on snow-covered, muddy or sandy surfaces. Drive carefully on snow-covered, muddy or sandy surfaces to guard against sinking. In cases where the vehicle is trapped, try the following steps:

1. Turn off the engine and engage the parking brake:
2. Remove any mud, sand or snow that has accumulated around the tires.
3. Place blocks of wood, stones, or other objects at appropriate places to aid tire traction.
4. Restart the engine.
5. Release the parking brake and accelerate carefully to free the vehicle.

WARNING

If the vehicle is trapped, take care of the following when attempting to free the vehicle:

- › When trying to free the vehicle by using the back-and-forth method, make sure that there are no persons or objects in the vicinity of the vehicle.
- › When trying to free the vehicle using the push method, take extra care as the instant the vehicle is freed it may move forward or backward suddenly.

CAUTION

To prevent damage to the transmission and other parts, take care of the following when pushing the vehicle:

- › For gear shift, do not depress the accelerator pedal before the transmission is completely shifted to the forward gear or reverse gear.
- › If you are unable to free the vehicle after several attempts at pushing, you may need to use other methods such as towing.

Jump starting the vehicle

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Symptoms of a drained vehicle battery

1. The starter is not turning over, or even when it does it is putting out very little power, and you are unable to start the engine.
2. The headlights are shining more dimly than usual.
3. Alarm sounds are weak or non-existent.
4. Knocking/rubbing sounds are emanating from the starter, which is not turning over.


Jump starting the vehicle

You would need to connect your battery to that of another vehicle's using jumper cables in order to jump start the engine.

The other vehicle in question must have a 12V battery.

⚠ CAUTION

Do not try to start the engine using a tow truck or by pushing the vehicle.

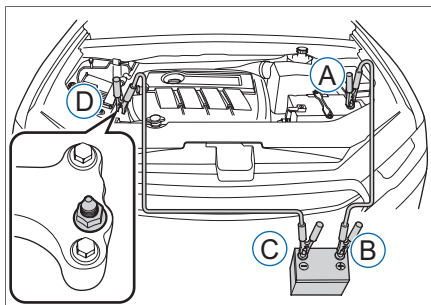

1. Connect the jumper cables.

Connect the jumper cables in the following order:

- (A) Positive terminal on drained battery;
- (B) Positive terminal on charging battery;
- (C) Negative terminal on charging battery;
- (D) Ground terminal on vehicle with drained battery (as shown in the illustration).

2. Recharge the battery.

Start the engine of the other vehicle. When engine speed is raised a little, maintain that speed for around 5 minutes to temporarily recharge the (drained) battery of your vehicle.

3. Turn on the engine of the vehicle with drained battery.

If you are still unable to start the engine, check that the jumper cables have been connected correctly, and then allow the battery to recharge a little more.

4. Disconnect the jumper cables.

Once the engine starts up, you should first remove the jumper cable from the negative terminal on the drained battery and then from the negative terminal on the battery in the other vehicle. The jumper cables should also be disconnected in this sequence.

Please keep jumper cable ends away from each other. At the same time, do not allow the jumper cables to come into contact with any metallic parts of the vehicle before they have been fully disconnected. Otherwise, short-circuiting may occur.

Notices

Ideally, the battery used for charging should have a higher charge than the (drained) battery. It should not be used to jump start vehicle otherwise. In this case, you would need to charge the battery (the drained one) for a longer period of time.

⚠ CAUTION

Make sure battery used for charging is 12V.

If your vehicle battery drains frequently please visit a service provider for checks.

⚠ WARNING

Correctly follow the steps in order, otherwise the battery may explode.


- › Do not allow the negative terminals of both batteries to come in direct contact with each other. Sparks may be produced otherwise.
- › Do not allow the positive and negative terminals to come into contact via the jumper cable during cable connection. Sparks may be produced otherwise.
- › The battery must be kept away from sparks, naked flames and flammable objects.
- › Stay away from the battery when it is recharging.
- › Sometimes, battery fluid containing sulfuric acid may leak from the battery. This substance can cause severe injury to the eyes and skin. If you come into contact with this substance inadvertently, please wash off with plenty of water and then visit a physician immediately for medical attention.
- › When connecting and disconnecting jumper cables, take care that not to into contact with the fan, strap, etc. Otherwise, there may be a risk of your hand or clothing being caught, thereby causing a serious accident.

Engine overheating

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Symptoms

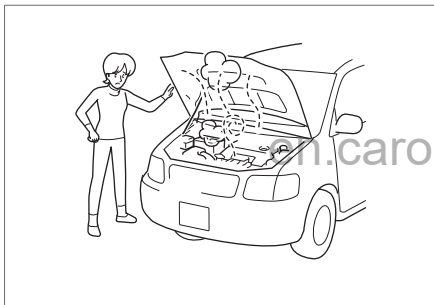

- › The water temperature gauge is in the H zone;
- › Engine is weak in acceleration;
- › There is steam emanating from the hood.

Handling method

1. Stopping the vehicle

Stop the vehicle in a safe spot and then shut down the engine. If the air-conditioning system has been turned on at this point, please turn it off too.

2. Check if steam is emanating from the engine compartment.

If on there is no steam, open up the hood and then start the engine.

If there is steam, wait until no steam comes out, then open up the engine hood and start the engine.



3. Check the cooling fan.

Make sure that the cooling fan is working. If the fan will not work, turn off the engine and contact a service provider for assistance.

4. Shut down the engine.

Shut down the engine if the water temperature indication returns to normal.

5. Check coolant levels.

After the engine cools down, open the radiator cover and check the coolant level inside the radiator. Also check whether the radiator core is dirty or dusty.

6. Replenish the coolant.

Please top up coolant if coolant levels are too low.

7. Head to a service provider for inspection.

If the water temperature gauge returns to the high-temperature-warning region again, please head to your nearest service provider for inspection as soon as possible.

Preventing overheating

To avoid engine overheating, inspect the coolant level regularly and check if there is coolant leakage.

WARNING

- › Do not open up the engine hood immediately if you see steam emanating from the engine compartment. Only do so when all the steam has gone. Otherwise, the high temperatures inside the engine compartment may cause severe injuries such as scalds.
- › When the radiator is at a higher temperature, do not open the radiator cover. Otherwise, exiting steam or hot water may cause severe injuries such as scalds.
- › When opening the radiator cover, do not touch or get close to the fan and strap. Also, open the cover slowly after covering it with a piece of cloth.
- › When the engine is running, do not touch or get close to the fan and strap. Otherwise, there is a risk of your hand or clothing becoming caught within and of severe injury as a result.
- › Do not add coolant when engine is in a overheating state. Sudden coolant top-ups can damage the engine. Top up coolant only when the engine has cooled down completely.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.


When your vehicle needs to be towed, please entrust it to a service provider whenever possible. You must also abide by all local laws and regulations regarding automobile towing.

Problems with the drive system may arise under the following circumstances. Therefore, please get in touch with a service provider before towing your vehicle.

- › When the engine is running but the vehicle cannot be driven.
- › When there are abnormal noises heard.

In need of towing


Towing with a flatbed truck

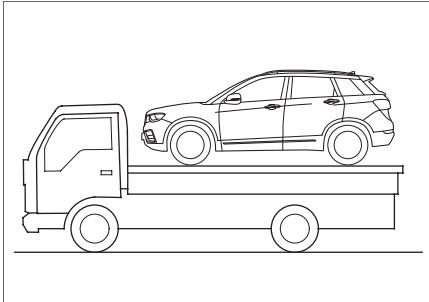


The optimal way to transport your vehicle is with the aid of a flatbed truck.

Towing with a tow hook

During emergencies, if you are unable to procure the services of a professional tow service, you may attach a tow rope or tow chain to tow it, on the premise that wheels, drive system, axles, steering system, and the brakes are in good condition. The driver must be seated inside the vehicle, operating the steering wheel and brake.

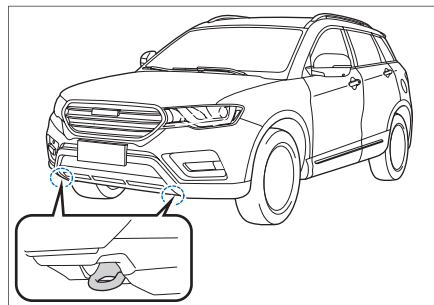

1. Find the tow hook.

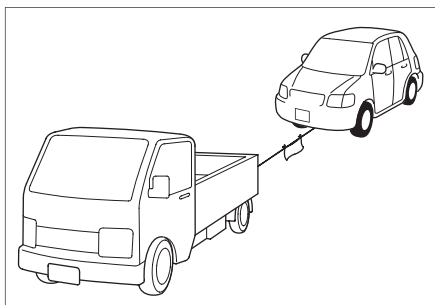

2. Hang up the rope.

Hook the rope on the tow hook. Pay attention not to damage the vehicle body. Tie a piece of white cloth in the middle of the towing rope (over 0.3 m×0.3 m).

3. Start the engine.

In case you are unable to start the engine, you must also place the ENGINE START-STOP switch in either the ACC or ON position.

4. Shift the shift lever to neutral.

5. Turn on the hazard warning light.

6. Release the parking brake, then begin to tow the vehicle.

For vehicle equipped with a manual transmission, keep the speed below 30km/h and tow for 80 km or less, during the towing process.

⚠ CAUTION

For vehicle equipped with an automatic transmission.

If the towing speed is over 20km/h or the towing distance exceeds 20 km, the drive wheels of the towed vehicle must be totally off the ground.

We recommend that wheels should be off the ground when the vehicle is being towed. Anyway, when towing a vehicle from the danger zone, please keep the speed within 20km/h.

It is forbidden to tow a vehicle reversely.

If the transmission suffers a mechanical failure, make sure to keep the drive wheels totally off the ground.

7. Pay attention to the vehicle ahead.

During the towing process, pay attention to brake lights of the vehicle before you. Avoid allowing the tow rope to become slack.

⚠ WARNING


Do not use tow rope to tow the vehicle when any of the following situations occur:

- › When the vehicle steering system is not functioning properly;
- › When the vehicle braking system is not functioning properly;
- › When wheels cannot move normally due to damage to the transmission system;
- › When the vehicle headlights/rear lights cannot function normally, or when it is working with an incomplete set of lights;
- › When driving downslope for an extended time.

⚠ CAUTION

- › Do not use a steel tow rope as that will damage the bumper.
- › Do not try to operate the vehicle when towing a vehicle in pit. Contact a service provider for towing assistance. Do not use tow hook to tow or hang the tow rope on the suspension as doing so will damage the tow hook and suspension components.
- › Vehicle in pit means vehicle is trapped in muddy, sandy or snowy ground, under which situation wheels may spin or vehicle cannot move.

Towing a broken down vehicle

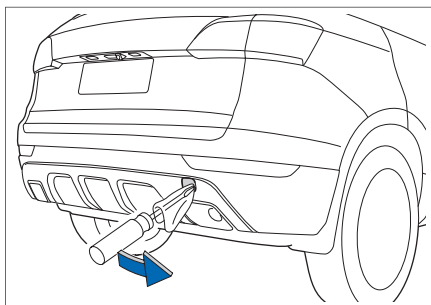


1. Open the tow hook installation hole cover plate


Wrap the head of the flathead screwdriver with a piece of light cloth, preventing damage the bumper when prying up the cover plate.

⚠ CAUTION

- › Towing a heavier vehicle is forbidden. If you tow a heavier vehicle, the drive system may be damaged, and there is a danger of damaging the tow hook and the vehicle body.
- › If the vehicle is equipped with automatic transmission, don't tow other vehicles when the ambient temperature is lower than zero degrees Celsius.

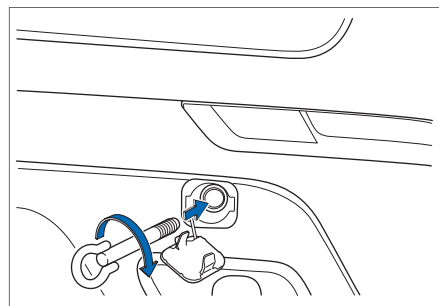

2. Install the tow hook.

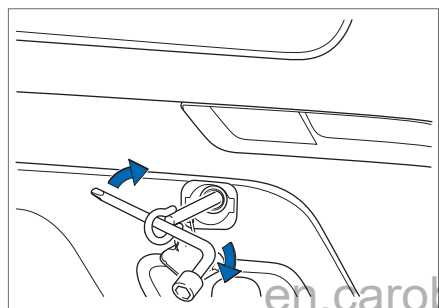

3. Tighten the tow hook with wheel-nut wrench.

en.carobook.com

5

Maintenance

Engine compartment..... 214

Fuses.....223

Lamp 225

Wiper blade 226

Tire228

Sunroof 231

Exterior maintenance.....233

Interior maintenance235

Long-term storage of the vehicle

.....237

en.carobook.com

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

WARNING

- ▷ The vehicle's engine compartment is a dangerous place to work in. Be especially careful when carrying out any work in the engine compartment.
- ▷ If you see steam or coolant coming out of the engine compartment, do not open the hood or you may be burned. Please wait until the steam or coolant is no longer coming out of the engine compartment.
- ▷ When you carry out work such as an inspection or adding oil, there is a risk of injuries, burns, and fires. Because of this, you must abide by the following precautions and general safety rules.

1. Turn off the engine;
2. Engage the parking brake;
3. Allow the engine to cool down completely.
4. Keep children away from the engine compartment.

- ▷ Do not splash oil on a hot engine. These fluids (such as the antifreeze in coolant) may start fires.
- ▷ Do not allow water to come into contact with the engine compartment. If the interior of the engine compartment is exposed to moisture, it may cause the electronics to short circuit, especially when it comes to the battery. This can lead to accidents or fires within the vehicle.
- ▷ Do not touch the radiator fan while the engine is still hot, as the fan may suddenly start automatically. Long scarves, ties, and other articles of clothing may become tangled in revolving parts, resulting in serious injury.

WARNING


- › Do not remove the radiator cover or the cover for the overflow tank while the engine is hot. There may still be some pressure inside the cooling system. Removing the radiator cover at this point may cause burns or other injuries when heated coolant spurts out.
- › To protect your face, hands, and arms from injury from steam and hot coolant, you should cover the top of the radiator cover with a large cloth before opening it.
- › If you must inspect the engine while it is running, then the revolving parts (such as the belts, generator, and radiator fan) and the high-voltage ignition will pose additional dangers.
- › If you need to perform work on the fuel system or electrical devices, you must also pay attention to the following precautions:
 1. You must disconnect the negative terminal of the battery every time;
 2. Do not smoke;
 3. Do not work near open flames;
 4. Always have a fire extinguisher ready.

CAUTION

- › Please note that oil must not be mixed while adding it. Otherwise, there will be serious functional impairments, resulting in damage to the engine.
- › Do not leave any tools, rags, or other such items behind in the engine compartment after engine maintenance or repair. Forgetting tools or rags used during cleaning or maintenance inside the engine compartment can cause accidents, and they may catch on fire due to high temperatures within the engine compartment.


Oil level

GW4C20 engine compartment layout

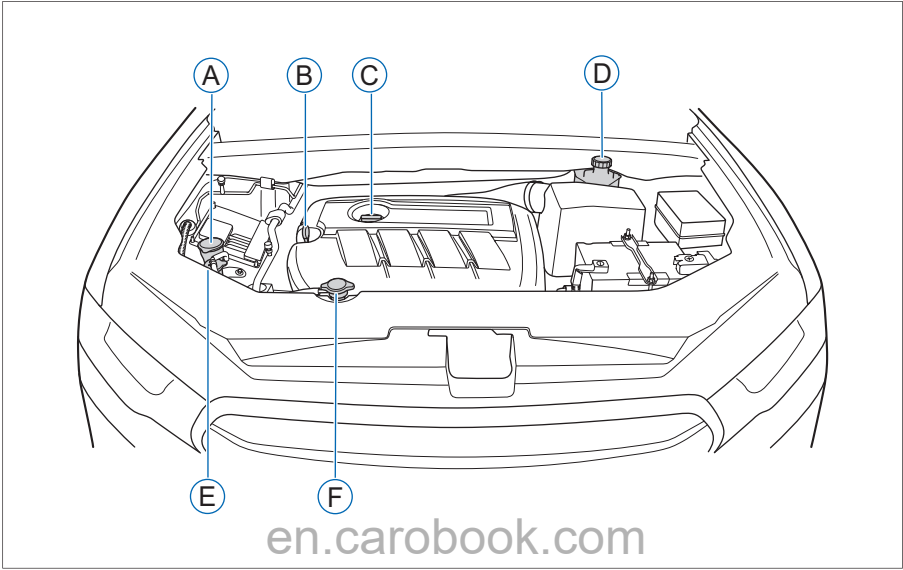

- Ⓐ Windshield-washer-fluid tank
- Ⓑ Engine dipstick
- Ⓒ Engine-oil filling-port cover
- Ⓓ Brake-fluid tank
- Ⓔ Overflow tank
- Ⓕ Radiator cover

Engine oil

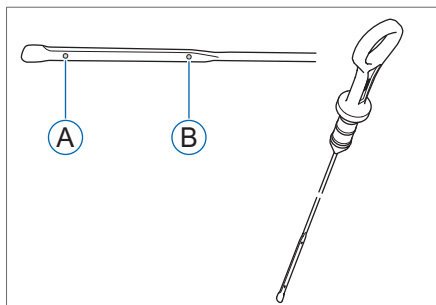

A Minimum mark

B Maximum mark

The actual size and shape of the dipstick varies by engine model.

Checks

Stop the vehicle on flat ground. Warm up the engine to normal water temperatures, and then shut down the engine. Wait for 10 minutes before conducting the engine oil level check.

The oil level should be between the maximum and minimum levels marked on the dipstick.

If the engine oil level is close to, or lower than the minimum level marked, top up engine oil until it is at a level between the maximum and minimum levels marked.

Topping up

Loosen and remove engine filler cap. Pour in engine oil slowly and with care to prevent overflow. As overflowing engine oil can damage parts within the engine compartment, please remove any overflow in a timely manner.

Recommended engine oils

Engine oil plays an important role in ensuring engine performance and longevity. Therefore, it is important that you use quality, purified oil. For your vehicle to perform best, we advise that you use the engine oils recommended by the Great Wall Motors company.

Oil additives


Your vehicle does not need any oil additives. Additives cannot improve the performance or durability of the engine.

⚠ CAUTION

We recommend that you buy the oil that your engine uses at a service provider .

Oil left inside the engine for periods of time may leak into the ground or float on water surfaces, leading to environmental pollution. Please head to a service provider for service.

Engine coolant

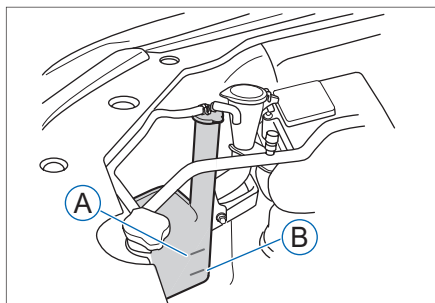

A Maximum mark (MAX)

B Minimum mark (MIN)

Checks

The water level in the radiator-overflow tank should be checked regularly.

Check that the fluid level in the overflow tank is between the minimum and maximum marked levels.

If the coolant level in the overflow tank is lower than the minimum level marked, top up with new coolant until the coolant level is between the maximum and minimum levels marked. Also make sure that the cooling system shows no signs of leakage.

Topping up


When topping up the engine coolant, make sure that you are using a coolant that meets the specifications.

If coolant splashes out, you should immediately wipe it off or wash it off with water to prevent damage to other parts within the engine compartment or to the paint.

⚠ CAUTION

Anti-freeze contains the substance ethylene glycol, which works by lowering the freezing point of the coolant. Indiscriminate disposal may lead to water pollution. Please contact a service provider if you need to replace the anti-freeze.

Brake fluid

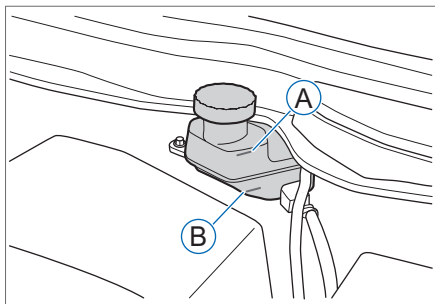

A Maximum mark (MAX)

B Minimum mark (MIN)

Checks

The fluid level in the tank should be checked regularly.

Check that the fluid level in the tank is between the minimum and maximum marked levels.

If the fluid level is below the minimum level, it means that there may be a leak somewhere in the brake system. You should check for leaks in the brake system immediately and check that the friction lining of the brakes has not been worn down.

⚠ CAUTION

The brake fluid absorbs moisture. If you use the vehicle for a long time in a region with high humidity, you should replace the brake fluid more often.


The brake fluid level should be between Min. and Max. line, and when the level drops to a position near the Min. line, the brake system malfunction alarm may be triggered due to the operations such as emergency brake, sharp turn, thus please add the brake fluid in timely when the level is low.

⚠ WARNING

- › Insufficient brake fluid levels can compromise brake performance and increase the risk of an accident.
- › Brake fluid is harmful to the human body and corrosive. If you accidentally come into contact with it, you should immediately use clean water and a neutral soap to wash the affected areas, washing them several times. If you ingest it, go to a hospital immediately.
- › If there is a label on the tag on the storage tank, it means that the contents are a synthetic brake fluid, different from the mineral based type. Using a mineral brake fluid will irreversibly damage the brake system's rubber seal rings.

Windshield-washer fluid

Checks

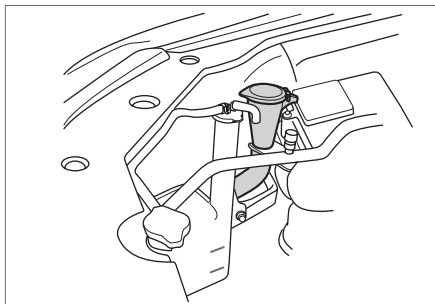

The fluid level in the tank should be checked regularly.

Check the washer fluid levels from the side of the tank, and please top up the washer fluid when levels are low.

The front and rear wipers share a single washer-fluid tank.

Topping up

You should use a quality cleaning solution for better cleaning capabilities and for anti-freeze protection in cold season.

⚠ WARNING

Do not top up cleaning liquid when the engine is at a high temperature, or when the engine is running. This is because the cleaning solution contains alcohol. Spilling the solution on the engine carries a risk of fire.

⚠ CAUTION

Do not top up liquids such as soapy water into the tank in place of the cleaning solution. Doing so can cause damage to paint surfaces.

Radiator

Check the radiator regularly and clear any debris that has accumulated.

If the radiator is especially dirty or when you cannot determine if it is working normally, please send your vehicle to a service provider for checks.

⚠ WARNING

When the engine is at a high temperature, do not touch the radiator to avoid burn injuries.

Battery

The vehicle is equipped with a maintenance-free battery.

CAUTION

When battery levels are low, please recharge it or replace with a new battery in a timely manner.

The lead and sulfuric acid in a battery require special disposal methods. The user is obliged to dispose of these materials properly.

Please head to a service provider for service if you need to replace the battery.


en.carobook.com

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.


If any electrical component does not work, a fuse may have been blown. If this happens, it is recommended to check as follows, and, if necessary, replace the fuse:

1. Turn off all electrical components.
2. Turn the ignition switch to the LOCK mode, and apply the parking brake.
3. The fuses are located at the following location:

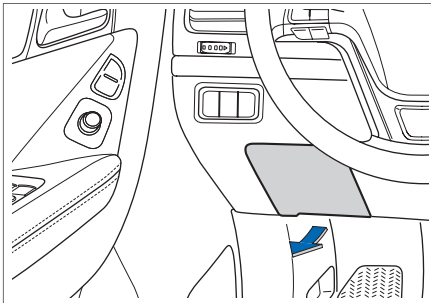

- › Inside the dashboard assembly, to the side of the driver.

Remove the cover, and you can see it.

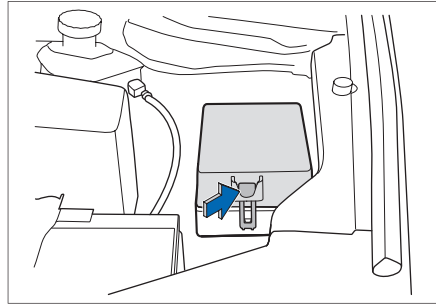


- › Located in the engine compartment, near to battery.

Press and hold the pawl, and then pull up the fuse box cover at the same time to open the fuse box.

⚠ CAUTION


- › When you open the fuse box cover, ensure that no moisture enters the box.
- › When installing the fuse box cover, make sure it is properly located on the fuse box. Otherwise, penetration of moisture or dirt will affect the use of fuses.

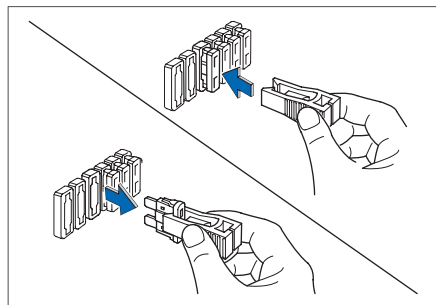

4. Use the fuse clip supplied in the vehicle to remove each fuse for detailed examination.

⚠ CAUTION

- The fuse clip is located in the fuse box within the engine compartment.
- A label is attached to the inside of the cover of the fuse box in the engine compartment and the fuse box in the instrument panel. With this label, you can determine which fuses control the electric components which stop working, and then check whether these fuses are blown.
- Before confirming that the blown fuses are the cause of a failure, you should also check all fuses and replace any blown fuse.

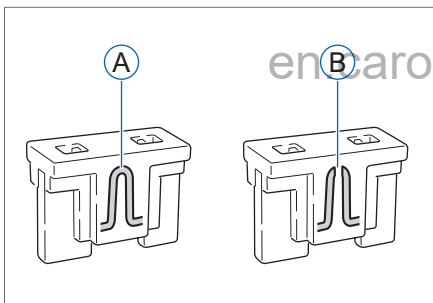

Ⓐ Normal fuses

Ⓑ Blown fuses

5. Check the wire in the fuse; if the wire has been burned out, it should be replaced with a spare fuse of similar amperage rating.

⚠ CAUTION

For a blown fuse, do not attempt to repair it or replace it with a fuse of inconsistent color or amperage rating, otherwise a fire may occur due to cable overload.

6. Check whether the electrical components are back to normal work.

⚠ CAUTION

If the spare fuse of the same amperage burns out within a short period or the electrical components do not resume normal operation, there may be a severe electrical fault somewhere within your vehicle. At this juncture, please contact a service provider for assistance in a timely manner.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

The front combination lamps on a new vehicle have been calibrated at the factory. If you carry heavy items in the luggage area frequently, the front combination lamps may need to be re-calibrated. For the calibration of the front combination lamps, go to a service provider.

Bulb inspection

You should regularly check the condition of the exterior lights. Burnt-out bulbs will lower visibility and also the vehicle's ability to signal to other motorists in the dark. This means that vehicle safety will be severely compromised under such circumstances.

About fogging in lamps

Fogging may occur inside lamp glass covers when driving during rainy weather or when the vehicle is being washed. This is due to the temperature difference between the inside and outside of the lamp. This is the same phenomenon as glass fogging during rainy weather, and has no impact on functionality. However, when a significant amount of water or water vapor accumulates inside the lamp glass cover,

please contact a service provider for assistance.

Replacing bulbs

Bulbs should be replaced by a professional.

Normally, you should not replace damaged bulbs yourself, and should allow a professional to perform this job. The primary reason is: before replacing the bulbs you must remove other parts from the vehicle, especially so for those bulbs that can only be removed from inside the engine compartment. Because of this, we recommended that you visit a service provider to replace the bulbs.

⚠ WARNING

- › The inside of the bulbs is pressurized, and there is a danger of injury as they may burst during replacement.
- › If your vehicle is equipped with gas-discharge bulbs (xenon lamps), work involving high-voltage parts must be performed correctly. Otherwise, your life will be in danger.
- › It is absolutely forbidden to modify vehicle external lighting and signaling equipment.
- › It is forbidden to add external lighting and signaling components beyond what is in the standard specifications.

⚠ CAUTION

To avoid damage to the external lamp shade, never use chemical solvents or aggressive cleaning agents to clean it.

Wiper blade


⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

You should regularly check the condition of the wiper blades. Replace wiper blades immediately if you discover the following:

- › There are cracks or signs of hardening in the wiper blade;
- › There are wiper marks left or signs that the wiper is not clearing windshield glass fully.


Replacing the front wiper blade

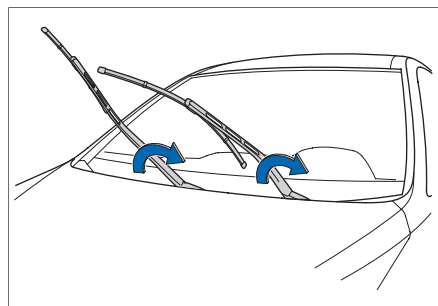

1. Lift the wiper arm from the windshield.


⚠ CAUTION

- › Do not open the hood while the wiper arm is lifted. Doing so can cause damage to the engine hood and wiper arm.
- › Never place the wiper arm directly on the windshield as it is capable of scratching the glass.

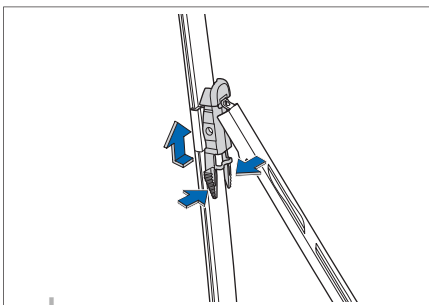

2. Rotate the wiper blade while pressing the two locking pieces to remove the blade from the wiper arm.
3. Place the tip of the wiper arm into the groove of the new blade.
4. Rotate the blade towards the wiper arm until the locking piece inserted.
5. Before putting the wiper assembly back to the windshield, check if the blade is properly fixed on the wiper arm.


Replacing the rear wiper blade

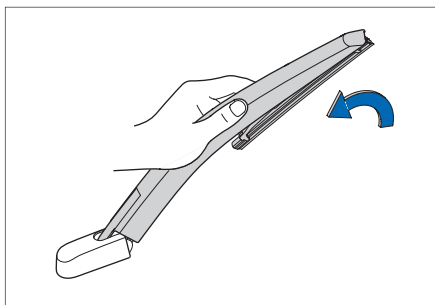

1. Lift the wiper arm from the windshield.


CAUTION

Never place the wiper arm directly on the windshield as it is capable of damaging the windshield glass.

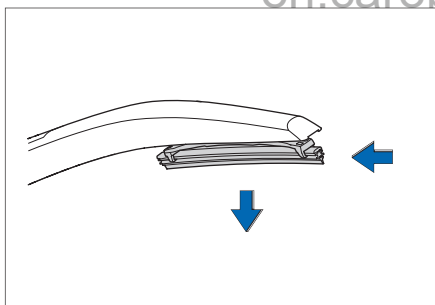

2. Remove the old blade.

Pull the center of the wiper blade outwards to bend the wiper blade. Then, push the blade inwards at the end to release the blade from the U-shaped recess. Then proceed with removing the blade.

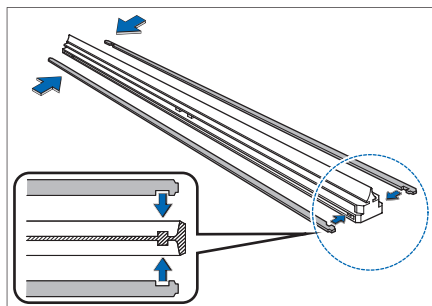

3. Inspect the new blade.

If the new blade does not come with a metal reinforcer, please remove the metal reinforcer from the old blade and then insert it into the groove at the side of the new blade.

4. Install the new blade.

Insert the new blade via the U-shaped recess on the wiper arm.

5. Return wiper arm onto windshield.

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

To ensure a safe drive, make sure that the tires used suit your vehicle and that they possess a good tread and appropriate tire pressure.

WARNING

The use of worn tires or tires with insufficient tire pressure can lead to accidents, injury and even death.

Tire inspection

When checking tire inflation state, you should also check that there is no external damage, embedded foreign objects or excessive wear, etc.

Replace your tires as soon as possible if you discover the following situation:

1. There is damage and bulging in the tire surface or side.

Replace your tires when you discover any of the following.

2. There is excessive wear to the tire surface.

You should replace your tires immediately if the tire cord is visible.

Tire pressure.

1. Tires with insufficient internal pressure wear out in an irregular pattern. Insufficient tire pressure also impacts the handling of the vehicle and fuel consumption, and may cause tires to go flat due to overheating.
2. Over-inflated tires can lead to an uncomfortable ride as well as damage to the tire due to uneven road surfaces, as well as uneven wear to the tires.

Maintaining appropriate tire pressure levels can maximize vehicle handleability, tire life and drive comfort.

We recommend that you conduct a visual inspection of the tires on a daily basis. If you feel that tire pressure in a given tire is overly low, measure internal pressure using a pressure gauge immediately.

Measure tire pressure at least once a month using the pressure gauge. The tire pressure in normal tires can go down by 10 to 20 kPa every month. Remember to check the spare tire when inspecting all tires.

CAUTION


For your convenience, the recommended cold-state tire pressure levels are stated in the label on the driver's side of the door.

Tire pressure should be measured when tires are in a cold state. This means that you should measure tire pressure at least 3 hours after your last drive or when the vehicle has traveled no more than 1.6km. When necessary, you should inflate or deflate the tire to achieve the appropriate tire pressure.

When checking tire pressure after the tire has been warmed up (after a drive), the pressure reading will be 30 to 40 kPa higher than the cold-state reading. This is normal. Do not deflate the tire to achieve recommended cold-state pressure levels at this point as this will lead to insufficient tire pressure levels.

You should have a pressure gauge handy in order to check tire pressure levels. This way, you will be able to better determine if your tires are properly inflated.

Tire wear

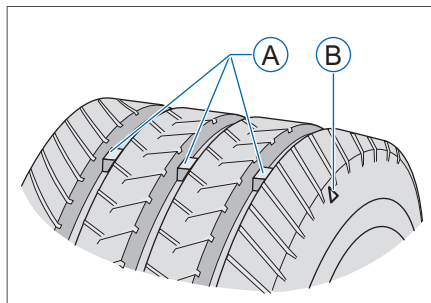

- Ⓐ Tire wear mark
- Ⓑ Tire wear mark location

You must replace tires immediately once they have been worn down to the maximum tolerable limit.

If you continue to use tires with shallow treads or where the tire wear mark has appeared, it will lead to situations such as longer braking distances, difficulties in steering and cracked tires and possibly accidents as a result.

⚠ CAUTION


The diagram above is provided to facilitate the process of explanation and differs from the actual state of affairs.

In addition to proper inflation, the correct tire alignment also aids in reducing tire wear. If you discover uneven tire wear, please head to a service provider to check on tire alignment.

If you detect continuous vibrations in the course of the drive, please head to a service provider for a tire check.

You must perform tire balancing once tires have been replaced. When installing new tires, tire balancing must be performed to ensure ride comfort and to prolong tire use life.

Tire rotation

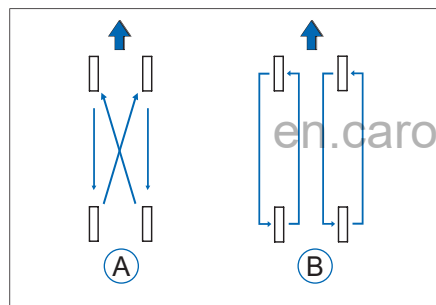

- (A) Non-directional tires and wheels
- (B) Directional tires and wheels

To prolong tire use life and to ensure even tire wear, please follow the illustrated instructions when performing tire rotation.

⚠ CAUTION

After tire rotation, adjust tire pressure to recommended levels.

If tire pressure levels are lower than recommended levels, the vehicle's stability will be affected. Further, tires will also wear out unevenly. In addition, tires may burst when the vehicle is traveling at high speeds. This is extremely dangerous.

⚠ CAUTION

If you need to change out tires or wheels, or to install wheel nuts, please contact a service provider for assistance.

For vehicles equipped with the tire pressure monitoring function, you would need to re-initialize the system after tire rotation. For details, please contact a service provider .

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Frequency of routine maintenance

The frequency of routine maintenance depends on driving conditions as well as the frequency of sunroof use.

If you are driving through sandy areas or areas with high rainfall levels, it is recommended that you increase the frequency of routine maintenance.

⚠ CAUTION

Insufficient maintenance can lead to sunroof leaks. You should adjust maintenance frequency based on your specific use patterns. For instance; in sandy zones or during seasons when there is higher usage, you should increase the frequency of routine maintenance.

Routine maintenance procedure

Open the sunroof fully and check that the left and right guide rail drainage channels

are not encrusted with dust and dirt. If there is any dust and/or dirt present, use a piece of clean cloth to wipe such material off the guide rails gently.

Open up the sunroof and check that the glass panel does not show signs of being obstructed in the course of operation. If you spot such signs, please head to a service provider nearby for maintenance services.

⚠ CAUTION

- › Do not apply silicone sealant to any part of the sunroof under any circumstances.
- › When the sunroof malfunctions, please head to a service provider as soon as possible for servicing.
- › After leaving the vehicle overnight following a drive in a cold zone, do not try to force open the sunroof to prevent damage to the sunroof motor and/or panel seals. You must wait for the interior temperature to rise and for the glass seals and sunroof opening to defrost before you try to open the sunroof. In addition, open the sunroof after washing the vehicle in cold season. Use a piece of soft, dry cloth to wipe dry the panel seals before moving off.
- › The sunroof must be closed fully before the vehicle enters a car wash facility. Do not allow water jets to be pointed directly at the glass panel seals. Doing so will help to prevent the seals from becoming deformed from the force of the water jet.

CAUTION

- › During sunny weather, use a soft piece of cloth and non-sticky cleaning solution to wipe and clean glass surfaces in a shaded area.
- › When driving on bumpy roads or in hilly areas, do not open the sunroof fully for extended periods of time as the vibrations may cause damage to sunroof components.
- › During the rainy season, you should step up checks for any sand or dust embedded in the glass panel seals and remove them in a timely manner to ensure that the seals continue to work well.

en.carobook.com

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Vehicle cleaning

Regular vehicle cleaning can help in the maintenance of the appearance of the vehicle. Dust and sand grains can damage the paint surface while fallen leaves and bird droppings can take the shine off the paint surface.

Wash your vehicle in a shady spot and not under direct sunlight. If the vehicle has been parked under direct sunlight for some time, you must move the vehicle to a shaded place before cleaning.

CAUTION

Chemical dissolvents and strong cleaning solution can cause damage to the paintwork as well as metal and plastic components of the vehicle.

How to clean

- › Check that there are no fallen leaves, bird droppings, etc., on the vehicle body.

Use cloth or cleaning solution to remove such items. Then, wash immediately with water to prevent damage to the paintwork.

- › Wash the vehicle thoroughly with water to remove surface dust.

Clean your vehicle using the solution and a soft brush, sponge, or a piece of soft cloth.

Fill a bucket with water. Add automobile detergent to make a solution. Repeat wash the vehicle from the roof to the lower part.

- › After washing and cleaning the entire vehicle, use a dedicated wipe cloth or towel to dry off the vehicle.

Allowing the vehicle to dry out naturally can cause the vehicle to lose its luster or the formation of water stains.

When wiping down the vehicle, check that there are no scratches on the paintwork. As these locations are susceptible to rust, once you discover them you must repair them with refinishing paint.

⚠ CAUTION

After washing the vehicle or driving through flooded areas, step on the brake pedal lightly to make sure that the brake is functioning normally.

- › Wet brake pad do not perform as well as they should, with accidents more unlikely under such circumstances.
- › When brake performance has been compromised, the driver must take especial care with the vehicle surroundings while stepping gently and repeatedly on the brake pedal in order to warm up the brake until full brake performance has been recovered.

Waxing

You should wax the vehicle body and all metal parts in order to prevent surface water accumulation on the exterior of the vehicle. After waxing, any water on the vehicle surface will form water droplets.

You should only wax the vehicle after you have cleaned it thoroughly and dried it. Use a good quality liquid or paste wax product. Refer to product instructions during use.

Wax products can be categorized into two main types: body wax and polishing wax.

Body wax

It is a kind of wax product that is applied on the paint surface to protect paintwork from direct sunlight, air pollution, etc. This wax should be applied on newly acquired vehicles.

Polishing wax

Polishing wax, cleaning solution or paraffin mixtures can bring luster back to paintwork that has been oxidized or otherwise deteriorated. This type of wax typically contains a gentle abrasive and a dissolvent to remove the surface of the paintwork.

If you are unable to restore luster with body wax you should then apply polishing wax.

Removing debris such as asphalt and insects with a cleaning solution can cause wax stripping. Remember to reapply wax on portions of the vehicle where wax has been rubbed off, even if the rest of the vehicle does not require such work.

Repairing paint surfaces

Check for scratches in the paintwork on a regular basis. If you discover such instances, you should repair them immediately to prevent rusting of the exposed metal.

Repair Paint Surface should only be used to repair small sections of paint. For significant damage to the paintwork, please contact a painting professional for assistance.

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

CAUTION

Bringing water or other liquids into contact with the interior electrical components is forbidden, as this may damage the electrical components.

Carpeting

Vacuum clean the carpeting regularly to remove accumulated dust and dirt. Over-accumulation of dust and dirt can accelerate the deterioration of the carpeting.

You can keep your carpeting clean and fresh by cleaning it regularly with a cleaning solution. Use foam-type cleaning solution with the carpeting. To keep carpeting as dry as possible, do not add water to the foaming cleaning solution.

CAUTION

If you are not using floor mats manufactured by HAVAL Motors, make sure that they are of the right dimensions.

Textiles

Vacuum clean interior textiles regularly to remove accumulated dust and dirt.

Clean with a gentle soap solution and then air dry. To remove stubborn stains, use a textile cleaner.

Before using the cleaner for the first time, perform a patch test on an inconspicuous part of the textile to make sure that the product does not bleach or color the textile.

Please follow all product instructions that have come with the textile cleaner.

Leather

Vacuum clean regularly to remove any accumulated dust and dirt, especially where there are folds and seams.

You may use a soft piece of cloth dipped in water to clean leather surfaces. Then, use another piece of soft cloth to wipe dry and polish. If you require further cleaning, you can use a cleaning solution designed for the cleaning of leather surfaces.

After wiping with a leather cleaner, follow up with a piece of soft and dry cloth to clean off any residue as quickly as possible. Never allow a leather cleaner to sit on any interior surface for extended periods of time. Certain leather cleaners can cause the resin or fibers in interior textiles to fade or break up.

Vehicle window

Use a glass cleaner to clean the inside and outside surfaces of window glass.

Finally, use a piece of soft cloth or paper towel to dry all glass and plastic surfaces.

CAUTION

The rear defroster apparatus is located on the bottom of the rear windshield, on the inside. Forceful and careless wiping can cause the apparatus to shift position or even break. Therefore, when wiping the rear windshield, you should wipe gently in a left-right motion.

Seat belt

If the seat belt is dirty, you may clean it using a gentle soap solution. Do not use bleach, dyes or other cleaning solution on the seat belt. Use of these products can undermine the durability of the seat belt.

Allow seat belts to dry out naturally before moving off.

Too much dust in the seat belt guide ring can cause the seat belt to retract more slowly than it is designed to.

Use a clean piece of cloth and gentle soapy water to clean the inside of the guide ring.

VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

You should park the vehicle in a position where you can ameliorate the current situation and where you will be able to restart the vehicle. If possible, please park the vehicle indoors.

If you need to store the vehicle for an extended period (one month or longer), please take the following steps beforehand:

1. Adding fuel.
2. Clean and dry vehicle exterior thoroughly.
3. Clean vehicle interior, making sure that the carpeting and floor mats, etc., are completely dry.
4. Release the parking brake, and use wheel chock to stop front and rear wheels.
5. Open windows on one side slightly (if the vehicle is to be parked indoors).
6. Disconnect the battery negative terminal or remove the battery.

7. Lift the wiper arm, and use a towel or piece of cloth to cushion the wiper arm from the windshield glass.
8. To reduce the risk of sticking, silicone lubricant should be applied on all door seals.
9. Use a vehicle cover made of porous cotton to cover the vehicle. The use of plastic covers can cause water accumulation and damage to paintwork.
10. When possible, run the engine for short periods from time to time until it reaches operating temperature.

Try to run the engine at least once a month.

en.carobook.com

6

Technical data

Vehicle identification	240
Overall parameters	242
Power parameters.....	245
Chassis parameters	246
Oil specifications.....	248
Bulb specifications.....	252


en.carobook.com

Vehicle identification

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.


Vehicle identification No.

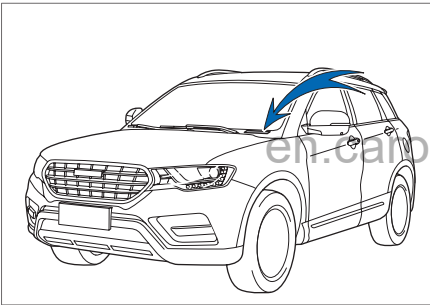

The Vehicle Identification No. [VIN] is unique to every vehicle.


This number is engraved in three locations: the vehicle plaque, the upper left of the instrument panel, and the horizontal beam under the front passenger seat.

Vehicle nameplate

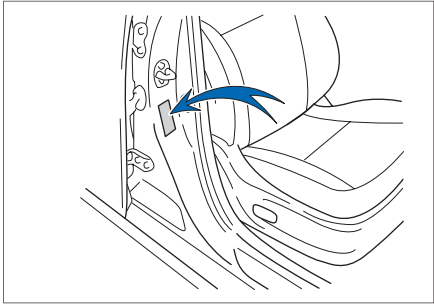

The certification label is installed on the bottom of the lock catch of central strut in the position shown in the illustration.

Engine serial number

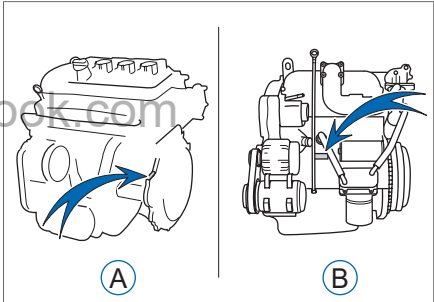


(A) GW4C20 engine

(B) GW4D20D engine

The engine serial number is engraved on the engine cylinder. See above figure for detailed position.

Color code label

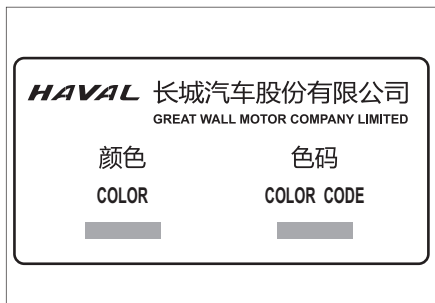

The color code label is located on the passenger side C-pillar of the vehicle, whose contents consist of the color, color code and plant.

Color — stands for the color of the vehicle.

Color code — stands for the brevity code which constitutes the color of the vehicle.

en.carobook.com

Overall parameters

Item			Values		
Vehicle model No.			CC6450UM10	CC6450UM30	CC6450UM11
Engine model			GW4C20	GW4C20	GW4C20
Transmission model			CM61	CS19	6DCT451
Drive mode			2WD	4WD	2WD
Dimensions	Overall di- mensions	Length (mm)	4549	4549	4549
		Width (mm)	1835	1835	1835
		Height (mm)	1700	1700	1700
	Track	Front (mm)	1565	1565	1565
		Rear (mm)	1565	1565	1565
	Wheelbase (mm)		2720	2720	2720
	Front suspension (mm)		944	944	944
	Rear suspension (mm)		885	885	885
	Approach angle (°)		24	24	24
	Departure angle (°)		27	27	27
Mass	Total mass (kg)		2210	2280	2235
	Kerb mass (kg)		1700,1745	1769	1725,1769
	Front and rear axle load (full load,kg)		1110/1100	1130/1150	1135/1100
Performance	Minimum ground clear- ance (mm)		145	145	145
	Maximum gradeability(%)		30	50	30
	Top speed (km/h)		190	190	190
	Fuel consumption(L/100 km)		9.7	9.7	9.8
	Emission level		Euro V	Euro V	Euro V
	Permitted number of passengers		5	5	5

⚠ CAUTION

The above parameters maybe different from your vehicle based on the vehicle mod-
el,please refer to the vehicle formal document.

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Engine

Model	Type	Displacement (L)	Maximum net power (kW)	Rated power / rotational speed (kW/rpm)	Maximum torque / speed (N•m/ rpm)
GW4C20	Turbocharged gasoline engine	1.967	140	145/5200	310/2000~3600

Transmission

Model	Type	Primary reduction ratio	Transmission ratio
CM61	6MT	4.500 (I, II, III, IV)	I: 3.471, II: 1.920, III: 1.229, IV: 0.907, V: 0.949, VI: 0.791, R: 3.882
CS19		3.375 (V, VI, R)	
CM55	6MT	3.950 (I, II, III, IV)	I: 3.933, II: 1.960, III: 1.229, IV: 0.907, V: 0.949, VI: 0.791, R: 4.400
CS14		3.039 (V, VI, R)	
6DCT451	6DCT	4.533 (I, II, III, IV) 3.091 (V, VI, R)	I: 3.818, II: 2.150, III: 1.407, IV: 1.029, V: 1.188, VI: 0.971, R: 5.283

Chassis parameters

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Item			Values	
Tire	Standard tire	Specification	225/65R17 102H	225/55R19 99H
		Front tire pressure (kPa)	220±10	
		Rear tire pressure (kPa)	220±10	
	Spare tire	Specification	T155/90R18 113M	
		Tire pressure (kPa)	420±10	
	Tire chains	Type	TPU polyurethane tire chain thickness lower than 15 mm	
		Installation location	Front tires	
Wheel	Wheel balancing	One-sided weight (g)		≤10
		Two-sided weight total (g)		≤15
	Wheel alignment	Rear wheel	Rear wheel camber	-43' ± 30' (Difference between left and right wheels ≤ 30') (2WD); -54' ± 30' (Difference between left and right wheels ≤ 30') (4WD)
			Rear wheel toe-in	2' ± 15' (Difference between left and right wheels ≤ 15') (2WD); 6' ± 15' (Difference between left and right wheels ≤ 15') (4WD)
		Front wheel	Kingpin backwards inclination	2.7° ± 45' (Difference between left and right wheels ≤ 36')
			Front wheel camber	17' ± 30' (Difference between left and right wheels ≤ 30')
			Front wheel toe-in	0' ± 5' (Difference between left and right wheels ≤ 5')
			Kingpin inwards inclination	12°44' ± 30' (Difference between left and right wheels ≤ 30')

Item			Values
Standard value on inspection	Brake Pedal	Free travel (mm)	8.2 ± 1
	Clutch Pedal	Free travel (mm)	12.5 ± 2.5
	Front brake disk	Minimum thickness (mm)	26
	Rear brake disk	Minimum thickness (mm)	10
	Brake pad (friction material)	Minimum thickness (mm)	2

en.carobook.com

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Engine oil

The engine oil plays an important role in ensuring engine performance and longevity. Therefore, it is important that you use a quality oil. We strongly recommend that you visit a service provider to change out engine oil to achieve optimal engine performance.

Selection of GW4C20 engine oil

You may refer to the table below to select the appropriate oil by API (American Petroleum Institute) grade (quality grade + viscosity grade). E.g.: In areas with temperatures of -30 degrees Celsius, you should choose oils graded SM 5W-40.

If there are no recommended oils for the area that you are residing in, please refer to product viscosity grades to select a high-quality oil.

Item	Data			
Ambient temperature	Above -30 degrees Celsius		Lower temperature	
Class	SM	SN	SM	SN
	Recom-mended	Higher class	Recom-mended	Higher class
	Low —→ High		Low —→ High	
Viscosity grade	5W-40		0W-40	
Capacity (L) (Reference value)	Only replace the oil: 5.0 ± 0.1 Replace both oil and oil filter: 5.5 ± 0.1			

If you are selecting from oils that use ACEA (European Automobile Manufacturers' Association) grading specifications, we recommend that for environments of temperature -30 degrees or higher you use oils graded A3/B4 5W-40. If you are residing in an area with lower temperatures, we suggest that you use oils graded A3/B4 0W-40.

Recommended oil types and capacity

Oil Type	Specification	Capacity (L) (reference value)
Transmission oil (MT)	GL-4 75W-80/GL-4 75W-90 (non-high-temperature zones); GL-5 140 (high-temperature zones)	2.8 ± 0.2
Transmission oil (6DCT)	BOT341	7.3 (7 L for transmission, 0.3 L for oil cooling system)
Transfer case oil (4WD)	GL-5 75W-90 (extreme cold zones) GL-5 80W-90 (ordinary zones) GL-5 140 (high-temperature zones)	0.8 ± 0.05
Rear axle (4WD)	GL-5 75W-90 (extreme cold zones) GL-5 80W-90 (ordinary zones) GL-5 140 (high-temperature zones)	1 ± 0.1
Brake fluid	DOT4 synthetic brake fluid	0.81 ± 0.06 (MT) 0.74 ± 0.05 (6DCT)
Coolant (Exclude overflow tank)	Ethylene-glycol based -35 (ordinary zones); Ethylene-glycol based -35 (high-temperature zones); Ethylene-glycol based -45 (high-altitude, low-temperature regions)	7.4 ± 0.5 (GW4D20D) 5.8 ± 0.4 (GW4C20+MT) 6.15 ± 0.4 (GW4C20+6DCT)
Wind-shield-washer fluid	--	2.7 ± 0.1

Oil Type		Specification	Capacity (L) (reference value)
Fuel	Gasoline model	Unleaded gasoline rated 95 or above	58
	Diesel model	No. 0 light diesel oil (where the lowest temperature is 4 degrees Celsius or higher); No. -10 light diesel oil (where the lowest temperature is -5 degrees Celsius or higher); No. -35 light diesel oil (where the lowest temperature is -29 degrees Celsius or higher).	58

en.carobook.com

Bulb specifications

⚠ VEHICLE EQUIPMENT

Please note that this manual contains all the standard, country-specific and special equipment for the model series. Therefore, some equipment or functions described in this manual may not be fitted on your vehicle, or are available only in certain markets. For specific configuration information, please refer to the relevant sales information or consult your dealer.

Item	Specification	Power (W)
High beam lamp	H1	55
Low beam lamp	H7	55
Low beam lamp	D8S	25
Front Fog Lamp	H8	35
Rear Fog Lamp	P21W	21
Front position light	LED	--
Daytime running lamp	LED	--
Rear position lamp 1 (position light)	LED	--
Rear position lamp 2 (back door lamp)	LED	--
Front turn signal lamp	PY21W	21
Side turn signal lamp	LED	--
Rear turn signal lamp	PY21W	21
Brake lamp 1 (position light)	P21W	21
Brake lamp 2 (back door lamp)	P21W	21
Reverse lamp	P21W	21
License-plate lamp	LED	--
High level brake lamp	LED	--
Foot lamp	C3W	3
Storage box lamp	C3W	3
Boot light	C3W	3
Reading light	LED	--
Side ceiling lamp	LED	--
Door lights	LED	--



Index

Alphabetical index.....254

Indicator lamp index256

en.carobook.com

Alphabetical index

A

Airbag 166
Air-conditioning system 60
Air purifier 65
Anti-lock Braking System 128
Ashtray 73
Atmosphere lamp 55
Automatic parking 88
Automatic transmission vehicles 93

B

Beam level adjustment 54
Blind-spot detection system 114
Blind-spot visualization system 112
Bottle holder 68
Brake Assist System 128
Bulb inspection 225
Bulb specifications 252

C

Ceiling lamp 55
Chassis parameters 246
Child restraint system 174
Child safety lock 28
Cigarette lighter 72
Coat hook 70
Cruise control system 120

D

Dashboard brightness adjuster 54
Daytime running light 52
Driving in adverse conditions 98
Driving norms 76

E

Economical driving 81
Electronic Brake-force Distribution system 128
Electronic Parking Brake (EPB) 87

Electronic Stability Program 128
Engine compartment 214
Engine electronic immobilizer system 183
Engine overheating 206
Engine serial number 240
Exterior rearview mirror 45

F

Follow-me-home function 53
Four wheel drive system 125
Front armrest 41
Front armrest storage box 68
Front cup holder 67
Front fog lamp auxiliary lighting 53
Front passenger side storage box 69
Fuel shutoff system 190

H

Hazard warning lights 52
Hill descent control system 123
Hill-start Hold Control system 129
Hood 36
Horn 59
How to adjust 37

I

Ignition switch 82
Indicator lights, warning lights 135
Information-center control switch 145
Instrument panel 133
Intelligent Stop-Start System 116
Interior rearview mirror 44

J

Jump starting the vehicle 204

L

Lighting-control 49

Locking and unlocking vehicle doors 23
Luggage hook 70

M

Manual transmission vehicles 90

O

On-board tool kit 192
Open and close the back door 25
Opening and closing vehicle windows 30
Overall parameters 242

P

Parking lamp 52
Passive Entry and Passive Start System 20
Power parameters 245

R

Reading light 55
Rear armrest storage box 69
Rear cup holder 68
Refueling 35
Replacing tires 197
Reverse video 110
Roof rack 48
Run-in period 97

S

Safety labels 186
Seat belt 160
Seats 37
Seat warming 42
Shifting prompt 91
Spare tire 195
Spectacle case 69
Starting and shutting down the engine 84
Steering wheel 47
Sunroof 32

Sun visor 67

T

Tire Pressure Monitoring System 104
Towing 208
Traction Control System 129
Trip computer interface 146

V

Vanity mirror 67
Vehicle identification No. 240
Vehicle immobilizer system 184
Vehicle nameplate 240
Vents 63

W

Warning tones 158
Windshield-wiper switch 56

en.carobook.com

Indicator lamp index



Engine oil pressure warning
135



Front fog lamp indicator 135



Rear fog lamp indicator 135



Lighting-on indicator 135



Braking system fault warning
lamp 135



Parking brake indicator 135



Cruise control indicator 136



Engine malfunction indicator
136



Transmission overheat warn-
ing lamp 136



Water temperature warning
light 136



Vehicle immobilizer system
indicator 136



Water separator indicator
136



EPS malfunction indicator
137



Turn signal lamp and hazard
warning lamp 137



Parking Indicator 138



Anti-lock braking system (ABS)
malfunction warning light 138



Charging warning lamp 139



High beam indicator 139



Position indicator 139



Brake system warning light
139



Warning lamp for air bag
fault 140



Engine maintenance indica-
tor 140



ESP indicator 141



Driver seat belt unfastened
warning light 141



Tire Pressure Monitoring
System (TPMS) warning light
141



ESP OFF indicator [141](#)



Warning lamp for low fuel level [142](#)



Intelligent Stop-Start System ON indicator [142](#)



Engine preheating indicator [142](#)



120km/h warning lamp [142](#)



Auxiliary-airbag OFF warning lamp [143](#)



Front passenger seat belt unfastened warning lamp [143](#)

oncarobook.com

en.carobook.com

en.carobook.com

en.carobook.com

en.carobook.com