IDENT.

Assembly guide

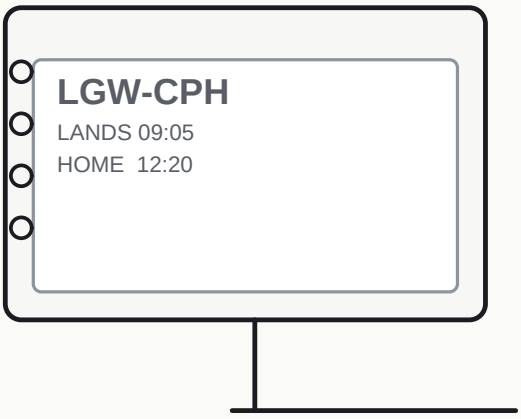

No soldering. No special tools.

About an hour, most of it waiting.

ident.xpdr.aero

What's in front of you

Lay everything out and check it off. You also need the things in the box at the bottom.

Inky Impression display

7.3" recommended. 4.0" and 13.3" also work. Glass — handle by the edges.

x 1



Raspberry Pi Zero 2 W

Must be the version WITH header pins already fitted ("WH").

x 1

microSD card

16-32GB. You'll also need a way to plug it into your computer.

x 1



Power supply

Micro-USB for a Pi Zero. A Pi 4 or 5 needs USB-C instead.

x 1

Also needed

Your licence key (IDNT-..., from your order email) and a computer that can read an SD card.

Your phone, and your home Wi-Fi name and password.

No tools. If you find yourself reaching for a screwdriver or a soldering iron, stop and check the parts list.

Before you start

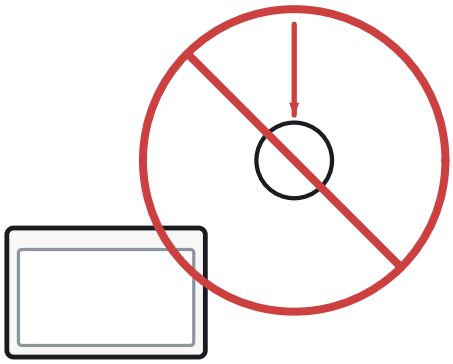

Don't press on the screen.

It is glass and it will crack.

Hold both boards by their edges.

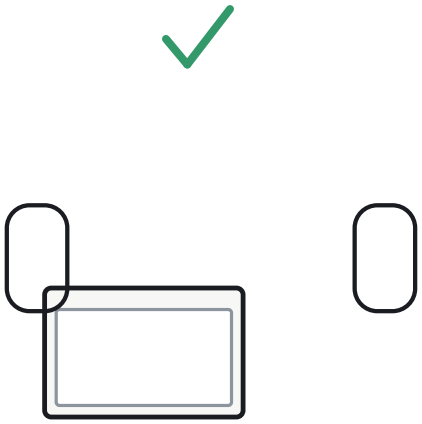

Hold it like this.

Edges only, both hands.

Check your Wi-Fi first

Some Pis, such as the Zero 2 W, only do 2.4GHz Wi-Fi.

They cannot see 5GHz networks. The Pi 3 A+ and Pi 4 can see both.

If your router only broadcasts 5GHz, or hides both bands behind one name and pushes devices onto 5GHz, a 2.4GHz-only Pi will never connect.

Turn 2.4GHz on first. Not sure which Pi you have? Do it anyway.

1 Put Ident on the memory card

On your computer, not the Pi.

Open your order email and click Download the SD card image.

It is about 1 GB. Keep it as it is: do not unzip it.

Then write it to the card with Raspberry Pi Imager (raspberrypi.com/software):

- **Open** Imager, with the card in your computer.
- **Choose Device** your Pi model.
- **Choose OS** scroll down to Use custom, then pick the file you downloaded.
- **Choose Storage** your SD card. Check it is the card, not another drive.
- **Write** If it asks about settings, say No. Wait until it says it is done.

Writing erases the card.

Bought the SD card from us? It already has Ident on it. Skip this page and start at step 2.

2 Fit the display to the Pi

Power off. Line up the pins. Press straight down.

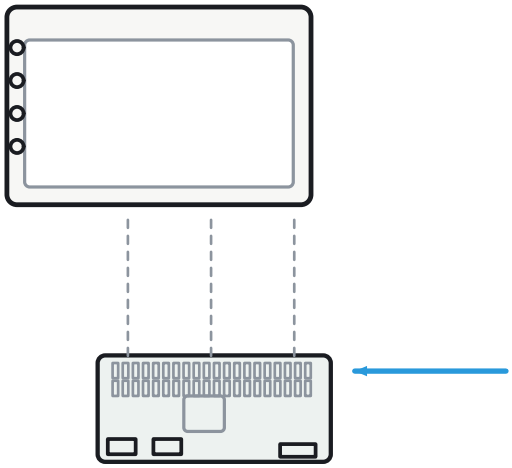

all 40 pins engaged

no pin left over at either end

Right

Every pin in its socket.

Boards parallel, no gap at

one end. Pressed home evenly.

Wrong

Offset by one row, or one

pin hanging over the end.

Check both ends before pressing.

If the kit came with standoffs, use those screws — longer ones can crack the glass.

3 Card in, power on

The two sockets look identical. Only one of them works.

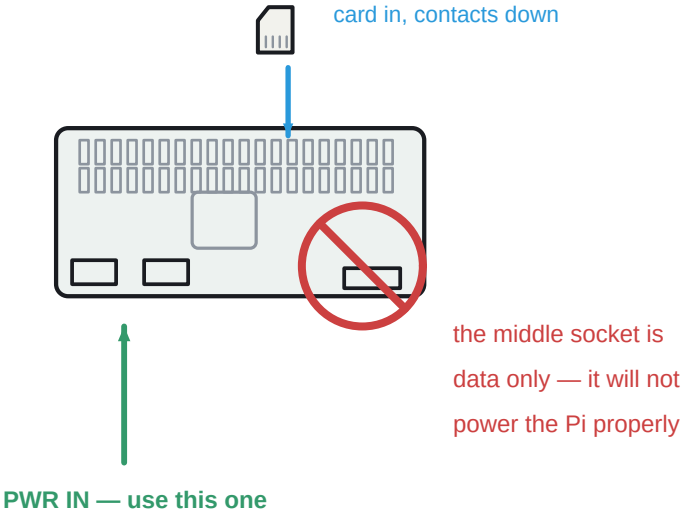

Now wait 3 to 5 minutes.

It does not know your Wi-Fi yet, so after about two minutes it starts its own network called Ident-Setup. A flickering green light is normal.

The screen may stay blank for now. That is expected at this stage.

4 Join Ident-Setup from your phone

The display makes its own Wi-Fi network for this. Nothing to install.

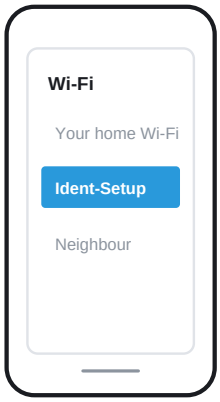

1 On your phone, open Settings > Wi-Fi.

2 Join the network called **`Ident-Setup`**

3 Its password is **`identsetup`**

It is the same on every display, and it is meant to be public.

Your phone may say there is no internet. That is expected: stay connected.

Then, in your phone's browser, go to:

`10.42.0.1:8080`

A page called Connect your display opens. If it says to connect to your home Wi-Fi first, that is exactly what you are doing.

- **Choose** your home Wi-Fi from the list. A 2.4GHz-only Pi (Zero 2 W) lists only 2.4GHz networks.
- **Type** its password, then press Connect.
- **Then** Ident-Setup switches off and your phone drops off it. Rejoin your own Wi-Fi.

5 Finish setting up

Now on your own Wi-Fi, same as the display. No cables, no typing of code.

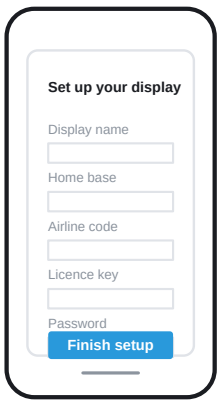

In any browser, go to:

`ident.local:8080`

Fill in the setup page and press Finish setup. Then add it to your home screen: Share > Add to Home Screen. It opens full screen with its own icon.

Can't reach it? Use the display's IP address from your router's device list, with :8080 on the end.

What to enter

- **Display style** — Pick the look you like. You can change it any time.
- **Display name** — Anything. "Kitchen". Useful if you build a second one.
- **Home base** — Your base airport code, e.g. LGW.
- **Airline code** — Two letters, e.g. U2.
- **Roster calendar** — Your crew .ics link. Can be left blank and added later.
- **Licence key** — From your order email: IDNT-XXXX-XXXX-XXXX-XXXX. Checked online.
- **Login** — A username and a password of at least 6 characters. It locks the panel.

Done

Within a minute or two the screen draws your duty. It takes about 30 seconds to redraw — that is how colour e-paper works, and it is why the display uses almost no power.

The four buttons

A on / off

B change style

C contrast

D next duty

If it shows the wrong day

It has lost Wi-Fi. The Pi has no battery clock, so it freezes on the last date it knew. Reconnect it.

Stuck?

Every question we get asked is answered at ident.xpdr.aero/faq

If yours isn't there, the support form is at ident.xpdr.aero/support