State Transition Test for UT1, UT1A, UT1B, UT1C

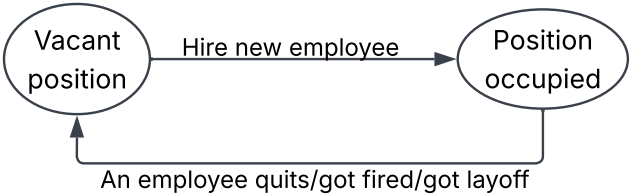

State Transition Test for UT1D


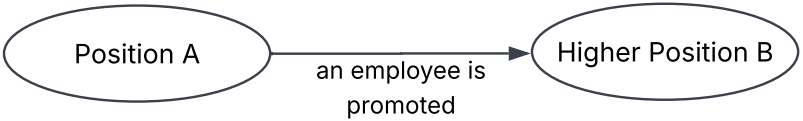
State Transition Test for UT1E