

AD 2 AERODROMES

Note: The following sections in this chapter are intentionally left blank: AD-2.4, AD-2.7, AD-2.11, AD-2.15, AD-2.16, AD-2.19, AD-2.20, AD-2.21, AD-2.23

RPVV AD 2.1 AERODROME LOCATION INDICATOR AND NAME**RPVV - FRANCISCO B. REYES PRINCIPAL AIRPORT (Class 2)****RPVV AD 2.2 AERODROME GEOGRAPHICAL AND ADMINISTRATIVE DATA**

1	ARP coordinates and site at AD	120719N 1200603E.
2	Direction and distance from (city)	27KM from the town proper.
3	Elevation/Reference temperature	45M AMSL.
4	Geoid undulation at AD ELEV PSN	Nil.
5	MAG VAR/Annual Change	1.1°W (2014) / 2.2' increasing.
6	AD Operator, address, telephone, telefax, telex, AFS	Civil Aviation Authority of the Philippines Francisco B. Reyes Airport Coron, Palawan 5316 Phone: (048) 723-2886
7	Types of traffic permitted (IFR/VFR)	VFR.
8	Remarks	Nil.

RPVV AD 2.3 OPERATIONAL HOURS

1	AD Operator	0000 - 0900.
2	Customs and immigration	Nil.
3	Health and sanitation	Nil.
4	AIS Briefing Office	Nil.
5	ATS Reporting Office (ARO)	2200 - 1000.
6	MET Briefing Office	Nil.
7	ATS	0000 - 0900.
8	Fuelling	Nil.
9	Handling	Nil.
10	Security	Nil.
11	De-icing	Nil.
12	Remarks	Airport Operations: 2200 - 1000.

RPVV AD 2.5 PASSENGER FACILITIES

1	Hotels	At the town proper.
2	Restaurants	At the town proper.
3	Transportation	At the town proper.
4	Medical facilities	At the town proper.
5	Bank and Post Office	At the town proper.
6	Tourist Office	At the town proper.
7	Remarks	Nil.

RPVV AD 2.6 RESCUE AND FIRE FIGHTING SERVICES

1	AD category for fire fighting	CAT VI.
2	Rescue equipment	Two (2) Fire trucks [Oshkosh (6000 liters) and DAEWOO (3600 liters)].
3	Capability for removal of disabled aircraft	Nil.
4	Remarks	Nil.

RPVV AD 2.8 APRONS, TAXIWAYS AND CHECK LOCATIONS/POSITIONS DATA

1	Apron surface and strength	Surface: MACADAM. Strength: PCN 33.
2	Taxiway width, surface and strength	Width: Nil. Surface: MACADAM. Strength: PCN 33.
3	Altimeter checkpoint location and elevation	Nil.
4	VOR checkpoints	Nil.
5	INS checkpoints	Nil.
6	Remarks	Nil.

RPVV AD 2.9 SURFACE MOVEMENT GUIDANCE AND CONTROL SYSTEM AND MARKINGS

1	Use of aircraft stand ID signs, TWY guide lines and visual docking/parking guidance system of aircraft stands	Nil.
2	RWY and TWY markings and LGT	Side markers, Angular markers, SWY, Distance-to-go-markers and windcone assembly.
3	Stop bars and RWY guard lights	Nil.
4	Other RWY protection measures	Nil.
5	Remarks	Nil.

RPVV AD 2.10 AERODROME OBSTACLES

In approach/TKOF areas			In circling area and at AD		Remarks
1			2		3
RWY/Area affected	Obstacle type Elevation Markings/LGT	Coordinates	Obstacle type Elevation Markings/LGT	Coordinates	
a	b	c	a	b	
08/26 APCH	Trees	Nil	Hills	Nil	Nil

RPVV AD 2.12 RUNWAY PHYSICAL CHARACTERISTICS

Designations RWY NR	TRUE BRG	Dimensions of RWY	Strength (PCN) and surface of RWY and SWY	THR coordinates RWY end coordinates THR geoid undulation	THR elevation and highest elevation of TDZ of precision APP RWY	Slope of RWY-SWY
1	2	3	4	5	6	7
08	084.00°	1225M X 30M	PCN 33 R/B/W/T CONC/ MACADAM	120716.97N 1200542.50E	52M	0.15% downhill towards RWY26
26	264.00°	1225M X 30M	PCN 33 R/B/W/T CONC/ MACADAM	120720.71N 1200622.81E	50M	

SWY dimensions	CWY dimensions	Strip dimensions	RESA dimensions	Location/ description of arresting system	OFZ	Remarks
8	9	10	11	12	13	14
40M X 30M	100M X 100M	1800M X 100M	Nil	Nil	Nil	Nil
100M X 30M	100M X 100M	1800M X 100M	Nil	Nil	Nil	Nil

RPVV AD 2.13 DECLARED DISTANCES

RWY Designator	TORA	TODA	ASDA	LDA	Remarks
1	2	3	4	5	6
08	1225M	1325M	1265M	1225M	C A O W W
26	1225M	1325M	1325M	1225M	C A O W W

RPVV AD 2.14 APPROACH AND RUNWAY LIGHTING

RWY Designator	APCH LGT type, LEN, INTST	THR LGT colour, WBAR	VASIS, (MEHT), PAPI	TDZ, LGT LEN
1	2	3	4	5
08	Nil	Nil	Nil	Nil
26	Nil	Nil	PAPI Left 3.0°	Nil
RWY Centre Line LGT Length, spacing, colour, INTST	RWY edge LGT LEN, spacing, colour, INTST	RWY End LGT colour, WBAR	SWY LGT LEN, colour	Remarks
6	7	8	9	10
Nil	Nil	Nil	Nil	Nil
Nil	Nil	Nil	Nil	Path WID: 0.33°. VIS RG: 5 Miles. VER OBST CLR: >1.0°. Horizontal OBST CLR: ±10° FM RWY CL. DIST FM THR: 176M.

RPVV AD 2.17 ATS AIRSPACE

1	Designation and lateral limits	BUSUANGA AERODROME TRAFFIC ZONE (ATZ): A circle radius 5NM centered on 120719N 1200603E (ARP).
2	Vertical limits	ATZ: SFC up to but excluding 3000FT.
3	Airspace classification	B.
4	ATS unit call sign Language(s)	Busuanga Tower. English.
5	Transition altitude	Nil.
6	Hours of applicability	Nil.
7	Remarks	Nil.

RPVV AD 2.18 ATS COMMUNICATION FACILITIES

Service Designation	Call Sign	Frequency	Hours of operation	Remarks
1	2	3	4	5
TWR	Busuanga Tower	126.7MHZ 5447.5KHZ 3834KHZ	2200 - 1000	PRI FREQ. G/G PRI FREQ. SRY FREQ (Manila Network).

RPVV AD 2.20 LOCAL AERODROME REGULATIONS

1. Local Flying Restrictions

- 1.1 To provide one way flow of air traffic between Francisco B. Reyes Airport (Busuanga) and Ninoy Aquino International Airport (NAIA), flight should flight plan via the following route:
- a. RPVV to RPLL
- Join AWY TELEN W3 OLRAX M646 MIA
 - b. RPLL to RPVV
- MIA M646 until OLRAX

RPVV AD 2.22 FLIGHT PROCEDURES

1. Arrival and Departure Procedures

1.1 VFR Procedures in RWY 08

1.1.1 Departure

- a. Southeast Bound - After airborne, make a straight out departure, turn right towards Southeast of the airport. Report and exit via DIWARAN ISLAND (16NM) or as instructed by ATC.
- b. Southwest Bound - After airborne, make a left downwind departure. Request ATC clearance to cross over the station at 2500FT AGL or above. Fly Southwest bound report and exit via MANGLET ISLAND (11.4NM) or as instructed by ATC.
- c. North Bound - After airborne, turn left turn and fly towards East of CLUB PARADISE RESORT (7NM) then report and exit via East of DUMANPALIT ISLAND (15NM) or as instructed by ATC.
- d. Northeast and East Bound - After airborne, make a straight out departure fly towards NAPUSCUD (9NM) then exit South of TARA GROUP OF ISLANDS (18NM).

1.1.2 Arrival

- a. From the Southeast - Arriving aircraft shall fly towards CORON TOWN Proper (9.8NM) and report 5NM Southeast. Request for ATC clearance to cross the station to join downwind or as instructed by ATC.
- b. From the Southwest - Arriving aircraft shall fly towards HUMA ISLAND (12.4NM) turn right towards SALVACION (9.7NM). Report 5NM Southeast and request to join final of RWY08 or as instructed by ATC.
- c. From the North - Arriving aircraft shall fly towards West of DUMANPALIT ISLAND (15NM) and continue towards West of CLUB PARADISE RESORT (7NM). Report 5NM North of the airport and request to join downwind of RWY08 or as instructed by ATC.
- d. From the Northeast and East - Arriving aircraft shall fly towards TARA GROUP OF ISLANDS (18NM) and continue towards North of MALAWIG POINT (9NM). Report 5NM Northeast of the airport and request to join downwind of RWY08 or as instructed by ATC.

1.2 VFR Procedures in RWY 26

1.2.1 Departure

- a. Southeast Bound - After airborne, make a right downwind departure. Request to cross final RWY26 then request to fly Southeast of the airport. Report 5NM Southeast and exit via DIWARAN ISLAND (16NM) or as instructed by ATC.
- b. Southwest Bound - After airborne, make a right downwind departure. Request ATC clearance to cross over the station at 2500FT AGL or above. Fly Southwest bound report and exit via MANGLET ISLAND (11.4NM) or as instructed by ATC.
- c. North Bound - After airborne, make a right downwind departure then fly North. Report 5NM North and exit via East of CLUB PARADISE RESORT (6.8NM) and continue towards East of DUMANPALIT ISLAND (15NM).
- d. Northeast and East Bound - After airborne, make a right downwind departure, then fly towards NAPUSCUD ISLAND (9NM) and continue to Southeast of TARA GROUP OF ISLANDS (18NM) or as instructed by ATC.

1.2.2 Arrival

- a. From the Southeast - Arriving aircraft shall fly towards CORON TOWN Proper (9.8NM) and report 5NM Southeast. Then continue to fly towards the station and to request clearance to cross midfield and join the downwind of RWY26 or as instructed by ATC.
- b. From the Southwest - Arriving aircraft shall fly towards HUMA RESORT (12.4NM) turn right towards SALVACION (9.7NM). Report 5NM Southeast and request to join downwind of RWY26 or as instructed by ATC.


- c. From the North - Arriving aircraft shall fly West of DUMANPALIT ISLAND (15 NM) and continue towards West of CLUB PARADISE RESORT (6.8 NM). Report 5 NM North of the airport and request to join downwind of RWY 26 or as instructed by ATC.
- d. From the Northeast and East - Arriving aircraft shall fly towards TARA GROUP OF ISLANDS (18 NM) and continue towards Northeast of MALAWIG POINT (9 NM). Report 5 NM and join downwind or final of RWY 26 or as instructed by ATC.

VFR
AREA
CHART

AERODROME ELEV
148 FT

TWR - 126.7

CORON/F. B. REYES (RPVV)

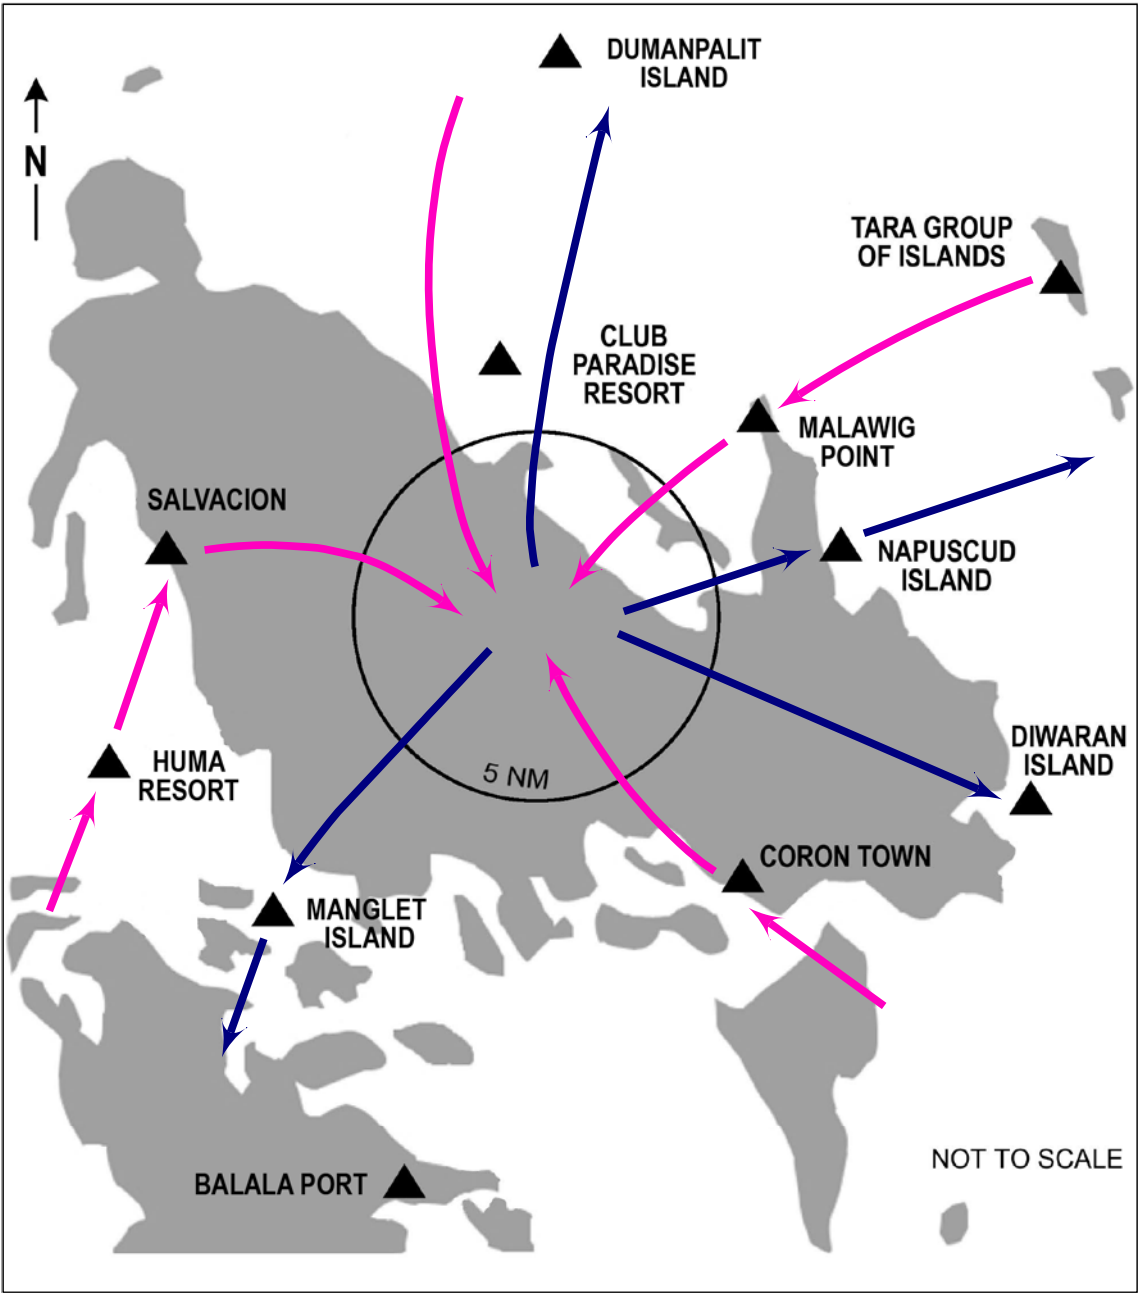

LEGEND	
ARRIVAL	
DEPARTURE	
VFR REPORTING POINT	

RPVV AD 2.24 CHARTS RELATED TO AN AERODROME

TITLE	Page
Traffic Circuit Chart (RWY08)	RPVV AD 2 - 11
Traffic Circuit Chart (RWY26)	RPVV AD 2 - 12

INTENTIONALLY
LEFT
BLANK

TRAFFIC
CIRCUIT
CHART


AERODROME ELEV
148 FT

TWR - 126.7

CORON/F. B. REYES (RPVV)

RWY 08

CHANGES: ALT and Puerto Princesa APP FREQ Deleted. OBST HGT.

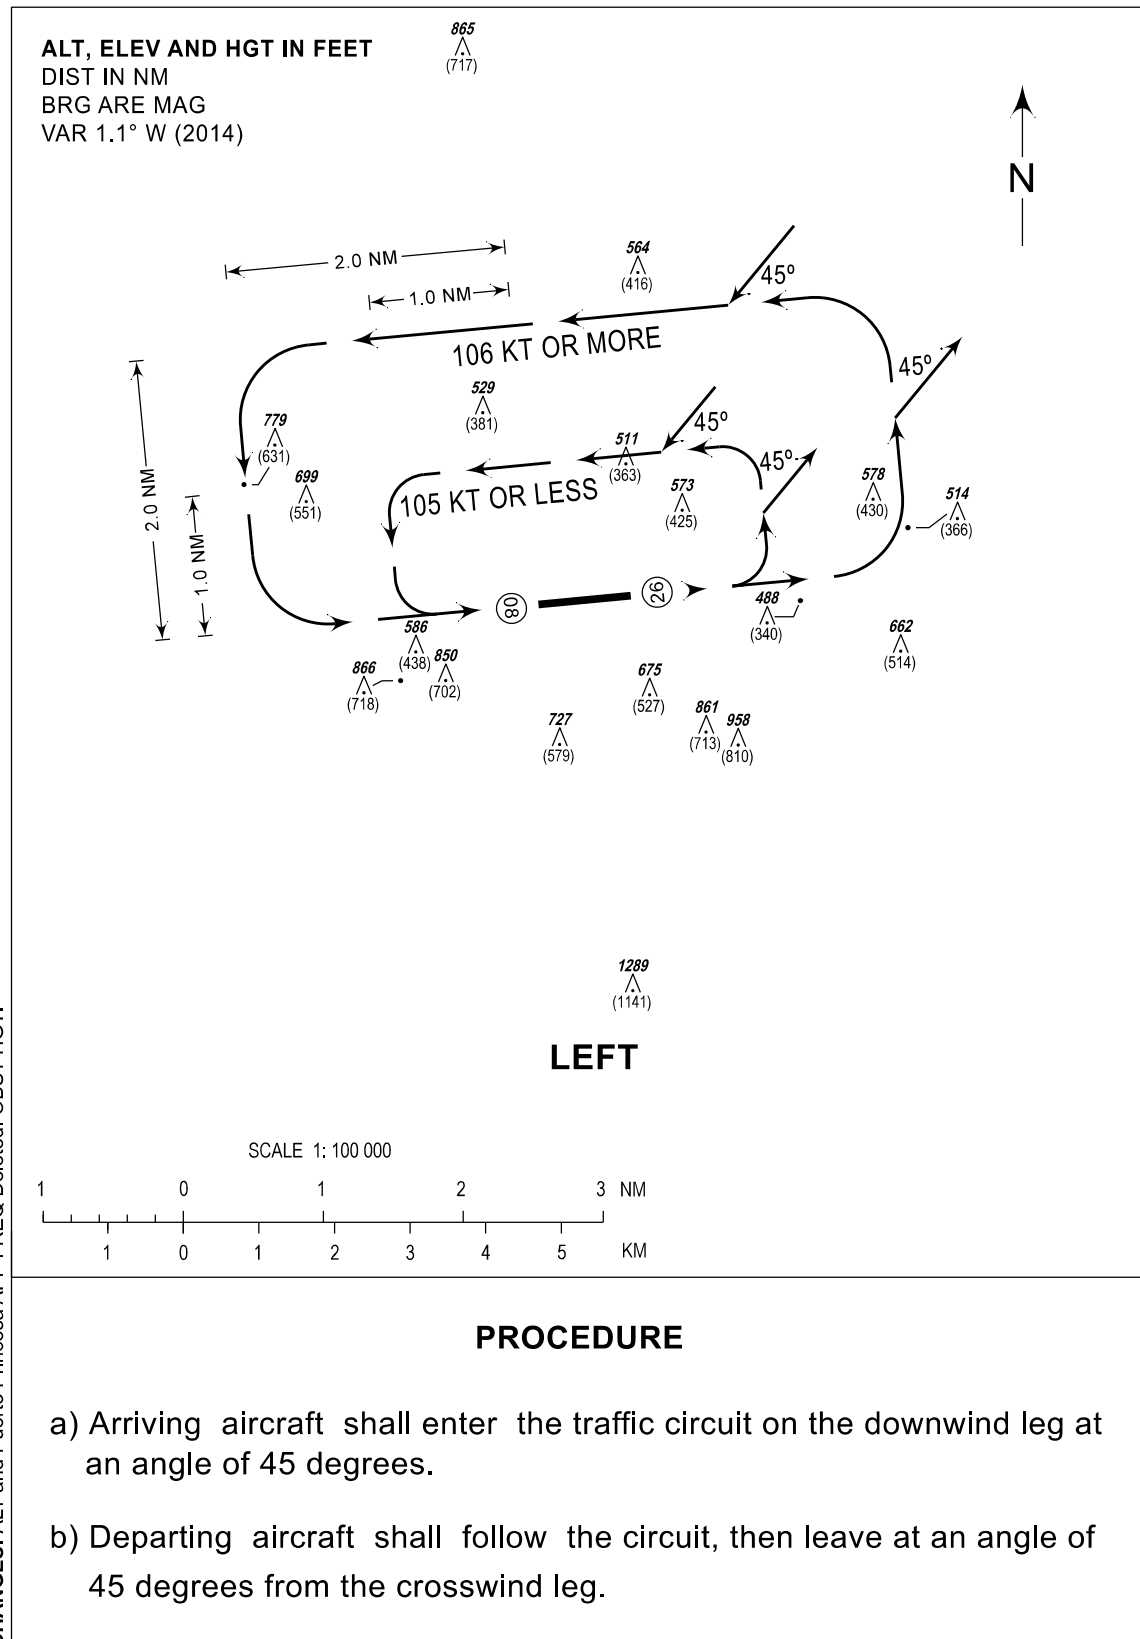

TRAFFIC
CIRCUIT
CHART


AERODROME ELEV
148 FT

TWR - 126.7

CORON/F. B. REYES (RPVV)

RWY 26

CHANGES: ALT and Puerto Princesa APP FREQ Deleted. OBST HGT.

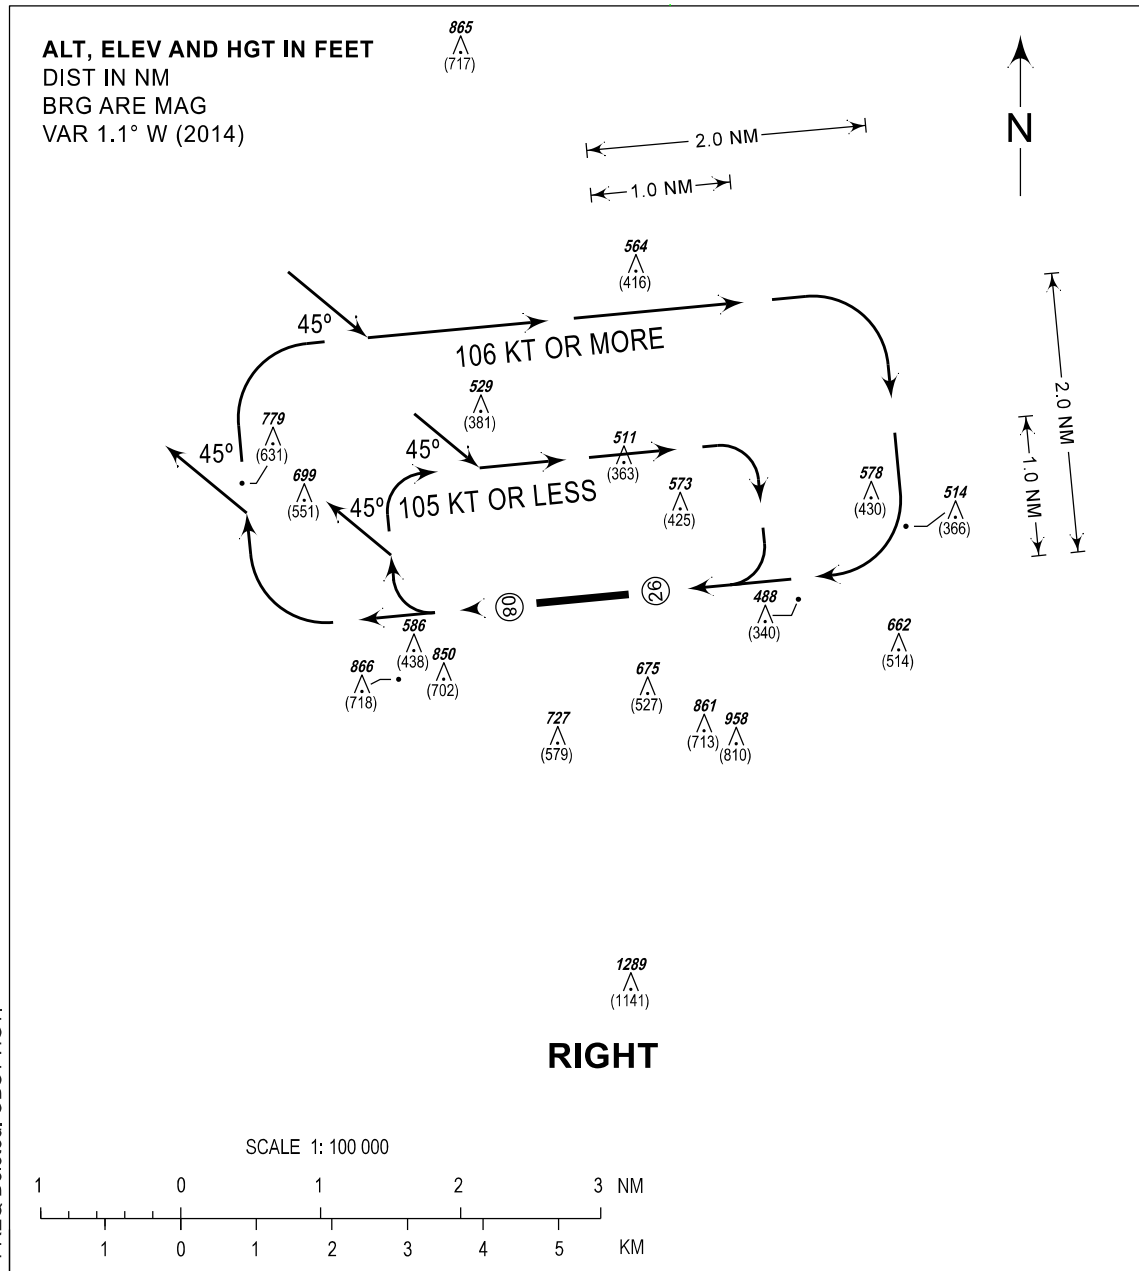

PROCEDURE

- Arriving aircraft shall enter the traffic circuit on the downwind leg at an angle of 45 degrees.
- Departing aircraft shall follow the circuit, then leave at an angle of 45 degrees from the crosswind leg.