

AC BOX 的使用

描述:

透過 RSC server 使用 AC BOX 進行 AC cycles 測試。

前置作業:

1. SWBOX 已完成與 TiB server/RSC server 網路環境的架設。



2. 將分配出來的網路線連接至被測機台 SUT。




3. 將 Power cable 接至 AC BOX 插座上並記錄編號 (圖 3)
-157 是指 SWBOX 編號 -3 是指 port.




AC BOX 執行步驟:

1. 點選 RSC server > 桌面 RscVespa “ 圖示。

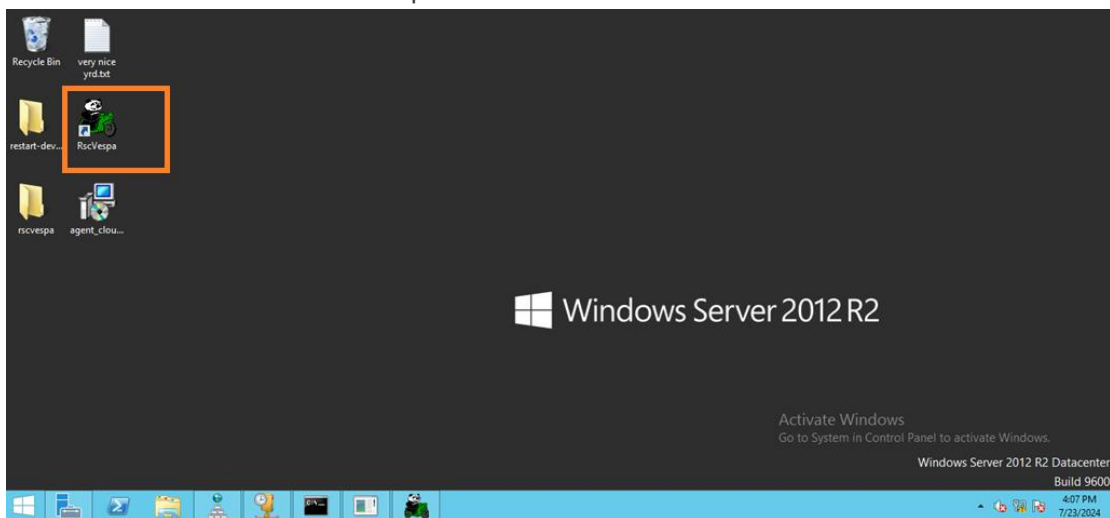

2. 點選 SUT Configuraton > 輸入被測機台 IP。

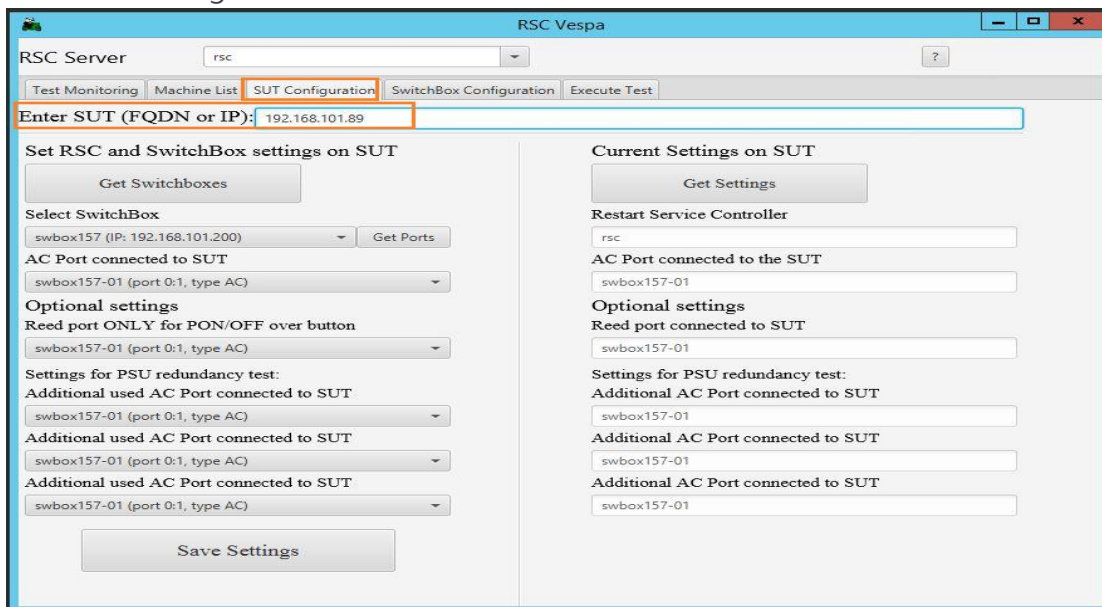

3. 點選 Get Switchboxes > Get Ports 選擇 swbox 編號。

RSC Server: rsc

Test Monitoring Machine List SUT Configuration SwitchBox Configuration Execute Test

Enter SUT (FQDN or IP): 192.168.101.89

Set RSC and SwitchBox settings on SUT

Get Switchboxes

Select SwitchBox

- swbox157 (IP: 192.168.101.200)
- swbox119-B2 (IP: 192.168.101.90)
- swbox123 (IP: 192.168.101.84)
- swbox154 (IP: 192.168.101.80)
- swbox157 (IP: 192.168.101.200)
- swbox36-B2 (IP: 192.168.101.91)
- swbox53 (IP: 192.168.101.83)
- swbox56 (IP: 192.168.101.82)

Get Ports

Additional used AC Port connected to SUT

swbox157-01 (port 0:1, type AC)

Additional used AC Port connected to SUT

swbox157-01 (port 0:1, type AC)

Save Settings

Current Settings on SUT

Get Settings

Restart Service Controller

rsc

AC Port connected to the SUT

swbox157-01

Optional settings

Reed port connected to SUT

swbox157-01

Settings for PSU redundancy test:

Additional AC Port connected to SUT

swbox157-01

Additional AC Port connected to SUT

swbox157-01

Additional AC Port connected to SUT

swbox157-01

4. 點選 AC Port connected to SUT > Power cable 實際插座的位置 153-3

RSC Server: rsc

Test Monitoring Machine List SUT Configuration SwitchBox Configuration Execute Test

Enter SUT (FQDN or IP): 192.168.101.89

Set RSC and SwitchBox settings on SUT

Get Switchboxes

Select SwitchBox

swbox157 (IP: 192.168.101.200)

Get Ports

AC Port connected to SUT

- swbox157-01 (port 0:1, type AC)
- swbox157-01 (port 0:1, type AC)
- swbox157-02 (port 0:2, type AC)
- swbox157-03 (port 0:3, type AC)
- swbox157-05 (port 1:1, type REED)

Additional used AC Port connected to SUT

swbox157-01 (port 0:1, type AC)

Additional used AC Port connected to SUT

swbox157-01 (port 0:1, type AC)

Additional used AC Port connected to SUT

swbox157-01 (port 0:1, type AC)

Save Settings

Current Settings on SUT

Get Settings

Restart Service Controller

rsc

AC Port connected to the SUT

swbox157-01

Optional settings

Reed port connected to SUT

swbox157-01

Settings for PSU redundancy test:

Additional AC Port connected to SUT

swbox157-01

Additional AC Port connected to SUT

swbox157-01

Additional AC Port connected to SUT

swbox157-01

RSC Vespa

RSC Server: rsc

Test Monitoring Machine List SUT Configuration SwitchBox Configuration Execute Test

Enter SUT (FQDN or IP): 192.168.101.89

Set RSC and SwitchBox settings on SUT

Get Switchboxes

Select SwitchBox

swbox157 (IP: 192.168.101.200) Get Ports

AC Port connected to SUT

swbox157-01 (port 0:1, type AC)

swbox157-01 (port 0:1, type AC)

swbox157-02 (port 0:2, type AC)

swbox157-03 (port 0:3, type AC)

swbox157-05 (port 1:1, type REED)

Additional used AC Port connected to SUT

swbox157-01 (port 0:1, type AC)

Additional used AC Port connected to SUT

swbox157-01 (port 0:1, type AC)

Additional used AC Port connected to SUT

swbox157-01 (port 0:1, type AC)

Save Settings

Current Settings on SUT

Get Settings

Restart Service Controller

rsc

AC Port connected to the SUT

swbox157-01

Optional settings

Reed port connected to SUT

swbox157-01

Settings for PSU redundancy test:

Additional AC Port connected to SUT

swbox157-01

Additional AC Port connected to SUT

swbox157-01

Additional AC Port connected to SUT

swbox157-01

5. Optional setting > 總共 4 項全部點選 AC port NO. 157-3 > Save Setting.

RSC Vespa

RSC Server: rsc

Test Monitoring Machine List SUT Configuration SwitchBox Configuration Execute Test

Enter SUT (FQDN or IP): 192.168.101.89

Set RSC and SwitchBox settings on SUT

Get Switchboxes

Select SwitchBox

swbox157 (IP: 192.168.101.200) Get Ports

AC Port connected to SUT

swbox157-03 (port 0:3, type AC)

Optional settings

Reed port ONLY for PON/OFF over button

swbox157-03 (port 0:3, type AC)

Settings for PSU redundancy test:

Additional used AC Port connected to SUT

swbox157-03 (port 0:3, type AC)

Additional used AC Port connected to SUT

swbox157-03 (port 0:3, type AC)

Additional used AC Port connected to SUT

swbox157-03 (port 0:3, type AC)

Save Settings

Current Settings on SUT

Get Settings

Restart Service Controller

rsc

AC Port connected to the SUT

swbox157-01

Optional settings

Reed port connected to SUT

swbox157-01

Settings for PSU redundancy test:

Additional AC Port connected to SUT

swbox157-01


Additional AC Port connected to SUT

swbox157-01

Additional AC Port connected to SUT

swbox157-01

6. 儲存後系統會進行連線> 完成後會跳出此訊息

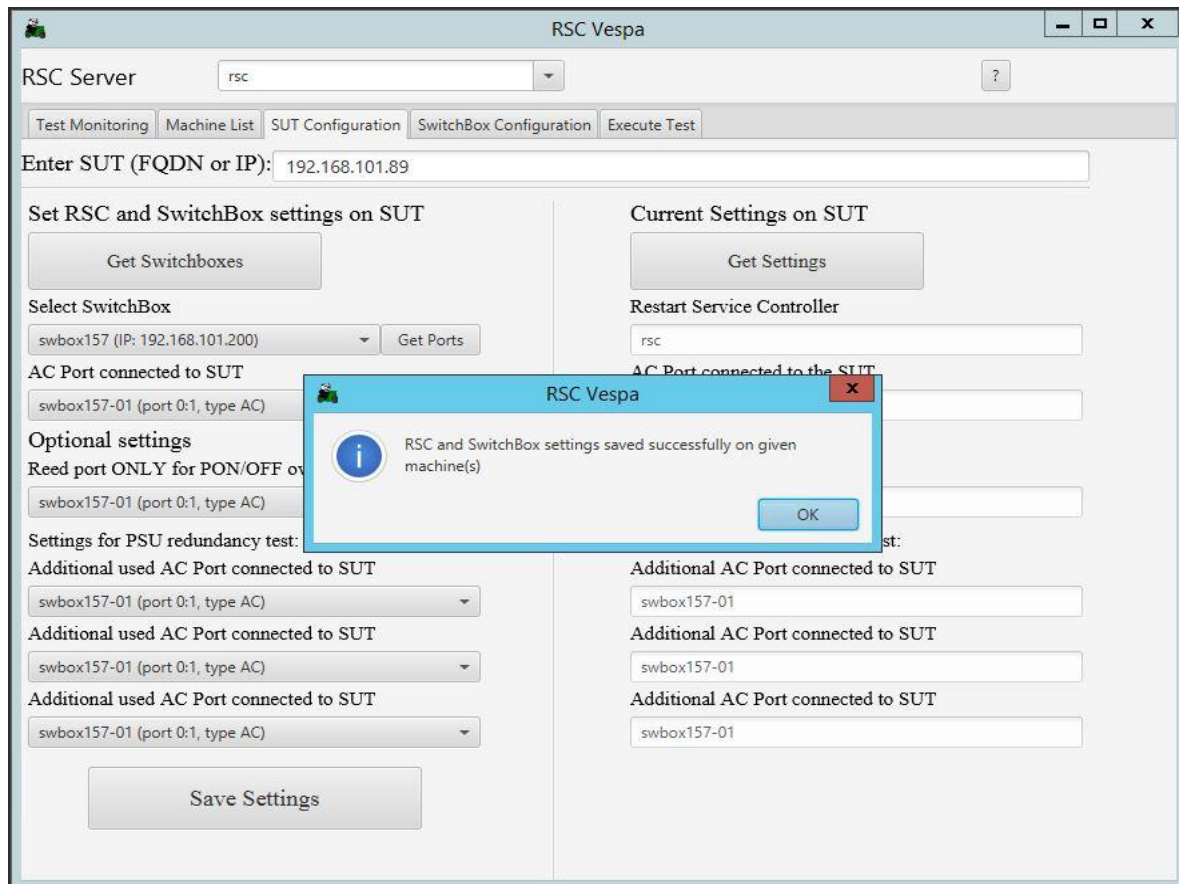

7. 點選 Machine List 可以查看測試機台的現行狀態

The screenshot shows the 'RSC Vespa' application window with the 'Machine List' tab selected. The window displays a table of machine status. The table has columns: Machine Name, IP Address, MAC Address, BMC IP, RSC Status, MMB Address, Slot, and State. The 'RSC Status' column is highlighted in yellow. The table contains 20 rows of data, including machine names like 'irenes-2540M2-riad.local.qanet.dns', 'irene-m7s-2nd.local.qanet.dns', 'wh-pcie-176.local.qanet.dns', 'leo-ws2022-m2.local.qanet.dns', 'leo-rx2530m7s-t2.local.qanet.dns', 'jh-hdd-win.local.qanet.dns', 'irene-m7st3-2nd.local.qanet.dns', 'jh-t4-hddwin.local.qanet.dns', 'irenes-PRAIDcp600.local.qanet.dns', 'irenes-PCleRAIDcard.local.qanet.dns', 'BK-SUT4-832-WS2022.local.qanet.dns', 'mars-m7s-ws2022.local.qanet.dns', 'jh-t5hddwin.local.qanet.dns', 'jh-t3-3252-8i.local.qanet.dns', 'jh-t3-hddwin.local.qanet.dns', 'jh-t3-winhdd.local.qanet.dns', and 'irene-ocp1.local.qanet.dns'. The 'RSC Status' for some machines is 'running' (highlighted in yellow) and for others is 'failed'.

Machine Name	IP Address	MAC Address	BMC IP	RSC Status	MMB Address	Slot	State
irenes-2540M2-riad.local.qanet.dns	192.168.101.49	C4:7D:46:C4:4E:D3	192.168.101.14			0	n/a
irene-m7s-2nd.local.qanet.dns	192.168.101.60	4C:52:62:65:AD:62	192.168.101.59			0	n/a
wh-pcie-176.local.qanet.dns	192.168.101.36	C4:7D:46:C4:67:BF	192.168.101.26			0	n/a
leo-ws2022-m2.local.qanet.dns	192.168.101.30	C4:7D:46:C4:4E:BF	192.168.101.28	running		0	n/a
leo-rx2530m7s-t2.local.qanet.dns	192.168.101.63	4C:52:62:65:AF:B1	192.168.101.64			0	n/a
jh-hdd-win.local.qanet.dns	192.168.101.89	C4:7D:46:C4:67:DD	192.168.101.68			0	n/a
irene-m7st3-2nd.local.qanet.dns	192.168.101.88	4C:52:62:65:AD:AA	192.168.101.87			0	n/a
jh-t4-hddwin.local.qanet.dns	192.168.101.43	C4:7D:46:C4:5A:7C	192.168.101.12			0	n/a
irenes-PRAIDcp600.local.qanet.dns	192.168.101.49	C4:7D:46:C4:4E:D3	192.168.101.14			0	n/a
irenes-PCleRAIDcard.local.qanet.dns	192.168.101.49	C4:7D:46:C4:4E:D3	192.168.101.14	running		0	n/a
BK-SUT4-832-WS2022.local.qanet.dns	192.168.101.67	B4:96:91:E8:A0:14	192.168.101.21	running		0	n/a
mars-m7s-ws2022.local.qanet.dns	192.168.101.109	4C:52:62:64:E1:90	192.168.101.39			0	n/a
jh-t5hddwin.local.qanet.dns	192.168.101.18	C4:7D:46:C4:4E:35	192.168.101.10	failed		0	n/a
jh-t3-3252-8i.local.qanet.dns	192.168.101.89	C4:7D:46:C4:67:DD	192.168.101.68	running		0	n/a
jh-t3-hddwin.local.qanet.dns	192.168.101.43	C4:7D:46:C4:5A:7C	192.168.101.12	failed		0	n/a
jh-t3-winhdd.local.qanet.dns	192.168.101.43	C4:7D:46:C4:5A:7C	192.168.101.12			0	n/a
irene-ocp1.local.qanet.dns	192.168.101.65	C4:7D:46:C4:4E:0B	192.168.101.52	failed		0	n/a