



TW FDM Repair Guide

Made by Carter Delavan-Hoover

THIS SLIDE IS IMPORTANT!!

How to use this guide

- Begin by following the flowchart to the right to identify the issue
- The following slide is a table of contents that can guide you to the correct issue
- In a flowchart, “Success” and “Fail” mean you have tried a basic print or some basic function of the printer and have succeeded or failed to get an acceptable response



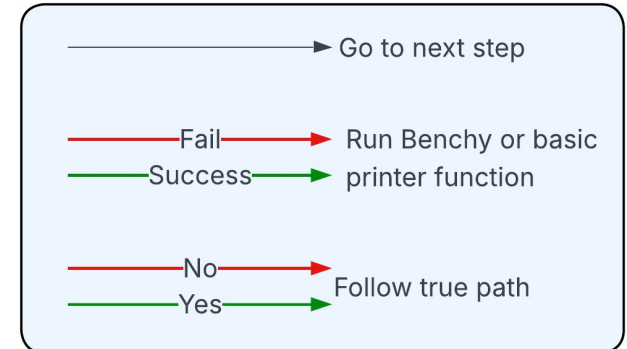




Table of Contents

<u>Layer Shifting</u>	Slide 4
<u>Print not sticking to bed</u>	Slide 5
<u>Under/No extrusion</u>	Slide 6
<u>Crash Detected Error</u>	Slide 7
<u>Filament not loading</u>	Slide 8
<u>Nozzle Clog</u>	Slide 9
<u>Thermal Runaway error</u> ...	Slide 10

<u>MINTEMP error</u>	Slide 10
<u>MAXTEMP error</u>	Slide 10
<u>Hotend Disassembly</u>	Slide 11
<u>Thermistor Replacement</u>	Slide 12
<u>Belt Tensioning</u>	Slide 13
<u>Helpful Links</u>	Slide 14

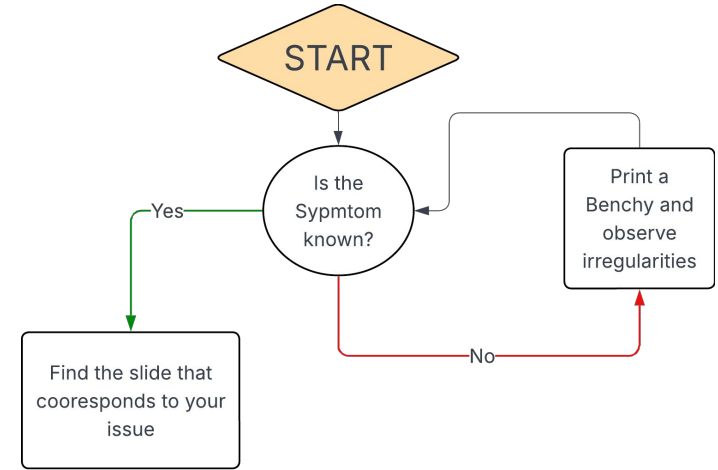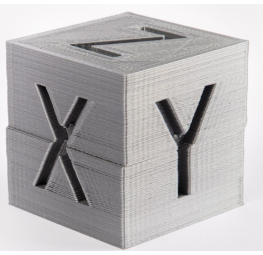


Layer Shifting

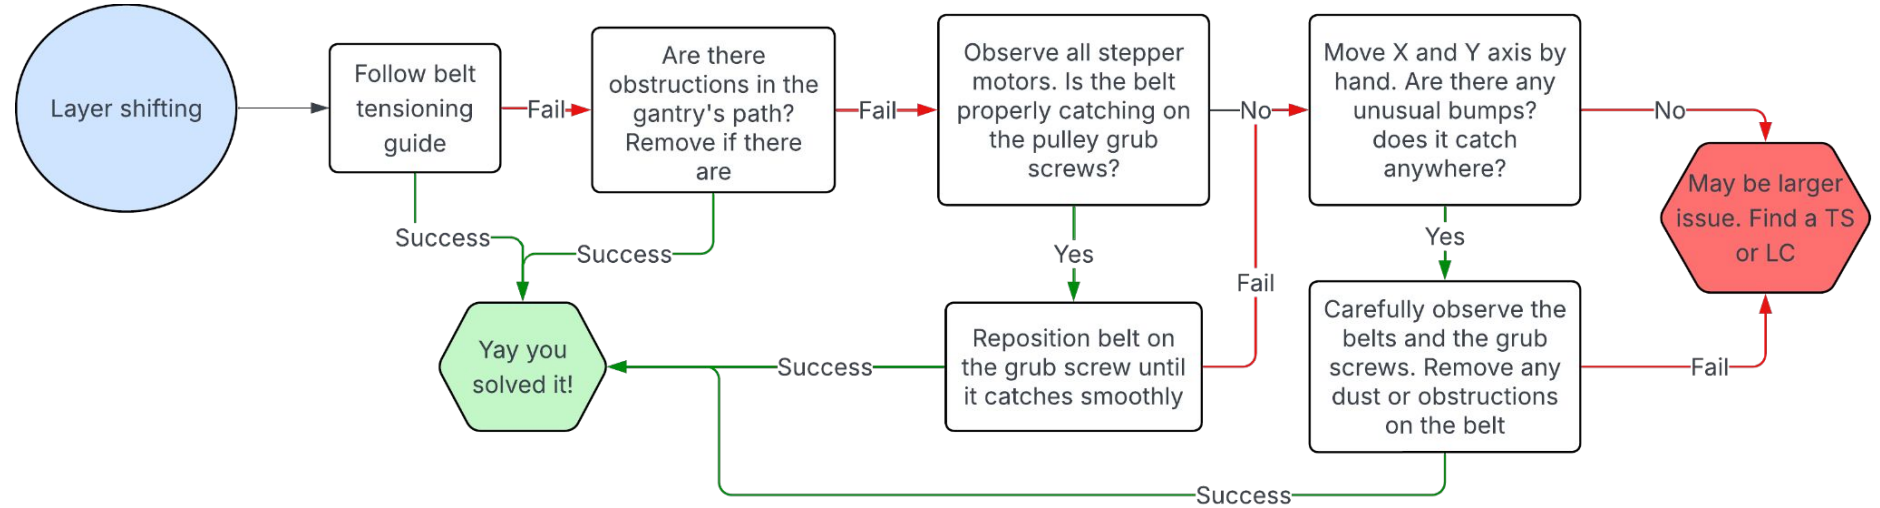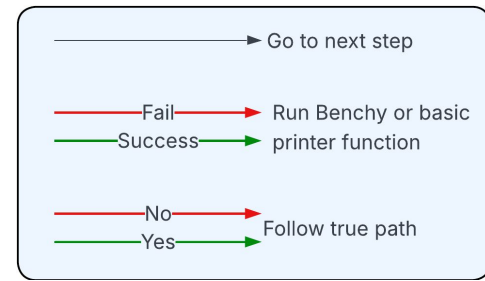


BELT TENSIONING LINK

Print Not Sticking to Bed


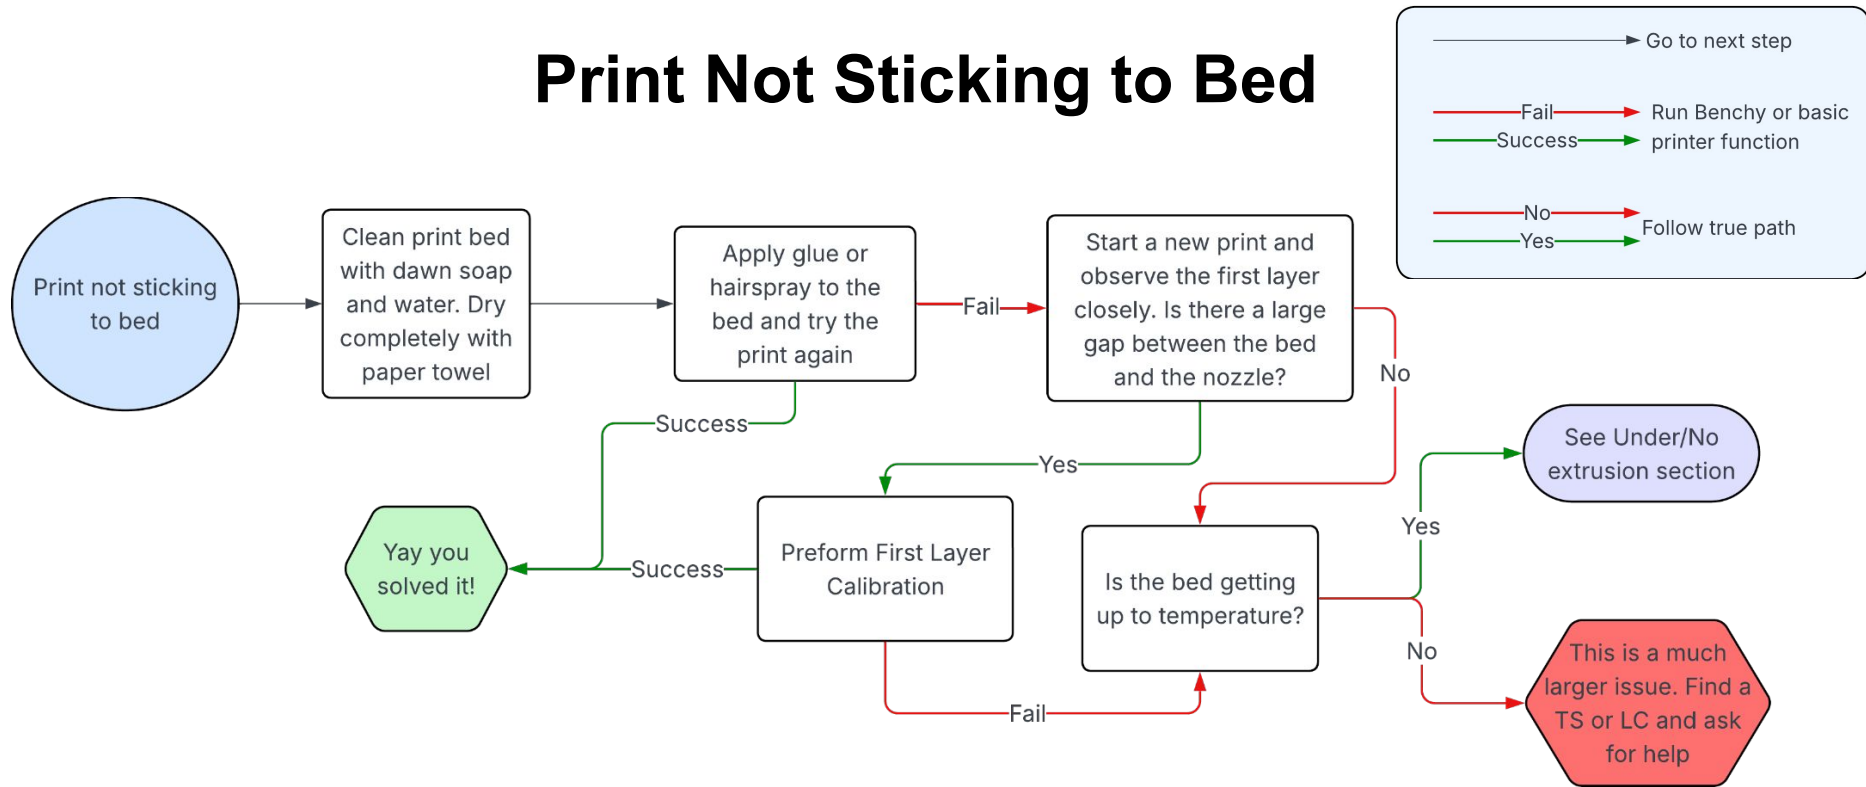


First layer calibration guide:

<https://dozuki.umd.edu/Guide/Prusa+i3+MK3S:+First+Layer+Calibration/293>

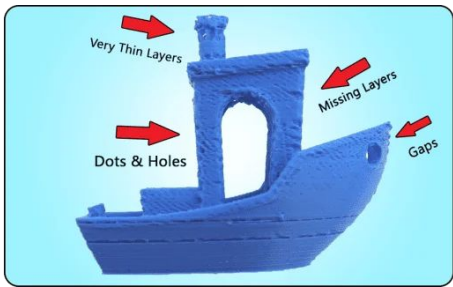


Under/No Extrusion

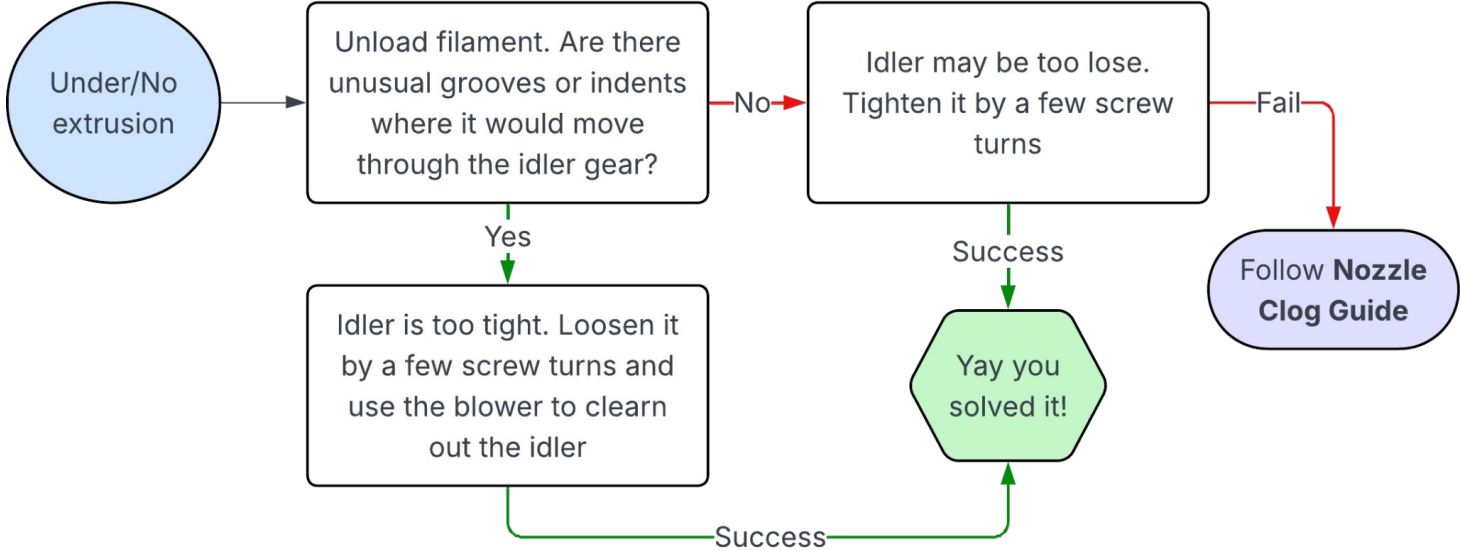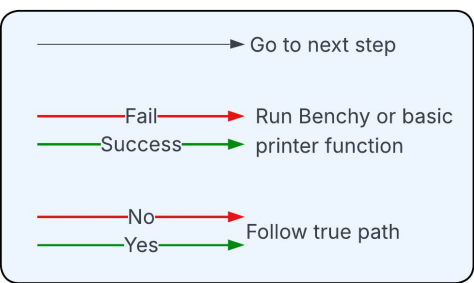

[NOZZLE CLOG LINK](#)


Crash Detected Error

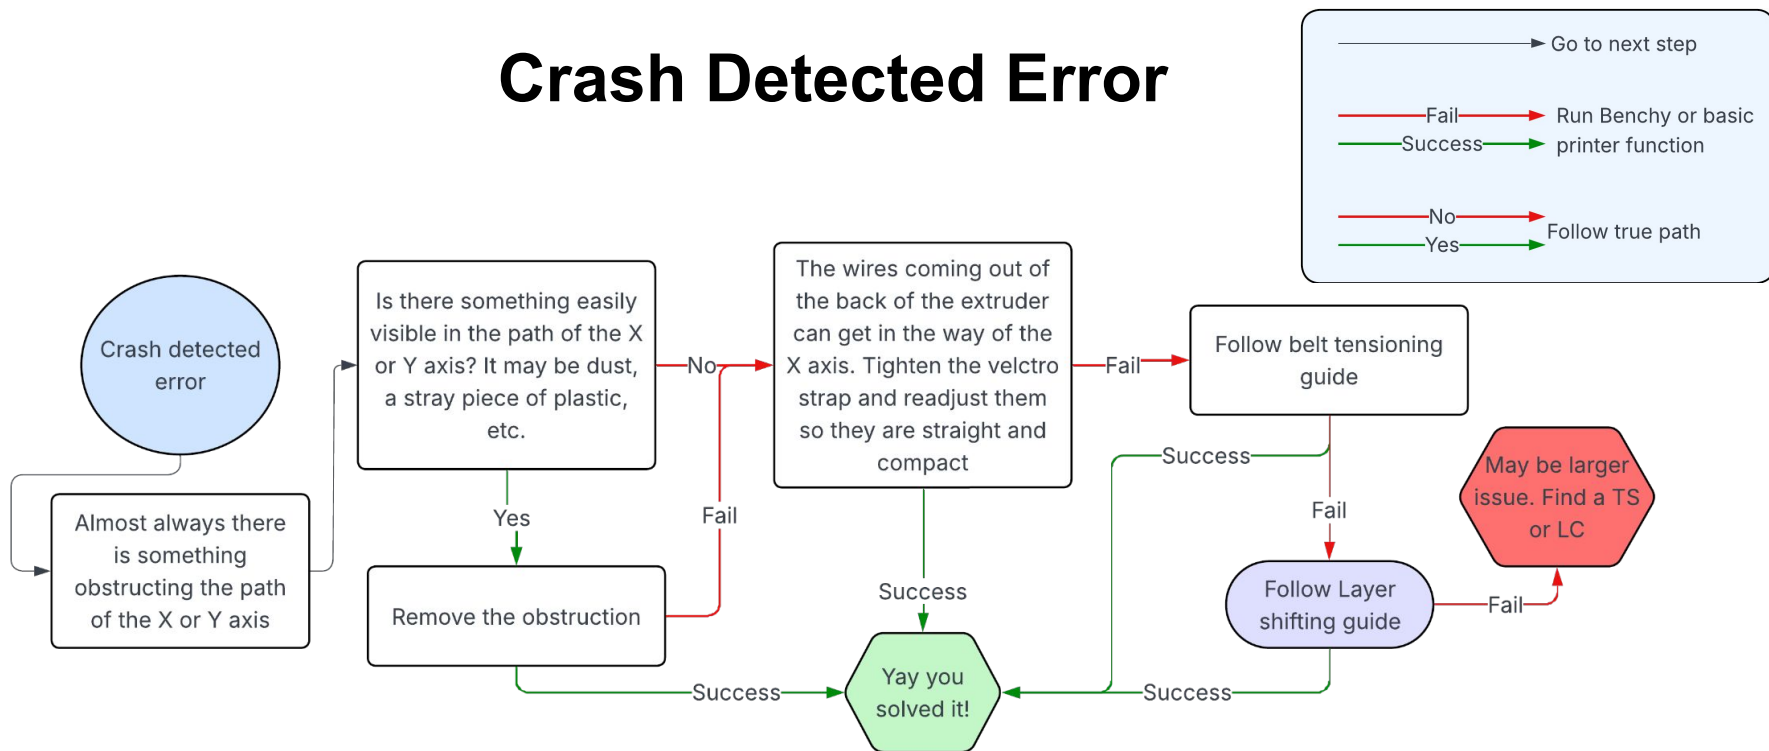

BELT TENSIONING LINK


LAYER SHIFTING GUIDE

Filament Not Loading

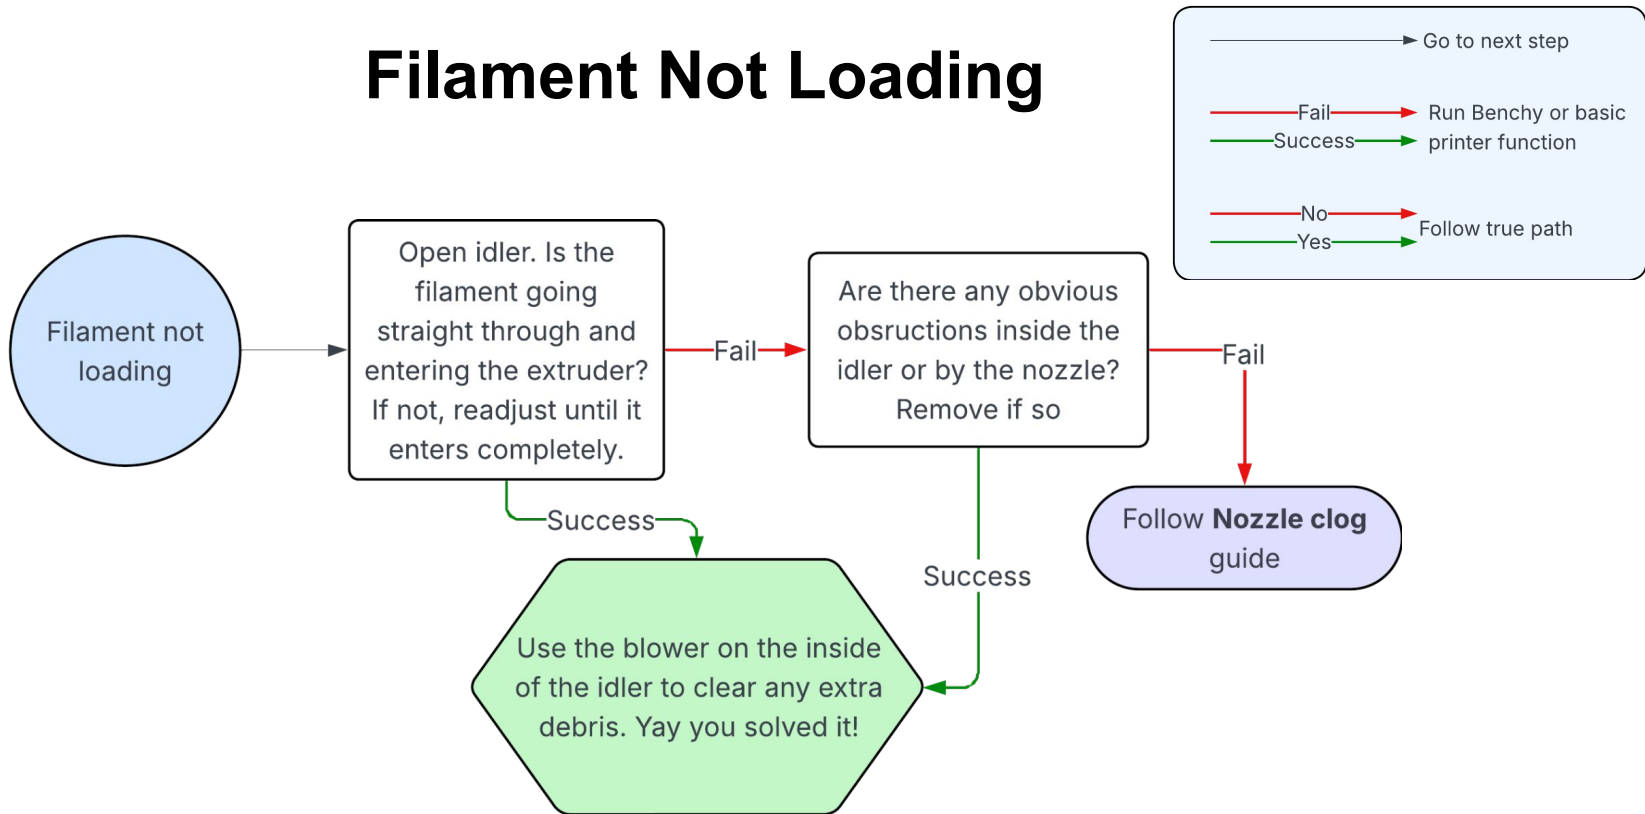

[**NOZZLE CLOG LINK**](#)

Nozzle Clog


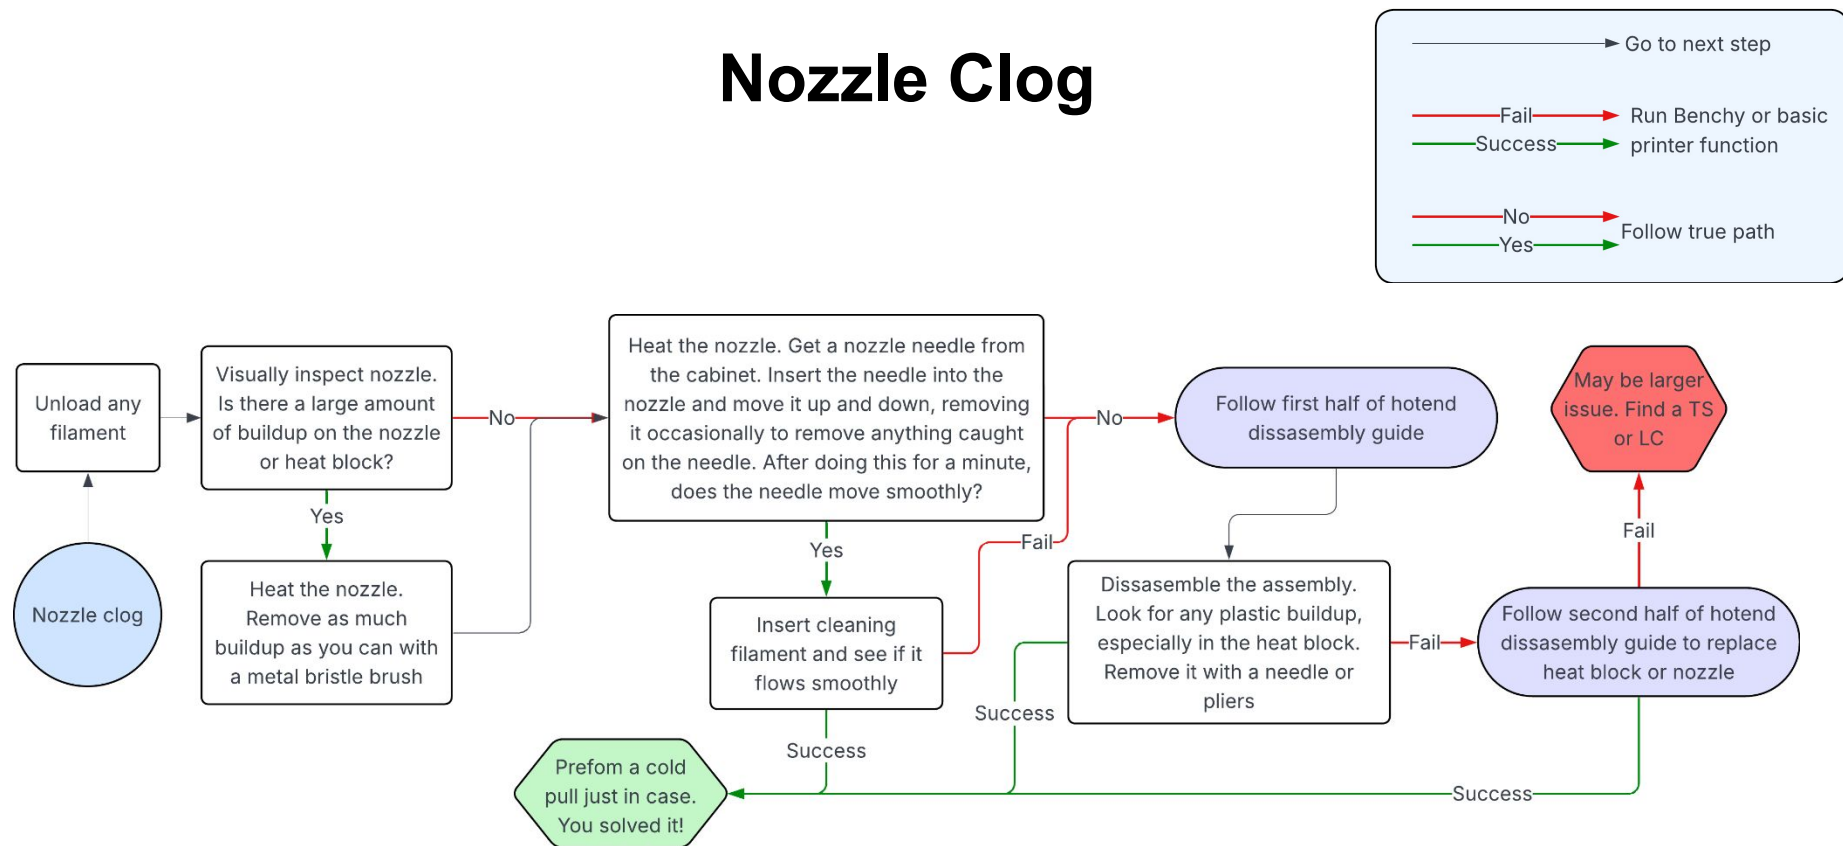


HOTEND
DISASSEMBLY

Thermal Runaway Error

MINTEMP Error

MAXTEMP Error

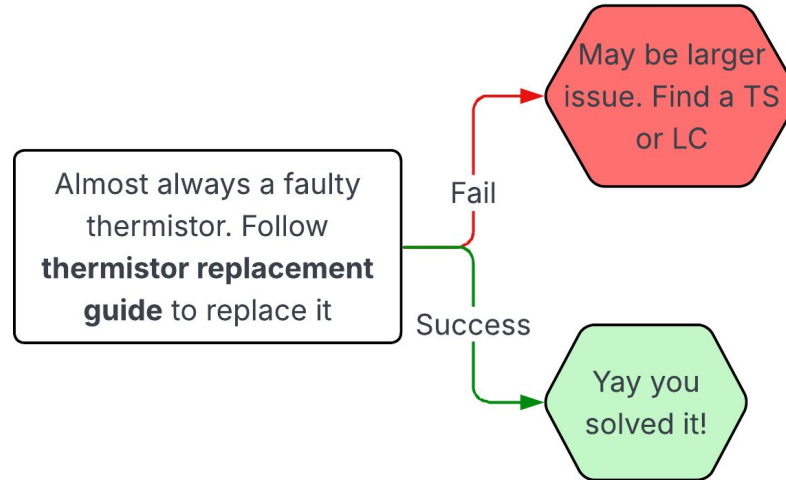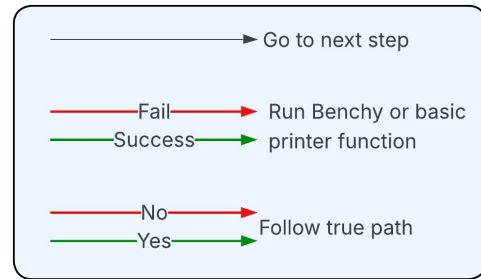

THERMISTOR REPLACEMENT

Hotend Disassembly



Thermistor Replacement

HOW TO
REPLACE
HOTEND
THERMISTOR
PRUSA MK3/S+



Belt Tensioning



Helpful Links

TW printer maintenance document:

<https://docs.google.com/document/d/1zOvOk5HGSYtFL2L0s97djXGWhDZb1HT2LxvX6btukSk/edit?usp=sharing>

Simply3D troubleshooting guide:

<https://www.simplify3d.com/resources/print-quality-troubleshooting/>

TW Dozuki guides:

https://dozuki.umd.edu/c/Prusa_i3_MK3S