



Taking apart the ERS-210 body shells can be quite easy - it just takes patience and a lot of prying to get it done. Plastics on this aibo model can be quite brittle due to aging (it varies depending on how it was stored), so I recommend taking things slowly.

Before getting started please eject all of the limbs from the body core. If you're not sure how to do this, please see the guide on my website.

Tools

JIS 0 or 00 screwdriver - I recommend the VESSEL set with the coloured rubber grips for this. Easily purchasable from Amazon.





Starting with the front lower leg, there are two screws located on the back of the leg - take these out.



There are many different sized screws used throughout the ERS-210 body shells so please try to keep these organised so they don't get mixed up. I recommend using a pill case and labelling each pill bay.



Next use your nail or a prying tool to pry between the coloured and black plastics and pop the clips holding them together.



If you're having trouble popping the clips, try gently squeezing the sides of the plastic while prying. It can sometimes help.



Next we need to remove the coloured plastic from the leg. To do this, use your fingers to pull the plastic sides outwards and then push the top part of the leg plastic forward like seen above in the second picture. Then flex the lower part wider and push forward over the foot plastics.



To remove the upper leg plastics, remove these three screws seen in the pictures above.



The bottom screw is much smaller than the two top screws.



Then pry the black and coloured plastics apart, pulling each side away. You may need to rotate the position of the leg to free the top part of the black plastic.



Then pull the coloured plastic away from the leg.

Next we will work on removing the hip body plastics.

When reinstalling these leg plastics, they may not want to clip back together or the screws might have difficulty going back into their screw holes. If this is the case, try squeezing and pushing on the plastic.

Due to the aging of the plastics it seems like there has been slight shrinkage/warping.

If you are painting these parts, make sure not to keep paint on the areas where plastics meet up/clip together because it will cause problems going back together. Also do not paint the inside of the shell.



Flip the leg over and remove all of the silver screws above. There is also a hidden screw deep in the hole where the servo is kept - make sure not to miss this one.





Once all of the screws have been removed, pull the coloured plastic up and off, guiding the leg through the middle gap.



Place the legs to one side - I keep them in this position to try avoid the hip layers separating,



Next lets strip the two back legs.



Take the two lower leg screws out. The bottom screw is much smaller than the top screw.



Start prying the plastics apart - I recommend starting at the bottom near the angle and moving you nail/prying tool upwards. This is the hardest clip so its best getting it out the way.



If you're having trouble popping the clips, try gently squeezing the sides of the plastic while prying. It can sometimes help.

Above you can see the large clips and their locations.



Take the black backing plastic off.



Move the top part of the coloured plastic forward like above. ^



Then pull the bottom corners outwards with your fingers and push it forward, over the paw plastic.



Next lets move onto the top leg plastics. Like the front, take out the three screws seen above.



Pull the black plastic away from the coloured plastic (you may need to move the leg position to unhook the top part of the plastic).



Then pull the coloured plastic off the leg.



Like with the front hips, unscrew all of the silver screws including the one in the hole. They are all the same type of screw so it is fine to keep them in a pile.






Lead the leg through the hole in the leg plastic.




If you are planning on painting the aibo plastics you also should remove the butt bumpers.

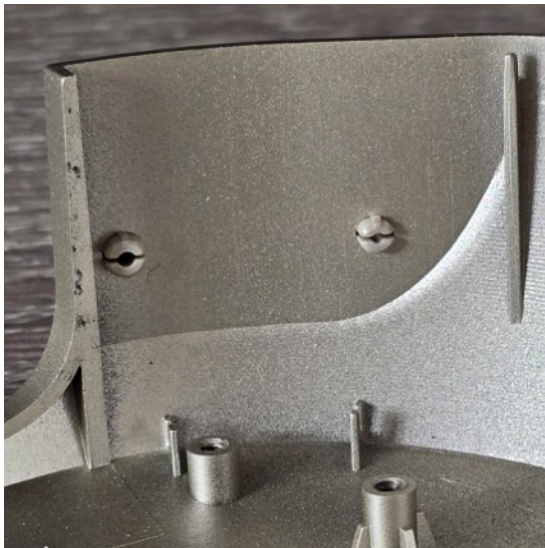


Doing this is very simple - there are two tabs on the inside. To release the bumper just push these through and you'll see them start to raise up off of the plastic.

The bumper also has some adhesive tape on it's underside, so don't be alarmed if you hear sounds while pushing the pegs through.



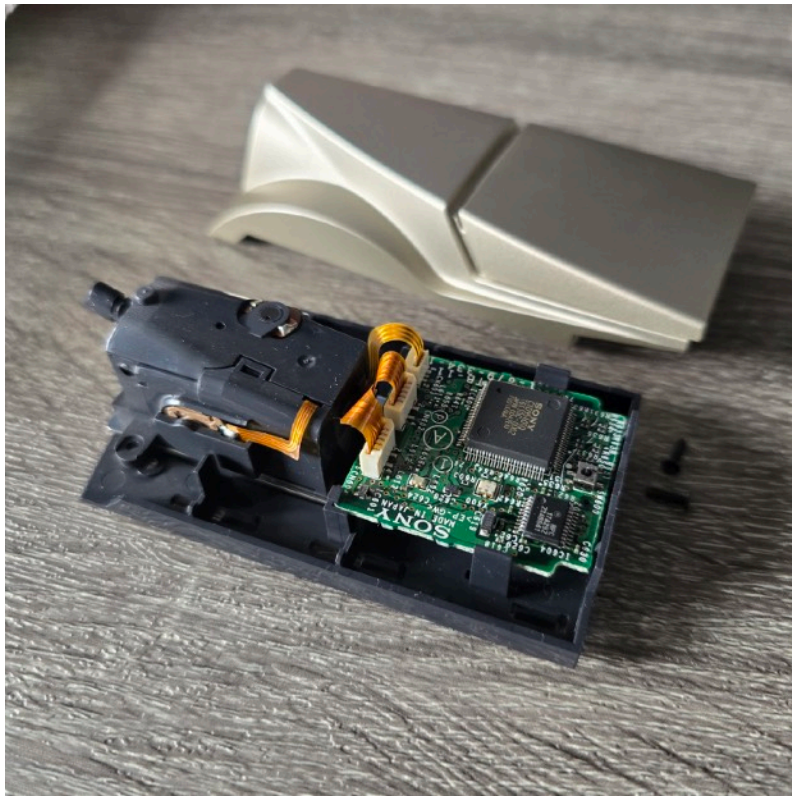

Taking the shells off the back sensor is extreme easy. Take the silicone tail off by pulling it off, then flip the sensor over, take the two screws out and then lift the coloured plastic up off the black piece. The touch panel on top can be removed by simply putting your nail under the edge and then pulling up and off around the perimeter.

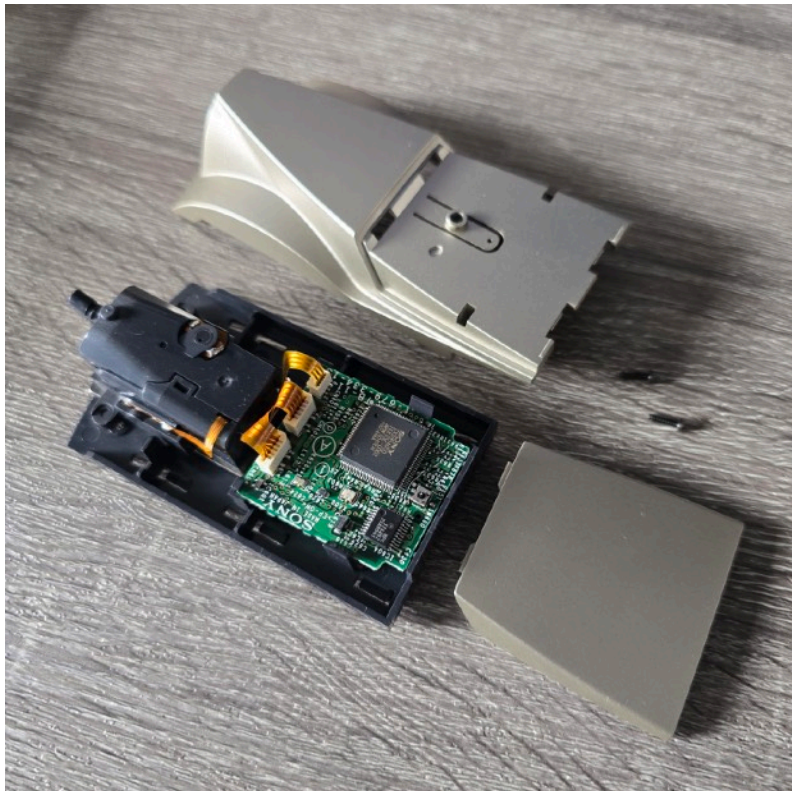

All photographs and writing provided by LaikaAibo. Please do not reuse my images without permission. If you want to post screenshots to reference the guide to help someone all I ask is that you give me credit and link to my site. Thank you! 🙏🙏