



ERS-210 Tail Module Disassembly by LaikaAibo




In this guide I will lead you through the steps to taking apart the tail module in order to access the potentiometers and gears. It's a bit fiddly and I would say it is easier to take apart if you have longer nails like I do (there's a lot of prying involved to open the casing).

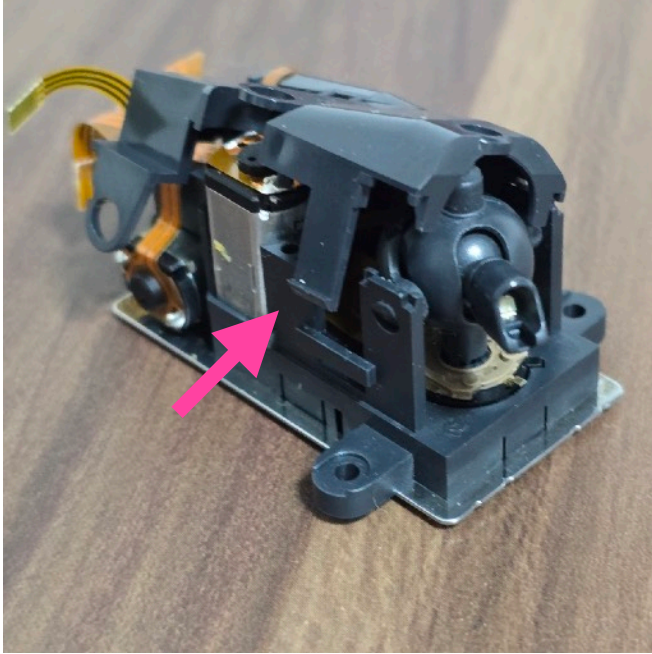


To open the tail module, it will require a lot of prying from multiple areas all at once. First, pry from this side and release this tab.

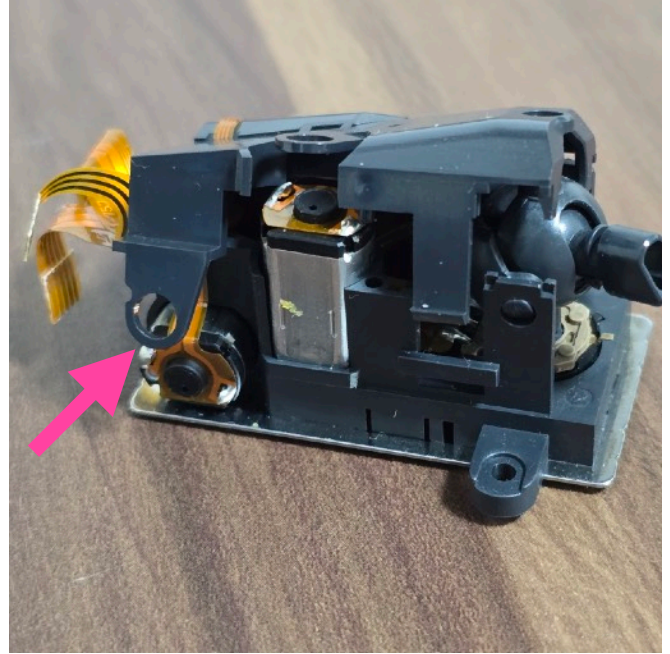


Also pry this tab off of the circle its slotted onto.

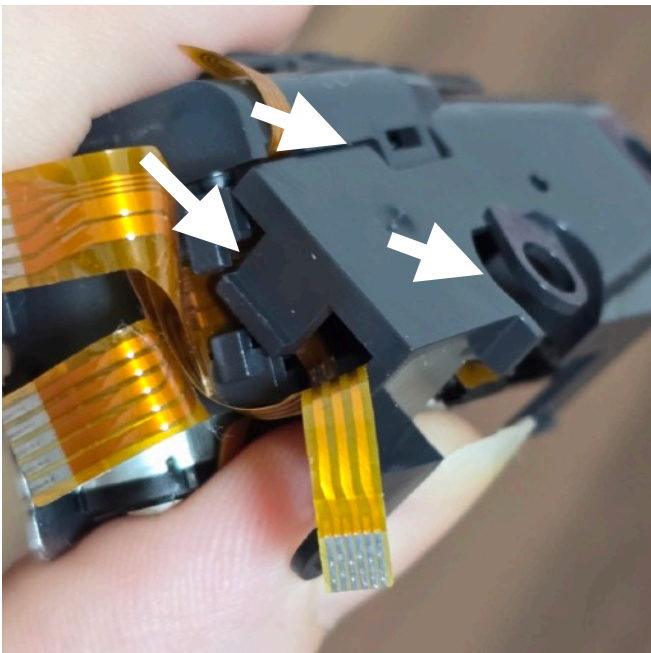


Then also pry this large back tab and the top circle and rectangle tabs.

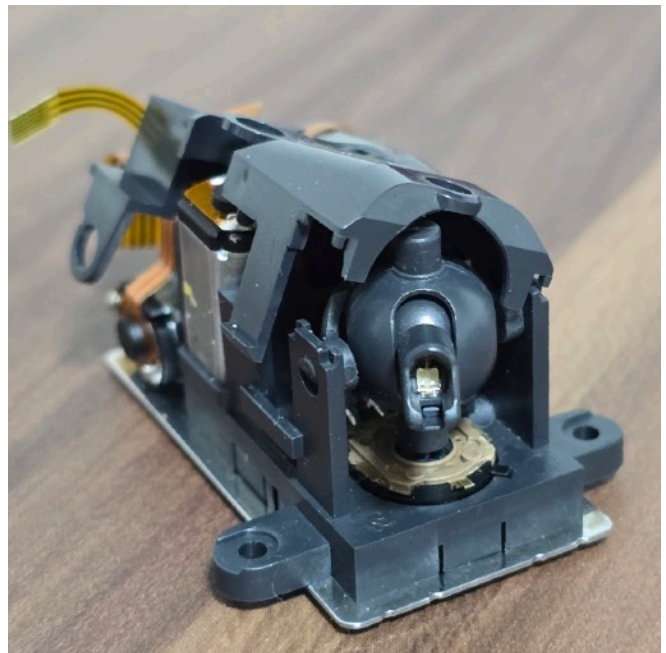


Once they are free, use a bit of extra strength to pull the top to the side and off.

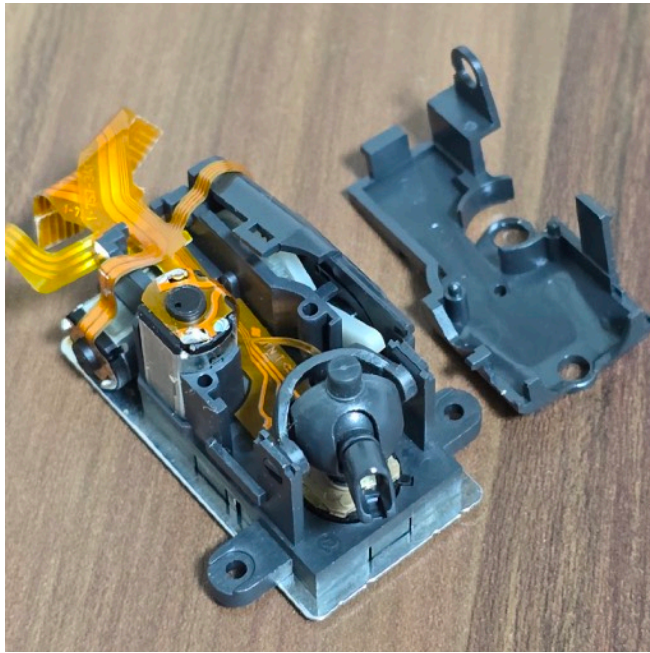

Once the lid is removed, all of the flexi cable are visible and servos can be removed.

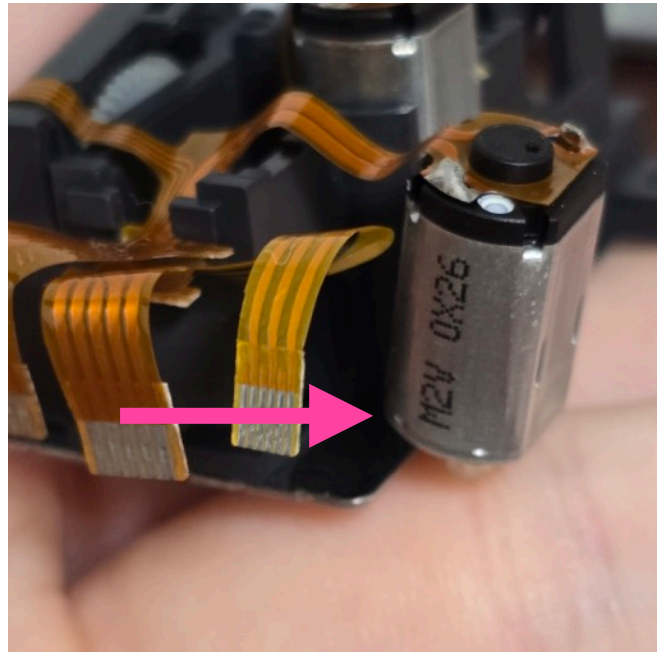

Slowly and carefully pull the side mounted servo out of its hole.

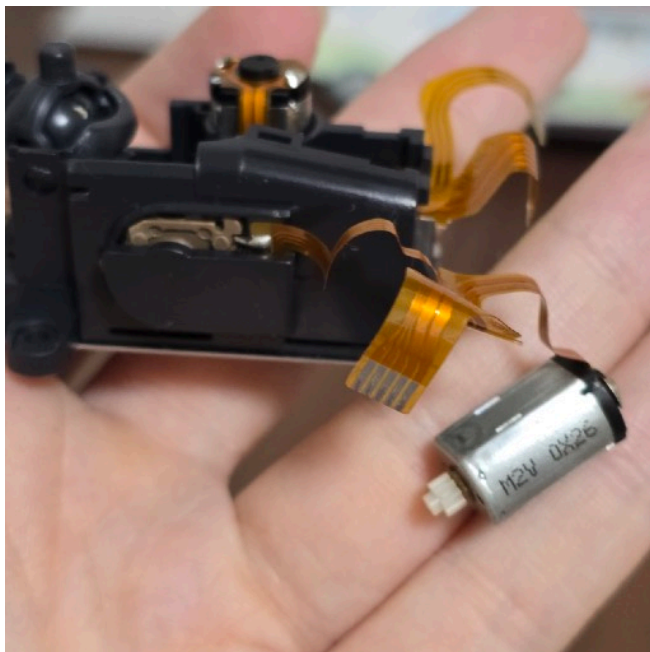


Once free, pull it around like this. It is connected to its potentiometer which we want to take out. We will have to free the plastic wall to get to it.




Underneath the module you will see multiple plastics tabs retained by a steel plate.




Work to free the tabs on this side.

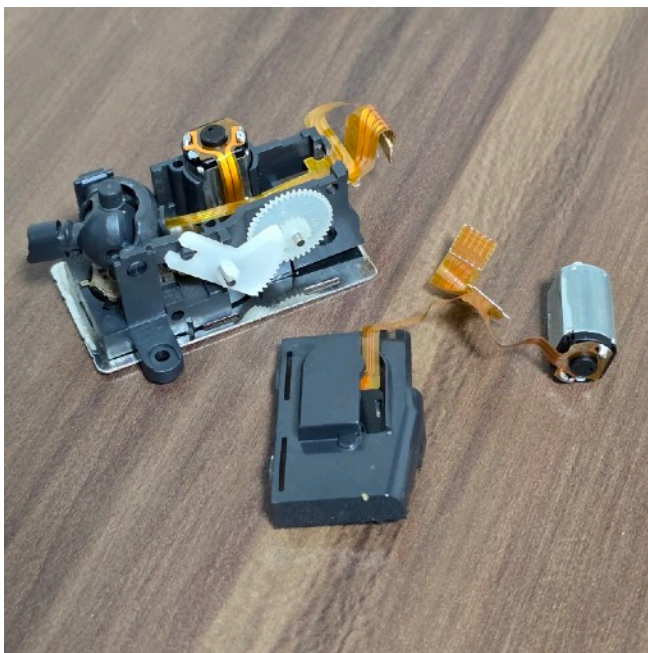


The wall will separate.

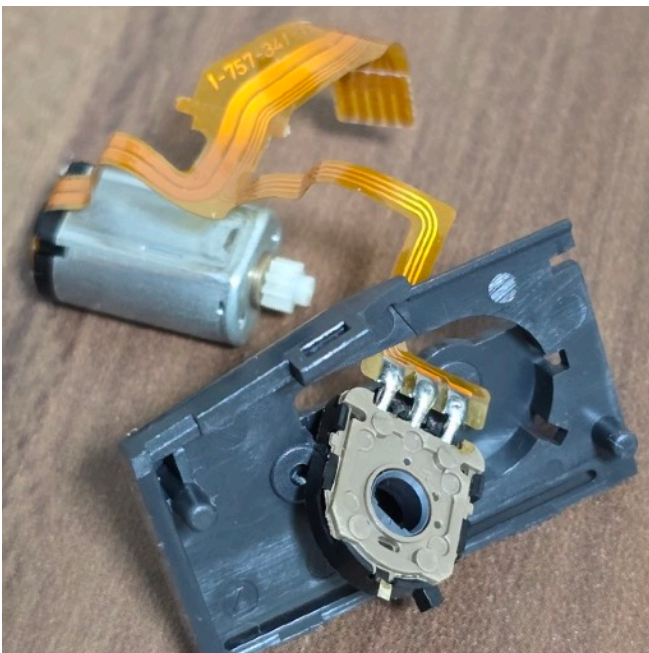


Once the wall is free, pick the potentiometer free. You can now open it for deep cleaning.

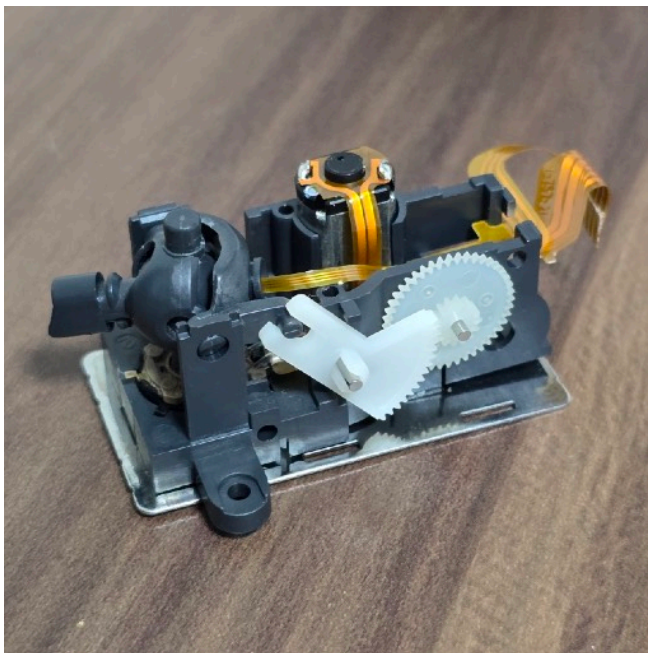


Next we will work to release the other servo and potentiometer.

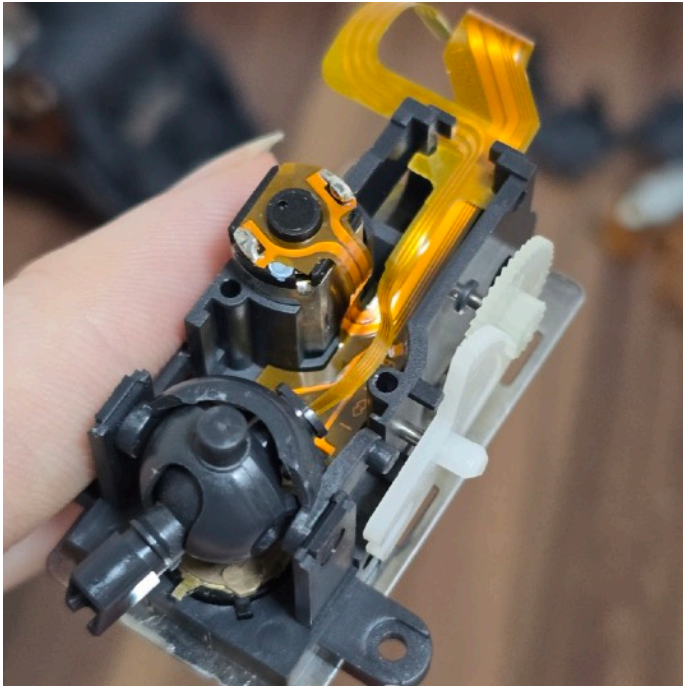

There are two white gears mounted to the side - pull both off the metal pegs.

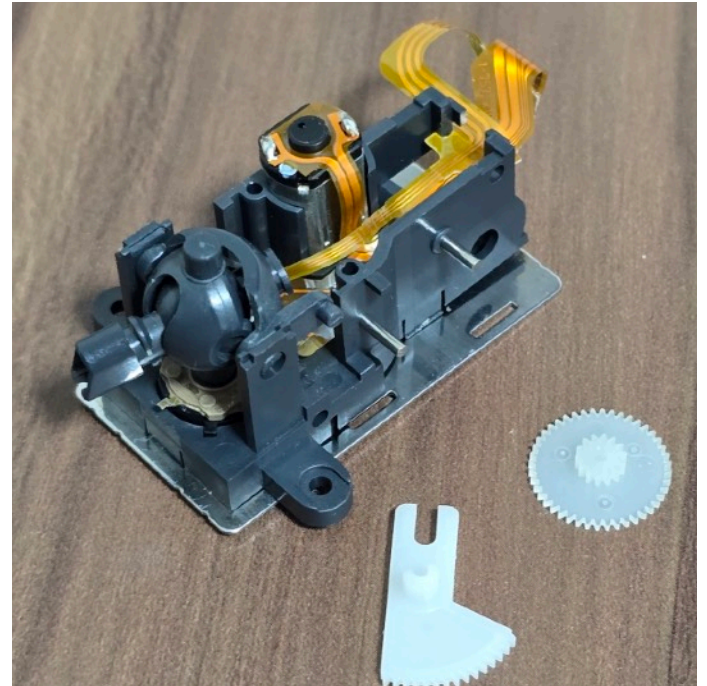


Next we need to pull off the tail rotator plastics.

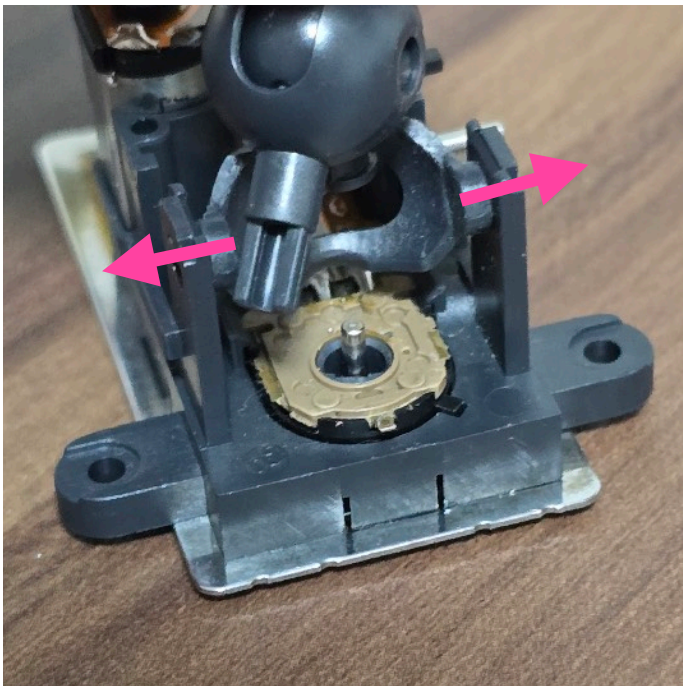


Pull these plastic tabs either side outwards and pull the tail rotator up and off.




Now we are going to remove this piece completely and then go forward to remove the servo and potentiometer from what is left.

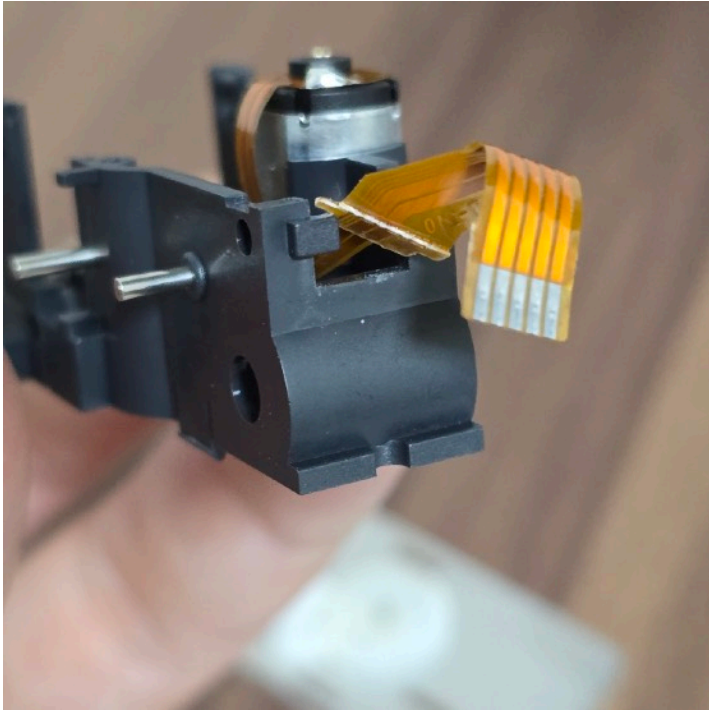

Unravel the flexes that overlap at the back and pull them free of the plastic.

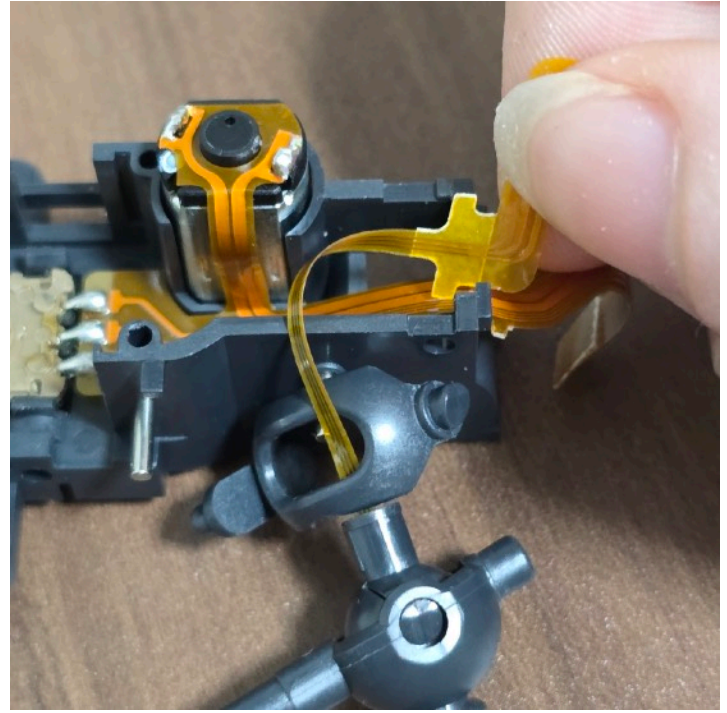


Pull up and out.

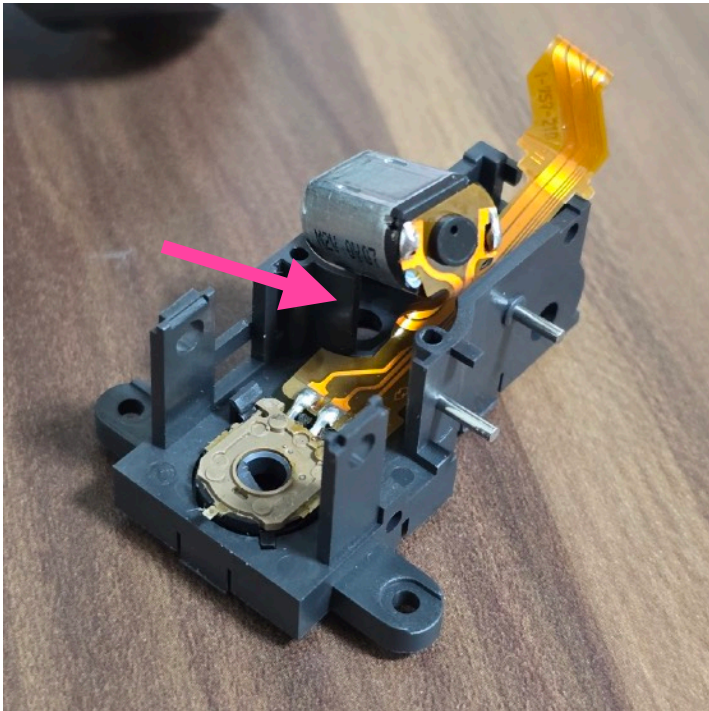

Now pull the servo up and free of its housing.



Now you can pry the potentiometer free of the plastics.

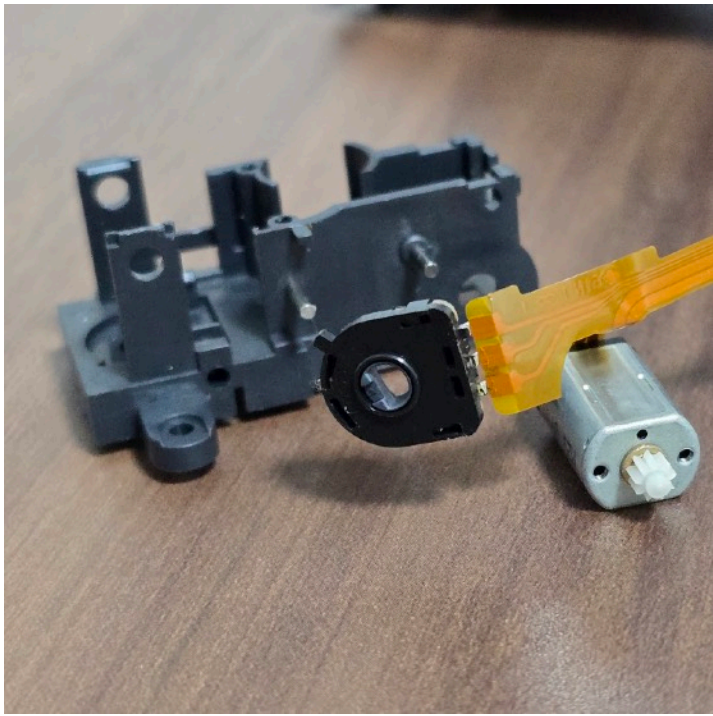

The potentiometer is now free and can be opened for cleaning. ^-^

All photographs and writing provided by LaikaAibo. Please do not reuse my images without permission. If you want to post screenshots to reference the guide to help someone all I ask is that you give me credit and link to my site. Thank you! 🙏