Ⅰ PC setting

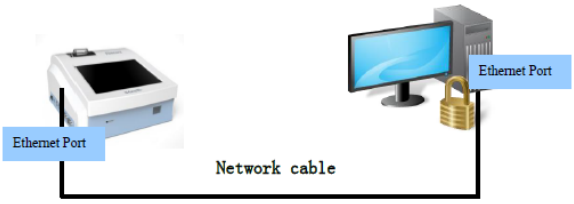

1. First Connect the PC and the FIA meter Plus with a standard cable.

2 Set the IP address according to protocol. Click “start-routine-attachment-communication-network”, and then double click “local connectivity”. Enter into “local connectivity status”.
Click “properties”, and enter into “local connectivity properties”.

3 Double click “Internet Protocol (TCP/IP)”. Enter to “Internet Protocol (TCP/IP) properties”.

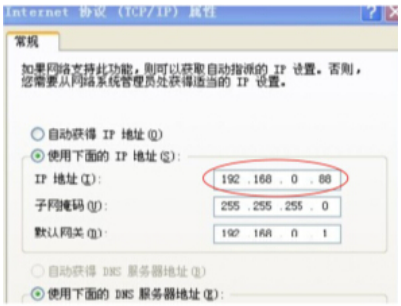

4 Set IP address as follows：
IP address: 192.168.0.88
Subnet mask: 255.255.255.0
Default gateway: 192.168.0.1

Click “OK”.

Ⅱ FIA meter Plus setting:

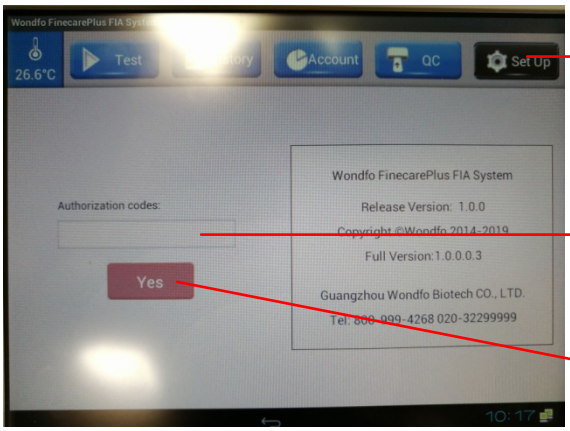

1.Click here

2. Input password “fs113”

3. Click here

1. Turn on FIA meter Plus and click “set up”, input password “fs113”, then click “Yes”.

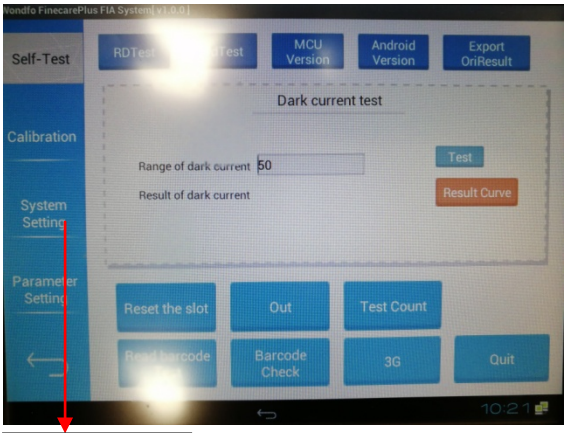

Click here

2. Click “System setting”.

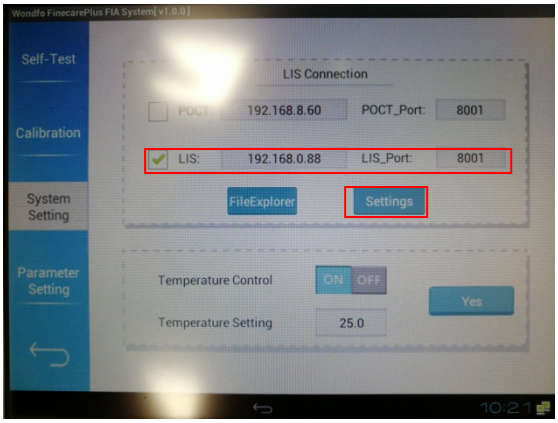

3. Confirm the Lis is 192.168.0.88, and check the Lis_Port.

Then click “settings”.

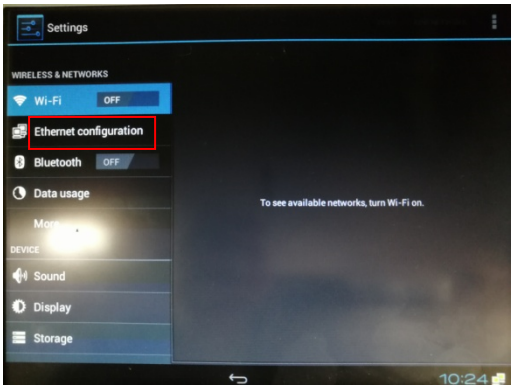

4. Click “Ethernet configuration”.

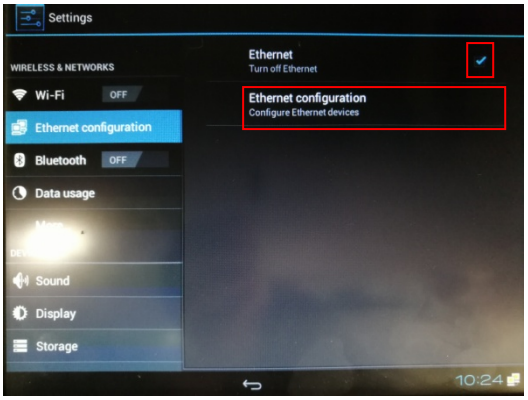

5. Confirm “Ethernet” is turned on and then click “Ethernet configuration”.

6. Confirm the meter IP setting is as below:
   IP address: 192.168.0.3
   Subnet mask: 255.255.255.0
   Default gateway: 192.168.0.1

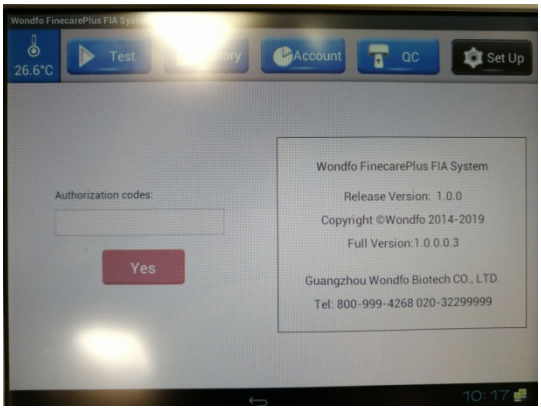

7. Back to “set up” interface, input password “wf2016”, and click “Yes”.

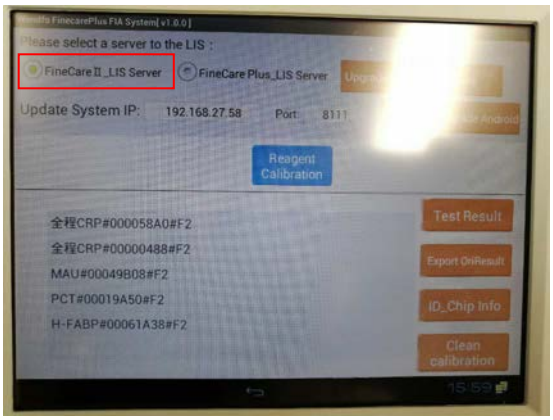

8. Select “FineCare II_LIS Server” and click “yes”

Ⅲ Turn on the LIS data receiving software

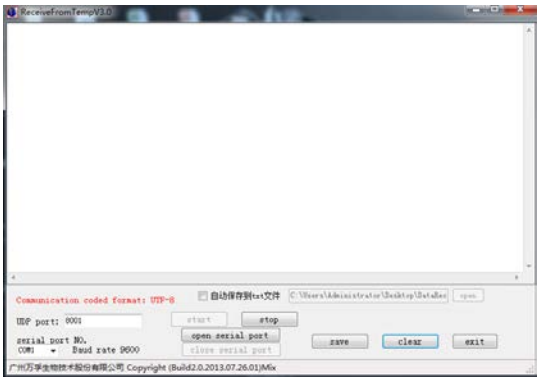

9. Turn on “ReceiveFormTemp” software on the desktop of PC.

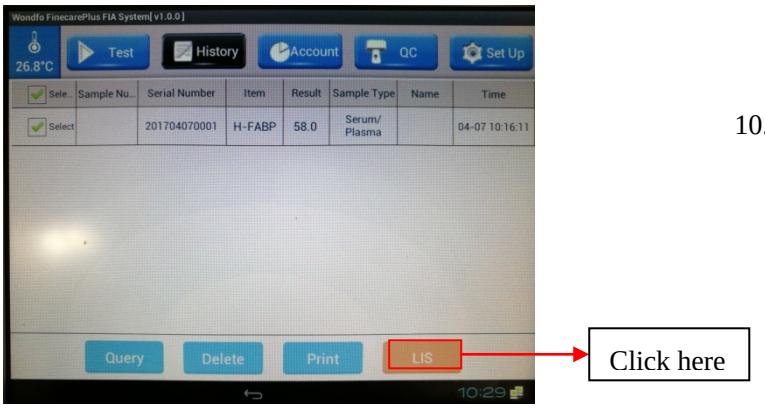

10. Back to “History” interface on the meter, select the data needed and click “LIS”.

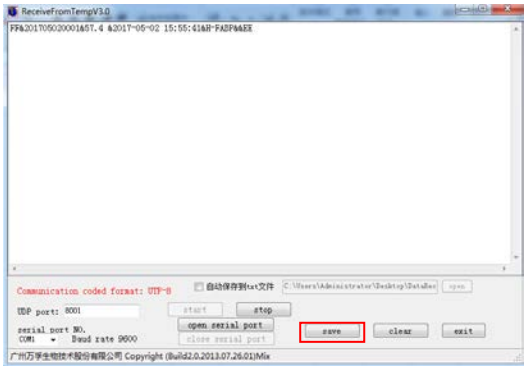

11. Then the data can be received on the “ReceiveFormTemp” software. Or the instrument can test normally, the test results will be sent automatically to the LIS Server software.

Click “save” to save the data in the form of Excel.