

MEL

Minimum Equipment List

APPROVED



The content of this document is the property of AVIONS DE TRANSPORT REGIONAL. It is supplied in confidence and commercial security on its content must be maintained. It must not be used for any purpose other than that for which it is supplied, nor may information contained in it be disclosed to unauthorized persons. It must not be reproduced in whole or in part without permission in writing from the owners of the copyright. © 2024. All rights reserved

ATR

 VT / ATR 72-600 MEL	MEL TOC Table of Content	. Page n°01
---	---	--------------------

LIST OF ISSUES..... [LI](#)
REASON FOR UPDATES..... [RFU](#)
LIST OF EFFECTIVE DATA MODULES..... [LEDM](#)
CROSS REFERENCE TABLE..... [CRT](#)
PREAMBLE..... [PRE](#)
NON-SAFETY-RELATED ITEMS..... [NEF](#)
COMMERCIAL DESIGNATION..... [CD](#)
ALERT MESSAGE LIST..... [AML](#)
OPERATIONAL PART..... [MOP](#)
MAINTENANCE PART..... [MMP](#)



VT / ATR 72-600

MEL

MEL

TOC

Table of Content

Page n°02

PAGE
INTENTIONALLY
LEFT BLANK

 VT / ATR 72-600 MEL	MEL LI List of Issues	Page n°01
---	--	-----------

The technical content of this document is approved under the authority of the DOA ref. EASA.21J.044.

Revision should be integrated in Airline documentation no later than 90 days after issue date.

Issue Date	Reason for Issue
07 JUN 2019	Scheduled This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval Reference: EFOS-613/19 – APR19
24 OCT 2019	Scheduled This Minimum Equipment List is approved by the SEAC.PF and was issued following the release of REV 3.0 of the MMEL.
23 JAN 2020	Scheduled This Minimum Equipment List is approved by the SEAC.PF and was issued upon Air Tahiti needs and is not based on a new revision of the MMEL.
26 MAR 2020	Scheduled This Minimum Equipment List is approved by the SEAC.PF and was issued following the release of REV 4.0 of the MMEL.
09 APR 2021	Scheduled This Minimum Equipment List is approved by the SEAC.PF and was issued following the release of REV 7.0 of the MMEL.
12 MAY 2021	Scheduled This Minimum Equipment List is approved by the SEAC.PF and was issued following the release of AOM 2021/05 Potential temporary loss of all Cockpit Display Systems (CDS).
02 SEP 2021	Scheduled
09 DEC 2021	Scheduled This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval References: 18024 - NOV20 and EGO - 1569/21 - MAY21
22 SEP 2022	Scheduled Fill in the approval reference
09 FEB 2023	Scheduled

 VT / ATR 72-600 MEL	MEL LI List of Issues	Page n°03
---	--	-----------

Issue Date	Reason for Issue
29 MAR 2023	Scheduled This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval Reference: EFOS-613/19 – APR19
01 JUL 2023	Scheduled This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval References: EOO-1147/23 - APR23
01 JAN 2024	Scheduled This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval References: EOO-1147/23 - APR23
15 APR 2024	Scheduled This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval Reference: EFOS-613/19 – APR19
01 AUG 2024	Scheduled This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval References: EOO-4039/23 - MAY24
03 OCT 2024	Scheduled This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval Reference: EFOS-613/19 – APR19

Issue Date	Reason for Issue
24 OCT 2024	Scheduled This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval References: EOO-1147/23 - APR23
09 JAN 2025	Unscheduled: Issue for fleet update with MSN 1678 This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval References: 10084921 and 10084922- JUL24
01 MAR 2025	Scheduled This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval References: 10085766- NOV24
14 MAY 2025	Scheduled This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval References: 10085766- NOV24
24 JUN 2025	Unscheduled: Prise en compte de la révision 17 de la MMEL et intégration du F-OPFN. This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval References: EOO-1147/23 - APR23
26 SEP 2025	Scheduled This Master Minimum Equipment List (MMEL EFOS- 4775/15) is approved by the European Aviation Safety Agency (EASA) at the hereafter revision under the type certificate (EASA. A. 084) as part of the Operational Suitability Data (OSD) as per Regulation (EU) 748/2012 as amended by Regulation (EU) No 69/2014. Approval References: EOO-1147/23 - APR23

 VT / ATR 72-600 MEL	MEL RFU Reason for Updates	Page n°01
---	---	-----------

Issue date: 26 SEP 2025

Data Module	Reason for Update
MMEL/MEL.MOP OPERATIONAL PART	
MEL.MOP.22.50-08P FGCP - APP Pushbutton (O) _bc44d1b4-0325-486e-8600-1a82ad66e8c0 ALL	- Précision ajoutée sur la procédure opérationnelle.
MEL.MOP.27.23-01P Travel Limiter Unit (TLU) (O) _b29ba4db-cc9f-4332-aa65-44836e8cd256 1289-1350;1455-1568	- Applicability Updated
MEL.MOP.27.23-01P Travel Limiter Unit (TLU) (O) _458ea2d0-47be-4073-844e-80fabe260755 1192-1255;1355-1432;1658-1718	- Applicability Updated
MEL.MOP.28.42-03 Fuel LO LVL Alert _2f65665e-1063-472a-a0de-a548eb869bcd ALL	- correction du lien
MEL.MOP.32.51-01 Nose Wheel Steering _e1fa9c90-9a3a-48b3-bd87-d95f7e4aa686 ALL	- Conditions de dispatch ajoutées.
MEL.MOP.32.51-01P Nose Wheel Steering (O) _2f06fdd4-9af6-4f93-8e84-111ce3b01670 ALL	- Précisions ajoutées sur les parking autorisés à PPT.
MEL.MOP.34.11-01 Air Data Computer (ADC) _7d43eda3-4a51-435b-b80d-40fdb3ba010 1192-1255;1355-1432;1658-1718	- Applicability Updated
MEL.MOP.34.11-01 Air Data Computer (ADC) _21dd46d1-8f13-4fd0-9bcc-1dda9d35cf1b 1289-1350;1455-1568	- Applicability Updated
MEL.MOP.34.11-01P Air Data Computer (ADC) (O) _d1ce6a7c-5dc6-4222-9249-7f6bd0160b39 1192-1255;1355-1432	- Applicability Updated
MEL.MOP.34.11-01P Air Data Computer (ADC) (O) _d705d181-e362-4e49-bb3a-0420e1bbe635 1289-1350;1455-1568	- Applicability Updated

 VT / ATR 72-600 MEL	 MEL RFU Reason for Updates	 Page n°02
---	--	-------------------------------

Issue date: 26 SEP 2025

Data Module	Reason for Update
MEL.MOP.34.11-01P Air Data Computer (ADC) (O) _77cb0084-62a3-435b-98e6-04840b8bad17 1658-1718	- Applicability Updated

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°01
---	--	-----------

Status	Data Module	Revision Date	Applicability
MMEL/MEL.PRE PREAMBLE			
	MEL.PRE.1.01 GOALS _e147317e-9444-4d6e-b72b-20dabc85f961	24 JUN 2025	ALL
	MEL.PRE.1.02 PRINCIPLE _66a5ce31-0da9-4cf2-9b41-087aa7bc1abb	22 SEP 2022	ALL
	MEL.PRE.2.1 PRESENTATION OF THE MEL _8fedf3d2-11e0-4c91-a590-52559b78cc20	24 JUN 2025	ALL
	MEL.PRE.2.2 HOW TO READ THE MEL OPERATIONAL PART (MOP) _2bf150c9-a343-4964-966e-896d73d61c72	14 MAY 2025	ALL
	MEL.PRE.2.3 HOW TO READ THE MEL MAINTENANCE PART (MMP) _b3006c7a-d04e-4d9e-9193-dc687b29e615	22 SEP 2022	ALL
	MEL.PRE.2.4 HOW TO REPORT A DEPARTURE UNDER MEL RESTRICTION _orl004862	02 SEP 2021	ALL
	MEL.PRE.2.5 DEFINITIONS _f083eae7-9a82-48ca-8b33-63cd69c68452	24 JUN 2025	ALL
	MEL.PRE.2.6 Glossary of Standard Nomenclature _3473513c-92bc-4e37-ac7d-074a852a0df7	24 JUN 2025	ALL
MMEL/MEL.NEF NON-SAFETY-RELATED ITEMS			
	MEL.NEF.NEF.01 General _cbd46478-aff0-440c-9619-b3cf61cb2ead	21 OCT 2020	ALL
MMEL/MEL.CD COMMERCIAL DESIGNATION			
	MEL.CD.1 Commercial Designation _e6f6ef42-5116-4334-a707-9af05b587547	27 NOV 2020	ALL
MMEL/MEL.AML ALERT MESSAGE LIST			
	MEL.AML.01.01 GENERAL _b8a6c1e3-0def-4cc2-8069-0af668bb13f9	01 AUG 2024	ALL
	MEL.AML.01.02 READING THE TABLE _8998b74c-386e-4acc-b2ef-e3f89e9450b9	15 APR 2025	ALL

Status	Data Module	Revision Date	Applicability
	MEL.AML.10.10.01 ENG 1 FIRE _f0286e2c-b14f-4c42-bdd3-8ebec2d0f57a	19 MAY 2022	ALL
	MEL.AML.10.10.02 ENG 1 OIL PRESS _3144ca93-93bd-43af-9045-b06a3a63d027	19 MAY 2022	ALL
	MEL.AML.10.10.03 ENG 1 OUT _ba0c87c6-2a2f-4eaa-8b4d-2e75d30e6906	19 MAY 2022	ALL
	MEL.AML.10.10.04 ENG 1+2 OUT _7e96a788-0423-4f27-8c5d-c7ff8d7f8f7b	19 MAY 2022	ALL
	MEL.AML.10.10.05 NAC OVHT _e4d324cd-a443-4ae1-994d-2332389e9095	02 JUN 2022	ALL
	MEL.AML.10.10.06 ENG 2 FIRE _35ff3db0-937f-4132-a816-d39d5ecc9a94	19 MAY 2022	ALL
	MEL.AML.10.10.07 ENG 2 OIL PRESS _c5469c53-193f-4d81-a88a-0097f16fd7a0	19 MAY 2022	ALL
	MEL.AML.10.10.08 ENG 2 OUT _8cd6bc85-f1d3-4e18-ab59-d9311320e36b	19 MAY 2022	ALL
	MEL.AML.10.10.09 PROP BRK _07e5c4ab-0d2b-4def-a959-040efdcfb49f	26 MAR 2020	ALL
	MEL.AML.10.20.01 ELEC DC GEN 1+2 _0876737b-bd55-4f0b-9083-f944fa5537f2	19 MAY 2022	ALL
	MEL.AML.10.30.01 FLAPS UNLK _92c4bc9e-c712-4b5d-aaf0-9334544da842	19 MAY 2022	ALL
	MEL.AML.10.30.02 PITCH DISC _8c1ee672-8e57-4f4d-805d-62f4eaacf380	15 APR 2025	ALL
	MEL.AML.10.30.03 PITCH RECONNCT _c81149bd-5908-44a8-9d0a-02b0461d52d5	19 MAY 2022	ALL
	MEL.AML.10.40.01 LDG GEAR NOT DN _56ffa506-43d2-40a8-b8bc-01a748e7a755	19 MAY 2022	ALL
	MEL.AML.10.50.01 FWD SMK _862a17ce-2052-428f-bcbf-05fec2f1e398	19 MAY 2022	ALL
	MEL.AML.10.50.02 AFT SMK _ece04966-498e-4dea-b852-fdf2bc09a007	19 MAY 2022	ALL
	MEL.AML.10.50.03 ELEC SMK _56bc4c16-8042-4c61-ae41-60689de9367a	19 MAY 2022	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°03
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.AML.10.60.01 EXCESS CAB ALT _92bc0b04-9f60-49eb-a521-6f73622b336d	19 MAY 2022	ALL
	MEL.AML.10.60.02 EXCESS CAB DP _15d68add-a2eb-40de-9c23-991f84450831	19 MAY 2022	ALL
	MEL.AML.10.60.03 NEGATIVE CAB DP _cd199a1e-d7b8-4ba5-b694-9721df66ac70	19 MAY 2022	ALL
	MEL.AML.10.90.01 CONFIG _fd23b443-ec04-4774-ae60-74bc5d747e76	19 MAY 2022	ALL
	MEL.AML.20.10.01 ENG 1 LO PITCH _6f761868-721f-47fa-8605-f2dd51a2dff3	19 MAY 2022	ALL
	MEL.AML.20.10.02 ENG 1 OIL OVHT _07481825-6d93-415d-b074-6d7009b87122	19 MAY 2022	ALL
	MEL.AML.20.10.03 ENG 1 OVER LIM _47f71953-9d10-48fa-83ac-2f35a7ebb9ff	19 MAY 2022	ALL
	MEL.AML.20.10.04 ENG 1 PEC _fabb45d5-f4b0-473f-9cb4-058cf9f58322	19 MAY 2022	ALL
	MEL.AML.20.10.06 ENG 1 PEC SG CH _42654783-3102-4692-b66f-06d3606fbed3	24 OCT 2019	ALL
	MEL.AML.20.10.07 ENG 1 PROP LIM _b9103d95-4944-4b51-8e9e-6012660689e7	19 MAY 2022	ALL
	MEL.AML.20.10.09 ENG 2 LO PITCH _b5004fb2-0ae9-44ca-a738-3ffd6211b7dc	19 MAY 2022	ALL
	MEL.AML.20.10.10 ENG 2 OIL OVHT _0235683c-ca50-42b6-87a6-5e2e55d1a447	19 MAY 2022	ALL
	MEL.AML.20.10.11 ENG 2 OVER LIM _0c137579-332a-4b04-8809-8d98609b30ab	19 MAY 2022	ALL
	MEL.AML.20.10.12 ENG 2 PEC _b22429a4-aced-4227-a82a-91cbc3e65308	19 MAY 2022	ALL

Status	Data Module	Revision Date	Applicability
	MEL.AML.20.10.13 ENG 2 PEC SG CH _178e613a-b3c2-4858-b1b3-850d6a7f99ee	24 OCT 2019	ALL
	MEL.AML.20.10.14 ENG 2 PROP LIM _d8e48db8-e6db-4fb4-8877-609185743766	19 MAY 2022	ALL
	MEL.AML.20.10.16 ENG EEC _655cbc7e-c2ea-4166-9ece-655767beeced	24 OCT 2019	ALL
	MEL.AML.20.10.17 ENG EEC 1+2 _7788d507-b5c5-4443-ad71-10f504c25f61	19 MAY 2022	ALL
	MEL.AML.20.10.18 ENG PROP NP _7b64288b-09f6-4601-a348-65a598397d84	24 OCT 2019	ALL
	MEL.AML.20.10.19 ENG START _fceafc8a-ca3f-416e-b69c-b5d59d748dd0	02 JUN 2022	ALL
	MEL.AML.20.10.20 ENG START ITT _e76c0059-bf4b-4fa1-b499-22d1b067cfa2	02 JUN 2022	ALL
	MEL.AML.20.10.21 ENG START NO NH _d04800c5-66f3-4c3f-ac8f-0d4aa93b764a	24 OCT 2019	ALL
	MEL.AML.20.10.22 ENG X START _e637886c-6f9a-4b25-b247-94d1227fbbaa	02 JUN 2022	ALL
	MEL.AML.20.10.23 ENG 1 OIL TEMP H _fb92b927-8bae-4617-bab3-4c25981ff742	02 JUN 2022	ALL
	MEL.AML.20.10.24 ENG 1 OIL TEMP L _a0b806d1-a80c-4c06-87f4-87e0a6947785	02 JUN 2022	ALL
	MEL.AML.20.10.25 IDLE GATE _6f74ffcf-7455-42c7-b560-b3c3dc411933	19 MAY 2022	ALL
	MEL.AML.20.10.26 LOOP 1A _601b3d16-0f20-4482-b9fa-44cbe8f45e4a	24 OCT 2019	ALL
	MEL.AML.20.10.27 LOOP 1B _70527758-4969-4aa0-a869-2099c37d1053	24 OCT 2019	ALL
	MEL.AML.20.10.28 LOOP 2A _cfaa0a19-9ce3-47f4-9cdc-4a53a903cfd	24 OCT 2019	ALL
	MEL.AML.20.10.29 LOOP 2B _45f8c11f-be59-4d1a-9076-2b292f9e9d97	24 OCT 2019	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°05
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.AML.20.10.30 SINGLE ENGINE _952a56f0-dd14-4c14-ada5-dc621701b437	19 MAY 2022	ALL
	MEL.AML.20.10.31 ENG 2 OIL TEMP H _cc9d7b45-a2a1-440a-a8ce-40e67d4723b0	02 JUN 2022	ALL
	MEL.AML.20.10.32 ENG 2 OIL TEMP L _e7382165-b1fe-450d-afd7-8cce56a60a2b	02 JUN 2022	ALL
	MEL.AML.20.15.01 ENG FUEL CLOG _56c617f2-a411-4999-be4d-4fef62b34fb5	19 MAY 2022	ALL
	MEL.AML.20.15.02 FUEL 1 TEMP HI _a061c5f7-4a71-4001-8e76-cbeadc0530bb	13 JUN 2024	ALL
	MEL.AML.20.15.03 FUEL 1 TEMP LO _7cd7011d-3542-4b3b-b0d1-630cb81aa890	13 JUN 2024	ALL
	MEL.AML.20.15.04 FUEL 2 TEMP HI _9388e32d-bdf6-4f94-a4f2-0d6b7e3399fe	13 JUN 2024	ALL
	MEL.AML.20.15.05 FUEL 2 TEMP LO _518def57-8eb6-448f-851a-bee2d9b02d00	13 JUN 2024	ALL
	MEL.AML.20.15.06 FUEL FEED LO PR _914aa8c9-b090-4758-9e16-ebe10780f26f	19 MAY 2022	ALL
	MEL.AML.20.15.07 FUEL LO LVL _b5889003-b9d9-4b24-ab1d-b49cc4a8c259	19 MAY 2022	ALL
	MEL.AML.20.15.08 FUEL MISMATCH _5c858708-f41a-47e2-8574-3b29a0658ac5	19 MAY 2022	ALL
	MEL.AML.20.15.09 FUEL UNBALANCED _ccc5fd72-387d-4e62-bdc7-3b1b113826ed	02 JUN 2022	ALL
	MEL.AML.20.20.01 ELEC AC BUS 1 _9df23b8a-f3e5-4890-a2fc-c242c31e0fec	19 MAY 2022	ALL
	MEL.AML.20.20.02 ELEC AC BUS 2 _fb1f5206-5230-4914-b53a-b017adcbce2e	19 MAY 2022	ALL

Status	Data Module	Revision Date	Applicability
	MEL.AML.20.20.03 ELEC AC STBY _0b4ba899-7de3-4df4-877f-fc523068a5e5	19 MAY 2022	ALL
	MEL.AML.20.20.04 ELEC ACW 1+2 _9b522200-32c7-485b-afdc-811832a0f94f	19 MAY 2022	ALL
	MEL.AML.20.20.05 ELEC ACW BUS 1 _4848b3f6-60df-4922-b72e-854bba1e917d	19 MAY 2022	ALL
	MEL.AML.20.20.06 ELEC ACW BUS 2 _ab28f950-5a38-4a91-9540-fd1b64fd0c9b	19 MAY 2022	ALL
	MEL.AML.20.20.07 ELEC ACW GEN 1 _111a18ce-c44f-46a4-89aa-11ec4ea7f2cd	01 AUG 2024	ALL
	MEL.AML.20.20.08 ELEC ACW GEN 2 _61713aa1-6347-4ed8-bb9e-dd4dcadddc66	01 AUG 2024	ALL
	MEL.AML.20.20.09 ELEC BAT CHG _f3b6d19d-19f2-442e-9133-25298b0389d4	19 MAY 2022	ALL
	MEL.AML.20.20.10 ELEC BAT DISCH _d992c8eb-ec70-4fed-b46f-9d838ec48ec8	19 MAY 2022	ALL
	MEL.AML.20.20.11 ELEC CHG LOSS _439085de-f4f9-453c-b8e1-77efc795d2a2	19 MAY 2022	ALL
	MEL.AML.20.20.12 ELEC DC BUS 1 _62d2caca-2537-4f50-96d8-75473261efb6	19 MAY 2022	ALL
	MEL.AML.20.20.13 ELEC DC BUS 2 _fed0fcee-0bd4-4d64-b7b2-809ed4aa0fda	19 MAY 2022	ALL
	MEL.AML.20.20.14 ELEC DC EMER _392e5762-f534-483f-8593-33e66bdad782	19 MAY 2022	ALL
	MEL.AML.20.20.15 ELEC DC ESS _0cc81974-dc85-4ed8-a96c-ca52eadabfda	19 MAY 2022	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°07
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.AML.20.20.16 ELEC DC GEN _3dff0290-9bbb-4c5b-a501-40791d6f14a0	19 MAY 2022	ALL
	MEL.AML.20.20.17 ELEC DC SBY BUS _bcb056b0-c270-4077-8543-7319d05d4765	19 MAY 2022	ALL
	MEL.AML.20.20.18 ELEC DC SHED _89313cbe-0c2e-431f-acb2-600a3f3c81c0	19 MAY 2022	ALL
	MEL.AML.20.20.19 ELEC INV 1 _d5f3cc2c-0610-4229-82b3-bad8b0af08b0	19 MAY 2022	ALL
	MEL.AML.20.20.20 ELEC INV 2 _0413b900-f4f3-48a8-b343-25b4c60e5fa8	19 MAY 2022	ALL
	MEL.AML.20.20.21 ELEC STBY UNDV _b8a89a85-ac5f-4af9-9705-f0916c47b0e6	19 MAY 2022	ALL
	MEL.AML.20.25.01 HYD AUX LO PR _b8083b9d-9893-42d7-ae89-3b031af80258	19 MAY 2022	ALL
	MEL.AML.20.25.02 HYD AUX OVHT _9f93e513-6480-429b-9c3c-f9a34a28842d	19 MAY 2022	ALL
	MEL.AML.20.25.03 HYD BLUE LO LVL _f13ecb70-1f0d-439b-9eab-15ca857a0320	19 MAY 2022	ALL
	MEL.AML.20.25.04 HYD BLUE LO PR _6b59cd36-4340-4c9c-b062-01beb29ce31b	19 MAY 2022	ALL
	MEL.AML.20.25.05 HYD BLUE OVHT _574bbd62-3940-4f74-a9df-d05293c8c7ec	19 MAY 2022	ALL
	MEL.AML.20.25.06 HYD GREEN LO PR _d851dd68-c3d6-4385-9524-74bd14c93334	19 MAY 2022	ALL
	MEL.AML.20.25.07 HYD GREEN LO LVL _618cd8be-a045-4b9b-8d46-d53c4bb88f60	19 MAY 2022	ALL
	MEL.AML.20.25.08 HYD GREEN OVHT _5d008691-963c-4859-9fa6-ffe055340efd	19 MAY 2022	ALL

Status	Data Module	Revision Date	Applicability
	MEL.AML.20.25.09 HYD PUMPS LOSS _039ef1b8-da2f-4eb5-a7c6-4ca803929889	19 MAY 2022	ALL
	MEL.AML.20.25.10 HYD SYS LOSS _0e6ab8ca-a9d3-4adf-bbd8-7fec2bc418f2	19 MAY 2022	ALL
	MEL.AML.20.30.01 AIL LOCK LIT _5e1101e1-ab29-493d-8f95-f53b7d5c951f	19 MAY 2022	ALL
	MEL.AML.20.30.02 FLAPS ASYM _f5e175a6-e1c1-4830-a07e-03f0e9555db9	19 MAY 2022	ALL
	MEL.AML.20.30.03 FLAPS JAM _25044541-bf66-4c17-9fee-e07781a1e947	19 MAY 2022	ALL
	MEL.AML.20.30.04 FLT CTL PUSHER _559bffa5-c361-40f7-9f43-375d184b2bd1	19 MAY 2022	ALL
	MEL.AML.20.30.05 FLT CTL RUD RCU _06abc891-7310-4c91-a56b-58c98fdeb839	19 MAY 2022	ALL
	MEL.AML.20.30.06 FLT CTL TLU _43c602a3-2f8c-473f-8704-8ba18d98e81c	24 OCT 2019	ALL
	MEL.AML.20.30.07 PITCH TRIM ASYM _e4909b54-38fb-4d5d-854c-073973f0e558	19 MAY 2022	ALL
	MEL.AML.20.40.01 LDG GEAR _0784edcf-a369-4d8e-bf5d-f3c9a86414be	19 MAY 2022	ALL
	MEL.AML.20.40.02 WHEELS A-SKID _f4ead95c-f72b-48af-9f4a-d4c5d86b2d9a	24 OCT 2019	ALL
	MEL.AML.20.40.03 WHEELS BRK HOT _a33702af-6bd3-44d2-a7b1-6e5e0f8027f6	19 MAY 2022	ALL
	MEL.AML.20.50.02 DOOR FWD COMPT _b58d8d5f-2e2c-4c5d-8453-373baeae8c8f	19 MAY 2022	ALL
	MEL.AML.20.50.07 DOORS _5982fb63-fc27-45fa-adcc-9cd98ee3f3d5	19 MAY 2022	ALL
	MEL.AML.20.60.02 AIR AUTO PRESS _e59ca80c-87e4-4651-9f33-29e112469ea1	26 MAR 2020	1192-1568

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°09
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.AML.20.60.02 AIR AUTO PRESS _86ee3cd2-7c8c-456b-947b-b46867c7100f	04 NOV 2020	1658-1718
	MEL.AML.20.60.03 AIR BLEED 1 _184075e1-8465-416e-9936-508b4998c889	26 MAR 2020	ALL
	MEL.AML.20.60.04 AIR BLEED 2 _7f2cb9c5-d254-424e-b826-aba6a200c3cf	26 MAR 2020	ALL
	MEL.AML.20.60.05 AIR BLEED 1 LEAK _c52a7d3a-aac4-4f31-8051-873892d0809a	19 MAY 2022	ALL
	MEL.AML.20.60.06 AIR BLEED 1 OVHT _bdb247c3-ed3b-4db1-a776-6207548902d9	19 MAY 2022	ALL
	MEL.AML.20.60.07 AIR BLEED 2 LEAK _53ae89e7-470b-4d8e-aa63-ae03396df783	19 MAY 2022	ALL
	MEL.AML.20.60.08 AIR BLEED 2 OVHT _fcb94c9a-7075-4891-b444-0937b68b72d6	19 MAY 2022	ALL
	MEL.AML.20.60.09 AIR DITCH _6fc8ff25-2ab9-40e3-bd65-dba66e9fda27	19 MAY 2022	ALL
	MEL.AML.20.60.10 AIR DUCT 1 OVHT _1f2d162b-5841-4bfb-a880-da673ad4e2a2	19 MAY 2022	1192-1568
	MEL.AML.20.60.11 AIR DUCT 2 OVHT _d6827d1f-bbc2-4986-99a2-eaed23fa813c	19 MAY 2022	1192-1568
	MEL.AML.20.60.12 AIR OVBD _a5198a72-fa7d-41c8-a7f8-3a357e614a26	24 OCT 2019	ALL
	MEL.AML.20.60.13 AIR PACK _35997dc9-0ca6-42ab-8de4-9f3eda7d6c39	19 MAY 2022	1192-1568
	MEL.AML.20.60.13 AIR PACK _baffb04a-91d5-4793-b1fc-9a13f7402229	19 MAY 2022	1658-1718
	MEL.AML.20.60.14 AIR PACK 1+2 _f6014a56-2e13-4755-a422-83d8b2f0dd31	19 MAY 2022	1192-1568
	MEL.AML.20.60.14 AIR PACK 1+2 _832ed4ee-eca7-410c-8330-a2c729a54af6	04 NOV 2020	1658-1718

Status	Data Module	Revision Date	Applicability
	MEL.AML.20.60.15 AIR RECIR FAN 1 _fd010709-e666-4a6f-aae2-6c5c3a5a947e	24 OCT 2019	ALL
	MEL.AML.20.60.16 AIR RECIR FAN 2 _96c196a2-5371-4f7f-9863-567761903f06	24 OCT 2019	ALL
	MEL.AML.20.60.17 AIR VENT EXH _e58a0a2d-7e34-4524-9701-f3d56a9f9371	19 MAY 2022	ALL
	MEL.AML.20.60.18 AIR X VALVE _8b91235a-a025-4fbe-871d-19809b789918	26 MAR 2020	ALL
	MEL.AML.20.60.19 CAB deltaP _faedc481-346e-4169-8a61-6917293dc5f6	19 MAY 2022	ALL
	MEL.AML.20.60.20 CAB ALT _06f5f1ae-cab7-499e-a0eb-904a45bd55df	19 MAY 2022	ALL
	MEL.AML.20.70.01 A-ICING ALPHA _0d806d41-47b6-4b21-bac3-b7d1d0809420	01 AUG 2024	ALL
	MEL.AML.20.70.02 A-ICING ALPHAs _50996ea7-d6f7-4e87-8c93-4ba51759b2ad	19 MAY 2022	ALL
	MEL.AML.20.70.03 A-ICING AUTO _723253da-0e19-43b2-a80c-27fe6de1c87d	24 OCT 2019	ALL
	MEL.AML.20.70.04 A-ICING BLEED _7747c2e7-6511-48b9-81b4-9bdd0449d5a4	19 MAY 2022	ALL
	MEL.AML.20.70.05 A-ICING DETECT _4ca78f7b-a150-43ec-a660-8682e1052446	24 OCT 2019	ALL
	MEL.AML.20.70.06 A-ICING ENG 1 _01b623ee-59d6-4a16-a710-0f9e930a490f	19 MAY 2022	ALL
	MEL.AML.20.70.07 A-ICING ENG 2 _c9184154-4cc5-4980-a532-4b8b9cdd8831	19 MAY 2022	ALL
	MEL.AML.20.70.08 A-ICING FRAME _21d579e5-288e-4993-892e-c7a5b5353779	24 OCT 2019	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°11
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.AML.20.70.09 A-ICING HORNS 1 _7bbf5f40-9d64-413f-b2c0-3c3ef11993f9	26 MAR 2020	ALL
	MEL.AML.20.70.10 A-ICING HORNS 2 _a1a2a753-f6bd-4a97-b7f4-772339cd101e	26 MAR 2020	ALL
	MEL.AML.20.70.11 A-ICING L WSHLD _1a173ffc-1dc6-4b8c-bba3-7528c4c52c69	26 MAR 2020	ALL
	MEL.AML.20.70.12 A-ICING PIT CPT _0797294f-4666-4e89-bfa8-401864bbdb56	01 AUG 2024	ALL
	MEL.AML.20.70.13 A-ICING PIT FO _cec2eaed-e9db-46a8-b401-9f3f90db3482	01 AUG 2024	ALL
	MEL.AML.20.70.14 A-ICING PIT SBY _14f09070-cf14-4f61-9671-3f9263c0665a	01 AUG 2024	ALL
	MEL.AML.20.70.15 A-ICING PROP 1 _746cb865-d8e8-42ff-a06a-4fc29997cecd	24 OCT 2019	ALL
	MEL.AML.20.70.16 A-ICING PROP 2 _eadc1541-d43c-4038-b115-8a6123abf74b	24 OCT 2019	ALL
	MEL.AML.20.70.17 A-ICING R WSHLD _ccc32e33-14e8-4b18-b200-a5d96ca28e55	26 MAR 2020	ALL
	MEL.AML.20.70.18 A-ICING SEL _4e88d653-9165-498b-9cd2-a2fef66c20fb	19 MAY 2022	ALL
	MEL.AML.20.70.19 A-ICING TAT CPT _d864df97-a611-474f-892d-caa847e7f779	19 MAY 2022	ALL
	MEL.AML.20.70.20 A-ICING TAT FO _ef160459-e1f8-4593-b3dc-6234673ffca2	19 MAY 2022	ALL
	MEL.AML.20.70.21 A-ICING WINDOWS _45247200-343b-45c9-ad8f-3af32e40e281	26 MAR 2020	ALL
	MEL.AML.20.70.22 ICING _b1191f3d-f687-4b90-93ea-78a5fd71ba71	15 APR 2025	ALL

Status	Data Module	Revision Date	Applicability
	MEL.AML.20.75.01 AILERON MISTRIM _5f82001c-8bec-4eb7-bd9d-1846933a5600	19 MAY 2022	ALL
	MEL.AML.20.75.02 AP PITCH TRIM _4347904f-417c-4e99-a269-75a6aae78a6b	19 MAY 2022	ALL
	MEL.AML.20.75.03 PITCH MISTRIM _75679f4e-12a6-4989-a8f4-66ad3a8bce02	19 MAY 2022	ALL
	MEL.AML.20.75.04 RUDDER MISTRIM _c2adcb52-475a-4dcb-a3ed-fd363c2209f7	19 MAY 2022	ALL
	MEL.AML.20.75.05 YAW AUTO TRIM _72d39dac-9782-4e08-8e97-f9103f5a9ec2	19 MAY 2022	ALL
	MEL.AML.20.80.01 APM FAULT _1424f81e-8eb0-41ee-87e6-f0e627659b1b	26 MAR 2020	ALL
	MEL.AML.20.85.1 ADC _ecbae6d4-f141-466a-ae2c-58ea5a6039bf	01 AUG 2024	ALL
	MEL.AML.20.85.2 ADC 1+2 _33142d9c-a84e-4ab1-805a-b541561e4d4b	01 AUG 2024	ALL
	MEL.AML.20.85.3 ADS-B _ad146c8b-c840-4ca5-8d53-8f17cea2abcf	01 AUG 2024	ALL
	MEL.AML.20.85.4 AHRS _9394ea1e-b9ec-4e6b-b57c-55b707d480e0	01 AUG 2024	ALL
	MEL.AML.20.85.5 AHRS 1+2 _8c0416f8-777b-4345-9f86-b78cbd609c46	01 AUG 2024	ALL
	MEL.AML.20.85.6 AHRS NOT ALIGN _5d711025-3961-4e4f-b51b-a47de2254bab	01 AUG 2024	ALL
	MEL.AML.20.85.7 ALT DISAGREE _2526d953-87c1-4a50-9a41-f7642200ef4e	01 AUG 2024	ALL
	MEL.AML.20.85.8 ATT DISAGREE _7e8b8e64-4c51-4121-a412-96f4f116e5f9	01 AUG 2024	ALL
	MEL.AML.20.85.9 AUDIO SEL CAPT _ec87f494-53a3-473f-bc37-87ed7e0a2d3b	01 AUG 2024	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°13
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.AML.20.85.10 AUDIO SEL (FO) _3112fffa-c54e-40b7-ab12-9008aea5de5b	01 AUG 2024	ALL
	MEL.AML.20.85.11 AVNX CPM 1 _03164f92-5e17-4568-ad2b-bbe6a2378a6c	01 AUG 2024	ALL
	MEL.AML.20.85.12 AVNX CPM 2 _7bcd9ba0-4490-4cba-a8da-7d850e372681	01 AUG 2024	ALL
	MEL.AML.20.85.13 AVNX CPM 1 + IOM 22 _1f0efa32-348b-4c03-85b1-66b9cc2c760c	01 AUG 2024	ALL
	MEL.AML.20.85.14 AVNX CPM 1 + IOM 23 _5a2263dc-407c-4b13-9e09-3f22b8fdae78	01 AUG 2024	ALL
	MEL.AML.20.85.15 AVNX CPM 2 + IOM 12 _c7f3d68b-bde1-4bc5-9559-5996807f0d0a	01 AUG 2024	ALL
	MEL.AML.20.85.16 AVNX CPM 2 + IOM 13 _b05facb1-c90d-420e-93f1-0ab89d6a7c50	01 AUG 2024	ALL
	MEL.AML.20.85.17 AVNX IOM 12 _bd6a7415-079b-4f9e-bd94-496364b8a085	01 AUG 2024	ALL
	MEL.AML.20.85.18 AVNX IOM 12 + 13 _dc364491-89af-472c-acbf-343b651b886c	01 AUG 2024	ALL
	MEL.AML.20.85.19 AVNX IOM 12 + 22 _514b1ad2-b784-4e9d-8474-c0653e0d9df9	01 AUG 2024	ALL
	MEL.AML.20.85.20 AVNX IOM 12 + 23 _86ddf1a7-9c41-452e-8319-cf2a16abd09e	01 AUG 2024	ALL
	MEL.AML.20.85.21 AVNX IOM 13 _3153b01a-894e-4fa2-b46e-5f6423ca86b2	01 AUG 2024	ALL
	MEL.AML.20.85.22 AVNX IOM 13 + 22 _618deffa-c0fa-45ac-a20a-9886bd97ba3b	01 AUG 2024	ALL
	MEL.AML.20.85.23 AVNX IOM 13 + 23 _3b7b440a-eae4-4335-b973-87e660f570fb	01 AUG 2024	ALL
	MEL.AML.20.85.24 AVNX IOM 22 _368d6c8e-be6e-46d8-88d4-d5c54fbb0202	01 AUG 2024	ALL

Status	Data Module	Revision Date	Applicability
	MEL.AML.20.85.25 AVNX IOM 22 + 23 _55189191-81ae-474e-9438-bbefaf85755f	01 AUG 2024	ALL
	MEL.AML.20.85.26 AVNX IOM 23 _806481ab-10d1-4ba4-b090-431bde7dc293	01 AUG 2024	ALL
	MEL.AML.20.85.27 AVNX SGL SWITCH _feb60e26-b26c-47ba-9958-b8bd1c39aa51	01 AUG 2024	ALL
	MEL.AML.20.85.28 DME LOSS _aaa28b8f-e65f-4163-bb59-fb83a57954bc	01 AUG 2024	ALL
	MEL.AML.20.85.29 DU TEMP HI _15e85f9a-8fa3-4e8f-8929-f3af22860de2	02 JUN 2022	ALL
	MEL.AML.20.85.30 DU DISCREPANCY _dcd2f322-835b-438a-b903-25ebc2803007	02 JUN 2022	ALL
	MEL.AML.20.85.31 DUs TEMP HI _da5b190a-c3c9-41a8-8411-be5f1d3462f3	02 JUN 2022	ALL
	MEL.AML.20.85.32 FWS SGL CH _5425fdcc-79e1-4a2f-b650-ed4847a261ff	01 AUG 2024	ALL
	MEL.AML.20.85.33 GPWS _1d5505c1-23a2-4178-9e26-9e958f83bd76	01 AUG 2024	ALL
	MEL.AML.20.85.34 HDG DISAGREE _23e2cfaf-3c0f-4347-b4a0-78e85915b081	01 AUG 2024	ALL
	MEL.AML.20.85.35 HF _438cecba-8f7f-4aee-9126-38fbc6d4304a	01 AUG 2024	ALL
	MEL.AML.20.85.36 HF 1+2 _bc3431b6-872e-4256-aba0-5d2566de6c21	01 AUG 2024	ALL
	MEL.AML.20.85.37 HF EMITTING _16764cf8-d536-48bc-be8c-c77eeecf0cc	01 AUG 2024	ALL
	MEL.AML.20.85.38 IAS DISAGREE _ca6aad6d-de72-4888-b18f-fc03c022c513	01 AUG 2024	ALL
	MEL.AML.20.85.39 RMS _f920e3ce-408a-4a12-8226-71f607c6dfa4	01 AUG 2024	ALL
	MEL.AML.20.85.40 RMS 1+2 _40f52764-ab3a-4675-9460-65a23b82c704	01 AUG 2024	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°15
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.AML.20.85.41 SGL DME _f2547429-cf8b-4621-a4c5-349dfe0bd1d8	01 AUG 2024	ALL
	MEL.AML.20.85.42 TCAS _af771852-cffc-424f-83bd-057403f09364	01 AUG 2024	ALL
	MEL.AML.20.85.43 TERRAIN _49ba4e02-b390-403d-8561-c8d5d5acb03e	01 AUG 2024	ALL
	MEL.AML.20.85.44 VHF _d162caec-4c62-4bcb-8391-123ac1e617fc	01 AUG 2024	ALL
	MEL.AML.20.85.45 VHF 1+2 _7bc6cc36-494f-4331-be41-a6da89bfa5b9	01 AUG 2024	ALL
	MEL.AML.20.85.46 VHF EMITTING _c0f2a4c1-6477-4f68-944e-70ae2b829883	01 AUG 2024	ALL
	MEL.AML.20.85.47 XPDR _48116ae1-5f70-4834-bec4-357cb0ae7bef	01 AUG 2024	ALL
	MEL.AML.20.85.48 XPDR 1+2 _b763c364-2f9a-4f62-a1d4-12b1dd2f3223	01 AUG 2024	ALL
	MEL.AML.20.90.01 BAD CONF _067ea0b7-d167-4cb5-9c7d-834d3f0b3899	19 MAY 2022	ALL
	MEL.AML.20.90.03 DATA RECORDER _c67dd56a-a638-4e97-91ae-eeb3fe2df120	26 MAR 2020	ALL
	MEL.AML.20.90.05 FDAU _2bd5d9cf-4dba-4720-8016-cef05efdf423	27 MAY 2015	ALL
	MEL.AML.20.90.06 OXY _90e8365a-e42e-4620-914e-98d0f21f14fd	19 MAY 2022	ALL
	MEL.AML.20.90.07 RAD-ALT _ac1bbc8a-be9b-4726-a6b2-6b351199c585	27 MAY 2015	ALL
	MEL.AML.20.90.08 RAD-ALT LOSS _142d04de-155c-4037-afd6-f65b31e7f31f	27 MAY 2015	ALL
	MEL.AML.20.90.09 VOICE RECORDER _ad858712-c9ca-4e68-b628-fc094a88584f	27 MAY 2015	ALL
	MEL.AML.20.90.10 AIR AFT DET FAN _c91c618e-a8e9-4b0f-8127-2508e8821143	07 MAY 2019	ALL
	MEL.AML.20.100.01 MFC 1A _cf4b523d-e672-4a49-bad9-b3f62d3ecfbf	19 MAY 2022	ALL

Status	Data Module	Revision Date	Applicability
	MEL.AML.20.100.02 MFC 1A + 1B _f758fb1d-daf5-474e-a25d-9af86c81a2e4	19 MAY 2022	ALL
	MEL.AML.20.100.03 MFC 1A + 2A _e3506a62-daf6-440c-ba5e-6f6d5603ea29	19 MAY 2022	ALL
	MEL.AML.20.100.04 MFC 1A + 2B _f8f5dcea-4524-4f00-bac8-12cc30c5ddcf	19 MAY 2022	ALL
	MEL.AML.20.100.05 MFC 1B _4ab18217-f364-40e1-829a-95e8bf4b3ede	19 MAY 2022	ALL
	MEL.AML.20.100.06 MFC 1B + 2A _ec865929-d409-4446-8f7c-99c44b33730a	19 MAY 2022	ALL
	MEL.AML.20.100.07 MFC 1B + 2B _b9fe395a-f5fd-4cdf-82c7-007476bceed1	19 MAY 2022	ALL
	MEL.AML.20.100.08 MFC 2A _12922f17-7306-4238-be92-f9623ceadf07	19 MAY 2022	ALL
	MEL.AML.20.100.09 MFC 2A + 2B _02c641e6-05a7-47cf-b26f-ff7bbe2b2d21	19 MAY 2022	ALL
	MEL.AML.20.100.10 MFC 2B _f0cdea81-86d0-4b91-bad3-84488f72609a	19 MAY 2022	ALL
MMEL/MEL.MOP OPERATIONAL PART			
	MEL.MOP.21.10-01 Flow Selector _2189f0b9-a595-4d13-b78a-f676e894275a	11 APR 2025	ALL
	MEL.MOP.21.10-01P Flow Selector (O) _acfd4ed7-264b-45a6-bc13-029b264ad8aa	19 MAY 2022	ALL
	MEL.MOP.21.22-01 Recirculation Fan _7c670d2c-afd9-4a0e-b555-9703077cc677	22 SEP 2022	ALL
	MEL.MOP.21.22-02 Emergency Ram Air Valve (ERAV) _59140c10-79c7-4c59-bdc8-9b1f87e1395b	01 AUG 2024	1658-1718
	MEL.MOP.21.22-02P Emergency Ram Air Valve (ERAV) (O) _fc8ad311-0021-4290-bae8-1756ba80e077	01 AUG 2024	1658-1718

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°17
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.21.22-03 Emergency Ram Air Check Valve (ERACKV) _46f4b386-7b10-4d55-b96d-73db59216451	08 APR 2020	1658-1718
	MEL.MOP.21.22-03P Emergency Ram Air Check Valve (ERACKV) (O) _631e0095-633b-4377-ba96-8b9d24411409	24 JUL 2020	1658-1718
	MEL.MOP.21.23-01 Overboard Valve _1f1296af-6058-4587-a14a-ec3c5530532a	11 APR 2025	ALL
	MEL.MOP.21.23-01P Overboard Valve (O) _37a82983-8d5e-4ae5-bc56-09f49ed4ef09	24 JUN 2025	ALL
	MEL.MOP.21.23-02 Underfloor Valve _8ff06996-9911-46af-a0c8-a0f026f0d393	01 AUG 2024	ALL
	MEL.MOP.21.23-02P Underfloor Valve (O) _99b1e4ae-92ae-4b6d-be39-1352273e2d9e	01 AUG 2024	ALL
	MEL.MOP.21.23-03-01 Extract Fan - Passenger Configuration _36ca7c30-6efd-466c-beef-4c71ccab8a3	01 AUG 2024	ALL
	MEL.MOP.21.23-03-02 Extract Fan - Cargo Configuration _487356a6-c2f9-4c7d-9c45-dc5ec9e8718b	22 SEP 2022	1350;1455
	MEL.MOP.21.23-03P Extract Fan - Passenger Configuration (O) _228fe7b4-c3e7-4ae8-91c6-ffd740e8b691	01 AUG 2024	ALL
	MEL.MOP.21.30-01-01 Pressurization System - Passenger Configuration _1983feb9-2347-41f7-88d9-02a7c1cc9fe9	01 AUG 2024	1192-1568
	MEL.MOP.21.30-01-01 Pressurization System - Passenger Configuration _650906ba-e73d-4ccb-8ea6-30b87b51e86c	01 AUG 2024	1658-1718
	MEL.MOP.21.30-01-02 Pressurization System - Cargo Configuration _c7919d27-effb-4184-927f-35833d6006cd	01 AUG 2024	1350;1455

Status	Data Module	Revision Date	Applicability
	MEL.MOP.21.30-01P Pressurization System (O) _08afddf4-c20b-48f5-a32a-c540372e32be	02 NOV 2020	1192-1568
	MEL.MOP.21.30-01P Pressurization System (O) _d85f03b6-2cc5-4cce-b0f9-f2f7556992b9	01 AUG 2024	1658-1718
	MEL.MOP.21.31-01 Automatic Pressurization Control _88b5830e-89aa-4e45-a6c9-8af34d6c93e5	24 OCT 2019	1192-1568
	MEL.MOP.21.31-01 Automatic Pressurization Control _38eb6a8b-2b9c-4717-9654-a96e7329c083	08 APR 2020	1658-1718
	MEL.MOP.21.31-01P Automatic Pressurization Control (O) _dd463a69-f77d-4831-a1c1-6d0df19177af	15 APR 2025	ALL
	MEL.MOP.21.31-02 DESCENT RATE Selector _07faf458-724e-445e-912f-2d1c7799f60f	24 OCT 2019	1192-1568
	MEL.MOP.21.31-03 Electropneumatic Outflow Valve _d78b75d2-56a6-4323-9480-81d512626a7d	24 OCT 2019	1192-1568
	MEL.MOP.21.31-04-01 CABIN PRESS Indication - ALT _c5ddd69b-3ae1-4492-b7cb-ea01e466584d	24 OCT 2019	ALL
	MEL.MOP.21.31-04-01P CABIN PRESS Indication - ALT (O) _4ee6d5b1-7a75-4365-bc5d-8079502494ef	01 AUG 2024	ALL
	MEL.MOP.21.31-04-02 CABIN PRESS Indication - RATE _ec614c1a-7831-4968-aa08-3219bde022bb	24 OCT 2019	ALL
	MEL.MOP.21.31-04-02P CABIN PRESS Indication - RATE (O) _e006294b-8ae8-46f3-afa0-14411b0a20c6	01 AUG 2024	ALL
	MEL.MOP.21.31-04-03 CABIN PRESS Indication - Pressure _d344440d-d17d-480f-abb0-2a49b574fbba	24 OCT 2019	ALL
	MEL.MOP.21.31-04-03P CABIN PRESS Indication - Pressure (O) _e379c0df-f94b-4733-888c-7b94a9d19f6c	01 AUG 2024	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°19
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.21.31-05 Ditch Function _e59c3501-7796-4bef-8aae-86759f06f812	22 SEP 2022	ALL
	MEL.MOP.21.33-01 Automatic Landing ELEV Display _4e31f0f7-fbc4-4db2-b4a5-ea0446dcff0f	08 APR 2020	1658-1718
	MEL.MOP.21.33-01P Automatic Landing ELEV Display (O) _4ee46c62-a073-4e96-ba31-4da3b215ff6a	24 JUL 2020	1658-1718
	MEL.MOP.21.34-01 Safety Valve (SFV) _9c10a9d5-94b3-4c93-9c30-910fa581cecb0	01 AUG 2024	1658-1718
	MEL.MOP.21.34-01P Safety Valve (SFV) (O) _c7f16762-6cc7-4787-9174-e4441f479a13	01 AUG 2024	1658-1718
	MEL.MOP.21.35-01 DUMP Function _d642bf16-28d7-4ac5-b00b-525547d05b5c	24 OCT 2019	ALL
	MEL.MOP.21.35-01P DUMP Function (O) _2f68def7-d95a-493c-a090-9a8a0347879b	24 OCT 2019	ALL
	MEL.MOP.21.50-01 Pack _375e73f4-fd2c-4920-b0e0-bbeed6d29986	01 AUG 2024	1192-1568
	MEL.MOP.21.50-01 Pack _879748ac-f1ae-4211-82c3-ca0aced071b1	01 AUG 2024	1658-1718
	MEL.MOP.21.50-01P Pack (O) _e2f8d605-6f7f-48de-ad4b-4803b0856c47	01 AUG 2024	1192-1568
	MEL.MOP.21.50-01P Pack (O) _6c39ec61-ad0b-4859-9fcc-620a2ae1754a	31 MAY 2024	1658-1718
	MEL.MOP.21.50-02 Flow Control Valve (FCV) _dc37a322-14d5-43e2-af60-fcc44582ad0a	01 AUG 2024	1658-1718
	MEL.MOP.21.50-02P Flow Control Valve (FCV) (O) _a37fca68-0015-4804-a367-9f15f8387d6a	24 JUL 2020	1658-1718
	MEL.MOP.21.50-03 Integrated Air System Controller (IASC) _dcd1dd51-987f-4c6e-850c-b4799732f1f3	01 AUG 2024	1658-1718
	MEL.MOP.21.50-03P Integrated Air System Controller (IASC) (O) _5dfbbbc08-2677-4c7d-ae59-fa6ed0fd8b01	31 MAY 2024	1658-1718

Status	Data Module	Revision Date	Applicability
	MEL.MOP.21.50-04 Pack Temperature Sensor Channels (PTS) _8d5af000-aa18-4a41-a48d-d4dde3e0a983	08 APR 2020	1658-1718
	MEL.MOP.21.50-05 Pack Inlet Temperature Sensor (PITS) _85418baf-077b-400d-b080-e281fa27bfb6	08 APR 2020	1658-1718
	MEL.MOP.21.50-05P Pack Inlet Temperature Sensor (PITS) (O) _1a4190b6-617a-4b26-a9ea-89172e050b1b	24 JUL 2020	1658-1718
	MEL.MOP.21.50-06 Compressor Discharge Temperature Sensor (CDTS) _83e9c70a-8c2d-400f-80ab-da37ce6c4138	08 APR 2020	1658-1718
	MEL.MOP.21.50-06P Compressor Discharge Temperature Sensor (CDTS) (O) _0023c718-af75-47e1-a953-340e42ac5c2c	24 JUL 2020	1658-1718
	MEL.MOP.21.50-07 Pack Inlet Pressure Sensor (PIPS) _7c6e9a17-460f-4ca6-b806-e1ff3cff9533	08 APR 2020	1658-1718
	MEL.MOP.21.50-07P Pack Inlet Pressure Sensor (PIPS) (O) _d4b257bc-1dea-4dc5-a925-6719de982d6c	24 JUL 2020	1658-1718
	MEL.MOP.21.50-08 Pack Discharge Temperature Sensor (PDTS) _946bc1f3-d5d3-4dbe-8c1d-7af5ddb5d1ad	11 APR 2025	1658-1718
	MEL.MOP.21.50-08P Pack Discharge Temperature Sensor (PDTS) (O) _ba6942cf-fd09-4b99-8fb4-8e45f3915643	24 JUL 2020	1658-1718
	MEL.MOP.21.50-09 Pack Discharge Pressure Sensor (PDPS) _8394a763-3404-4c22-a072-746abab67b96	08 APR 2020	1658-1718
	MEL.MOP.21.50-09P Pack Discharge Pressure Sensor (PDPS) (O) _98367612-b6a1-4801-8434-d572cf82e05e	24 JUL 2020	1658-1718

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°21
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.21.51-01 Pack Valve _1adcb611-0eaf-4441-bca8-8034583904d8	24 OCT 2019	1192-1568
	MEL.MOP.21.51-01P Pack Valve (O) _b08f6f04-bff3-4991-a7a2-a7e9660cb00c	01 AUG 2024	1192-1568
	MEL.MOP.21.51-02 PACK FAULT Alert _94c4abf4-6bb2-4466-a9af-a7159f70213e	07 OCT 2020	1192-1568
	MEL.MOP.21.51-02 PACK FAULT Alert _cbffec1b-7779-4484-9c55-fdc7549f9d42	08 APR 2020	1658-1718
	MEL.MOP.21.51-02P PACK FAULT Alert (O) _defb4e07-4528-4760-9dce-dae0a97e9458	01 AUG 2024	1192-1568
	MEL.MOP.21.51-02P PACK FAULT Alert (O) _97926931-2d3b-4d66-a199-75382979240b	07 SEP 2020	1658-1718
	MEL.MOP.21.51-03 Cooling FAN _3c846c29-34ad-48e6-9510-0072481375d8	02 NOV 2020	1192-1568
	MEL.MOP.21.51-06 Ram Air Water Sprayer (WS) _6ccab4d9-3d2e-4542-8f67-4f96704d19ce	08 APR 2020	1658-1718
	MEL.MOP.21.51-07 Water Extractor (WE) _6dc49039-014d-47c6-b952-d65beea3fe3d	08 APR 2020	1658-1718
	MEL.MOP.21.51-08 Mix Manifold Temperature Sensor (MIXTS) _db132c04-f455-4f4d-9e1a-f25e5315b1d4	01 AUG 2024	1658-1718
	MEL.MOP.21.51-09 Ventilated Temperature Sensor (VENTS) _b0347f02-ecdc-42e9-9dbf-b12cbae0e0a0	08 APR 2020	1658-1718
	MEL.MOP.21.61-01 Pack AUTO Temperature Control _6b73ede0-5eb5-498d-9917-8b50544f3ae3	24 OCT 2019	ALL
	MEL.MOP.21.61-01P Pack AUTO Temperature Control (O) _37b40015-ea04-46cc-9735-d255d6693ae8	24 OCT 2019	ALL
	MEL.MOP.21.61-02 Pack MAN Temperature Control _bd93409f-6705-4ef1-9146-e01869f7f628	24 OCT 2019	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.21.61-03 OVHT Alert _b1a842ed-23cd-4017-a063-c8d8af8804d6	19 OCT 2020	1192-1568
	MEL.MOP.21.61-03P OVHT Alert (O) _12273e59-2d39-4122-964f-c982fdb5fe0	24 OCT 2019	1192-1568
	MEL.MOP.21.61-04 Ram Air Regulating Valve (RARV) _121a3c0a-e6e8-459a-bf00-b4c0a8dd3c68	08 APR 2020	1658-1718
	MEL.MOP.21.61-04P Ram Air Regulating Valve (RARV) (O) _2387ee7f-fb41-4fc6-9ee0-937f4076a68d	24 JUL 2020	1658-1718
	MEL.MOP.21.63-01-01 COMPT TEMP - Flight Deck Indication _4a896937-f503-4b71-85fa-1fba921daf49	24 OCT 2019	ALL
	MEL.MOP.21.63-01-02 COMPT TEMP - Cabin Indications _92ba9b81-6011-4e03-a075-7fca7b596337	24 OCT 2019	ALL
	MEL.MOP.21.63-02 DUCT Indication _8453943e-d024-475a-88f8-b15734424671	22 SEP 2022	ALL
	MEL.MOP.22.16-01 Pitch Wheel _03416700-71b2-4e98-a647-855d883b27c3	24 OCT 2019	ALL
	MEL.MOP.22.16-02 Touch Control Steering (TCS) _274faea3-f15d-48c5-bdc3-c44dbb7f7b1f	24 OCT 2019	ALL
	MEL.MOP.22.16-02P Touch Control Steering (TCS) (O) _1415bc2b-bac6-4b1b-9023-aaca5201b101	24 OCT 2019	ALL
	MEL.MOP.22.16-03 Coupling Function Pushbutton _f03e99d1-8462-4077-9a4f-1d266a9dcb7f	14 MAY 2025	ALL
	MEL.MOP.22.16-03P Coupling Function Pushbutton (O) _2a38dfbf-09de-4e0d-b52f-67ddcf0001b1	24 OCT 2019	ALL
	MEL.MOP.22.16-04 Autopilot Quick Disconnect Pushbutton (Quick Release Control) _daefa7dc-d6c2-41b4-9009-13fe86c03f8c	24 OCT 2019	ALL
	MEL.MOP.22.18-01 Autopilot Function _d9372ba8-5aef-4174-8228-e3746ce95cf6	14 MAY 2025	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°23
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.22.18-02 Flight Director Function _a65f20be-98c4-4c5a-b55e-ef08a7586dac	22 SEP 2022	ALL
	MEL.MOP.22.18-03 Yaw Damper Function _60985d06-e737-4d34-a6de-d8f75191b0f7	24 JUN 2025	ALL
	MEL.MOP.22.18-03P Yaw Damper Function (O) _2e8fc6f3-2cf4-472a-bd7a-5707c9604125	26 MAR 2020	ALL
	MEL.MOP.22.50-01 FGCP - VS Pushbutton _a88aca40-1b73-45fa-ad81-e01449c8bf9c	24 OCT 2019	ALL
	MEL.MOP.22.50-01P FGCP - VS Pushbutton (O) _9049a685-2a27-4e9f-a362-a14f5ba89143	24 OCT 2019	ALL
	MEL.MOP.22.50-02 FGCP - ALT Pushbutton _f3188bcb-6d6d-43f0-ad2f-cc6b1b8e7cb4	24 OCT 2019	ALL
	MEL.MOP.22.50-02P FGCP - ALT Pushbutton (O) _b815629b-000d-4ddb-8fea-32d4e936ee2e	24 OCT 2019	ALL
	MEL.MOP.22.50-03 FGCP - ALT SEL Knob _a42ba1bf-dbf0-4b5d-9b85-54c2896230ef	24 OCT 2019	ALL
	MEL.MOP.22.50-03P FGCP - ALT SEL knob (O) _91905eb0-a9ce-4e6d-ae01-dbe2cdd015aa	24 OCT 2019	ALL
	MEL.MOP.22.50-05 FGCP - STBY Pushbutton _0feafc5f-a847-4650-b3d9-4bdaf3822d70	24 OCT 2019	ALL
	MEL.MOP.22.50-05P FGCP - STBY Pushbutton (O) _5f589411-1463-4d89-8237-db00c9133a4e	24 OCT 2019	ALL
	MEL.MOP.22.50-06 FGCP - HDG SEL Pushbutton _5fb46014-6f90-4729-832f-05807f7518d4	24 OCT 2019	ALL
	MEL.MOP.22.50-06P FGCP - HDG SEL Pushbutton (O) _b0166ecf-a9eb-4ca3-b030-807469a34e2d	24 OCT 2019	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.22.50-07 FGCP - HDG Knob _276fa4cd-07ca-47d3-b3ac-725290e664d3	24 OCT 2019	ALL
	MEL.MOP.22.50-08 FGCP - APP Pushbutton _d965af1d-5171-420d-805b-9e078d05ddea	24 OCT 2019	ALL
R	MEL.MOP.22.50-08P FGCP - APP Pushbutton (O) _bc44d1b4-0325-486e-8600-1a82ad66e8c0	26 SEP 2025	ALL
	MEL.MOP.22.50-09 FGCP - NAV Pushbutton _ba0b9ef9-9fd6-45ba-8529-60c8aab710fb	24 OCT 2019	ALL
	MEL.MOP.22.50-10 FGCP - BC Pushbutton _73a8ef91-6ad3-4ac9-a16a-13f722f0898a	24 OCT 2019	ALL
	MEL.MOP.22.50-10P FGCP - BC Pushbutton (O) _6c518d36-5aef-4f1e-864b-36c95b3a23b7	22 SEP 2022	ALL
	MEL.MOP.22.50-11 FGCP - FD Pushbutton _f7f224e3-edfc-4ede-bdd6-dbd263ba733b	24 OCT 2019	ALL
	MEL.MOP.22.50-11P FGCP - FD Pushbutton (O) _1d04a55e-0eae-436b-8ae8-ffe5acdcd3a3	22 SEP 2022	ALL
	MEL.MOP.22.50-12 FGCP - VNAV pushbutton _438adacf-4c7a-4318-b5bd-683c9f346b38	24 OCT 2019	ALL
	MEL.MOP.22.50-12P FGCP - VNAV Pushbutton (O) _d9d3f6f6-d0ee-4dc3-8645-8733a7c573e2	01 AUG 2024	ALL
	MEL.MOP.22.60-01 ICP - SPD TGT Knob _1cedde02-6f5c-44e5-aa0d-ccb7d1780996	24 OCT 2019	ALL
	MEL.MOP.22.60-01P ICP - SPD TGT knob (O) _7b127fca-f836-4e80-b7f1-eba90b68e30c	24 OCT 2019	ALL
	MEL.MOP.22.60-02 ICP - (AUTO - MAN) Pushbutton _76031105-177d-4bff-9de4-bbc3655cda32	24 OCT 2019	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°25
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.22.60-02P ICP - (AUTO - MAN) Pushbutton (O) _b843e56a-fe2d-4924-9055-2d9eee947fe5	22 SEP 2022	ALL
	MEL.MOP.23.11-01 HF system _1e34f2f1-18c0-4a48-b932-6e17dd4947d2	22 SEP 2022	ALL
	MEL.MOP.23.12-01-01 VHF System _9310043b-932d-4651-9026-e80aa216d6f1	01 AUG 2024	ALL
	MEL.MOP.23.22-01 SELCAL _976ea5d2-b44d-4944-b7f0-0b20b4b6b1fe	01 AUG 2024	1192-1350;1376-1718
	MEL.MOP.23.31-01-01 Passenger Address System - Passenger Configuration _ea5f4761-221b-4808-9202-72ddc03fbd0e	11 APR 2025	ALL
	MEL.MOP.23.31-01-01P Passenger Address System - Passenger Configuration (O) _237271f1-c448-40a3-98c5-5a546328986e	22 SEP 2022	ALL
	MEL.MOP.23.31-01-02 Passenger Address System - Cargo Configuration _fb2d2779-724e-43ca-a32f-f988e028746a	11 APR 2025	1350;1455
	MEL.MOP.23.31-01-02P Passenger Address System - Cargo Configuration (O) _21173beb-8fa6-4971-ae4e-09b4abb9733e	22 SEP 2022	1350;1455
	MEL.MOP.23.44-01-01 Interphone System - Ground Call Horn _3bdd6aeb-ef6a-4672-9763-002dd79985eb	24 OCT 2019	ALL
	MEL.MOP.23.44-01-01P Interphone System - Ground Call Horn (O) _5e489330-a511-4e8c-8bcf-6ae0b418d890	22 SEP 2022	ALL
	MEL.MOP.23.44-01-02 Interphone System - Flight Deck to Flight Deck _778e377d-1906-4b4c-b0b9-9545201cdb9b	24 OCT 2019	ALL
	MEL.MOP.23.44-01-03 Interphone System (Flight Deck to Cabin - Cabin to Flight Deck) _29746570-327e-4dba-8397-7ad961088d4e	22 SEP 2022	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.23.44-01-03P Interphone System (Flight Deck to Cabin - Cabin to Flight Deck) (O) _fa481c57-2e6f-4cc2-a8dc-b2cbd020637a	22 SEP 2022	ALL
	MEL.MOP.23.44-01-04 Interphone System - Cabin to Cabin _886e46d2-401b-4af1-b200-72588116c7ce	24 OCT 2019	ALL
	MEL.MOP.23.44-01-04P Interphone System - Cabin to Cabin (O) _99155fcd-9b17-420b-906f-88ab2a8602c0	22 SEP 2022	ALL
	MEL.MOP.23.44-01-05 Interphone System (Flight Crew to Ground - Ground to Flight Crew) _1ded8593-4421-446e-afbf-df874df9543c	24 OCT 2019	ALL
	MEL.MOP.23.44-01-05P Interphone System (Flight Crew to Ground - Ground to Flight Crew) (O) _378efbe2-2389-4950-a935-88c588ee28f3	22 SEP 2022	ALL
	MEL.MOP.23.44-01-06 Interphone System - Alerting System _489f7567-36f7-4e0d-a7b2-75ad651e88b1	24 OCT 2019	ALL
	MEL.MOP.23.44-01-07 Interphone System - Handsets _1116eda3-514d-4fe9-9786-3ddaa6cd942e	01 AUG 2024	ALL
	MEL.MOP.23.44-01-07P Interphone System - Handsets (O) _e776a71a-e6e2-4cbf-8a81-7aba33e8fbac	22 SEP 2022	ALL
	MEL.MOP.23.44-02 Cabin Chime System (Flight Deck to Cabin - Cabin Signs) _8676cc2f-1236-4f94-8911-90ecf18bcbaa	01 AUG 2024	ALL
	MEL.MOP.23.44-02P Cabin Chime System (Flight Deck to Cabin - Cabin Signs) (O) _a665aa7c-e1a5-4f78-a728-a72488871e47	01 AUG 2024	ALL
	MEL.MOP.23.50-01 Audio Control Panel _3a8a77d8-760c-4c67-987b-00047ecb259b	29 MAR 2023	1192-1455;1658

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°27
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.23.50-01 Audio Control Panel _orl015637	29 MAR 2023	1568
	MEL.MOP.23.50-02 Headset _26c97ae5-574f-42ef-abfe-68ed314bc8e0	22 SEP 2022	ALL
	MEL.MOP.23.50-03 Hand Microphone _ce6d4101-1d4e-4721-96b9-295aea7a7e10	22 SEP 2022	ALL
	MEL.MOP.23.50-04 Boom Set _5bb91f22-7920-4bd1-93bd-8471f9aaee41	22 SEP 2022	ALL
	MEL.MOP.23.50-05 Cockpit Loudspeaker _3e720d2e-9284-4a94-aa86-790ee59dc9a4	24 OCT 2019	ALL
	MEL.MOP.23.51-01 Push-To-Talk (PTT) Selector on Control Wheel _2666ff8d-554d-4540-9cbf-f0b609d299ee	07 OCT 2020	ALL
	MEL.MOP.23.52-01 Radio Management System _568efad1-be56-471d-9e50-ea87cec1069f	24 OCT 2019	ALL
	MEL.MOP.23.70-01-01 Video Surveillance System _e0d0b94b-ece0-4320-aa4b-2492efe40548	18 MAY 2022	ALL
	MEL.MOP.23.70-01-01P Video Surveillance System (O) _3b7b50dc-a6fe-45ee-96e3-ce29e704dd8c	22 SEP 2022	ALL
	MEL.MOP.23.70-01-02 Viewing Ports _456af93a-877c-46bf-9f6e-62948abf5389	18 MAY 2022	ALL
	MEL.MOP.23.70-01-02P Viewing Ports (O) _bd702ecd-8e40-420c-af77-c430b96aabd1	22 SEP 2022	ALL
	MEL.MOP.23.71-01 Cockpit Voice Recorder _8e5983fc-b5f3-4cc4-bfc7-eeee91ac25bb	22 SEP 2022	ALL
	MEL.MOP.24.21-01 AC Inverter _ccbd8dc3-5175-4d14-a49c-7f6b08ed97a5	01 MAR 2025	ALL
	MEL.MOP.24.21-01P AC Inverter (O) _6604ec68-65f1-41f6-850d-a01e7ca31433	22 JUL 2024	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.24.21-02 AC INV FAULT Light _f5416cd1-2c42-4dad-a084-e951318e9c87	19 OCT 2020	ALL
	MEL.MOP.24.21-02P AC INV FAULT Light (O) _1f4d4d0b-1b2a-4697-ba13-48a791aef805	01 AUG 2024	ALL
	MEL.MOP.24.21-03 AC Generation Bus Tie Relay (BTR) _f1e62e67-4110-4962-a2f5-d64405a17dbb	24 OCT 2019	ALL
	MEL.MOP.24.21-04 AC BUS OFF Light _b9e84fc5-c383-4995-aa8f-d5c2558f4490	19 OCT 2020	ALL
	MEL.MOP.24.22-01 ACW Generation (Generator and (or) Related GCU) _e1ce3e0c-fef2-4fd6-ad25-2228f93e09c8	14 MAY 2025	ALL
	MEL.MOP.24.22-01P ACW Generation (Generator and (or) Related GCU) (O) _5d80766f-fd9a-42c5-a3e1-2a14579541c5	24 JUN 2025	ALL
	MEL.MOP.24.22-02 ACW GEN FAULT Light _43a5020b-249b-4a5e-8465-c3d555b2f121	01 AUG 2024	ALL
	MEL.MOP.24.22-03 ACW Generation Bus Tie Contactor (BTC) _9e2a8153-3442-4c6f-b164-a928e25ef9a4	24 JUN 2025	ALL
	MEL.MOP.24.22-03P ACW Generation Bus Tie Contactor (BTC) (O) _ca9bee1d-558b-4dba-b550-99d12a82d900	15 APR 2025	ALL
	MEL.MOP.24.22-04 ACW BUS OFF Light _8e6e7065-6227-4b3b-a3cb-4f5b09f15b8f	19 OCT 2020	ALL
	MEL.MOP.24.30-01 DC Generation (Generator and (or) Related GCU) _3a5957e5-eccb-4b27-b531-a2c5e50fc087	14 MAY 2025	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°29
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.24.30-01P DC Generation (Generator and (or) Related GCU) (O) _9b4d5c6a-001c-43a2-9495-c5e90f998a5d	24 JUN 2025	ALL
	MEL.MOP.24.30-02 DC Transformer Rectifier Unit (TRU) _d26eff5c-a230-4d72-b0ca-f78d4c162ef8	11 APR 2025	ALL
	MEL.MOP.24.32-01 DC GEN FAULT Light _22db2365-c24f-49d6-ba9b-568f85ad7a46	19 OCT 2020	ALL
	MEL.MOP.24.32-02 DC Generation Bus Tie Contactor (BTC) _4431fcdd-b6d0-474e-ae97-5f87e444dc2d	24 OCT 2019	ALL
	MEL.MOP.24.32-02P DC Generation Bus Tie Contactor (BTC) (O) _84540599-f47a-4e7f-9033-c41370d819c2	01 AUG 2024	1192-1568
	MEL.MOP.24.32-02P DC Generation Bus Tie Contactor (BTC) (O) _965ebe3e-dd14-4e57-b828-ca3194072246	01 AUG 2024	1658-1718
	MEL.MOP.24.32-03 DC SVCE & UTLY BUS Control System _84088ecc-44db-431f-9ca2-c79670cec6c5	18 MAY 2022	ALL
	MEL.MOP.24.32-04 DC BUS OFF Light _3b742279-6351-417f-a7f0-86b5ac7d3faa	19 OCT 2020	ALL
	MEL.MOP.24.41-01 AC External Power Connection System _bb1998ff-841c-42c3-8607-7bae23fa5899	24 OCT 2019	ALL
	MEL.MOP.24.46-01 DC External Power Connection System _cf718803-8eab-45fb-b784-76c4ef792cc3	24 OCT 2019	ALL
	MEL.MOP.24.77-01 Electrical Power Measurement Assembly (LH Maintenance Panel) _a6026ceb-c44e-4aca-a9ec-4325fb47a2e5	21 OCT 2020	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.25.11-01 Flight Crew Seat - Vertical and Recline Adjustments _ceffd917-503a-49c7-bd24-8ca135d24a5f	11 APR 2025	ALL
	MEL.MOP.25.11-02 Flight Deck Observer Seat _bc797ebd-8814-4634-8f91-a5e128cd2d4b	24 JUN 2025	ALL
	MEL.MOP.25.11-02P Flight Deck Observer Seat (O) _18cf95ab-9d9e-4464-bf21-a8b2383cc1c6	15 APR 2025	ALL
	MEL.MOP.25.11-03 Flight Crew Seat - Armrest _fee4a090-49cb-4a96-a11a-116ca7a700e6	11 APR 2025	ALL
	MEL.MOP.25.13-11 Sunvisors _3a4bb971-6c98-48e3-a957-09433f789a44	22 SEP 2022	ALL
	MEL.MOP.25.13-15 Seat Position Sight Gauge (Eye Locator) _6fe99571-828e-4ba3-ac44-91b551f91144	24 OCT 2019	ALL
	MEL.MOP.25.13-17 Chart Holder _01035d16-bae0-4608-adee-9108e4be488d	22 SEP 2022	ALL
	MEL.MOP.25.13-17P Chart Holder (O) _c2b425b5-e7f4-409a-af2c-ae9f10da1f2d	22 SEP 2022	ALL
	MEL.MOP.25.21-01 Required Cabin Attendant Seat _76c30af5-2cb2-4c8b-92d6-3c2ec367680a	22 SEP 2022	ALL
	MEL.MOP.25.21-01P Required Cabin Attendant Seat (O) _6022ee49-b440-4f2d-a7cf-04c4de97fbe4	22 SEP 2022	ALL
	MEL.MOP.25.31-01-01 Passenger Seats _ef20dbc2-6a54-4c5b-8137-44f28b9a0d06	29 MAR 2023	1192-1455;1658-1678
	MEL.MOP.25.31-01-01 Passenger Seats _orl014791	29 MAR 2023	1568
	MEL.MOP.25.31-01-02 Passenger Seats - Underseat Baggage Restraining Bars _163b2be1-e9cf-4ce6-a23a-89276ccaaa13	29 MAR 2023	1192-1455;1658-1678

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°31
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.25.31-01-02 Passenger Seats - Underseat Baggage Restraining Bars _orl014792	29 MAR 2023	1568
	MEL.MOP.25.31-01-02P Passenger Seats - Underseat Baggage Restraining Bars (O) _9f0bcdbb-ac49-4be2-9bd7-71b683c9f6f9	22 SEP 2022	1192-1658
	MEL.MOP.25.31-01-03 Passenger Seats - Passenger Seats Armrests _48c55bb2-b34a-4a57-a392-3ec24af9fe29	29 MAR 2023	1192-1455;1658-1678
	MEL.MOP.25.31-01-03 Passenger Seats - Passenger Seats Armrests _orl014793	29 MAR 2023	1568
	MEL.MOP.25.31-01-04 Passenger Seats - Recline Function _9f3a7c01-3e6f-40c6-8935-b3a5f951dbdc	24 JUN 2025	1192-1350;1376-1455;1658-1718
	MEL.MOP.25.33-01 Galley Waste Compartment Flapper Door _c4457c0f-75fd-4211-a416-69690975f947	22 SEP 2022	ALL
	MEL.MOP.25.33-01P Galley Waste Compartment Flapper Door (O) _36d6ea85-56e6-47c0-8a41-19afef2d6391	22 SEP 2022	ALL
	MEL.MOP.25.40-01 Cabin Flashlight _5c168dd9-cac9-4e7a-82c5-37ee6a8b7490	22 SEP 2022	ALL
	MEL.MOP.25.41-01 Exterior Lavatory Door Ashtray _06f5fac2-7ed3-427e-9d21-e79e994db1d8	22 SEP 2022	ALL
	MEL.MOP.25.41-02 Interior Lavatory Door Ashtray _dde42e3e-2b1f-4388-af17-948a43725bdb	24 JUN 2025	ALL
	MEL.MOP.25.41-02P Interior Lavatory Door Ashtray (O) _aaedc9e5-19ed-4c21-8dd9-1d4941bd6b0f	24 JUN 2025	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.25.45-01 Portable Protective Breathing Equipment - Passenger configuration _orl015639	08 MAR 2023	1192-1455;1658
	MEL.MOP.25.45-01 Portable Protective Breathing Equipment - Passenger configuration _e8a76501-e34a-4584-bb82-471bae23e699	29 MAR 2023	1568
	MEL.MOP.25.45-02 Portable Protective Breathing Equipment - Cargo configuration _orl003918	24 OCT 2019	1350;1455
	MEL.MOP.25.45-21 Lavatory Waste Compartment Flapper Door _bdaaaa6f-8a75-44d8-a3b5-0fa6525b6463	22 SEP 2022	ALL
	MEL.MOP.25.54-23 Cargo Restraint System _a32631c0-8b09-490e-b0c6-066919c3d271	22 SEP 2022	ALL
	MEL.MOP.25.60-01-01 Automatic Emergency Locator Transmitter _34a74a51-47a2-4835-8907-bb48e00725d3	22 SEP 2022	ALL
	MEL.MOP.25.60-01-01P Automatic Emergency Locator Transmitter (O) _0569b93c-75f3-49dd-aefc-19317d1d1a87	22 SEP 2022	ALL
	MEL.MOP.25.60-01-02 Survival Emergency Locator Transmitter _c52036b8-e12f-442a-945d-3eb0b517d674	22 SEP 2022	ALL
	MEL.MOP.25.61-01 First Aid Kit _orl003922	01 JUL 2023	ALL
	MEL.MOP.25.61-02 Emergency Medical Kit _228ba722-74cc-47c5-888c-c212286b2248	22 SEP 2022	ALL
	MEL.MOP.25.61-03 On Board Medicine Kit _orl003926	24 OCT 2019	ALL
	MEL.MOP.25.61-04 AED - Automated External Defibrillator _orl003928	22 SEP 2022	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°33
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.25.62-01 Megaphone _d64d2e4d-5ebb-4978-88b1-ed532fe052cf	22 SEP 2022	ALL
	MEL.MOP.25.64-01 Crash Axe _28ab5535-8324-4d74-93a4-a08ad47a010d	22 SEP 2022	ALL
	MEL.MOP.25.64-02 Passenger Lifejacket — Adult / Child _a32f00b8-9475-453c-8d1b-c4c3aa7a3dd4	29 MAR 2023	1192-1455;1658
	MEL.MOP.25.64-02 Passenger Lifejacket — Adult / Child _orl015636	29 MAR 2023	1568
	MEL.MOP.25.64-03 Passenger Lifejacket - Infant _orl003930	24 OCT 2019	ALL
	MEL.MOP.25.65-20 Cabin Fireproof Gloves _9a093f6f-e1be-4aea-860b-183f24076f63	18 MAY 2022	1658-1718
	MEL.MOP.25.70-01 Lavatory _orl003932	09 DEC 2021	ALL
	MEL.MOP.26.12-01 Fire Detection Loop _d95cd828-2af4-43db-abf9-ae3da146e522	24 OCT 2019	ALL
	MEL.MOP.26.12-02 FUEL SO Light (Integrated in CL) _bfba8584-68da-4a25-b44f-2099c88a73bf	24 OCT 2019	ALL
	MEL.MOP.26.12-03 ENG 2 NAC OVHT _d9888ab0-1f16-42b0-9d5c-2d48ee2756a4	11 APR 2025	ALL
	MEL.MOP.26.15-01-01 Cargo Smoke Alert - Passenger Configuration _0d2a0d65-634f-4aed-99db-2b23b27f97ec	24 OCT 2019	ALL
	MEL.MOP.26.15-01-02 Cargo Smoke Alert - Cargo Configuration _5c14233e-a16f-4d1d-9799-17a9c13f45b3	22 SEP 2022	1350;1455
	MEL.MOP.26.17-01-01 Toilet Smoke Detection System - Passenger Configuration _2a68c85e-aa75-4d2f-aa9e-87040246c09f	01 AUG 2024	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.26.17-01-01P Toilet Smoke Detection System - Passenger Configuration (O) _0c5042ac-43e5-4487-b9f6-e3c0fd384f6c	22 SEP 2022	ALL
	MEL.MOP.26.17-01-02 Toilet Smoke Detection System - Cargo Configuration _ba62027a-71ac-4cf1-89ea-bd29dffad885	22 SEP 2022	1350;1455
	MEL.MOP.26.18-01 AFT Cargo (Curtain - Door) _6a4e750f-2a19-4902-ae51-f19663358134	22 SEP 2022	ALL
	MEL.MOP.26.19-01 AFT Smoke Detection Fans _a5d3da20-8629-4174-9f29-f06809a6e7a5	22 SEP 2022	ALL
	MEL.MOP.26.21-01 AGENT DISCH Light (Engine) _8fd69136-3b8b-45fa-9299-85b0c63cf53d	22 OCT 2020	ALL
	MEL.MOP.26.25-00 Lavatory Fire Extinguisher _2bdf79c0-cda7-4108-a006-586ec2667050	22 SEP 2022	ALL
	MEL.MOP.26.25-00P Lavatory Fire Extinguisher (O) _b0888ced-9886-4af0-a67a-862bbe6088a6	22 SEP 2022	ALL
	MEL.MOP.26.30-01 Portable Hand Fire Extinguisher _6e565bb1-2b70-4421-86b1-dcae8a149468	22 SEP 2022	ALL
	MEL.MOP.27.20-01 Rudder Damper _253e6b4c-5d30-4530-a6fa-8061ebda1d7c	24 JUN 2025	ALL
	MEL.MOP.27.20-01P Rudder Damper (O) _5d327857-fb71-475a-b92b-49fac5adac5b	15 APR 2025	ALL
	MEL.MOP.27.20-02 Rudder Releasable Centering Unit (RCU) _f5c7e3f8-ee97-4129-8d13-121bc6f40bf0	24 JUN 2025	ALL
	MEL.MOP.27.20-02P Rudder Releasable Centering Unit (RCU) (O) _b9d3234d-41dd-4013-aa09-22afe2c67b4a	19 MAY 2022	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°35
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.27.23-01 Travel Limiter Unit (TLU) _2dda82d0-fb26-4a2c-ace5-4b8fda01169a	24 OCT 2019	ALL
A	MEL.MOP.27.23-01P Travel Limiter Unit (TLU) (O) _b29ba4db-cc9f-4332-aa65-44836e8cd256	26 SEP 2025	1289-1350;1455-1568
A	MEL.MOP.27.23-01P Travel Limiter Unit (TLU) (O) _458ea2d0-47be-4073-844e-80fabe260755	26 SEP 2025	1192-1255;1355-1432;1658-1718
	MEL.MOP.27.23-02 TLU FAULT Light _e2cd400d-3f39-484a-b7d2-b1a9a49fea8a	24 OCT 2019	ALL
	MEL.MOP.27.23-02P TLU FAULT Light (O) _10b2aba4-03fd-4c53-b4d6-a43efbad9a13	22 SEP 2022	ALL
	MEL.MOP.27.25-01 Yaw Trim Position Indicator _5cff7ae0-41a7-4034-880a-f29f7bf47aff	11 APR 2025	ALL
	MEL.MOP.27.32-01 Pitch Trim Rocker Switch _b0186c9f-147a-44ea-a2a2-b14ed870a1e1	11 APR 2025	ALL
	MEL.MOP.27.32-02 Standby Pitch Trim _88c8b48e-0219-48f7-8551-61d0601df9e3	11 APR 2025	ALL
	MEL.MOP.27.32-03 First Officer Pitch Trim Rocker Switch Cover _04d58909-6050-4e88-a095-ab85a5f6f048	24 JUN 2025	ALL
	MEL.MOP.27.35-01 Pitch Trim Position Indicator _ccc9ed0d-0114-4862-85e0-4ff99b7a5b21	14 MAY 2025	ALL
	MEL.MOP.27.35-01P Pitch Trim Position Indicator (O) _daf152f6-1eea-4d47-98ce-cf5e4bcafec8	01 AUG 2024	ALL
	MEL.MOP.27.36-01 Stick Shaker Actuator _114d9eaf-7b8f-4a26-80ce-525559f29de2	14 MAY 2025	ALL
	MEL.MOP.27.36-01P Stick Shaker Actuator (O) _6ab3986f-08d8-43d5-ae51-06059f7b4035	24 OCT 2019	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.27.36-02 Stick Pusher Actuator _d082ab8a-a277-4012-9e64-354ee433a5db	14 MAY 2025	ALL
	MEL.MOP.27.36-02P Stick Pusher Actuator (O) _0d3523a0-78f5-471f-baaf-02c652c76f4b	22 SEP 2022	ALL
	MEL.MOP.27.36-03 Indications and Controls on Maintenance Panels _a730e417-751b-425b-b283-3e09e793e42a	24 OCT 2019	ALL
	MEL.MOP.27.37-01 Pitch Elevators Coupling System _e204bc48-ded7-4f70-8034-161e9eab7588	14 MAY 2025	ALL
	MEL.MOP.27.37-01P Pitch Elevators Coupling System (O) _e722a936-7664-44f4-ba9a-2d252064cb1a	24 JUN 2025	ALL
	MEL.MOP.27.37-02 Elevators Clutch Reconditioning Device _ad887da9-e390-4ea0-88ad-525f7a13bc9d	14 MAY 2025	ALL
	MEL.MOP.27.37-02P Elevators Clutch Reconditioning Device (O) _14f58193-bb93-4d1b-942a-7b4e0d5e5637	24 JUN 2025	ALL
	MEL.MOP.27.51-01 Flaps Control System _7e0d6b6e-a01d-4088-9314-be1102c2c690	14 MAY 2025	ALL
	MEL.MOP.27.51-01P Flaps Control System (O) _32682cd6-bad3-4701-b604-2d08e87bcc34	24 JUN 2025	ALL
	MEL.MOP.27.55-01 Flaps Position Indicator _408873fe-6f8e-4daf-89a7-ab3f48bedf69	24 JUN 2025	ALL
	MEL.MOP.27.55-01P Flaps Position Indicator (O) _018e02d4-addf-4979-8deb-aa886868155d	24 OCT 2019	ALL
	MEL.MOP.27.55-02 Flaps Unlock Warning _723368ff-6631-47b5-a439-427de0964d2d	01 AUG 2024	ALL
	MEL.MOP.27.61-01 Spoiler Control System _55da55df-bc9c-4866-a10a-9773f828f778	14 MAY 2025	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°37
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.27.61-01P Spoiler Control System (O) _2e4c6f89-327f-44a0-a96d-d976de6b36c0	24 JUN 2025	ALL
	MEL.MOP.27.65-01 Spoiler Position Indicating System _56a1ba2d-db83-440f-8acb-c8c1f955ad17	18 MAY 2022	ALL
	MEL.MOP.27.65-01P Spoiler Position Indicating System (O) _10528568-65ba-4086-835f-9d1ea4fb8eff	24 JUN 2025	ALL
	MEL.MOP.27.70-01-01 GUST LOCK System - Aileron _30b2a772-ca48-4d2c-b937-f4fcc85d6e4d	24 OCT 2019	ALL
	MEL.MOP.27.70-01-01P GUST LOCK System - Aileron (O) _7aa3de0b-0740-48b7-bdfc-03ae3bf1c49f	01 AUG 2024	ALL
	MEL.MOP.27.70-01-02 GUST LOCK System - Elevator _b82d0fa1-8322-491f-bf68-f4e0e2b1fe1c	24 OCT 2019	ALL
	MEL.MOP.27.70-01-02P GUST LOCK System - Elevator (O) _9df2504e-3c76-4a47-a294-b6fe2b9fed66	24 OCT 2019	ALL
	MEL.MOP.28.21-01 FEED LO PR Light _285bb2d0-f661-42ab-bf71-f256e82422dc	24 OCT 2019	ALL
	MEL.MOP.28.21-01P FEED LO PR Light (O) _6b09eb42-cf39-4fb3-ae65-4f4234967f1e	24 OCT 2019	ALL
	MEL.MOP.28.21-02 Electrical Fuel Pump _d9ff4f01-1055-47df-8ad3-0524278dcf04	24 OCT 2019	ALL
	MEL.MOP.28.21-02P Electrical Fuel Pump (O) _5c96df04-91a3-4e32-96c7-727f21632a16	01 AUG 2024	ALL
	MEL.MOP.28.21-03 Pump RUN Light _f528d21e-3e04-44d0-ae0d-f6c46c74dbb2	24 OCT 2019	ALL
	MEL.MOP.28.21-04 Jet Pump (and Associated Motive Flow Valve) _b32cb1f0-b785-4eba-96de-01524d8e9278	24 OCT 2019	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.28.21-05 Feeder Tank Jet Pump _4dce0638-4104-44f5-ad53-cf765b6f219e	11 APR 2025	ALL
	MEL.MOP.28.23-01 X FEED Valve _ec807cc9-42a2-4a31-ab10-8e6e453217e3	24 OCT 2019	ALL
	MEL.MOP.28.23-01P X FEED Valve (O) _ba758f9f-dbb6-4d93-8204-f547a72e4848	19 MAY 2022	ALL
	MEL.MOP.28.23-02 X FEED Flow Bar _d35085fc-7e9f-40a7-8ca3-1a698baff96d	19 MAY 2022	ALL
	MEL.MOP.28.23-02P X FEED Flow Bar (O) _1705246e-f2cc-4346-82d1-7663019ef5ce	19 MAY 2022	ALL
	MEL.MOP.28.25-01-01 Refueling Control Panel _c001627c-a72b-4dd6-acdd-e5705bb422c1	18 MAY 2022	ALL
	MEL.MOP.28.25-01-02 Refueling Control Panel - Fuel Preselector _fcb446c8-ae1c-4d04-b6f6-df492366fde1	24 OCT 2019	ALL
	MEL.MOP.28.25-01-03 Refueling Control Panel - Preselected Qty _233618e3-d455-4b1e-b698-8e432d5a3596	24 OCT 2019	ALL
	MEL.MOP.28.25-01-04 Refueling Control Panel - Refueling Control Panel Door Indication (on SD Cabin Page) _583163d0-706f-4015-85b2-3413f63378a7	24 OCT 2019	ALL
	MEL.MOP.28.25-01P Refueling Control Panel - Refueling Control Panel Door Indication (on SD Cabin Page) (O) _824eb955-b6b7-48e5-a35a-4f5f5c22946f	24 OCT 2019	ALL
	MEL.MOP.28.25-02 Pressure Refueling Cap _f209e6ae-05d1-43a3-9b00-6109dcb88e78	24 OCT 2019	ALL
	MEL.MOP.28.26-01 LP Valve Position Indicator _3fe7a477-6aa0-4ae1-9611-f763d6d4ad2b	24 OCT 2019	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°39
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.28.41-01 Tank Temperature Indication _68f419f6-019b-4514-b20e-b6a6389a1d44	24 OCT 2019	ALL
	MEL.MOP.28.41-01P Tank Temperature Indication (O) _ba7f60eb-7d1d-49e8-bfc5-043bfa1ee553	31 MAY 2024	ALL
	MEL.MOP.28.42-01 Fuel QTY Indication _e6f3234b-cd6c-4d42-a902-d69f0add1c39	18 MAY 2022	ALL
	MEL.MOP.28.42-01P Fuel QTY Indication (O) _7fe85cc6-1136-4138-b1b5-ffefbb828818	24 OCT 2019	ALL
R	MEL.MOP.28.42-03 Fuel LO LVL Alert _2f65665e-1063-472a-a0de-a548eb869bcd	26 SEP 2025	ALL
	MEL.MOP.28.42-03P Fuel LO LVL Alert (O) _a551782c-0934-4236-9dd6-af6693f18e0b	15 APR 2025	ALL
	MEL.MOP.28.43-01 Manual (Magnetic) Indicators _7493309d-ca2f-47a2-809f-0c31cd5c479d	24 OCT 2019	ALL
	MEL.MOP.29.11-01 Main HYD Pump _716fd963-64fa-4ef9-b146-3671813c02ce	14 MAY 2025	ALL
	MEL.MOP.29.11-01-01P Main HYD Pump (O) _4717d7e0-071f-409f-86e7-bd19091dfd17	22 SEP 2022	ALL
	MEL.MOP.29.11-01-02P Green HYD Pump (O) _0e642d46-4226-474d-aab3-aaa45fb7b4e8	24 JUN 2025	ALL
	MEL.MOP.29.11-02 DC AUX Pump _b9de7c29-dccf-4cb5-8f8b-34efd8025ad1	11 APR 2025	ALL
	MEL.MOP.29.11-02P DC AUX Pump (O) _7038fc30-40b3-49d9-8b69-92e61b6775f1	02 JUN 2022	ALL
	MEL.MOP.29.21-01 X FEED Valve _0044e23b-6b0c-408c-955f-b27d308316b3	31 JAN 2018	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.29.31-01 HYD PWR - LO LVL Light _77406a4a-d722-4682-b654-c1372d8ba34b	19 OCT 2020	ALL
	MEL.MOP.29.31-01P HYD PWR - LO LVL Light (O) _16243814-da9c-4af5-b662-8e84bd3944f1	16 OCT 2020	ALL
	MEL.MOP.29.32-01-01 LO PR Light - Main HYD Pump _dd1e9352-b475-47f4-8b9a-adc89fcd5db4	19 OCT 2020	ALL
	MEL.MOP.29.32-01-01P LO PR Light - Main HYD Pump (O) _8d81adfd-1160-4044-ba18-2c9e1f87ebc4	16 OCT 2020	ALL
	MEL.MOP.29.32-01-02 LO PR Light - AUX HYD Pump _2cad8fd7-21ef-4945-9a3f-f5c4f810367f	19 OCT 2020	ALL
	MEL.MOP.29.32-02-01 Pressure Indication - HYD SYS Indication _0b0b0dd1-10dc-49bd-939d-f61c6c8258e8	22 SEP 2022	ALL
	MEL.MOP.29.32-02-02 Pressure Indication - BRAKE ACCU Indication _00689cb9-2ec0-4ca0-ad50-e4f8745c3b0f	22 SEP 2022	ALL
	MEL.MOP.29.32-03 Accumulators Pressure Indicator (Hydraulic Bay) _aafaef20-9423-4a4c-9567-2387f4ce931d	24 OCT 2019	ALL
	MEL.MOP.29.33-01 HYD PWR - OVHT Alert (BLUE PUMP or GREEN PUMP) _229d59ae-b19f-4b68-a107-2f495697fadf	19 OCT 2020	ALL
	MEL.MOP.29.33-01P HYD PWR - OVHT Alert (BLUE PUMP or GREEN PUMP) (O) _1dd81ad4-95ba-4e50-9000-2c692d0d1893	16 OCT 2020	ALL
	MEL.MOP.29.33-02 HYD PWR - AUX PUMP - OVHT Alert _e90c62b8-fa24-41ee-b4dd-a105a6bc893e	18 MAY 2022	ALL
	MEL.MOP.29.33-02P HYD PWR - AUX PUMP - OVHT Alert (O) _f4c55987-f1fe-4aa9-bec4-748545f5fb40	19 MAY 2022	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°41
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.30.11-01 De Ice Valve (PRSOV) _e5e5e9c1-d6ee-4c12-8488-6642ccce52f3	18 MAY 2022	ALL
	MEL.MOP.30.11-02 Airframe De Icing Boots System _9cb721c3-82df-45d4-8f37-c1491f0e0f42	19 OCT 2020	ALL
	MEL.MOP.30.11-03-01 DE ICING - SAT below -20°C (Engine Airframe FAST - SLOW Mode Selector) _33de7f54-4ff2-4fe3-9d38-82ccae56a501	19 OCT 2020	ALL
	MEL.MOP.30.11-03-02 De Icing OVRD System _b88fbb58-0eb5-49ea-b588-054626533385	19 OCT 2020	ALL
	MEL.MOP.30.11-04 DE ICING - AFR AIR BLEED FAULT Light _0060837b-be13-44f2-a251-de20ecf20ea3	19 OCT 2020	ALL
	MEL.MOP.30.11-04P DE ICING - AFR AIR BLEED FAULT Light (O) _9daf8b72-be05-41a1-9353-d3a0aa718405	16 OCT 2020	ALL
	MEL.MOP.30.11-06 DE ICING and ANTI ICING - MODE SEL AUTO _4862a45e-710d-435c-a728-e683ba59436a	19 OCT 2020	ALL
	MEL.MOP.30.21-01 Engine De Icing Boots System _cb7794f5-e4de-4146-a020-904c2fa485d6	19 OCT 2020	ALL
	MEL.MOP.30.21-02 DE ICING - ENG AIRFRAME FAULT Alert _0945f887-2973-4568-8003-f58fd783ccda	21 OCT 2020	ALL
	MEL.MOP.30.30-01 Probe Heating System - Pitot _9fd34c2f-47e9-41ea-b597-6f53ffb8261f	21 OCT 2020	ALL
	MEL.MOP.30.30-02 Probe Heating System - Static _e62941b8-c1da-43a4-940e-874f4d956600	19 OCT 2020	ALL
	MEL.MOP.30.31-01 Probe Heating System - TAT _ecab11d0-5ee4-4a03-87d9-65ab7884aa6a	18 MAY 2022	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.30.31-01P Probe Heating System - TAT (O) _23b234da-49f0-4dcc-b548-fc4275a58d3e	19 MAY 2022	ALL
	MEL.MOP.30.31-02 Probe Heating System - Alpha _0b4cec80-e414-4579-b7de-97caee3f3ed	19 OCT 2020	ALL
	MEL.MOP.30.31-04 Probes HTG Fault Lights (ALPHA, TAT, STAT) _a9f7394c-3c27-4b0a-95cc-1225f72e3939	18 MAY 2022	ALL
	MEL.MOP.30.31-04P Probes HTG Fault Lights (ALPHA, TAT, STAT) (O) _8e78a10f-678e-41b0-bd21-9ce9a5b9a920	19 MAY 2022	ALL
	MEL.MOP.30.31-05 PITOT Probes HTG Fault Lights _270c26c7-6cd1-4b5d-80a5-e616241c7fad	18 MAY 2022	ALL
	MEL.MOP.30.53-01 Anti Icing Horns System _92777cb6-563d-4c02-b4f6-01fd7afe2a4d	21 OCT 2020	ALL
	MEL.MOP.30.53-02 ANTI ICING - HORNS FAULT Light _ad191b4c-b895-4c6c-8e7b-6d81d6165408	21 OCT 2020	ALL
	MEL.MOP.30.60-01 Windshield Heating System _0c843bff-449f-477f-aff5-4c6ee8c24652	03 NOV 2020	ALL
	MEL.MOP.30.60-02 Side Windows Heating System _1f46d2e1-3139-4745-b5d8-60abe95c8d73	21 OCT 2020	ALL
	MEL.MOP.30.60-03 SIDE WINDOWS FAULT Light _3885e27d-3b9f-4455-9209-06a781f03003	18 MAY 2022	ALL
	MEL.MOP.30.60-03P SIDE WINDOWS FAULT Light (O) _dd360ef4-d23c-48c7-968c-53124e951ebd	16 OCT 2020	ALL
	MEL.MOP.30.60-04 WINDSHIELD HTG FAULT Light _544c761c-1912-464e-88b4-24f8ceb8228c	19 OCT 2020	ALL
	MEL.MOP.30.60-04P WINDSHIELD HTG FAULT Light (O) _e9aebac7-fc3a-4680-b537-7750a52f7f97	16 OCT 2020	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°43
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.30.61-01 Propeller Anti Icing System _a45d12ec-f83a-452f-a361-4208addf6a7b	21 OCT 2020	ALL
	MEL.MOP.30.61-02 ANTI ICING - PROP ON Light _a5563114-23f6-4176-8c2b-dc7a824d81f0	19 OCT 2020	ALL
	MEL.MOP.30.61-02P ANTI ICING - PROP ON Light (O) _54458222-7458-4db8-8588-7e71500b0c3c	16 OCT 2020	ALL
	MEL.MOP.30.61-03 MODE SEL SAT below -10°C (Propeller Anti Icing Mode Selector) _544d7e17-a723-4207-8b45-74edeb00df54	21 OCT 2020	ALL
	MEL.MOP.30.61-04 ANTI ICING - PROP - FAULT Light _d40e167e-d16c-4494-a40f-8b38adb782fe	19 OCT 2020	ALL
	MEL.MOP.30.65-01-01 Windshield Wiper System _12d42b87-0494-45dc-8ad1-d13cf120ffe3	11 APR 2025	ALL
	MEL.MOP.30.65-01-02 Windshield Wipers - High Speed Function (FAST) _81ce4e40-165f-4527-944c-4e86f1b1bf2f	21 OCT 2020	ALL
	MEL.MOP.30.65-01-03 Windshield Wipers - Low Speed Function (SLOW) _e8e50de0-f99c-424c-b1d5-9452250f9b6b	21 OCT 2020	ALL
	MEL.MOP.30.70-01 Ice & Rain Protection Systems (RH Maintenance Panel) _86ac3b58-8cc5-440f-9048-1eca0547e636	18 MAY 2022	ALL
	MEL.MOP.30.80-01 Ice Detection System _743a6860-f75e-4559-8250-72fc05b153df	24 OCT 2019	ALL
	MEL.MOP.30.80-03 Ice Evidence Probe IEP _7782dcf6-c30d-44fb-8c59-1fe65971d690	24 OCT 2019	ALL
	MEL.MOP.30.80-04 ICING AOA Light _a5f49152-89ab-4fd8-bae1-e410b99d645c	24 OCT 2019	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.30.80-04P Icing AOA Light (O) _5ce9792d-e9a5-4d19-9173-8ba944385626	24 OCT 2019	ALL
	MEL.MOP.31.21-01 Clock _ee2e3874-5762-4a19-ad1e-8bf85890bdc5	22 SEP 2022	ALL
	MEL.MOP.31.31-03-01 MPC - FDAU Function _7be44116-b9ac-4ec6-8927-f94eb0c85619	24 OCT 2019	ALL
	MEL.MOP.31.31-03-01P MPC - FDAU Function (O) _928a1399-3296-414c-927b-f9bb2d6c5fa3	24 OCT 2019	ALL
	MEL.MOP.31.31-03-02 APM FAULT Alert _346a749d-a586-4bd1-84a0-d687fb4669df	07 OCT 2020	ALL
	MEL.MOP.31.31-03-02P APM FAULT Alert (O) _d362ab64-7fe9-42df-a840-22f2e2fff379	31 MAY 2024	ALL
	MEL.MOP.31.31-03-03 MPC - EWD Flight Time _84480593-5a6b-4653-a11f-b153b59ae4ac	24 OCT 2019	ALL
	MEL.MOP.31.31-03-04 MPC - DMU ACMS (Maintenance) _82c207f5-58bf-417f-a687-26400c7228c0	24 OCT 2019	ALL
	MEL.MOP.31.32-01 Digital Flight Data Recorder - DFDR _5efc9374-42aa-4167-8874-6d591e6fb872	24 OCT 2019	ALL
	MEL.MOP.31.32-03 QAR _75f35489-33ac-4ce9-96fc-7863fa8fdc8c	24 OCT 2019	ALL
	MEL.MOP.31.32-04 DFDR Required Parameters - Variable and Discrete _52a6bf5c-1b16-43a3-a367-b3424c5bf8bc	11 APR 2025	ALL
	MEL.MOP.31.48-01-01 Multi Function Computer (MFC) Module 1A _4b26611f-5a51-4f14-8317-99829c679730	24 OCT 2019	ALL
	MEL.MOP.31.48-01-02 Multi Function Computer (MFC) Module 2A _002afa56-aebd-40ad-9230-3f24b1c8d352	24 OCT 2019	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°45
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.31.48-01-03 Multi Function Computer (MFC) Module 1B _c3c33b51-23fb-4536-ac8c-bee3f18ef00d	24 OCT 2019	ALL
	MEL.MOP.31.48-01-04 Multi Function Computer (MFC) Module 2B _ff207b22-5c57-4f1d-b34a-eab4e882d535	24 OCT 2019	ALL
	MEL.MOP.31.48-06 MFC Module FAULT Light _ec564dc5-d1cf-48c8-ad69-6d54628d78c8	24 OCT 2019	ALL
	MEL.MOP.31.53-02 Master Warning (MW) Light and Associated Cancel Function _7ba6e91a-21b2-4a7b-8f01-83caf293a2f6	24 OCT 2019	ALL
	MEL.MOP.31.53-03 Master Caution (MC) Light and Associated Cancel Function _f414b9f7-5362-4422-a5e8-576256e87de2	24 OCT 2019	ALL
	MEL.MOP.31.53-05 EMER AUDIO CANCEL _9e338e46-3627-4e45-a4ab-7d0a650cdfb4	24 OCT 2019	ALL
	MEL.MOP.31.53-06 TO CONFIG Test _163a4151-db72-40e4-9f4a-841d39b0aa67	24 OCT 2019	ALL
	MEL.MOP.31.60-01 Display Unit (DU) _84432eb5-d287-477d-ae6a-f93d9cd9efc1	14 MAY 2025	ALL
	MEL.MOP.31.60-01P Display Unit (DU) (O) _b92016a0-6c9c-4875-a7f3-6c97b8e45f65	22 SEP 2022	ALL
	MEL.MOP.31.60-02-01 MCP _c926cc8d-8aca-4de9-ba4c-9812b50af55b	14 MAY 2025	ALL
	MEL.MOP.31.60-02-01P MCP (O) _8d7630d1-df0f-47bd-a515-daf1e800b813	24 OCT 2019	ALL
	MEL.MOP.31.60-02-02 MCP - COM pb _b230b1ac-eb4b-443c-82c1-835ae98d17ec	24 OCT 2019	ALL
	MEL.MOP.31.60-02-03 MCP - NAV pb _29333183-db2b-4480-971d-aa9a5f0b0a5f	24 OCT 2019	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.31.60-02-04 MCP - SURV pb _420d0039-1745-4fea-bbf1-760ae143fdb8	24 OCT 2019	ALL
	MEL.MOP.31.60-02-05 MCP - ESC pb _372eee3f-13d8-4b78-af86-dd6292110427	24 OCT 2019	ALL
	MEL.MOP.31.60-02-06 MCP - ENTER pb and Multi Directional Pad _93959590-b249-4f5d-82cc-2d16e50b4a7d	24 OCT 2019	ALL
	MEL.MOP.31.60-02-07 MCP - Numeric Keyboard _b96a138d-21b4-4506-8be3-324283206377	24 OCT 2019	ALL
	MEL.MOP.31.60-03-01 EFCP _25547465-97b2-4d23-af8e-60e85c0b79cb	24 OCT 2019	ALL
	MEL.MOP.31.60-03-02 EFCP - MFD Control - SYS Pushbutton _9cf52b2f-d0f3-4154-8a1a-3b34b7f50530	14 MAY 2025	ALL
	MEL.MOP.31.60-03-03 EFCP - MFD Control - ND Pushbutton _55d3980b-2d2d-41b1-ae5d-82ce2f21d307	14 MAY 2025	ALL
	MEL.MOP.31.60-03-04 EFCP - MFD Control - PERF Pushbutton _5c6b8a80-440b-4290-9123-a86ad9d41ad8	14 MAY 2025	ALL
	MEL.MOP.31.60-03-05 EFCP - MFD Control - MISC Pushbutton _0cb56485-4883-4777-913f-c881d790da99	07 OCT 2020	ALL
	MEL.MOP.31.60-03-06 EFCP - MFD Control - MAP Pushbutton _a5dab56c-291a-4585-aab5-15390100dbe4	07 OCT 2020	ALL
	MEL.MOP.31.60-03-07 EFCP - MFD Control - VID Pushbutton _321099fd-2d0d-4f2e-a46d-4ea2fc118bd5	18 MAY 2022	ALL
	MEL.MOP.31.60-03-08 EFCP - NAV Control - BRG Pushbutton _3652261b-7eda-438c-8a31-a089cc5a3eb2	07 OCT 2020	ALL
	MEL.MOP.31.60-03-09 EFCP - NAV Control - RANGE Pushbutton _7728fad8-40bb-482a-9249-5d2b907bedea	07 OCT 2020	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°47
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.31.60-03-10 EFCP - NAV Control - FORMAT Rotary Selector _312ab00a-dba0-4716-9200-099a1f1f7c32	07 OCT 2020	ALL
	MEL.MOP.31.60-03-11 EFCP - PROC Control - PROC UP Pushbutton _a95d303a-a25f-41b7-a4e8-657553f38fb6	07 OCT 2020	ALL
	MEL.MOP.31.60-03-12 EFCP - PROC Control - PROC DOWN Pushbutton _8d201b69-c512-4304-b3c3-d25dce4cca91	07 OCT 2020	ALL
	MEL.MOP.31.60-03-13 EFCP - PROC Control - ENTER PROC Pushbutton _85fb9411-61b6-49b0-af50-87f766776ce8	07 OCT 2020	ALL
	MEL.MOP.31.60-03-14 EFCP - PROC Control - PROC MENU Pushbutton _fd39c5ea-7d40-4fa9-9899-521023ee0569	07 OCT 2020	ALL
	MEL.MOP.31.60-03-15 EFCP - PROC Control - MAN DEL Pushbutton _4de6010b-2286-462e-a789-7a821e87234f	07 OCT 2020	ALL
	MEL.MOP.31.60-03-16 EFCP - PROC Control - RCL Pushbutton _11310f86-caad-4f32-8b44-92ff807ab7c1	07 OCT 2020	ALL
	MEL.MOP.31.60-03-17 EFCP - PROC Control - CLR Pushbutton _80ac6035-21c9-4d8a-b48d-299d6f5a552c	07 OCT 2020	ALL
	MEL.MOP.31.60-04-01 ICP _cc75d4c2-7ea4-4901-a41c-1c7843b5fc10	24 OCT 2019	ALL
	MEL.MOP.31.60-04-02 ICP - BARO SET ROTARY SELECTOR _44389ce4-e47f-467f-b91f-8e7e109199ee	24 OCT 2019	ALL
	MEL.MOP.31.60-04-03 ICP - PUSH STD Pb _1ca416e2-0c35-4585-aded-33e9a1f9e260	24 OCT 2019	ALL
	MEL.MOP.31.60-04-04 ICP - DH MDA SELECTION _b4f6bc1d-f132-429b-8adf-0235941b32b2	24 OCT 2019	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.31.60-04-05 ICP - DH MDA ROTARY SELECTOR _e1f879d9-29ea-4479-9ef0-8e292d037fed	24 OCT 2019	ALL
	MEL.MOP.31.60-04-06 ICP - SPD TGT Knob _671c6c69-9caa-4187-ac6b-0afee5960971	24 OCT 2019	ALL
	MEL.MOP.31.60-04-07 ICP - AUTO MAN pb _84904bc9-a2ca-40a2-9f35-ca74c2e87b28	24 OCT 2019	ALL
	MEL.MOP.31.60-05-01 MCDU _8b319b9f-414d-4ecc-b916-7e68f6be7965	29 MAR 2023	ALL
	MEL.MOP.31.60-06 DU Switch Reversion _d6050216-3eff-468a-ab70-0815534663a6	24 OCT 2019	ALL
	MEL.MOP.31.60-06P DU Switch Reversion (O) _3a2838e0-cf71-480c-97b9-cb2b86c30cca	14 MAY 2025	ALL
	MEL.MOP.31.70-01 MFC - Indications and Controls (RH Maintenance Panel) _02f8a087-e0ed-4f74-84a9-adc6067189eb	21 OCT 2020	ALL
	MEL.MOP.32.31-01 Anti Retraction System (Lever Latch) _702c29d7-bf4e-498a-a08d-0f89b28f5cd2	24 OCT 2019	ALL
	MEL.MOP.32.31-02 Landing Gear Lever Integrated Red Light _bae3c9a5-aa99-4b3c-8ab9-83bc06c932a2	24 OCT 2019	ALL
	MEL.MOP.32.31-03 Landing Gear Retraction or Extension and Uplocking System _e0978cee-7ee0-4d6e-87ec-fdb753c0ce1f	14 MAY 2025	ALL
	MEL.MOP.32.31-03P Landing Gear Retraction System and Uplocking System (O) _d6069444-c305-4d0b-af87-e9631f6ca302	24 JUN 2025	ALL
	MEL.MOP.32.32-04 Brake ACCU Pressure Indicator (on Maintenance Panel) _8bbcf1f9-0c2e-4cc2-a399-97b79083c012	24 OCT 2019	ALL
	MEL.MOP.32.42-01 Wheel Brake _ec24e839-e325-4529-9d21-f7aff37255af	24 JUN 2025	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°49
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.32.42-01P Wheel Brake (O) _80e534a1-3e56-4eba-a8c4-991fecbafdfa	24 JUN 2025	ALL
	MEL.MOP.32.42-02 Anti-skid System _5aba667f-0112-40a0-84fa-98d4b0046c6f	14 MAY 2025	ALL
	MEL.MOP.32.42-02P Anti-skid System (O) _99f1e92a-2b3f-4e1a-b75b-18a4e01ecbdf	24 JUN 2025	ALL
	MEL.MOP.32.42-03 BRK TEMP Alert _a60729e5-9da4-46d4-9825-7e72ee515f6a	24 JUN 2025	ALL
	MEL.MOP.32.45-01 PRKG BRK _ca31e1ce-67e0-4c99-9165-69a285fb4eca	24 OCT 2019	ALL
R	MEL.MOP.32.51-01 Nose Wheel Steering _e1fa9c90-9a3a-48b3-bd87-d95f7e4aa686	26 SEP 2025	ALL
R	MEL.MOP.32.51-01P Nose Wheel Steering (O) _2f06fdd4-9af6-4f93-8e84-111ce3b01670	26 SEP 2025	ALL
	MEL.MOP.32.61-01 Landing Gear Position Indicating System _c2946b97-e707-4dec-bd58-ffb471d82442	24 OCT 2019	ALL
	MEL.MOP.32.61-01P Landing Gear Position Indicating Systems (O) _1c6b1cce-8bcf-4afa-9d36-e6c0c71061e9	23 APR 2025	ALL
	MEL.MOP.33.10-01 Cockpit Lights _d1a8b606-98ec-4a83-b339-b92679f364fc	18 MAY 2022	ALL
	MEL.MOP.33.10-02-01 Cabin Lights - Passenger Configuration _a76923be-9576-49f3-85c0-86de5a4b5339	24 OCT 2019	ALL
	MEL.MOP.33.10-02-02 Cabin Lights - Cargo Configuration _16d78bc3-609e-4737-9cbf-04503bc7aa35	22 SEP 2022	1350;1455
	MEL.MOP.33.16-01-01 ANN Light - Test Function _a9c8f833-2987-4017-975a-113b9f55bbb7	24 OCT 2019	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.33.16-01-01P ANN Light - Test Function (O) _6ae660ee-9b2a-48bc-baa8-7e3110df2870	01 AUG 2024	ALL
	MEL.MOP.33.16-01-02 ANN Light - DIM Function _aa20020d-0adf-4534-a55d-488ec6048966	24 OCT 2019	ALL
	MEL.MOP.33.26-01 Cabin Signs _c0c09e4b-3fba-43c0-80d5-2e882ff70419	24 OCT 2019	ALL
	MEL.MOP.33.31-01 Nose Wheel Well Light _4e7711a1-c3de-47fe-b91c-3b957e398d0e	24 OCT 2019	ALL
	MEL.MOP.33.34-01 Cargo Bay Light _6f08b7de-6c37-4beb-b2d9-e6083fa6f87f	24 OCT 2019	ALL
	MEL.MOP.33.37-01 Main wheel Well Light _6a1baea8-4cab-4aa1-8e0c-75bbb5e6d99d	24 OCT 2019	ALL
	MEL.MOP.33.41-01 NAV Lights System _cb5d1d7f-1931-4cfd-8115-32e242a9d6aa	07 OCT 2020	ALL
	MEL.MOP.33.42-01 LAND Lights _43741d15-4a3b-44ac-a762-d576cff31ccf	07 OCT 2020	ALL
	MEL.MOP.33.43-01 STROBE Light _78a80d89-e2b1-4d0b-8a45-fe1427592437	22 SEP 2022	ALL
	MEL.MOP.33.46-01 TAXI and TO Lights _ea79465d-069d-4db3-b381-50ca16f12410	07 OCT 2020	ALL
	MEL.MOP.33.47-01 LOGO Lights _9a684a2b-798b-412d-8807-a8b65e37e5e7	22 SEP 2022	ALL
	MEL.MOP.33.48-01 BEACON Light _3444c96e-cc50-4507-b7a8-c55e0cf255ab	11 APR 2025	ALL
	MEL.MOP.33.48-01P BEACON Light (O) _9433eb5d-9f96-4fbc-98f5-35523a23def7	22 SEP 2022	ALL
	MEL.MOP.33.49-01 WING Inspection Lights _72f5b38c-42c1-4434-95c5-664e2c13f051	22 SEP 2022	ALL
	MEL.MOP.33.49-02 IEP Light _dcf0a35f-2704-4cde-8e14-9de5a5e0c533	24 OCT 2019	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°51
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.33.49-02P IEP Light (O) _a00b2ed9-ce3f-4b53-93e6-d883a35c25a8	24 OCT 2019	ALL
	MEL.MOP.33.50-01 EMER EXIT (DISARM) Light _800ba131-8876-492e-b3c9-8dbc604c6d12	24 OCT 2019	ALL
	MEL.MOP.33.50-02-01 Photoluminescent Floor Proximity Emergency Escape Path Marking tape _f6c8d000-f4a2-4e82-b66a-6040fb1bcf1b	24 OCT 2019	ALL
	MEL.MOP.33.50-03 Ceiling Emergency Lighting _8be5add5-6a0d-4999-8647-1d887017417f	24 OCT 2019	ALL
	MEL.MOP.33.50-04 Emergency Exit Signs _643c6d0f-057f-49a0-9565-210895e8a558	24 JUN 2025	ALL
	MEL.MOP.33.50-05 Emergency Exit Handle Lighting _6bd5d14a-f8b5-40cb-9a28-5cf0ad973fa4	04 DEC 2019	ALL
	MEL.MOP.33.51-01 Exterior EMER Lights _1223bdd9-c135-4312-91e6-e122930792d5	24 JUN 2025	ALL
A	MEL.MOP.34.11-01 Air Data Computer (ADC) _7d43eda3-4a51-435b-b80d-40fdb3ba010	26 SEP 2025	1192-1255;1355-1432;1658-1718
A	MEL.MOP.34.11-01 Air Data Computer (ADC) _21dd46d1-8f13-4fd0-9bcc-1dda9d35cf1b	26 SEP 2025	1289-1350;1455-1568
A	MEL.MOP.34.11-01P Air Data Computer (ADC) (O) _d1ce6a7c-5dc6-4222-9249-7f6bd0160b39	26 SEP 2025	1192-1255;1355-1432
A	MEL.MOP.34.11-01P Air Data Computer (ADC) (O) _d705d181-e362-4e49-bb3a-0420e1bbe635	26 SEP 2025	1289-1350;1455-1568
A	MEL.MOP.34.11-01P Air Data Computer (ADC) (O) _77cb0084-62a3-435b-98e6-04840b8bad17	26 SEP 2025	1658-1718
	MEL.MOP.34.16-01 Altitude Alerting System _0b8660e5-2bd5-4c4b-85d8-b376521298a9	24 OCT 2019	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.34.16-01P Altitude Alerting System (O) _0266f8bd-c342-4733-9caa-3d4a0f9c624b	24 OCT 2019	ALL
	MEL.MOP.34.20-01 AHRS _5a5d6802-295f-43b1-bd2b-65bcab09ea43	14 MAY 2025	ALL
	MEL.MOP.34.22-01-01 IESI _fbb79743-3f5b-4aad-91e7-64382a0bb9f2	24 OCT 2019	ALL
	MEL.MOP.34.22-01-02 IESI - STD Baro Button _39190654-4493-4813-9625-e09463bdb5e0	24 OCT 2019	ALL
	MEL.MOP.34.22-01-03 IESI - Brightness Button _a6c9259d-e090-46b5-b63d-a54f4b430973	24 OCT 2019	ALL
	MEL.MOP.34.33-01 Marker Beacon System _20f0076f-45e1-4298-a960-064b09563841	01 AUG 2024	ALL
	MEL.MOP.34.36-01 ILS _0a5a5126-c77d-4c29-877a-085838f8df6a	22 SEP 2022	ALL
	MEL.MOP.34.41-01 Weather Radar _a34b370e-e53d-4e46-9a4b-df601c956d54	22 SEP 2022	ALL
	MEL.MOP.34.42-01 Radio Altimeter System _27146b52-3803-40da-8129-fc8204fb0598	14 MAY 2025	ALL
	MEL.MOP.34.42-01P Radio Altimeter System (O) _467d85ef-9444-465c-b144-0ea13912e1e0	19 MAY 2022	ALL
	MEL.MOP.34.48-01-01 TAWS - GPWS Reactive modes and TERRAIN Predictive modes _24fa41dc-3a49-49c3-8980-e19424f2e799	14 MAY 2025	1355
	MEL.MOP.34.48-01-01 TAWS - GPWS Reactive modes and TERRAIN Predictive modes _41b1117d-c52e-46d1-bf14-128a41cf35fc	14 MAY 2025	1192-1350;1376-1718
	MEL.MOP.34.48-01-01P TAWS - GPWS Reactive modes and TERRAIN Predictive modes (O) _aa61a97e-bec2-4cdc-9a24-3c91390543cb	22 SEP 2022	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°53
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.34.48-01-02 TAWS - GPWS Reactive modes _e1bdf007-53a4-4127-9d63-c0095e44c371	14 MAY 2025	1355
	MEL.MOP.34.48-01-02 TAWS - GPWS Reactive modes _af87a12d-dd71-4448-9a8a-957c0c3df86b	14 MAY 2025	1192-1350;1376-1718
	MEL.MOP.34.48-01-02P TAWS - GPWS Reactive modes (O) _e3f63e67-7c17-41e7-96b0-fc1202f40c52	22 SEP 2022	ALL
	MEL.MOP.34.48-01-03 TAWS - TERRAIN Predictive modes _9ea21dd5-dfc3-4b93-bd35-6616c8da7d8e	14 MAY 2025	1355
	MEL.MOP.34.48-01-03 TAWS - TERRAIN Predictive modes _7a40009e-a950-4c4b-8393-96209c55f27c	14 MAY 2025	1192-1350;1376-1718
	MEL.MOP.34.48-01-03P TAWS - TERRAIN Predictive modes (O) _d9212d59-4712-4766-b4a2-9a49c33e49ff	22 SEP 2022	ALL
	MEL.MOP.34.48-01-04 TAWS - Test mode _1bdf11a1-8e7f-433b-bb98-a403c5f3a9c0	21 OCT 2020	ALL
	MEL.MOP.34.48-01-04P TAWS - Test mode (O) _801660ac-4075-4e35-83e3-0d91f4146a91	16 OCT 2020	ALL
	MEL.MOP.34.48-01-05 TAWS - GPWS Reactive modes - Glideslope Deviation (Mode 5) _9773ac61-684b-4ada-b9eb-ebff6b76a626	22 OCT 2020	ALL
	MEL.MOP.34.48-01-05P TAWS - GPWS Reactive modes - Glideslope Deviation (Mode 5) (O) _9c444278-7a8e-4364-bbdd-fbf08188f767	14 MAY 2025	ALL
	MEL.MOP.34.50-01 VOR _7a1665ff-8263-456d-8894-f545cf31f630	22 SEP 2022	ALL
	MEL.MOP.34.50-01P VOR (O) _ba145eca-243e-47e9-a1d6-c5d57fda12e6	22 SEP 2022	ALL
	MEL.MOP.34.50-02 DME _0b005b20-78d3-4890-bd99-8e671cead813	22 SEP 2022	ALL
	MEL.MOP.34.50-02P DME (O) _9294d589-f680-47ed-917b-d01a56d4f3d5	22 SEP 2022	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.34.50-03 ADF _1d8dc971-a009-4637-8e36-fc926190f04e	22 SEP 2022	ALL
	MEL.MOP.34.50-03P ADF (O) _fca5e3e5-94c9-451d-ae0b-969b4b66286c	22 SEP 2022	ALL
	MEL.MOP.34.52-02 SSR Transponder System - Mode S Function _c9b2bb77-1124-4764-a8de-7e0b8ffb72dd	01 AUG 2024	1192-1455;1658
	MEL.MOP.34.52-02 SSR Transponder System - Mode S Function _orl015628	01 AUG 2024	1568
	MEL.MOP.34.52-03 SSR Transponder System - Enhanced Surveillance Function _254db880-f307-4d4f-adeb-37aff8de748e	29 MAR 2023	1192-1455;1658
	MEL.MOP.34.52-03 SSR Transponder System - Enhanced Surveillance Function _orl015629	29 MAR 2023	1568
	MEL.MOP.34.52-04 SSR Transponder System - Extended Squitter Transmission Function (ADS-B OUT) _6b7f04e5-02b7-4f02-b8a6-81d9022667d5	29 MAR 2023	1192-1455;1658
	MEL.MOP.34.52-04 SSR Transponder System - Extended Squitter Transmission Function (ADS-B OUT) _orl015630	29 MAR 2023	1568
	MEL.MOP.34.57-01-01 Airborne Collision Avoidance System - ACAS System _b6741b90-d208-4e6c-a7bb-16a96428e94b	24 JUN 2025	ALL
	MEL.MOP.34.57-01-01P Airborne Collision Avoidance System - ACAS System (O) _52dc9fa9-4ec1-4d7a-85e2-bc315594a00b	15 APR 2025	ALL
	MEL.MOP.34.58-01 GPS - GNSS _6cacfce5-a740-497b-b230-adce02c0f98f	22 SEP 2022	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°55
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.34.58-01P GPS - GNSS (O) _757c3566-5e00-4469-b46c-ef8cd6d6e1dc	22 SEP 2022	ALL
	MEL.MOP.34.61-01 Flight Management System _bd2a4741-483b-45d9-8ff8-ce7721fde453	24 JUN 2025	ALL
	MEL.MOP.34.61-02 Navigation Databases _67b1c9ec-d99b-4aa8-9791-e2629dc1662a	24 JUN 2025	ALL
	MEL.MOP.35.11-01 MAIN SUPPLY - LO PR Light _6d7dd25f-d84d-4108-9a5f-e1f584c780fd	19 OCT 2020	ALL
	MEL.MOP.35.12-10 Oxygen Overboard Discharge Indicator (Green Disc) _7c3986c0-198e-4d39-b040-66ebdb23c93c	18 MAY 2022	ALL
	MEL.MOP.35.12-10P Oxygen Overboard Discharge Indicator (Green Disc) (O) _226d42d4-c4a0-4356-92d1-6f92342ae898	31 MAY 2024	ALL
	MEL.MOP.35.13-01 Flight Deck Pressure Indication _3d489a92-d683-4d19-bafc-f933ef04bd7a	24 OCT 2019	ALL
	MEL.MOP.35.13-02 Observer Seat Oxygen Mask _6db1183f-afd8-42a8-9c2f-e66bd964ddda	24 MAR 2025	ALL
	MEL.MOP.35.13-02P Observer Seat Oxygen Mask (O) _7fede803-5a0e-4a73-82fb-cd77484eb360	15 APR 2025	ALL
	MEL.MOP.35.15-01 Bottle Gauge _fedfa916-8762-4efb-8fc5-c61d63c10d3f	24 OCT 2019	ALL
	MEL.MOP.35.20-01 Passenger Oxygen System - Passenger Configuration _88ed4d84-c426-4011-92ab-1830db033dc1	24 OCT 2019	ALL
	MEL.MOP.35.20-01P Passenger Oxygen System - Passenger Configuration (O) _a13639a3-345f-43e0-8d89-2d25a28beeb02	22 SEP 2022	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.35.20-02 Passenger Oxygen System - Cargo Configuration _87aa7aa9-d464-4dfd-a28f-d4c63b89b29b	22 SEP 2022	1350;1455
	MEL.MOP.35.20-03 Passenger Service Unit _7803a9ac-806e-4a74-a53e-9beb0b86bbfc	22 SEP 2022	ALL
	MEL.MOP.35.20-03P Passenger Service Unit (O) _36c236b3-5d28-422b-bc51-c03f00bccef8	22 SEP 2022	ALL
	MEL.MOP.35.35-01 Portable Oxygen Bottle _7339eb01-a665-402c-9455-f47b33632c81	22 SEP 2022	1192-1350;1376-1658
	MEL.MOP.35.35-01 Portable Oxygen Bottle _orl017716	03 OCT 2024	1355
	MEL.MOP.35.35-01P Portable Oxygen Bottle (O) _37c3de74-b2c2-4df3-95c1-41be11d26002	22 SEP 2022	ALL
	MEL.MOP.35.65-01 Oxygen Manual Release Tool _490d4f2e-ac69-412c-9a68-165b28985b22	22 SEP 2022	ALL
	MEL.MOP.36.11-01 HP Valve _f439b425-6091-4390-a1d0-a930ddd8adb3	24 OCT 2019	1192-1568
	MEL.MOP.36.11-01 HP Valve _09bbac4e-40c2-454a-bfa5-1bec59928b61	01 AUG 2024	1658-1718
	MEL.MOP.36.11-01P HP Valve (O) _3796f9e0-f5dd-4fcf-9065-30104487125d	19 MAY 2022	1658-1718
	MEL.MOP.36.11-02-01 BLEED Valve - Passenger Configuration _9a8162da-8c78-4c93-8ee7-b6e17f2c9cf2	01 AUG 2024	1192-1568
	MEL.MOP.36.11-02-01 BLEED Valve - Passenger Configuration _0fe60d44-9a2c-4025-bfac-e75e2e68b841	01 AUG 2024	1658-1718
	MEL.MOP.36.11-02-02 BLEED Valve - Cargo Configuration _b2a00019-be98-4289-9e11-1194c8f32648	01 AUG 2024	1350;1455
	MEL.MOP.36.11-02P BLEED Valve (O) _dd7edfab-fd7f-46b0-b47f-eface2c1f458	01 AUG 2024	1192-1568

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°57
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.36.11-02P BLEED Valve (O) _c38a9ef0-d1c3-4d65-8801-1e09d95f0289	19 JUN 2024	1658-1718
	MEL.MOP.36.11-03 Bleed FAULT Alert _97bcd77-9ee4-455b-a768-12959479fed1	24 OCT 2019	1192-1568
	MEL.MOP.36.11-03 Bleed FAULT Alert _f9a6155b-a3e6-4496-a26f-5c1ed0f6ed04	08 APR 2020	1658-1718
	MEL.MOP.36.11-03P Bleed FAULT Alert (O) _18c7d82f-d5b4-478f-957e-b680e3ebeb5d	07 SEP 2020	1658-1718
	MEL.MOP.36.11-04 Ground X Feed Valve _f9c0997f-ef42-4c13-a50b-b954492e3736	24 OCT 2019	1192-1568
	MEL.MOP.36.11-04 Ground X Feed Valve _6bf36e05-6159-4b8b-ba03-ab8bc0feb1dc	08 APR 2020	1658-1718
	MEL.MOP.36.11-05 GRD X FEED - X VALVE OPEN Light _89f79c92-61fa-404f-a47d-0e718772e4e3	19 OCT 2020	ALL
	MEL.MOP.36.11-06 OVHT Alert _3020e706-2e7e-482c-89de-3b1bdc10044b	24 OCT 2019	1192-1568
	MEL.MOP.36.11-06 OVHT Alert _a4a31a0d-edf7-458e-a410-905796c89793	08 APR 2020	1658-1718
	MEL.MOP.36.11-06P OVHT Alert (O) _4d30552d-7a1c-4422-8418-a8329657cc3a	07 SEP 2020	1658-1718
	MEL.MOP.36.11-07 Bleed Switching Pressure Sensor (BSPS) _50b3f289-b91b-41f0-8450-8ad0c37ffae8	01 AUG 2024	1658-1718
	MEL.MOP.36.11-07P Bleed Switching Pressure Sensor (BSPS) (O) _7955071f-d577-42ac-90b8-ba295455fbf3	07 SEP 2020	1658-1718
	MEL.MOP.36.22-01 LEAK Alert _7c869f3e-8931-4581-87d3-1fad975bd8f6	01 AUG 2024	1192-1568
	MEL.MOP.36.22-01 LEAK Alert _ebcb22f1-e190-4937-9980-2db9b22dcaa0	01 AUG 2024	1658-1718

Status	Data Module	Revision Date	Applicability
	MEL.MOP.36.22-01P LEAK Alert (O) _f3a676f4-4f63-49e8-a7e7-6c9129d52d17	07 SEP 2020	1658-1718
	MEL.MOP.36.70-01 AIR BL LEAK PTT Button (RH Maintenance Panel) _0d0482bf-5986-4364-8c68-65647e088861	21 OCT 2020	ALL
	MEL.MOP.42.11-01 IOM DC _f692fabb-5c62-49c3-a7bb-f902d160a1da	24 OCT 2019	ALL
	MEL.MOP.42.11-02 IOM AP _eb972073-3545-4579-950d-8ea5192c7b90	24 OCT 2019	ALL
	MEL.MOP.46.25-01 Electronic Flight Bag - EFB Device _orl005417	09 DEC 2021	ALL
	MEL.MOP.46.25-02 Electronic Flight Bag - Mounting Device _9d3eddec-fd93-45ae-8aa5-888fc247d448	03 OCT 2024	ALL
	MEL.MOP.46.25-02P Electronic Flight Bag - Mounting Device (O) _51a4cc67-b878-4297-81fe-72f385782bed	22 SEP 2022	ALL
	MEL.MOP.46.25-03 Electronic Flight Bag - USB Power Supply _d1f05761-bafd-4ab0-97c7-47143332b213	22 SEP 2022	ALL
	MEL.MOP.52.11-01 Door Alert System _1b1e338f-d8f0-45a2-a37f-a55a3037c6c5	07 OCT 2020	ALL
	MEL.MOP.52.11-01P Door Alert System (O) _6277b97f-ee45-4602-a74e-4853bafb497d	16 OCT 2020	ALL
	MEL.MOP.52.11-02 Secondary Handrail _706b1542-8306-40b0-9240-523eb9d531a9	24 JUN 2025	ALL
	MEL.MOP.52.12-01 Passenger Door Torque Tube _e2f2bfb4-c59c-468f-b328-f1a70830fc0e	24 OCT 2019	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°59
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.52.21-01-01 Emergency Exit (Including Passenger-Crew Doors, Service Door, but Excluding Flight Deck Emergency Exits) - Passenger or Combi Configuration _8a3966c7-673d-40d0-a33b-0629fea03f18	24 JUN 2025	ALL
	MEL.MOP.52.21-01-02 Emergency Exit (Including Passenger-Crew Doors, Service Door, but Excluding Flight Deck Emergency Exits) - Cargo Configuration _44fafc9d-50be-46bf-8d58-5895b7b1a33a	22 SEP 2022	ALL
	MEL.MOP.52.31-01 Cargo Door Motor Actuator _fe476c53-b1b5-4e7a-86ed-d3921a39dde3	24 JUN 2025	ALL
	MEL.MOP.52.31-01P Cargo Door Motor Actuator (O) _0bb0f997-55bd-4ad7-ace3-4d0f0cb8d6d1	22 SEP 2022	ALL
	MEL.MOP.52.31-02 Cargo Door Control System _c46a147c-08aa-4702-bc25-885e83063cbe	22 SEP 2022	ALL
	MEL.MOP.52.31-04 Cargo Door Hold Open Strut _d9090eb6-5e34-41b8-b2e4-c198602e8d6b	24 JUN 2025	ALL
	MEL.MOP.52.31-04P Cargo Door Hold Open Strut (O) _ec77b2cd-5d22-4ae1-b35e-4c034a15cecc	21 OCT 2020	ALL
	MEL.MOP.52.42-01 Service Door - Hold Open Device _450ef050-aac2-4107-b843-3c50ece57799	18 MAY 2022	ALL
	MEL.MOP.52.50-01-01 Cockpit Door Locking System _bd626441-5426-480a-b294-9e694b661424	24 OCT 2019	ALL
	MEL.MOP.52.50-01-01P Cockpit Door Locking System (O) _758fdf38-4adc-4407-a2dc-be52116e3168	24 OCT 2019	ALL
	MEL.MOP.52.50-01-02 Cockpit Door Locking System - System (Control Unit, Toggle Switch, Lights on Control Panel, Buzzer) _c2cef4aa-cc38-4ed7-8a99-a1058f2fd171	24 OCT 2019	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.52.50-01-02P Cockpit Door Locking System - System (Control Unit, Toggle Switch, Lights on Control Panel, Buzzer) (O) _e07dcab5-f3e1-45c4-a786-9a0f350f70d8	24 OCT 2019	ALL
	MEL.MOP.52.50-01-03 Cockpit Door Locking System - Call Pushbutton on Door Call Panel _c99628b7-1380-41ee-bc3b-333aa2676ecf	24 OCT 2019	ALL
	MEL.MOP.52.50-01-04 Cockpit Door Locking System - EMER Pushbutton on Door Call Panel _ac2f7b67-1745-4dfc-b8ee-87491b02b94b	24 OCT 2019	ALL
	MEL.MOP.52.50-01-04P Cockpit Door Locking System - EMER Pushbutton on Door Call Panel (O) _4feeb75b-e955-408e-b9ce-2ad861aca0bb	24 OCT 2019	ALL
	MEL.MOP.52.50-01-05 Cockpit Door Locking System - OPEN Light on Door Call Panel _7ba00e7a-8d60-4813-a07e-78637b385a00	24 OCT 2019	ALL
	MEL.MOP.52.50-01-06 Cockpit Door Locking System - DENY Light on Door Call Panel _be56546b-4fa9-4e77-b02a-58583b23f6c1	24 OCT 2019	ALL
	MEL.MOP.56.11-01 Windshield (Including Main Windshield, FWD and AFT Windows) _5f6fba7b-ce33-4729-bd2b-4abf0635e931	22 SEP 2022	ALL
	MEL.MOP.56.11-01P Windshield (Including Main Windshield, FWD and AFT Windows) (O) _90e36190-42ee-4bde-b49c-184c8ffb2ae4	25 SEP 2020	ALL
	MEL.MOP.56.21-01-01 Passenger Compartment Window - Passenger Configuration _e70aef3b-c182-4e1d-a2d4-4bd5084c3e27	07 OCT 2020	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°61
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.56.21-01-02 Passenger Compartment Window - Cargo Configuration _19fdaffc-92cd-433d-a52e-c85b2af56d8d	07 OCT 2020	1350;1455
	MEL.MOP.56.21-01P Passenger Compartment Window (O) _fe246b7f-89e6-4ae4-94ec-58bf0a79152d	29 SEP 2020	ALL
	MEL.MOP.61.21-02 PEC Channel _db76d0b7-5ae1-4f68-867c-569df2dee7ef	24 OCT 2019	ALL
	MEL.MOP.61.21-02P PEC Channel (O) _6c625107-0921-40b0-bb72-2d2b0f5d185f	15 APR 2025	ALL
	MEL.MOP.61.21-06 Propeller Speed Selection in PIU _b5ced2c7-cc7c-4dc4-a05b-92c7ee14db11	01 AUG 2024	ALL
	MEL.MOP.61.21-06P Propeller Speed Selection in PIU (O) _b9082811-2733-48c9-8d8b-de88e7dcbafe	01 AUG 2024	ALL
	MEL.MOP.61.22-02-01 ATPCS _033b28bc-5652-476c-b563-1703fdc9e284	14 MAY 2025	ALL
	MEL.MOP.61.22-02-01P ATPCS (O) _be32c58d-05ee-40bd-9a78-b6dbff6d5bba	24 JUN 2025	ALL
	MEL.MOP.61.22-02-02 Uptrim Function _ceeb5523-4691-4a59-b415-c27d3588cbcc	24 JUN 2025	ALL
	MEL.MOP.61.22-02-02P Uptrim Function (O) _d2d66be1-33f2-4834-908f-95672bb390ad	24 JUN 2025	ALL
	MEL.MOP.61.22-02-03 Autofeather Function _b9655232-4cd0-4f8f-a118-038a119850e5	14 MAY 2025	ALL
	MEL.MOP.61.22-02-03P Autofeather Function (O) _8cec5d1a-95c2-48d1-854e-02189cf8e229	24 JUN 2025	ALL
	MEL.MOP.61.22-03 ATPCS ARM Light _2a260a29-c67e-4ce4-b3bd-7174734a39ec	14 MAY 2025	ALL
	MEL.MOP.61.22-05 Torque Signal _ea82c521-290b-4f8a-a1fb-5e6139bf372d	18 MAY 2022	1658-1718

Status	Data Module	Revision Date	Applicability
	MEL.MOP.61.22-05P Torque Signal (O) _1a807633-9c25-4cdb-b741-56f01279eb98	22 MAR 2022	1658-1718
	MEL.MOP.61.42-01 NP Indications _1a766240-f74f-412c-8a9e-b6835353b14a	24 OCT 2019	ALL
	MEL.MOP.61.50-01 Propeller Brake _c106b4ff-441f-49e1-939a-d89e4f20940b	24 JUN 2025	ALL
	MEL.MOP.61.50-01P Propeller Brake (O) _orl003959	29 MAR 2023	ALL
	MEL.MOP.61.50-02 Propeller Brake Switch Guard (if installed) _8d1bc9d6-ed14-4dd6-bb38-dfd9554b23b7	01 AUG 2024	ALL
	MEL.MOP.61.51-01 PROP BRAKE UNLK Light _c3b4cd5e-5ac7-49e3-8f58-ec2e41b3b779	22 SEP 2022	ALL
	MEL.MOP.61.51-02 PROP BRK Light _7727ecb2-75e5-4432-b0df-d55de2c5572d	01 AUG 2024	ALL
	MEL.MOP.61.51-03 PROP BRK Ready Light _3d2b6ab2-7376-420e-b429-15fb975dd3b5	22 SEP 2022	ALL
	MEL.MOP.61.51-03P PROP BRK Ready Light (O) _02cf22fd-a0d2-4479-b4ed-5b7e229af6ce	22 SEP 2022	ALL
	MEL.MOP.61.60-01 Propeller System - PROP FEATH PUMP and PROP OVSP Test Switches (RH Maintenance Panel) _8fbafc5f-1d78-4709-b041-dccfe266224c	21 OCT 2020	ALL
	MEL.MOP.73.13-01 IDLE GATE FAIL Light _94990823-e6d3-4e15-a2b7-d712f340bd55	19 OCT 2020	ALL
	MEL.MOP.73.13-01P IDLE GATE FAIL Light (O) _5ae5f8ee-be50-4c57-9d72-26701ceace67	16 OCT 2020	ALL
	MEL.MOP.73.15-01 Fuel Heater _12f6ef57-a3d1-4890-91a3-32dab92cc491	18 MAY 2022	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°63
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.73.23-01 PWR MGT Rotary Selector _4f70347c-8f88-4fc3-9e5d-948087b1eb75	14 MAY 2025	ALL
	MEL.MOP.73.23-01P PWR MGT Rotary Selector (O) _e23a7b04-2eb0-4279-8fe8-f162f46744ce	15 APR 2025	ALL
	MEL.MOP.73.23-02 Engine Control _d268a650-cc35-46a2-b88e-621495a75abb	14 MAY 2025	ALL
	MEL.MOP.73.23-02P Engine Control (O) _ca78fe8a-755a-48ab-9f3c-2dd27f8b353e	24 JUN 2025	ALL
	MEL.MOP.73.31-01 Fuel Flow Indication _9db95511-37ff-4e6d-8fe2-1be3a180b358	24 OCT 2019	ALL
	MEL.MOP.73.31-02 Fuel Used _21defcaf-7061-4354-8280-0c44a8daac8d	24 OCT 2019	ALL
	MEL.MOP.73.34-01 Fuel Clog Alert _fb6e5659-a51d-44fb-a89a-dde26d0b487e	24 OCT 2019	ALL
	MEL.MOP.73.35-01 Fuel Temperature Indication _6a4d436d-69bb-4468-b3d2-93b3e2d14cbd	01 AUG 2024	ALL
	MEL.MOP.73.60-01 ENG - RH Maintenance Panel Guarded Switches _ea87f588-0b6d-4055-9e47-081aa484661f	21 OCT 2020	ALL
	MEL.MOP.74.21-01 Ignition System (A or B) _476c62b0-6cc6-4413-9ef7-1cf5794dab94	01 AUG 2024	ALL
	MEL.MOP.75.20-01 HBV Discharge Flapper _0e07d63b-641c-43f7-b2c7-18d82653d88c	24 OCT 2019	ALL
	MEL.MOP.77.00-02 AFU _13b5456b-4957-4d93-9477-b3da7c0dc5ab	14 MAY 2025	ALL
	MEL.MOP.77.00-02P AFU (O) _41aea807-a4aa-4449-b8f5-6c94afb02b62	24 JUN 2025	ALL
	MEL.MOP.77.11-01-01 NH Indications _c454d30b-cb07-4b67-8bf0-d9118e5f33ce	22 SEP 2022	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MOP.77.11-01-02 NH Indicator _1a36c1a5-d88c-49e0-98d0-d4cefb6f323f	01 AUG 2024	ALL
	MEL.MOP.77.11-01-02P NH Indicator (O) _f8279b1e-1926-4aec-9aea-4c62977710bf	24 OCT 2019	ALL
	MEL.MOP.77.11-02 NL Indicator _6b55d947-c94c-4b08-8739-39543c018825	24 OCT 2019	ALL
	MEL.MOP.77.13-01-01 TQ Indications - Digital Counter _d1570907-613a-4ca1-aef0-d27f0d388dd9	01 JAN 2024	ALL
	MEL.MOP.77.13-01-01P TQ Indications - Digital Counter (O) _ce4c2e8e-0787-4e4b-9835-30627a95884d	12 NOV 2020	ALL
	MEL.MOP.77.13-01-02 TQ Indications - Pointer & Digital Counter _75f9954a-3351-4950-9c85-04f4826cf4ef	14 MAY 2025	ALL
	MEL.MOP.77.13-01-02P TQ Indications (O) _3086aa0d-33f1-4d77-8b2d-cfc31e7bdad5	24 JUN 2025	ALL
	MEL.MOP.77.14-01 TQ Target Indication _0b640cf0-456f-4773-8105-9406c7251d75	24 OCT 2019	ALL
	MEL.MOP.77.14-01P TQ Target Indication (O) _c5f99735-76fb-46d8-853b-581743ed5470	22 SEP 2022	ALL
	MEL.MOP.77.20-01 ITT Indications _454e8bb3-1d53-4535-9660-275c97110279	26 MAR 2020	ALL
	MEL.MOP.77.21-01 Excessive ITT Alert _e9a3dde3-91af-4b4d-a10b-419d080e1128	24 OCT 2019	ALL
	MEL.MOP.77.60-01 DATA BUS (RH Maintenance Panel) _b6172b18-c68b-4b9c-8ffe-f95bafb784c8	21 OCT 2020	ALL
	MEL.MOP.79.32-01 Oil Temperature Indication _c77188ac-ed49-4e07-af61-092e4abc8fa9	24 OCT 2019	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°65
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MOP.79.33-01 Oil Pressure Indication _340f3c13-ee57-4f3d-a68c-7ecc1cc38458	24 OCT 2019	ALL
MMEL/MEL.MMP MAINTENANCE PART			
	MEL.MMP.21.22-02 Emergency Ram Air Valve (ERAV) (M) _b69400bb-8a2b-4ba6-9428-cad86c30f49b	22 JUL 2020	1658-1718
	MEL.MMP.21.22-03 Emergency Ram Air Check Valve (ERACKV) (M) _01f3bd45-ded7-4776-8790-b53d273129b4	22 JUL 2020	1658-1718
	MEL.MMP.21.23-01 Overboard Valve (M) _c9d14da0-8abf-4344-9450-e16f722ac43b	19 MAY 2022	ALL
	MEL.MMP.21.30-01 Pressurization System (M) _9d253ad8-5e40-4e1c-8a23-c91c4a1c5990	19 MAY 2022	1192-1568
	MEL.MMP.21.30-01 Pressurization System (M) _89b49954-b7fd-49cf-84c9-36c3c4884800	14 JAN 2022	1658-1718
	MEL.MMP.21.31-01 Automatic Pressurization Control (M) _0d941797-69bc-45de-850a-b4e7472c5dd4	22 JUL 2020	1658-1718
	MEL.MMP.21.31-03 Electropneumatic Outflow Valve (M) _7d3d4f46-f8f7-4688-b716-4c30dc900c11	19 MAY 2022	1192-1568
	MEL.MMP.21.34-01 Safety Valve (SFV) (M) _7aa05d93-3c98-4401-ade1-98462b3f2dd3	24 JUL 2020	1658-1718
	MEL.MMP.21.50-01 Pack (M) _f734bc1a-6b5c-4a00-aced-de37d9b41cd9	22 JUL 2020	1658-1718
	MEL.MMP.21.50-02 Flow Control Valve (FCV) (M) _fff908ea-662f-47f9-930c-48e83492364c	22 JUL 2020	1658-1718
	MEL.MMP.21.50-03 Integrated Air System Controller (IASC) (M) _20ec1988-b796-4989-9977-048aa1d89372	22 JUL 2020	1658-1718
	MEL.MMP.21.50-04 Pack Temperature Sensor Channels (PTS) (M) _4421b513-3794-441d-8700-55f6d1bd3e7a	24 JUL 2020	1658-1718

Status	Data Module	Revision Date	Applicability
	MEL.MMP.21.50-05 Pack Inlet Temperature Sensor (PITS) (M) _675d1f6c-6a54-46e2-815f-022923d7a623	24 JUL 2020	1658-1718
	MEL.MMP.21.50-06 Compressor Discharge Temperature Sensor (CDTS) (M) _d8381d8c-f121-4da5-bb11-f35dbb38759f	22 JUL 2020	1658-1718
	MEL.MMP.21.50-07 Pack Inlet Pressure Sensor (PIPS) (M) _488b61ac-d3c8-4491-83c1-a08a119209ed	24 JUL 2020	1658-1718
	MEL.MMP.21.50-08 Pack Discharge Temperature Sensor (PDTS) (M) _a7cbef44-9451-4f91-9f60-abe89e77f69f	24 JUL 2020	1658-1718
	MEL.MMP.21.50-09 Pack Dispatch Pressure Sensor (PDPS) (M) _c1fcc9e4-3307-445f-a2b3-8e8b8406a969	24 JUL 2020	1658-1718
	MEL.MMP.21.51-01 Pack Valve (M) _005e5080-471c-4e69-bfa1-74072375cf49	01 AUG 2024	1192-1568
	MEL.MMP.21.51-02 Pack FAULT Alert (M) _4012ca69-94de-4158-818e-b8d7bf6a7902	24 JUL 2020	1658-1718
	MEL.MMP.21.51-08 Mix Manifold Temperature Sensor (MIXTS) (M) _25ea5b93-739e-4e9d-9d7e-8325162e3a50	22 JUL 2020	1658-1718
	MEL.MMP.21.51-09 Ventilated Temperature Sensor (VENTS) (M) _61da31c5-f6d8-4cac-87f4-3c6358183f60	24 JUL 2020	1658-1718
	MEL.MMP.21.61-04 Ram Air Regulating Valve (RARV) (M) _9a685d8c-5b70-435b-afdd-9a5b08c4cd66	24 JUL 2020	1658-1718
	MEL.MMP.22.16-04 Autopilot Quick Disconnect (Quick Release Control) (M) _1ddfbf8b-09e0-463c-b139-edc6ba282b19	14 MAY 2025	ALL
	MEL.MMP.22.18-03 Yaw Damper Function (M) _b2c337ac-552b-4b54-bac8-1387139ca905	15 APR 2025	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°67
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MMP.23.31-01-01 Passenger Address System – Passenger Configuration (M) _17196246-f4aa-4a15-b96e-59e45366e3c3	15 APR 2025	ALL
	MEL.MMP.23.31-01-02 Passenger Address System – Cargo Configuration (M) _5aa63c3f-0029-481a-8902-e8e51bafedae	15 APR 2025	ALL
	MEL.MMP.24.22-01 ACW Generation (Generator and (or) Related GCU) (M) _458eede6-649e-441c-9106-f91c355d50a1	01 AUG 2024	ALL
	MEL.MMP.25.11-02 Flight Deck Observer Seat (M) _d44eb14f-72ed-4f04-8850-9fc96d8aed31	15 APR 2025	ALL
	MEL.MMP.25.11-03 Flight Crew Seat - Armrest (M) _3e70ff9d-f783-4442-abda-5901d84940ce	24 JUN 2025	ALL
	MEL.MMP.25.21-01 Required Cabin Attendant Seat (M) _838138ae-7284-44d6-83d9-c3fbfc2cb90b	22 SEP 2022	ALL
	MEL.MMP.25.31-01-01 Passenger Seats (M) _5d640f44-649c-4874-82fb-9eda73fd2f8e	22 SEP 2022	1192-1658
	MEL.MMP.25.31-01-02 Passenger Seats - Underseat Baggage Restraining Bars (M) _1f1c1d02-1dc3-4b22-90b3-9df872178591	22 SEP 2022	1192-1658
	MEL.MMP.25.31-01-03 Passenger Seats - Passenger Seat Armrests (M) _29f4493a-ff74-44c5-9f25-b65c6c4ed687	22 SEP 2022	1192-1658
	MEL.MMP.25.31-01-04 Passenger Seats - Recline Function (M) _a82aacbc-a335-4fbb-aff9-3a9e41173e92	24 JUN 2025	1192-1350;1376-1455;1658-1718
	MEL.MMP.25.41-02 Interior Lavatory Door Ashtray (M) _d6860200-cb8f-4178-9a82-3e9fc0f1cb89	24 JUN 2025	ALL
	MEL.MMP.25.54-23 Cargo Restraint System (M) _17017ccb-8a00-4a11-898e-1f1619b87b6f	22 SEP 2022	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MMP.26.12-03 ENG 2 NAC OVHT (M) _e447d1d7-9fab-448f-924c-0bb02e5d28bc	24 JUN 2025	ALL
	MEL.MMP.26.17-01-01 Toilet Smoke Detection System - Passenger Configuration (M) _8fca2fb3-1a6b-4897-814c-4551d6050a0f	24 JUN 2025	ALL
	MEL.MMP.26.21-01 AGENT DISCH Light (Engine) (M) _8a68d305-478e-467f-a323-13901c4e48d4	19 MAY 2022	ALL
	MEL.MMP.26.25-00 Lavatory Fire Extinguisher (M) _fd66c87d-26a8-4876-ab2b-f1baf12fc551	22 SEP 2022	ALL
	MEL.MMP.27.32-03 First Officer Pitch Trim Rocker Switch Cover (M) _c1bbc11e-f418-4aff-9f62-3048778d3a2f	24 JUN 2025	ALL
	MEL.MMP.27.36-02 Stick Pusher Actuator (M) _3eecb395-eda6-41b3-85e5-034caca2bc7f	19 MAY 2022	ALL
	MEL.MMP.27.37-01 Pitch Elevators Coupling System (M) _59464e2f-c084-448c-8937-cd4e04267b22	19 MAY 2022	ALL
	MEL.MMP.27.37-02 Elevators Clutch Reconditioning Device (M) _3eadb632-6fd1-4835-962c-468bd8edb389	01 AUG 2024	ALL
	MEL.MMP.27.61-01 Spoiler Control System (M) _fb265fd3-e2c1-44ed-85dd-15483137bdb1	19 MAY 2022	ALL
	MEL.MMP.27.65-01 Spoiler Position Indicating System (M) _5dd07183-8c42-4cc7-abb7-c1db9182fb41	19 MAY 2022	ALL
	MEL.MMP.27.70-01-01 GUST LOCK System - Aileron (M) _73618683-647e-47fe-a731-a6b51ac1a0b3	01 AUG 2024	ALL
	MEL.MMP.27.70-01-02 GUST LOCK System - Elevator (M) _c3332d43-1a4f-4792-aea9-5c6cd1180c3a	24 OCT 2019	ALL
	MEL.MMP.28.21-02 Electrical Fuel Pump (M) _9c7aaae8-a5ee-4383-a8e8-2bcfb15a4cbe	01 AUG 2024	ALL

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°69
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MMP.28.25-01-01 Refueling Control Panel - Refueling Control Panel (M) _7b145a6f-0b7a-40ce-b82b-b84e64ac1586	01 AUG 2024	ALL
	MEL.MMP.28.25-01-02 Refueling Control Panel - Fuel Preselector (M) _5501a39e-3cb5-4827-b8b6-3f70f149d1d7	01 AUG 2024	ALL
	MEL.MMP.28.25-01-03 Refueling Control Panel - Preselected Qty (M) _706abc62-82df-4ce3-9e2a-f8b3ac5ef12f	22 SEP 2022	ALL
	MEL.MMP.28.25-01-04 Refueling Control Panel - Refueling Control Panel Door Indication (M) _9085bef7-ffc6-4236-aa27-edbe85a3246d	22 SEP 2022	ALL
	MEL.MMP.28.25-02 Pressure Refueling Cap (M) _793ec7bd-bb6d-4efa-94e7-1e7adf9d02b4	22 SEP 2022	ALL
	MEL.MMP.28.42-01 Fuel QTY Indication (M) _46e901b1-b423-4ec2-a229-8631d6772404	01 AUG 2024	ALL
	MEL.MMP.28.42-03.42-03-1 Visual Examination of the Fuel Level with the Manual Magnetic Indicators _orl017085	01 AUG 2024	ALL
	MEL.MMP.28.42-03.42-03-2 Functional test of feeder tank low level sensor _orl017084	12 JUL 2024	ALL
	MEL.MMP.29.11-01 Main HYD Pump (M) _ab380eee-7d0a-44f3-a7ee-b1be718dd591	22 SEP 2022	ALL
	MEL.MMP.30.31-05 PITOT Probes HTG Fault Lights (M) _9e0b0ba8-a3fc-4b3b-b549-1dc1e462a535	19 MAY 2022	ALL
	MEL.MMP.30.80-01 Ice Detection System (M) _8a280089-2d57-48bd-9dff-ca41ec409075	24 JUN 2025	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MMP.31.32-04 DFDR Required Parameters - Variable and Discrete (M) _13b7c626-71c6-4608-a1f6-0219365e5143	24 JUN 2025	ALL
	MEL.MMP.32.42-01 Wheel Brake (M) _5896ce38-e9dd-444b-898d-d69c8e5eabb3	19 MAY 2022	ALL
	MEL.MMP.32.51-01 Nose Wheel Steering (M) _7a3e201e-0caf-4a6d-baba-31b59b4e3039	24 JUN 2025	ALL
	MEL.MMP.35.12-10 Oxygen Overboard Discharge Indicator (Green Disc) (M) _4c93c7ae-ca8c-4598-a083-f1dd5270b9b0	19 MAY 2022	ALL
	MEL.MMP.35.20-03 Passenger Service Unit (M) _759795e3-377e-49ff-9656-157216075fdb	22 SEP 2022	ALL
	MEL.MMP.35.35-01 Potable Oxygen Bottle (M) _0d1f4bb8-0268-45e2-a0f8-eccbc218d5c9	22 SEP 2022	ALL
	MEL.MMP.36.11-01 HP Valve (M) _3a543cb7-7d35-4c6a-bbc9-a0dfa8532991	19 MAY 2022	1192-1568
	MEL.MMP.36.11-01 HP Valve (M) _2d421add-013a-422d-ba53-57e840404253	14 JAN 2022	1658-1718
	MEL.MMP.36.11-02 BLEED Valve (M) _072d6b42-fa3d-4d82-b2c4-e09a02a9a4f6	19 MAY 2022	1192-1568
	MEL.MMP.36.11-02 BLEED Valve (M) _6cf4ccfa-7498-4f5d-a21c-c09dabd0ae7d	14 JAN 2022	1658-1718
	MEL.MMP.36.11-03 Bleed FAULT Alert (M) _cb1cdc4e-3b5a-4704-8bb0-7007e787a0ca	07 SEP 2020	1658-1718
	MEL.MMP.36.11-04 Ground X Feed Valve (M) _4a428ad2-c6c5-4b4a-ad1c-a513435a0a79	19 MAY 2022	1192-1568
	MEL.MMP.36.11-04 Ground X Feed Valve (M) _997743ae-a7e1-414b-9bcd-9622be6b1b21	01 AUG 2024	1658-1718

 VT / ATR 72-600 MEL	MEL LEDM List of Effective Data Modules	Page n°71
---	--	-----------

Status	Data Module	Revision Date	Applicability
	MEL.MMP.36.11-05 GRD X FEED - X VALVE OPEN Light (M) _32836591-804b-4c2b-91e4-0c99cf71c337	01 AUG 2024	ALL
	MEL.MMP.36.11-06 OVHT Alert (M) _ef80070f-63b0-4a68-b72a-6843af5a82ae	19 MAY 2022	1658-1718
	MEL.MMP.36.11-07 Bleed Switching Pressure Sensor (BSPS) (M) _c22a6dca-0597-469a-b8fd-e658c1793c56	19 MAY 2022	1658-1718
	MEL.MMP.36.22-01 LEAK Alert (M) _6f713d4d-37a0-4722-9bd1-25d5442dfe75	01 AUG 2024	1658-1718
	MEL.MMP.46.25-02 Electronic Flight Bag - Mounting Device (M) _7d477ad9-7e88-4db2-842a-1872457b0e18	01 JUL 2023	ALL
	MEL.MMP.52.11-01 Door Alert System (M) _903169b9-1c9d-48ec-b8ef-9be412397f77	22 SEP 2022	ALL
	MEL.MMP.52.11-02 Secondary Handrail (if installed) (M) _ac068687-cff4-4fcf-95f1-a48a1e361742	15 APR 2025	ALL
	MEL.MMP.52.31-01 Cargo Door Motor Actuator (M) _2f1320b2-1f49-48c5-b8f2-7e37153dd67d	22 SEP 2022	ALL
	MEL.MMP.52.42-01 Service Door - Hold Open Device (M) _f3265303-8c57-4b72-bee6-a65f64a31833	01 AUG 2024	ALL
	MEL.MMP.56.11-01 Windshield (Including Main Windshield, FWD and AFT Windows) (M) _7994d8cc-8ab8-4d82-a4ae-88a6c91614a9	25 SEP 2020	ALL
	MEL.MMP.56.21-01 Passenger Compartment Window (M) _7014e4d1-e26f-4ab5-b9ba-d4376f27f035	24 OCT 2019	ALL
	MEL.MMP.61.50-01 Propeller Brake (M) _16596579-b13e-4857-b280-ed0a5b5119eb	19 MAY 2022	ALL
	MEL.MMP.73.15-01 Fuel Heater (M) _aac38c02-1445-4e54-b369-8ca32a41d4cb	16 OCT 2020	ALL

Status	Data Module	Revision Date	Applicability
	MEL.MMP.77.00-02 AFU (M) _b252952d-9060-49a8-ad89-178a93850faf	28 OCT 2020	ALL
	MEL.MMP.79.32-01 Oil TEMP Indication (M) _f348196e-0287-41fa-90c0-f7a0fa5dda5b	19 MAY 2022	ALL
	MEL.MMP.79.33-01 Oil Pressure Indication (M) _7d0e2028-dd38-4874-b89b-ae58b01d1832	19 MAY 2022	ALL

 VT / ATR 72-600 MEL	MEL CRT Cross Reference Table	Page n°01
---	--	-----------

FSN	MSN	Registration	Model
0065	1192	F-ORVS	72-212A
0066	1255	F-ORVN	72-212A
0067	1289	F-ORVO	72-212A
0068	1350	F-ORVU	72-212A
0075	1355	F-OZIP	72-212A
0069	1376	F-ORVV	72-212A
0070	1432	F-ORVT	72-212A
0071	1455	F-ORVR	72-212A
0072	1568	F-ORVP	72-212A
0073	1658	F-ORVX	72-212A
0074	1678	F-OPFS	72-212A
0076	1718	F-OPFN	72-212A



VT / ATR 72-600

MEL

MEL

CRT

Cross Reference Table

Page n°02

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	MEL TOC Table of Content	PRE. Page n°01
---	---	------------------------------

PREAMBLE

GOALS AND PRINCIPLE

PRE.1

.	GOALS.....	page 01
.	PRINCIPLE.....	page 01

GENERAL

PRE.2

.	PRESENTATION OF THE MEL.....	page 01
.	HOW TO READ THE MEL OPERATIONAL PART (MOP).....	page 02
.	HOW TO READ THE MEL MAINTENANCE PART (MMP).....	page 05
.	HOW TO REPORT A DEPARTURE UNDER MEL RESTRICTION.....	page 06
.	DEFINITIONS.....	page 07
.	Glossary of Standard Nomenclature.....	page 08

 VT / ATR 72-600 MEL	 MEL TOC Table of Content	PRE. Page n°02
---	--	-------------------------------

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	PREAMBLE GOALS AND PRINCIPLE	PRE.1 Page n°01
---	--	---

1-01 GOALS

e147317e-9444-4d6e-b72b-20dabc85f961

24 JUN 2025

ALL

The European air operations regulations (Paragraph 1.3.2 Annex II of regulation (EU) 2018/1139) requires that all equipment installed on an aircraft required for type certification or by operating rules shall be operative.

However, the Requirements also permit the use of a **Minimum Equipment List (MEL)** where compliance with certain equipment requirements is not necessary in the interests of safety under all operating conditions. Experience has shown that with various levels of redundancy designed into aircraft, operation of every system or installed component may not be necessary when the remaining operative equipment can provide an acceptable level of safety.

THE **EASA MASTER MINIMUM EQUIPMENT LIST (MMEL)**, is supplied by the manufacturer ATR (the type certificate holder) TO IMPROVE AIRCRAFT UTILIZATION AND THEREBY PROVIDE MORE CONVENIENT AND ECONOMIC AIR TRANSPORTATION FOR THE PUBLIC. THE EASA MMEL INCLUDES THOSE ITEMS OF EQUIPMENT RELATED TO AIRWORTHINESS AND OPERATING REQUIREMENTS AND OTHER ITEMS OF EQUIPMENT WHICH THE EASA FINDS MAY BE INOPERATIVE AND YET **MAINTAIN AN ACCEPTABLE LEVEL OF SAFETY** BY APPROPRIATE CONDITIONS AND LIMITATIONS.

The MMEL is the basis for development of AIR TAHITI's MEL , which take into consideration the operator's particular aircraft equipment configuration and operational conditions.

Note

*This Minimum Equipment List is approved by the SEAC.PF and was issued following the release of **REV 17.0 of the MMEL**.*

1-02 PRINCIPLE

66a5ce31-0da9-4cf2-9b41-087aa7bc1abb

22 SEP 2022

ALL

For the sake of brevity, the MEL does not include:

- Obviously required items such as wings, rudders, flaps, engines, landing gear...
- Items which do not affect the airworthiness of the aircraft such as galley equipment, entertainment systems...
- Passenger convenience items...

HOWEVER, IT IS IMPORTANT TO REMEMBER THAT ALL EQUIPMENT RELATED TO THE AIRWORTHINESS AND THE OPERATING REQUIREMENTS OF THE AIRCRAFT NOT LISTED IN THE MEL MUST BE OPERATIVE FOR EACH FLIGHT.

Suitable conditions and limitations in the form of placards, maintenance procedures, crew operating procedures and other restrictions as necessary are specified in the MEL to ensure that an acceptable level of safety is maintained.

The MEL is intended to permit operation with inoperative items of equipment for a period of time until repairs can be accomplished. It is important that repairs be accomplished at the earliest opportunity. In order to maintain an acceptable level of safety and reliability the MEL

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GOALS AND PRINCIPLE	PRE.1 Page n°02
---	---	--------------------------------

cont'd... >>>

establishes limitations on the duration of and conditions for operation with inoperative equipment. The MEL provides for release of the aircraft for flight with inoperative equipment. When an item of equipment is discovered to be inoperative, it is reported by making an entry in the Aircraft Maintenance Record/Logbook as prescribed by European air operations regulations. The item is then either rectified or may be deferred per the MEL prior to further operation. MEL conditions and limitations do not relieve the operator from determining that the aircraft is in condition for safe operation with items of equipment inoperative.

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°01
---	---------------------------------------	-------------------------------

2-1 PRESENTATION OF THE MEL

8fedf3d2-11e0-4c91-a590-52559b78cc20


24 JUN 2025

ALL

The MEL is divided into 4 sections:

Preamble	: This section includes general information and gives indications about how to read and understand the customization of our new MEL.
ALERT MESSAGE LIST	: This section is dedicated to “600 version” only, Refer to MEL-AML-01 INTRODUCTION .
MEL OPERATIONAL PART (MOP)	: This section contains the MEL items and their operational procedure classified by ATA chapter.
MEL MAINTENANCE PART (MMP)	: This section includes the maintenance procedures classified by ATA chapter referenced by the MOP Items.

Each content is organized with informations related to the update revision, and the aircraft validity (or technical configuration in case of envelope non customized MEL edition).

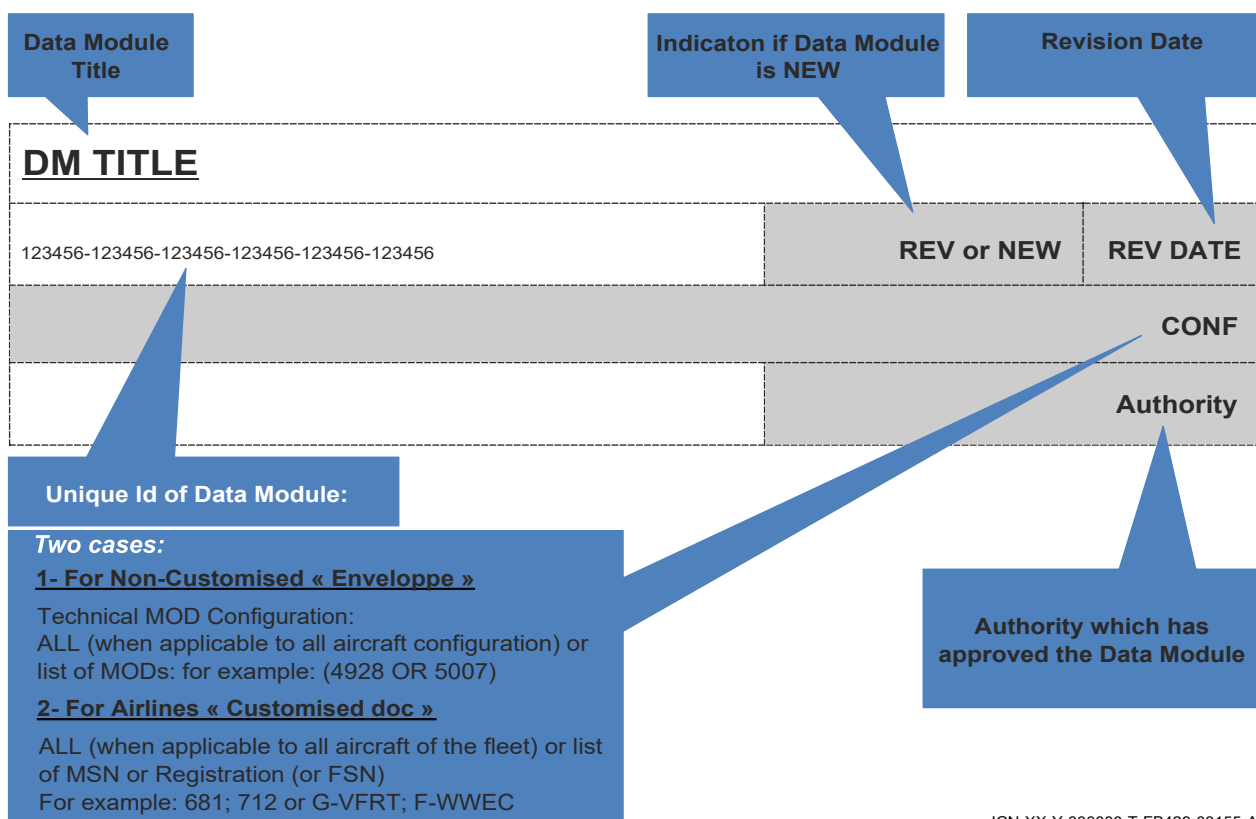

2-2 HOW TO READ THE MEL OPERATIONAL PART (MOP)

2bf150c9-a343-4964-966e-896d73d61c72

14 MAY 2025

ALL

This section identifies the systems per ATA classification with its associated MEL items and operational procedures (if required).

Examples :

1

22-36-02 Autopilot Disconnect Aural Alert

11845533-68e4-46bd-b607-06038bba81b2

30 DEC 2019
1055 - 1062
EASA - APPROVED

2

22-36-02A (A)

RI	NI	NR	PLACARD	O	M
B	1	0	YES	NO	NO

May be inoperative provided that autopilot function is not used.

3

22-36-02B (B)

RI	NI	NR	PLACARD	O	M
B	1	0	YES	YES	NO

May be inoperative provided that both AP OFF lights are checked operative prior to each departure.

9

See Operational procedure MOP.22.36-02P Autopilot Disconnect Aural Alert (O)

8

22-36-02P Autopilot Disconnect Aural Alert (O)

cc1460b6-95de-4cdc-a7bd-e46f5fc7a455

19 AUG 2020
1062
EASA - APPROVED

Not applicable

OPS PROC

■ On Ground, aircraft powered (EXT PWR or Hotel Mode)

- ▶ AVIONICS VENT EXHAUST MODE NORM
- ▶ STICK PUSHER pb.....OFF
- ▶ AIR BLEEDS..... OFF

8

21-10-01 Flow Selector

2189f0b9-a595-4d13-b78a-f676e894275a

30 DEC 2014
ALL
EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that one mode (NORM or HIGH) is operative and used.

Note

Some smoke procedures request to select air flow HIGH. Nevertheless associated procedures efficiency has been demonstrated with air flow NORM.

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°03
---	---------------------------------------	-------------------------------

cont'd... >>>

1) Item Number and title:

Identifies the system per ATA and its item, it indicates the equipment, systems, components for which dispatch conditions apply.

2) Dispatch Condition:

Gives remarks or conditions linked to a MEL dispatch. It indicates the suitable conditions and limitations in the form of placard, maintenance procedures, operational procedures and dispatch conditions as necessary to ensure that an acceptable level of safety is maintained.

When multiple provisos are listed for the item, all the conditions or limitations must be respected.

3) RI “Rectification Interval” Column:

For each applicable item, the Rectification Interval column indicates the rectification interval category.

Each category is defined according to the following definitions:

Category A	: No standard interval is specified, however, items in this category shall be rectified in accordance with the remark stated in the MEL. Where a time period is specified in calendar days , it shall start on the calendar day following the day of discovery. Where a time period is specified in number of flight or flight hours , it shall start at the beginning of the next flight that follows the discovery. Where a time period is specified in number of hours , it shall start it from the exact time (LT PPT) the failure was noted on the aircraft technical logbook.
Category B	: Items in this category shall be rectified within three (3) consecutive calendar days, excluding the day of discovery.
Category C	: Items in this category shall be rectified within ten (10) consecutive calendar days (240 hours), excluding the day of discovery.
Category D	: Items in this category shall be rectified within one hundred and twenty (120) consecutive calendar days, excluding the day of discovery.
Dash Symbol “-”	: A dash symbol may appear to redirect to another referenced item which provides the rectification interval category.

Note

A flight should not be commenced if the scheduled arrival time is after the expiry of the rectification interval.

4) NI “Number Installed” Column:

Shows the number of installed equipment, components, systems or functions, it matches with the type-certificated configuration of the aircraft.

A Dash “-” symbol indicates a variable quantity installed on the aircraft.

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°04
---	---------------------------------------	-------------------------------

cont'd... >>>

5) NR “Number Required” Column:

Specifies the minimum quantity of equipment, components, systems or functions which must be operative for a MEL dispatch, under the conditions listed in the dispatch conditions.

A Dash “-” symbol indicates a variable quantity, minimal required for the dispatch of the aircraft.

6) Placard Column (YES / NO):

- YES: Each inoperative item must be placarded, as applicable, to inform and remind the crew members and maintenance personnel of the item's condition.

Note

To the extent practical, placards should be located adjacent to the control or indicator for the item affected. However, unless otherwise specified, placard wording and location will be determined by the operator.

- NO: No Placard is Required.

7) Operational and maintenance Procedures

An inoperative equipment may refer to an operational and/or maintenance procedure (M) to ensure an acceptable level of safety.

a) “O” Column:

The “YES” in Operational Column “O” identifies an Operational procedure when operating with the associated inoperative item. Operational procedures may require crew actions, limitations, performance penalties or crew awareness information to be taken into account.

These procedures are normally carried out by qualified flight or cabin crew, but may be accomplished by other qualified, approved personnel. However the flight crew must always be informed of the applicable operational procedure prior to each flight under associated MEL item.

When flight situation occurs the operational procedures must always be applied under the associated item (unless its periodicity of application is clearly specified in remarks and conditions).

The operational Procedure is described just after the associated Dispatch Condition of the MEL item and is identified with the same number and title.

b) “M” Column:

The “YES” in Maintenance Column (M) identifies a maintenance procedure to be performed. These procedures are normally carried out by maintenance personnel, but some elementary maintenance tasks may be accomplished by crew members after having followed the corresponding training provided by the Industrial Center. **In that case, it is clearly specified with a CAUTION note in the associated maintenance procedure.**

The crew members are also empowered by the same training to perform the following actions :

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°05
---	--	--

cont'd... >>>

- reading and erasing of EEC and PEC fault codes at the request of the Industrial Center,
- reset GCU / BPCU BITES at the request of the Industrial Center,
- opening and closing of a circuit breaker,
- system reset (PA, ACW, Starter Gene ...),
- inspection following an bird strike.

The maintenance procedures must be performed once prior to the first flight under the associated item and, if applicable, must be repeated at the interval specified.

Once the maintenance procedure is performed (by maintenance personnel or crew members), the APRS must be registered in the "ACTION" box of the aircraft technical logbook.

The maintenance Procedure is published in the MEL maintenance Part (MMP) and is identified with the same number and title.

8) Notes

There are three levels of notes:

- Notes at the level of the item: these notes appear below the item title and before the first dispatch condition of this item. These notes apply to all the dispatch conditions of the item.
- Notes at the level of the dispatch condition: these notes appear at the end of the dispatch condition. These notes apply only to this dispatch condition.
- Notes at the level of the requirement: these notes appear within a proviso. These notes apply only to this requirement.

9) References

References are used in case of:

- Another source of information must be reviewed and associated restrictions, and/or procedures must be applied (e.g. "Refer to AFM ...").
- Another ATA chapter of the MEL must be reviewed, in order to determine the applicable item. The rectification interval category the most restrictive must be applied.

2-3 HOW TO READ THE MEL MAINTENANCE PART (MMP)

b3006c7a-d04e-4d9e-9193-dc687b29e615

22 SEP 2022

ALL

This section includes the maintenance procedure classified by ATA chapter associated to the corresponding MEL items.

Below, is an example with indications about how to read and understand this chapter.

cont'd... >>>

cont'd... >>>

21-23-01 Overboard Valve

1f1296af-6058-4587-a14a-ec3c5530532a

02 JAN 2020

ALL

EASA - APPROVED

21-23-01A Automatic Mode (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	NO

Automatic mode may be inoperative provided that:

- (a) Manual mode is checked operative before each departure, and
- (b) Flight is conducted in order to maintain $\Delta P \leq 1$ PSI .

See Operational procedure MOP.21.23-01P Overboard Valve (O)

ITEM

- OR -

21-23-01B (B)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	YES

May be inoperative provided that:

- (a) It is deactivated, and
- (b) [Extended overwater flight](#) is prohibited, and
- (c) Flight level is limited to FL 170, and
- (d) FLOW selector is considered inoperative, [Refer to Item 21-10-01MOP. 21.10-01 Flow Selector](#)

Link to
Maintenance
Proc

See Maintenance procedure MMP.21.23-01 Overboard Valve (M)

Maintenance procedure title

21-23-01 Overboard Valve (M)

c9d14da0-8abf-4344-9450-e16f722ac43b

09 FEB 2021

ALL

- Overboard Ventilation Valve De-energization

Refer to MP ATR-A-21-23-20-00ZZZ-560Z-A, setting the valve open in intermediate position.

Note

- Avoid leaving avionics selected ON for a long period of time.

MAINTENANCE
PROC

2-4 HOW TO REPORT A DEPARTURE UNDER MEL RESTRICTION

ori004862

02 SEP 2021

ALL

If an MEL restriction can be applied on a failed equipment (that is to say, the number required for dispatch, repair time and remarks are checked), then :

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°07
---	---------------------------------------	-------------------------------

cont'd... >>>

- 1) the CAPT performs or has carried out any operational procedure.
- 2) the CAPT performs or has carried out any maintenance procedures.
- 3) the CAPT fills in the aircraft technical logbook :
 - in the "CONSTAT" box : the name of the equipment that fails.
 - in the "ACTION" box : "APPLICATION MEL n°ATA n°ITEM CATEGORIE (CATEGORIE DE LA MEL) ETOPS ou NON ETOPS BUTEE .. /.. /...." plus his visa.

In case a maintenance procedure has been performed by the crew, the CAPT fills in the APRS part with the following : NAME, DATE, HOUR (local time), PLACE plus his visa.

CAUTION

REGISTERING A VISA INVOLVES THE STRICT APPLICATION OF OPERATIONAL AND MAINTENANCE PROCEDURES, ASSOCIATED WITH THE EQUIPMENT UNDER MEL.

2-5 DEFINITIONS

f083eae7-9a82-48ca-8b33-63cd69c68452

24 JUN 2025

ALL

This list is not exhaustive. Additional definitions could be added by the Operator in their MEL.

Calendar days

Some MEL items are assigned a time interval in "days" in the remark. "Days" must be considered as "calendar days", not including the calendar day that the failure was recorded.
A calendar day begins at 00h00 and ends at 23h59 on the same day.

Cargo configuration

Refers to cargo operations when aircraft is operated with an ATR cargo installation.

Considered Inoperative

Must be treated as "inoperative". Therefore the "considered inoperative" MEL item must also be recorded in the Technical log and the associated dispatch exceptions must be applied, in addition to any applicable (o) and (m) procedure. The shorter rectification interval, between the initial inoperative item and the "considered inoperative" item, should be applied.

Day of discovery

The calendar day that the failure has been recorded in the aircraft maintenance record/ logbook.

ETOPS

Refers to operation according to "Extended Range operations of twin engine airplane" requirements.

Extended overwater flight

A flight operated over water at a distance of more than 93 km (50 Nm), or 30 min at normal cruising speed, whichever is the lesser, away from land suitable for making an emergency landing, *Refer to ICAO Annex 6 parts.*

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°08
---	---------------------------------------	-------------------------------

cont'd... >>>

Ferry Flight	Non-revenue flight with necessary flight crew member to conduct a ferry flight.
Flight	Is defined as the period of time that begins the moment at which an aircraft begins to move by its own means in preparation for takeoff, continues during and the applicable flight phases, and ends when the aircraft lands and comes to a complete stop in its parking area.
Flight day	A 24-hour period from midnight to midnight based on either UTC or local time, as selected by the operator, during which at least one flight is initiated for the affected aircraft.
Icing conditions	Visible moisture in any form is present, andOAT on ground and for takeoff is at or below 5 °C or when TAT in flight is at or below 7 °C. <i>Refer to AFM-LIM-04-04 ICING CONDITIONS .</i>
Inflammable or Combustible material	Material that can catch fire and burn. Where loading of inflammable or combustible material is prohibited, NOTHING may be loaded except the following: — cargo handling equipment, — flyaway kits (excluding e.g. cans of hydraulic fluid, cleaning solvents, batteries, chemical generators, etc), and — in-flight service material (return catering-only closed catering trolleys/boxes, no newspaper, no alcohol or duty free goods).
Inoperative	Any time a system and/or component malfunctions to the extent that it does not accomplish its intended purpose and/or is not consistently functioning within its designed operating limit(s) or tolerance(s).
VMC	Atmospheric environment allows the flight to proceed under the Visual Meteorological Conditions applicable to the flight.

2-6 Glossary of Standard Nomenclature

3473513c-92bc-4e37-ac7d-074a852a0df7	24 JUN 2025
	ALL

A

AAS.....Anti-icing Advisory System

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°09
---	---------------------------------------	-------------------------------

cont'd... >>>

ABN	Abnormal
ABV	Above
A/C	Aircraft
AC	Alternating Current
ACARS	Aircraft Communication Addressing and Reporting System
ACAS	Airborne Collision Avoidance System
AC BTR	AC Bus Tie Relay
ACCU	Accumulator
AC EBTC	AC Emer Bus Transfer Contactor
ACM	Air Cycle Machine
ACN	Aircraft Classification Number
ACP	Audio Control Panel
ACR	Aircraft Classification Rating
ACS	Air Conditioning System
ACW	Alternating Current Wild Frequency
ADC	Air Data Computer
ADF	Automatic Direction Finding
ADI	Attitude Director Indicator
ADN	Avionic Data Network
ADS	Air Data System
ADS-B	Automatic Dependent Surveillance - Broadcast
ADU	Advisory Display Unit
AFCS	Automatic Flight Control System
AFDX	Avionic Full Duplex
A/FEATH	Auto Feathering
AFM	Airplane Flight Manual
AFR	Airframe
AFU	Auto Feather Unit
AGB	Accessory Gear Box
AGL	Above Ground Level
AH	Ampere - Hours
AHRS	Attitude and Heading Reference System
AHRU	Attitude and Heading Reference Unit
AIDS	Aircraft Integrated Data System

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°10
---	---------------------------------------	-------------------------------

cont'd... >>>

AIL	Aileron
ALD	Actual Landing Distance
ALT	Altitude
ALTM	Altimeter
ALTN	Alternate
ANN	Annunciator
AOA	Angle of attack
AP	Autopilot
APC	Active Phase Control
APM	Aircraft Performance Monitoring
APP	Approach
APS	Ambient Pressure Sensor
ARINC	Aeronautical Radio Incorporated
ARM	Armed
A/S	Antiskid
ASAP	As Soon As Possible
ASCB	Avionics Standard Communication Bus
ASD	Accelerate Stop Distance
ASI	Air Speed Indicator
ASTR	AC Stand by Bus Transfer Relay
ASYM	Asymmetry
ATC	Air Traffic Control
ATE	Automatic Test Equipment
ATPCS	Automatic Takeoff Power Control System
ATT	Attitude
ATTND	Attendant
AUTO	Automatic
AUX	Auxiliary
AVAIL	Available
AVS	AVionic Suite
AZ	Azimuth
AZWF	Actual Zero Fuel Weight

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°11
---	---------------------------------------	-------------------------------

cont'd... >>>

B

BARO	Barometric
BAT	Battery
BC	Back Course
BCP	Best Computed Position
BITE	Built in Test Equipment
BLW	Below
BPCU	Bus Power Control Unit
BPU	Battery Protection Unit
BRG	Bearing
BRK	Brake
BSPS	Bleed Switching Pressure Sensor
BSC	Battery Start Contactor
BTC	Bus Tie Contactor
BTR	Bus Tie Relay
BXR	Battery Transfer Relay

C

CAB	Cabin
CAC	Crew Alerting Computer
CAC	Core Avionic Cabinet
CAN	Controller Area Network
CAP	Crew Alerting Panel
CAPT	Captain
CAS	Calibrated Airspeed
CAT	Category
C/B	Circuit Breaker
CBV	Cross Bleed Valve
CCAS	Centralized Crew Alerting System
CCW	Counter clockwise
CD	Coefficient of Drag
CDCU	Cockpit Door Control Unit

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°12
---	---------------------------------------	-------------------------------

cont'd... >>>

CDI.....	Course Deviation Indicator
CDL.....	Configuration Deviation List
CDLS.....	Cockpit Door Locking System
CDS.....	Cockpit Display System
CDTS.....	Compressor Discharge Temperature Sensor
CDU.....	Cabin Display Unit
CFC.....	Constant Frequency Contactor
CFR.....	Code of Federal Regulations
CG.....	Center of Gravity
CHAN.....	Channel
CHC.....	Charge Contactor
CHG.....	Charge
CKPT.....	Cockpit
C/L.....	Check List
CL.....	Condition Lever or Coefficient of Lift
CLA.....	Condition Lever Angle
CLB.....	Climb
CLR.....	Clear
CM.....	Crew Member
CNTNR.....	Container
CNTR.....	Contactor
CNTRS.....	Contrast
COM.....	Communication
COMPT.....	Compartment
COMPTR.....	Computer
CONFIG.....	Configuration
CONT.....	Continuous
CORRECT.....	Correction
CPA.....	Closest Point of Approach
CPCS.....	Cabin Pressure Control System
CPL.....	Autopilot Coupling
CPM.....	Core Processing Module
CRC.....	Continuous Repetitive Chime
CRG.....	Cargo

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°13
---	---------------------------------------	-------------------------------

cont'd... >>>

CRS.....Course
CRT..... Cathode Ray Tube
CRZ..... Cruise
CTL..... Control
CVR..... Cockpit Voice Recorder
CW..... Clockwise

D

DADC..... Digital Air Data Computer
DADS..... Digital Air Data System
DC..... Direct Current
DCA.....Data Concentration Application
DEC..... Decrease
DELTA P..... Differential Pressure
DEV..... Deviation
DFDR..... Digital Flight Data Recorder
DGAC..... Direction Générale de l'Aviation Civile
DGR.....Degraded
DH.....Decision Height
DIFF..... Differential
DIM..... Light Dimmer
DISC..... Disconnect
DISCH..... Discharge
DIST..... Distance
DLK..... Datalink
DM.....Data Module
DME..... Distance Measuring Equipment
DN.....Down
DSPL.....Display
DU..... Display Unit

cont'd... >>>

*cont'd... >>>***E**

EADI.....	Electronic Attitude Director Indicator
EASA.....	European Aviation Safety Agency
EBCC.....	Emergency Battery Charge Contactor
EBTC.....	Emer Bus Transfer Contactor
ECL.....	Electronic Checklist
ECS.....	Environmental Control System
ECU.....	Electronic Control Unit
E/E.....	Electrical/Electronic
EEC.....	Electronic Engine Control
EFB.....	Electronic Flight Bag
EFCP.....	EFIS Control Panel
EFIS.....	Electronic Flight Instrument System
EFOB.....	Estimated Fuel On Board
EFVS.....	Enhanced Flight Vision System
EGHR.....	External Ground Handling Relay
EGPWS.....	Enhanced Ground Proximity Warning System
EHSI.....	Electronic Horizontal Situation Indicator
EHV.....	Electro Hydraulic Valve
ELEC.....	Electrical
ELEV.....	Elevator
ELV.....	Elevation
EMER.....	Emergency
ENG.....	Engine
EPC.....	External Power Contactor
EPE.....	Estimated Position Error
EQPT.....	Equipment
ERACKV.....	Emergency Ram Air Check Valve
ERAV.....	Emergency Ram Air Valve
ERIU.....	Engine Rating Interface Unit
ERP.....	Eye Reference Point
ESS.....	Essential
ET.....	Elapsed Time

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°15
---	---------------------------------------	-------------------------------

cont'd... >>>

ETA..... Estimated Time of Arrival
ETE..... Estimated Time En route
ETOPS..... Extended-range Twin Engine Operations Performance Standard
EVS..... Enhanced Vision Sensor
EWD..... Engine and Warning Display
EXC..... External Power/Service Bus Contactor
EXH..... Exhaust
EXT..... External

F

FAA..... Federal Aviation Administration
FAF..... Final Approach Fix
FAIL..... Failed, Failure
FAR..... Federal Aviation Regulations
FCOC..... Fuel Cooled Oil Cooler
FCOM..... Flight Crew Operating Manual
FCU..... Fuel Control Unit
FCV..... Flow control Valve
FD..... Flight Director
FDA..... Flight Display Application
FDAU..... Flight Data Acquisition Unit
FDE..... Fault Detection and Exclusion
FDEP..... Flight Data Entry Panel
FEATH..... Feathered
FF..... Fuel Flow
FGCP..... Flight Guidance Control Panel
FGS..... Flight Guidance System
FI..... Flight Idle
FL..... Flight Level
FLT..... Flight
FMA..... Flight Mode Annunciators
FMS..... Flight Management System

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°16
---	---------------------------------------	-------------------------------

cont'd... >>>

F/O	First Officer
FOB	Fuel On Board
FODU	Feeder Overheat detection Unit
FOS	Flight Operations Software
FOV	Field of View
FPA	Flight Path Angle
FPLN	Flight Plan
FPV	Flight Path Vector
FQI	Fuel Quantity Indication
FSN	Fleet Serial Number
FSV	Flow Sensor Venturi
FTA	Flight Training on Aircraft
FTO	Final TakeOff
FTR	Feather
FU	Fuel Used
FWA	Flight Warning Application
FWD	Forward
FWS	Flight Warning System

G

GA	Go Around
GAL	Galley
GC	Generator Contactor
GCR	Ground Clutter Reduction
GCU	Generator Control Unit
GDM	Group of Data Module
GEN	Generator
GI	Ground Idle
GMT	Greenwich Mean Time
GND	Ground
GNSS	Global Navigation Satellite System
GPS	Global Positioning System

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°17
---	---------------------------------------	-------------------------------

cont'd... >>>

GPU..... Ground Power Unit
GPWS..... Ground Proximity Warning System
G/S..... Glide Slope
GS..... Ground Speed
GSE..... Ground Support Equipment
GW..... Gross Weight
GXS..... ACW Generator/Service Bus Contactor

H

HBOV..... Handling Bleed Overboard Valve
HBV..... Handling Bleed Valve
HD..... Head Down
HDG..... Heading
HDLG..... Handling
HDOP..... Horizontal Dilution Of Precision
HEBTC..... Hot Emer Battery Transfer Contactor
HF..... High Frequency
HFOM..... Horizontal Figure Of Merit
HI..... High
HIL..... Horizontal Integrity Limit
HLD..... Hold
HMBTC..... Hot Main Battery Transfer Contactor
HMD..... Head Mounted Display
HMU..... Hydromechanical Unit
HOBV..... Handling Overboard Valve
HP..... High Pressure
HPV..... High Pressure Valve
HSI..... Horizontal Situation Indicator
HTG..... Heating
HU..... Head Up
HYD..... Hydraulic

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°18
---	---------------------------------------	-------------------------------

cont'd... >>>

I

IAF.....	Initial Approach Fix
IAS.....	Indicated Air Speed
IASC.....	Integrated Air System Control
ICAO.....	International Civil Aviation Organisation
ICP.....	Index Control Panel
IDT.....	Ident
IEP.....	Ice Evidence Probe
IESI.....	Integrated Electronic Standby Instrument
I.F.....	Intermediate Frequency
IFR.....	Instrument Flight Rules
IGN.....	Ignition
ILS.....	Instrument Landing System
IMC.....	Instrumental Meteorological Conditions
IMU.....	Inertial Measurement Unit
IN.....	Inertial Navigation
INC.....	Increase
IND.....	Indicator
IN/HG.....	Inches of Mercury
INHIB.....	Inhibit
INOP.....	Inoperative
INS.....	Inertial Navigation System
INST.....	Instrument
INT.....	Interphone
INU.....	Inertial Navigation Unit
INV.....	Inverter
IOM.....	Input Output Module
IPD.....	Inter-Pupillary Distance
IRS.....	Inertial Reference System
ISA.....	International Standard Atmosphere
ISOL.....	Isolation
ISPSS.....	In Seat Power Supply System
ISV.....	Isolation Shut-off Valve

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°19
---	---------------------------------------	-------------------------------

cont'd... >>>

ITT..... Inter Turbine Temperature

J

JAA..... Joint Aviation Authorities

JAR..... Joint Aviation Requirements

JIC..... Job Instruction Card

L

LAT..... Lateral

LAV..... Lavatory

LBA..... Lowest Blade Angle

LDG..... Landing

LDTA..... Landing Distance at Time of Arrival

LEDM..... List of Effective Data Module

L/G..... Landing Gear

LH..... Left Hand

LIM..... Limitation

LMG..... Left Main Gear

LMU..... Light Managing Unit

LNAV..... Lateral Navigation

LO..... Low

LOC..... Localizer

LOM..... List of MODs

LOS..... Line Of Sight

LP..... Low Pressure

LRU..... Line Replaceable Unit

LSK..... Line Select Key

LT..... Light

LVL..... Level

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°20
---	---------------------------------------	-------------------------------

cont'd... >>>

M

MAC.....	Mean Aerodynamic Chord
MAN.....	Manual
MAP.....	Ground Mapping
MAX.....	Maximum
MBCC.....	Main Battery Charge Contactor
MBTC.....	Main Bus Transfer Contactor
MC.....	Master Caution
MCDU.....	Multi Function Control Display Unit
MCP.....	Multi Function Control Panel
MCT.....	Maxi Continuous Thrust
MDA.....	Minimum Descent Altitude
MEA.....	Minimum En route Altitude
MECH.....	Mechanic
MEL.....	Minimum Equipment List
MFC.....	Multi Function Computer
MFCU.....	Mechanical Fuel Control Unit
MFD.....	Multi Function Display
MFW.....	Minimum Flight Weight
MGT.....	Management
MIC.....	Microphone
MIN.....	Minimum
MIP.....	Main Instruments Panel
MISC.....	Miscellaneous
MIXTS.....	Mix Temperature Sensor
MKR.....	Marker
MLG.....	Main Landing Gear
MLS.....	Microwave Landing System
MLW.....	Maximum Landing Weight
MMEL.....	Master Minimum Equipment List
MMO.....	Maximum Operating Mach
MMPU.....	Multi Media Player Unit
MMS.....	Main Maintenance Station

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°21
---	---------------------------------------	-------------------------------

cont'd... >>>

MOD	Modification
MP	Maintenance Procedure
MPC	Multi Purpose Computer
MPU	Micro Processor Unit
MRT	Manual Release Tool
MRW	Maximum Ramp Weight
MSA	Minimum Safe Altitude/Minimum Sector Altitude
MSG	Messages
MSN	Manufacturer Serial Number
MTOW	Maximum TakeOff Weight
MTW	Maximum Taxi Weight
MW	Master Warning
MZFW	Maximum Zero Fuel Weight

N

NAC	Nacelle
NACA	National Advisory Committee for Aeronautics
NAMS	New Air Management System
NAV	Navigation
NAVAID	Navigation Aid
ND	Navigation Display
NDB	Non Directional Beacon or Navigation Database (GPS)
NEG	Negative
NG	Nose Gear
NH	High Pressure Spool Rotation Speed
NIL	Nothing, No Object
NL	Low Pressure Spool Rotation Speed
NLG	Nose Landing Gear
NM	Nautical Mile
NORM	Normal
NOTAM	Notice To Airmen
NP	Propeller Rotation Speed

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°22
---	---------------------------------------	-------------------------------

cont'd... >>>

- NPU**..... Navigation Processor Unit
- NUC**..... Non Uniformity Correction
- NVM**..... Non Volatile Memory
- N/W**..... Nose Wheel
- NWS**..... Nose Wheel Steering

O

- OAT**.....Outside Air Temperature
- OBS**.....Omni Bearing Selector
- OSD**..... Operational Suitability Data
- OT**..... Other Traffic
- OTF**..... Optical tracker Fixed unit
- OUTB**..... Outboard
- OVBD**..... Overboard
- OVERTEMP**..... Overtemperature
- OVHD**..... Overhead
- OVHP**.....OverHead Panel
- OVHT**..... Overheat
- OVLY**..... Overlay
- OVRD**..... Override
- OVSPD**.....Overspeed
- OXY**..... Oxygen

P

- PA**..... Passenger Address
- PAX**..... Passenger
- PBE**..... Protective Breathing Equipment
- PBN**.....Performance Based Navigation
- PCN**.....Pavement Classification Number
- PCR**.....Pavement Classification Rating
- PCU**..... Propeller Control Unit

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°23
---	---------------------------------------	-------------------------------

cont'd... >>>

PDPS	Pack Discharge Pressure Sensor
PDTS	Pack Discharge Temperature Sensor
PEBMV	Parking/Emergency Braking Metering Valve
PEC	Propeller Electronic Control
PF	Pilot Flying
PFD	Primary Flight Display
PFTS	Power Feeder Thermal Sensor
PIPS	Pressure Inlet Pressure Sensor
PITS	Pack Inlet Temperature Sensor
PIU	Propeller Interface Unit
PL	Power Lever
PLA	Power Lever Angle
PM	Pilot Monitoring
PNL	Panel
POS	Position
PR	Pressure
PRESS	Pressurization
PRIM	Primary
PRKG	Parking
PROC	Procedure
PROP	Propeller
PROX SW	Proximity Switch
PRSOV	Pressure Regulating & Shut Off Valve
PRV	Pressure Regulating Valve
PSEU	Proximity Switch Electronic Unit
PSI	Pound per Square Inch
PSU	Passenger Service Unit
PSV	Propeller Servo Valve
PT	Point
PT	Proximity traffic TCAS
PTB	Power Trim Box
PTS	Pack Temperature Sensor Channels
PTT	Push To Talk, Push To Test
PTW	Pitch Thumb Wheel

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°24
---	---------------------------------------	-------------------------------

cont'd... >>>

- PVCU.....Power and Video Control Unit
- PVM..... Propeller Valve Module
- PWM..... Pulse Width Modulation
- PWR..... Power

Q

- QAR..... Quick Access Recorder
- QRC..... Quick Release Control
- QRH..... Quick Reference Handbook
- QRT..... Quick Reference Table
- QT..... Quart
- QTY..... Quantity

R

- RA..... Resolution Advisory TCAS or Radio Altimeter
- RAD/ALT..... Radio Altitude
- RAD/INT..... Radio/Interphone
- RAIM..... Receiver Autonomous Integrity Monitoring
- RARV..... Ram Air Regulating Valve
- RCAU..... Remote Control Audio Unit
- RCDR..... Recorder
- RCF..... Resident Compact Flash
- RCL..... Recall
- RCP..... Refuel Control Panel
- RCT..... Rain Echo Attenuation Compensation Technique
- RCU..... Releasable Centering Unit
- RECIRC..... Recirculation
- REV..... Reverse
- RGA..... Reserve Go-Around
- RGB..... Reduction Gear Box
- RH..... Right Hand

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°25
---	---------------------------------------	-------------------------------

cont'd... >>>

RLY	Relay
RMA	Radio Management Application
RMG	Right Main Gear
RMI	Radio Magnetic Indicator
RMS	Radio Management System
RNAV	Area Navigation
RNP	Required Navigation Performance
RPM	Revolution Per Minute
RQD	Required
RQRD	Required
RTO	Reserve TakeOff
RTOW	Regulatory TakeOff Weight
RUD	Rudder
RVDT	Rotary Variable Differential Transducer
RWS	Reactive Windshear
RWY	Runway
RWYCC	Runway Condition Code

S

SAT	Static Air Temperature
SB	Service Bulletin
SBAS	Satellite Based Augmentation System
SBTC	Stand By bus Transfer Contactor
SBY	Stand By
SC	Single Chime, Starter Contactor
SCU	Signal Conditioning Unit
SD	System Display
SDTC	Static Inverter Override Transfer Contactor
SEC	Secondary
SELCAL	Selective Calling
SFV	Safety Valve
SG	Symbol Generator

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°26
---	---------------------------------------	-------------------------------

cont'd... >>>

SGL	Single
SGU	Symbol Generator Unit
SHP	Shaft Horse Power
SID	Standard Instrument Departure
SMA	System Maintenance Advisory
SMK	Smoke
SMKG	Smoking
SO	Shut-Off
S.O	Shut-Off
SOV	Shut Off Valve
SPD	Speed
SPLR	Spoiler
SPLY	Supply
SPS	Single-point Performance Software
SSR	Secondary Surveillance Radar
STAB	Stabilizer
STAR	Standard Arrival
STBY	Standby
STR	Service Bus Transfer Relay
STRG	Steering
SURV	Surveillance
SVCE	Service
SVS	Synthetic Vision System
SWM	Switch Module
SYNPHR	Synchrophaser
SYS	System

T

T2CAS	Traffic and Terrain Collision Avoidance System
T3CAS	TAWS, TCAS and Transponder combined unit
TA	Traffic Advisory TCAS
TAD	Terrain Awareness Display

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°27
---	---------------------------------------	-------------------------------

cont'd... >>>

TAS	True Air Speed
TAT	Total Air Temperature
TAWS	Terrain Awareness Warning System
TBD	To be Determined
TCAS	Traffic Alert and Collision Avoidance System
TCF	Terrain Clearance Floor
TCS	Touch Control Steering
TCV	Temperature Control Valve
T/D	Time Delay
TD	Type Design
TEMP	Temperature
TGT	Target
TIC	Turbine Inlet Control
TK	Tank
TLU	Travel Limiting Unit (Rudder)
TM	Torque Motor
T.O	TakeOff
TOC	Top Of Climb
TOD	Top Of Descent
TOR	TakeOff Run
TOW	TakeOff Weight
TQ	Torque
TRU	Transformer Rectifier Unit
TSCU	Torque Signal Conditioning Unit
TTG	Time To Go
TTOL	Taxi, TakeOff and Landing

U

UBC	Utility Bus Contactor
U/F	Underfloor
UHF	Ultra High Frequency
UNCPL	Uncouple

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°28
---	---------------------------------------	-------------------------------

cont'd... >>>

UNDV	Undervoltage
UNLK	Unlock
USB	Upper SideBand/Universal Serial Bus
UTLY	Utility

V

V1	Decision Speed
V2	Second Segment Speed
VCCU	Video Cabin Command Unit
VCP	Virtual Control Panel
VENT	Ventilation
VENTS	Ventilated Temperature Sensor
VERT	Vertical
VFOM	Vertical Figure Of Merit
VFR	Visual Flight Rules
VHF	Very High Frequency
VMC	Visual Meteorological Conditions
VMO	Maximum Operating Speed
VNAV	Vertical Navigation
VOR	VHF OMNI Directional Range
VPRL	Vertical Path Reference Line
VR	Rotation Speed
VS	Vertical Speed
VSI	Vertical Speed Indicator
VTF	Vector To Final
VU	Visual Unit

W

WARN	Warning
WAT	Weight Altitude Temperature
WBM	Weight and Balance Manual

cont'd... >>>

 VT / ATR 72-600 MEL	PREAMBLE GENERAL	PRE.2 Page n°29
---	---------------------------------------	-------------------------------

cont'd... >>>

WE.....Water Extractor
WOW..... Weight On Wheel
WPT..... Waypoint
W/S..... Windshear
WS..... Water Sprayer
WX..... Weather Mode
WXR.....Weather Radar

X

X..... Cross
XFEED..... Cross feed
XFR..... Transfer
XPDR..... Transponder

Y

YD..... Yaw Damper

Z

ZA..... Aircraft Altitude
Z CAB..... Cabin Altitude
ZCTH.....Theoretical Cabin Altitude
ZFW..... Zero Fuel Weight
ZP..... Pressure Altitude
ZPRL..... Zero Pitch Reference Line
ZRA..... Radio Altimeter Altitude

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	NON-SAFETY-RELATED ITEMS NON ESSENTIAL EQUIPMENT AND FURNISHINGS	NEF.NEF Page n°01
---	---	--------------------------

NEF-01 General

cbd46478-aff0-440c-9619-b3cf61cb2ead

21 OCT 2020

ALL

The following information are based on the EASA regulations for Non Safety Related Items.

- Non-safety related equipment such as galley equipment [and] passenger convenience items, need not be listed in MMEL
- Non-safety-related items include those items related to the convenience, comfort, or entertainment of the passengers and equipment that is used only on ground for maintenance purpose. Convenience, comfort, or entertainment of the passengers may include items such as galley equipment, movie equipment, stereo equipment, overhead reading lamps
- Most aircraft are designed and certified with a significant amount of equipment redundancy, such that the airworthiness requirements are satisfied by a substantial margin. In addition, aircraft are generally fitted with equipment that is not required for safe operation under all operating conditions, e.g. instrument lighting in day VMC
- All items related to the airworthiness, or required for the safe operation, of the aircraft and not included in the list are automatically required to be operative
- Equipment, such as entertainment systems or galley equipment, may be installed for passenger convenience. If this non-safety-related equipment does not affect the airworthiness or operation of the aircraft when inoperative, it does not require a rectification interval, and need not be listed in the operator's MEL, if it is not addressed in the MMEL. The exceptions to this are as follows:
 - 1) Where non-safety-related equipment serves a second function, such as movie equipment being used for cabin safety briefings, operators should develop and include operational contingency procedures in the MEL in case of an equipment malfunction
 - 2) Where non-safety-related equipment is part of another aircraft system, for example the electrical system, procedures should be developed and included in the MEL for deactivating and securing in case of malfunction. In these cases, the item should be listed in the MEL, with compensating provisions and deactivation instructions if applicable. The rectification interval will be dependent on the secondary function of the item and the extent of its effect on other systems.
- If the operator chooses to list non-safety-related equipment in the MEL, not listed in the MMEL, they should include a rectification interval category. These items may be given a 'D' category rectification interval provided any applicable (M) procedure (in the case of electrically supplied items) is applied
- Operators should establish an effective decision making process for failures that are not listed to determine if they are related to airworthiness and required for safe operation. In order for inoperative installed equipment to be considered non-safety-related, the following criteria should be considered:
 - 1) The operation of the aircraft is not adversely affected such that standard operating procedures related to ground personnel, and crew members are impeded;
 - 2) The condition of the aircraft is not adversely affected such that the safety of passengers and/or personnel is jeopardized;

cont'd... >>>

 VT / ATR 72-600 MEL	COMMERCIAL DESIGNATION	CD. Page n°01
---	-------------------------------	--------------------------

CD-1 Commercial Designation

e6f6ef42-5116-4334-a707-9af05b587547

27 NOV 2020

ALL

ATR 72–600 is the commercial designation of the ATR 72–212A '600 version' fitted with Mod. 05948 NAVIGATION- INSTALL NEW AVIONICS SUITE.

 VT / ATR 72-600 MEL	COMMERCIAL DESIGNATION	CD. Page n°02
---	------------------------	--------------------------

PAGE
INTENTIONALLY
LEFT BLANK

 VT / ATR 72-600 MEL	MEL TOC Table of Content	AML. Page n°01
---	---	---

ALERT MESSAGE LIST

INTRODUCTION AML.01

.	GENERAL.....	page 01
.	READING THE TABLE.....	page 02

WARNING MESSAGE AML.10

10.	ENGINE.....	page 01
20.	ELEC.....	page 01
30.	FLIGHT CONTROL.....	page 02
40.	LANDING GEAR.....	page 02
50.	FIRE PROTECTION.....	page 02
60.	AIR.....	page 02
90.	MISCELLANEOUS.....	page 03

CAUTION MESSAGE AML.20

10.	ENGINE.....	page 01
15.	FUEL.....	page 04
20.	ELEC.....	page 05
25.	HYDRAULIC.....	page 07
30.	FLIGHT CONTROL.....	page 08
40.	LANDING GEAR.....	page 08
50.	DOORS.....	page 09
60.	AIR.....	page 10
70.	ANTI-ICE.....	page 12
75.	AUTOPILOT.....	page 14
80.	MPC.....	page 14
85.	AVIONICS.....	page 15
90.	MISCELLANEOUS.....	page 19

 VT / ATR 72-600 MEL	 MEL TOC Table of Content	AML. Page n°02
---	--	-------------------------------

100. MFC..... [page 20](#)

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST INTRODUCTION	AML.01 Page n°01
---	--	-------------------------

01-01 GENERAL

b8a6c1e3-0def-4cc2-8069-0af668bb13f9

01 AUG 2024

ALL

The main purpose of the Alert Message List is to provide a quick means to cross-reference an alert message with the possible associated MEL item. The "AML.Alert Message List" section shall therefore be used for guidance purpose only.

This Alert Message List is intended to assist operators in defining if the condition presented by the alert message is a potential deferrable one or not prior to performing troubleshooting. It is not the intent of this list to replace or disregard proper troubleshooting of the associated alert message.

When an alert message is displayed, its cause must be investigated by using the appropriate means or associated maintenance procedures. Only after proper identification of the failed component a MEL relief may be used. Once this MEL relief is used, the Alert Message List is no longer applicable to this related item.

If the operator chooses not to consider MEL relief, then maintenance must be accomplished to rectify any system and/or component failure before aircraft dispatch.

The flight crew is responsible for checking that the condition of the aircraft systems/components complies with the MEL requirements. Prior to operation with any item inoperative acceptance by the crew is required in accordance with the continuing airworthiness management procedures. If not, the dispatch of the aircraft is not permitted.

Note

This cross reference table shall be used for guidance purpose only as it does not cover all the combinations of systems and/or component failures that may cause Alert message(s).

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST INTRODUCTION	AML.01 Page n°02
---	--	-------------------------

01-02 READING THE TABLE

8998b74c-386e-4acc-b2ef-e3f89e9450b9		15 APR 2025
		ALL

- 1) Class of Alert message section: Warning, Caution, Advisory
 - WARNING messages: [Refer to WARNING MESSAGE](#)
 - CAUTION messages: [Refer to CAUTION MESSAGE](#)
- 2) EWD message: this column indicates the alert message title that appears on the Alert Window on the EWD.
- 3) Meaning / Assessment conditions: this column provides additional information when required. When a failed component is identified as a root cause, it either leads to a potential dispatch or a no dispatch case (NO GO) following the nature of the failed component.
- 4) Condition of dispatch:
 - **NO DISPATCH:** Since the associated EWD alert message can be triggered by one (or more) system, equipment, component, or functional conditions or failures, an MEL item relief cannot be directly linked to these EWD alert messages. Operators must perform troubleshooting to identify the root cause(s) that triggered the EWD alert message.
 Dispatch may be possible for the identified inoperative system(s), equipment, component(s), or function(s) if an MEL item exists for the identified inoperative condition.
 If not, or if the operator decides not to consider MEL relief, maintenance or repair must be completed to resolve any system, equipment, or component failure before the aircraft is released to service.
 - **XX-XX-XX:** Potential Dispatch. Troubleshooting is necessary to identify the specific conditions that triggered the EWD alert message. When identified, a dispatch may be possible under the referenced MEL item.
 - **Apply EWD procedure:** some of the FWS messages can be resolved by applying the associated procedure. It is up to the crew to assess situation after application of the procedure.

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST WARNING MESSAGE	AML.10 Page n°01
---	---	-------------------------

ENGINE		
EWD message	Meaning / Assessment conditions	Condition of dispatch
ENG 1 FIRE _f0286e2c-b14f-4c42-bdd3-8ebec2d0f57a 19 MAY 2022 ALL		NO DISPATCH
ENG 1 OIL PRESS _3144ca93-93bd-43af-9045-b06a3a63d027 19 MAY 2022 ALL		NO DISPATCH
ENG 1 OUT _ba0c87c6-2a2f-4eaa-8b4d-2e75d30e6906 19 MAY 2022 ALL		NO DISPATCH
ENG 1+2 OUT _7e96a788-0423-4f27-8c5d-c7ff8d7f8f7b 19 MAY 2022 ALL		NO DISPATCH
NAC OVHT _e4d324cd-a443-4ae1-994d-2332389e9095 02 JUN 2022 ALL		Apply EWD Procedure
ENG 2 FIRE _35ff3db0-937f-4132-a816-d39d5ecc9a94 19 MAY 2022 ALL		NO DISPATCH
ENG 2 OIL PRESS _c5469c53-193f-4d81-a88a-0097f16fd7a0 19 MAY 2022 ALL		NO DISPATCH
ENG 2 OUT _8cd6bc85-f1d3-4e18-ab59-d9311320e36b 19 MAY 2022 ALL		NO DISPATCH
PROP BRK _07e5c4ab-0d2b-4def-a959-040efdcfb49f 27 MAY 2015 ALL		61-50-01

ELEC		
EWD message	Meaning / Assessment conditions	Condition of dispatch
ELEC DC GEN 1+2 _0876737b-bd55-4f0b-9083-f944fa5537f2 19 MAY 2022 ALL		NO DISPATCH

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST WARNING MESSAGE	AML.10 Page n°02
---	---	-------------------------

FLIGHT CONTROL		
EWD message	Meaning / Assessment conditions	Condition of dispatch
FLAPS UNLK _92c4bc9e-c712-4b5d-aaf0-9334544da842 19 MAY 2022 ALL		NO DISPATCH
PITCH DISC _8c1ee672-8e57-4f4d-805d-62f4eaacf380 15 APR 2025 ALL	Pitch disconnect occurred in flight	NO DISPATCH
	Pitch disconnect occurred on ground	Apply EWD Procedure
PITCH RECONNCT _c81149bd-5908-44a8-9d0a-02b0461d52d5 19 MAY 2022 ALL	if message remains after 10s after reconnection attempt refer to Refer to MOP.27.37-02 Elevators Clutch Reconditioning Device	NO DISPATCH

LANDING GEAR		
EWD message	Meaning / Assessment conditions	Condition of dispatch
LDG GEAR NOT DN _56ffa506-43d2-40a8-b8bc-01a748e7a755 19 MAY 2022 ALL		NO DISPATCH

FIRE PROTECTION		
EWD message	Meaning / Assessment conditions	Condition of dispatch
FWD SMK _862a17ce-2052-428f-bcbf-05fec2f1e398 19 MAY 2022 ALL		NO DISPATCH
AFT SMK _ede04966-498e-4dea-b852-fdf2bc09a007 19 MAY 2022 ALL		NO DISPATCH
ELEC SMK _56bc4c16-8042-4c61-ae41-60689de9367a 19 MAY 2022 ALL		NO DISPATCH

AIR		
EWD message	Meaning / Assessment conditions	Condition of dispatch
EXCESS CAB ALT _92bc0b04-9f60-49eb-a521-6f73622b336d 19 MAY 2022 ALL		NO DISPATCH
EXCESS CAB ΔP _15d68add-a2eb-40de-9c23-991f84450831 19 MAY 2022 ALL		NO DISPATCH
NEGATIVE CAB ΔP _cd199a1e-d7b8-4ba5-b694-9721df66ac70 19 MAY 2022 ALL		NO DISPATCH

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST WARNING MESSAGE	AML.10 Page n°03
---	---	-------------------------

MISCELLANEOUS		
EWD message	Meaning / Assessment conditions	Condition of dispatch
CONFIG fd23b443-ec04-4774-ae60-74bc5d747e76 19 MAY 2022 ALL		NO DISPATCH



VT / ATR 72-600

MEL

ALERT MESSAGE LIST

WARNING MESSAGE

AML.10

Page n°04

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°01
---	---	-------------------------

ENGINE		
EWD message	Meaning / Assessment conditions	Condition of dispatch
ENG 1 LO PITCH _6f761868-721f-47fa-8605-f2dd51a2dff3 19 MAY 2022 ALL		NO DISPATCH
ENG 1 OIL OVHT _07481825-6d93-415d-b074-6d7009b87122 19 MAY 2022 ALL		NO DISPATCH
ENG 1 OVER LIM _47f71953-9d10-48fa-83ac-2f35a7ebb9ff 19 MAY 2022 ALL		NO DISPATCH
ENG 1 PEC _fabb45d5-f4b0-473f-9cb4-058cf9f58322 19 MAY 2022 ALL		NO DISPATCH
ENG 1 PEC SG CH _42654783-3102-4692-b66f-06d3606fbed3 27 MAY 2015 ALL		61-21-02
ENG 1 PROP LIM _b9103d95-4944-4b51-8e9e-6012660689e7 19 MAY 2022 ALL		NO DISPATCH
ENG 2 LO PITCH _b5004fb2-0ae9-44ca-a738-3ffd6211b7dc 19 MAY 2022 ALL		NO DISPATCH
ENG 2 OIL OVHT _0235683c-ca50-42b6-87a6-5e2e55d1a447 19 MAY 2022 ALL		NO DISPATCH
ENG 2 OVER LIM _0c137579-332a-4b04-8809-8d98609b30ab 19 MAY 2022 ALL		NO DISPATCH
ENG 2 PEC _b22429a4-aced-4227-a82a-91cbc3e65308 19 MAY 2022 ALL		NO DISPATCH
ENG 2 PEC SG CH _178e613a-b3c2-4858-b1b3-850d6a7f99ee 27 MAY 2015 ALL		61-21-02
ENG 2 PROP LIM _d8e48db8-e6db-4fb4-8877-609185743766 19 MAY 2022 ALL		NO DISPATCH
ENG EEC _655cbc7e-c2ea-4166-9ece-655767beeced 27 MAY 2015 ALL		73-23-02
ENG EEC 1+2 _7788d507-b5c5-4443-ad71-10f504c25f61 19 MAY 2022 ALL		NO DISPATCH
ENG PROP NP _7b64288b-09f6-4601-a348-65a598397d84 08 FEB 2018 ALL		61-21-06

ENGINE		
EWD message	Meaning / Assessment conditions	Condition of dispatch
ENG START _fceafc8a-ca3f-416e-b69c-b5d59d748dd0 02 JUN 2022 ALL	NH < 20 %, 10 s after starter pushbutton ON Start light ON past 45 % NH or GCU failure during start	NO DISPATCH Apply EWD Procedure
ENG START ITT _e76c0059-bf4b-4fa1-b499-22d1b067cfa2 02 JUN 2022 ALL	If Engine ITT parameters outside AFM starting limits (Refer to AFM - : AFM-LIM-5-70-1-1 ENGINES) If Engine ITT parameters within AFM starting limits (Refer to AFM - : AFM-LIM-5-70-1-1 ENGINES)	NO DISPATCH Apply EWD Procedure
ENG START NO NH _d04800c5-66f3-4c3f-ac8f-0d4aa93b764a 27 MAY 2015 ALL	NH indication issue If Engine starting successful	77-11-01-01
ENG X START _e637886c-6f9a-4b25-b247-94d1227fbbaa 02 JUN 2022 ALL		Apply EWD Procedure
ENG1 OIL TEMP H _fb92b927-8bae-4617-bab3-4c25981ff742 02 JUN 2022 ALL	If Engine OIL TEMP parameters outside AFM limits (Refer to AFM - : AFM-LIM-5-70-1-1 ENGINES) If Engine OIL TEMP parameters within AFM limits (Refer to AFM - : AFM-LIM-5-70-1-1 ENGINES)	NO DISPATCH Apply EWD Procedure
ENG1 OIL TEMP L _a0b806d1-a80c-4c06-87f4-87e0a6947785 02 JUN 2022 ALL	If Engine OIL TEMP parameters outside AFM limits (Refer to AFM - : AFM-LIM-5-70-1-1 ENGINES) If Engine OIL TEMP parameters within AFM limits (Refer to AFM - : AFM-LIM-5-70-1-1 ENGINES)	NO DISPATCH Apply EWD Procedure
IDLE GATE _6f74ffc7-7455-42c7-b560-b3c3dc411933 19 MAY 2022 ALL		NO DISPATCH
LOOP 1A _601b3d16-0f20-4482-b9fa-44cbe8f45e4a 27 MAY 2015 ALL		26-12-01
LOOP 1B _70527758-4969-4aa0-a869-2099c37d1053 27 MAY 2015 ALL		26-12-01
LOOP 2A _cfaa0a19-9ce3-47f4-9cdc-4a53a903cfd 27 MAY 2015 ALL		26-12-01
LOOP 2B _45f8c11f-be59-4d1a-9076-2b292f9e9d97 27 MAY 2015 ALL		26-12-01
SINGLE ENGINE _952a56f0-dd14-4c14-ada5-dc621701b437 19 MAY 2022 ALL		NO DISPATCH

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°03
---	---	-------------------------

ENGINE		
EWD message	Meaning / Assessment conditions	Condition of dispatch
ENG2 OIL TEMP H _cc9d7b45-a2a1-440a-a8ce-40e67d4723b0 02 JUN 2022 ALL	If Engine OIL TEMP parameters outside AFM limits (Refer to AFM - : AFM-LIM-5-70-1-1 ENGINES)	NO DISPATCH
	If Engine OIL TEMP parameters within AFM limits (Refer to AFM - : AFM-LIM-5-70-1-1 ENGINES)	Apply EWD Procedure
ENG2 OIL TEMP L _e7382165-b1fe-450d-afd7-8cce56a60a2b 02 JUN 2022 ALL	If Engine OIL TEMP parameters outside AFM limits (Refer to AFM - : AFM-LIM-5-70-1-1 ENGINES)	NO DISPATCH
	If Engine OIL TEMP parameters within AFM limits (Refer to AFM - : AFM-LIM-5-70-1-1 ENGINES)	Apply EWD Procedure

FUEL		
EWD message	Meaning / Assessment conditions	Condition of dispatch
ENG FUEL CLOG _56c617f2-a411-4999-be4d-4fef62b34fb5 19 MAY 2022 ALL		NO DISPATCH
FUEL 1 TEMP HI _a061c5f7-4a71-4001-8e76-cbeadc0530bb 13 JUN 2024 ALL	If FUEL TEMP parameter outside AFM limits (Refer to AFM - LIM-5-70-4-2 Fuel Temperature)	NO DISPATCH
	If FUEL TEMP parameter within AFM limits (Refer to AFM - LIM-5-70-4-2 Fuel Temperature)	Apply EWD Procedure
FUEL 1 TEMP LO _7cd7011d-3542-4b3b-b0d1-630cb81aa890 13 JUN 2024 ALL	If FUEL TEMP parameter outside AFM limits (Refer to AFM - LIM-5-70-4-2 Fuel Temperature)	NO DISPATCH
	If FUEL TEMP parameter within AFM limits (Refer to AFM - LIM-5-70-4-2 Fuel Temperature)	Apply EWD Procedure
FUEL 2 TEMP HI _9388e32d-bdf6-4f94-a4f2-0d6b7e3399fe 13 JUN 2024 ALL	If FUEL TEMP parameter outside AFM limits (Refer to AFM - LIM-5-70-4-2 Fuel Temperature)	NO DISPATCH
	If FUEL TEMP parameter within AFM limits (Refer to AFM - LIM-5-70-4-2 Fuel Temperature)	Apply EWD Procedure
FUEL 2 TEMP LO _518def57-8eb6-448f-851a-bee2d9b02d00 13 JUN 2024 ALL	If FUEL TEMP parameter outside AFM limits (Refer to AFM - LIM-5-70-4-2 Fuel Temperature)	NO DISPATCH
	If FUEL TEMP parameter within AFM limits (Refer to AFM - LIM-5-70-4-2 Fuel Temperature)	Apply EWD Procedure
FUEL FEED LO PR _914aa8c9-b090-4758-9e16-eb10780f26f 19 MAY 2022 ALL		NO DISPATCH
FUEL LO LVL _b5889003-b9d9-4b24-ab1d-b49cc4a8c259 19 MAY 2022 ALL	Fuel tank quantity < 160kg / 352 lb	NO DISPATCH
	Fuel tank quantity ≥ 160 kg / 352 lb	NO DISPATCH
FUEL MISMATCH _5c858708-f41a-47e2-8574-3b29a0658ac5 19 MAY 2022 ALL	Other case	NO DISPATCH
	Fuel quantity indication	28-42-01
FUEL UNBALANCED _ccc5fd72-387d-4e62-bdc7-3b1b113826ed 02 JUN 2022 ALL	Other case	Apply EWD Procedure
	Fuel quantity indication inoperative	28-42-01
	Fuel leak confirmed	NO DISPATCH

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°05
---	---	-------------------------

ELEC		
EWD message	Meaning / Assessment conditions	Condition of dispatch
ELEC AC BUS 1 _gdf23b8a-f3e5-4890-a2fc-c242c31e0fec 19 MAY 2022 ALL		NO DISPATCH
ELEC AC BUS 2 _fb1f5206-5230-4914-b53a-b017adcbce2e 19 MAY 2022 ALL		NO DISPATCH
ELEC AC STBY _ob4ba899-7de3-4df4-877f-fc523068a5e5 19 MAY 2022 ALL		NO DISPATCH
ELEC ACW 1+2 _9b522200-32c7-485b-afdc-811832a0f94f 19 MAY 2022 ALL		NO DISPATCH
ELEC ACW BUS 1 _4848b3f6-60df-4922-b72e-854bba1e917d 19 MAY 2022 ALL		NO DISPATCH
ELEC ACW BUS 2 _ab28f950-5a38-4a91-9540-fd1b64fd0c9b 19 MAY 2022 ALL		NO DISPATCH
ELEC ACW GEN 1 _111a18ce-c44f-46a4-89aa-11ec4ea7f2cd 01 AUG 2024 ALL		24-22-01
ELEC ACW GEN 2 _61713aa1-6347-4ed8-bb9e-dd4dcaddc66 01 AUG 2024 ALL		24-22-01
ELEC BAT CHG _f3b6d19d-19f2-442e-9133-25298b0389d4 19 MAY 2022 ALL		NO DISPATCH
ELEC BAT DISCH _d992c8eb-ec70-4fed-b46f-9d838ec48ec8 19 MAY 2022 ALL		NO DISPATCH
ELEC CHG LOSS _439085de-f4f9-453c-b8e1-77efc795d2a2 19 MAY 2022 ALL		NO DISPATCH
ELEC DC BUS 1 _62d2caca-2537-4f50-96d8-75473261efb6 19 MAY 2022 ALL		NO DISPATCH
ELEC DC BUS 2 _fed0fcee-0bd4-4d64-b7b2-809ed4aa0fda 19 MAY 2022 ALL		NO DISPATCH
ELEC DC EMER _392e5762-f534-483f-8593-33e66bdaa782 19 MAY 2022 ALL		NO DISPATCH
ELEC DC ESS _0cc81974-dc85-4ed8-a96c-ca52eadabfda 19 MAY 2022 ALL		NO DISPATCH
ELEC DC GEN _3dff0290-9bbb-4c5b-a501-40791d6f14a0 19 MAY 2022 ALL		24-30-01

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°06
---	---	-------------------------

ELEC		
EWD message	Meaning / Assessment conditions	Condition of dispatch
ELEC DC SBY BUS _bcb056b0-c270-4077-8543-7319d05d4765 19 MAY 2022 ALL		NO DISPATCH
ELEC DC SHED _89313cbe-0c2e-431f-acb2-600a3f3c81c0 19 MAY 2022 ALL		NO DISPATCH
ELEC INV 1 _d5f3cc2c-0610-4229-82b3-bad8b0af08b0 19 MAY 2022 ALL		NO DISPATCH
ELEC INV 2 _0413b900-f4f3-48a8-b343-25b4c60e5fa8 19 MAY 2022 ALL		24-21-01
ELEC STBY UNDV _b8a89a85-ac5f-4af9-9705-f0916c47b0e6 19 MAY 2022 ALL		NO DISPATCH

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°07
---	---	-------------------------

HYDRAULIC		
EWD message	Meaning / Assessment conditions	Condition of dispatch
HYD AUX LO PR _b8083b9d-9893-42d7-ae89-3b031af80258 19 MAY 2022 ALL	Auxiliary hydraulic pump inoperative	29-11-02
	Other case	NO DISPATCH
HYD AUX OVHT _9f93e513-6480-429b-9c3c-f9a34a28842d 19 MAY 2022 ALL	Auxiliary hydraulic pump inoperative	29-11-02
	Other case	NO DISPATCH
HYD BLUE LO LVL _f13ecb70-1f0d-439b-9eab-15ca857a0320 19 MAY 2022 ALL		NO DISPATCH
HYD BLUE LO PR _6b59cd36-4340-4c9c-b062-01beb29ce31b 19 MAY 2022 ALL	Main hydraulic pump inoperative	29-11-01
	Other case	NO DISPATCH
HYD BLUE OVHT _574bbd62-3940-4f74-a9df-d05293c8c7ec 19 MAY 2022 ALL	Main hydraulic pump inoperative	29-11-01
	Other case	NO DISPATCH
HYD GREEN LO PR _d851dd68-c3d6-4385-9524-74bd14c93334 19 MAY 2022 ALL	Main hydraulic pump inoperative	29-11-01
	Other case	NO DISPATCH
HYD GREEN LO LVL _618cd8be-a045-4b9b-8d46-d53c4bb88f60 19 MAY 2022 ALL		NO DISPATCH
HYD GREEN OVHT _5d008691-963c-4859-9fa6-ffe055340efd 19 MAY 2022 ALL	Main hydraulic pump inoperative	29-11-01
	Other case	NO DISPATCH
HYD PUMPS LOSS _039ef1b8-da2f-4eb5-a7c6-4ca803929889 19 MAY 2022 ALL		NO DISPATCH
HYD SYS LOSS _0e6ab8ca-a9d3-4adf-bbd8-7fec2bc418f2 19 MAY 2022 ALL		NO DISPATCH

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°08
---	---	-------------------------

FLIGHT CONTROL		
EWD message	Meaning / Assessment conditions	Condition of dispatch
AIL LOCK LIT _5e1101e1-ab29-493d-8f95-f53b7d5c951f 19 MAY 2022 ALL	With GUST LOCK lever engaged	27-70-01-01
	With GUST LOCK lever disengaged	NO DISPATCH
FLAPS ASYM _f5e175a6-e1c1-4830-a07e-03f0e9555db9 19 MAY 2022 ALL		NO DISPATCH
FLAPS JAM _25044541-bf66-4c17-9fee-e07781a1e947 19 MAY 2022 ALL	Flaps Control System inoperative with flaps confirmed in retracted position	27-51-01
	Other case	NO DISPATCH
FLT CTL PUSHER _559bffa5-c361-40f7-9f43-375d184b2bd1 19 MAY 2022 ALL		NO DISPATCH
FLT CTL RUD RCU _06abc891-7310-4c91-a56b-58c98fdeb839 19 MAY 2022 ALL		27-20-02
FLT CTL TLU _43c602a3-2f8c-473f-8704-8ba18d98e81c 27 MAY 2015 ALL		27-23-01
PITCH TRIM ASYM _e4909b54-38fb-4d5d-854c-073973f0e558 19 MAY 2022 ALL		NO DISPATCH

LANDING GEAR		
EWD message	Meaning / Assessment conditions	Condition of dispatch
LDG GEAR _0784edcf-a369-4d8e-bf5d-f3c9a86414be 19 MAY 2022 ALL	If any UNLOCK LIGHT INDICATION on one panel only	32-61-01
	If same UNLOCK LIGHT INDICATION on both panels	NO DISPATCH
WHEELS A-SKID _f4ead95c-f72b-48af-9f4a-d4c5d86b2d9a 27 MAY 2015 ALL		32-42-02
WHEELS BRK HOT _a33702af-6bd3-44d2-a7b1-6e5e0f8027f6 19 MAY 2022 ALL		NO DISPATCH

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°09
---	---	-------------------------

DOORS		
EWD message	Meaning / Assessment conditions	Condition of dispatch
DOOR FWD COMPT _b58d8d5f-2e2c-4c5d-8453-373baeae8c8f 19 MAY 2022 ALL	When false alert confirmed	52-11-01
		NO DISPATCH
DOORS _5982fb63-fc27-45fa-adcc-9cd98ee3f3d5 19 MAY 2022 ALL	When false alert confirmed	52-11-01
		NO DISPATCH



VT / ATR 72-600
MEL

ALERT MESSAGE LIST

CAUTION MESSAGE

AML.20

Page n°10

AIR		
EWD message	Meaning / Assessment conditions	Condition of dispatch
AIR AUTO PRESS _e59ca80c-87e4-4651-9f33-29e112469ea1 27 MAY 2015 1192-1568		21-31-01
		21-31-03
AIR AUTO PRESS _86ee3cd2-7c8c-456b-947b-b46867c7100f 04 NOV 2020 1658-1718		21-31-01
AIR BLEED 1 _184075e1-8465-416e-9936-508b4998c889 27 MAY 2015 ALL		36-11-02-01
		36-11-02-02
		36-11-01
AIR BLEED 2 _7f2cb9c5-d254-424e-b826-abaea200c3cf 27 MAY 2015 ALL		36-11-02-01
		36-11-02-02
		36-11-01
AIR BLEED 1 LEAK _c52a7d3a-aac4-4f31-8051-873892d0809a 19 MAY 2022 ALL		NO DISPATCH
AIR BLEED1 OVHT _bdb247c3-ed3b-4db1-a776-6207548902d9 19 MAY 2022 ALL		36-11-02-01
		36-11-02-02
		36-11-01
AIR BLEED 2 LEAK _53ae89e7-470b-4d8e-aa63-ae03396df783 19 MAY 2022 ALL		NO DISPATCH
AIR BLEED2 OVHT _fcb94c9a-7075-4891-b444-0937b68b72d6 19 MAY 2022 ALL		36-11-02-01
		36-11-02-02
		36-11-01
AIR DITCH _6fc8ff25-2ab9-40e3-bd65-dba66e9fda27 19 MAY 2022 ALL		NO DISPATCH
AIR DUCT 1 OVHT _1f2d162b-5841-4bfb-a880-da673ad4e2a2 19 MAY 2022 1192-1568	Pack AUTO Temperature Control inoperative	21-61-01
	If alert persists in manual mode: pack inoperative	21-51-01
AIR DUCT 2 OVHT _d6827d1f-bbc2-4986-99a2-eaed23fa813c 19 MAY 2022 1192-1568	Pack AUTO Temperature Control inoperative	21-61-01
	If alert persists in manual mode: pack inoperative	21-51-01
AIR OVBD _a5198a72-fa7d-41c8-a7f8-3a357e614a26 27 MAY 2015 ALL		21-23-01

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°11
---	---	-------------------------

AIR		
EWD message	Meaning / Assessment conditions	Condition of dispatch
AIR PACK _35997dc9-0ca6-42ab-8de4-9f3eda7d6c39 19 MAY 2022 1192-1568	Pack inoperative	21-50-01
	Pack valve inoperative	21-51-01
AIR PACK _baffb04a-91d5-4793-b1fc-9a13f7402229 19 MAY 2022 1658-1718	Pack inoperative	21-50-01
	Pack inoperative	21-50-02
AIR PACK 1+2 _f6014a56-2e13-4755-a422-83d8b2f0dd31 19 MAY 2022 1192-1568		NO DISPATCH
AIR PACK 1+2 _832ed4ee-eca7-410c-8330-a2c729a54af6 04 NOV 2020 1658-1718		21-50-01
		21-50-02
AIR RECIR FAN 1 _fd010709-e666-4a6f-aae2-6c5c3a5a947e 27 MAY 2015 ALL		21-22-01
AIR RECIR FAN 2 _96c196a2-5371-4f7f-9863-567761903f06 27 MAY 2015 ALL		21-22-01
AIR VENT EXH _e58a0a2d-7e34-4524-9701-f3d56a9f9371 19 MAY 2022 ALL	Passenger configuration	21-23-03-01
	Cargo configuration	NO DISPATCH
AIR X VALVE _8b91235a-a025-4fbe-871d-19809b789918 27 MAY 2015 ALL		36-11-04
CAB ΔP _faedc481-346e-4169-8a61-6917293dc5f6 19 MAY 2022 ALL		NO DISPATCH
CAB ALT _06f5f1ae-cab7-499e-a0eb-904a45bd55df 19 MAY 2022 ALL		NO DISPATCH

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°12
---	---	-------------------------

ANTI-ICE		
EWD message	Meaning / Assessment conditions	Condition of dispatch
A-ICING ALPHA _0d806d41-47b6-4b21-bac3-b7d1d0809420 01 AUG 2024 ALL		30-31-02
A-ICING ALPHAs _50996ea7-d6f7-4e87-8c93-4ba51759b2ad 19 MAY 2022 ALL		NO DISPATCH
A-ICING AUTO _723253da-0e19-43b2-a80c-27fe6de1c87d 27 MAY 2015 ALL		30-11-06
A-ICING BLEED _7747c2e7-6511-48b9-81b4-9bdd0449d5a4 19 MAY 2022 ALL	Airframe De Icing Boots System inoperative	30-11-02
	Engine De Icing Boots System inoperative	30-21-01
A-ICING DETECT _4ca78f7b-a150-43ec-a660-8682e1052446 27 MAY 2015 ALL		30-80-01
A-ICING ENG 1 _01b623ee-59d6-4a16-a710-0f9e930a490f 19 MAY 2022 ALL	Engine De Icing Boots System inoperative	30-21-01
	De Ice valve inoperative	30-11-01
A-ICING ENG 2 _c9184154-4cc5-4980-a532-4b8b9cdd8831 19 MAY 2022 ALL	Engine De Icing Boots System inoperative	30-21-01
	De Ice valve inoperative	30-11-01
A-ICING FRAME _21d579e5-288e-4993-892e-c7a5b5353779 27 MAY 2015 ALL		30-11-02
A-ICING HORNS 1 _7bbf5f40-9d64-413f-b2c0-3c3ef11993f9 08 FEB 2018 ALL		30-53-01
A-ICING HORNS 2 _a1a2a753-f6bd-4a97-b7f4-772339cd101e 08 FEB 2018 ALL		30-53-01
A-ICING L WSHLD _1a173ffc-1dc6-4b8c-bba3-7528c4c52c69 27 MAY 2015 ALL		30-60-01

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°13
---	---	-------------------------

ANTI-ICE		
EWD message	Meaning / Assessment conditions	Condition of dispatch
A-ICING PIT CPT	Probe Heating System — Pitot inoperative	30-30-01
_0797294f-4666-4e89-bfa8-401864bbdb56 01 AUG 2024 ALL	Probe Heating System — Static inoperative	30-30-02
A-ICING PIT F/O	Probe Heating System — Pitot inoperative	30-30-01
_cec2eaed-e9db-46a8-b401-9f3f90db3482 01 AUG 2024 ALL	Probe Heating System — Static inoperative	30-30-02
A-ICING PIT SBY	Probe Heating System — Pitot inoperative	30-30-01
_14f09070-cf14-4f61-9671-3f9263c0665a 01 AUG 2024 ALL	Probe Heating System — Static inoperative	30-30-02
A-ICING PROP 1		30-61-01
_746cb865-d8e8-42ff-a06a-4fc29997cecd 27 MAY 2015 ALL		
A-ICING PROP 2		30-61-01
_eadc1541-d43c-4038-b115-8a6123abf74b 27 MAY 2015 ALL		
A-ICING R WSHLD		30-60-01
_ccc32e33-14e8-4b18-b200-a5d96ca28e55 27 MAY 2015 ALL		
A-ICING SEL		NO DISPATCH
_4e88d653-9165-498b-9cd2-a2fef66c20fb 19 MAY 2022 ALL		
A-ICING TAT CPT		30-31-01
_d864df97-a611-474f-892d-caa847e7f779 19 MAY 2022 ALL		30-31-04
A-ICING TAT F/O		30-31-01
_ef160459-e1f8-4593-b3dc-6234673ffca2 19 MAY 2022 ALL		30-31-04
A-ICING WINDOWS		30-60-02
_45247200-343b-45c9-ad8f-3af32e40e281 27 MAY 2015 ALL		
ICING	Takeoff with ICING alert is forbidden	NO DISPATCH
	NOT IN ICING CONDITIONS	
	Note:	
	- Ice detector is not designed to detect icing on ground - ICING alert can be triggered with Heavy rain at low taxi speed - Check takeoff speeds if ICING as been triggered on ground - Takeoff with ICING alert is forbidden	Apply EWD Procedure
_b1191f3d-f687-4b90-93ea-78a5fd71ba71 15 APR 2025 ALL		

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°14
---	---	-------------------------

AUTOPILOT		
EWD message	Meaning / Assessment conditions	Condition of dispatch
AILERON MISTRIM _5f82001c-8bec-4eb7-bd9d-1846933a5600 19 MAY 2022 ALL		NO DISPATCH
AP PITCH TRIM _4347904f-417c-4e99-a269-75a6aae78a6b 19 MAY 2022 ALL		NO DISPATCH
PITCH MISTRIM _75679f4e-12a6-4989-a8f4-66ad3a8bce02 19 MAY 2022 ALL		NO DISPATCH
RUDDER MISTRIM _c2adcb52-475a-4dcb-a3ed-fd363c2209f7 19 MAY 2022 ALL		NO DISPATCH
YAW AUTO TRIM _72d39dac-9782-4e08-8e97-f9103f5a9ec2 19 MAY 2022 ALL		NO DISPATCH

MPC		
EWD message	Meaning / Assessment conditions	Condition of dispatch
APM FAULT _1424f81e-8eb0-41ee-87e6-f0e627659b1b 08 FEB 2018 ALL		31-31-03-02

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°15
---	---	-------------------------

AVIONICS		
EWD message	Meaning / Assessment conditions	Condition of dispatch
ADC _ecbae6d4-f141-466a-ae2c-58ea5a6039bf 01 AUG 2024 ALL		34-11-01
ADC 1+2 _33142d9c-a84e-4ab1-805a-b541561e4d4b 01 AUG 2024 ALL		NO DISPATCH
ADS-B _ad146c8b-c840-4ca5-8d53-8f17cea2abcf 01 AUG 2024 ALL		34-52-04
AHRS _9394ea1e-b9ec-4e6b-b57c-55b707d480e0 01 AUG 2024 ALL		34-20-01
AHRS 1+2 _8c0416f8-777b-4345-9f86-b78cbd609c46 01 AUG 2024 ALL		NO DISPATCH
AHRS NOT ALIGN _5d711025-3961-4e4f-b51b-a47de2254bab 01 AUG 2024 ALL		NO DISPATCH
ALT DISAGREE _2526d953-87c1-4a50-9a41-f7642200ef4e 01 AUG 2024 ALL		NO DISPATCH
ATT DISAGREE _7e8b8e64-4c51-4121-a412-96f4f116e5f9 01 AUG 2024 ALL	AHRS inoperative	34-20-01
AUDIO SEL CAPT _ec87f494-53a3-473f-bc37-87ed7e0a2d3b 01 AUG 2024 ALL		NO DISPATCH
AUDIO SEL F/O _3112fffa-c54e-40b7-ab12-9008aea5de5b 01 AUG 2024 ALL		NO DISPATCH
AVNX CPM 1 _03164f92-5e17-4568-ad2b-bbe6a2378a6c 01 AUG 2024 ALL		NO DISPATCH
AVNX CPM 2 _7bcd9ba0-4490-4cba-a8da-7d850e372681 01 AUG 2024 ALL		NO DISPATCH
AVNX CPM 1 + IOM 22 _1f0efa32-348b-4c03-85b1-66b9cc2c760c 01 AUG 2024 ALL		NO DISPATCH
AVNX CPM 1 + IOM 23 _5a2263dc-407c-4b13-9e09-3f22b8fdae78 01 AUG 2024 ALL		NO DISPATCH
AVNX CPM 2 + IOM 12 _c7f3d68b-bde1-4bc5-9559-5996807f0d0a 01 AUG 2024 ALL		NO DISPATCH
AVNX CPM 2 + IOM 13 _b05facb1-c90d-420e-93f1-0ab89d6a7c50 01 AUG 2024 ALL		NO DISPATCH

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°16
---	---	-------------------------

AVIONICS		
EWD message	Meaning / Assessment conditions	Condition of dispatch
AVNX IOM 12 _bd6a7415-079b-4f9e-bd94-496364b8a085 01 AUG 2024 ALL		NO DISPATCH
AVNX IOM 12 + 13 _dc364491-89af-472c-acbf-343b651b886c 01 AUG 2024 ALL		NO DISPATCH
AVNX IOM 12 + 22 _514b1ad2-b784-4e9d-8474-c0653e0d9df9 01 AUG 2024 ALL		NO DISPATCH
AVNX IOM 12 + 23 _86ddf1a7-9c41-452e-8319-cf2a16abd09e 01 AUG 2024 ALL		NO DISPATCH
AVNX IOM 13 _3153b01a-894e-4fa2-b46e-5f6423ca86b2 01 AUG 2024 ALL		NO DISPATCH
AVNX IOM 13 + 22 _618deffa-c0fa-45ac-a20a-9886bd97ba3b 01 AUG 2024 ALL		NO DISPATCH
AVNX IOM 13 + 23 _3b7b440a-eae4-4335-b973-87e660f570fb 01 AUG 2024 ALL		NO DISPATCH
AVNX IOM 22 _368d6c8e-be6e-46d8-88d4-d5c54fbb0202 01 AUG 2024 ALL		NO DISPATCH
AVNX IOM 22 + 23 _55189191-81ae-474e-9438-bbefaf85755f 01 AUG 2024 ALL		NO DISPATCH
AVNX IOM 23 _806481ab-10d1-4ba4-b090-431bde7dc293 01 AUG 2024 ALL		NO DISPATCH
AVNX SGL SWITCH _feb60e26-b26c-47ba-9958-b8bd1c39aa51 01 AUG 2024 ALL		NO DISPATCH
DME LOSS _aaa28b8f-e65f-4163-bb59-fb83a57954bc 01 AUG 2024 ALL		34-50-02

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°17
---	---	-------------------------

AVIONICS		
EWD message	Meaning / Assessment conditions	Condition of dispatch
DU TEMP HI _dcd2f322-835b-438a-b903-25ebc2803007 02 JUN 2022 ALL	Refer to AFM - AFM.PRO.NNO.ABN.34.6- DU TEMP HI to try to reset alert If reset unsuccessful	Apply EWD Procedure 31-60-01
DU DISCREPANCY _dcd2f322-835b-438a-b903-25ebc2803007 02 JUN 2022 ALL	Refer to AFM - AFM.PRO.NNO.ABN.34.6- DU DISCREPANCY to try to reset alert. If reset unsuccessful	Apply EWD Procedure 31-60-01
DUs TEMP HI _da5b190a-c3c9-41a8-8411-be5f1d3462f3 02 JUN 2022 ALL	Refer to AFM - AFM.PRO.NNO.ABN.34.6 - SEVERAL DUs TEMP HI to try to reset alert. If reset unsuccessful	Apply EWD Procedure 31-60-01
FWS SGL CH _5425fdcc-79e1-4a2f-b650-ed4847a261ff 01 AUG 2024 ALL		NO DISPATCH
GPWS _1d5505c1-23a2-4178-9e26-9e958f83bd76 01 AUG 2024 ALL		34-48-01-02
HDG DISAGREE _23e2cfaf-3c0f-4347-b4a0-78e85915b081 01 AUG 2024 ALL		NO DISPATCH
HF _438cecba-8f7f-4aee-9126-38fbc6d4304a 01 AUG 2024 ALL		23-11-01
HF 1+2 _bc3431b6-872e-4256-aba0-5d2566de6c21 01 AUG 2024 ALL		23-11-01
HF EMITTING _16764cf8-d536-48bc-be8c-c77eeecf0cc 01 AUG 2024 ALL	In case of permanent message	NO DISPATCH
IAS DISAGREE _ca6aad6d-de72-4888-b18f-fc03c022c513 01 AUG 2024 ALL		NO DISPATCH
RMS _f920e3ce-408a-4a12-8226-71f607c6dfa4 01 AUG 2024 ALL		23-52-01
RMS 1 + 2 _40f52764-ab3a-4675-9460-65a23b82c704 01 AUG 2024 ALL		NO DISPATCH
SGL DME _f2547429-cf8b-4621-a4c5-349dfe0bd1d8 01 AUG 2024 ALL		34-50-02

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°18
---	---	-------------------------

AVIONICS		
EWD message	Meaning / Assessment conditions	Condition of dispatch
TCAS _af771852-cffc-424f-83bd-057403f09364 01 AUG 2024 ALL		34-57-01-01
TERRAIN _49ba4e02-b390-403d-8561-c8d5d5acb03e 01 AUG 2024 ALL		34-48-01-03
VHF _d162caec-4c62-4bcb-8391-123ac1e617fc 01 AUG 2024 ALL		23-12-01-01
VHF 1 + 2 _7bc6cc36-494f-4331-be41-a6da89bfa5b9 01 AUG 2024 ALL		NO DISPATCH
VHF EMITTING _c0f2a4c1-6477-4f68-944e-70ae2b829883 01 AUG 2024 ALL	In case of permanent message	NO DISPATCH
XPDR _48116ae1-5f70-4834-bec4-357cb0ae7bef 01 AUG 2024 ALL	All affected XPDR functions are lost	34-52-02
	All affected XPDR functions are lost	34-52-03
	All affected XPDR functions are lost	34-52-04
XPDR 1 + 2 _b763c364-2f9a-4f62-a1d4-12b1dd2f3223 01 AUG 2024 ALL	All affected XPDR functions are lost	34-52-02
	All affected XPDR functions are lost	34-52-03
	All affected XPDR functions are lost	34-52-04

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°19
---	---	-------------------------

MISCELLANEOUS		
EWD message	Meaning / Assessment conditions	Condition of dispatch
BAD CONF _067ea0b7-d167-4cb5-9c7d-834d3f0b3899 19 MAY 2022 ALL		NO DISPATCH
DATA RECORDER _c67dd56a-a638-4e97-91ae-eeb3fe2df120 27 MAY 2015 ALL		31-32-01
FDAU _2bd5d9cf-4dba-4720-8016-cef05efdf423 27 MAY 2015 ALL		31-31-03-01
OXY _90e8365a-e42e-4620-914e-98d0f21f14fd 19 MAY 2022 ALL		NO DISPATCH
RAD-ALT _ac1bbc8a-be9b-4726-a6b2-6b351199c585 27 MAY 2015 ALL		34-42-01
RAD-ALT LOSS _142d04de-155c-4037-afd6-f65b31e7f31f 27 MAY 2015 ALL		34-42-01
VOICE RECORDER _ad858712-c9ca-4e68-b628-fc094a88584f 27 MAY 2015 ALL		23-71-01
AIR AFT DET FAN _c91c618e-a8e9-4b0f-8127-2508e8821143 07 MAY 2019 ALL		26-19-01

 VT / ATR 72-600 MEL	ALERT MESSAGE LIST CAUTION MESSAGE	AML.20 Page n°20
---	---	-------------------------

MFC		
EWD message	Meaning / Assessment conditions	Condition of dispatch
MFC 1A _cf4b523d-e672-4a49-bad9-b3f62d3ecbf 19 MAY 2022 ALL		NO DISPATCH
MFC 1A + 1B _f758fb1d-daf5-474e-a25d-9af86c81a2e4 19 MAY 2022 ALL		NO DISPATCH
MFC 1A + 2A _e3506a62-daf6-440c-ba5e-6f6d5603ea29 19 MAY 2022 ALL		NO DISPATCH
MFC 1A + 2B _f8f5dcea-4524-4f00-bac8-12cc30c5ddcf 19 MAY 2022 ALL		NO DISPATCH
MFC 1B _4ab18217-f364-40e1-829a-95e8bf4b3ede 19 MAY 2022 ALL		NO DISPATCH
MFC 1B + 2A _ec865929-d409-4446-8f7c-99c44b33730a 19 MAY 2022 ALL		NO DISPATCH
MFC 1B + 2B _b9fe395a-f5fd-4cdf-82c7-007476bceed1 19 MAY 2022 ALL		NO DISPATCH
MFC 2A _12922f17-7306-4238-be92-f9623ceadf07 19 MAY 2022 ALL		NO DISPATCH
MFC 2A + 2B _02c641e6-05a7-47cf-b26f-ff7bbe2b2d21 19 MAY 2022 ALL		NO DISPATCH
MFC 2B _f0cdea81-86d0-4b91-bad3-84488f72609a 19 MAY 2022 ALL		NO DISPATCH

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°01
---	---	--------------------------------

21-10-01 Flow Selector

2189f0b9-a595-4d13-b78a-f676e894275a

11 APR 2025

ALL

EASA - APPROVED

21-10-01A NORM mode inoperative (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) HIGH mode is operative and used, and
- (b) Takeoff with BLEED ON is prohibited.

[See Operational procedure Flow Selector \(O\)](#)

- OR -

21-10-01B HIGH mode inoperative (B)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that NORM mode is operative and used.

Note

Some smoke procedures request to select airflow HIGH. Nevertheless associated procedures efficiency has been demonstrated with airflow NORM.

21-10-01P Flow Selector (O)

acfd4ed7-264b-45a6-bc13-029b264ad8aa

19 MAY 2022

ALL

21-10-01 (A)

- Before takeoff

▶ BLEED VALVES..... OFF

- After takeoff

▶ BLEED VALVES..... ON

21-22-01 Recirculation Fan

7c670d2c-afd9-4a0e-b555-9703077cc677

22 SEP 2022

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°02
---	---	--------------------------------

21-22-02 Emergency Ram Air Valve (ERAV)

59140c10-79c7-4c59-bdc8-9b1f87e1395b	01 AUG 2024
	1658-1718
	EASA - APPROVED

21-22-02A Emergency Ram Air Valve (ERAV) (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	<u>YES</u>

May be inoperative provided:

- (a) Both Packs are verified operative, and
- (b) Emergency Ram Air Check Valve is verified operative.

See Operational procedure [MOP.21.22-02P Emergency Ram Air Valve \(ERAV\) \(O\)](#)

See Maintenance procedure [MMP.21.22-02 Emergency Ram Air Valve \(ERAV\) \(M\)](#)

- OR -

21-22-02B Emergency Ram Air Valve (ERAV) (B)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	<u>YES</u>

May be inoperative provided:

- (a) One Pack is verified operative,
- (b) Emergency Ram Air Check Valve is verified operative,
- (c) Maximum operating altitude is limited to 17 000 ft, and
- (d) ETOPS operations are not conducted.

See Operational procedure [MOP.21.22-02P Emergency Ram Air Valve \(ERAV\) \(O\)](#)

See Maintenance procedure [MMP.21.22-02 Emergency Ram Air Valve \(ERAV\) \(M\)](#)

21-22-02P Emergency Ram Air Valve (ERAV) (O)

fc8ad311-0021-4290-bae8-1756ba80e077	01 AUG 2024
	1658-1718

■ In case of ERAV (A)

Both PACKs are verified operative.

- OR -

■ In case of ERAV (B)

One PACK is verified operative.

Maximum operating altitude is limited to 17 000 ft.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°03
---	---	--------------------------------

21-22-03 Emergency Ram Air Check Valve (ERACKV)

46f4b386-7b10-4d55-b96d-73db59216451	08 APR 2020
	1658-1718
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	NO	<u>YES</u>	<u>YES</u>

May be inoperative provided:
(a) ERAV is verified operative.

See Operational procedure MOP.21.22-03P Emergency Ram Air Check Valve (ERACKV) (O)

See Maintenance procedure MMP.21.22-03 Emergency Ram Air Check Valve (ERACKV) (M)

21-22-03P Emergency Ram Air Check Valve (ERACKV) (O)

631e0095-633b-4377-ba96-8b9d24411409	24 JUL 2020
	1658-1718

Refer to QRH - PACK 1 + 2 FAULT AFM Abnormal Procedure (Max flight time is limited to 80 mins in case of loss of ERAV in flight).

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°04
---	---	--------------------------------

21-23-01 Overboard Valve

1f1296af-6058-4587-a14a-ec3c5530532a		11 APR 2025
		ALL
		EASA - APPROVED

21-23-01A Automatic Mode (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

Automatic mode may be inoperative provided that:

- (a) Manual mode is checked operative before each departure, and
- (b) Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft.

See Operational procedure [MOP.21.23-01P Overboard Valve \(O\)](#)

- OR -

21-23-01B (B)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	<u>YES</u>

May be inoperative provided that:

- (a) It is deactivated,
- (b) Extended overwater flight is prohibited,
- (c) Maximum operating altitude is limited to 17 000 ft, and
- (d) FLOW selector is considered inoperative, [Refer to Item 21-10-01Flow Selector – HIGH mode inoperative \(B\)](#).

See Operational procedure [Overboard Valve \(O\)](#)

See Maintenance procedure [MMP.21.23-01 Overboard Valve \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°05
---	---	--------------------------------

21-23-01P Overboard Valve (O)

37a82983-8d5e-4ae5-bc56-09f49ed4ef09

24 JUN 2025

ALL

■ In case of Overboard Valve - Automatic Mode (A)

Limitation

Flight is conducted in an unpressurized configuration.

Maximum operating altitude 10 000 ft

Check procedure of the Overboard Valve in manual mode

- ▶ OVBD VALVE SELECTOR SWITCH.....FULL CLOSE
- ▶ OVBD VALVECHECK FULLY CLOSED
- ▶ OVBD VALVE SELECTOR SWITCH..... FULL OPEN
- ▶ OVBD VALVECHECK FULLY OPEN
- ▶ CAB PRESS MODE SEL MAN
- ▶ MAN RATE knob MAX INCREASE

Note

Adjust aircraft vertical speed to take into account passenger comfort.

Fuel consumption at FL 100 must be taken into account to compute the trip fuel.

During the flight :

- use CAB PRESS MODE SEL MAN,
- maintain $\Delta P \leq 1$ PSI by managing the climb/descent rate of the aircraft and the cabin rate (MAN RATE KNOB),
- take into account passenger comfort.

Note

CAB ALT amber message will be triggered if the cabin altitude exceeds 7175 ft.

- OR -

■ In case of Overboard Valve (B)

● After ENG 1 start

- ▶ EXHAUST MODE..... OVBD

Note

- ▶ *Avoid leaving avionics selected ON for a long period of time on ground.*
- ▶ *On ground only with aircraft network energized (GPU connected), the mechanic ground call system is activated as extract fan is inoperative.*

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°06
---	---	--------------------------------

21-23-02 Underfloor Valve

8ff06996-9911-46af-a0c8-a0f026f0d393	01 AUG 2024
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

- May be inoperative in closed position provided that:
- (a) Exhaust mode is selected OVBD , and
 - (b) Extended overwater flight is prohibited, and
 - (c) Maximum operating altitude is limited to 17 000 ft.

See Operational procedure MOP.21.23-02P Underfloor Valve (O)

21-23-02P Underfloor Valve (O)

99b1e4ae-92ae-4b6d-be39-1352273e2d9e	01 AUG 2024
	ALL

- Select exhaust mode OVBD.

Note

- *Avoid leaving avionics selected ON for a long period of time on ground.*
- *On ground only with aircraft network energized (GPU connected), the mechanic ground call system is activated as extract fan is inoperative.*

21-23-03-01 Extract Fan - Passenger Configuration

36ca7c30-6efd-466c-beef-4c71cccab8a3	01 AUG 2024
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

- May be inoperative provided that:
- (a) Exhaust mode is selected OVBD , and
 - (b) Extended overwater flight is prohibited, and
 - (c) Maximum operating altitude is limited to 17 000 ft.

See Operational procedure MOP.21.23-03P Extract Fan - Passenger Configuration (O)

21-23-03-02 Extract Fan - Cargo Configuration

487356a6-c2f9-4c7d-9c45-dc5ec9e8718b	22 SEP 2022
	ALL
	EASA - APPROVED

NO GO

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°07
---	---	--------------------------------

21-23-03P Extract Fan - Passenger Configuration (O)

228fe7b4-c3e7-4ae8-91c6-ffd740e8b691

01 AUG 2024

ALL

- Select exhaust mode OVBD.

Note

- *Avoid leaving avionics selected ON for a long period of time on ground.*
- *On ground only with aircraft network energized (GPU connected), the mechanic ground call system is activated as extract fan is inoperative.*

21-30-01-01 Pressurization System - Passenger Configuration

1983feb9-2347-41f7-88d9-02a7c1cc9fe9

01 AUG 2024

1192-1568

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	<u>YES</u>

The pressurization system (automatic and manual modes) may be inoperative provided that:

- Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft, and
- Outflow valves are secured in open position.

See Operational procedure MOP.21.30-01P Pressurization System (O)

See Maintenance procedure MMP.21.30-01 Pressurization System (M)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°08
---	---	--------------------------------

650906ba-e73d-4ccb-8ea6-30b87b51e86c	01 AUG 2024
	1658-1718
	EASA - APPROVED

21-30-01-01A ETOPS Operations - Passenger Configuration (A)

RI	NI	NR	PLACARD	O	M
B	1	0	YES	<u>YES</u>	<u>YES</u>

The pressurization system (automatic and manual modes) may be inoperative provided:

- (a) Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft,
- (b) Outflow valve is secured in an open position,
- (c) One Pack & Bleed is checked operative,
- (d) ERAV is checked operative, and
- (e) Operations are allowed only for ground temperature equal or greater than ISA (15 °C/59 °F at sea level).

Note

Ground temperature should be checked during pre-flight check for departure and arrival airport.

See Operational procedure

See Maintenance procedure MMP.21.30-01 Pressurization System (M)

- OR -

21-30-01-01B Pressurization System - Passenger Configuration (B)

RI	NI	NR	PLACARD	O	M
A	1	0	YES	<u>YES</u>	<u>YES</u>

The pressurization system (automatic and manual modes) may be inoperative provided:

- (a) Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft,
- (b) Outflow valve is secured in an open position,
- (c) Both packs are considered inoperative,
- (d) Operations are limited to one flight, and
- (e) ETOPS operations are not conducted.

See Operational procedure MOP.21.30-01P Pressurization System (O)

See Maintenance procedure MMP.21.30-01 Pressurization System (M)

- OR -

21-30-01-01C Pressurization System - Passenger Configuration (C)

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°09
---	---	--------------------------------

cont'd... >>>

RI	NI	NR	PLACARD	O	M
B	1	0	YES	YES	YES

The pressurization system (automatic and manual modes) may be inoperative provided:

- (a) Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft,
- (b) Outflow valve is secured in an open position,
- (c) One Pack & Bleed is checked operative, and
- (d) [ETOPS](#) operations are not conducted.

See Operational procedure [MOP.21.30-01P Pressurization System \(O\)](#)

See Maintenance procedure [MMP.21.30-01 Pressurization System \(M\)](#)

21-30-01-02 Pressurization System - Cargo Configuration

c7919d27-efb-4184-927f-35833d6006cd	01 AUG 2024
	1350;1455
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	YES

The pressurization system (automatic and manual modes) may be inoperative provided that:

- (a) Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft,
- (b) Outflow valves are secured in open position, and
- (c) No [combustible material](#) is carried in any compartment.

See Operational procedure [MOP.21.30-01P Pressurization System \(O\)](#)

See Maintenance procedure [MMP.21.30-01 Pressurization System \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°10
---	---	--------------------------------

21-30-01P Pressurization System (O)

08afddf4-c20b-48f5-a32a-c540372e32be		02 NOV 2020
		1192-1568

■ Unpressurized Flight

Limitation

Maximum operating altitude 10 000 ft

Normal Procedures

- ▶ OVBD VALVE..... FULL OPEN
- ▶ CAB PRESS MODE SEL..... MAN
- ▶ MAN RATE knob MAX INCREASE
- ▶ BLEED VALVE..... ON

Note

Control aircraft vertical speed to take into account passenger comfort.

PRESSURIZATION SYSTEM - Passenger and Cargo Configuration System (O)

d85f03b6-2cc5-4cce-b0f9-f2f7556992b9		01 AUG 2024
		1658-1718

■ In case of ETOPS Operations - Passenger and Cargo Configuration System (A)

Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft.

Unpressurized Flight

Limitation

Maximum operating altitude 10 000 ft

Normal Procedures

- ▶ OVBD VALVE FULL OPEN
- ▶ CAB PRESS MODE SEL MAN
- ▶ MAN RATE knob MAX INCREASE
- ▶ BLEED VALVE..... ON

Note

Control aircraft vertical speed to take into account passenger comfort.

One Pack & Bleed is verified operative.

- OR -

■ In case of Pressurization System - Passenger and Cargo Configuration System (B)

Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft.

Unpressurized Flight

Limitation

Maximum operating altitude 10 000 ft

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°11
---	---	--------------------------------

cont'd... >>>

Normal Procedures

- ▶ OVBD VALVE FULL OPEN
- ▶ CAB PRESS MODE SEL MAN
- ▶ MAN RATE knob MAX INCREASE
- ▶ BLEED VALVE..... ON

Note

Control aircraft vertical speed to take into account passenger comfort.

[Refer to 21-50-01 Both Packs inoperative \(O\)](#)

- OR -

■ In case of Pressurization System - Passenger and Cargo Configuration System (C)

Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft.

Unpressurized Flight

Limitation

Maximum operating altitude 10 000 ft

Normal Procedures

- ▶ OVBD VALVE..... FULL OPEN
- ▶ CAB PRESS MODE SEL MAN
- ▶ MAN RATE knob MAX INCREASE
- ▶ BLEED VALVE..... ON

Note

Control aircraft vertical speed to take into account passenger comfort.

One Pack & Bleed is verified operative.

21-31-01 Automatic Pressurization Control

88b5830e-89aa-4e45-a6c9-8af34d6c93e5

27 MAY 2015

1192-1568

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative **for a pressurized flight** provided that:

- (a) Manual pressurization is operative, and
- (b) CAB ALT , CAB RATE and ΔP indications are operative.

[See Operational procedure MOP.21.31-01P Automatic Pressurization Control \(O\)](#)

38eb6a8b-2b9c-4717-9654-a96e7329c083

08 APR 2020

1658-1718

EASA - APPROVED

21-31-01A OUTFLOW VALVE - NORM and BK UP MODES - ETOPS Operations (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	<u>YES</u>

Both Outflow valve modes NORM and BK UP may be inoperative provided:

- (a) MAN mode is verified operative,
- (b) ERAV is checked operative,
- (c) Operations in cold weather condition is prohibited, and
- (d) Operations are allowed only for ground temperature equal or greater than ISA (15 °C/59 °F at sea level).

Note

Ground temperature should be checked during pre-flight check for departure and arrival airport.

See Operational procedure MOP.21.31-01P Automatic Pressurization Control (O)

See Maintenance procedure MMP.21.31-01 Automatic Pressurization Control (M)

- OR -

21-31-01B OUTFLOW VALVE - NORM and BK UP MODES (B)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	<u>YES</u>

Both Outflow valve modes NORM and BK UP may be inoperative provided:

- (a) MAN mode is verified operative.

See Operational procedure MOP.21.31-01P Automatic Pressurization Control (O)

See Maintenance procedure MMP.21.31-01 Automatic Pressurization Control (M)

- OR -

21-31-01C OUTFLOW VALVE NORM MODE (C)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	<u>YES</u>

May be inoperative provided:

- (a) Outflow valve BK UP mode is verified operative, and
- (b) MAN mode is verified operative.

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°13
---	---	--------------------------------

cont'd... >>>

See Maintenance procedure [MMP.21.31-01 Automatic Pressurization Control \(M\)](#)

- OR -

21-31-01D OUTFLOW VALVE BK UP MODE (D)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	YES

May be inoperative provided:

- (a) Outflow valve NORM mode is verified operative, and
- (b) MAN mode is verified operative.

See Maintenance procedure [MMP.21.31-01 Automatic Pressurization Control \(M\)](#)

- OR -

21-31-01E MODE SEL - MAN MODE (E)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	YES

May be inoperative provided:

- (a) Automatic Pressurization Control (NORM and BK UP) is verified operative.

See Maintenance procedure [MMP.21.31-01 Automatic Pressurization Control \(M\)](#)

21-31-01P Automatic Pressurization Control (O)

dd463a69-f77d-4831-a1c1-6d0df19177af

15 APR 2025

ALL

• Before takeoff

- ▶ MAN CAB ALT knob 9 O'CLOCK (MAN position)
- ▶ CAB PRESS MODE SEL..... MAN

• During climb

- ▶ MAN CAB ALT knob INCREASE
- ▶ CAB ALT RATE.....ADJUST 1 000 ft/min UP MAX

FL	140	170	200	220	240	250
TARGET CAB ALT (ft)	2 500	3 300	4 200	5 200	6 200	6 700

• When CAB ALT = TARGET CAB ALT

- ▶ MAN CAB ALT knobAS RQRD TO MAINTAIN TARGET CAB ALT

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°14
---	---	--------------------------------

cont'd... >>>

- **Before descent**
 - **If CAB ALT above landing elevation**
 - ▶ MAN CAB ALT knob DECREASE
 - ▶ CAB ALT RATE..... ADJUST 400 ft/min DN
 - **If CAB ALT below landing elevation**
 - ▶ MAN CAB ALT knob INCREASE
 - ▶ CAB ALT RATE..... ADJUST 1 000 ft/min UP MAX
- **After landing**
 - ▶ MAN CAB ALT knob MAX INCREASE

21-31-02 **DESCENT RATE Selector**

07faf458-724e-445e-912f-2d1c7799f60f		27 MAY 2015
		1192-1568
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative.

21-31-03 **Electropneumatic Outflow Valve**

d78b75d2-56a6-4323-9480-81d512626a7d		27 MAY 2015
		1192-1568
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	1	0	YES	NO	<u>YES</u>

- May be inoperative provided that:
- (a) It is secured in closed position, and
 - (b) Flight is conducted with manual pressurization: [Refer to Item 21-31-01Automatic Pressurization Control](#) .

[See Maintenance procedure MMP.21.31-03 Electropneumatic Outflow Valve \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°15
---	---	--------------------------------

21-31-04-01 CABIN PRESS Indication - ALT

CABIN PRESS Indication - CAB ALT Indication on SD Cabin

c5ddd69b-3ae1-4492-b7cb-ea01e466584d

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that ΔP indication is operative.

See Operational procedure MOP.21.31-04-01P CABIN PRESS Indication - ALT (O)

21-31-04-01P CABIN PRESS Indication - ALT (O)

CABIN PRESS Indication - CAB ALT Indication on SD Cabin (O)

4ee6d5b1-7a75-4365-bc5d-8079502494ef

01 AUG 2024

ALL

► Check ΔP based on table below:

ft	14 000	17 000	20 000	22 000	24 000	25 000
TARGET (PSI)	4.8	5.4	5.8	5.9	6	6.35

21-31-04-02 CABIN PRESS Indication - RATE

CABIN PRESS Indication - CAB RATE Indication on SD Cabin

ec614c1a-7831-4968-aa08-3219bde022bb

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative.

See Operational procedure MOP.21.31-04-02P CABIN PRESS Indication - RATE (O)

21-31-04-02P CABIN PRESS Indication - RATE (O)

CABIN PRESS Indication - CAB RATE Indication on SD Cabin (O)

e006294b-8ae8-46f3-afa0-14411b0a20c6

01 AUG 2024

ALL

► Check cabin altitude based on table below ($\Delta P = 6$ PSI):

ft	14 000	17 000	20 000	22 000	24 000	25 000
TARGET CAB ALT (ft)	2 500	3 300	4 200	5 200	6 200	6 700

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°16
---	---	--------------------------------

21-31-04-03 CABIN PRESS Indication - Pressure

CABIN PRESS Indication - ΔP Indication on SD Cabin

d344440d-d17d-480f-abb0-2a49b574fbba		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	NO

May be inoperative.

See Operational procedure MOP.21.31-04-03P CABIN PRESS Indication - Pressure (O)

21-31-04-03P CABIN PRESS Indication - Pressure (O)

CABIN PRESS Indication - ΔP Indication on SD Cabin (O)

e379c0df-f94b-4733-888c-7b94a9d19f6c		01 AUG 2024
		ALL

► Check cabin altitude based on table below (ΔP = 6 PSI):

ft	14 000	17 000	20 000	22 000	24 000	25 000
TARGET CAB ALT (ft)	2 500	3 300	4 200	5 200	6 200	6 700

21-31-05 Ditch Function

e59c3501-7796-4bef-8aae-86759f06f812		22 SEP 2022
		ALL
	EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative.

21-33-01 Automatic Landing ELEV Display

4e31f0f7-fbc4-4db2-b4a5-ea0446dcff0f		08 APR 2020
		1658-1718
	EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	NO

May be inoperative provided:

(a) Source SEL FMS MAN is checked operative.

See Operational procedure MOP.21.33-01P Automatic Landing ELEV Display (O)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°17
---	---	--------------------------------

21-33-01P Automatic Landing ELEV Display (O)

4ee46c62-a073-4e96-ba31-4da3b215ff6a

24 JUL 2020

1658-1718

Source SEL FMS MAN is checked operative.

21-34-01 Safety Valve (SFV)

9c10a9d5-94b3-4c93-9c30-910fa581cec0

01 AUG 2024

1658-1718

EASA - APPROVED

21-34-01A Safety Valve (SFV) (A)

RI	NI	NR	PLACARD	O	M
A	2	0	YES	<u>YES</u>	<u>YES</u>

One or both may be inoperative provided:

- (a) Both Safety Valve are secured in open position,
- (b) Both Packs are considered inoperative,
- (c) Operations are limited to one flight, and
- (d) ETOPS operations are not conducted.

Note

For both packs inoperative, Refer to Item 21-50-01MOP.21.50-01 Pack.

See Operational procedure MOP.21.34-01P Safety Valve (SFV) (O)

See Maintenance procedure MMP.21.34-01 Safety Valve (SFV) (M)

- OR -

21-34-01B Safety Valve (SFV) (B)

RI	NI	NR	PLACARD	O	M
B	2	0	YES	<u>YES</u>	<u>YES</u>

One or both may be inoperative provided:

- (a) Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft,
- (b) Both Safety Valves are secured in open position,
- (c) One Pack & Bleed is checked operative, and
- (d) ETOPS operations are not conducted.

See Operational procedure MOP.21.34-01P Safety Valve (SFV) (O)

See Maintenance procedure MMP.21.34-01 Safety Valve (SFV) (M)

21-34-01P Safety Valve (SFV) (O)

c7f16762-6cc7-4787-9174-e4441f479a13

01 AUG 2024

1658-1718

■ In case of Safety Valve (SFV) (A)

Refer to Item # 21-50-01, Both Packs inoperative (O).

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°18
---	---	--------------------------------

cont'd... >>>

- OR -

■ In case of Safety Valve (SFV) (B)

Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft.

Unpressurized Flight

Limitation

Maximum operating altitude 10 000 ft

Normal Procedures

- ▶ OVBD VALVE FULL OPEN
- ▶ CAB PRESS MODE SEL MAN
- ▶ MAN RATE knob MAX INCREASE
- ▶ BLEED VALVE..... ON

Note

Control aircraft vertical speed to take into account passenger comfort.

One Pack & Bleed is checked operative.

21-35-01 DUMP Function

d642bf16-28d7-4ac5-b00b-525547d05b5c	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that manual pressurization is operative.

See Operational procedure MOP.21.35-01P DUMP Function (O)

21-35-01P DUMP Function (O)

2f68def7-d95a-493c-a090-9a8a0347879b	27 MAY 2015
	ALL

■ In case of rapid depressurization of the aircraft is needed:

- ▶ MAN RATE knob MAN
- ▶ CAB PRESS MODE SEL..... MAN
- ▶ MAN RATE knob MAX INCREASE

Note

Residual ΔP may be cancelled using the cockpit communication door.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°19
---	---	-------------------------

21-50-01 Pack

375e73f4-fd2c-4920-b0e0-bbeed6d29986		01 AUG 2024
		1192-1568

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	NO

One may be inoperative provided:

- (a) Maximum operating altitude is limited to 17 000 ft,
- (b) Associated pack is selected OFF,
- (c) Opposite pack and bleed valve are operative, and
- (d) ETOPS Operations are not conducted.

See Operational procedure [MOP.21.50-01P Pack \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°20
---	--	--

879748ac-f1ae-4211-82c3-ca0aced071b1	01 AUG 2024
1658-1718	
EASA - APPROVED	

21-50-01A One Pack Inoperative - ETOPS Operations (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	<u>YES</u>

One may be inoperative provided:

- (a) Affected pack is selected OFF,
- (b) Emergency Ram Air Valve is checked operative,
- (c) Maximum operating altitude is limited to 17 000 ft, and
- (d) Operations are allowed only for ground temperature equal or greater than ISA (15 °C/59 °F at sea level).

Note

Ground temperature should be checked during pre-flight check for departure and arrival airport.

If PACK fault triggering cause is not identified by NAMS System Maintenance Advisory (SMA), [Refer to MOP.21.50-02 Flow Control Valve \(FCV\)](#).

[See Operational procedure MOP.21.50-01P Pack \(O\)](#)

[See Maintenance procedure MMP.21.50-01 Pack \(M\)](#)

- OR -

21-50-01B One Pack Inoperative (B)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	<u>YES</u>

One may be inoperative provided:

- (a) Affected pack is selected OFF,
- (b) Maximum operating altitude is limited to 17 000 ft,
- (c) Associated Bleed Valve is considered inoperative, and
- (d) Cross Bleed Valve is secured closed.

Note

If PACK fault triggering cause is not identified by NAMS System Maintenance Advisory (SMA), [Refer to MOP.21.50-02 Flow Control Valve \(FCV\)](#).

[See Operational procedure MOP.21.50-01P Pack \(O\)](#)

[See Maintenance procedure MMP.21.50-01 Pack \(M\)](#)

- OR -

21-50-01C One Pack Inoperative - ETOPS Operations (C)

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°21
---	--	---

cont'd... >>>

RI	NI	NR	PLACARD	O	M
C	2	1	YES	YES	YES

One may be inoperative provided:

- (a) Affected pack is selected OFF,
- (b) Emergency Ram Air Valve is checked operative,
- (c) Maximum operating altitude is limited to 17 000 ft,
- (d) Associated Bleed Valve is considered inoperative,
- (e) Cross Bleed Valve is secured closed, and
- (f) Operations are allowed only for ground temperature equal or greater than ISA (15 °C/59 °F at sea level).

Note

Ground temperature should be checked during pre-flight check for departure and arrival airport.

If PACK fault triggering cause is not identified by NAMS System Maintenance Advisory (SMA), [Refer to MOP.21.50-02 Flow Control Valve \(FCV\)](#).

[See Operational procedure MOP.21.50-01P Pack \(O\)](#)

[See Maintenance procedure MMP.21.50-01 Pack \(M\)](#)

- OR -

21-50-01D One Pack Inoperative (D)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	YES	NO

One may be inoperative provided:

- (a) Affected pack is selected OFF, and
- (b) Maximum operating altitude is limited to 17 000 ft.

Note

If PACK fault triggering cause is not identified by NAMS System Maintenance Advisory (SMA), [Refer to MOP.21.50-02 Flow Control Valve \(FCV\)](#).

[See Operational procedure MOP.21.50-01P Pack \(O\)](#)

- OR -

21-50-01E Both Packs Inoperative - Passenger Configuration (E)

RI	NI	NR	PLACARD	O	M
A	2	0	YES	YES	YES

Both may be inoperative provided:

- (a) [ETOPS](#) Operations are not conducted,
- (b) Both Packs are selected OFF,
- (c) Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft,

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°22
---	---	--------------------------------

cont'd... >>>

- (d) Pressurization system is considered inoperative,
- (e) Emergency Ram Air Valve is checked operative, and
- (f) Operations are limited to one flight.

Note

- If PACK fault triggering cause is not identified by NAMS System Maintenance Advisory (SMA), [Refer to MOP.21.50-02 Flow Control Valve \(FCV\)](#).
- [Refer to Item 21-30-01-01 MOP.21.30-01-01 Pressurization System - Passenger Configuration](#) or [Refer to Item 21-30-01-02 MOP.21.30-01-02 Pressurization System - Cargo Configuration](#).

See Operational procedure MOP.21.50-01P Pack (O)

See Maintenance procedure MMP.21.50-01 Pack (M)

- OR -

21-50-01F Both Packs Inoperative - Passenger Configuration (F)

RI	NI	NR	PLACARD	O	M
A	2	0	YES	<u>YES</u>	NO

Both may be inoperative provided:

- (a) ETOPS Operations are not conducted,
- (b) Both Packs are selected OFF,
- (c) Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft,
- (d) Pressurization system is considered inoperative,
- (e) Maximum flight time is limited to 80 mins, and
- (f) Operations are limited to one flight.

Note

- If PACK fault triggering cause is not identified by NAMS System Maintenance Advisory (SMA), [Refer to MOP.21.50-02 Flow Control Valve \(FCV\)](#).
- [Refer to Item 21-30-01-01 MOP.21.30-01-01 Pressurization System - Passenger Configuration](#) or [Refer to Item 21-30-01-02 MOP.21.30-01-02 Pressurization System - Cargo Configuration](#).

See Operational procedure MOP.21.50-01P Pack (O)

- OR -

21-50-01G Both Packs Inoperative - Cargo Configuration (G)

RI	NI	NR	PLACARD	O	M
A	2	0	YES	<u>YES</u>	<u>YES</u>

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°23
---	---	--------------------------------

cont'd... >>>

Both may be inoperative provided:

- ETOPS Operations are not conducted,
- Both Packs are selected OFF,
- Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft,
- Pressurization system is considered inoperative,
- Emergency Ram Air Valve is checked operative,
- Operations are limited to one flight, and
- No combustible material is carried in any compartment.

Note

- If PACK fault triggering cause is not identified by NAMS System Maintenance Advisory (SMA), [Refer to MOP.21.50-02 Flow Control Valve \(FCV\)](#).
[Refer to Item 21-30-01-01 MOP.21.30-01-01 Pressurization System - Passenger Configuration](#) or [Refer to Item 21-30-01-02 MOP.21.30-01-02 Pressurization System - Cargo Configuration](#).

See Operational procedure MOP.21.50-01P Pack (O)

See Maintenance procedure MMP.21.50-01 Pack (M)

- OR -

21-50-01H Both Packs Inoperative - Cargo Configuration (H)

RI	NI	NR	PLACARD	O	M
A	2	0	YES	YES	NO

Both may be inoperative provided:

- ETOPS Operations are not conducted,
- Both Packs are selected OFF,
- Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft,
- Pressurization system is considered inoperative,
- Maximum flight time is limited to 80 mins,
- Operations are limited to one flight, and
- No combustible material is carried in any compartment.

Note

- If PACK fault triggering cause is not identified by NAMS System Maintenance Advisory (SMA), [Refer to MOP.21.50-02 Flow Control Valve \(FCV\)](#).
- [Refer to Item 21-30-01-01 MOP.21.30-01-01 Pressurization System - Passenger Configuration](#) or [Refer to Item 21-30-01-02 MOP.21.30-01-02 Pressurization System - Cargo Configuration](#).

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°24
---	---	--------------------------------

cont'd... >>>

See Operational procedure MOP.21.50-01P Pack (O)

21-50-01P Pack (O)

e2f8d605-6f7f-48de-ad4b-4803b0856c47		01 AUG 2024
		1192-1568

As an in-flight failure could imply total loss of pressurization, fuel consumption at 10 000 ft must be taken into account to compute the trip fuel.

Note

With a pack selected OFF, engine torque parameter of the related side will increase.

► PL (Affected engine)..... ADJUST TO OTHER ENGINE

6c39ec61-ad0b-4859-9fcc-620a2ae1754a		31 MAY 2024
		1658-1718

1) One Pack Inoperative

■ In case of ETOPS Operations (A) and (C)

Affected PACK is selected OFF.

Refer to [QRH - PACK 1 + 2 FAULT AFM Abnormal Procedure](#) (Max flight time is limited to 80 mins in case of loss of ERAV in flight).

As an in-flight failure could imply total loss of pressurization, fuel consumption at 10 000 ft must be taken into account to compute the trip fuel.

Note

Note: With a pack selected OFF, engine torque parameter of the related side will increase.

► PL (Affected engine)..... ADJUST TO OTHER ENGINE

- OR -

■ In case of One Pack Inoperative (B) and (D)

Affected PACK is selected OFF.

As an in-flight failure could imply total loss of pressurization, fuel consumption at 10 000 ft must be taken into account to compute the trip fuel.

Note

Note: With a pack selected OFF, engine torque parameter of the related side will increase.

► PL (Affected engine)..... ADJUST TO OTHER ENGINE

- OR -

2) Both Packs Inoperative

■ In case of Both Packs Inoperative (E) and (G)

Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft.

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°25
---	---	--------------------------------

cont'd... >>>

Unpressurized Flight

Limitation

Maximum operating altitude 10 000 ft

Normal Procedures

- ▶ OVBD VALVE FULL OPEN
- ▶ CAB PRESS MODE SEL MAN
- ▶ MAN RATE knob MAX INCREASE
- ▶ BLEED VALVE..... ON

Note

Control aircraft vertical speed to take into account passenger comfort.

Both PACKs are selected OFF.

[Refer to QRH - PACK 1 + 2 FAULT AFM Abnormal Procedure](#) (Max flight time is limited to 80 mins in case of loss of ERAV in flight).

- OR -

■ In case of Both Packs Inoperative (F) and (H)

Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft.

Unpressurized Flight

Limitation

Maximum operating altitude 10 000 ft

Normal Procedures

- ▶ OVBD VALVE FULL OPEN
- ▶ CAB PRESS MODE SEL MAN
- ▶ MAN RATE knob MAX INCREASE
- ▶ BLEED VALVE..... ON

Note

Control aircraft vertical speed to take into account passenger comfort.

Both PACKs are selected OFF.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°26
---	--	--

21-50-02 Flow Control Valve (FCV)

dc37a322-14d5-43e2-af60-fcc44582ad0a	01 AUG 2024
	1658-1718
	EASA - APPROVED

21-50-02A ONE FCV INOPERATIVE - ETOPS Operations (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	<u>YES</u>

One may be inoperative provided:

- (a) Associated pack is selected OFF,
- (b) Emergency Ram Air Valve is checked operative,
- (c) Maximum operating altitude is limited to 17 000 ft,
- (d) Affected Flow control Valve (FCV) is secured CLOSED, and
- (e) Operations are allowed only for ground temperature equal or greater than ISA (15 °C/59 °F at sea level).

Note

Ground temperature should be checked during pre-flight check for departure and arrival airport.

See Operational procedure MOP.21.50-02P Flow Control Valve (FCV) (O)
See Maintenance procedure MMP.21.50-02 Flow Control Valve (FCV) (M)

- OR -

21-50-02B ONE FCV INOPERATIVE (B)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	<u>YES</u>

One may be inoperative provided:

- (a) Associated pack is selected OFF,
- (b) Maximum operating altitude is limited to 17 000 ft, and
- (c) Affected Flow control Valve (FCV) is secured CLOSED.

See Operational procedure MOP.21.50-02P Flow Control Valve (FCV) (O)
See Maintenance procedure MMP.21.50-02 Flow Control Valve (FCV) (M)

- OR -

21-50-02C BOTH FCVs INOPERATIVE (C)

RI	NI	NR	PLACARD	O	M
A	2	0	YES	<u>YES</u>	<u>YES</u>

Both may be inoperative provided:

- (a) Both Flow Control Valves (FCV) are secured CLOSED,
- (b) Both packs are considered inoperative, and
- (c) Operations are limited to one flight.

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°27
---	---	-------------------------

cont'd... >>>

Note

For both packs inoperative, [Refer to Item 21-50-01 MOP.21.50-01 Pack](#).

See Operational procedure MOP.21.50-02P Flow Control Valve (FCV) (O)

See Maintenance procedure MMP.21.50-02 Flow Control Valve (FCV) (M)

21-50-02P Flow Control Valve (FCV) (O)

a37fca68-0015-4804-a367-9f15f8387d6a

24 JUL 2020

1658-1718

■ In case of ETOPS Operations (A)

[Refer to Item # 21-50-01, One Pack inoperative \(O\).](#)

[Refer to QRH - PACK 1 + 2 FAULT AFM Abnormal Procedure](#) (Max flight time is limited to 80 mins in case of loss of ERAV in flight).

- OR -

■ In case of ONE FCV INOPERATIVE (B)

[Refer to Item # 21-50-01, One Pack inoperative \(O\).](#)

- OR -

■ In case of BOTH FCVs INOPERATIVE (C)

[Refer to Item # 21-50-01, Both Packs inoperative \(O\).](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°28
---	---	--------------------------------

21-50-03 Integrated Air System Controller (IASC)

dcd1dd51-987f-4c6e-850c-b4799732f1f3	01 AUG 2024
	1658-1718
	EASA - APPROVED

21-50-03A INTEGRATED AIR SYSTEM CONTROLLER CHANNEL A (A)

RI	NI	NR	PLACARD	O	M
B	1	0	NO	YES	YES

Channel A may be inoperative provided that:

- (a) Left Bleed is considered inoperative,
- (b) Left Pack is considered inoperative,
- (c) OUTFLOW "BK UP" automatic pressurization mode on CPCS is inoperative,
- (d) MAN SOURCE SEL is inoperative,
- (e) Opposite channel is operative,
- (f) Maximum operating altitude is limited to 17 000 ft,
- (g) OUTFLOW "NORM" automatic pressurization mode on CPCS is checked operative,
- (h) Right pack and bleed is checked operative, and
- (i) ERAV is checked operative.

Note

- For one pack inoperative, [Refer to Item 21-50-01MOP.21.50-01 Pack](#),
- For one bleed valve inoperative, [Refer to Item 36-11-02-01MOP.36.11-02-01 BLEED Valve - Passenger Configuration](#) or [Refer to Item 36-11-02-02MOP.36.11-02-02 BLEED Valve - Cargo Configuration](#),
- For automatic pressurization control (D), [Refer to Item 21-31-01MOP.21.31-01 Automatic Pressurization Control](#).

See Operational procedure [MOP.21.50-03P Integrated Air System Controller \(IASC\) \(O\)](#)

See Maintenance procedure [MMP.21.50-03 Integrated Air System Controller \(IASC\) \(M\)](#)

- OR -

21-50-03B INTEGRATED AIR SYSTEM CONTROLLER CHANNEL B (B)

RI	NI	NR	PLACARD	O	M
B	1	0	NO	YES	YES

Channel B may be inoperative provided that:

- (a) Right Bleed is considered inoperative,
- (b) Right Pack is considered inoperative,
- (c) OUTFLOW "NORM" automatic pressurization mode on CPCS is inoperative,
- (d) Opposite channel is operative,

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°29
---	---	--------------------------------

cont'd... >>>

- (e) Maximum operating altitude is limited to 17 000 ft,
- (f) OUTFLOW "BK UP" automatic pressurization mode on CPCS is checked operative,
- (g) Left pack and bleed is checked operative, and
- (h) ERAV checked operative.

Note

- For one pack inoperative, [Refer to Item 21-50-01MOP.21.50-01 Pack](#),
- For one bleed valve inoperative, [Refer to Item 36-11-02-01MOP.36.11-02-01 BLEED Valve - Passenger Configuration](#) or [Refer to Item 36-11-02-02MOP.36.11-02-02 BLEED Valve - Cargo Configuration](#),
- For automatic pressurization control (C), [Refer to Item 21-31-01MOP.21.31-01 Automatic Pressurization Control](#).

See Operational procedure MOP.21.50-03P Integrated Air System Controller (IASC) (O)

See Maintenance procedure MMP.21.50-03 Integrated Air System Controller (IASC) (M)

- OR -

21-50-03C INTEGRATED AIR SYSTEM CONTROLLER (CHANNEL A+B) - PASSENGER CONFIGURATION (C)

RI	NI	NR	PLACARD	O	M
A	1	0	NO	YES	YES

May be inoperative provided:

- (a) [ETOPS](#) Operations are not conducted,
- (b) Both packs are selected OFF,
- (c) Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft,
- (d) Pressurization system is considered inoperative,
- (e) Emergency Ram Air ventilation is checked operative, and
- (f) Operations are limited to one [flight](#).

Note

[Refer to Item 21-30-01-01MOP.21.30-01-01 Pressurization System - Passenger Configuration](#) or [Refer to Item 21-30-01-02MOP.21.30-01-02 Pressurization System - Cargo Configuration](#).

See Operational procedure MOP.21.50-03P Integrated Air System Controller (IASC) (O)

See Maintenance procedure MMP.21.50-03 Integrated Air System Controller (IASC) (M)

- OR -

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°30
---	---	-------------------------

cont'd... >>>

21-50-03D INTEGRATED AIR SYSTEM CONTROLLER (CHANNEL A+B) - CARGO CONFIGURATION (D)

RI	NI	NR	PLACARD	O	M
A	1	0	NO	<u>YES</u>	<u>YES</u>

May be inoperative provided:

- (a) ETOPS Operations are not conducted,
- (b) Both packs are selected OFF,
- (c) Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft,
- (d) Pressurization system is considered inoperative,
- (e) Emergency Ram Air ventilation is checked operative,
- (f) Operations are limited to one flight, and
- (g) No combustible material is carried in any compartment.

Note

Refer to Item 21-30-01-01MOP.21.30-01-01 Pressurization System - Passenger Configuration or Refer to Item 21-30-01-02MOP.21.30-01-02 Pressurization System - Cargo Configuration.

See Operational procedure MOP.21.50-03P Integrated Air System Controller (IASC) (O)

See Maintenance procedure MMP.21.50-03 Integrated Air System Controller (IASC) (M)

21-50-03P Integrated Air System Controller (IASC) (O)

5dfbbc08-2677-4c7d-ae59-fa6ed0fd8b01	31 MAY 2024
	1658-1718

■ In case of INTEGRATED AIR SYSTEM CONTROLLER CHANNEL A (A)

Left BLEED is selected OFF, Refer to Item # 36-11-02, One Bleed inoperative (O).

Left PACK is selected OFF, Refer to Item # 21-50-01, One Pack inoperative (O).

Refer to QRH - PACK 1 + 2 FAULT AFM Abnormal Procedure (Max flight time is limited to 80 mins in case of loss of ERAV in flight).

- OR -

■ In case of INTEGRATED AIR SYSTEM CONTROLLER CHANNEL B (B)

Right BLEED is selected OFF, Refer to Item # 36-11-02, One Bleed inoperative (O).

Right PACK is selected OFF, Refer to Item # 21-50-01, One Pack inoperative (O).

Refer to QRH - PACK 1 + 2 FAULT AFM Abnormal Procedure (Max flight time is limited to 80 mins in case of loss of ERAV in flight).

- OR -

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°31
---	---	--------------------------------

cont'd... >>>

■ **In case of INTEGRATED AIR SYSTEM CONTROLLER (CHANNEL A+B) - PASSENGER CONFIGURATION (C)**

Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft.

Unpressurized Flight

Limitation

Maximum operating altitude 10 000 ft

Normal Procedures

- ▶ OVBD VALVE FULL OPEN
- ▶ CAB PRESS MODE SEL MAN
- ▶ MAN RATE knob MAX INCREASE
- ▶ BLEED VALVE..... ON

Note

Control aircraft vertical speed to take into account passenger comfort.

Both PACKs are selected OFF.

[Refer to QRH - PACK 1 + 2 FAULT AFM Abnormal Procedure](#) (Max flight time is limited to 80 mins in case of loss of ERAV in flight).

- OR -

■ **In case of INTEGRATED AIR SYSTEM CONTROLLER (CHANNEL A+B) - CARGO CONFIGURATION (D)**

Flight is conducted in an unpressurized configuration with maximum operating altitude limited to 10 000 ft.

Unpressurized Flight

Limitation

Maximum operating altitude 10 000 ft

Normal Procedures

- ▶ OVBD VALVE FULL OPEN
- ▶ CAB PRESS MODE SEL MAN
- ▶ MAN RATE knob MAX INCREASE
- ▶ BLEED VALVE..... ON

Note

Control aircraft vertical speed to take into account passenger comfort.

Both PACKs are selected OFF.

[Refer to QRH - PACK 1 + 2 FAULT AFM Abnormal Procedure](#) (Max flight time is limited to 80 mins in case of loss of ERAV in flight).

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°32
---	---	-------------------------

21-50-04

Pack Temperature Sensor Channels (PTS)

8d5af000-aa18-4a41-a48d-d4dde3e0a983		08 APR 2020
		1658-1718
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	<u>YES</u>

Both sensors may be inoperative provided:

(a) Pack Discharge Temperature Sensors (PDTs) are verified operative.

See Maintenance procedure [MMP.21.50-04 Pack Temperature Sensor Channels \(PTS\) \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°33
---	---	--------------------------------

21-50-05 Pack Inlet Temperature Sensor (PITS)

85418baf-077b-400d-b080-e281fa27bfb6

08 APR 2020

1658-1718

EASA - APPROVED

21-50-05A ONE CHANNEL ON ONE SENSOR (A)

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

May be inoperative.

- OR -

21-50-05B ONE SENSOR INOPERATIVE (B)

RI	NI	NR	PLACARD	O	M
-	2	1	NO	<u>YES</u>	<u>YES</u>

Both channels on one sensor may be inoperative provided:

(a) Associated pack is considered inoperative.

Note

For one pack inoperative, Refer to Item 21-50-01MOP.21.50-01 Pack.

See Operational procedure MOP.21.50-05P Pack Inlet Temperature Sensor (PITS) (O)

See Maintenance procedure MMP.21.50-05 Pack Inlet Temperature Sensor (PITS) (M)

- OR -

21-50-05C BOTH SENSOR INOPERATIVE (C)

RI	NI	NR	PLACARD	O	M
-	2	0	NO	<u>YES</u>	<u>YES</u>

Both sensors may be inoperative provided:

(a) Both packs are considered inoperative.

Note

For both packs inoperative, Refer to Item 21-50-01MOP.21.50-01 Pack.

See Operational procedure MOP.21.50-05P Pack Inlet Temperature Sensor (PITS) (O)

See Maintenance procedure MMP.21.50-05 Pack Inlet Temperature Sensor (PITS) (M)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°34
---	---	--

21-50-05P Pack Inlet Temperature Sensor (PITS) (O)

1a4190b6-617a-4b26-a9ea-89172e050b1b		24 JUL 2020
		1658-1718

■ In case of ONE SENSOR INOPERATIVE (B)

[Refer to Item # 21-50-01 One pack inoperative \(O\).](#)

- OR -

■ In case of BOTH SENSOR INOPERATIVE (C)

[Refer to Item # 21-50-01 Both pack inoperative \(O\).](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°35
---	---	--------------------------------

21-50-06 Compressor Discharge Temperature Sensor (CDTS)

83e9c70a-8c2d-400f-80ab-da37ce6c4138	08 APR 2020
1658-1718	
EASA - APPROVED	

21-50-06A ONE CHANNEL ON ONE SENSOR (A)

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

May be inoperative.

- OR -

21-50-06B ONE SENSOR INOPERATIVE (B)

RI	NI	NR	PLACARD	O	M
-	2	1	NO	YES	YES

Both channels on one sensor may be inoperative provided:

(a) Associated PACK is considered inoperative.

Note

For one pack inoperative, [Refer to Item 21-50-01MOP.21.50-01 Pack](#).

See Operational procedure MOP.21.50-06P Compressor Discharge Temperature Sensor (CDTS) (O)

See Maintenance procedure MMP.21.50-06 Compressor Discharge Temperature Sensor (CDTS) (M)

- OR -

21-50-06C BOTH SENSORS INOPERATIVE (C)

RI	NI	NR	PLACARD	O	M
-	2	0	NO	YES	YES

Both sensors may be inoperative provided:

(a) Both PACKs are considered inoperative.

Note

For both packs inoperative, [Refer to Item 21-50-01MOP.21.50-01 Pack](#).

See Operational procedure MOP.21.50-06P Compressor Discharge Temperature Sensor (CDTS) (O)

See Maintenance procedure MMP.21.50-06 Compressor Discharge Temperature Sensor (CDTS) (M)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°36
---	---	--------------------------------

21-50-06P Compressor Discharge Temperature Sensor (CDTS) (O)

0023c718-af75-47e1-a953-340e42ac5c2c		24 JUL 2020
		1658-1718

■ In case of ONE SENSOR INOPERATIVE (B)

[Refer to Item 21-50-01 One pack inoperative \(O\).](#)

- OR -

■ In case of BOTH SENSOR INOPERATIVE (C)

[Refer to Item 21-50-01 Both packs inoperative \(O\).](#)

21-50-07 Pack Inlet Pressure Sensor (PIPS)

7c6e9a17-460f-4ca6-b806-e1ff3cff9533		08 APR 2020
		1658-1718
		EASA - APPROVED

21-50-07A ONE SENSOR INOPERATIVE (A)

RI	NI	NR	PLACARD	O	M
-	2	1	NO	YES	YES

One sensor may be inoperative provided:

(a) Associated Pack is considered inoperative.

Note

For one pack inoperative, [Refer to Item 21-50-01 MOP.21.50-01 Pack.](#)

[See Operational procedure MOP.21.50-07P Pack Inlet Pressure Sensor \(PIPS\) \(O\)](#)

[See Maintenance procedure MMP.21.50-07 Pack Inlet Pressure Sensor \(PIPS\) \(M\)](#)

- OR -

21-50-07B BOTH SENSORS INOPERATIVE (B)

RI	NI	NR	PLACARD	O	M
-	2	0	NO	YES	YES

Both sensors may be inoperative provided:

(a) Both Packs are considered inoperative.

Note

For both packs inoperative, [Refer to Item 21-50-01 MOP.21.50-01 Pack.](#)

[See Operational procedure MOP.21.50-07P Pack Inlet Pressure Sensor \(PIPS\) \(O\)](#)

[See Maintenance procedure MMP.21.50-07 Pack Inlet Pressure Sensor \(PIPS\) \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°37
---	---	-----------------------------

21-50-07P Pack Inlet Pressure Sensor (PIPS) (O)

d4b257bc-1dea-4dc5-a925-6719de982d6c

24 JUL 2020

1658-1718

■ In case of ONE SENSOR INOPERATIVE (A)

[Refer to Item 21-50-01 One Pack Inoperative \(O\).](#)

- OR -

■ In case of BOTH SENSORS INOPERATIVE (B)

[Refer to Item 21-50-01 Both Packs Inoperative \(O\).](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°38
---	---	--------------------------------

21-50-08 Pack Discharge Temperature Sensor (PDTs)

946bc1f3-d5d3-4dbe-8c1d-7af5ddb5d1ad	11 APR 2025
	1658-1718
	EASA - APPROVED

21-50-08A ONE CHANNEL ON ONE SENSOR (A)

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

May be inoperative.

- OR -

21-50-08B ONE SENSOR INOPERATIVE (B)

RI	NI	NR	PLACARD	O	M
-	2	1	NO	<u>YES</u>	<u>YES</u>

One sensor may be inoperative provided:
(a) Associated Pack is considered inoperative.

Note

For one pack inoperative, Refer to Item 21-50-01MOP.21.50-01 Pack.

See Operational procedure MOP.21.50-08P Pack Discharge Temperature Sensor (PDTs) (O)

See Maintenance procedure MMP.21.50-08 Pack Discharge Temperature Sensor (PDTs) (M)

- OR -

21-50-08C BOTH SENSORS INOPERATIVE (C)

RI	NI	NR	PLACARD	O	M
-	2	0	NO	<u>YES</u>	<u>YES</u>

Both sensors may be inoperative provided:
(a) Both Packs are considered inoperative.

Note

For both packs inoperative, Refer to Item 21-50-01MOP.21.50-01 Pack.

See Operational procedure MOP.21.50-08P Pack Discharge Temperature Sensor (PDTs) (O)

See Maintenance procedure MMP.21.50-08 Pack Discharge Temperature Sensor (PDTs) (M)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°39
---	---	--------------------------------

21-50-08P Pack Discharge Temperature Sensor (PDTs) (O)

ba6942cf-fd09-4b99-8fb4-8e45f3915643

24 JUL 2020

1658-1718

■ In case of ONE SENSOR INOPERATIVE (B)

[Refer to Item 21-50-01 One Pack Inoperative \(O\).](#)

- OR -

■ In case of BOTH SENSORS INOPERATIVE (C)

[Refer to Item 21-50-01 Both Packs Inoperative \(O\).](#)

21-50-09 Pack Discharge Pressure Sensor (PDPS)

8394a763-3404-4c22-a072-746abab67b96

08 APR 2020

1658-1718

EASA - APPROVED

21-50-09A ONE SENSOR INOPERATIVE (A)

RI	NI	NR	PLACARD	O	M
-	2	1	NO	YES	YES

One sensor may be inoperative provided:

(a) Associated Pack is considered inoperative.

Note

For one pack inoperative, [Refer to Item 21-50-01MOP.21.50-01 Pack.](#)

[See Operational procedure MOP.21.50-09P Pack Discharge Pressure Sensor \(PDPS\) \(O\)](#)

[See Maintenance procedure MMP.21.50-09 Pack Dispatch Pressure Sensor \(PDPS\) \(M\)](#)

- OR -

21-50-09B BOTH SENSORS INOPERATIVE (B)

RI	NI	NR	PLACARD	O	M
-	2	0	NO	YES	YES

Both sensors may be inoperative provided:

(a) Both packs are considered inoperative.

Note

For both packs inoperative, [Refer to Item 21-50-01MOP.21.50-01 Pack.](#)

[See Operational procedure MOP.21.50-09P Pack Discharge Pressure Sensor \(PDPS\) \(O\)](#)

[See Maintenance procedure MMP.21.50-09 Pack Dispatch Pressure Sensor \(PDPS\) \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°40
---	---	--------------------------------

21-50-09P
Pack Discharge Pressure Sensor (PDPS) (O)

98367612-b6a1-4801-8434-d572cf82e05e		24 JUL 2020
		1658-1718

- In case of **ONE SENSOR INOPERATIVE (A)**
[Refer to Item 21-50-01 One pack inoperative \(O\).](#)
- OR -
- In case of **BOTH SENSORS INOPERATIVE (B)**
[Refer to Item 21-50-01 Both Packs inoperative \(O\).](#)

21-51-01
Pack Valve

1adcb611-0eaf-4441-bca8-8034583904d8		27 MAY 2015
		1192-1568
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	2	1	YES	YES	YES

One may be inoperative provided that:

- (a) It is secured closed, and
- (b) Associated pack is considered inoperative: [Refer to Item 21-50-01Pack](#) .

See Operational procedure [MOP.21.51-01P Pack Valve \(O\)](#)
See Maintenance procedure [MMP.21.51-01 Pack Valve \(M\)](#)

21-51-01P
Pack Valve (O)

b08f6f04-bff3-4991-a7a2-a7e9660cb00c		01 AUG 2024
		1192-1568

As an in-flight failure could imply total loss of pressurization, fuel consumption at 10 000 ft must be taken into account to compute the trip fuel.

Note

With a pack selected OFF, engine torque parameter of the related side will increase.

► PL (Affected engine)..... ADJUST TO OTHER ENGINE

21-51-02
PACK FAULT Alert

94c4abf4-6bb2-4466-a9af-a7159f70213e		07 OCT 2020
		1192-1568
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	2	1	YES	YES	NO

One may be inoperative provided that associated pack is considered inoperative: [Refer to Item 21-50-01Pack](#) .

See Operational procedure [MOP.21.51-02P PACK FAULT Alert \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°41
---	---	--------------------------------

cbffec1b-7779-4484-9c55-fdc7549f9d42	08 APR 2020
1658-1718	
EASA - APPROVED	

21-51-02A PACK FAULT Alert (A)

RI	NI	NR	PLACARD	O	M
-	2	1	YES	YES	YES

One may be inoperative provided that associated pack is considered inoperative.

Note

For one pack inoperative, [Refer to Item 21-50-01MOP.21.50-01 Pack](#).

See Operational procedure MOP.21.51-02P PACK FAULT Alert (O)

See Maintenance procedure MMP.21.51-02 Pack FAULT Alert (M)

- OR -

21-51-02B PACK FAULT Alert (B)

RI	NI	NR	PLACARD	O	M
-	2	0	YES	YES	YES

Both may be inoperative provided that both packs are considered inoperative.

Note

For both packs inoperative, [Refer to Item 21-50-01MOP.21.50-01 Pack](#).

See Operational procedure MOP.21.51-02P PACK FAULT Alert (O)

See Maintenance procedure MMP.21.51-02 Pack FAULT Alert (M)

21-51-02P PACK FAULT Alert (O)

defb4e07-4528-4760-9dce-dae0a97e9458	01 AUG 2024
1192-1568	

As an in-flight failure could imply total loss of pressurization, fuel consumption at 10 000 ft must be taken into account to compute the trip fuel.

Note

With a pack selected OFF, engine torque parameter of the related side will increase.

► PL (Affected engine)..... ADJUST TO OTHER ENGINE

97926931-2d3b-4d66-a199-75382979240b	07 SEP 2020
1658-1718	

[Refer to Item # 21-50-01 Pack - One Pack Inoperative \(O\)](#)

- OR -

[Refer to Item # 21-50-01 Pack - Both Packs Inoperative\(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°42
---	---	--------------------------------

21-51-03 Cooling FAN

Turbo Fan

3c846c29-34ad-48e6-9510-0072481375d8		02 NOV 2020
		1192-1568
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative provided that:

- (a) Affected pack is not used on ground, and
- (b) Cruise level is chosen to allow a 150 kt minimum IAS with one engine inoperative.

21-51-06 Ram Air Water Sprayer (WS)

6ccab4d9-3d2e-4542-8f67-4f96704d19ce		08 APR 2020
		1658-1718
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or both may be inoperative.

21-51-07 Water Extractor (WE)

6dc49039-014d-47c6-b952-d65beea3fe3d		08 APR 2020
		1658-1718
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or both may be inoperative.

21-51-08 Mix Manifold Temperature Sensor (MIXTS)

db132c04-f455-4f4d-9e1a-f25e5315b1d4		01 AUG 2024
		1658-1718
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	<u>YES</u>

One or both sensors may be inoperative provided:

- (a) Associated Pack Discharge Temperature Sensor (PDTS) is verified operative.

See Maintenance procedure MMP.21.51-08 Mix Manifold Temperature Sensor (MIXTS) (M)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°43
---	---	-------------------------

21-51-09 Ventilated Temperature Sensor (VENTS)

b0347f02-ecdc-42e9-9dbf-b12cbae0e0a0	08 APR 2020
	1658-1718
	EASA - APPROVED

21-51-09A Ventilated Temperature Sensor (VENTS) (A)

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	YES

One may be inoperative provided:

(a) Associated MIXTS is verified operative.

[See Maintenance procedure MMP.21.51-09 Ventilated Temperature Sensor \(VENTS\) \(M\)](#)

- OR -

21-51-09B Ventilated Temperature Sensor (VENTS) (B)

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	YES

Both may be inoperative provided:

(a) Both MIXTS are verified operative.

[See Maintenance procedure MMP.21.51-09 Ventilated Temperature Sensor \(VENTS\) \(M\)](#)

21-61-01 Pack AUTO Temperature Control

6b73ede0-5eb5-498d-9917-8b50544f3ae3	16 FEB 2018
	ALL
	EASA - APPROVED

21-61-01A (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	NO

One may be inoperative provided that associated pack MAN temperature control is operative.

See Operational procedure [MOP.21.61-01P Pack AUTO Temperature Control \(O\)](#)

- OR -

21-61-01B (B)

RI	NI	NR	PLACARD	O	M
-	2	1	YES	NO	NO

One may be inoperative provided that associated pack is considered inoperative:

[Refer to Item 21-50-01Pack](#)

21-61-01P Pack AUTO Temperature Control (O)

37b40015-ea04-46cc-9735-d255d6693ae8	15 NOV 2017
	ALL

- ▶ TEMP SEL (affected side)..... MAN
- ▶ Adjust manually the associated pack discharge temperature to obtain the same duct indication as the opposite pack.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°45
---	---	--------------------------------

21-61-02 Pack MAN Temperature Control

bd93409f-6705-4ef1-9146-e01869f7f628	27 MAY 2015
ALL	
EASA - APPROVED	

21-61-02A (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One may be inoperative provided that associated pack AUTO temperature control is operative.

- OR -

21-61-02B (B)

RI	NI	NR	PLACARD	O	M
-	2	1	YES	NO	NO

One may be inoperative provided that associated pack is considered inoperative:

[Refer to Item 21-50-01Pack](#)

21-61-03 OVHT Alert

b1a842ed-23cd-4017-a063-c8d8af8804d6	19 OCT 2020
1192-1568	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	2	1	YES	YES	NO

One may be inoperative provided that associated DUCT temperature indication is operative.

[See Operational procedure MOP.21.61-03P OVHT Alert \(O\)](#)

21-61-03P OVHT Alert (O)

12273e59-2d39-4122-964f-c982fdb5fe0	27 MAY 2015
1192-1568	

- Monitor and maintain DUCT indication below 92 °C / 200 °F .

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°46
---	---	--------------------------------

21-61-04 Ram Air Regulating Valve (RARV)

121a3c0a-e6e8-459a-bf00-b4c0a8dd3c68		08 APR 2020
		1658-1718
		EASA - APPROVED

21-61-04A Ram Air Regulating Valve (RARV) (A)

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

One may be inoperative.

- OR -

21-61-04B Ram Air Regulating Valve (RARV) (B)

RI	NI	NR	PLACARD	O	M
C	2	0	NO	<u>YES</u>	<u>YES</u>

Both may be inoperative provided:

(a) Emergency Ram Air Valve is verified operative.

See Operational procedure [MOP.21.61-04P Ram Air Regulating Valve \(RARV\) \(O\)](#)

See Maintenance procedure [MMP.21.61-04 Ram Air Regulating Valve \(RARV\) \(M\)](#)

21-61-04P Ram Air Regulating Valve (RARV) (O)

2387ee7f-fb41-4fc6-9ee0-937f4076a68d		24 JUL 2020
		1658-1718

■ In case of Ram Air Regulating Valve (RARV) (B)

[Refer to QRH - PACK 1 + 2 FAULT AFM Abnormal Procedure](#) (Max flight time is limited to 80 mins in case of loss of ERAV in flight).

21-63-01-01 COMPT TEMP - Flight Deck Indication

4a896937-f503-4b71-85fa-1fba921daf49		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 21 AIR CONDITIONING	MOP.21 Page n°47
---	---	-------------------------

21-63-01-02 COMPT TEMP - Cabin Indications

92ba9b81-6011-4e03-a075-7fca7b596337

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative.

21-63-02 DUCT Indication

8453943e-d024-475a-88f8-b15734424671

22 SEP 2022

ALL

EASA - APPROVED

21-63-02A (A)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative provided that AUTO temperature control is operative for the associated zones.

- OR -

21-63-02B (B)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative provided that COMPT indication and MAN temperature control are operative for the associated zones.

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MOP.22 Page n°01
---	--	--------------------------------

22-16-01 Pitch Wheel

03416700-71b2-4e98-a647-855d883b27c3		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that one TCS is operative.

22-16-02 Touch Control Steering (TCS)

274faea3-f15d-48c5-bdc3-c44dbb7f7b1f		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	YES	YES	NO

One or both may be inoperative.

See Operational procedure MOP.22.16-02P Touch Control Steering (TCS) (O)

22-16-02P Touch Control Steering (TCS) (O)

1415bc2b-bac6-4b1b-9023-aaca5201b101		27 MAY 2015
		ALL

■ Prior to any manual control movement:

► AUTOPILOT.....DISENGAGE

22-16-03 Coupling Function Pushbutton

f03e99d1-8462-4077-9a4f-1d266a9dcb7f		14 MAY 2025
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	NO

May be inoperative provided that the **pilot flying** is on the selected side.

Note

NO GO in case of FTA.

See Operational procedure MOP.22.16-03P Coupling Function Pushbutton (O)

22-16-03P Coupling Function Pushbutton (O)

2a38dfbf-09de-4e0d-b52f-67ddcf0001b1		27 MAY 2015
		ALL

In flight, autopilot remains coupled to the side selected before pushbutton failure.

For a new dispatch, it will be automatically coupled to the LH side after being energized.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MOP.22 Page n°02
---	--	--------------------------------

22-16-04 Autopilot Quick Disconnect Pushbutton (Quick Release Control)

daefa7dc-d6c2-41b4-9009-13fe86c03f8c		12 JUL 2016
		ALL
		EASA - APPROVED

22-16-04A (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	<u>YES</u>

One may be inoperative provided that the **pilot flying** side autopilot quick disconnect pushbutton is operative.

See Maintenance procedure [MMP.22.16-04 Autopilot Quick Disconnect \(Quick Release Control\) \(M\)](#)

- OR -

22-16-04B (B)

RI	NI	NR	PLACARD	O	M
-	2	0	YES	NO	NO

One or both may be inoperative provided that autopilot is considered inoperative and not used.

[Refer to Item 22-18-01 Autopilot Function](#) .

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MOP.22 Page n°03
---	--	--------------------------------

22-18-01 Autopilot Function

d9372ba8-5aef-4174-8228-e3746ce95cf6

14 MAY 2025

ALL

22-18-01A ETOPS Operations (A)

RI	NI	NR	PLACARD	O	M
A	1	0	YES	NO	NO

May be inoperative provided that operations are limited to one calendar day.
Exceeding 4 consecutive flight legs, a supplementary flight officer must reinforce the crew ([Refer to - A040105 CAS PARTICULIER](#)).

Note

If AFCS Computer is inoperative Autopilot, Yaw Damper, and Flight Director functions are lost.

[Refer to Item 22-18-02 Flight Director Function](#)

[Refer to Item 22-18-03 Yaw Damper Function](#)

- OR -

22-18-01B (B)

RI	NI	NR	PLACARD	O	M
B	1	0	YES	NO	NO

May be inoperative provided that ETOPS Operations are not conducted.
Exceeding 4 consecutive flight legs, a supplementary flight officer must reinforce the crew ([Refer to - A040105 CAS PARTICULIER](#)).

Note

- 1) Any mode which is operative may be used, refer to appropriate operative mode.
- 2) If AFCS Computer is inoperative Autopilot, Yaw Damper, and Flight Director functions are lost.

[Refer to Item 22-18-02 Flight Director Function](#)

[Refer to Item 22-18-03 Yaw Damper Function](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MOP.22 Page n°04
---	--	--------------------------------

22-18-02 Flight Director Function

a65f20be-98c4-4c5a-b55e-ef08a7586dac		22 SEP 2022
ALL		

RI	NI	NR	PLACARD	O	M
-	1	0	YES	NO	NO

May be inoperative. SID / STAR RNAV and RNP APCH must not be conducted.

[Refer to Item 22-18-03 Yaw Damper Function.](#)

Note

If AFCS Computer is inoperative Autopilot, Yaw Damper, and Flight Director functions are lost.

[Refer to Item 22-18-01 Autopilot Function](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MOP.22 Page n°05
---	--	--------------------------------

22-18-03 Yaw Damper Function

60985d06-e737-4d34-a6de-d8f75191b0f7

24 JUN 2025

ALL

22-18-03A RCU inoperative (A)

RI	NI	NR	PLACARD	O	M
A	1	0	YES	YES	NO

May be inoperative provided that the operations are limited to two [flights](#).

Note

- 1) The Autopilot is inoperative, [Refer to Item 22-18-01 Autopilot Function](#).
- 2) If AFCS Computer is inoperative, Autopilot, Yaw Damper and Flight Director functions are lost.
[Refer to Item 22-18-02 Flight Director Function](#).

NO GO in case of FTA .

[See Operational procedure Yaw Damper Function \(O\)](#)

- OR -

22-18-03B RCU operative (B)

RI	NI	NR	PLACARD	O	M
B	1	0	YES	YES	YES

May be inoperative provided that RCU is operative.

Note

- 1) The Autopilot is inoperative, [Refer to Item 22-18-01 Autopilot Function](#).
- 2) If AFCS Computer is inoperative, Autopilot, Yaw Damper and Flight Director functions are lost.
[Refer to Item 22-18-02 Flight Director Function](#).

NO GO in case of FTA .

[See Operational procedure Yaw Damper Function \(O\)](#)

[See Maintenance procedure Yaw Damper Function \(M\)](#)

22-18-03P Yaw Damper Function (O)

2e8fc6f3-2cf4-472a-bd7a-5707c9604125

25 OCT 2019

ALL

■ If RCU is inoperative

- PF will keep his feet on the pedals to be ready to control rudder.

■ If Yaw Auto Trim is inoperative

- Yaw Damper engagement is prohibited.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MOP.22 Page n°06
---	--	--------------------------------

22-50-01 FGCP - VS Pushbutton

a88aca40-1b73-45fa-ad81-e01449c8bf9c		27 MAY 2015
ALL		

22-50-01A (A)

RI	NI	NR	PLACARD	O	M
C	1	0	NO	<u>YES</u>	NO

May be inoperative provided that IAS is operative.

[See Operational procedure MOP.22.50-01P FGCP - VS Pushbutton \(O\)](#)

- OR -

22-50-01B (B)

RI	NI	NR	PLACARD	O	M
-	1	0	NO	NO	NO

May be inoperative provided that FD is considered inoperative.

[Refer to Item 22-18-02MOP.22.18-02 Flight Director Function](#)

22-50-01P FGCP - VS Pushbutton (O)

9049a685-2a27-4e9f-a362-a14f5ba89143		27 MAY 2015
ALL		

- ▶ Use the IAS or basic mode for altitude change.
- ▶ Disengage AP mode for altitude change.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MOP.22 Page n°07
---	--	--------------------------------

22-50-02 FGCP - ALT Pushbutton

f3188bcb-6d6d-43f0-ad2f-cc6b1b8e7cb4

27 MAY 2015

ALL

22-50-02A (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	NO

May be inoperative provided that ALT SEL is operative and used.

[See Operational procedure MOP.22.50-02P FGCP - ALT Pushbutton \(O\)](#)

- OR -

22-50-02B (B)

RI	NI	NR	PLACARD	O	M
C	1	0	NO	YES	NO

May be inoperative provided that VS mode with a 0 ft/min selection target is used for ALT HOLD.

[See Operational procedure MOP.22.50-02P FGCP - ALT Pushbutton \(O\)](#)

- OR -

22-50-02C (C)

RI	NI	NR	PLACARD	O	M
-	1	0	NO	NO	NO

May be inoperative provided that FD is considered inoperative.

[Refer to Item 22-18-02MOP.22.18-02 Flight Director Function](#)

22-50-02P FGCP - ALT Pushbutton (O)

b815629b-000d-4ddb-8fea-32d4e936ee2e

27 MAY 2015

ALL

IAS or VS or basic mode may be used for altitude changes in ALT SEL mode.

The Altitude can be held using VS mode with 0 ft/min selected target.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MOP.22 Page n°08
---	--	--------------------------------

22-50-03 FGCP - ALT SEL Knob

a42ba1bf-dbf0-4b5d-9b85-54c2896230ef		27 MAY 2015
ALL		

RI	NI	NR	PLACARD	O	M
B	1	0	YES	<u>YES</u>	NO

May be inoperative provided that ALT pb is operative.

See Operational procedure [MOP.22.50-03P FGCP - ALT SEL knob \(O\)](#)

22-50-03P FGCP - ALT SEL knob (O)

91905eb0-a9ce-4e6d-ae01-dbe2cdd015aa		27 MAY 2015
ALL		

IAS or VS or basic mode may be used for altitude change with ALT pb selection at requested altitude.

22-50-05 FGCP - STBY Pushbutton

0feafc5f-a847-4650-b3d9-4bdaf3822d70		27 MAY 2015
ALL		

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative.

See Operational procedure [MOP.22.50-05P FGCP - STBY Pushbutton \(O\)](#)

22-50-05P FGCP - STBY Pushbutton (O)

5f589411-1463-4d89-8237-db00c9133a4e		27 MAY 2015
ALL		

Flight crew have to deselect the current selected FD mode.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MOP.22 Page n°09
---	--	--------------------------------

22-50-06 FGCP - HDG SEL Pushbutton

5fb46014-6f90-4729-832f-05807f7518d4

27 MAY 2015

ALL

22-50-06A (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that AP Basic Modes are operative.

[See Operational procedure MOP.22.50-06P FGCP - HDG SEL Pushbutton \(O\)](#)

- OR -

22-50-06B (B)

RI	NI	NR	PLACARD	O	M
-	1	0	YES	NO	NO

May be inoperative provided that FD is considered inoperative.

[Refer to Item 22-18-02Flight Director Function](#)

22-50-06P FGCP - HDG SEL Pushbutton (O)

b0166ecf-a9eb-4ca3-b030-807469a34e2d

27 MAY 2015

ALL

HDG HOLD mode may be used as required. HDG changes must be done manually or with TCS function.

22-50-07 FGCP - HDG Knob

276fa4cd-07ca-47d3-b3ac-725290e664d3

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative.

22-50-08 FGCP - APP Pushbutton

d965af1d-5171-420d-805b-9e078d05ddea

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative.

[See Operational procedure MOP.22.50-08P FGCP - APP Pushbutton \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MOP.22 Page n°10
---	--	--------------------------------

22-50-08P FGCP - APP Pushbutton (O)

bc44d1b4-0325-486e-8600-1a82ad66e8c0

REV

26 SEP 2025

ILS and LNAV approaches are possible without FD.

CAT 2 operations are prohibited.

If GA altitude is the same as the altitude at the FAF, set ALT SEL to +300 ft. Display GA altitude after passing the FAF.

Check the VSP (ft/min) on the AIP chart based on the approach speed.

VS mode must be used at FAF.

Use vertical deviation (VDEV) on PFD to follow the vertical profile.

Note

► On PFD, only APPR green will be displayed, V-FP green will not appear.

22-50-09 FGCP - NAV Pushbutton

ba0b9ef9-9fd6-45ba-8529-60c8aab710fb

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that LNAV or VOR mode is not used.

22-50-10 FGCP - BC Pushbutton

73a8ef91-6ad3-4ac9-a16a-13f722f0898a

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative.

[See Operational procedure MOP.22.50-10P FGCP - BC Pushbutton \(O\)](#)

22-50-10P FGCP - BC Pushbutton (O)

6c518d36-5aef-4f1e-864b-36c95b3a23b7

22 SEP 2022

ALL

Back course departures or approaches are not allowed.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MOP.22 Page n°11
---	--	--------------------------------

22-50-11 FGCP - FD Pushbutton

f7f224e3-edfc-4ede-bdd6-dbd263ba733b

27 MAY 2015

ALL

22-50-11A (A)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	YES	NO

One or both may be inoperative.

[See Operational procedure MOP.22.50-11P FGCP - FD Pushbutton \(O\)](#)

- OR -

22-50-11B (B)

RI	NI	NR	PLACARD	O	M
-	2	0	YES	NO	NO

One or both may be inoperative provided that FD function is considered inoperative.

[Refer to Item 22-18-02Flight Director Function](#) .

22-50-11P FGCP - FD Pushbutton (O)

1d04a55e-0eae-436b-8ae8-ffe5acdcd3a3

22 SEP 2022

ALL

If one is inoperative, the FD pushbutton on the PF side must be operative. If two are inoperative, FD function is considered inoperative. [Refer to Item 22-18-02Flight Director Function](#)

FD bars can't be removed on affected side.

But AP is fully operational with FD bars displayed on both sides.

22-50-12 FGCP - VNAV pushbutton

438adacf-4c7a-4318-b5bd-683c9f346b38

20 JUL 2016

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	NO

May be inoperative provided VNAV mode is not used.

[See Operational procedure MOP.22.50-12P FGCP - VNAV Pushbutton \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MOP.22 Page n°12
---	--	--------------------------------

22-50-12P FGCP - VNAV Pushbutton (O)

d9d3f6f6-d0ee-4dc3-8645-8733a7c573e2		01 AUG 2024
		ALL

Flight planning for approach, departure, and planned route must take into account loss of Vertical Guidance in VNAV mode.

22-60-01 ICP - SPD TGT Knob

1cedde02-6f5c-44e5-aa0d-ccb7d1780996		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	NO

One may be inoperative provided that alternate procedures are established and used.

See Operational procedure [MOP.22.60-01P ICP - SPD TGT knob \(O\)](#)

22-60-01P ICP - SPD TGT knob (O)

7b127fca-f836-4e80-b7f1-eba90b68e30c		27 MAY 2015
		ALL

Manual SPD may be modified by SPD TGT knob of the non affected side.

Task sharing may be affected. No special procedure if speed AUTO mode is used during all the flight.

22-60-02 ICP - (AUTO - MAN) Pushbutton

76031105-177d-4bff-9de4-bbc3655cda32		27 MAY 2015
		ALL

22-60-02A (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	NO

One may be inoperative.

See Operational procedure [MOP.22.60-02P ICP - \(AUTO - MAN\) Pushbutton \(O\)](#)

- OR -

22-60-02B (B)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative provided that AUTO speed is not used.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MOP.22 Page n°13
---	--	--------------------------------

22-60-02P ICP - (AUTO - MAN) Pushbutton (O)

b843e56a-fe2d-4924-9055-2d9eee947fe5

22 SEP 2022

ALL

The AUTO/MAN P/B on the PF side is operative. Auto or manual SPD mode may be modified by AUTO/MAN pushbutton of the non affected side.

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 23 COMMUNICATIONS	MOP.23 Page n°01
---	---	-------------------------

23-11-01 HF system

1e34f2f1-18c0-4a48-b932-6e17dd4947d2		22 SEP 2022
		ALL
		EASA - APPROVED

23-11-01A Flight in H area (A)

RI	NI	NR	PLACARD	O	M
A	2	1	NO	NO	NO

One may be inoperative only for a non commercial flight back to MMS and the remaining HF system is check operative before departure.

- OR -

23-11-01B Flight in V area (B)

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or both may be inoperative for non ETOPS flights.

23-12-01-01 VHF System

9310043b-932d-4651-9026-e80aa216d6f1		01 AUG 2024
		ALL

NO GO

23-22-01 SELCAL

976ea5d2-b44d-4944-b7f0-0b20b4b6b1fe		01 AUG 2024
		1192-1350;1376-1718
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	1	0	NO	NO	NO

May be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 23 COMMUNICATIONS	MOP.23 Page n°02
---	---	--------------------------------

23-31-01-01 Passenger Address System - Passenger Configuration

ea5f4761-221b-4808-9202-72ddc03fbd0e		11 APR 2025
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	1	0	YES	<u>YES</u>	<u>YES</u>

May be inoperative provided that:

- (a) Alternate normal, abnormal and emergency procedures and/or operating restrictions are established and used, and
- (b) Operations are limited to three calendar days or three flights whichever occurs first.

See Operational procedure MOP.23.31-01-01P Passenger Address System - Passenger Configuration (O)

See Maintenance procedure Passenger Address System – Passenger Configuration (M)

23-31-01-01P Passenger Address System - Passenger Configuration (O)

237271f1-c448-40a3-98c5-5a546328986e		22 SEP 2022
		ALL

The flight attendant addresses the passengers directly.

The megaphone is used in case of emergency for passengers announcements.

In case of emergency, the interphone system is used for communications between the pilots and the flight attendants.

23-31-01-02 Passenger Address System - Cargo Configuration

fb2d2779-724e-43ca-a32f-f988e028746a		11 APR 2025
		1350;1455
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	1	0	YES	<u>YES</u>	<u>YES</u>

May be inoperative provided that alternate normal, abnormal and emergency procedures and/or operating restrictions are established and used.

See Operational procedure MOP.23.31-01-02P Passenger Address System - Cargo Configuration (O)

See Maintenance procedure Passenger Address System – Cargo Configuration (M)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 23 COMMUNICATIONS	MOP.23 Page n°03
---	---	-------------------------

23-31-01-02P Passenger Address System - Cargo Configuration (O)

21173beb-8fa6-4971-ae4e-09b4abb9733e

22 SEP 2022

ALL

No change in normal, abnormal and emergency procedures as neither passenger nor crew is allowed in the cabin.

23-44-01-01 Interphone System - Ground Call Horn

3bdd6aeb-ef6a-4672-9763-002dd79985eb

27 MAY 2015

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	NO	<u>YES</u>	NO

May be inoperative.

[See Operational procedure MOP.23.44-01-01P Interphone System - Ground Call Horn \(O\)](#)

23-44-01-01P Interphone System - Ground Call Horn (O)

5e489330-a511-4e8c-8bcf-6ae0b418d890

22 SEP 2022

ALL

No change in normal, abnormal and emergency procedures as this system is not used.

23-44-01-02 Interphone System - Flight Deck to Flight Deck

778e377d-1906-4b4c-b0b9-9545201c9b9b

27 MAY 2015

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	-	-	YES	NO	NO

[Refer to Audio Control Panel](#), and [Refer to Headset](#), and [Refer to Hand Microphone](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 23 COMMUNICATIONS	MOP.23 Page n°04
---	---	--------------------------------

23-44-01-03 Interphone System (Flight Deck to Cabin - Cabin to Flight Deck)

29746570-327e-4dba-8397-7ad961088d4e		22 SEP 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	-	-	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) Passenger Address is operative, and
- (b) Alternate normal and abnormal and emergency procedures are established and used, and
- (c) Flight deck door automatic locking system is verified to operate normally.

See Operational procedure [MOP.23.44-01-03P Interphone System \(Flight Deck to Cabin - Cabin to Flight Deck\) \(O\)](#)

23-44-01-03P Interphone System (Flight Deck to Cabin - Cabin to Flight Deck) (O)

Interphone System (Flight Deck to Cabin - Cabin to Flight Deck) (O)

fa481c57-2e6f-4cc2-a8dc-b2cbd020637a		22 SEP 2022
		ALL

The cabin attendant goes to the cockpit in case of emergency and for normal announces such as:

- «Cabine OK pour embarquement».
- «Béquille à bord, portes fermées et verrouillées»
- «Cabine prête»

If the cabin attendant is needed in the cockpit, the captain announces « PNC au cockpit », through the PA.

23-44-01-04 Interphone System - Cabin to Cabin

886e46d2-401b-4af1-b200-72588116c7ce		23 JAN 2018
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided alternate procedures are established and used.

See Operational procedure [MOP.23.44-01-04P Interphone System - Cabin to Cabin \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 23 COMMUNICATIONS	MOP.23 Page n°05
---	---	--------------------------------

23-44-01-04P Interphone System - Cabin to Cabin (O)

99155fcd-9b17-420b-906f-88ab2a8602c0

22 SEP 2022

ALL

When necessary, a flight attendant will go directly to the other, wave at him, use the PA (if available) or call him out loud, depending on the emergency of the situation.

23-44-01-05 Interphone System (Flight Crew to Ground - Ground to Flight Crew)

1ded8593-4421-446e-afbf-df874df9543c

27 MAY 2015

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that alternate normal and abnormal and emergency procedures are established and used.

[See Operational procedure MOP.23.44-01-05P Interphone System \(Flight Crew to Ground - Ground to Flight Crew\) \(O\)](#)

23-44-01-05P Interphone System (Flight Crew to Ground - Ground to Flight Crew) (O)

Interphone System (Flight Crew to Ground - Ground to Flight Crew) (O)

378efbe2-2389-4950-a935-88c588ee28f3

22 SEP 2022

ALL

Communications are done by making conventional gestures.

23-44-01-06 Interphone System - Alerting System

489f7567-36f7-4e0d-a7b2-75ad651e88b1

27 MAY 2015

ALL

EASA - APPROVED

23-44-01-06A (A)

RI	NI	NR	PLACARD	O	M
C	-	-	YES	NO	NO

Visual signal may be inoperative on the flight deck.

- OR -

23-44-01-06B (B)

RI	NI	NR	PLACARD	O	M
C	-	-	YES	NO	NO

Both visual and aural signals may be inoperative in the cabin provided that Passenger Address is operative from the flight deck.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 23 COMMUNICATIONS	MOP.23 Page n°06
---	--	--

23-44-01-07 Interphone System - Handsets

1116eda3-514d-4fe9-9786-3ddaa6cd942e	01 AUG 2024
	ALL
	EASA - APPROVED

23-44-01-07A (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

For flights operated with one cabin attendant (Cf. A04-04-01), one handset may be inoperative.

Note

Any handset(s) function(s) that operate normally may be used by the cabin crew.

- OR -

23-44-01-07B (B)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) At least 50 % of cabin handsets operate normally
- (b) Alternate procedures are established and used.

Note

- 1) *Any handset(s) function(s) that operate normally may be used by the cabin crew.*
- 2) *An operative handset at an inoperative cabin crew seat shall not be counted to satisfy the 50 % requirement.*

See Operational procedure [MOP.23.44-01-07P Interphone System - Handsets \(O\)](#)

23-44-01-07P Interphone System - Handsets (O)

e776a71a-e6e2-4cbf-8a81-7aba33e8fbac	22 SEP 2022
	ALL

[Refer to MOP.23.44-01-03P Interphone System \(Flight Deck to Cabin - Cabin to Flight Deck\) \(O\)](#)

[Refer to MOP.23.44-01-04P Interphone System - Cabin to Cabin \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 23 COMMUNICATIONS	MOP.23 Page n°07
---	---	--------------------------------

23-44-02 Cabin Chime System (Flight Deck to Cabin - Cabin Signs)

8676cc2f-1236-4f94-8911-90ecf18cbbaa	01 AUG 2024
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	NO	<u>YES</u>	NO

May be inoperative provided that:

- (a) Passenger Address is operative, and
- (b) Alternate normal and abnormal and emergency procedures are established and used.

See Operational procedure MOP.23.44-02P Cabin Chime System (Flight Deck to Cabin - Cabin Signs) (O)

23-44-02P Cabin Chime System (Flight Deck to Cabin - Cabin Signs) (O)

a665aa7c-e1a5-4f78-a728-a72488871e47	01 AUG 2024
	ALL

When necessary, the flight crew must directly inform the cabin crew that signs « SEAT BELTS » and « NO DVCE » are ON, through the PA.

The flight crew will inform the cabin attendant of the flight phase through the PA. The cabin attendant will perform passengers addresses, upon flight phase information by the flightcrew.

23-50-01 Audio Control Panel

3a8a77d8-760c-4c67-987b-00047ecb259b	29 MAR 2023
	1192-1455;1658
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	2	YES	NO	NO

May be inoperative provided that CAPT panel and F/O panel are operative except VOICE ONLY key which may be inoperative.

Note

There may be components of the audio control panel inoperative for which the crew should refer to the associated item; however, the panel is still adequate for flight.

ori015637

29 MAR 2023

1568

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	3	2	YES	NO	NO

May be inoperative provided that CAPT panel and F/O panel are operative except VOICE ONLY key which may be inoperative.

Note

There may be components of the audio control panel inoperative for which the crew should refer to the associated item; however, the panel is still adequate for flight.

23-50-02 Headset

26c97ae5-574f-42ef-abfe-68ed314bc8e0

22 SEP 2022

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	3	2	NO	NO	NO

One may be inoperative provided that the associated boom set (headset function) is operative for each crew member on flight deck duty.

23-50-03 Hand Microphone

ce6d4101-1d4e-4721-96b9-295aea7a7e10

22 SEP 2022

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or more may be inoperative provided that the associated boom set is operative for each crew member on flight deck duty.

23-50-04 Boom Set

5bb91f22-7920-4bd1-93bd-8471f9aaee41

22 SEP 2022

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	3	2	NO	NO	NO

One may be inoperative provided that the associated hand mike and headset are operative for each crew member on flight deck duty.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 23 COMMUNICATIONS	MOP.23 Page n°09
---	---	-------------------------

23-50-05 Cockpit Loudspeaker

3e720d2e-9284-4a94-aa86-790ee59dc9a4	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

May be inoperative.

23-51-01 Push-To-Talk (PTT) Selector on Control Wheel

2666ff8d-554d-4540-9cbf-f0b609d299ee	07 OCT 2020
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or both may be inoperative provided that:

- INT / RAD selector on ACP are operative,
- RAD PTT Pushbutton on Nose Wheel Steering Control Handwheel is operative, and
- There is no permanent/constant radio transmission.

23-52-01 Radio Management System

568efad1-be56-471d-9e50-ea87cec1069f	27 MAY 2015
	ALL

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

One may be inoperative provided that:

- ETOPS** Operations are not conducted, and
- IESI is operative, and
- VHF 1 is operative, and
- VOR 1 is operative, and
- ILS 1 is operative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 23 COMMUNICATIONS	MOP.23 Page n°10
---	---	-------------------------

23-70-01-01 Video Surveillance System

e0d0b94b-ece0-4320-aa4b-2492efe40548	18 MAY 2022
	ALL
	EASA - APPROVED

23-70-01-01A Passenger configuration (A)

RI	NI	NR	PLACARD	O	M
A	1	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) Alternate procedures are established and used,
- (b) Cabin/Flight Deck Interphone system is checked operative, and
- (c) Repairs are made within three flight days.

See Operational procedure [MOP.23.70-01-01P Video Surveillance System \(O\)](#)

- OR -

23-70-01-01B Passenger configuration (B)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) The flight deck door viewing port operates normally,
- (b) Cabin/Flight Deck Interphone system is checked operative, and
- (c) Alternate procedures are established and used.

See Operational procedure [MOP.23.70-01-01P Video Surveillance System \(O\)](#)

- OR -

23-70-01-01C Passenger configuration (C)

RI	NI	NR	PLACARD	O	M
D	1	0	NO	NO	NO

May be inoperative provided that procedures do not require its use.

- OR -

23-70-01-01D Cargo configuration (D)

RI	NI	NR	PLACARD	O	M
D	1	0	NO	NO	NO

May be inoperative provided that procedures do not require its use.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 23 COMMUNICATIONS	MOP.23 Page n°11
---	---	--

23-70-01-01P Video Surveillance System (O)

Video Surveillance System (O)

3b7b50dc-a6fe-45ee-96e3-ce29e704dd8c

22 SEP 2022

ALL

Use the cockpit door's spy-hole.

• During preliminary cockpit preparation

- ▶ CABIN/FLIGHT DECK INTERPHONE SYSTEMCHECK
- ▶ COCKPIT ACCESS PROCEDURE..... DEFINE AND BRIEF CREW

Note

When the video cabin surveillance is unavailable, two crew members are mandatory to stay in the cockpit permanently. When a flight crew member is outside the cockpit, a cabin crew member has to stay in the cockpit to identify, by the spy-hole, persons requesting entry to the cockpit and to detect suspicious behavior or potential threat, before unlock the cockpit door.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 23 COMMUNICATIONS	MOP.23 Page n°12
---	---	--------------------------------

23-70-01-02 Viewing Ports

456af93a-877c-46bf-9f6e-62948abf5389	18 MAY 2022
	ALL
	EASA - APPROVED

23-70-01-02A Passenger configuration (A)

RI	NI	NR	PLACARD	O	M
A	1	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) Alternate procedures are established and used,
- (b) Cabin/Flight Deck Interphone system is checked operative, and
- (c) Repairs are made within three flight days.

See Operational procedure MOP.23.70-01-02P Viewing Ports (O)

- OR -

23-70-01-02B Passenger configuration (B)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) Flight Deck Video Surveillance System is installed and operates normally,
- (b) Cabin/Flight Deck Interphone system is checked operative, and
- (c) Alternate procedures are established and used.

See Operational procedure MOP.23.70-01-02P Viewing Ports (O)

- OR -

23-70-01-02C Passenger configuration (C)

RI	NI	NR	PLACARD	O	M
D	1	0	NO	NO	NO

May be inoperative provided that procedures do not require its use.

- OR -

23-70-01-02D Cargo configuration (D)

RI	NI	NR	PLACARD	O	M
D	1	0	NO	NO	NO

May be inoperative provided that procedures do not require its use.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 23 COMMUNICATIONS	MOP.23 Page n°13
---	---	--------------------------------

23-70-01-02P Viewing Ports (O)

bd702ecd-8e40-420c-af77-c430b96aabd1

22 SEP 2022

ALL

• During preliminary cockpit preparation

- ▶ CABIN/FLIGHT DECK INTERPHONE SYSTEMCHECK
- ▶ COCKPIT ACCESS PROCEDURE..... DEFINE AND BRIEF CREW

23-71-01 Cockpit Voice Recorder

8e5983fc-b5f3-4cc4-bfc7-eeee91ac25bb

22 SEP 2022

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	1	0	YES	NO	NO

May be inoperative provided that:

- (a) Operations are limited to eight further consecutive **flights** or 72 hr whichever occurs first, with the cockpit voice recorder unserviceable, and
- (b) Any flight data recorder required to be carried is operative.

PAGE
INTENTIONALLY
LEFT BLANK

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 24 ELECTRICAL POWER	MOP.24 Page n°01
---	---	--------------------------------

24-21-01 AC Inverter

ccbd8dc3-5175-4d14-a49c-7f6b08ed97a5	01 MAR 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	2	1	YES	<u>YES</u>	NO

Inverter #2 only may be inoperative, provided that:

- (a) The flight is conducted in day VMC only, and
- (b) AP use is prohibited below 1 000 ft AGL , and
- (c) Operations are limited to not more than two calendar days , and
- (d) TLU manual mode is operative.

See Operational procedure MOP.24.21-01P AC Inverter (O)

24-21-01P AC Inverter (O)

6604ec68-65f1-41f6-850d-a01e7ca31433	22 JUL 2024
	ALL

Check of TLU manual mode:

• During cockpit preparation

- ▶ Select manually HI SPD and check the following (after approximately 30 s):
 - Alert is generated: master caution, single chime, FLT CTL TLU on FWS and TLU FAULT light
 - TLU LO SPEED label disappeared
 - Rudder travel is limited.
- ▶ Select LO SPD and check the following (after approximately 30 s):
 - Alert stops
 - TLU LO SPEED label is displayed
 - Rudder travel is no longer limited.
- ▶ Select AUTO.

24-21-02 AC INV FAULT Light

f5416cd1-2c42-4dad-a084-e951318e9c87	19 OCT 2020
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	YES	<u>YES</u>	NO

May be inoperative provided that affected inverter is checked operative prior to each departure.

See Operational procedure MOP.24.21-02P AC INV FAULT Light (O)

24-21-02P AC INV FAULT Light (O)

1f4d4d0b-1b2a-4697-ba13-48a791aef805		01 AUG 2024
		ALL

- After engines start
 - ▶ DC BTC pb.....ISOL
 - ▶ Check no amber light or flag on instruments come on.
 - ▶ DC BTC pb..... NORM

24-21-03 AC Generation Bus Tie Relay (BTR)

f1e62e67-4110-4962-a2f5-d64405a17dbb		09 MAY 2019
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	1	0	YES	NO	NO

May be inoperative provided that DC generation Bus Tie Contactor is considered inoperative .
[Refer to Item 24-32-02DC Generation Bus Tie Contactor \(BTC\)](#)

24-21-04 AC BUS OFF Light

b9e84fc5-c383-4995-aa8f-d5c2558f4490		19 OCT 2020
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 24 ELECTRICAL POWER	MOP.24 Page n°03
---	---	--------------------------------

24-22-01 ACW Generation (Generator and (or) Related GCU)

e1ce3e0c-fef2-4fd6-ad25-2228f93e09c8	14 MAY 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	2	1	YES	<u>YES</u>	<u>YES</u>

One may be inoperative provided that:

- (a) HYD AUX pump is operative, and
- (b) Operations are conducted in compliance with applicable AFM Deviation Guide.

Note

NO GO in case of FTA.

See Operational procedure MOP.24.22-01P ACW Generation (Generator and (or) Related GCU) (O)

See Maintenance procedure MMP.24.22-01 ACW Generation (Generator and (or) Related GCU) (M)

24-22-01P ACW Generation (Generator and (or) Related GCU) (O)

5d80766f-fd9a-42c5-a3e1-2a14579541c5	24 JUN 2025
	ALL

[Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Dispatch with One ACW Generator Channel Inoperative](#)

24-22-02 ACW GEN FAULT Light

43a5020b-249b-4a5e-8465-c3d555b2f121	01 AUG 2024
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One may be inoperative provided that ACW BTC operates normally.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 24 ELECTRICAL POWER	MOP.24 Page n°04
---	---	--------------------------------

24-22-03 ACW Generation Bus Tie Contactor (BTC)

9e2a8153-3442-4c6f-b164-a928e25ef9a4	24 JUN 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	1	0	YES	<u>YES</u>	NO

May be inoperative in the ISOL position provided that:

- (a) Both ACW generator channels are operative, and
- (b) HYD X FEED pb is operative and is selected ON before takeoff, then OFF during cruise and reselected ON before landing.

Note

NO GO in case of FTA.

See Operational procedure MOP.24.22-03P ACW Generation Bus Tie Contactor (BTC) (O)

24-22-03P ACW Generation Bus Tie Contactor (BTC) (O)

ca9bee1d-558b-4dba-b550-99d12a82d900	15 APR 2025
	ALL

- Open hydraulic X FEED before takeoff
- Close it after flaps retraction
- Open it in approach
- Close it after landing

Note

Two-engine taxi is recommended.

24-22-04 ACW BUS OFF Light

8e6e7065-6227-4b3b-a3cb-4f5b09f15b8f	19 OCT 2020
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 24 ELECTRICAL POWER	MOP.24 Page n°05
---	---	--------------------------------

24-30-01 DC Generation (Generator and (or) Related GCU)

3a5957e5-eccb-4b27-b531-a2c5e50fc087

14 MAY 2025

ALL

RI	NI	NR	PLACARD	O	M
A	2	1	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) ETOPS Operations are not conducted, and
- (b) TRU is checked operative prior to each departure, and
- (c) Two engines taxi is performed, and
- (d) Aircraft does not line up until 6 min elapsed after operative generator comes on line, and
- (e) Operations are limited to two calendar days .

Note

NO GO in case of FTA.

See Operational procedure MOP.24.30-01P DC Generation (Generator and (or) Related GCU) (O)

24-30-01P DC Generation (Generator and (or) Related GCU) (O)

9b4d5c6a-001c-43a2-9495-c5e90f998a5d

24 JUN 2025

ALL

Ground operations

If DC generator channel #2 is inoperative:

- Refer to MOP.61.50-01P Propeller Brake (O) .
- passenger embarkment and disembarkment during night are forbidden, except if a GPU is available.

Check of remaining generator feeder integrity:

6 min are necessary to establish the temperature difference between the feeders if one line is broken.

So aircraft should not line up until 6 min elapsed after operative generator comes on line.

Operational test of TRU :

During the test, the ACW electrical network must be available (The AC GPU connected or ACW generators running)

- ▶ Checking are performed only on MAIN ELEC PWR panel (29VU)
 - ▶ Switch OFF DC EXTERNAL POWER pb (if selected ON)
 - ▶ Switch OFF DC GEN 1 pb & DC GEN 2 pb (if selected ON).

On MAIN ELEC PWR panel

- ▶ Check that the following caution lights are switched ON:

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 24 ELECTRICAL POWER	MOP.24 Page n°06
---	---	--------------------------------

cont'd... >>>

- 1) BATTERY ARROWS,
- 2) AC BUS 1 OFF and AC BUS 2 OFF,
- 3) INVERTER 2 FAULT,
- 4) Both DC BUS OFF,
- 5) SHED LEGEND OF DC SVCE/UTLY BUS

► Check that the following systems are supplied:

- VHF 1,
- FUEL QTY indicator ,
- FLAPS POSITION indicator

On MAIN ELEC PWR panel

► Press the TRU pb ; then check that:

- The TRU pb is switched ON,
- The TRU ARROW caution light is switched ON,
- The BATTERIES ARROWS caution lights are not illuminated,
- The UNDV legend of OVRD/UNDV pb is not illuminated.

Note

If the test is performed with engine running, IAS FAIL flag is triggered on Capt. PFD as soon as DC Generators are selected OFF and it remains displayed as long as TRU is selected ON.

- Check that the BATTERY AMMETER shows zero load either if BAT sw is placed in EMER or MAIN position.
- Check that the following systems are still supplied:
 - VHF 1,
 - FUEL QTY indicator ,
 - FLAPS POSITION indicator .

On MAIN ELEC PWR panel

► switch off the TRU pb ; then check that:

- The TRU pb is not illuminated,
- The TRU ARROW caution light is not illuminated,
- The BATTERY ARROWS caution lights are switched ON.

Note

After the test, the flight crew must set operative DC GEN to ON position.

Set Landing Elevation.

24-30-02 DC Transformer Rectifier Unit (TRU)

d26eff5c-a230-4d72-b0ca-f78d4c162ef8

11 APR 2025

ALL

RI	NI	NR	PLACARD	O	M
B	1	0	YES	NO	NO

May be inoperative provided that **ETOPS** Operations are not conducted.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 24 ELECTRICAL POWER	MOP.24 Page n°07
---	---	--------------------------------

24-32-01 DC GEN FAULT Light

22db2365-c24f-49d6-ba9b-568f85ad7a46	19 OCT 2020
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One may be inoperative provided that DC Bus Tie Contactor is operative.

24-32-02 DC Generation Bus Tie Contactor (BTC)

4431fcdd-b6d0-474e-ae97-5f87e444dc2d	12 JUL 2016
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	1	0	YES	<u>YES</u>	NO

May be inoperative in the ISOL position provided that:

- (a) Both DC generator channels are operative, and
- (b) DC BUS OFF lights are operative, and
- (c) Both inverters are operative.

See Operational procedure MOP.24.32-02P DC Generation Bus Tie Contactor (BTC) (O)

24-32-02P DC Generation Bus Tie Contactor (BTC) (O)

84540599-f47a-4e7f-9033-c41370d819c2	01 AUG 2024
	1192-1568

Note

Two-engine taxi is recommended.

CAUTION

- While aircraft is on ground, if LH DC generator fails, then automatic pressurization digital controller supplied by DC BUS 1 is lost. Therefore, both outflow valves will close and aircraft will be pressurized. In this case, use manual pressurization to depressurize the aircraft.

965ebe3e-dd14-4e57-b828-ca3194072246	01 AUG 2024
	1658-1718

Note

Two-engine taxi is recommended.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 24 ELECTRICAL POWER	MOP.24 Page n°08
---	---	--------------------------------

24-32-03 DC SVCE & UTLY BUS Control System

84088ecc-44db-431f-9ca2-c79670cec6c5		18 MAY 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative in the OFF position.

[Refer to Item 33-10-02-01MOP.33.10-02-01 Cabin Lights - Passenger Configuration](#)

24-32-04 DC BUS OFF Light

3b742279-6351-417f-a7f0-86b5ac7d3faa		19 OCT 2020
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative.

24-41-01 AC External Power Connection System

bb1998ff-841c-42c3-8607-7bae23fa5899		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative.

24-46-01 DC External Power Connection System

cf718803-8eab-45fb-b784-76c4ef792cc3		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 24 ELECTRICAL POWER	MOP.24 Page n°09
---	---	-----------------------------

24-77-01 Electrical Power Measurement Assembly (LH Maintenance Panel)

Electrical Power Measurement Assembly (LH Maintenance Panel)

a6026ceb-c44e-4aca-a9ec-4325fb47a2e5

21 OCT 2020

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	-	0	NO	NO	NO

May be inoperative.

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°01
---	--	--------------------------------

25-11-01 Flight Crew Seat - Vertical and Recline Adjustments

ceffd917-503a-49c7-bd24-8ca135d24a5f	11 APR 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	2	0	YES	NO	NO

Vertical and recline adjustments may be inoperative provided that :

- (a) Associated seat is secured or locked in a position acceptable to the flight crew member, and
- (b) Horizontal adjustment is operative for each flight crew member.

Note

A seat with an inoperative or missing seat belt or harness is considered inoperative.

25-11-02 Flight Deck Observer Seat

bc797ebd-8814-4634-8f91-a5e128cd2d4b	24 JUN 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	1	0	YES	<u>YES</u>	<u>YES</u>

May be inoperative provided that the seat is not occupied and correctly stowed or removed.

Note

A seat with an inoperative or missing seat belt or harness is considered inoperative.

NO GO in case of FTA.

See Operational procedure Flight Deck Observer Seat (O)
See Maintenance procedure Flight Deck Observer Seat (M)

25-11-02P Flight Deck Observer Seat (O)

18cf95ab-9d9e-4464-bf21-a8b2383cc1c6	15 APR 2025
	ALL

Computing of operational CG envelop or load & trim sheet:

A CG position deviation of +0.25 % must be considered for every flight with the flight deck observer seat removed.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°02
---	--	--------------------------------

25-11-03 Flight Crew Seat - Armrest

fee4a090-49cb-4a96-a11a-116ca7a700e6		11 APR 2025
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	4	-	YES	NO	<u>YES</u>

May be inoperative provided that:

- (a) Associated armrest is secured in stowed position or removed, as acceptable to the flight crew member,
- (b) Flight crew seat horizontal adjustment is operative for each flight crew member, and
- (c) Flight crew seat vertical and recline adjustments are operative for each flight crew member.

[See Maintenance procedure Flight Crew Seat - Armrest \(M\)](#)

25-13-11 Sunvisors

3a4bb971-6c98-48e3-a957-09433f789a44		22 SEP 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	6	0	NO	NO	NO

May be inoperative or missing provided there are no visual restrictions to the flight crew.

25-13-15 Seat Position Sight Gauge (Eye Locator)

6fe99571-828e-4ba3-ac44-91b551f91144		09 MAY 2019
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	NO	NO	NO

May be missing.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°03
---	--	-------------------------

25-13-17 Chart Holder

01035d16-bae0-4608-adee-9108e4be488d		22 SEP 2022
		ALL
		EASA - APPROVED

25-13-17A (A)

RI	NI	NR	PLACARD	O	M
C	2	2	YES	NO	NO

One must be available in each station.

- OR -

25-13-17B (B)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	<u>YES</u>	NO

May be inoperative or missing provided that alternate procedures are established and used.

[See Operational procedure MOP.25.13-17P Chart Holder \(O\)](#)

25-13-17P Chart Holder (O)

c2b425b5-e7f4-409a-af2c-ae9f10da1f2d		22 SEP 2022
		ALL

Electronic charts are used on EFB.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°04
---	--	--------------------------------

25-21-01 Required Cabin Attendant Seat

76c30af5-2cb2-4c8b-92d6-3c2ec367680a	22 SEP 2022
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
B	2	1	YES	<u>YES</u>	<u>YES</u>

One seat or seat assembly may be inoperative, provided that:

- Inoperative seat or seat assembly is not occupied, and
- Cabin attendant displaced by inoperative seat occupies the adjacent cabin attendant seat or the passenger seat most suitable to perform assigned duties, and
- Passenger Address is operative and used to communicate with displaced cabin attendant, and
- One cabin attendant occupies a seat with a direct access to the communication system, and
- Folding type seat is stowed and secured in the retracted position, and
- Where a passenger seat is assigned to the displaced cabin attendant it is placarded "DO NOT OCCUPY", and
- Alternate normal, abnormal and emergency procedures are established / approved and used for displaced cabin attendant.

Note

- A seat with an inoperative or missing seat belt or harness is considered inoperative.*
- This requirement does not preclude use of passenger seats by cabin attendants carried in excess of the required cabin attendant.*

See Operational procedure MOP.25.21-01P Required Cabin Attendant Seat (O)

See Maintenance procedure MMP.25.21-01 Required Cabin Attendant Seat (M)

25-21-01P Required Cabin Attendant Seat (O)

6022ee49-b440-4f2d-a7cf-04c4de97fbe4	22 SEP 2022
ALL	

Use first left AFT passenger seat on aisle side if aft cabin attendant seat is inoperative

Use first FORWARD left passenger seat on aisle side if forward cabin attendant seat is inoperative.

Install «DO NOT OCCUPY» placard on the seat.

No change in normal, following failure and emergency procedures.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°05
---	--	--------------------------------

25-31-01-01 Passenger Seats

ef20dbc2-6a54-4c5b-8137-44f28b9a0d06	29 MAR 2023
	1192-1455;1658-1678
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	70	-	YES	NO	<u>YES</u>

One or more may be inoperative provided that :

- (a) Inoperative seat does not block an emergency exit, and
- (b) Inoperative seat does not restrict any passenger from access to the main aircraft aisle, and
- (c) Affected seat(s) are blocked and placarded "DO NOT OCCUPY", and
- (d) Any damage is checked not detrimental to adjacent passenger safety.

Note

A seat with an inoperative or missing seat belt is considered inoperative.

See Maintenance procedure MMP.25.31-01-01 Passenger Seats (M)

ori014791	29 MAR 2023
	1568
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	72	-	YES	NO	<u>YES</u>

One or more may be inoperative provided that :

- (a) Inoperative seat does not block an emergency exit, and
- (b) Inoperative seat does not restrict any passenger from access to the main aircraft aisle, and
- (c) Affected seat(s) are blocked and placarded "DO NOT OCCUPY", and
- (d) Any damage is checked not detrimental to adjacent passenger safety.

Note

A seat with an inoperative or missing seat belt is considered inoperative.

See Maintenance procedure MMP.25.31-01-01 Passenger Seats (M)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°06
---	--	--------------------------------

25-31-01-02 Passenger Seats - Underseat Baggage Restraining Bars

163b2be1-e9cf-4ce6-a23a-89276ccaaa13	29 MAR 2023
	1192-1455;1658-1678
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	33	-	YES	<u>YES</u>	<u>YES</u>

May be inoperative or missing provided that:

- (a) Baggage is not stowed under associated seats, and
- (b) Associated seats are placarded 'DO NOT STOW BAGGAGE UNDER THIS SEAT', and
- (c) Procedures are established and used to alert cabin crew of inoperative restraining bars, and
- (d) Any damage is checked not detrimental to adjacent passenger safety.

See Operational procedure MOP.25.31-01-02P Passenger Seats - Underseat Baggage Restraining Bars (O)

See Maintenance procedure MMP.25.31-01-02 Passenger Seats - Underseat Baggage Restraining Bars (M)

orl014792	29 MAR 2023
	1568
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	34	-	YES	<u>YES</u>	<u>YES</u>

May be inoperative or missing provided that:

- (a) Baggage is not stowed under associated seats, and
- (b) Associated seats are placarded 'DO NOT STOW BAGGAGE UNDER THIS SEAT', and
- (c) Procedures are established and used to alert cabin crew of inoperative restraining bars, and
- (d) Any damage is checked not detrimental to adjacent passenger safety.

See Operational procedure MOP.25.31-01-02P Passenger Seats - Underseat Baggage Restraining Bars (O)

See Maintenance procedure MMP.25.31-01-02 Passenger Seats - Underseat Baggage Restraining Bars (M)

25-31-01-02P Passenger Seats - Underseat Baggage Restraining Bars (O)

9f0bcdbb-ac49-4be2-9bd7-71b683c9f6f9	22 SEP 2022
	1192-1658

Brief cabin crew about affected seats position.

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°07
---	--	-------------------------

cont'd... >>>

Note

The two last seats of each aisles are not equipped with underseat baggage restraining bars.

25-31-01-03 Passenger Seats - Passenger Seats Armrests

48c55bb2-b34a-4a57-a392-3ec24af9fe29

29 MAR 2023

1192-1455;1658-1678

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	105	-	NO	NO	YES

May be inoperative or damaged and the affected seat occupied provided that:

- (a) The affected armrest does not block an emergency exit, and
- (b) The affected armrest is not in such a position that it restricts any passengers from access to the aircraft aisle, and
- (c) Any damage is checked not detrimental to adjacent passenger safety, and
- (d) Recline function (if installed) is checked operative.

See Maintenance procedure [MMP.25.31-01-03 Passenger Seats - Passenger Seat Armrests \(M\)](#)

orl014793

29 MAR 2023

1568

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	108	-	NO	NO	YES

May be inoperative or damaged and the affected seat occupied provided that:

- (a) The affected armrest does not block an emergency exit, and
- (b) The affected armrest is not in such a position that it restricts any passengers from access to the aircraft aisle, and
- (c) Any damage is checked not detrimental to adjacent passenger safety, and
- (d) Recline function (if installed) is checked operative.

See Maintenance procedure [MMP.25.31-01-03 Passenger Seats - Passenger Seat Armrests \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°08
---	--	--------------------------------

25-31-01-04 Passenger Seats - Recline Function

9f3a7c01-3e6f-40c6-8935-b3a5f951dbdc		24 JUN 2025
	1192-1350;1376-1455;1658-1718	
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	-	-	YES	NO	<u>YES</u>

One or more may be inoperative and the affected seat occupied provided that:

- (a) The seat is secured in the takeoff and landing position, and
- (b) Any damage to passenger seats and components must not be detrimental to passenger safety.

See Maintenance procedure [MMP.25.31-01-04 Passenger Seats - Recline Function \(M\)](#)

25-33-01 Galley Waste Compartment Flapper Door

c4457c0f-75fd-4211-a416-69690975f947		22 SEP 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	NO	<u>YES</u>	NO

May be inoperative provided that:

- (a) Container is empty, and
- (b) Container access is secured to prevent waste introduction into compartment.

See Operational procedure [MOP.25.33-01P Galley Waste Compartment Flapper Door \(O\)](#)

25-33-01P Galley Waste Compartment Flapper Door (O)

36d6ea85-56e6-47c0-8a41-19afe2d6391		22 SEP 2022
		ALL

All waste is placed in a plastic bag placed in the rear cargo compartment, or in the galley.

25-40-01 Cabin Flashlight

5c168dd9-cac9-4e7a-82c5-37ee6a8b7490		22 SEP 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	4	-	NO	NO	NO

May be inoperative provided that each required crew member assigned to affected position has an operative Cabin Flashlight.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°09
---	--	--------------------------------

25-41-01 Exterior Lavatory Door Ashtray

06f5fac2-7ed3-427e-9d21-e79e994db1d8	22 SEP 2022
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	1	0	YES	NO	NO

May be inoperative or missing.

25-41-02 Interior Lavatory Door Ashtray

dde42e3e-2b1f-4388-af17-948a43725bdb	24 JUN 2025
	ALL
	EASA - APPROVED

25-41-02A (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative or missing provided that:

- (a) Lavatory smoke detection system is operative,
- (b) Toilet waste receptacle fire extinguishing system is operative, and
- (c) Flight is non-smoking.

- OR -

25-41-02B (B)

RI	NI	NR	PLACARD	O	M
D	1	0	YES	<u>YES</u>	<u>YES</u>

May be inoperative or missing provided that:

- (a) Toilet door is closed locked and placarded "INOPERATIVE - DO NOT ENTER", and
- (b) Toilet is not used for storage of any inflammable or combustible materials.

Note

Toilet may be used and/or inspected only by crew members.

See Operational procedure Interior Lavatory Door Ashtray (O)
See Maintenance procedure Interior Lavatory Door Ashtray (M)

25-41-02P Interior Lavatory Door Ashtray (O)

aaedc9e5-19ed-4c21-8dd9-1d4941bd6b0f	24 JUN 2025
	ALL

Toilet should not be used for stowage of any inflammable or combustible materials.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°10
---	--	--------------------------------

25-45-01 Portable Protective Breathing Equipment - Passenger configuration

Portable Protective Breathing Equipment — Passenger configuration

ori015639		08 MAR 2023
		1192-1455;1658
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	3	3	NO	NO	NO

NO GO.

e8a76501-e34a-4584-bb82-471bae23e699		29 MAR 2023
		1568
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	4	3	YES	NO	NO

The PBE located in the cockpit may be inoperative or missing provided that:

- (a) The PBE unit and its installed location is placarded inoperative, and
- (b) The PBE unit is removed from the aircraft, or remains in an approved stowage.

Note

PBE unit which cannot be stowage may be subject to the requirements of Dangerous Goods regulations.

25-45-02 Portable Protective Breathing Equipment - Cargo configuration

Portable Protective Breathing Equipment — Cargo configuration

ori003918		24 OCT 2019
		1350 1455
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	1	1	NO	NO	NO

NO GO.

Note

A portable protective breathing equipment must be put in an appropriate place in the cockpit and must be easily accessible for immediate use.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°11
---	--	--------------------------------

25-45-21 Lavatory Waste Compartment Flapper Door

bdaaaa6f-8a75-44d8-a3b5-0fa6525b6463	22 SEP 2022
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that:

- (a) Toilet waste receptacle is empty, and
- (b) Toilet door is closed locked and placarded, "INOPERATIVE DO NOT ENTER.

[Refer to MOP.25.70-01 Lavatory](#)

Note

Toilet may be used and/or inspected by crew members

25-54-23 Cargo Restraint System

a32631c0-8b09-490e-b0c6-066919c3d271	22 SEP 2022
	ALL
	EASA - APPROVED

25-54-23A (A)

RI	NI	NR	PLACARD	O	M
C	9	0	YES	NO	YES

May be inoperative or missing provided acceptable cargo loading limits from Weight and Balance Manual are observed.

[See Maintenance procedure MMP.25.54-23 Cargo Restraint System \(M\)](#)

- OR -

25-54-23B (B)

RI	NI	NR	PLACARD	O	M
D	9	0	YES	NO	NO

May be inoperative or missing provided relevant section of the cargo compartment remains empty.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°12
---	--	--------------------------------

25-60-01-01 Automatic Emergency Locator Transmitter

34a74a51-47a2-4835-8907-bb48e00725d3	22 SEP 2022
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	1	0	YES	<u>YES</u>	NO

May be inoperative for 6 flights or 25 flight hours whichever occurs first provided alternate procedures are established or used.

See Operational procedure [MOP.25.60-01-01P Automatic Emergency Locator Transmitter \(O\)](#)

25-60-01-01P Automatic Emergency Locator Transmitter (O)

0569b93c-75f3-49dd-ae5c-19317d1d1a87	22 SEP 2022
	ALL

The aircraft does not depart from MMS.

25-60-01-02 Survival Emergency Locator Transmitter

c52036b8-e12f-442a-945d-3eb0b517d674	22 SEP 2022
	ALL
	EASA - APPROVED

NO GO

25-61-01 First Aid Kit

ori003922	01 JUL 2023
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	1	1	NO	NO	NO

The first aid kit may be incomplete only for a flight back to MMS, where replacement can be made.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°13
---	--	--------------------------------

25-61-02 Emergency Medical Kit

228ba722-74cc-47c5-888c-c212286b2248

22 SEP 2022

ALL

EASA - APPROVED

25-61-02A (A)

RI	NI	NR	PLACARD	O	M
D	1	0	YES	NO	NO

May be incomplete or missing provided that the aircraft does not operate further than 1 hour flight (at max cruise speed) from an airport where qualified medical assistance could be available (PPT, MOZ, HUH, RFP, BOB, TUB, RUR, RGI, HOI, MKP, GMR, AUQ, NHV).

- OR -

25-61-02B (B)

RI	NI	NR	PLACARD	O	M
A	1	1	YES	NO	NO

The required emergency medical kit may be incomplete only for a flight back to MMS, where replacement can be made, but not to exceed a maximum of two calendar days

25-61-03 On Board Medicine Kit

ori003926

11 JUL 2019

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	1	0	NO	NO	NO

May be incomplete or missing.

25-61-04 AED - Automated External Defibrillator

ori003928

22 SEP 2022

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	1	1	NO	NO	NO

AED is considered as a part of the First Aid Kit.
[Refer to Item 25-61-01MOP-25-61-01 - First Aid Kit](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°14
---	--	--------------------------------

25-62-01
Megaphone

d64d2e4d-5ebb-4978-88b1-ed532fe052cf		22 SEP 2022
		ALL
		EASA - APPROVED

NO GO

25-64-01
Crash Axe

28ab5535-8324-4d74-93a4-a08ad47a010d		22 SEP 2022
		ALL
		EASA - APPROVED

NO GO

25-64-02
Passenger Lifejacket — Adult / Child

a32f00b8-9475-453c-8d1b-c4c3aa7a3dd4		29 MAR 2023
		1192-1455;1658
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	75	-	YES	NO	NO

Any in excess of the minimum required may be missing or inoperative, provided that:

- (a) Each inoperative lifejacket is placarded inoperative, are removed from their locations and placed out of sight from passengers so they cannot be mistaken for functional units, and
- (b) Serviceable lifejackets are available for all occupied seats, and
- (c) Seats without lifejacket are placarded « DO NOT OCCUPY ».

ori015636		29 MAR 2023
		1568
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	77	-	YES	NO	NO

Any in excess of the minimum required may be missing or inoperative, provided that:

- (a) Each inoperative lifejacket is placarded inoperative, are removed from their locations and placed out of sight from passengers so they cannot be mistaken for functional units, and
- (b) Serviceable lifejackets are available for all occupied seats, and
- (c) Seats without lifejacket are placarded « DO NOT OCCUPY ».

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 25 EQUIPMENT	MOP.25 Page n°15
---	--	--------------------------------

25-64-03 Passenger Lifejacket - Infant

ori003930		11 JUL 2019
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	14	-	YES	NO	NO

Any in excess of the minimum required may be missing or inoperative, provided that:

- (a) Each inoperative lifejacket is placarded inoperative, and
- (b) Serviceable lifejackets are available for each infant on board, and

25-65-20 Cabin Fireproof Gloves

9a093f6f-e1be-4aea-860b-183f24076f63		18 MAY 2022
		1658-1718

25-65-20A (A)

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or more may be damaged or missing.

- OR -

25-65-20B (B)

RI	NI	NR	PLACARD	O	M
D	2	0	NO	NO	NO

One or more may be damaged or missing provided that procedures do not require their use.

25-70-01 Lavatory

ori003932		09 DEC 2021
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that:

- (a) Passengers are notified by ground staff before boarding, and
- (b) Flight time does not exceed 2h30 without a stopover if there are fare paying passengers on board.

PAGE
INTENTIONALLY
LEFT BLANK

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 26 FIRE PROTECTION	MOP.26 Page n°01
---	--	-------------------------

26-12-01 Fire Detection Loop

d95cd828-2af4-43db-abf9-ae3da146e522	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	4	3	YES	NO	NO

One may be inoperative provided that the affected loop is selected OFF.

26-12-02 FUEL SO Light (Integrated in CL)

bfba8584-68da-4a25-b44f-2099c88a73bf	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative.

26-12-03 ENG 2 NAC OVHT

d9888ab0-1f16-42b0-9d5c-2d48ee2756a4	11 APR 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	<u>YES</u>

May be inoperative provided that hotel mode operation is limited to a maximum tailwind component of 10 kt.

[See Maintenance procedure ENG 2 NAC OVHT \(M\)](#)

26-15-01-01 Cargo Smoke Alert - Passenger Configuration

0d2a0d65-634f-4aed-99db-2b23b27f97ec	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	-	0	YES	NO	NO

May be inoperative provided that no combustible material is carried in the **associated** compartment.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 26 FIRE PROTECTION	MOP.26 Page n°02
---	--	-------------------------

26-15-01-02 Cargo Smoke Alert - Cargo Configuration

5c14233e-a16f-4d1d-9799-17a9c13f45b3	22 SEP 2022
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	-	0	YES	NO	NO

May be inoperative provided that no combustible material is carried in **any** compartment.

26-17-01-01 Toilet Smoke Detection System - Passenger Configuration

2a68c85e-aa75-4d2f-aa9e-87040246c09f	01 AUG 2024
	ALL
	EASA - APPROVED

26-17-01-01A (A)

RI	NI	NR	PLACARD	O	M
C	-	0	YES	NO	NO

May be inoperative provided that:

- (a) Toilet waste receptacle is empty,
- (b) Toilet door is closed locked and placarded "INOPERATIVE DO NOT ENTER", and
- (c) Toilet is not used for storage of any inflammable or combustible materials.

[Refer to MOP.25.70-01 Lavatory](#)

Note

Toilet may be used and/or inspected only by crew members.

- OR -

26-17-01-01B (B)

RI	NI	NR	PLACARD	O	M
B	-	0	NO	<u>YES</u>	<u>YES</u>

May be inoperative provided that:

- (a) Toilet waste receptacle fire-extinguishing system is verified operative,
- (b) Lavatory Waste Compartment Flapper Door is verified operative,
- (c) AFT SMOKE DETECTION FANS are verified operative, and
- (d) Procedures are established and used to check periodically absence of smoke in affected lavatory.

[See Operational procedure MOP.26.17-01-01P Toilet Smoke Detection System - Passenger Configuration \(O\)](#)

[See Maintenance procedure MMP.26.17-01-01 Toilet Smoke Detection System - Passenger Configuration \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 26 FIRE PROTECTION	MOP.26 Page n°03
---	--	-------------------------

26-17-01-01P Toilet Smoke Detection System - Passenger Configuration (O)

0c5042ac-43e5-4487-b9f6-e3c0fd384f6c		22 SEP 2022
		ALL

Cabin crew must check regularly the absence of smoke in the lavatory and each time it is used by passengers. Toilet should not be used for stowage of any inflammable or combustible materials.

26-17-01-02 Toilet Smoke Detection System - Cargo Configuration

ba62027a-71ac-4cf1-89ea-bd29dfad885		22 SEP 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	1	0	YES	NO	NO

May be inoperative for all cargo operations.

26-18-01 AFT Cargo (Curtain - Door)

6a4e750f-2a19-4902-ae51-f19663358134		22 SEP 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided no combustible material is carried in the associated compartment.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 26 FIRE PROTECTION	MOP.26 Page n°04
---	--	-------------------------

26-19-01 AFT Smoke Detection Fans

a5d3da20-8629-4174-9f29-f06809a6e7a5	22 SEP 2022
	ALL
	EASA - APPROVED

26-19-01A (A)

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

One may be inoperative provided that the remaining fan is checked operative before each departure.

- OR -

26-19-01B (B)

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or both may be inoperative provided that:

- (a) Toilet waste receptacle is empty, and
- (b) Toilet door is closed locked and placarded "INOPERATIVE DO NOT ENTER", and
- (c) No combustible material is carried in the AFT cargo compartment.
[Refer to MOP.25.70-01 Lavatory](#)

Note

Toilet may be used and/or inspected only by crew members.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 26 FIRE PROTECTION	MOP.26 Page n°05
---	--	--------------------------------

26-21-01 AGENT DISCH Light (Engine)

8fd69136-3b8b-45fa-9299-85b0c63cf53d	22 OCT 2020
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	4	2	YES	NO	<u>YES</u>

One or two may be inoperative provided that:

- Affected light(s) are not on the same engine fire panel,
- Respective extinguisher bottle pressure is checked on the direct reading gauge prior to first flight of each day, and
- Operations are limited to two calendar days.

Note

- AGENT 1 DISCH on left engine and AGENT 2 DISCH on right engine are associated with Fire Extinguisher Bottle 1.
- AGENT 2 DISCH on left engine and AGENT 1 DISCH on right engine are associated with Fire Extinguisher Bottle 2.

See Maintenance procedure [MMP.26.21-01 AGENT DISCH Light \(Engine\) \(M\)](#)

26-25-00 Lavatory Fire Extinguisher

2bdf79c0-cda7-4108-a006-586ec2667050	22 SEP 2022
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	<u>YES</u>

May be inoperative provided:

- Lavatory waste receptacle is empty,
- Associated lavatory door is locked, closed and placarded to prohibit passengers from entering,
- Toilet is not used for storage of any inflammable or combustible materials,
- Affected lavatory is used only by crew members, and
- Lavatory Waste Compartment Flapper Door is verified operative.

Note

[Refer to MOP.25.70-01 Lavatory](#)

See Operational procedure [MOP.26.25-00P Lavatory Fire Extinguisher \(O\)](#)
See Maintenance procedure [MMP.26.25-00 Lavatory Fire Extinguisher \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 26 FIRE PROTECTION	MOP.26 Page n°06
---	--	-------------------------

26-25-00P Lavatory Fire Extinguisher (O)

b0888ced-9886-4af0-a67a-862bbe6088a6		22 SEP 2022
		ALL

During flight preparation, flight crew members brief cabin crew members about the dispatch conditions and the maintenance procedure to apply.

26-30-01 Portable Hand Fire Extinguisher

6e565bb1-2b70-4421-86b1-dcae8a149468		22 SEP 2022
		ALL
		EASA - APPROVED

NO GO

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 27 FLIGHT CONTROLS	MOP.27 Page n°01
---	--	--------------------------------

27-20-01 Rudder Damper

253e6b4c-5d30-4530-a6fa-8061ebda1d7c	24 JUN 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that for taxi, takeoff and landing:

- (a) Maximum crosswind is limited to 15 kt, and
- (b) Maximum total wind is limited to 30 kt.

Note

NO GO in case of FTA.

See Operational procedure MOP.27.20-01P Rudder Damper (O)

27-20-01P Rudder Damper (O)

5d327857-fb71-475a-b92b-49fac5adac5b	15 APR 2025
	ALL

Pilot Flying and **Pilot Non Flying** must keep their feet on the pedals during all the taxi phases in order to avoid rudder excessive movements.

Pilot Flying will avoid large pedal movements during takeoff run and landing and will prefer nose wheel steering use.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 27 FLIGHT CONTROLS	MOP.27 Page n°02
---	--	--------------------------------

27-20-02 Rudder Releasable Centering Unit (RCU)

f5c7e3f8-ee97-4129-8d13-121bc6f40bf0	24 JUN 2025
ALL	
EASA - APPROVED	

27-20-02A Yaw Damper Function Inoperative (A)

RI	NI	NR	PLACARD	O	M
-	1	-	YES	<u>YES</u>	NO

[Refer to Item 22-18-03 Yaw Damper Function.](#)

Note

NO GO in case of FTA.

See Operational procedure MOP.27.20-02P Rudder Releasable Centering Unit (RCU) (O)

- OR -

27-20-02B Yaw Damper Function Operative (B)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that yaw damper function is operative and used.

Note

NO GO in case of FTA.

See Operational procedure MOP.27.20-02P Rudder Releasable Centering Unit (RCU) (O)

27-20-02P Rudder Releasable Centering Unit (RCU) (O)

b9d3234d-41dd-4013-aa09-22afe2c67b4a	19 MAY 2022
ALL	

■ If the yaw damper is inoperative or not engaged

Pilot Flying will keep his feet on the pedals to be ready to control rudder.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 27 FLIGHT CONTROLS	MOP.27 Page n°03
---	--	--------------------------------

27-23-01 Travel Limiter Unit (TLU)

2dda82d0-fb26-4a2c-ace5-4b8fda01169a		27 MAY 2015
		ALL
		EASA - APPROVED

27-23-01A (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative in the low speed position provided that speed is limited to **185 kt**.

- OR -

27-23-01B Automatic Mode (B)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that manual mode is operative.

[See Operational procedure MOP.27.23-01P Travel Limiter Unit \(TLU\) \(O\)](#)

27-23-01P Travel Limiter Unit (TLU) (O)

b29ba4db-cc9f-4332-aa65-44836e8cd256	REV	26 SEP 2025
		1289-1350;1455-1568

• During Cockpit preparation

- ▶ Select manually HI SPD and check alert is generated after 25 s : master caution, single chime, FLT CTL TLU on FWS and TLU FAULT light. Check rudder travel limited.
- ▶ Select LO SPD and check alert stops after approx. 30 s and check rudder travel no longer limited.

• In Flight

- ▶ During an acceleration, select manually HI SPD when reaching 185 kt .
- ▶ During a deceleration, select manually LO SPD when reaching 180 kt .

458ea2d0-47be-4073-844e-80fabe260755	REV	26 SEP 2025
		1192-1255;1355-1432;1658-1718

Check of TLU manual mode:

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 27 FLIGHT CONTROLS	MOP.27 Page n°04
---	--	--------------------------------

cont'd... >>>

• During Cockpit preparation

- ▶ Select manually HI SPD and check the following (after approximately 30 s):
 - Alert is generated : master caution, single chime, FLT CTL TLU on FWS and TLU FAULT light
 - TLU LO SPEED label has disappeared
 - Rudder travel is limited.
- ▶ Select LO SPD and check the following (after approximately 30 s):
 - Alert stops
 - TLU LO SPEED label is displayed
 - Rudder travel is no longer limited.

Do not use AUTO mode.

• Before TAKE OFF

- ▶ Select manually LO SPD.

• In Flight

- ▶ During an acceleration, select manually HI SPD when reaching 185 kt and check TLU LO SPEED label disappeared.
- ▶ During a deceleration, select manually LO SPD when reaching 180 kt and check TLU LO SPEED label is displayed (after approximately 30 s).

Note

A TLU FAULT alert will trigger transitorily after approximately 30 s.

27-23-02 TLU FAULT Light

e2cd400d-3f39-484a-b7d2-b1a9a49fea8a		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
D	1	0	YES	<u>YES</u>	NO

May be inoperative provided that the aural alert and Master Caution and associated FLT CTL TLU alert on FWS are checked operative prior to each flight .

See Operational procedure [MOP.27.23-02P TLU FAULT Light \(O\)](#)

27-23-02P TLU FAULT Light (O)

10b2aba4-03fd-4c53-b4d6-a43efbad9a13		22 SEP 2022
		ALL

• During Cockpit preparation

- ▶ Select manually HI SPD and check alert is generated after 25 s : master caution, single chime, FLT CTL TLU on FWS . Check rudder travel limited.
- ▶ Select LO SPD and check alert stops after approx.30 s and check rudder travel no longer limited.

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 27 FLIGHT CONTROLS	MOP.27 Page n°05
---	--	--------------------------------

cont'd... >>>

• **In Flight**

- ▶ During an acceleration, select manually HI SPD when reaching 185 kt .
- ▶ During a deceleration, select manually LO SPD when reaching 180 kt .

27-25-01 Yaw Trim Position Indicator

5cff7ae0-41a7-4034-880a-f29f7bf47aff	11 APR 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	1	0	YES	NO	NO

May be inoperative provided that:

- (a) Yaw trim system operates normally,
- (b) Rudder trim tab is visually verified in neutral position before each departure,
- (c) Yaw damper and/or autopilot are not used until the aircraft has been fully trimmed, and
- (d) Operations are limited to three calendar days.

27-32-01 Pitch Trim Rocker Switch

b0186c9f-147a-44ea-a2a2-b14ed870a1e1	11 APR 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	2	1	YES	NO	NO

One may be inoperative provided that standby pitch trim is operative.

27-32-02 Standby Pitch Trim

88c8b48e-0219-48f7-8551-61d0601df9e3	11 APR 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that both pitch trim rocker switch are operative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 27 FLIGHT CONTROLS	MOP.27 Page n°06
---	--	--------------------------------

27-32-03
First Officer Pitch Trim Rocker Switch Cover

04d58909-6050-4e88-a095-ab85a5f6f048	24 JUN 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	1	0	YES	NO	<u>YES</u>

May be inoperative or missing provided that associated trim is considered inoperative.

[Refer to Item 27-32-01MOP.27.32-01 Pitch Trim Rocker Switch.](#)

Note
<i>NO GO in case of FTA.</i>

[See Maintenance procedure MMP.27.32-03 First Officer Pitch Trim Rocker Switch Cover \(M\)](#)

27-35-01
Pitch Trim Position Indicator

ccc9ed0d-0114-4862-85e0-4ff99b7a5b21	14 MAY 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	1	0	YES	<u>YES</u>	NO

May be inoperative provided that elevator tabs are:
 (a) visually checked operative prior to start up, and
 (b) positioned neutral prior to takeoff.

Note
<i>NO GO in case of FTA.</i>

[See Operational procedure MOP.27.35-01P Pitch Trim Position Indicator \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 27 FLIGHT CONTROLS	MOP.27 Page n°07
---	--	--------------------------------

27-35-01P Pitch Trim Position Indicator (O)

daf152f6-1eea-4d47-98ce-cf5e4bcafec8

01 AUG 2024

ALL

• During Taxi Check list

- ▶ Run the trim from nose up to nose down: from the trim position where the whooler stops, run the trim from nose down to nose up for 13 s.

Note

This procedure sets the pitch trim to a conservative position for any CG inside the operational CG envelope (neutral position).

A TOCG in the center of the operational CG envelope is recommended in order to reduce the efforts of the pilot during the rotation.

Note

When performing TO CONFIG test, verify that CONFIG FLT CTL alert is only due to Pitch Trim Position Indicator by checking that TLU is in LOW SPEED, GUST LOCK is OFF and FLAPS are in Takeoff configuration.

• Before Takeoff

- ▶ Cancel MW alarm by pressing MASTER WARN pb.

Note

CONFIG FLT CTL message remains displayed on the EWD.

27-36-01 Stick Shaker Actuator

114d9eaf-7b8f-4a26-80ce-525559f29de2

14 MAY 2025

ALL

EASA - APPROVED

27-36-01A Ferry Flight (A)

RI	NI	NR	PLACARD	O	M
A	2	1	YES	<u>YES</u>	NO

One may be inoperative for one Ferry Flight provided that MFC modules 1B and 2B are operative.

Note

NO GO in case of FTA.

See Operational procedure MOP.27.36-01P Stick Shaker Actuator (O)

27-36-01P Stick Shaker Actuator (O)

6ab3986f-08d8-43d5-ae51-06059f7b4035

16 FEB 2018

ALL

• During Preliminary Cockpit Preparation

- ▶ TCAS TA ONLY

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 27 FLIGHT CONTROLS	MOP.27 Page n°08
---	--	--------------------------------

cont'd... >>>

Limitations

- **During approach**
 - ▶ IASNOT LESS THAN V_{min} OPS + 10 kt
 - ▶ SPD TGT MAN SEL
 - ▶ LDG DIST MULTIPLY BY 1.15
- **Below 1 000 ft AGL**
 - ▶ AP USE : PROHIBITED

27-36-02 Stick Pusher Actuator

d082ab8a-a277-4012-9e64-354ee433a5db		14 MAY 2025
		ALL
		EASA - APPROVED

27-36-02A Ferry Flight (A)

RI	NI	NR	PLACARD	O	M
A	1	0	YES	YES	YES

May be inoperative for one [Ferry Flight](#) only, provided that MFC modules 1B and 2B are operative.

Note
<i>NO GO in case of FTA.</i>

[See Operational procedure MOP.27.36-02P Stick Pusher Actuator \(O\)](#)
[See Maintenance procedure MMP.27.36-02 Stick Pusher Actuator \(M\)](#)

27-36-02P Stick Pusher Actuator (O)

0d3523a0-78f5-471f-baaf-02c652c76f4b		22 SEP 2022
		ALL

- **During Preliminary Cockpit Preparation**
 - ▶ TCAS TA ONLY
 - ▶ STICK PUSHER/SHAKER pbON
 - ▶ CONTROL COLUMN & WHEEL CHECK FREE MOVEMENT
 - ▶ STICK PUSHER/SHAKER FAULT LIGHT..... CHECK OFF

Note
<i>If control column is stuck, refer to Maintenance Procedure (disassembling of stick pusher).</i> Refer to MMP.27.36-02 Stick Pusher Actuator (M)

Perform stick shakers test:

- ▶ WARN selector..... STICK PUSHER/SHAKER YES

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 27 FLIGHT CONTROLS	MOP.27 Page n°09
---	--	--------------------------------

cont'd... >>>

Limitations

- **During approach**

- ▶ IAS NOT LESS THAN V_{min} OPS + 10 kt
- ▶ SPD TGT MAN SEL
- ▶ LDG DIST MULTIPLY BY 1.15

- **Below 1 000 ft AGL**

- ▶ AP USE : PROHIBITED

27-36-03 Indications and Controls on Maintenance Panels

a730e417-751b-425b-b283-3e09e793e42a	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	-	0	NO	NO	NO

May be inoperative.

27-37-01 Pitch Elevators Coupling System

e204bc48-ded7-4f70-8034-161e9eab7588	14 MAY 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	1	0	YES	<u>YES</u>	<u>YES</u>

May be inoperative provided that:

- (a) Operations are limited to one Ferry Flight, and
- (b) Operations are conducted in compliance with applicable AFM Deviation Guide.

Note

NO GO in case of FTA.

See Operational procedure MOP.27-37-01P Pitch Elevators Coupling System (O)

See Maintenance procedure MMP.27-37-01 Pitch Elevators Coupling System (M)

27-37-01P Pitch Elevators Coupling System (O)

e722a936-7664-44f4-ba9a-2d252064cb1a	24 JUN 2025
	ALL

Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Flight with Pitch Elevators Disconnected

27-37-02 Elevators Clutch Reconditioning Device

ad887da9-e390-4ea0-88ad-525f7a13bc9d		14 MAY 2025
		ALL

27-37-02A Ferry Flight (A)

RI	NI	NR	PLACARD	O	M
A	1	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) PITCH DISC alert is displayed on FWS , and
- (b) Operations are limited to one Ferry Flight, and
- (c) Operations are conducted in compliance with applicable AFM Deviation Guide.

Note
NO GO in case of FTA.

See Operational procedure [MOP.27-37-02P Elevators Clutch Reconditioning Device \(O\)](#)

- OR -

27-37-02B (B)

RI	NI	NR	PLACARD	O	M
D	1	0	YES	NO	<u>YES</u>

May be inoperative provided that:

- (a) The elevator clutch reconditioning device is deactivated, and
- (b) Steep Slope Approach is prohibited (> 4.5 °).

Note
NO GO in case of FTA.

See Maintenance procedure [MMP.27-37-02 Elevators Clutch Reconditioning Device](#)

27-37-02P Elevators Clutch Reconditioning Device (O)

14f58193-bb93-4d1b-942a-7b4e0d5e5637		24 JUN 2025
		ALL

[Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Flight with Pitch Elevators Disconnected](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 27 FLIGHT CONTROLS	MOP.27 Page n°11
---	--	--------------------------------

27-51-01 Flaps Control System

7e0d6b6e-a01d-4088-9314-be1102c2c690	14 MAY 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	1	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) Flaps are checked in retracted position, and
- (b) Operations are conducted in compliance with applicable AFM Deviation Guide, and
- (c) Operations are limited to two flights .

Note

NO GO in case of FTA.

See Operational procedure MOP.27.51-01P Flaps Control System (O)

27-51-01P Flaps Control System (O)

32682cd6-bad3-4701-b604-2d08e87bcc34	24 JUN 2025
	ALL

Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Dispatch with Flaps Retracted.

27-55-01 Flaps Position Indicator

408873fe-6f8e-4daf-89a7-ab3f48bedf69	24 JUN 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	1	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) Flaps position visual check is made prior to takeoff and in flight, and
- (b) Operations are limited to two calendar days .

Note

NO GO in case of FTA.

See Operational procedure MOP.27.55-01P Flaps Position Indicator (O)

27-55-01P Flaps Position Indicator (O)

018e02d4-addf-4979-8deb-aa886868155d	27 MAY 2015
	ALL

- Check visually flaps position at each configuration change.

27-55-02 Flaps Unlock Warning

723368ff-6631-47b5-a439-427de0964d2d	01 AUG 2024
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	1	0	YES	NO	NO

- May be inoperative provided that:
- (a) Flaps control system is considered inoperative, [Refer to Item 27-51-01Flaps Control System](#), and
 - (b) Operations are limited to two [flights](#).

27-61-01 Spoiler Control System

55da55df-bc9c-4866-a10a-9773f828f778	14 MAY 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	1	0	YES	YES	YES

- May be inoperative provided that:
- (a) Spoilers are secured in retracted position, and
 - (b) Operations are conducted in compliance with applicable AFM Deviation Guide.

Note

NO GO in case of FTA.

[See Operational procedure MOP.27.61-01P Spoiler Control System \(O\)](#)
[See Maintenance procedure MMP.27.61-01 Spoiler Control System \(M\)](#)

27-61-01P Spoiler Control System (O)

2e4c6f89-327f-44a0-a96d-d976de6b36c0	24 JUN 2025
	ALL

[Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Dispatch with Spoiler Control System Inoperative](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 27 FLIGHT CONTROLS	MOP.27 Page n°13
---	--	--------------------------------

27-65-01 Spoiler Position Indicating System

56a1ba2d-db83-440f-8acb-c8c1f955ad17	18 MAY 2022
	ALL
	EASA - APPROVED

27-65-01A (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	NO

May be inoperative provided that proper functioning of the spoilers is checked prior to each departure and monitored throughout the flight.

[See Operational procedure MOP.27.65-01P Spoiler Position Indicating System \(O\)](#)

- OR -

27-65-01B (B)

RI	NI	NR	PLACARD	O	M
-	1	0	NO	YES	YES

May be inoperative provided that the Spoiler Control System is considered inoperative.

[Refer to Item 27-61-01 Spoiler Control System](#)

[See Operational procedure MOP.27.65-01P Spoiler Position Indicating System \(O\)](#)

[See Maintenance procedure MMP.27.65-01 Spoiler Position Indicating System \(M\)](#)

27-65-01P Spoiler Position Indicating System (O)

10528568-65ba-4086-835f-9d1ea4fb8eff	24 JUN 2025
	ALL

■ In case of Spoiler Position Indicating System (A)

Prior to each departure in appropriate condition for visual spoiler verification.

- Proper functioning of the spoilers is checked

- OR -

■ In case of Spoiler Position Indicating System (B)

[Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Dispatch with Spoiler Control System Inoperative.](#)

27-70-01-01 GUST LOCK System - Aileron

30b2a772-ca48-4d2c-b937-f4fcc85d6e4d	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	YES

May be inoperative provided that the tailwind during parking does not exceed 40 kt .

Note
Propeller brake is not available.

See Operational procedure [MOP.27.70-01-01P GUST LOCK System - Aileron \(O\)](#)
See Maintenance procedure [MMP.27.70-01-01 GUST LOCK System - Aileron \(M\)](#)

27-70-01-01P GUST LOCK System - Aileron (O)

7aa3de0b-0740-48b7-bdfc-03ae3bf1c49f	01 AUG 2024
	ALL

Take special care for parking and taxi (wind effects).
To perform the TO CONFIG Test, set the GUST LOCK lever to OFF position.

27-70-01-02 GUST LOCK System - Elevator

b82d0fa1-8322-491f-bf68-f4e0e2b1fe1c	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	YES

May be inoperative.

Note
Propeller brake is not available.

See Operational procedure [MOP.27.70-01-02P GUST LOCK System - Elevator \(O\)](#)
See Maintenance procedure [MMP.27.70-01-02 GUST LOCK System - Elevator \(M\)](#)

27-70-01-02P GUST LOCK System - Elevator (O)

9df2504e-3c76-4a47-a294-b6fe2b9fed66	27 MAY 2015
	ALL

Take special care for parking and taxi (wind effects)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 28 FUEL SYSTEM	MOP.28 Page n°01
---	--	--------------------------------

28-21-01 FEED LO PR Light

285bb2d0-f661-42ab-bf71-f256e82422dc

17 JAN 2018

ALL

RI	NI	NR	PLACARD	O	M
B	2	0	YES	<u>YES</u>	NO

One or both may be inoperative provided that:

- (a) FEED LO PR labels are available on SD Engine page, and
- (b) FUEL FEED LO PR alert is processed by the FWS, and
- (c) Associated pump is operative.

See Operational procedure MOP.28.21-01P FEED LO PR Light (O)

28-21-01P FEED LO PR Light (O)

6b09eb42-cf39-4fb3-ae65-4f4234967f1e

28 JUN 2016

ALL

• During Cockpit Preparation

- ▶ RH and LH PUMPS CHECK ON
- ▶ ON SD ENGINE PAGE, FEED LO PR LABELS CHECK NOT DISPLAYED
- ▶ AFFECTED SIDE PUMP SELECT OFF
- ▶ C/B FUEL FEED/AFFECTED SIDE ENGINE / CTL & CAUT RESET
- ▶ ON SD ENGINE PAGE, FEED LO PR LABEL CHECK DISPLAYED
- ▶ ON EWD, FUEL FEED LO PR ALERT..... CHECK DISPLAYED
- ▶ AFFECTED SIDE PUMP SELECT ON
- ▶ ASSOCIATED ALERTS..... CHECK NOT DISPLAYED

28-21-02 Electrical Fuel Pump

d9ff4f01-1055-47df-8ad3-0524278dcf04

16 FEB 2018

ALL

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	<u>YES</u>

One may be inoperative provided that:

- (a) ETOPS operations are not conducted, and
- (b) Fuel X FEED valve is check operative, and
- (c) Associated jet pump (and motive flow valve) is operative.

See Operational procedure MOP.28.21-02P Electrical Fuel Pump (O)

See Maintenance procedure MMP.28.21-02 Electrical Fuel Pump (M)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 28 FUEL SYSTEM	MOP.28 Page n°02
---	--	-------------------------

28-21-02P **Electrical Fuel Pump (O)**

5c96df04-91a3-4e32-96c7-727f21632a16		01 AUG 2024
		ALL

Limitations

Flight planning must take into account engine failure in the inoperative pump side as X FEED would not be possible. Flight time from suitable alternate must not exceed 45 min with one engine operating (elapse time before reaching maxi fuel unbalance).

Maximum certified fuel unbalance must never be exceeded 730 kg (1 609 lb).

● **During Preliminary Cockpit Preparation**

- ▶ FUEL X FEED CHECK X LINE
- ▶ FUEL PUMP (on affected side)..... OFF
- ▶ FUEL PUMP (on operative side)..... ON
- ▶ ENG FEED LO PR (on operative side)CHECK TURN OFF
- ▶ ENG FEED LO PR (on affected side)CHECK REMAINS ON
- ▶ FUEL X FEED IN LINE
- ▶ ENG FEED LO PR (on affected side)CHECK TURN OFF
- ▶ FUEL PUMP (on operative side)..... OFF
- ▶ FUEL PUMP (on affected side)..... ON
- (There is no cockpit indication as Circuit breaker of the pump is pulled)
- ▶ ENG FEED LO PR 1+2.....CHECK TURN ON
- (It is necessary to wait several minutes)
- ▶ FUEL X FEEDCHECK X LINE
- ▶ FUEL PUMP (on affected side)..... OFF
- ▶ FUEL PUMP (on operative side)..... AS RQRD

● **Before affected engine start**

- ▶ FUEL PUMP (on operative side)..... ON
- ▶ FUEL X FEED IN LINE

● **After affected engine start**

- ▶ FUEL PUMP (on affected side)..... ON

Note

This enables motive flow valve and then jet pump to be operative.

- ▶ FUEL X FEED X LINE
- ▶ ENG FEED LO PRCHECK REMAINS OFF

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 28 FUEL SYSTEM	MOP.28 Page n°03
---	--	--------------------------------

28-21-03 Pump RUN Light

f528d21e-3e04-44d0-ae0d-f6c46c74dbb2

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative provided that:

- (a) **ETOPS** operations are not conducted, and
- (b) Associated electrical pumps are operative.

28-21-04 Jet Pump (and Associated Motive Flow Valve)

b32cb1f0-b785-4eba-96de-01524d8e9278

27 MAY 2015

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One may be inoperative provided that:

- (a) Fuel X FEED valve is operative, and
- (b) Associated electrical pump is operative.

28-21-05 Feeder Tank Jet Pump

4dce0638-4104-44f5-ad53-cf765b6f219e

11 APR 2025

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

One may be inoperative provided that:

- (a) **ETOPS** operations are not conducted,
- (b) Fuel X FEED valve is operative,
- (c) Both electrical pumps are operative,
- (d) Both fuel quantity indication systems are operative, and
- (e) Unusable fuel quantity in each tank is raised to 130 kg/287 lb. Refueling must be done accordingly.

Note

The "FUEL LO LVL" may be triggered in case of feeder tank jet pump malfunction on aircraft.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 28 FUEL SYSTEM	MOP.28 Page n°04
---	--	--------------------------------

28-23-01 X FEED Valve

ec807cc9-42a2-4a31-ab10-8e6e453217e3		16 FEB 2018
ALL		

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) **ETOPS** operations are not conducted, and
- (b) X FEED valve is checked in closed position and,
- (c) Both fuel quantity indications are operative.

See Operational procedure [MOP.28.23-01P X FEED Valve \(O\)](#)

28-23-01P X FEED Valve (O)

ba758f9f-dbb6-4d93-8204-f547a72e4848		19 MAY 2022
ALL		

Limitations

Flight planning must take into account engine failure as X FEED would not be possible.
Flight time from suitable alternate must not exceed 45 min with one engine operating (elapse time before reaching maxi fuel unbalance).

- Dispatch without any asymmetry.

Maximum certified fuel unbalance must never be exceeded 730 kg (1 609 lb).

- When selecting RH PUMP ON, check ENG 2 FEED LO PR light turned off and ENG 1 FEED LO PR light remains illuminated.

28-23-02 X FEED Flow Bar

d35085fc-7e9f-40a7-8ca3-1a698baff96d		19 MAY 2022
ALL		
EASA - APPROVED		

RI	NI	NR	PLACARD	O	M
-	1	0	YES	<u>YES</u>	NO

May be inoperative provided X FEED Valve is considered inoperative.

[Refer to Item 28-23-01X FEED Valve](#)

See Operational procedure [MOP.28.23-02P X FEED Flow Bar \(O\)](#)

28-23-02P X FEED Flow Bar (O)

1705246e-f2cc-4346-82d1-7663019ef5ce		19 MAY 2022
ALL		

[Refer to MOP.28.23-01P X FEED Valve \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 28 FUEL SYSTEM	MOP.28 Page n°05
---	--	--------------------------------

28-25-01-01 Refueling Control Panel

c001627c-a72b-4dd6-acdd-e5705bb422c1	18 MAY 2022
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	<u>YES</u>

May be inoperative provided that gravity or manual refueling using the handle ring control is performed.

Note

Manual refueling procedure using the handle ring control cannot be used if drainage of the refuel pipe is required (As Refueling Control Panel is inoperative and surge valve cannot be controlled).

See Maintenance procedure [MMP.28.25-01-01 Refueling Control Panel - Refueling Control Panel \(M\)](#)

28-25-01-02 Refueling Control Panel - Fuel Preselector

fc446c8-ae1c-4d04-b6f6-df492366fde1	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	<u>YES</u>

May be inoperative provided that manual refueling is performed.

See Maintenance procedure [MMP.28.25-01-02 Refueling Control Panel - Fuel Preselector \(M\)](#)

28-25-01-03 Refueling Control Panel - Preselected Qty

233618e3-d455-4b1e-b698-8e432d5a3596	27 MAY 2015
	ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	<u>YES</u>

May be inoperative provided that manual refueling is performed.

See Maintenance procedure [MMP.28.25-01-03 Refueling Control Panel - Preselected Qty \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 28 FUEL SYSTEM	MOP.28 Page n°06
---	--	--------------------------------

28-25-01-04 Refueling Control Panel - Refueling Control Panel Door Indication (on SD Cabin Page)

Refueling Control Panel - Refueling Control Panel Door Indication (on SD Cabin Page)

583163d0-706f-4015-85b2-3413f63378a7		12 JUL 2016
ALL		

RI	NI	NR	PLACARD	O	M
C	-	0	NO	YES	YES

May be inoperative provided that:

- (a) Refueling Control panel Door is checked closed before each flight, and
- (b) Refueling Control panel is deactivated after each refueling operations.

See Operational procedure [MOP.28.25-01P Refueling Control Panel - Refueling Control Panel Door Indication \(on SD Cabin Page\) \(O\)](#)
See Maintenance procedure [MMP.28.25-01-04 Refueling Control Panel - Refueling Control Panel Door Indication \(M\)](#)

28-25-01P Refueling Control Panel - Refueling Control Panel Door Indication (on SD Cabin Page) (O)

Refueling Control Panel - Refueling Control Panel Door Indication (on SD Cabin page) (O)

824eb955-b6b7-48e5-a35a-4f5f5c22946f		16 JUN 2016
ALL		

Exterior Inspection

► REFUELING CONTROL PANEL DOOR..... CHECK CLOSED

28-25-02 Pressure Refueling Cap

f209e6ae-05d1-43a3-9b00-6109dcb88e78		27 MAY 2015
ALL		
EASA - APPROVED		

RI	NI	NR	PLACARD	O	M
A	1	0	NO	NO	YES

May be inoperative provided that:

- (a) Refuel valves are confirmed closed, and
- (b) There is no leakage from the refuel coupling, and
- (c) Operations are limited to three [calendar days](#) .

See Maintenance procedure [MMP.28.25-02 Pressure Refueling Cap \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 28 FUEL SYSTEM	MOP.28 Page n°07
---	--	--------------------------------

28-26-01 LP Valve Position Indicator

3fe7a477-6aa0-4ae1-9611-f763d6d4ad2b	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative.

28-41-01 Tank Temperature Indication

68f419f6-019b-4514-b20e-b6a6389a1d44	12 JUL 2016
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative.

Note

OAT has to be used.

See Operational procedure MOP.28.41-01P Tank Temperature Indication (O)

28-41-01P Tank Temperature Indication (O)

ba7f60eb-7d1d-49e8-bfc5-043bfa1ee553	31 MAY 2024
	ALL

Note

Refer to AFM - LIM-5-70-4-2 Fuel Temperature, for temperature limitation.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 28 FUEL SYSTEM	MOP.28 Page n°08
---	--	--------------------------------

28-42-01 Fuel QTY Indication

e6f3234b-cd6c-4d42-a902-d69f0add1c39	18 MAY 2022
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	<u>YES</u>

One may be inoperative provided that:

- (a) **ETOPS** operations are not conducted,
- (b) The associated FU indication is operative,
- (c) The opposite side Fuel LO LVL alert is checked operative,
- (d) The use of the preselected quantity is prohibited during refueling, and
- (e) The associated tank fuel quantity is checked using manual (magnetic) indicators after each refueling.

Note

- 1) *In addition to the cockpit FUEL QTY INDICATION, the preselected quantity and the repeated fuel quantity indications on the refueling panel must be placarded inoperative*
- 2) *if the Fuel LO LVL alert is triggered on affected side due to Fuel Quantity Indication inoperative: [Refer to MOP.28.42-03 Fuel LO LVL Alert.](#)*

See Operational procedure [MOP.28.42-01P Fuel QTY Indication \(O\)](#)

See Maintenance procedure [MMP.28.42-01 Fuel QTY Indication \(M\)](#)

28-42-01P Fuel QTY Indication (O)

7fe85cc6-1136-4138-b1b5-ffefbb828818	07 MAY 2019
ALL	

- In case of suspected fuel leak or fuel unbalance (an excessive aileron trim indication may help for detection), Maintain X FEED valve CLOSED.
- Monitor fuel consumption using Fuel Flow/Fuel Used indicator.

Note

FUEL MISMATCH and/or FUEL UNBALANCED FWS cautions may be triggered.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 28 FUEL SYSTEM	MOP.28 Page n°09
---	--	--------------------------------

28-42-03 Fuel LO LVL Alert

2f65665e-1063-472a-a0de-a548eb869bcd	REV	26 SEP 2025
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	2	1	NO	YES	YES

One may be inoperative provided that:

- (a) [ETOPS](#) operations are not conducted,
- (b) The associated FU indication is operative,
- (c) The opposite side Fuel LO LVL alert is checked operative,
- (d) The opposite side Fuel Quantity Indication is operative,
- (e) X FEED Valve is checked closed, and
- (f) The associated tank fuel quantity is checked using manual (magnetic) indicators after each refueling.

Note

If Fuel Quantity Indication on affected side is inoperative: [Refer to Item 28-42-01MOP.28.42-01 Fuel QTY Indication.](#)

See Operational procedure MOP.28.42-03P Fuel LO LVL Alert (O)
See Maintenance procedure - [LINK TARGET DOES NOT EXIST](#)

28-42-03P Fuel LO LVL Alert (O)

a551782c-0934-4236-9dd6-af6693f18e0b		15 APR 2025
		ALL

- X FEED valve must be maintained closed in all cases.

Limitations

Flight planning must take into account engine failure as X FEED would not be possible.
Flight time from suitable alternate must not exceed 45 min with one engine operating (elapse time before reaching maxi fuel unbalance).

- Dispatch without any asymmetry.
- Maximum certified fuel unbalance must never be exceeded 730 kg (1 609 lb).
- In case of Fuel LO LVL on opposite side, LAND ASAP.
- Monitor fuel consumption using Fuel Flow/Fuel Used indicator.

28-43-01 Manual (Magnetic) Indicators

7493309d-ca2f-47a2-809f-0c31cd5c479d		22 JUL 2016
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	4	0	YES	NO	NO

All may be inoperative.

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 29 HYDRAULIC SYSTEM	MOP.29 Page n°01
---	--	--

29-11-01 Main HYD Pump

716fd963-64fa-4ef9-b146-3671813c02ce

14 MAY 2025

ALL

29-11-01A GREEN HYD Pump (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	YES

One may be inoperative provided that:

- (a) X FEED valve is open, and
- (b) Both ACW GEN are operative, and
- (c) ACW BTC is operative, and
- (d) DC AUX pump operates normally, and
- (e) Hydraulic fluid QTY is checked prior to each departure, and
- (f) Aircraft is not operated on narrow runways (width < 30 m (98 ft))
- (g) TLU is set to LO SPD position for entire flight
- (h) Maximum IAS is limited to 180 kt
- (i) Maximum crosswind component is limited to 15 kt at landing
- (j) Operations are conducted in compliance with applicable AFM Deviation Guide.

Note

NO GO in case of FTA.

[See Operational procedure MOP.29.11-01-02P Green HYD Pump \(O\)](#)

[See Maintenance procedure MMP.29.11-01 Main HYD Pump \(M\)](#)

- OR -

29-11-01B BLUE HYD Pump (B)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	YES

One may be inoperative provided that:

- (a) X FEED valve is open, and
- (b) Both ACW GEN are operative, and
- (c) ACW BTC is operative, and
- (d) DC AUX pump operates normally, and
- (e) Hydraulic fluid QTY is checked prior to each departure, and
- (f) Aircraft is not operated on narrow runways (width < 30 m (98 ft))

Note

NO GO in case of FTA.

[See Operational procedure MOP.29.11-01-01P Main HYD Pump \(O\)](#)

[See Maintenance procedure MMP.29.11-01 Main HYD Pump \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 29 HYDRAULIC SYSTEM	MOP.29 Page n°02
---	---	--------------------------------

29-11-01-01P Main HYD Pump (O)

4717d7e0-071f-409f-86e7-bd19091dfd17		22 SEP 2022
		ALL

► Two-engine taxi is performed.

29-11-01-02P Green HYD Pump (O)

0e642d46-4226-474d-aab3-eea45fb7b4e8		24 JUN 2025
		ALL

[Refer to AFM - Dispatch with Green Hydraulic Pump Inoperative](#)

29-11-02 DC AUX Pump

b9de7c29-dccf-4cb5-8fb3-34efd8025ad1		11 APR 2025
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	NO

- May be inoperative provided that:
- (a) Aircraft is not operated on narrow runways (width < 30 m (98 ft)),
 - (b) HYD BLUE Pump and HYD GREEN Pump operate normally,
 - (c) Hydraulic X-FEED valve operates normally,
 - (d) Both ACW generators systems operate normally,
 - (e) Wheels are chocked until ACW BUS is powered, and
 - (f) Both EECs operate normally.

[See Operational procedure MOP.29.11-02P DC AUX Pump \(O\)](#)

29-11-02P DC AUX Pump (O)

7038fc30-40b3-49d9-8b69-92e61b6775f1		02 JUN 2022
		ALL

Ensure wheels are chocked until ACW BUS is powered.

• **After both propellers are released:**

- BRAKE HANDLE..... PARKING
- HYD BLUE PUMP..... OFF
 Monitor Blue HYD SYS PRESS decreasing on HYD SYS PRESS indicator.
- HYD X FEED..... ON
 Monitor Blue HYD SYS PRESS increasing on HYD SYS PRESS indicator.
- HYD X FEED.....OFF
 Monitor Blue HYD SYS PRESS decreasing on HYD SYS PRESS indicator.
- HYD BLUE PUMP..... ON
 Monitor Blue HYD SYS PRESS increasing on HYD SYS PRESS indicator.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 29 HYDRAULIC SYSTEM	MOP.29 Page n°03
---	---	--------------------------------

29-21-01 X FEED Valve

0044e23b-6b0c-408c-955f-b27d308316b3	31 JAN 2018
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	<u>YES</u>

May be inoperative provided that

- (a) X FEED Valve is in the closed position
- (b) Hydraulic fluid QTY is checked prior to each departure

See Maintenance procedure [MMP.29.11-01 Main HYD Pump \(M\)](#)

29-31-01 HYD PWR - LO LVL Light

77406a4a-d722-4682-b654-c1372d8ba34b	19 OCT 2020
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	<u>YES</u>

One may be inoperative provided that:

- (a) Hydraulic fluid QTY is checked prior to each departure, and
- (b) X FEED valve is not used in flight.

See Operational procedure [MOP.29.31-01P HYD PWR - LO LVL Light \(O\)](#)

See Maintenance procedure [MMP.29.11-01 Main HYD Pump \(M\)](#)

29-31-01P HYD PWR - LO LVL Light (O)

16243814-da9c-4af5-b662-8e84bd3944f1	16 OCT 2020
	ALL

- Monitor associated HYD SYS pressure indication throughout the flight.

29-32-01-01 LO PR Light - Main HYD Pump

dd1e9352-b475-47f4-8b9a-adc89fcd5db4	19 OCT 2020
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	NO

One may be inoperative provided that the associated HYD SYS pressure indication is operative.

See Operational procedure [MOP.29.32-01-01P LO PR Light - Main HYD Pump \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 29 HYDRAULIC SYSTEM	MOP.29 Page n°04
---	---	--------------------------------

29-32-01-01P LO PR Light - Main HYD Pump (O)

8d81adfd-1160-4044-ba18-2c9e1f87ebc4		16 OCT 2020
		ALL

- Monitor associated HYD SYS pressure indication throughout the flight.

29-32-01-02 LO PR Light - AUX HYD Pump

2cad8fd7-21ef-4945-9a3f-f5c4f810367f		19 OCT 2020
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that the BLUE HYD SYS pressure indication is operative.

29-32-02-01 Pressure Indication - HYD SYS Indication

Pressure Indication - HYD SYS Indication (on SD Hydraulic)

0b0b0dd1-10dc-49bd-939d-f61c6c8258e8		22 SEP 2022
		ALL

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative provided that the associated LO PR alert is operative.

29-32-02-02 Pressure Indication - BRAKE ACCU Indication

Pressure Indication - BRAKE ACCU Indication (on SD Hydraulic)

00689cb9-2ec0-4ca0-ad50-e4f8745c3b0f		22 SEP 2022
		ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that the brake accumulator pressure is checked on the hydraulic bay Indication prior to each flight.

29-32-03 Accumulators Pressure Indicator (Hydraulic Bay)

aafaef20-9423-4a4c-9567-2387f4ce931d		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	3	0	NO	NO	NO

All may be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 29 HYDRAULIC SYSTEM	MOP.29 Page n°05
---	---	--------------------------------

29-33-01 HYD PWR - OVHT Alert (BLUE PUMP or GREEN PUMP)

HYD PWR - OVHT Alert (BLUE PUMP or GREEN PUMP)

229d59ae-b19f-4b68-a107-2f495697fadf		19 OCT 2020
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	2	1	YES	YES	NO

One may be inoperative provided that:

- The associated ACW driven pump is considered inoperative and is not used, and
- The other main hydraulic pump and associated OVHT light is operative.
[Refer to Item 29-11-01 Main HYD Pump](#)

See Operational procedure MOP.29.33-01P HYD PWR - OVHT Alert (BLUE PUMP or GREEN PUMP) (O)

29-33-01P HYD PWR - OVHT Alert (BLUE PUMP or GREEN PUMP) (O)

HYD PWR - OVHT Alert (BLUE PUMP or GREEN PUMP) (O)

1dd81ad4-95ba-4e50-9000-2c692d0d1893		16 OCT 2020
		ALL

During the cockpit preparation, the associated main hydraulic pump is set to OFF.

29-33-02 HYD PWR - AUX PUMP - OVHT Alert

e90c62b8-fa24-41ee-b4dd-a105a6bc893e		18 MAY 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	1	0	YES	YES	NO

May be inoperative provided that:

- Both ACW driven pumps operate normally,
- X-FEED valve is operative,
- Both ACW generator systems operate normally,
- Associated AUX hydraulic pump is considered inoperative and not used,
[Refer to Item 29-11-02 MOP.29.11-02 DC AUX Pump](#),
- Both EEC's operate normally, and
- Wheels are chocked until ACW BUS is powered.

See Operational procedure MOP.29.33-02P HYD PWR - AUX PUMP - OVHT Alert (O)

29-33-02P HYD PWR - AUX PUMP - OVHT Alert (O)

f4c55987-f1fe-4aa9-bec4-748545f5fb40		19 MAY 2022
		ALL

The DC AUX pump is set to OFF.

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 29 HYDRAULIC SYSTEM	MOP.29 Page n°06
--	--	--

cont'd... >>>

Ensure wheels are chocked until ACW BUS is powered.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 30 ICE AND RAIN PROTECTION	MOP.30 Page n°01
---	--	-------------------------

30-11-01 De Ice Valve (PRSOV)

e5e5e9c1-d6ee-4c12-8488-6642ccce52f3		18 MAY 2022
		ALL

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One may be inoperative in closed position provided that:

- (a) **ETOPS** Operations are not conducted, and
- (b) Aircraft is not operated into known or forecast [icing conditions](#).

30-11-02 Airframe De Icing Boots System

9cb721c3-82df-45d4-8f37-c1491f0e0f42		19 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
B	1	0	YES	NO	NO

May be inoperative provided that:

- (a) **ETOPS** Operations are not conducted, and
- (b) Aircraft is not operated into known or forecast [icing conditions](#)

30-11-03-01 DE ICING - SAT below -20°C (Engine Airframe FAST - SLOW Mode Selector)

33de7f54-4ff2-4fe3-9d38-82ccae56a501		19 OCT 2020
		ALL
		EASA - APPROVED

30-11-03-01A (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that MODE SEL AUTO is operative.

- OR -

30-11-03-01B (B)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that aircraft is not operated into known or forecast [icing conditions](#) when mode FAST is inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 30 ICE AND RAIN PROTECTION	MOP.30 Page n°02
---	--	--------------------------------

30-11-03-02 De Icing OVRD System

b88fbb58-0eb5-49ea-b588-054626533385		19 OCT 2020
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative.

30-11-04 DE ICING - AFR AIR BLEED FAULT Light

DE ICING - AFR AIR BLEED FAULT Light

0060837b-be13-44f2-a251-de20ecf20ea3		19 OCT 2020
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	1	0	YES	YES	NO

May be inoperative provided that AIRFRAME FAULT light is checked operative.

See Operational procedure MOP.30.11-04P DE ICING - AFR AIR BLEED FAULT Light (O)

30-11-04P DE ICING - AFR AIR BLEED FAULT Light (O)

DE ICING - AFR AIR BLEED FAULT Light (O)

9daf8b72-be05-41a1-9353-d3a0aa718405		16 OCT 2020
		ALL

With Bleed Supply :

- ▶ AFR AIR BLEED..... CHECK ON
- ▶ DE ICING AIRFRAME..... ON
- ▶ AIRFRAME FAULT light.....CHECK TURNED OFF
- ▶ AFR AIR BLEED.....OFF
- ▶ AIRFRAME FAULT light..... CHECK TURNED ON
- ▶ AFR AIR BLEED..... ON

30-11-06 DE ICING and ANTI ICING - MODE SEL AUTO

4862a45e-710d-435c-a728-e683ba59436a		19 OCT 2020
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that MAN mode is operative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 30 ICE AND RAIN PROTECTION	MOP.30 Page n°03
---	--	-------------------------

30-21-01 Engine De Icing Boots System

cb7794f5-e4de-4146-a020-904c2fa485d6	19 OCT 2020
	ALL

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One may be inoperative provided that:

- (a) **ETOPS** Operations are not conducted, and
- (b) Aircraft is not operated into known or forecast [icing conditions](#).

30-21-02 DE ICING - ENG AIRFRAME FAULT Alert

0945f887-2973-4568-8003-f58fd783ccda	21 OCT 2020
	ALL

RI	NI	NR	PLACARD	O	M
B	3	0	YES	NO	NO

All may be inoperative provided that:

- (a) **ETOPS** Operations are not conducted,
- (b) Associated device is considered inoperative, and
- (c) Aircraft is not operated into known or forecast [icing conditions](#).

30-30-01 Probe Heating System - Pitot

9fd34c2f-47e9-41ea-b597-6f53ffb8261f	21 OCT 2020
	ALL

RI	NI	NR	PLACARD	O	M
B	3	2	YES	NO	NO

One may be inoperative provided that:

- (a) **ETOPS** Operations are not conducted, and
- (b) Aircraft is not operated into known or forecast [icing conditions](#).

30-30-02 Probe Heating System - Static

e62941b8-c1da-43a4-940e-874f4d956600	19 OCT 2020
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	6	5	YES	NO	NO

One may be inoperative provided that both STBY are operative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 30 ICE AND RAIN PROTECTION	MOP.30 Page n°04
---	--	--------------------------------

30-31-01 Probe Heating System - TAT

ecab11d0-5ee4-4a03-87d9-65ab7884aa6a		18 MAY 2022
		ALL

RI	NI	NR	PLACARD	O	M
B	2	1	YES	<u>YES</u>	NO

One may be inoperative provided that valid TAT is selected.

See Operational procedure [MOP.30.31-01P Probe Heating System - TAT \(O\)](#)

30-31-01P Probe Heating System - TAT (O)

23b234da-49f0-4dcc-b548-fc4275a58d3e		19 MAY 2022
		ALL

- Select valid TAT in VCP ENG OAT page.

30-31-02 Probe Heating System - Alpha

0b4cec80-e414-4579-b7de-97caae3f3ed		19 OCT 2020
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	2	1	YES	NO	NO

One may be inoperative provided that aircraft is not operated into known or forecast [icing conditions](#) .

30-31-04 Probes HTG Fault Lights (ALPHA, TAT, STAT)

a9f7394c-3c27-4b0a-95cc-1225f72e3939		18 MAY 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	7	4	YES	<u>YES</u>	NO

May be inoperative provided that:

- Two static alerts are operative,
- One TAT alert is operative,
- One alpha alert is operative, and
- Heating system associated to failed alerts are checked operative prior to each departure.

See Operational procedure [MOP.30.31-04P Probes HTG Fault Lights \(ALPHA, TAT, STAT\) \(O\)](#)

30-31-04P Probes HTG Fault Lights (ALPHA, TAT, STAT) (O)

8e78a10f-678e-41b0-bd21-9ce9a5b9a920		19 MAY 2022
		ALL

Operational procedure for checking TAT heating:

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 30 ICE AND RAIN PROTECTION	MOP.30 Page n°05
---	--	-------------------------

cont'd... >>>

CAUTION

- ▶ Ensure TAT probe cover is removed before starting the test
- ▶ On the Right Hand Maintenance Panel, on the WEIGHT ON WHEELS section of panel 702V, open safety guard and place MODE switch in FLT position
- ▶ Set affected TAT Probe heating to ON position
- ▶ Manually check TAT probe is heated
- ▶ Place MODE switch in NORM position and close the safety guard
- ▶ Set affected TAT Probe heating back to OFF position.

30-31-05 PITOT Probes HTG Fault Lights

270c26c7-6cd1-4b5d-80a5-e616241c7fad

18 MAY 2022

ALL

30-31-05A (A)

RI	NI	NR	PLACARD	O	M
B	3	2	YES	NO	<u>YES</u>

May be inoperative provided that:

- (a) Two pitot alerts are operative, and
- (b) Pitot heating system associated to failed alert is checked operative prior to each departure.

See Maintenance procedure MMP.30.31-05 PITOT Probes HTG Fault Lights (M)

- OR -

30-31-05B (B)

RI	NI	NR	PLACARD	O	M
-	3	2	YES	NO	NO

May be inoperative provided that:

- (a) Probe heating system - Pitot is considered inoperative, [Refer to Item 30-30-01MOP.30.30-01 Probe Heating System - Pitot](#), and
- (b) [ETOPS](#) Operations are not conducted, and
- (c) Aircraft is not operated into known or forecast [icing conditions](#).

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 30 ICE AND RAIN PROTECTION	MOP.30 Page n°06
---	--	--------------------------------

30-53-01 Anti Icing Horns System

92777cb6-563d-4c02-b4f6-01fd7afe2a4d		21 OCT 2020
ALL		

RI	NI	NR	PLACARD	O	M
A	2	1	YES	NO	NO

May be inoperative provided that:

- (a) **ETOPS** Operations are not conducted,
- (b) Aircraft is not operated into known or forecast **icing conditions** , and
- (c) Operations are limited to three **calendar days** .

30-53-02 ANTI ICING - HORNS FAULT Light

ad191b4c-b895-4c6c-8e7b-6d81d6165408		21 OCT 2020
ALL		
EASA - APPROVED		

RI	NI	NR	PLACARD	O	M
A	2	1	YES	NO	NO

One may be inoperative provided that:

- (a) Associated system is considered inoperative, [Refer to Item 30-53-01MOP.30.53-01 Anti Icing Horns System](#), and
- (b) Operations are limited to three **calendar days**.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 30 ICE AND RAIN PROTECTION	MOP.30 Page n°07
---	--	-------------------------

30-60-01 Windshield Heating System

0c843bff-449f-477f-aff5-4c6ee8c24652

03 NOV 2020

ALL

EASA - APPROVED

30-60-01A (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One may be inoperative provided that aircraft is not operated into known or forecast [icing conditions](#) .

- OR -

30-60-01B (B)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One may be inoperative provided that both side windows heating are operative.

- OR -

30-60-01C (C)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

May be inoperative provided that:

- (a) Both packs are operative,
- (b) Aircraft is not operated into known or forecast [icing conditions](#), and
- (c) Both side windows heating are operative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 30 ICE AND RAIN PROTECTION	MOP.30 Page n°08
---	--	--------------------------------

30-60-02 Side Windows Heating System

1f46d2e1-3139-4745-b5d8-60abe95c8d73		21 OCT 2020
		ALL
		EASA - APPROVED

30-60-02A (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One side window heating may be inoperative provided that flight is not conducted into known or forecast [icing conditions](#).

- OR -

30-60-02B (B)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

Both may be inoperative provided that:

- (a) Flight is not conducted into known or forecast [icing conditions](#),
- (b) Both windshield heating are operative, and
- (c) Both ACW GEN are operative.

30-60-03 SIDE WINDOWS FAULT Light

3885e27d-3b9f-4455-9209-06a781f03003		18 MAY 2022
		ALL
		EASA - APPROVED

30-60-03A (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	NO

May be inoperative provided that associated alert is checked operative.

[See Operational procedure MOP.30.60-03P SIDE WINDOWS FAULT Light \(O\)](#)

- OR -

30-60-03B (B)

RI	NI	NR	PLACARD	O	M
-	1	0	YES	NO	NO

May be inoperative provided that both side window heating are considered inoperative ([Refer to Item 30-60-02MOP.30.60-02 Side Windows Heating System](#)).

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 30 ICE AND RAIN PROTECTION	MOP.30 Page n°09
---	--	--------------------------------

30-60-03P SIDE WINDOWS FAULT Light (O)

dd360ef4-d23c-48c7-968c-53124e951ebd

16 OCT 2020

ALL

- ▶ SIDE WINDOWS pb ON
- ▶ C/B ANTI/DE ICING/WSHLD HTG R IND L/SIDE WDO/L CTL PULL
- ▶ MC light + SC CHECK
- ▶ A-ICING WINDOWS amber on EWD CHECK
- ▶ SIDE WINDOWS amber on MFD CHECK
- ▶ C/B ANTI/DE ICING/WSHLD HTG R IND L/SIDE WDO/L CTL PRESS
- ▶ SIDE WINDOWS pb OFF

30-60-04 WINDSHIELD HTG FAULT Light

544c761c-1912-464e-88b4-24f8ceb8228c

19 OCT 2020

ALL

EASA - APPROVED

30-60-04A (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	NO

One may be inoperative provided that respective heating system is checked operative prior to each departure.

[See Operational procedure MOP.30.60-04P WINDSHIELD HTG FAULT Light \(O\)](#)

- OR -

30-60-04B (B)

RI	NI	NR	PLACARD	O	M
-	2	1	YES	NO	NO

One may be inoperative provided that associated windshield heating is considered inoperative.

[Refer to Item 30-60-01MOP.30.60-01 Windshield Heating System](#)

30-60-04P WINDSHIELD HTG FAULT Light (O)

e9aebac7-fc3a-4680-b537-7750a52f7f97

16 OCT 2020

ALL

- ▶ Check by hand the correct functioning of the respective heating system.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 30 ICE AND RAIN PROTECTION	MOP.30 Page n°10
---	--	--------------------------------

30-61-01 Propeller Anti Icing System

a45d12ec-f83a-452f-a361-4208addf6a7b		21 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative provided that:

- (a) **ETOPS** Operations are not conducted, and
- (b) Aircraft is not operated into known or forecast [icing conditions](#).

30-61-02 ANTI ICING - PROP ON Light

a5563114-23f6-4176-8c2b-dc7a824d81f0		19 OCT 2020
		ALL
	EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	2	0	YES	YES	NO

May be inoperative provided that FAULT alert is operative.

See Operational procedure [MOP.30.61-02P ANTI ICING - PROP ON Light \(O\)](#)

30-61-02P ANTI ICING - PROP ON Light (O)

54458222-7458-4db8-8588-7e71500b0c3c		16 OCT 2020
		ALL

- **While engines are running with CL at AUTO**

- ▶ BRAKE HANDLE..... PARKING
- ▶ ACW generation..... OFF
- ▶ PROP ANTI-ICING affected..... ON
- ▶ FAULT alert..... CHECK GENERATED
- ▶ PROP ANTI-ICING affected..... AS RQRD
- ▶ ACW generation ON

30-61-03 MODE SEL SAT below -10°C (Propeller Anti Icing Mode Selector)

MODE SEL SAT below -10°C (Propeller Anti Icing Mode Selector)

544d7e17-a723-4207-8b45-74edeb00df54		21 OCT 2020
		ALL
	EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that aircraft is not operated into known or forecast [icing conditions](#) .

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 30 ICE AND RAIN PROTECTION	MOP.30 Page n°11
---	--	--------------------------------

30-61-04 ANTI ICING - PROP - FAULT Light

d40e167e-d16c-4494-a40f-8b38adb782fe	19 OCT 2020
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative provided that aircraft is not operated into known or forecast [icing conditions](#) .

30-65-01-01 Windshield Wiper System

12d42b87-0494-45dc-8ad1-d13cf120ffe3	11 APR 2025
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative provided that:

- No precipitation is forecasted during a period from one hour before until one hour after the estimated time of departure and arrival at the takeoff and destination aerodromes, and
- Affected wipers are not part of the equipment required for the intended operation.

Note

- Takeoff and destination aerodromes include any takeoff and destination alternate aerodromes required by the operational rules.
- Check Flight Manual for minimum required equipment for [CAT II](#) approaches and low visibility takeoff.

30-65-01-02 Windshield Wipers - High Speed Function (FAST)

81ce4e40-165f-4527-944c-4e86f1b1bf2f	21 OCT 2020
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative provided that the associated low speed function is operative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 30 ICE AND RAIN PROTECTION	MOP.30 Page n°12
---	---	--

30-65-01-03 Windshield Wipers - Low Speed Function (SLOW)

e8e50de0-f99c-424c-b1d5-9452250f9b6b	21 OCT 2020
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative provided that the associated high speed function is operative.

30-70-01 Ice & Rain Protection Systems (RH Maintenance Panel)

86ac3b58-8cc5-440f-9048-1eca0547e636	18 MAY 2022
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
-	-	0	NO	NO	NO

May be inoperative provided:

- (a) Airplane is not operated in known or forecast [icing conditions](#), and
- (b) Associated system is considered inoperative.

[Refer to Item 30-60-01MOP.30.60-01 Windshield Heating System](#)

[Refer to Item 30-61-01MOP.30.61-01 Propeller Anti Icing System](#)

30-80-01 Ice Detection System

743a6860-f75e-4559-8250-72fc05b153df	12 JUL 2016
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
B	1	0	YES	NO	YES

May be inoperative provided that:

- (a) The aircraft is not operated into known or forecast [icing conditions](#), and
- (b) The ice detection system is deactivated.

[See Maintenance procedure MMP.30.80-01 Ice Detection System \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 30 ICE AND RAIN PROTECTION	MOP.30 Page n°13
---	---	--

30-80-03 Ice Evidence Probe IEP

7782dcf6-c30d-44fb-8c59-1fe65971d690		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	1	1	NO	NO	NO

NO GO.

Note

[Refer to Item 33-49-02MOP.33.49-02 IEP Light](#)

30-80-04 ICING AOA Light

a5f49152-89ab-4fd8-bae1-e410b99d645c		12 JUL 2016
		ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	NO

May be inoperative provided that the ICING AOA green label on FMA is checked operative.

[See Operational procedure MOP.30.80-04P Icing AOA Light \(O\)](#)

30-80-04P Icing AOA Light (O)

5ce9792d-e9a5-4d19-9173-8ba944385626		01 FEB 2018
		ALL

• **While engines are running with CL at AUTO:**

- ▶ HORNS..... ON
- ▶ ICING AOA label on FMA CHECK CAME ON
- ▶ HORNS..... OFF
- ▶ ICING AOA pb PRESS
- ▶ ICING AOA label on FMA CHECK TURNED OFF

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°01
---	---	--------------------------------

31-21-01 Clock

Clock Function

ee2e3874-5762-4a19-ad1e-8bf85890bdc5

22 SEP 2022

ALL

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

May be inoperative provided that an accurate timepiece is operative on the flight deck indicating the time in hours, minutes and seconds.

Note

On the basis that the required timepiece(s) does not need to be approved, an accurate pilot's wristwatch that indicates hours, minutes and seconds would be acceptable. On the EWD a FMS time indication with hours, minutes and seconds would also be acceptable.

31-31-03-01 MPC - FDAU Function

7be44116-b9ac-4ec6-8927-f94eb0c85619

19 JUL 2016

ALL

RI	NI	NR	PLACARD	O	M
-	1	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) The DFDR is considered inoperative ([Refer to Item 31-32-01 Digital Flight Data Recorder - DFDR](#)), and

Note

No parameter acquisition

- (b) The NL indication is inoperative ([Refer to Item 77-11-02 NL Indicator](#)), and
- (c)) The APM FAULT and EWD Flight Time functions are inoperative ([Refer to Item 31-31-03-02 MPC with FDAU Function - APM FAULT](#) and [Refer to Item 31-31-03-03 MPC with FDAU Function - EWD Flight Time](#)).

See Operational procedure MOP.31.31-03-01P MPC - FDAU Function (O)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°02
---	---	--------------------------------

31-31-03-01P

MPC - FDAU Function (O)

928a1399-3296-414c-927b-f9bb2d6c5fa3		27 MAY 2015
		ALL

The ELEC DC ESS alert is inoperative on EWD (Flight Warning) and on MFD (ELEC s-page). During the flight, if the following systems are simultaneously lost:

- GREEN PUMP,
- FUEL QUANTITY,
- MCP F/O ,
- EFCP F/O ,
- IOM -22,
- IOM -23

The following failure procedure must be applied: **DC ESS BUS OFF** .

The ELEC DC EMER alert is inoperative on EWD (Flight Warning) and on MFD (ELEC s-page). During the flight, if the following systems are simultaneously lost:

- BLUE PUMP,
- VHF 1,
- MCP CAPT ,
- EFCP CAPT ,
- CLOCK CAPT .

The following failure procedure must be applied: **DC EMER BUS OFF** .

The ELEC AC STBY alert is inoperative on EWD (Flight Warning) and on MFD (ELEC s-page). During the flight, if the following indications are simultaneously lost n the Flight Control window (on EWD):

- PITCH Trim,
- ROLL Trim,
- YAW Trim,
- FLAP Position,

The following failure procedure must be applied: **AC STBY BUS FAULT** .

31-31-03-02

APM FAULT Alert

346a749d-a586-4bd1-84a0-d687fb4669df		07 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	NO

May be inoperative provided that APM is selected OFF.

See Operational procedure [MOP.31.31-03-02P APM FAULT Alert \(O\)](#)

31-31-03-02P

APM FAULT Alert (O)

d362ab64-7fe9-42df-a840-22f2e2fff379		31 MAY 2024
		ALL

► APM.....

OFF

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°03
---	---	--------------------------------

cont'd... >>>

- ▶ Monitor the ICING CONDITION and IAS & V/S (for NORMAL, ABNORMAL and EMERGENCY procedures for flight in ICING and SEVERE ICING CONDITIONS):
[Refer to QRH - SEVERE ICING DETECTION Abnormal Procedure](#) for severe icing indications information
[Refer to AFM - ADDITIONAL NORMAL PROCEDURES Procedure for Icing Conditions](#)
- ▶ Review Recommended Maximum Icing Flight Level.

31-31-03-03 MPC - EWD Flight Time

84480593-5a6b-4653-a11f-b153b59ae4ac		22 NOV 2017
ALL		

RI	NI	NR	PLACARD	O	M
D	1	0	NO	NO	NO

May be inoperative.

31-31-03-04 MPC - DMU ACMS (Maintenance)

82c207f5-58bf-417f-a687-26400c7228c0		19 JUL 2016
ALL		

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°04
---	---	--------------------------------

31-32-01 Digital Flight Data Recorder - DFDR

5efc9374-42aa-4167-8874-6d591e6fb872		16 FEB 2018
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	1	0	YES	NO	NO

May be inoperative provided that:

- (a) Aircraft does not exceed 8 further consecutive **flights** with the Flight Data Recorder unserviceable, and
- (b) Not more than 72 h have elapsed since the Flight Data Recorder was found to be unserviceable, and
- (c) Any Cockpit Voice Recorder required to be carried is operative.

Note

DFDR is considered to be inoperative when any of the following conditions exists:

- *Loss of the flight recording function is evident to the flight crew during pre-flight check e.g. by means of a system status monitor, or*
- *The need for maintenance has been identified by the system monitors, where available, with the setting of an indicator and the cause of that setting has not been determined, or*
- *Analyses of recorded data or maintenance actions have shown that more than 5 % of the total number of individual parameters (variable and discrete) required to be recorded for the particular aircraft are not being recorded properly.*

31-32-03 QAR

75f35489-33ac-4ce9-96fc-7863fa8fdc8c		08 APR 2019
		ALL

[Refer to 31-31-03-04 MPC - DMU ACMS \(Maintenance\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°05
---	---	--------------------------------

31-32-04 DFDR Required Parameters - Variable and Discrete

52a6bf5c-1b16-43a3-a367-b3424c5bf8bc		11 APR 2025
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	-	-	YES	NO	<u>YES</u>

Up to 5 % of the total number of required parameters may be inoperative for a maximum of 90 calendar days or until the next maintenance inspection, whichever occurs first.

Note

DFDR is considered inoperative if more than 5 % of the total number of required parameters are not recorded properly. [Refer to Item 31-32-01 Digital Flight Data Recorder - DFDR.](#)

See Maintenance procedure DFDR Required Parameters - Variable and Discrete (M)

31-48-01-01 Multi Function Computer (MFC) Module 1A

4b26611f-5a51-4f14-8317-99829c679730		25 JAN 2018
		ALL

NO GO

31-48-01-02 Multi Function Computer (MFC) Module 2A

002afa56-aebd-40ad-9230-3f24b1c8d352		25 JAN 2018
		ALL

NO GO

31-48-01-03 Multi Function Computer (MFC) Module 1B

c3c33b51-23fb-4536-ac8c-bee3f18ef00d		25 JAN 2018
		ALL

NO GO

31-48-01-04 Multi Function Computer (MFC) Module 2B

ff207b22-5c57-4f1d-b34a-eab4e882d535		25 JAN 2018
		ALL

NO GO

31-48-06 MFC Module FAULT Light

ec564dc5-d1cf-48c8-ad69-6d54628d78c8		27 MAY 2015
		ALL

NO GO

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°06
---	---	--------------------------------

31-53-02 Master Warning (MW) Light and Associated Cancel Function

7ba6e91a-21b2-4a7b-8f01-83caf293a2f6		27 MAY 2015
ALL		

NO GO

31-53-03 Master Caution (MC) Light and Associated Cancel Function

f414b9f7-5362-4422-a5e8-576256e87de2		27 MAY 2015
ALL		

NO GO

31-53-05 EMER AUDIO CANCEL

9e338e46-3627-4e45-a4ab-7d0a650cdfb4		27 MAY 2015
ALL		
EASA - APPROVED		

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative.

31-53-06 TO CONFIG Test

163a4151-db72-40e4-9f4a-841d39b0aa67		27 MAY 2015
ALL		
EASA - APPROVED		

RI	NI	NR	PLACARD	O	M
B	1	0	YES	NO	NO

May be inoperative.

31-60-01 Display Unit (DU)

84432eb5-d287-477d-ae6a-f93d9cd9efc1		14 MAY 2025
ALL		

RI	NI	NR	PLACARD	O	M
C	5	4	YES	YES	NO

One Display unit may be inoperative among DU #1 and DU #3 and DU #5 provided that:

- (a) CAPT // PFD/MFD/EWD pb-sw reversion is checked operative, and
- (b) F/O // PFD/MFD/EWD pb-sw reversion is checked operative.

Note

NO GO in case of FTA.

See Operational procedure MOP.31.60-01P Display Unit (DU) (O)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°07
---	---	--------------------------------

31-60-01P Display Unit (DU) (O)

b92016a0-6c9c-4875-a7f3-6c97b8e45f65

22 SEP 2022

ALL

During Preliminary Cockpit Preparation

- ▶ Check on the DU #2 that the CAPT sw allows to swap the format displays : PFD , EWD and MFD .
- ▶ Check on the DU #4 that the F/O sw allows to swap the format displays : PFD , EWD and MFD .
- ▶ Apply instructions described in A08-03-03 "UTILISATION EN MODE DEGRADÉ".

31-60-02-01 MCP

c926cc8d-8aca-4de9-ba4c-9812b50af55b

14 MAY 2025

ALL

RI	NI	NR	PLACARD	O	M
B	2	1	NO	<u>YES</u>	NO

One may be inoperative provided that:

- The MCP on the **Pilot Flying** side is operative, and
- Both radio tuning through MCDU are checked operative.

Note

NO GO in case of FTA.

See Operational procedure MOP.31.60-02-01P MCP (O)

31-60-02-01P MCP (O)

8d7630d1-df0f-47bd-a515-daf1e800b813

27 MAY 2015

ALL

The flight crew have to check that the radio tuning is operative through at least one RMA on both MCDU .

31-60-02-02 MCP - COM pb

b230b1ac-eb4b-443c-82c1-835ae98d17ec

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

One may be inoperative provided that both MCDU are operative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°08
---	---	--------------------------------

31-60-02-03 MCP - NAV pb

29333183-db2b-4480-971d-aa9a5f0b0a5f		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

One may be inoperative provided that both MCDU are operative.

31-60-02-04 MCP - SURV pb

420d0039-1745-4fea-bbf1-760ae143fdb8		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
B	2	1	NO	NO	NO

One may be inoperative provided that the SURV pb of the **Pilot Flying** side is operative.

31-60-02-05 MCP - ESC pb

372eee3f-13d8-4b78-af86-dd6292110427		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or both may be inoperative.

31-60-02-06 MCP - ENTER pb and Multi Directional Pad

93959590-b249-4f5d-82cc-2d16e50b4a7d		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
B	2	1	NO	NO	NO

One may be inoperative provided that both MCDU are operative.

31-60-02-07 MCP - Numeric Keyboard

b96a138d-21b4-4506-8be3-324283206377		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

One may be inoperative provided that both MCDU are operative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°09
---	---	--------------------------------

31-60-03-01 EFCP

25547465-97b2-4d23-af8e-60e85c0b79cb

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
A	2	1	NO	NO	NO

The right side EFCP may be inoperative provided that the operations are limited to two calendar days .

31-60-03-02 EFCP - MFD Control - SYS Pushbutton

9cf52b2f-d0f3-4154-8a1a-3b34b7f50530

14 MAY 2025

ALL

RI	NI	NR	PLACARD	O	M
A	2	1	NO	NO	NO

One may be inoperative provided that:

- (a) The SYS pb of the **Pilot Flying** side is operative and,
- (b) Operations are limited to two calendar days .

Note

NO GO in case of FTA.

31-60-03-03 EFCP - MFD Control - ND Pushbutton

55d3980b-2d2d-41b1-ae5d-82ce2f21d307

14 MAY 2025

ALL

RI	NI	NR	PLACARD	O	M
B	2	1	NO	NO	NO

One may be inoperative provided that the ND pb of the **Pilot Flying** side is operative.

Note

NO GO in case of FTA.

31-60-03-04 EFCP - MFD Control - PERF Pushbutton

5c6b8a80-440b-4290-9123-a86ad9d41ad8

14 MAY 2025

ALL

RI	NI	NR	PLACARD	O	M
B	2	1	NO	NO	NO

One may be inoperative provided that:

- (a) PERF pb of the **Pilot Flying** side is operative, and
- (b) MCP of the **Pilot Flying** is operative.

Note

NO GO in case of FTA.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°10
---	---	--------------------------------

31-60-03-05 EFCP - MFD Control - MISC Pushbutton

0cb56485-4883-4777-913f-c881d790da99		07 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
D	2	0	NO	NO	NO

One or both may be inoperative.

31-60-03-06 EFCP - MFD Control - MAP Pushbutton

a5dab56c-291a-4585-aab5-15390100dbe4		07 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
D	2	0	NO	NO	NO

One or both may be inoperative.

31-60-03-07 EFCP - MFD Control - VID Pushbutton

321099fd-2d0d-4f2e-a46d-4ea2fc118bd5		18 MAY 2022
		ALL

RI	NI	NR	PLACARD	O	M
D	2	0	NO	NO	NO

One or both may be inoperative.

31-60-03-08 EFCP - NAV Control - BRG Pushbutton

3652261b-7eda-438c-8a31-a089cc5a3eb2		07 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
B	4	3	NO	NO	NO

One may be inoperative provided that BRG #1 is available on the **Pilot Flying** side.

31-60-03-09 EFCP - NAV Control - RANGE Pushbutton

7728fad8-40bb-482a-9249-5d2b907bedea		07 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
B	2	1	NO	NO	NO

One may be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°11
---	---	--------------------------------

31-60-03-10 EFCP - NAV Control - FORMAT Rotary Selector

312ab00a-dba0-4716-9200-099a1f1f7c32		07 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
B	2	1	NO	NO	NO

One may be inoperative.

31-60-03-11 EFCP - PROC Control - PROC UP Pushbutton

a95d303a-a25f-41b7-a4e8-657553f38fb6		07 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

One may be inoperative.

31-60-03-12 EFCP - PROC Control - PROC DOWN Pushbutton

8d201b69-c512-4304-b3c3-d25dce4cca91		07 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

One may be inoperative.

31-60-03-13 EFCP - PROC Control - ENTER PROC Pushbutton

85fb9411-61b6-49b0-af50-87f766776ce8		07 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

One may be inoperative.

31-60-03-14 EFCP - PROC Control - PROC MENU Pushbutton

fd39c5ea-7d40-4fa9-9899-521023ee0569		07 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
C	1	0	NO	NO	NO

May be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°12
---	---	--------------------------------

31-60-03-15 EFCP - PROC Control - MAN DEL Pushbutton

4de6010b-2286-462e-a789-7a821e87234f		07 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
C	1	0	NO	NO	NO

May be inoperative.

31-60-03-16 EFCP - PROC Control - RCL Pushbutton

11310f86-caad-4f32-8b44-92ff807ab7c1		07 OCT 2020
		ALL

NO GO

31-60-03-17 EFCP - PROC Control - CLR Pushbutton

80ac6035-21c9-4d8a-b48d-299d6f5a552c		07 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
B	1	0	NO	NO	NO

May be inoperative.

31-60-04-01 ICP

cc75d4c2-7ea4-4901-a41c-1c7843b5fc10		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
-	2	1	NO	NO	NO

One may be inoperative provided that associated ADC is [considered inoperative](#) . [Refer to Item 34-11-01Air Data Computer \(ADC\)](#) .

31-60-04-02 ICP - BARO SET ROTARY SELECTOR

44389ce4-e47f-467f-b91f-8e7e109199ee		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
-	2	1	NO	NO	NO

One may be inoperative provided that associated ADC is [considered inoperative](#) . [Refer to Item 34-11-01Air Data Computer \(ADC\)](#) .

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°13
---	---	--------------------------------

31-60-04-03 ICP - PUSH STD Pb

1ca416e2-0c35-4585-aded-33e9a1f9e260		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or both may be inoperative.

31-60-04-04 ICP - DH MDA SELECTION

b4f6bc1d-f132-429b-8adf-0235941b32b2		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or both may be inoperative provided that approach procedures do not require DH use.

31-60-04-05 ICP - DH MDA ROTARY SELECTOR

e1f879d9-29ea-4479-9ef0-8e292d037fed		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or both may be inoperative provided that approach procedures do not require DH use.

31-60-04-06 ICP - SPD TGT Knob

671c6c69-9caa-4187-ac6b-0afee5960971		27 MAY 2015
		ALL

[Refer to SPD TGT Knob](#)

31-60-04-07 ICP - AUTO MAN pb

84904bc9-a2ca-40a2-9f35-ca74c2e87b28		27 MAY 2015
		ALL

[Refer to AUTO - MAN Pushbutton](#)

31-60-05-01 MCDU

8b319b9f-414d-4ecc-b916-7e68f6be7965		29 MAR 2023
		ALL

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

One may be inoperative except for RNP 4 and RNAV 10 operations.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 31 INDICATING AND RECORDING SYSTEMS	MOP.31 Page n°14
---	---	--------------------------------

31-60-06 DU Switch Reversion

d6050216-3eff-468a-ab70-0815534663a6		27 MAY 2015
ALL		

31-60-06A ETOPS Operations (A)

RI	NI	NR	PLACARD	O	M
C	2	1	NO	YES	NO

One may be inoperative provided that all Display Units are operative.

See Operational procedure [MOP.31.60-06P DU Switch Reversion \(O\)](#)

- OR -

31-60-06B (B)

RI	NI	NR	PLACARD	O	M
C	2	0	NO	YES	NO

One or both may be inoperative provided that:

- (a) [ETOPS](#) Operations are not conducted, and
- (b) All Display Units are operative

See Operational procedure [MOP.31.60-06P DU Switch Reversion \(O\)](#)

31-60-06P DU Switch Reversion (O)

3a2838e0-cf71-480c-97b9-cb2b86c30cca		14 MAY 2025
ALL		

During Preliminary Cockpit Preparation

In case of in flight DU loss, task sharing will be defined as stated in the FCOM ([Refer to FCOM - PRO.NOP.NSU.31.1.1 DU](#)).

31-70-01 MFC - Indications and Controls (RH Maintenance Panel)

02f8a087-e0ed-4f74-84a9-adc6067189eb		21 OCT 2020
ALL		
EASA - APPROVED		

RI	NI	NR	PLACARD	O	M
C	-	0	NO	NO	NO

May be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 32 LANDING GEAR	MOP.32 Page n°01
---	---	--------------------------------

32-31-01 Anti Retraction System (Lever Latch)

702c29d7-bf4e-498a-a08d-0f89b28f5cd2	27 MAY 2015
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative.

32-31-02 Landing Gear Lever Integrated Red Light

bae3c9a5-aa99-4b3c-8ab9-83bc06c932a2	27 MAY 2015
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative.

32-31-03 Landing Gear Retraction or Extension and Unlocking System

e0978cee-7ee0-4d6e-87ec-fdb753c0ce1f	14 MAY 2025
ALL	

RI	NI	NR	PLACARD	O	M
A	1	0	YES	YES	NO

May be inoperative provided that:

- (a) Operations are limited to two calendar days,
- (b) ETOPS operations are not conducted,
- (c) Operations are performed with landing gear down, and
- (d) Operations are conducted in compliance with applicable AFM Deviation Guide.

Note

NO GO in case of FTA.

See Operational procedure Landing Gear Retraction System and Unlocking System (O)

32-31-03P Landing Gear Retraction System and Unlocking System (O)

Landing Gear Retraction or Extension and Unlocking System (O)

d6069444-c305-4d0b-af87-e9631f6ca302	24 JUN 2025
ALL	

Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Dispatch with Landing Gear Down

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 32 LANDING GEAR	MOP.32 Page n°02
---	--	--

32-32-04 Brake ACCU Pressure Indicator (on Maintenance Panel)

8bbcf1f9-0c2e-4cc2-a399-97b79083c012		27 MAY 2015
ALL		

RI	NI	NR	PLACARD	O	M
D	1	0	NO	NO	NO

May be inoperative.

32-42-01 Wheel Brake

ec24e839-e325-4529-9d21-f7aff37255af		24 JUN 2025
ALL		
EASA - APPROVED		

RI	NI	NR	PLACARD	O	M
C	4	3	YES	<u>YES</u>	<u>YES</u>

One may be inoperative provided that:

- (a) Anti-skid system is operative,
- (b) Affected brake is deactivated,
- (c) Landing gear is left down for 1 min after takeoff except in case of emergency, and
- (d) Operations are conducted in compliance with applicable AFM Deviation Guide.

Note

NO GO in case of FTA.

See Operational procedure [MOP.32.42-01P Wheel Brake \(O\)](#)

See Maintenance procedure [MMP.32.42-01 Wheel Brake \(M\)](#)

32-42-01P Wheel Brake (O)

80e534a1-3e56-4eba-a8c4-991fecbafdfa		24 JUN 2025
ALL		

[Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Dispatch with One Wheel Brake Deactivated.](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 32 LANDING GEAR	MOP.32 Page n°03
---	---	--------------------------------

32-42-02 Anti-skid System

5aba667f-0112-40a0-84fa-98d4b0046c6f	14 MAY 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that operations are conducted in compliance with applicable AFM Deviation Guide.

Note

NO GO in case of FTA.

See Operational procedure MOP.32.42-02P Anti-skid System (O)

32-42-02P Anti-skid System (O)

99f1e92a-2b3f-4e1a-b75b-18a4e01ecbdf	24 JUN 2025
	ALL

Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Dispatch with Antiskid System Inoperative.

32-42-03 BRK TEMP Alert

a60729e5-9da4-46d4-9825-7e72ee515f6a	24 JUN 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that:

- Landing gear is left down for 1 min after takeoff except in case of emergency, and
- A minimum turn around of 20 min is observed.

Note

NO GO in case of FTA.

32-45-01 PRKG BRK

PRKG BRK ON Indication

ca31e1ce-67e0-4c99-9165-69a285fb4eca	27 MAY 2015
	ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that the parking brake is operative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 32 LANDING GEAR	MOP.32 Page n°04
---	---	--------------------------------

32-51-01

Nose Wheel Steering

e1fa9c90-9a3a-48b3-bd87-d95f7e4aa686	REV	26 SEP 2025
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	<u>YES</u>

- May be inoperative provided that:
- (a) All brakes are operative,
 - (b) Maximum crosswind component is limited to 15 kt, and
 - (c) Aircraft is not operated on narrow runways (width < 30 m (98 ft)).
 - (d) Two engines taxi is performed,
 - (e) Specific parking lots are allocated to the aircraft at PPT.

Note

NO GO in case of FTA.

See Operational procedure [MOP.32.51-01P Nose Wheel Steering \(O\)](#)
See Maintenance procedure [Nose Wheel Steering \(M\)](#)

32-51-01P

Nose Wheel Steering (O)

2f06fdd4-9af6-4f93-8e84-111ce3b01670	REV	26 SEP 2025
		ALL

- Maximum demonstrated crosswind component for takeoff and landing is 15 kt.
- ▶ Apply asymmetrical thrust and differential braking for taxi and line up as required.
 - ▶ Avoid sharp turns while using brakes.
- Powerback operations are prohibited.
- At PPT, the use of G taxiway is prohibited.
- At departure from PPT, the aircraft is parked on 5A, 5B, 5C, 4F.
- At arrival to PPT, the aircraft is parked on 4D.

32-61-01

Landing Gear Position Indicating System

c2946b97-e707-4dec-bd58-ffb471d82442		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	2	1	YES	<u>YES</u>	NO

May be inoperative.

See Operational procedure [MOP.32.61-01P Landing Gear Position Indicating Systems \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 32 LANDING GEAR	MOP.32 Page n°05
---	---	-----------------------------

32-61-01P Landing Gear Position Indicating Systems (O)

1c6b1cce-8bcf-4afa-9d36-e6c0c71061e9

23 APR 2025

ALL

If OVHD panel is affected, some failure cases may generate LDG GEAR NOT DN Alerts.

The illumination of the Green System “LO PR” amber light on the HYD PWR overhead panel will be inhibited when the landing gear control lever is in DOWN position.

As soon as three green lights are illuminated on the operative panel, landing gear is down.

● When the landing gear is down:

- Monitor that the hydraulic green pressure remains stable around 3 000 psi.

Note

If the hydraulic green pressure drops significantly, [Refer to QRH - HYD BLUE \(GREEN\) LO PR Abnormal Procedure](#).

PAGE
INTENTIONALLY
LEFT BLANK

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 33 LIGHTS	MOP.33 Page n°01
---	---	-------------------------

33-10-01 Cockpit Lights

d1a8b606-98ec-4a83-b339-b92679f364fc	18 MAY 2022
	ALL
	EASA - APPROVED

33-10-01A (A)

RI	NI	NR	PLACARD	O	M
C	-	-	NO	NO	NO

May be inoperative provided that:

- (a) Sufficient lighting to illuminate all instruments, controls and placards is assured, and
- (b) RH dome and STBY instruments integrated lights are operative.

- OR -

33-10-01B (B)

RI	NI	NR	PLACARD	O	M
C	-	0	NO	NO	NO

May be inoperative for daylight operations.

33-10-02-01 Cabin Lights - Passenger Configuration

a76923be-9576-49f3-85c0-86de5a4b5339	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	-	14	NO	NO	NO

One or more may be inoperative provided that:

- (a) **14** operating ceiling lights are regularly distributed within the cabin, and
- (b) Lighting must be sufficient for cabin attendant to perform its duties.

33-10-02-02 Cabin Lights - Cargo Configuration

16d78bc3-609e-4737-9cbf-04503bc7aa35	22 SEP 2022
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	-	-	NO	NO	NO

May be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 33 LIGHTS	MOP.33 Page n°02
---	---	-------------------------

33-16-01-01 ANN Light - Test Function

a9c8f833-2987-4017-975a-113b9f55bbb7	16 FEB 2018
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	1	0	YES	<u>YES</u>	NO

May be inoperative provided that operations are limited to two calendar days .

See Operational procedure MOP.33.16-01-01P ANN Light - Test Function (O)

33-16-01-01P ANN Light - Test Function (O)

6ae660ee-9b2a-48bc-baa8-7e3110df2870	01 AUG 2024
	ALL

Following warnings have to be tested before the first flight of the day, to check red lights illumination.

PITCH DISCONNECT

- ▶ The SELECTOR on the LH maintenance panel has to be used:
- ▶ Set the SELECTOR to the function PITCH DISCONNECT.
- ▶ Depress TEST PTT pb .
- ▶ Check the warnings: CRC, MW light flashing red and PITCH DISCONNECT red message on EWD
- ▶ After the check set SELECTOR to NORM FLT.

LANDING GEAR NOT DOWN

- ▶ On LH MAINTENANCE panel , set the SELECTOR to LDG GEAR NOT DOWN.
- ▶ Set PL to FI or FLAPS 30 .
- ▶ Depress TEST PTT pb .
- ▶ Check the warnings: CRC, MW light flashing red and LDG GEAR NOT DN on FWS
- ▶ After the check set SELECTOR to NORM FLT.

TO CONFIG

- ▶ Depress TO CONFIG TEST pb while at least one out of the following four conditions is not met:
 - ▶ Pitch trim set in the TO range.
 - ▶ FLAPS set to 15 ° .
 - ▶ PWR MGT set to TO .
 - ▶ RUD TLU green light . come on.
- ▶ Check the warnings: CRC, MW light flashing red and CONFIG on FWS

FLAPS UNLOCK

- ▶ Set FLAPS 15.
- ▶ Depress and maintain FLAPS UNLK PTT pb on RH maintenance panel .

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 33 LIGHTS	MOP.33 Page n°03
---	---	-------------------------

cont'd... >>>

- Check warning is activated when the flaps position passes over the selected position minus 3 ° on the flaps position indicator.

33-16-01-02 ANN Light - DIM Function

aa20020d-0adf-4534-a55d-488ec6048966	27 MAY 2015
	ALL
	EASA - APPROVED

33-16-01-02A Night Operations (A)

RI	NI	NR	PLACARD	O	M
B	1	0	YES	NO	NO

May be inoperative for Night Operations.

- OR -

33-16-01-02B Daylight Operations (B)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative for Daylight Operations.

33-26-01 Cabin Signs

c0c09e4b-3fba-43c0-80d5-2e882ff70419	22 JUL 2016
	ALL

RI	NI	NR	PLACARD	O	M
C	-	0	YES	NO	NO

May be inoperative provided that:

- Passenger address system is operative and is used to advise passengers and cabin attendant when seat belts should be fastened and use of personal electronic devices is prohibited, and
- Cabin attendant call and interphone are operative.

Note

For Cargo Operations, no MEL item entry is applicable as the system is not required.

33-31-01 Nose Wheel Well Light

4e7711a1-c3de-47fe-b91c-3b957e398d0e	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	NO	NO	NO

May be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 33 LIGHTS	MOP.33 Page n°04
---	---	--------------------------------

33-34-01 Cargo Bay Light

6f08b7de-6c37-4beb-b2d9-e6083fa6f87f		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	-	0	NO	NO	NO

May be inoperative.

33-37-01 Main wheel Well Light

6a1baea8-4cab-4aa1-8e0c-75bbb5e6d99d		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or both may be inoperative.

33-41-01 NAV Lights System

cb5d1d7f-1931-4cfd-8115-32e242a9d6aa		07 OCT 2020
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative for daylight operation.

Note

NAV Lights System includes 3 lights (1 green, 1 red and 1 white) and the associated system.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 33 LIGHTS	MOP.33 Page n°05
---	---	--------------------------------

33-42-01 LAND Lights

43741d15-4a3b-44ac-a762-d576cff31ccf	07 OCT 2020
	ALL
	EASA - APPROVED

33-42-01A Night Operations (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One may be inoperative for Night Operations.

- OR -

33-42-01B Daylight Operations (B)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

May be inoperative for Daylight Operations.

33-43-01 STROBE Light

78a80d89-e2b1-4d0b-8a45-fe1427592437	22 SEP 2022
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	3	0	YES	NO	NO

One or more STROBE lights may be inoperative provided that all BEACON lights are operative.

33-46-01 TAXI and TO Lights

ea79465d-069d-4db3-b381-50ca16f12410	07 OCT 2020
	ALL
	EASA - APPROVED

33-46-01A Night Operations (A)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative for Night Operations provided that one LAND light (L or R) is operative.

- OR -

33-46-01B Daylight Operations (B)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative for Daylight Operations.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 33 LIGHTS	MOP.33 Page n°06
---	---	--------------------------------

33-47-01 LOGO Lights

9a684a2b-798b-412d-8807-a8b65e37e5e7		22 SEP 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	2	0	YES	NO	NO

One or both may be inoperative.

33-48-01 BEACON Light

3444c96e-cc50-4507-b7a8-c55e0cf255ab		11 APR 2025
		ALL
		EASA - APPROVED

33-48-01A (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	NO

One may be inoperative provided that all STROBE lights are operative.

Note

If the center fuselage BEACON light is inoperative, alternative procedures must be developed and used when aircraft is on ground with engine(s) running.

See Operational procedure [MOP.33.48-01P BEACON Light \(O\)](#)

- OR -

33-48-01B Daylight Operations (B)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	<u>YES</u>	NO

One or both may be inoperative for Daylight Operations provided that all STROBE lights are operative.

Note

If the center fuselage BEACON light is inoperative, alternative procedures must be developed and used when aircraft is on ground with engine(s) running.

See Operational procedure [MOP.33.48-01P BEACON Light \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 33 LIGHTS	MOP.33 Page n°07
---	---	-------------------------

33-48-01P BEACON Light (O)

9433eb5d-9f96-4fbc-98f5-35523a23def7

22 SEP 2022

ALL

In case of one or two BEACON lights unavailable, turn on STROBE lights before propellers rotation and keep them activated until the end of propellers rotation after the end of the flight.

33-49-01 WING Inspection Lights

72f5b38c-42c1-4434-95c5-664e2c13f051

22 SEP 2022

ALL

EASA - APPROVED

33-49-01A Night Operations (A)

RI	NI	NR	PLACARD	O	M
B	2	1	YES	NO	NO

One may be inoperative for Night Operations provided that flight is not conducted into known or forecast [icing conditions](#).

Note

If right Wing Inspection Light is inoperative, Hotel mode is prohibited.

- OR -

33-49-01B Daylight Operations (B)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative for Daylight Operations.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 33 LIGHTS	MOP.33 Page n°08
---	---	--------------------------------

33-49-02 IEP Light

dcf0a35f-2704-4cde-8e14-9de5a5e0c533		27 MAY 2015
		ALL
		EASA - APPROVED

33-49-02A Night Operations (A)

RI	NI	NR	PLACARD	O	M
B	1	0	NO	<u>YES</u>	NO

May be inoperative provided that the Flight is not conducted into known or forecast icing conditions .

See Operational procedure MOP.33.49-02P IEP Light (O)

- OR -

33-49-02B Daylight Operations (B)

RI	NI	NR	PLACARD	O	M
C	1	0	NO	NO	NO

May be inoperative for Daylight Operations.

33-49-02P IEP Light (O)

a00b2ed9-ce3f-4b53-93e6-d883a35c25a8		27 MAY 2015
		ALL

- In case of inadvertent icing conditions encountered, keep the anti-icing systems activated until the end of the Flight (Icing AOA illuminated).

33-50-01 EMER EXIT (DISARM) Light

800ba131-8876-492e-b3c9-8dbc604c6d12		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that EMER EXIT light system is operative and armed prior to each departure.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 33 LIGHTS	MOP.33 Page n°09
---	---	--------------------------------

33-50-02-01 Photoluminescent Floor Proximity Emergency Escape Path Marking tape

f6c8d000-f4a2-4e82-b66a-6040fb1bcf1b		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	-	-	NO	NO	NO

One or more photoluminescent tape portion may be inoperative provided that:

- (a) No more than one meter of photoluminescent is inoperative on each strip, and
- (b) This inoperative part is neither facing nor continuous to an emergency exit.

Note

For Cargo Operations, no MEL item entry is applicable as the system is not required.

33-50-03 Ceiling Emergency Lighting

8be5add5-6a0d-4999-8647-1d887017417f		17 JAN 2018
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	-	-	NO	NO	NO

May be inoperative provided that a maximum of one in four consecutive overhead emergency lights may be inoperative.

Note

For Cargo Operations, no MEL item entry is applicable as the system is not required.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 33 LIGHTS	MOP.33 Page n°10
---	---	--------------------------------

33-50-04 Emergency Exit Signs

643c6d0f-057f-49a0-9565-210895e8a558	24 JUN 2025
	ALL
	EASA - APPROVED

33-50-04A (A)

RI	NI	NR	PLACARD	O	M
-	10	-	YES	NO	NO

One may be inoperative provided that:

- (a) It does not indicate more than one emergency exit, and
- (b) Associated exit is considered inoperative. [Refer to Item 52-21-01 Emergency Exit \(Including Passenger-Crew Doors, Service Door, but Excluding Flight Deck Emergency Exits\) - Passenger or Combi Configuration.](#)

Note

For Cargo Operations, no MEL item entry is applicable as the system is not required.

- OR -

33-50-04B (B)

RI	NI	NR	PLACARD	O	M
C	10	-	YES	NO	NO

Up to 50 % of the bulbs/LEDS may be inoperative in one or more signs provided that the sign remains legible.

Note

For Cargo Operations, no MEL item entry is applicable as the system is not required.

33-50-05 Emergency Exit Handle Lighting

6bd5d14a-f8b5-40cb-9a28-5cf0ad973fa4	04 DEC 2019
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	2	1	YES	NO	NO

One may be inoperative provided that associated emergency exit is considered inoperative.

[Refer to Item 52-21-01 MOP.52.21-01-01 Emergency Exit \(Including Passenger-Crew Doors, Service Door, but Excluding Flight Deck Emergency Exits\) - Passenger or Combi Configuration](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 33 LIGHTS	MOP.33 Page n°11
---	---	-------------------------

33-51-01 Exterior EMER Lights

1223bdd9-c135-4312-91e6-e122930792d5		24 JUN 2025
		ALL
		EASA - APPROVED

33-51-01A Night Operations (A)

RI	NI	NR	PLACARD	O	M
-	-	-	NO	NO	NO

For Night Operations, [Refer to Item 52-21-01-01 Emergency Exit \(Including Passenger - Crew Doors, but Excluding Flight Deck Emergency Exits\) - Passenger or Combi Configuration](#)

Note

For Cargo Operations, no MEL item entry is applicable as the system is not required.

- OR -

33-51-01B Daylight Operations (B)

RI	NI	NR	PLACARD	O	M
B	-	-	NO	NO	NO

One light may be inoperative for Daylight Operations only.

Note

For Cargo Operations, no MEL item entry is applicable as the system is not required.

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°01
---	---	-------------------------

34-11-01 Air Data Computer (ADC)

7d43eda3-4a51-435b-b80d-40fdb3ba010

REV

26 SEP 2025

1192-1255;1355-1432;1658-1718

EASA - APPROVED

34-11-01A ETOPS Operations (A)

RI	NI	NR	PLACARD	O	M
A	2	1	YES	<u>YES</u>	NO

ADC #2 may be inoperative provided that:

- The flight is conducted in day VMC only, and
- TLU manual mode is operative and used, and
- The IESI is operative, and
- All the IOM DC are operative, and
- The operations are limited to two flights, and
- The Operations are conducted in compliance with AFM AFCS limitations, ([Refer to FCOM - Automatic Flight Control System](#)).

Note

NO GO in case of FTA.

See Operational procedure MOP.34.11-01P Air Data Computer (ADC) (O)

- OR -

34-11-01B (B)

RI	NI	NR	PLACARD	O	M
A	2	1	YES	<u>YES</u>	NO

One ADC may be inoperative provided that:

- The flight is conducted in day VMC only, and
- ETOPS operations are not conducted, and
- TLU manual mode is operative and used, and
- The IESI is operative, and
- All the IOM DC are operative, and
- The operations are limited to two calendar days, and
- The Operations are conducted in compliance with AFM AFCS limitations, ([Refer to FCOM - Automatic Flight Control System](#)).

Note

NO GO in case of FTA.

See Operational procedure MOP.34.11-01P Air Data Computer (ADC) (O)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°02
---	---	--------------------------------

21dd46d1-8f13-4fd0-9bcc-1dda9d35cf1b

REV

26 SEP 2025

1289-1350;1455-1568

EASA - APPROVED

34-11-01A ETOPS Operations (A)

RI	NI	NR	PLACARD	O	M
A	2	1	YES	<u>YES</u>	NO

ADC #2 may be inoperative provided that:

- (a) The flight is conducted in day VMC only, and
- (b) The TLU manual mode is operative, and
- (c) The IESI is operative, and
- (d) All the IOM DC are operative, and
- (e) The operations are limited to two flights, and
- (f) The Operations are conducted in compliance with AFM AFCS limitations, ([Refer to FCOM - Automatic Flight Control System](#)).

Note

NO GO in case of FTA.

See Operational procedure MOP.34.11-01P Air Data Computer (ADC) (O)

- OR -

34-11-01B (B)

RI	NI	NR	PLACARD	O	M
A	2	1	YES	<u>YES</u>	NO

One ADC may be inoperative provided that:

- (a) The flight is conducted in day VMC only, and
- (b) ETOPS operations are not conducted, and
- (c) The TLU manual mode is operative, and
- (d) The IESI is operative, and
- (e) All the IOM DC are operative, and
- (f) The operations are limited to two calendar days, and
- (g) The Operations are conducted in compliance with AFM AFCS limitations, ([Refer to FCOM - Automatic Flight Control System](#)).

Note

NO GO in case of FTA.

See Operational procedure MOP.34.11-01P Air Data Computer (ADC) (O)

34-11-01P Air Data Computer (ADC) (O)

d1ce6a7c-5dc6-4222-9249-7f6bd0160b39

REV

26 SEP 2025

1192-1255;1355-1432

► ADC switching must be set to valid ADC

Check of TLU manual mode (with ADC switching set to valid ADC):

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°03
---	---	-------------------------

cont'd... >>>

● **During Cockpit preparation**

- ▶ Select manually HI SPD and check the following (after approximately 30 s):
 - **Alert is generated:** master caution, single chime, FLT CTL TLU on FWS and TLU FAULT light
 - TLU LO SPEED label disappeared
 - Rudder travel is limited.
- ▶ Select LO SPD and check the following (after approximately 30 s):
 - **Alert remains**
 - TLU LO SPEED label is displayed
 - Rudder travel is no longer limited.

Do not use AUTO mode.

● **Before TAKE OFF**

- ▶ Select manually LO SPD.

● **In Flight**

- ▶ During an acceleration, select manually HI SPD when reaching 185 kt and check the following (after approximately 30 s):
 - TLU LO SPEED label disappeared
 - TLU FAULT alert disappeared.
- ▶ During a deceleration, select manually LO SPD when reaching 180 kt and check the following (after approximately 30 s):
 - TLU LO SPEED label is displayed
 - TLU FAULT alert is triggered.

Note

A TLU FAULT alert will trigger transitorily after approximately 30 s.

■ **If ADC 1 is inoperative**

- ▶ LANDING ELEVATION.....SET PRESSURE ALTITUDE

d705d181-e362-4e49-bb3a-0420e1bbe635

REV

26 SEP 2025

1289-1350;1455-1568

- ▶ ADC switching must be set to valid ADC

TLU manual mode check:

- ▶ Select HI SPD and check alert is generated after 25 s : MC , SC , FLT CTL TLU on FWS and TLU FAULT light.
- ▶ Check rudder travel is limited.
- ▶ Select AUTO and check alert disappears after 15 s.
- ▶ Check rudder travel is not limited.

■ **If ADC 1 is inoperative**

- ▶ LANDING ELEVATION.....SET PRESSURE ALTITUDE

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°04
---	---	-------------------------

77cb0084-62a3-435b-98e6-04840b8bad17

REV

26 SEP 2025

1658-1718

- ▶ ADC switching must be set to valid ADC

Check of TLU manual mode (with ADC switching set to valid ADC):

- **During Cockpit preparation**

- ▶ Select manually HI SPD and check the following (after approximately 30 s):
 - **Alert is generated:** master caution, single chime, FLT CTL TLU on FWS and TLU FAULT light
 - TLU LO SPEED label disappeared
 - Rudder travel is limited.
- ▶ Select LO SPD and check the following (after approximately 30 s):
 - **Alert remains**
 - TLU LO SPEED label is displayed
 - Rudder travel is no longer limited.

Do not use AUTO mode.

- **Before TAKE OFF**

- ▶ Select manually LO SPD.

- **In Flight**

- ▶ During an acceleration, select manually HI SPD when reaching 185 kt and check the following (after approximately 30 s):
 - TLU LO SPEED label disappeared
 - TLU FAULT alert disappeared.
- ▶ During a deceleration, select manually LO SPD when reaching 180 kt and check the following (after approximately 30 s):
 - TLU LO SPEED label is displayed
 - TLU FAULT alert is triggered.

Note

A TLU FAULT alert will trigger transitorily after approximately 30 s.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°05
---	---	-------------------------

34-16-01 Altitude Alerting System

0b8660e5-2bd5-4c4b-85d8-b376521298a9	22 JUL 2016
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	1	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) Autopilot altitude hold mode is operative, and
- (b) Both main altimeters are operative, and
- (c) The altitude alerting system is not part of the required equipment for intended operations.

[See Operational procedure MOP.34.16-01P Altitude Alerting System \(O\)](#)

34-16-01P Altitude Alerting System (O)

0266f8bd-c342-4733-9caa-3d4a0f9c624b	13 JUL 2016
	ALL

- **In flight**

Flight crew should check on altimeters that there is no altitude excursion.

- **During climb, descent and altitude capture phases**

Flight crew must ensure strict adherence to standardized callouts.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°06
---	---	-------------------------

34-20-01 AHRs

5a5d6802-295f-43b1-bd2b-65bcab09ea43		14 MAY 2025
		ALL

34-20-01A ETOPS Operations (A)

RI	NI	NR	PLACARD	O	M
A	2	1	YES	NO	NO

- One may be inoperative, provided that:
- (a) The **flight** is conducted in day **VMC** only, and
 - (b) The Operations are conducted in compliance with AFM AFCS limitations, ([Refer to FCOM - Automatic Flight Control System](#)), and
 - (c) The IESI is operative, and
 - (d) AHRs #1 must be operative and operations are limited to two **flights** .

Note

NO GO in case of FTA.

- OR -

34-20-01B (B)

RI	NI	NR	PLACARD	O	M
A	2	1	YES	NO	NO

- One may be inoperative, provided that:
- (a) The **flight** is conducted in day **VMC** only, and
 - (b) **ETOPS** operations are not conducted, and
 - (c) The Operations are conducted in compliance with AFM AFCS limitations, ([Refer to FCOM - Automatic Flight Control System](#)), and
 - (d) The IESI is operative, and
 - (e) Operations are limited to two **calendar days** .

Note

NO GO in case of FTA.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°07
---	---	-------------------------

34-22-01-01 IESI

fb79743-3f5b-4aad-91e7-64382a0bb9f2

27 MAY 2015

ALL

34-22-01-01A ETOPS Operations (A)

RI	NI	NR	PLACARD	O	M
A	1	0	YES	NO	NO

IESI may be inoperative provided that:

- (a) The **flight** is conducted in day **VMC** only, and
- (b) Both AHRS are operative, and
- (c) Both ADC are operative, and
- (d) Operations are limited to two **flights** .

- OR -

34-22-01-01B (B)

RI	NI	NR	PLACARD	O	M
A	1	0	YES	NO	NO

IESI may be inoperative provided that:

- (a) The **flight** is conducted in day **VMC** only, and
- (b) **ETOPS** operations are not conducted, and
- (c) Both AHRS are operative, and
- (d) Both ADC are operative, and
- (e) Operations are limited to two **calendar days** .

34-22-01-02 IESI - STD Baro Button

39190654-4493-4813-9625-e09463bdb5e0

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that the SET rotary sw and the SEL pb operates normally.

34-22-01-03 IESI - Brightness Button

a6c9259d-e090-46b5-b63d-a54f4b430973

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or both may be inoperative provided that the brightness level is acceptable for the flight crew on the affected side.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°08
---	---	--------------------------------

34-33-01 Marker Beacon System

20f0076f-45e1-4298-a960-064b09563841		01 AUG 2024
ALL		

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative under **IFR** operations provided approach procedures do not require marker fixes.

34-36-01 ILS

0a5a5126-c77d-4c29-877a-085838f8df6a		22 SEP 2022
ALL		

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or both may be inoperative under IFR operations provided approaches and missed approaches where navigation is based on ILS are not included in the flight plan.

Note

- 1) With one ILS operative, landing capability is limited to CAT I
- 2) If ILS 2 glideslope signal is inoperative, GPWS Reactive modes - Glideslope Deviation (mode 5) is inhibited. [Refer to Item 34-48-01-05MOP.34.48-01-05 TAWS - GPWS Reactive modes - Glideslope Deviation \(Mode 5\).](#)

34-41-01 Weather Radar

a34b370e-e53d-4e46-9a4b-df601c956d54		22 SEP 2022
ALL		
EASA - APPROVED		

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative for daylight operations, provided that weather reports or forecast available indicate that cumulonimbus CB and towering cumulus TCU (OCNL / FRQ / EMBD) or other potentially hazardous weather conditions (Thunderstorm TS / Squall line SQL), which could be detected by the system in working order are unlikely to be encountered on the **intended flight route**.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°09
---	---	-------------------------

34-42-01 Radio Altimeter System

27146b52-3803-40da-8129-fc8204fb0598

14 MAY 2025

ALL

RI	NI	NR	PLACARD	O	M
-	1	0	YES	<u>YES</u>	NO

One or more may be inoperative provided that:

- (a) GPWS is considered inoperative, [Refer to Item 34-48-01-01MOP.34.48-01-01 TAWS - GPWS Reactive modes and TERRAIN Predictive modes](#), and
- (b) ACAS is considered inoperative, [Refer to Item 34-57-01-01Airborne Collision Avoidance System - ACAS System](#).

Note

NO GO in case of FTA.

[See Operational procedure MOP.34.42-01P Radio Altimeter System \(O\)](#)

34-42-01P Radio Altimeter System (O)

467d85ef-9444-465c-b144-0ea13912e1e0

19 MAY 2022

ALL

• During Final Cockpit Preparation

- ▶ GPWS OFF
- TCAS is failed when RA is failed.

• During Descent Preparation

- ▶ ARRIVAL BRIEFING
- ANNOUNCE STICK PUSHER INHIBITION BELOW 500 ft AGL INOPERATIVE

• During approach

- ▶ SPD TGT MAN SEL

34-48-01-01 TAWS - GPWS Reactive modes and TERRAIN Predictive modes

24fa41dc-3a49-49c3-8980-e19424f2e799	14 MAY 2025
	1355
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	-	0	YES	<u>YES</u>	NO

One or more may be inoperative provided that:

- (a) RNP APCH (LPV) and RNP AR operations are prohibited,
- (b) Alternate procedures are established and used, and
- (c) Repairs or replacements are carried out within six further flights, or twenty-five flying hours or two calendar days, whichever occurs first.

Note

Check Flight Manual for approach minima. GPWS and TERRAIN Callouts are lost.

NO GO in case of FTA.

See Operational procedure MOP.34.48-01-01P TAWS - GPWS Reactive modes and TERRAIN Predictive modes (O)

41b1117d-c52e-46d1-bf14-128a41cf35fc	14 MAY 2025
	1192-1350;1376-1718

RI	NI	NR	PLACARD	O	M
A	-	0	YES	<u>YES</u>	NO

One or more may be inoperative provided that:

- (a) Alternate procedures are established and used, and
- (b) Repairs or replacements are carried out within six further flights, or twenty-five flying hours or two calendar days, whichever occurs first.

Note

Check Flight Manual for approach minima. GPWS and TERRAIN Callouts are lost.

NO GO in case of FTA.

See Operational procedure MOP.34.48-01-01P TAWS - GPWS Reactive modes and TERRAIN Predictive modes (O)

34-48-01-01P TAWS - GPWS Reactive modes and TERRAIN Predictive modes (O)

aa61a97e-bec2-4cdc-9a24-3c91390543cb	22 SEP 2022
	ALL

► GPWS..... OFF

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°11
---	---	-------------------------

cont'd... >>>

► TERR.....OFF

At low altitude or below surrounding terrain (descending), the crew must :

- increase monitoring to the trajectory and energy state of the aircraft, power settings and the automated systems directly affecting flight path;
- follow SOPs consistently;
- clearly communicate deviations;
- aggressively manage distractions;
- remain vigilant;
- intervene if flight guidance modes or aircraft actions don't agree with expected actions;
- continuously compare known pitch/power settings to current flight path performance.

If workload becomes excessive or if experiencing confusion, climb to a safe altitude.

34-48-01-02 TAWS - GPWS Reactive modes

e1bdf007-53a4-4127-9d63-c0095e44c371	14 MAY 2025
	1355
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	-	0	YES	<u>YES</u>	NO

One or more may be inoperative provided that:

- TERRAIN Predictive modes are operative,
- RNP APCH (LPV) and RNP AR operations are prohibited,
- Alternate procedures are established and used, and
- Repairs or replacements are carried out within six further flights, or twenty-five flying hours or two calendar days, whichever occurs first.

Note

Check Flight Manual for approach minima. GPWS Callouts are lost.

NO GO in case of FTA.

See Operational procedure MOP.34.48-01-02P TAWS - GPWS Reactive modes (O)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°12
---	---	-------------------------

af87a12d-dd71-4448-9a8a-957c0c3df86b	14 MAY 2025
1192-1350;1376-1718	

RI	NI	NR	PLACARD	O	M
A	-	0	YES	<u>YES</u>	NO

- One or more may be inoperative provided that:
- (a) TERRAIN Predictive modes are operative,
 - (b) Alternate procedures are established and used, and
 - (c) Repairs or replacements are carried out within six further flights, or twenty-five flying hours or two calendar days, whichever occurs first.

Note

Check Flight Manual for approach minima. GPWS Callouts are lost.

NO GO in case of FTA.

See Operational procedure MOP.34.48-01-02P TAWS - GPWS Reactive modes (O)

34-48-01-02P TAWS - GPWS Reactive modes (O)

TAWS - GPWS Reactive modes (O)		
e3f63e67-7c17-41e7-96b0-fc1202f40c52		22 SEP 2022
		ALL

► GPWS..... OFF

- At low altitude or below surrounding terrain (descending), the crew must :
- increase monitoring to the trajectory and energy state of the aircraft, power settings and the automated systems directly affecting flight path;
 - follow SOPs consistently;
 - clearly communicate deviations;
 - aggressively manage distractions;
 - remain vigilant;
 - intervene if flight guidance modes or aircraft actions don't agree with expected actions;
 - continuously compare known pitch/power settings to current flight path performance.
- If workload becomes excessive or if experiencing confusion, climb to a safe altitude.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°13
---	---	--------------------------------

34-48-01-03 TAWS - TERRAIN Predictive modes

9ea21dd5-dfc3-4b93-bd35-6616c8da7d8e	14 MAY 2025
	1355
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	-	0	YES	<u>YES</u>	NO

One or more may be inoperative provided that:

- (a) GPWS Reactive modes are operative,
- (b) RNP APCH (LPV) and RNP AR operations are prohibited,
- (c) Alternate procedures are established and used, and
- (d) Repairs or replacements are carried out within ten calendar days.

Note

NO GO in case of FTA.

See Operational procedure MOP.34.48-01-03P TAWS - TERRAIN Predictive modes (O)

7a40009e-a950-4c4b-8393-96209c55f27c	14 MAY 2025
	1192-1350;1376-1718

RI	NI	NR	PLACARD	O	M
A	-	0	YES	<u>YES</u>	NO

One or more may be inoperative provided that:

- (a) GPWS Reactive modes are operative,
- (b) Alternate procedures are established and used, and
- (c) Repairs or replacements are carried out within ten calendar days.

Note

NO GO in case of FTA.

See Operational procedure MOP.34.48-01-03P TAWS - TERRAIN Predictive modes (O)

34-48-01-03P TAWS - TERRAIN Predictive modes (O)

TAWS - TERRAIN Predictive modes (O)

d9212d59-4712-4766-b4a2-9a49c33e49ff	22 SEP 2022
	ALL

► TERR.....OFF

At low altitude or below surrounding terrain (descending), the crew must :

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°14
---	---	-------------------------

cont'd... >>>

- increase monitoring to the trajectory and energy state of the aircraft, power settings and the automated systems directly affecting flight path;
- follow SOPs consistently;
- clearly communicate deviations;
- aggressively manage distractions;
- remain vigilant;
- intervene if flight guidance modes or aircraft actions don't agree with expected actions;
- continuously compare known pitch/power settings to current flight path performance.

If workload becomes excessive or if experiencing confusion, climb to a safe altitude.

34-48-01-04 TAWS - Test mode

1bdf11a1-8e7f-433b-bb98-a403c5f3a9c0	21 OCT 2020
ALL	

RI	NI	NR	PLACARD	O	M
A	-	0	YES	<u>YES</u>	NO

- (a) TAWS is considered inoperative, [Refer to Item 34-48-01-01 MOP.34.48-01-01 TAWS - GPWS Reactive modes and TERRAIN Predictive modes](#),
- (b) Alternate procedures are established and used, and
- (c) Repairs or replacements are carried out within six further flights, or twenty-five flying hours or two calendar days, whichever occurs first.

Note

Check Flight Manual for approach minima. GPWS and TERRAIN Callouts are lost.

See Operational procedure [MOP.34.48-01-04P TAWS - Test mode \(O\)](#)

34-48-01-04P TAWS - Test mode (O)

TAWS - Test mode (O)	
801660ac-4075-4e35-83e3-0d91f4146a91	16 OCT 2020
ALL	

[Refer to MOP.34.48-01-01P TAWS - GPWS Reactive modes and TERRAIN Predictive modes \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°15
---	---	-------------------------

34-48-01-05 TAWS - GPWS Reactive modes - Glideslope Deviation (Mode 5)

9773ac61-684b-4ada-b9eb-ebff6b76a626	22 OCT 2020
	ALL

34-48-01-05A (A)

RI	NI	NR	PLACARD	O	M
B	-	0	NO	<u>YES</u>	NO

One or more may be inoperative.

See Operational procedure MOP.34.48-01-05P TAWS - GPWS Reactive modes - Glideslope Deviation (Mode 5) (O)

- OR -

34-48-01-05B Day VMC flight only (B)

RI	NI	NR	PLACARD	O	M
C	-	0	NO	<u>YES</u>	NO

One or more may be inoperative provided that the flight is conducted in day VMC only.

See Operational procedure MOP.34.48-01-05P TAWS - GPWS Reactive modes - Glideslope Deviation (Mode 5) (O)

34-48-01-05P TAWS - GPWS Reactive modes - Glideslope Deviation (Mode 5) (O)

TAWS - GPWS Reactive modes - Glideslope Deviation (Mode 5) (O)	
9c444278-7a8e-4364-bbdd-fbf08188f767	14 MAY 2025
	ALL

The crew must confirm glide path during final approach (especially while flying at night or in IMC) by checking altitude/distance targets.

The crew pays particular attention to respecting the approach windows defined in Refer to - LINK TARGET DOES NOT EXIST.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°16
---	---	--------------------------------

34-50-01 VOR

7a1665ff-8263-456d-8894-f545cf31f630	22 SEP 2022
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	YES	<u>YES</u>	NO

Both may be inoperative provided that:

- (a) The navigation systems required for each segment of the intended flight route are operative, and
- (b) Alternate procedures are established and used, where applicable.

[See Operational procedure MOP.34.50-01P VOR \(O\)](#)

34-50-01P VOR (O)

ba145eca-243e-47e9-a1d6-c5d57fda12e6	22 SEP 2022
	ALL

At least one GPS is operative, and route, departure, destination and alternate airports do not require its use.

34-50-02 DME

0b005b20-78d3-4890-bd99-8e671cead813	22 SEP 2022
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	YES	<u>YES</u>	NO

Both may be inoperative provided that:

- (a) The navigation systems required for each segment of the intended flight route are operative, and
- (b) Alternate procedures are established and used, where applicable.

[See Operational procedure MOP.34.50-02P DME \(O\)](#)

34-50-02P DME (O)

9294d589-f680-47ed-917b-d01a56d4f3d5	22 SEP 2022
	ALL

At least one GPS is operative, and route, departure, destination and alternate airports do not require its use.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°17
---	---	-------------------------

34-50-03 ADF

1d8dc971-a009-4637-8e36-fc926190f04e	22 SEP 2022
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	YES	<u>YES</u>	NO

Both may be inoperative provided that:

- (a) The navigation systems required for each segment of the intended flight route are operative, and
- (b) Alternate procedures are established and used, where applicable.

[See Operational procedure MOP.34.50-03P ADF \(O\)](#)

34-50-03P ADF (O)

fca5e3e5-94c9-451d-ae0b-969b4b66286c	22 SEP 2022
	ALL

At least one GPS is operative, and route, departure, destination and alternate airports do not require its use.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°18
---	---	--------------------------------

34-52-02 SSR Transponder System - Mode S Function

c9b2bb77-1124-4764-a8de-7e0b8ffb72dd		01 AUG 2024
		1192-1455;1658
		EASA - APPROVED

34-52-02A (A)

RI	NI	NR	PLACARD	O	M
D	2	1	NO	NO	NO

Any in excess of those required for the intended route may be inoperative.

Note

1) *Altitude reporting, provided by an ATC Mode S Transponder, is required for ACAS II operation. Refer to Item 34-57-01-01Airborne Collision Avoidance System - ACAS for flight with ACAS inoperative.*
 2) *Elementary Surveillance (ELS) function is required in European Mode S designated airspace.*

- OR -

34-52-02B (B)

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or more may be inoperative provided permission is obtained from the Air Navigation Service Provider(s) when required for the intended flight route.

Note

1) *Altitude reporting, provided by an ATC Mode S Transponder, is required for ACAS II operation. Refer to Item 34-57-01-01Airborne Collision Avoidance System - ACAS for flight with ACAS inoperative.*
 2) *Elementary Surveillance (ELS) function is required in European Mode S designated airspace.*

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°19
---	---	-------------------------

ori015628	01 AUG 2024
	1568
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	NO	NO	NO

One may be inoperative provided permission is obtained from the Air Navigation Service Provider(s) when required for the intended flight route.

Note

- 1) *Altitude reporting, provided by an ATC Mode S Transponder, is required for ACAS II operation. [Refer to Item 34-57-01-01 Airborne Collision Avoidance System - ACAS](#) for flight with ACAS inoperative.*
- 2) *Elementary Surveillance (ELS) function is required in European Mode S designated airspace.*

34-52-03 SSR Transponder System - Enhanced Surveillance Function

254db880-f307-4d4f-adeb-37aff8de748e	29 MAR 2023
	1192-1455;1658
	EASA - APPROVED

34-52-03B (B)

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or more Downlinked Aircraft Parameters which provide Enhanced Surveillance, may be inoperative when required for the intended route.

- OR -

34-52-03C (C)

RI	NI	NR	PLACARD	O	M
D	2	0	NO	NO	NO

One or more Downlinked Aircraft Parameters which provide Enhanced Surveillance, may be inoperative when not required for the intended route.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°20
---	---	--------------------------------

ori015629		29 MAR 2023
		1568
		EASA - APPROVED

34-52-03B (B)

RI	NI	NR	PLACARD	O	M
C	1	0	NO	NO	NO

One Downlinked Aircraft Parameters which provide Enhanced Surveillance, may be inoperative when required for the intended route.

- OR -

34-52-03C (C)

RI	NI	NR	PLACARD	O	M
D	1	0	NO	NO	NO

One Downlinked Aircraft Parameters which provide Enhanced Surveillance, may be inoperative when not required for the intended route.

34-52-04 **SSR Transponder System - Extended Squitter Transmission Function (ADS-B OUT)**

SSR Transponder System - Extended Squitter Transmission Function (ADS-B OUT)		
6b7f04e5-02b7-4f02-b8a6-81d9022667d5		29 MAR 2023
		1192-1455;1658
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

One may be inoperative.

SSR Transponder System - Extended Squitter Transmission Function (ADS-B OUT)		
ori015630		29 MAR 2023
		1568
		EASA - APPROVED

NO GO

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°21
---	---	-------------------------

34-57-01-01 Airborne Collision Avoidance System - ACAS System

b6741b90-d208-4e6c-a7bb-16a96428e94b	24 JUN 2025
	ALL

RI	NI	NR	PLACARD	O	M
A	1	0	YES	<u>YES</u>	NO

May be inoperative for ten calendar days.

Note

When approving the operator's MEL, National Aviation Authority may impose a more restrictive rectification interval considering the regulations applicable to the airspace(s) to be flown.

NO GO in case of FTA.

See Operational procedure Airborne Collision Avoidance System - ACAS System (O)

34-57-01-01P Airborne Collision Avoidance System - ACAS System (O)

52dc9fa9-4ec1-4d7a-85e2-bc315594a00b	15 APR 2025
	ALL

► TCAS STBY

Note

TCAS on the VCP should automatically be switched to STBY mode. If not, manually switch the TCAS to STBY mode using the VCP and MCP controls.

34-58-01 GPS - GNSS

6cacfce5-a740-497b-b230-adce02c0f98f	22 SEP 2022
	ALL

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	NO

One may be inoperative provided that:

- The navigation systems required for each segment of the intended flight route are operative,
- Alternate procedures are established and used, where applicable, and
- For ETOPS Operations, GPS/GNSS #1 is operative.

See Operational procedure MOP.34.58-01P GPS - GNSS (O)

34-58-01P GPS - GNSS (O)

Global Positioning System - GPS GNSS (O)

757c3566-5e00-4469-b46c-ef8cd6d6e1dc	22 SEP 2022
	ALL

If one GPS is inoperative, no specific action required.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°22
--	--	--

34-61-01

Flight Management System

bd2a4741-483b-45d9-8ff8-ce7721fde453		24 JUN 2025
		ALL

NO GO

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°23
---	---	-------------------------

34-61-02 Navigation Databases

67b1c9ec-d99b-4aa8-9791-e2629dc1662a

24 JUN 2025

ALL

EASA - APPROVED

34-61-02A (A)

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

One or more may be inoperative for the intended route where conventional (non- RNAV) navigation is sufficient, provided that:

- Current aeronautical information (e.g. charts) is available for the entire route and for the airports intended to be used, and
- Navigation database information is disregarded.

Note

Database(s) which is/are out of date is/are considered to be inoperative.

- OR -

34-61-02B (B)

RI	NI	NR	PLACARD	O	M
C	2	1	NO	NO	NO

Any in excess of one may be inoperative provided that:

- The operative database is up to date for routes, departures, arrival and approach procedures that require the use of navigation Database for RNAV , and
- This up to date Database is readily available to the flight crew member(s) responsible for navigation.

Note

Database(s) which is/are out of date is/are considered to be inoperative.

- OR -

34-61-02C (C)

RI	NI	NR	PLACARD	O	M
A	2	0	NO	NO	NO

One or more may be inoperative for a maximum of 10 **calendar days** provided that:

- Area Navigation (RNAV) departure, arrival and approach procedures do not depend on the data amended in the current database cycle or Conventional (Non-RNAV) departure, arrival and approach procedures, when available, or ANSP assistance are used as an alternative to RNAV procedures which have been amended in the current database cycle,
- Before each **flight**, current aeronautical information is used to verify the database Navigation Fixes, the coordinates, frequencies, status (as

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 34 NAVIGATION	MOP.34 Page n°24
---	---	-----------------------------

cont'd... >>>

applicable) and suitability of Navigation Facilities required for the intended route, and

- (c) Radio navigation aids, which are required to be flown for departure, arrival and approach procedures and which have been amended in the current database cycle, are manually tuned and identified.

Note

Database(s) which is/are out of date is/are considered to be inoperative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 35 OXYGEN	MOP.35 Page n°01
---	---	-------------------------

35-11-01 MAIN SUPPLY - LO PR Light

6d7dd25f-d84d-4108-9a5f-e1f584c780fd		19 OCT 2020
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	1	0	YES	NO	NO

May be inoperative provided that maximum altitude is limited to 10 000 ft pressure altitude.

35-12-10 Oxygen Overboard Discharge Indicator (Green Disc)

7c3986c0-198e-4d39-b040-66ebdb23c93c		18 MAY 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	NO	<u>YES</u>	<u>YES</u>

May be damaged or missing provided that the oxygen pressure is checked by direct reading before each flight.

See Operational procedure MOP.35.12-10P Oxygen Overboard Discharge Indicator (Green Disc) (O)

See Maintenance procedure MMP.35.12-10 Oxygen Overboard Discharge Indicator (Green Disc) (M)

35-12-10P Oxygen Overboard Discharge Indicator (Green Disc) (O)

226d42d4-c4a0-4356-92d1-6f92342ae898		31 MAY 2024
		ALL

[Refer to FCOM - LIM-5-35-2 Minimum Bottle Pressure](#) to ensure that the remaining oxygen quantity is sufficient for the intended flight.

35-13-01 Flight Deck Pressure Indication

3d489a92-d683-4d19-bafc-f933ef04bd7a		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	1	0	YES	NO	NO

May be inoperative provided that oxygen pressure is checked on the bottle direct reading gauge prior to each departure.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 35 OXYGEN	MOP.35 Page n°02
---	---	--------------------------------

35-13-02 Observer Seat Oxygen Mask

6db1183f-afd8-42a8-9c2f-e66bd964ddda	24 MAR 2025
ALL	
EASA - APPROVED	

35-13-02A (A)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) observer seat is not occupied,
- (b) PED storage and use is prohibited in the cockpit, and
- (c) Conventional documents in paper format are available and used.

See Operational procedure [MOP.35.13-02P Observer Seat Oxygen Mask \(O\)](#)

- OR -

35-13-02B (B)

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) maximum altitude is limited to 10 000 ft,
- (b) PED storage and use is prohibited in the cockpit, and
- (c) Conventional documents in paper format are available and used.

See Operational procedure [MOP.35.13-02P Observer Seat Oxygen Mask \(O\)](#)

35-13-02P Observer Seat Oxygen Mask (O)

7fede803-5a0e-4a73-82fb-cd77484eb360	15 APR 2025
ALL	

- ▶ Required set of documentation must be made available before flight departure.
Conventional paper procedures will be used to ensure the conduct of the flight.
- ▶ Alternative means of performances and weight and balance calculations must be used.
- ▶ Use of paper takeoff and landing card is compulsory.

35-15-01 Bottle Gauge

fedfa916-8762-4efb-8fc5-c61d63c10d3f	27 MAY 2015
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
B	1	0	YES	NO	NO

May be inoperative provided that flight deck pressure indication is operative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 35 OXYGEN	MOP.35 Page n°03
---	---	--------------------------------

35-20-01 Passenger Oxygen System - Passenger Configuration

88ed4d84-c426-4011-92ab-1830db033dc1	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	1	0	YES	<u>YES</u>	NO

May be inoperative provided that maximum altitude is limited to 10 000 ft pressure altitude.

See Operational procedure MOP.35.20-01P Passenger Oxygen System - Passenger Configuration (O)

35-20-01P Passenger Oxygen System - Passenger Configuration (O)

a13639a3-345f-43e0-8d89-2d25a28beb02	22 SEP 2022
	ALL

[Refer to MOP.35.20-03P Passenger Service Unit \(O\)](#)

35-20-02 Passenger Oxygen System - Cargo Configuration

87aa7aa9-d464-4dfd-a28f-d4c63b89b29b	22 SEP 2022
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	-	0	NO	NO	NO

May be inoperative.

35-20-03 Passenger Service Unit

7803a9ac-806e-4a74-a53e-9beb0b86bbfc	22 SEP 2022
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	-	-	YES	<u>YES</u>	<u>YES</u>

One or more passenger service units may be inoperative provided that:

- Affected seats are blocked and placarded to prevent occupancy, and
- Units are operative for all operative passenger seats, toilet compartment and cabin attendant location.

See Operational procedure MOP.35.20-03P Passenger Service Unit (O)
See Maintenance procedure MMP.35.20-03 Passenger Service Unit (M)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 35 OXYGEN	MOP.35 Page n°04
---	---	-------------------------

35-20-03P Passenger Service Unit (O)

36c236b3-5d28-422b-bc51-c03f00bccef8		22 SEP 2022
		ALL

If one or more units are inoperative, groups of seats (4 by inoperative unit) are blocked. The crew must check, prior the flight, that the passengers seats distribution doesn't move the center of gravity outside of the take-off/landing certified limits.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 35 OXYGEN	MOP.35 Page n°05
---	---	--------------------------------

35-35-01 Portable Oxygen Bottle

7339eb01-a665-402c-9455-f47b33632c81	22 SEP 2022
	1192-1350;1376-1658
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	2	1	YES	<u>YES</u>	<u>YES</u>

May be inoperative or missing provided that :

- flight is operated with one cabin crew member (Cf. A04-01-01), and
- inoperative equipment is placarded inoperative and removed from the installed location and placed out of sight so it cannot be mistaken for functional unit.

[See Operational procedure MOP.35.35-01P Portable Oxygen Bottle \(O\)](#)

[See Maintenance procedure MMP.35.35-01 Potable Oxygen Bottle \(M\)](#)

- OR -

RI	NI	NR	PLACARD	O	M
D	2	0	YES	<u>YES</u>	<u>YES</u>

One or both may be inoperative for flight without cabin crew and without passenger (cargo, etc...), and inoperative equipment is placarded inoperative and removed from the installed location and placed out of sight so it cannot be mistaken for functional unit.

[See Operational procedure MOP.35.35-01P Portable Oxygen Bottle \(O\)](#)

[See Maintenance procedure MMP.35.35-01 Potable Oxygen Bottle \(M\)](#)

- OR -

RI	NI	NR	PLACARD	O	M
D	2	0	YES	<u>YES</u>	<u>YES</u>

One or both may be inoperative or missing provided that :

- flight level is limited to FL100,
- inoperative equipment is placarded inoperative and removed from the installed location and placed out of sight so it cannot be mistaken for functional unit.

[See Operational procedure MOP.35.35-01P Portable Oxygen Bottle \(O\)](#)

[See Maintenance procedure MMP.35.35-01 Potable Oxygen Bottle \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 35 OXYGEN	MOP.35 Page n°06
---	---	--------------------------------

ori017716	03 OCT 2024
1355	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
D	3	2	YES	YES	YES

The portable oxygen bottle located in the first left rear overhead bin may be inoperative.

[See Operational procedure MOP.35.35-01P Portable Oxygen Bottle \(O\)](#)
[See Maintenance procedure MMP.35.35-01 Potable Oxygen Bottle \(M\)](#)

- OR -

RI	NI	NR	PLACARD	O	M
D	3	1	YES	YES	YES

Two may be inoperative or missing provided that :

- flight is operated with one cabin crew member (Cf. A04-01-01), and
- inoperative equipment is placarded inoperative and removed from the installed location and placed out of sight so it cannot be mistaken for functional unit.

[See Operational procedure MOP.35.35-01P Portable Oxygen Bottle \(O\)](#)
[See Maintenance procedure MMP.35.35-01 Potable Oxygen Bottle \(M\)](#)

- OR -

RI	NI	NR	PLACARD	O	M
D	3	0	YES	YES	YES

All may be inoperative for flight without cabin crew and without passenger (cargo, etc...), and inoperative equipment is placarded inoperative and removed from the installed location and placed out of sight so it cannot be mistaken for functional unit.

[See Operational procedure MOP.35.35-01P Portable Oxygen Bottle \(O\)](#)
[See Maintenance procedure MMP.35.35-01 Potable Oxygen Bottle \(M\)](#)

- OR -

RI	NI	NR	PLACARD	O	M
D	3	0	YES	YES	YES

All may be inoperative or missing provided that :

- flight level is limited to FL100,

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 35 OXYGEN	MOP.35 Page n°07
---	---	-------------------------

cont'd... >>>

- inoperative equipment is placarded inoperative and removed from the installed location and placed out of sight so it cannot be mistaken for functional unit.

See Operational procedure MOP.35.35-01P Portable Oxygen Bottle (O)

See Maintenance procedure MMP.35.35-01 Potable Oxygen Bottle (M)

35-35-01P Portable Oxygen Bottle (O)

37c3de74-b2c2-4df3-95c1-41be11d26002

22 SEP 2022

ALL

During preflight briefing, the PIC informs the cabin crew members of the inoperative or missing equipment and their location.

35-65-01 Oxygen Manual Release Tool

490d4f2e-ac69-412c-9a68-165b28985b22

22 SEP 2022

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	4	3	YES	NO	NO

One may be inoperative or missing provided that the remaining tools are checked operative before each departure.

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°01
---	---	-------------------------

36-11-01 HP Valve

f439b425-6091-4390-a1d0-a930ddd8adb3		21 DEC 2015
		1192-1568
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	<u>YES</u>

One may be inoperative provided that it is deactivated.

[See Maintenance procedure MMP.36.11-01 HP Valve \(M\)](#)

09bbac4e-40c2-454a-bfa5-1bec59928b61

01 AUG 2024

1658-1718

EASA - APPROVED

36-11-01A One HPV INOPERATIVE - ETOPS Operations (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	YES	YES

One may be inoperative provided:

- (a) Associated bleed and pack is selected OFF,
- (b) Maximum operating altitude is limited to 17 000 ft,
- (c) Affected HPV is deactivated,
- (d) Emergency Ram Air Valve is verified operative, and
- (e) Operations are allowed only for ground temperature equal or greater than ISA (15 °C/59 °F at sea level).

Note

Ground temperature should be checked during pre-flight check for departure and arrival airport.

[See Operational procedure MOP.36.11-01P HP Valve \(O\)](#)

[See Maintenance procedure MMP.36.11-01 HP Valve \(M\)](#)

- OR -

36-11-01B ONE HPV INOPERATIVE (B)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	YES	YES

One may be inoperative provided:

- (a) Associated bleed and pack is selected OFF,
- (b) Maximum operating altitude is limited to 17 000 ft, and
- (c) Affected HPV is deactivated.

[See Operational procedure MOP.36.11-01P HP Valve \(O\)](#)

[See Maintenance procedure MMP.36.11-01 HP Valve \(M\)](#)

- OR -

36-11-01C BOTH HPV INOPERATIVE - PASSENGER CONFIGURATION (C)

RI	NI	NR	PLACARD	O	M
A	2	0	YES	YES	YES

Both may be inoperative provided that:

- (a) Both packs are considered inoperative,
- (b) Both bleeds are selected OFF,
- (c) Outflow Valve is secured in open position, and
- (d) Operations are limited to one [flight](#).

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°03
---	---	-------------------------

cont'd... >>>

Note

For both packs inoperative, [Refer to Item 21-50-01MOP.21.50-01 Pack.](#)

See Operational procedure MOP.36.11-01P HP Valve (O)

See Maintenance procedure MMP.36.11-01 HP Valve (M)

- OR -

36-11-01D BOTH HPV INOPERATIVE - CARGO CONFIGURATION (D)

RI	NI	NR	PLACARD	O	M
A	2	0	YES	YES	YES

Both may be inoperative provided that:

- (a) Both packs are considered inoperative, and
- (b) Both bleeds are selected OFF, and
- (c) Outflow Valve is secured in open position, and
- (d) Operations are limited to one [flight](#), and
- (e) No [combustible material](#) is carried in any compartment.

Note

For both packs inoperative, [Refer to Item 21-50-01MOP.21.50-01 Pack.](#)

See Operational procedure MOP.36.11-01P HP Valve (O)

See Maintenance procedure MMP.36.11-01 HP Valve (M)

36-11-01P HP Valve (O)

3796f9e0-f5dd-4fcf-9065-30104487125d

19 MAY 2022

1658-1718

■ **In case of One HPV INOPERATIVE - ETOPS Operations (A)**

Associated Bleed is selected OFF.

[Refer to 36-11-02 One Bleed inoperative\(O\)](#)

Affected Pack is selected OFF.

[Refer to 21-50-01 One Pack inoperative\(O\)](#)

[Refer to QRH - PACK 1 + 2 FAULT AFM Abnormal Procedure](#) (Max flight time is limited to 80 mins in case of loss of ERAV in flight).

- OR -

■ **In case ONE HPV INOPERATIVE (B)**

Associated Bleed is selected OFF

[Refer to 36-11-02 One Bleed inoperative\(O\)](#)

Affected Pack is selected OFF.

[Refer to 21-50-01 One Pack inoperative\(O\)](#)

- OR -

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°04
---	---	--------------------------------

cont'd... >>>

■ In case of BOTH HPV INOPERATIVE - PASSENGER CONFIGURATION (C)

- Both Bleed are selected OFF.
- [Refer to Item # 21-50-01 Both Packs inoperative \(O\).](#)

- OR -

■ In case of BOTH HPV INOPERATIVE – CARGO CONFIGURATION (D)

- Both Bleed are selected OFF.
- [Refer to Item # 21-50-01 Both Packs inoperative \(O\).](#)

36-11-02-01 BLEED Valve - Passenger Configuration

9a8162da-8c78-4c93-8ee7-b6e17f2c9cf2		01 AUG 2024
		1192-1568

RI	NI	NR	PLACARD	O	M
C	2	1	YES	YES	YES

- One may be inoperative provided that:
- Associated bleed valve is secured CLOSED,
 - Maximum operating altitude is limited to 17 000 ft,
 - Associated bleed valve is selected OFF,
 - Opposite bleed valve and pack are operative, and
 - [ETOPS](#) Operations are not conducted.

[See Operational procedure MOP.36.11-02P BLEED Valve \(O\)](#)
[See Maintenance procedure MMP.36.11-02 BLEED Valve \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°05
---	---	--------------------------------

0fe60d44-9a2c-4025-bfac-e75e2e68b841	01 AUG 2024
1658-1718	
EASA - APPROVED	

36-11-02-01A One Bleed Valve Inoperative - ETOPS Operations (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	YES	YES

One may be inoperative provided:

- (a) Associated bleed valve is secured CLOSED,
- (b) Associated bleed is selected OFF,
- (c) Maximum operating altitude is limited to 17 000 ft,
- (d) Opposite bleed valve is checked operative,
- (e) Emergency Ram Air Valve is verified operative, and
- (f) Operations are allowed only for ground temperature equal or greater than ISA (15 °C/59 °F at sea level).

Note

Ground temperature should be checked during pre-flight check for departure and arrival airport.

On ground in single engine operation X BLEED VALVE allows dual pack operations with single bleed source. Associated Pack should be selected OFF in order to avoid PACK FAULT in flight.

[See Operational procedure MOP.36.11-02P BLEED Valve \(O\)](#)

[See Maintenance procedure MMP.36.11-02 BLEED Valve \(M\)](#)

- OR -

36-11-02-01B ONE BLEED VALVE INOPERATIVE (B)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	YES	YES

One may be inoperative provided that:

- (a) Associated bleed valve is secured CLOSED,
- (b) Associated bleed is selected OFF,
- (c) Maximum operating altitude is limited to 17 000 ft, and
- (d) Opposite bleed valve is checked operative.

Note

On ground in single engine operation X BLEED VALVE allows dual pack operations with single bleed source. Associated Pack should be selected OFF in order to avoid PACK FAULT in flight.

[See Operational procedure MOP.36.11-02P BLEED Valve \(O\)](#)

[See Maintenance procedure MMP.36.11-02 BLEED Valve \(M\)](#)

- OR -

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°06
---	---	--------------------------------

cont'd... >>>

36-11-02-01C BOTH BLEED VALVES INOPERATIVE - PASSENGER CONFIGURATION (C)

RI	NI	NR	PLACARD	O	M
A	2	0	YES	YES	YES

Both may be inoperative provided that:

- (a) Both Packs are considered inoperative,
- (b) Both PRSOV are locked in CLOSED position,
- (c) Both Bleed are selected OFF,
- (d) Outflow Valve is secured in open position,
- (e) Operations are limited to one [flight](#).

Note

For both packs inoperative, [Refer to Item 21-50-01MOP.21.50-01 Pack](#).

See Operational procedure [MOP.36.11-02P BLEED Valve \(O\)](#)

See Maintenance procedure [MMP.36.11-02 BLEED Valve \(M\)](#)

36-11-02-02 BLEED Valve - Cargo Configuration

b2a00019-be98-4289-9e11-1194c8f32648		01 AUG 2024
		1350;1455

RI	NI	NR	PLACARD	O	M
C	2	1	YES	YES	YES

One may be inoperative provided that:

- (a) Associated bleed valve is secured CLOSED,
- (b) Associated bleed valve is selected OFF,
- (c) Opposite bleed valve and pack are operative,
- (d) Maximum operating altitude is limited to 17 000 ft, and
- (e) [ETOPS](#) Operations are not conducted.

See Operational procedure [MOP.36.11-02P BLEED Valve \(O\)](#)

See Maintenance procedure [MMP.36.11-02 BLEED Valve \(M\)](#)

36-11-02P BLEED Valve (O)

dd7edfab-fd7f-46b0-b47f-eface2c1f458		01 AUG 2024
		1192-1568

As an in-flight failure could imply total loss of pressurization, fuel consumption at 10 000 ft must be taken into account to compute the trip fuel.

Note

With one bleed INOP, whilst on ground, with both engines running, the crossfeed valve remains open with the associated X FEED indicator illuminated.

LIMITATIONS

- LARGE RAPID POWER CHANGE : AVOID

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°07
---	---	--------------------------------

c38a9ef0-d1c3-4d65-8801-1e09d95f0289

19 JUN 2024

1658-1718

■ In case of ETOPS Operations (A)

Associated Bleed is selected OFF.

As an in-flight failure could imply total loss of pressurization, fuel consumption at 10 000 ft must be taken into account to compute the trip fuel.

Note

With one bleed INOP, whilst on ground, with both engines running, the crossfeed valve remains open with the associated X FEED indicator illuminated.

Limitation

- LARGE RAPID POWER CHANGE: AVOID

[Refer to QRH - PACK 1+2 FAULT AFM Abnormal Procedure](#) (Max flight time is limited to 80 mins in case of loss of ERAV in flight).

- OR -

■ In case of ONE BLEED VALVE INOPERATIVE (B)

Associated Bleed is selected OFF.

As an in-flight failure could imply total loss of pressurization, fuel consumption at 10 000 ft must be taken into account to compute the trip fuel.

Note

With one bleed INOP, whilst on ground, with both engines running, the crossfeed valve remains open with the associated X FEED indicator illuminated.

Limitation

- LARGE RAPID POWER CHANGE: AVOID

- OR -

■ In case of BOTH BLEED VALVES INOPERATIVE - PASSENGER AND CARGO CONFIGURATION (C)

- 1) Both Bleed are selected OFF.
- 2) [Refer to Item # 21-50-01 Both Packs inoperative \(O\)](#).

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°08
---	---	-------------------------

36-11-03 Bleed FAULT Alert

97bcd77-9ee4-455b-a768-12959479fed1		27 MAY 2015
		1192-1568
		EASA - APPROVED

36-11-03A (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One may be inoperative provided that associated pack FAULT alert is operative.

- OR -

36-11-03B (B)

RI	NI	NR	PLACARD	O	M
-	2	1	YES	NO	NO

One may be inoperative provided that associated bleed valve is considered inoperative and selected OFF:

[Refer to Item 36-11-02-01 BLEED Valve - Passenger Configuration](#) , or [Refer to Item 36-11-02-02 BLEED Valve - Cargo Configuration](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°09
---	--	--

f9a6155b-a3e6-4496-a26f-5c1ed0f6ed04	08 APR 2020
1658-1718	
EASA - APPROVED	

36-11-03A Bleed FAULT Alert (A)

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One may be inoperative provided that associated pack FAULT alert is operative.

- OR -

36-11-03B Bleed FAULT Alert (B)

RI	NI	NR	PLACARD	O	M
-	2	1	YES	<u>YES</u>	<u>YES</u>

One may be inoperative provided that associated bleed valve is considered inoperative and selected OFF.

[Refer to Item 36-11-02-01Bleed Valve – Passenger Configuration](#) or [Refer to Item 36-11-02-02Bleed Valve – Cargo Configuration](#) (One bleed inoperative).

See Operational procedure MOP.36.11-03P Bleed FAULT Alert (O)

See Maintenance procedure MMP.36.11-03 Bleed FAULT Alert (M)

- OR -

36-11-03C Bleed FAULT Alert (C)

RI	NI	NR	PLACARD	O	M
-	2	0	YES	<u>YES</u>	<u>YES</u>

One or both may be inoperative provided that both bleed valves are considered inoperative and are selected OFF.

[Refer to Item 36-11-02-01Bleed Valve – Passenger Configuration](#) or [Refer to Item 36-11-02-02Bleed Valve – Cargo Configuration](#) (both bleed inoperative).

See Operational procedure MOP.36.11-03P Bleed FAULT Alert (O)

See Maintenance procedure MMP.36.11-03 Bleed FAULT Alert (M)

36-11-03P Bleed FAULT Alert (O)

18c7d82f-d5b4-478f-957e-b680e3eb5d	07 SEP 2020
1658-1718	

■ In case of Bleed FAULT Alert (B)

[Refer to Item # 36-11-02 Bleed Valve - One Bleed Valve Inoperative \(O\).](#)

- OR -

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°10
---	---	--------------------------------

cont'd... >>>

■ In case of Bleed FAULT Alert (C)

[Refer to Item # 36-11-02 Bleed Valve - Both Bleed Valves Inoperative \(O\).](#)

36-11-04 Ground X Feed Valve

f9c0997f-ef42-4c13-a50b-b954492e3736	21 DEC 2015
	1192-1568
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	YES

May be inoperative provided that it is secured closed.

[See Maintenance procedure MMP.36.11-04 Ground X Feed Valve \(M\)](#)

Cross Bleed Valve (CBV)

6bf36e05-6159-4b8b-ba03-ab8bc0feb1dc	08 APR 2020
	1658-1718
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	YES

May be inoperative provided that it is secured CLOSED.

[See Maintenance procedure MMP.36.11-04 Ground X Feed Valve \(M\)](#)

36-11-05 GRD X FEED - X VALVE OPEN Light

89f79c92-61fa-404f-a47d-0e718772e4e3	19 OCT 2020
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	YES

May be inoperative provided that X FEED valve is checked closed.

[See Maintenance procedure MMP.36.11-05 GRD X FEED - X VALVE OPEN Light \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°11
---	---	--------------------------------

36-11-06 OVHT Alert

3020e706-2e7e-482c-89de-3b1bdc10044b	27 MAY 2015
	1192-1568
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	2	1	YES	NO	NO

One may be inoperative provided that associated bleed valve is considered inoperative and selected OFF.

[Refer to Item 36-11-02-01 BLEED Valve - Passenger Configuration](#) , or [Refer to Item 36-11-02-02 BLEED Valve - Cargo Configuration](#)

a4a31a0d-edf7-458e-a410-905796c89793	08 APR 2020
	1658-1718
	EASA - APPROVED

36-11-06A OVHT Alert (A)

RI	NI	NR	PLACARD	O	M
-	2	1	YES	YES	YES

One may be inoperative provided that associated bleed valve is considered inoperative and selected OFF.

[Refer to Item 36-11-02-01 Bleed Valve – Passenger Configuration](#) or [Refer to Item 36-11-02-02 Bleed Valve – Cargo Configuration](#) (One bleed inoperative).

See Operational procedure MOP.36.11-06P OVHT Alert (O)

See Maintenance procedure MMP.36.11-06 OVHT Alert (M)

- OR -

36-11-06B OVHT Alert (B)

RI	NI	NR	PLACARD	O	M
-	2	0	YES	YES	YES

May be inoperative provided that both bleed valves are considered inoperative and are selected OFF.

[Refer to Item 36-11-02-01 Bleed Valve – Passenger Configuration](#) or [Refer to Item 36-11-02-022 Bleed Valve – Cargo Configuration](#) (both bleed inoperative).

See Operational procedure MOP.36.11-06P OVHT Alert (O)

See Maintenance procedure MMP.36.11-06 OVHT Alert (M)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°12
---	---	--------------------------------

36-11-06P OVHT Alert (O)

4d30552d-7a1c-4422-8418-a8329657cc3a		07 SEP 2020
		1658-1718

■ In case of OVHT Alert (A)

[Refer to Item # 36-11-02 Bleed Valve \(O\) - One Bleed inoperative](#)

- OR -

■ In case of OVHT Alert (B)

[Refer to Item # 36-11-02 Bleed Valve \(O\) - Both Bleed inoperative](#)

36-11-07 Bleed Switching Pressure Sensor (BSPS)

50b3f289-b91b-41f0-8450-8ad0c37ffae8		01 AUG 2024
		1658-1718
		EASA - APPROVED

36-11-07A ONE BSPS INOPERATIVE (A)

RI	NI	NR	PLACARD	O	M
-	2	1	YES	YES	YES

One may be inoperative provided that:

(a) Associated Bleed Valve is considered inoperative, [Refer to Item 36-11-02-01Bleed Valve – One Bleed Valve Inoperative – Passenger Configuration](#) or [Refer to Item 36-11-02-02Item Bleed Valve – One Bleed Valve Inoperative - Cargo Configuration](#).

See Operational procedure MOP.36.11-07P Bleed Switching Pressure Sensor (BSPS) (O)

See Maintenance procedure MMP.36.11-07 Bleed Switching Pressure Sensor (BSPS) (M)

- OR -

36-11-07B BOTH BSPS INOPERATIVE (B)

RI	NI	NR	PLACARD	O	M
-	2	0	YES	YES	YES

Both may be inoperative provided that:

(a) Both Bleed Valves are considered inoperative, [Refer to Item 36-11-02-01Bleed Valve – Both Bleed Valves Inoperative – Passenger Configuration](#) or [Refer to Item 36-11-02-02Bleed Valve – Both Bleed Valves Inoperative - Cargo Configuration](#).

See Operational procedure MOP.36.11-07P Bleed Switching Pressure Sensor (BSPS) (O)

See Maintenance procedure MMP.36.11-07 Bleed Switching Pressure Sensor (BSPS) (M)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°13
---	---	-------------------------

36-11-07P Bleed Switching Pressure Sensor (BSPS) (O)

7955071f-d577-42ac-90b8-ba295455fbf3

07 SEP 2020

1658-1718

■ In case of ONE BSPS INOPERATIVE (A)

[Refer to Item # 36-11-02 Bleed Valve \(O\) - One Bleed inoperative.](#)

- OR -

■ In case of BOTH BSPS INOPERATIVE (B)

[Refer to Item # 36-11-02 Bleed Valve \(O\) - Both Bleed inoperative.](#)

36-22-01 LEAK Alert

7c869f3e-8931-4581-87d3-1fad975bd8f6

01 AUG 2024

1192-1568

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	2	1	YES	NO	NO

One may be inoperative provided that:

- Associated bleed valve is considered inoperative and selected OFF,
[Refer to Item 36-11-02-01 BLEED Valve - Passenger Configuration](#) or
[Refer to Item 36-11-02-02 BLEED Valve - Cargo Configuration](#), and
- Ground X Feed valve is secured CLOSED,
[Refer to Item 36-11-04 Ground X Feed Valve.](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°14
---	---	--------------------------------

ebcb22f1-e190-4937-9980-2db9b22dcaa0	01 AUG 2024
	1658-1718
	EASA - APPROVED

36-22-01A LEAK Alert (A)

RI	NI	NR	PLACARD	O	M
-	2	1	YES	<u>YES</u>	<u>YES</u>

One may be inoperative provided that:

- Associated bleed valve is considered inoperative and selected OFF,
[Refer to Item 36-11-02-01 BLEED Valve - Passenger Configuration](#) or
[Refer to Item 36-11-02-02 BLEED Valve - Cargo Configuration](#) (One bleed inoperative), and
- Cross Bleed valve is secured CLOSED,
[Refer to Item 36-11-04 Cross Bleed Valve \(CBV\)](#).

See Operational procedure MOP.36.22-01P LEAK Alert (O)

See Maintenance procedure MMP.36.22-01 LEAK Alert (M)

- OR -

36-22-01B LEAK Alert (B)

RI	NI	NR	PLACARD	O	M
-	2	0	YES	<u>YES</u>	<u>YES</u>

May be inoperative provided that both bleed valves are considered inoperative and are selected OFF.

[Refer to Item 36-11-02-01 Bleed Valve – Passenger Configuration](#) or [Refer to Item 36-11-02-02 Bleed Valve – Cargo Configuration](#) (Both bleed inoperative).

See Operational procedure MOP.36.22-01P LEAK Alert (O)

See Maintenance procedure MMP.36.22-01 LEAK Alert (M)

36-22-01P LEAK Alert (O)

f3a676f4-4f63-49e8-a7e7-6c9129d52d17	07 SEP 2020
	1658-1718

■ In case of LEAK Alert (A)

[Refer to Item # 36-11-02 Bleed Valve - One Bleed Valve Inoperative \(O\)](#).

- OR -

■ In case of LEAK Alert (B)

[Refer to Item # 36-11-02 Bleed Valve - Both Bleed Valves Inoperative \(O\)](#).

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 36 PNEUMATIC SYSTEM	MOP.36 Page n°15
---	---	-----------------------------

36-70-01 AIR BL LEAK PTT Button (RH Maintenance Panel)

AIR BL LEAK PTT Button (RH Maintenance Panel)

0d0482bf-5986-4364-8c68-65647e088861

21 OCT 2020

ALL

EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	NO	NO	NO

May be inoperative provided pneumatic system is operative.

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 42 INTEGRATED MODULAR AVIONICS	MOP.42 Page n°01
---	--	-------------------------

42-11-01 IOM DC

f692fabb-5c62-49c3-a7bb-f902d160a1da		27 MAY 2015
		ALL

NO GO

42-11-02 IOM AP

eb972073-3545-4579-950d-8ea5192c7b90		27 MAY 2015
		ALL

RI	NI	NR	PLACARD	O	M
-	2	0	NO	NO	NO

One or both may be inoperative.

[Refer to Item 22-18-01 Autopilot Function](#)

[Refer to Item 22-18-03 Yaw Damper Function](#)

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 46 INFORMATION SYSTEMS	MOP.46 Page n°01
---	--	--------------------------------

46-25-01 Electronic Flight Bag - EFB Device

ori005417	09 DEC 2021
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
-	-	-	NO	NO	NO

Refer to MUE DSP.46.25.01 Electronic Flight Bag - EFB Device.

Note

EFB failure must not be reported on the CRM but reported to the CCO at the first opportunity.

46-25-02 Electronic Flight Bag - Mounting Device

9d3eddec-fd93-45ae-8aa5-888fc247d448	03 OCT 2024
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	2	0	YES	YES	YES

One or both may be inoperative provided that.

- The associated EFBs are stowed securely during critical phases of flight (including take-off and landing),
- Flight crew(s) with inoperative EFB mounting device have paper copy of AIP charts intended to be used at departure, destination, and alternate airport.
- At least one EFB is plugged to USB power supply or has enough battery power to complete the flight (Refer to MUE DSP.46.25.01.04P - Electronic Flight Bag - EFB Charging Port (O))
- EFB not plugged to USB power supply and with not enough battery power to complete the flight are considered inoperative (Refer to MUE DSP.46.25.01.01 - Electronic Flight Bag - EFB Device)

Note

- *EFB with not enough battery power to complete the flight can be used normally as long as battery power is available.*
- *Turn EFB in standby mode when not needed to avoid battery discharge.*

See Operational procedure [MOP.46.25-02P Electronic Flight Bag - Mounting Device \(O\)](#)

See Maintenance procedure [MMP.46.25-02 Electronic Flight Bag - Mounting Device \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 46 INFORMATION SYSTEMS	MOP.46 Page n°02
---	--	--------------------------------

46-25-02P Electronic Flight Bag - Mounting Device (O)

51a4cc67-b878-4297-81fe-72f385782bed		22 SEP 2022
ALL		

- ▶ When not installed on EFB Mounting Device, EFB(s) can only be used during non-sterile flight phases.
- ▶ When not used, EFB(s) not installed on EFB Mounting Device must be safely stored in the storage on the side of the pedestal.
- ▶ If landing performance update is required during sterile flight phases, QRH must be used.
- ▶ Flight crew(s) with inoperative EFB Mounting Device must use paper copy of AIP chart.

46-25-03 Electronic Flight Bag - USB Power Supply

d1f05761-bafd-4ab0-97c7-47143332b213		22 SEP 2022
ALL		
EASA - APPROVED		

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative provided that:

- At least one EFB has enough battery power to complete the flight (Refer to MUE DSP.46.25.01.04P - Electronic Flight Bag - EFB Charging Port (O))
- EFB with not enough battery power to complete the flight are considered inoperative (Refer to MUE DSP.46.25.01.01 - Electronic Flight Bag - EFB Device)

Note

- *EFB with not enough battery power to complete the flight can be used normally as long as battery power is available.*
- *Turn EFB in standby mode when not needed to avoid battery discharge.*

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 52 DOORS	MOP.52 Page n°01
---	--	-------------------------

52-11-01 Door Alert System

1b1e338f-d8f0-45a2-a37f-a55a3037c6c5	07 OCT 2020
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	1	0	YES	<u>YES</u>	<u>YES</u>

May be inoperative provided that affected doors are checked locked closed prior to each flight .

Note

Maintenance Procedure is applicable for Flight Compartment Overhead Hatch only.

See Operational procedure MOP.52.11-01P Door Alert System (O)

See Maintenance procedure MMP.52.11-01 Door Alert System (M)

52-11-01P Door Alert System (O)

6277b97f-ee45-4602-a74e-4853bafb497d	16 OCT 2020
	ALL

- Check visually that the doors are latched, locked and closed prior to each flight.

52-11-02 Secondary Handrail

706b1542-8306-40b0-9240-523eb9d531a9	24 JUN 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	1	0	YES	NO	<u>YES</u>

May be inoperative provided that the rail is secured in retracted position or removed.

See Maintenance procedure Secondary Handrail (if installed) (M)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 52 DOORS	MOP.52 Page n°02
---	--	-------------------------

52-12-01 Passenger Door Torque Tube

e2f2bfb4-c59c-468f-b328-f1a70830fc0e	27 MAY 2015
	ALL
	EASA - APPROVED

52-12-01A Ferry Flight (A)

RI	NI	NR	PLACARD	O	M
A	1	0	YES	NO	NO

May be inoperative for one [Ferry Flight](#) to a base where repair is possible provided that:

- Ground personnel assistance for opening and closing operation is available, and
- Door is not operated from inside the aircraft (except in case of emergency), and
- It is checked that nobody is right below the door during the operation, and
- All possibly concerned personnel are informed about the unbalanced condition.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 52 DOORS	MOP.52 Page n°03
---	--	--------------------------------

52-21-01-01 Emergency Exit (Including Passenger-Crew Doors, Service Door, but Excluding Flight Deck Emergency Exits) - Passenger or Combi Configuration

Emergency Exit (Including Passenger-Crew Doors, Service Door, but Excluding Flight Deck Emergency Exits) - Passenger or Combi Configuration		
8a3966c7-673d-40d0-a33b-0629fea03f18		24 JUN 2025
ALL		
EASA - APPROVED		

RI	NI	NR	PLACARD	O	M
A	4	3	YES	NO	NO

One may be inoperative for a maximum of five **flights** provided that:

- Passenger number is limited to 19 and they are seated in cabin zone B, and
- The affected emergency exit is closed and locked, and
- A conspicuous barrier, strap or rope and a placard stating “DO NOT USE” are placed across the affected emergency exit prior to passenger boarding, and
- The affected emergency exit is not used for passenger boarding, nor for any purpose whilst passengers are on board, and
- Visual indications (illuminated and non-illuminated) directing passengers to the affected emergency exit are obscured (use the black tape in the “lot de bord”), and
- All crew members are briefed on the location and condition of the affected emergency exit, passenger distribution and modified cabin safety procedures, and
- The affected emergency exit and blocked seating layout are checked before each flight by the relevant cabin crew member, and
- The escape path to the affected emergency exit is checked by the relevant cabin crew member to be unobstructed before each takeoff and landing, and
- Extended overwater flight** is prohibited.

Note

If the affected emergency exit is operative mechanically, it may still be used for evacuation in the case of emergency.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 52 DOORS	MOP.52 Page n°04
---	--	-------------------------

52-21-01-02 Emergency Exit (Including Passenger-Crew Doors, Service Door, but Excluding Flight Deck Emergency Exits) - Cargo Configuration
Emergency Exit (Including Passenger-Crew Doors, Service Door, but Excluding Flight Deck Emergency Exits) - Cargo Configuration

44f9c9d-50be-46bf-8d58-5895b7b1a33a

22 SEP 2022

ALL

EASA - APPROVED

52-21-01-02A (A)

RI	NI	NR	PLACARD	O	M
C	4	2	NO	NO	NO

Any in excess of two non-cockpit emergency exits intended to be used by the persons on board to evacuate the aircraft may be inoperative.

Note

The relief contained herein requires that flight deck emergency exit / means of escape exists and remain operative.

- OR -

52-21-01-02B (B)

RI	NI	NR	PLACARD	O	M
A	4	1	NO	NO	NO

Any in excess of one non-cockpit emergency exit intended to be used by the persons on board to evacuate the aircraft may be inoperative for a maximum of five **flights**

Note

The relief contained herein requires that flight deck emergency exit / means of escape exists and remain operative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 52 DOORS	MOP.52 Page n°05
---	--	-------------------------

52-31-01 Cargo Door Motor Actuator

fe476c53-b1b5-4e7a-86ed-d3921a39dde3	24 JUN 2025
	ALL
	EASA - APPROVED

52-31-01A (A)

RI	NI	NR	PLACARD	O	M
C	1	0	NO	YES	YES

May be inoperative provided that:

- (a) An approved mechanical device (crank) installed in the aircraft is used for cargo door operation, and
- (b) The cargo door is checked closed, latched and locked prior to each flight.

[See Operational procedure Cargo Door Motor Actuator \(if installed\) \(O\)](#)

[See Maintenance procedure MMP.52.31-01 Cargo Door Motor Actuator \(M\)](#)

- OR -

52-31-01B (B)

RI	NI	NR	PLACARD	O	M
A	1	0	NO	YES	YES

May be inoperative provided that:

- (a) The cargo door motor actuator is removed,
- (b) The cargo door is checked closed, latched and locked prior to each [flight](#),
- (c) Cargo door is not used and cargo must be loaded/unloaded with no passenger on board, through the cabin using the service door, and
- (d) Operations are limited to a maximum of 90 [calendar days](#).

[See Operational procedure MOP.52.31-01P Cargo Door Motor Actuator \(O\)](#)

[See Maintenance procedure MMP.52.31-01 Cargo Door Motor Actuator \(M\)](#)

- OR -

52-31-01C (C)

RI	NI	NR	PLACARD	O	M
A	1	0	NO	YES	NO

May be inoperative provided that:

- (a) Cargo door is not used and cargo must be loaded/unloaded with no passenger on board, through the cabin using the service door,
- (b) The cargo door is checked closed, latched, and locked prior to each flight, and
- (c) Operations are limited to a maximum of 90 [calendar days](#).

[See Operational procedure Cargo Door Motor Actuator \(if installed\) \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 52 DOORS	MOP.52 Page n°06
---	--	--------------------------------

52-31-01P Cargo Door Motor Actuator (O)

Cargo Door Motor Actuator (O)

0bb0f997-55bd-4ad7-ace3-4d0f0cb8d6d1		22 SEP 2022
		ALL

- Check visually that cargo door is closed, latched and locked prior to each flight.

52-31-02 Cargo Door Control System

c46a147c-08aa-4702-bc25-885e83063cbe		22 SEP 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that cargo door is visually checked locked closed.

52-31-04 Cargo Door Hold Open Strut

d9090eb6-5e34-41b8-b2e4-c198602e8d6b		24 JUN 2025
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	1	0	NO	<u>YES</u>	NO

May be inoperative provided that:

- Actuation of cargo door is not allowed,
- Cargo door is not used and cargo must be loaded/unloaded with no passenger on board, through the cabin using the service door, and
- Cargo door is checked closed, latched and locked prior to each flight.

See Operational procedure [MOP.52.31-04P Cargo Door Hold Open Strut \(O\)](#)

52-31-04P Cargo Door Hold Open Strut (O)

ec77b2cd-5d22-4ae1-b35e-4c034a15cecc		21 OCT 2020
		ALL

- Check visually that cargo door is closed, latched and locked prior to each flight.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 52 DOORS	MOP.52 Page n°07
---	--	--------------------------------

52-42-01 Service Door - Hold Open Device

450ef050-aac2-4107-b843-3c50ece57799	18 MAY 2022
	ALL
	EASA - APPROVED

52-42-01A (A)

RI	NI	NR	PLACARD	O	M
-	-	0	NO	NO	NO

May be inoperative provided that service door is maintained in closed position.
[Refer to Item 52-21-01-01MOP.52.21-01-01 Emergency Exit \(Including Passenger-Crew Doors, Service Door, but Excluding Flight Deck Emergency Exits\) - Passenger or Combi Configuration](#)

Or

[Refer to Item 52-21-01-02MOP.52.21-01-02 Emergency Exit \(Including Passenger-Crew Doors, Service Door, but Excluding Flight Deck Emergency Exits\) - Cargo Configuration](#)

- OR -

52-42-01B (B)

RI	NI	NR	PLACARD	O	M
C	-	-	YES	NO	YES

May be inoperative provided that the approved mechanical device to maintain the hook in open position is installed.

[See Maintenance procedure MMP.52.42-01 Service Door - Hold Open Device \(M\)](#)

52-50-01-01 Cockpit Door Locking System

bd626441-5426-480a-b294-9e694b661424	16 FEB 2018
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	1	0	YES	YES	NO

May be inoperative provided that the complete system is deactivated.

[See Operational procedure MOP.52.50-01-01P Cockpit Door Locking System \(O\)](#)

52-50-01-01P Cockpit Door Locking System (O)

758fdf38-4adc-4407-a2dc-be52116e3168	27 MAY 2015
	ALL

- Move the manual lock bolt(s) to CLOSE position.

cont'd... >>>

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 52 DOORS	MOP.52 Page n°08
---	--	-------------------------

cont'd... >>>

Note

When the door is locked with the manual bolt(s), the emergency access to the cockpit is unavailable.

Two crew members are mandatory to stay in the cockpit permanently.

Note

Any part of the CDLS may be inoperative provided that the complete system is deactivated in the unlocked position and is not required by operational regulations for the intended flight.

52-50-01-02 Cockpit Door Locking System - System (Control Unit, Toggle Switch, Lights on Control Panel, Buzzer)

Cockpit Door Locking System - System (Control Unit, Toggle Switch, Lights on Control Panel, Buzzer)

c2cef4aa-cc38-4ed7-8a99-a1058f2fd171	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	1	0	YES	<u>YES</u>	NO

May be inoperative provided that operations are limited to two calendar days .

See Operational procedure MOP.52.50-01-02P Cockpit Door Locking System - System (Control Unit, Toggle Switch, Lights on Control Panel, Buzzer) (O)

52-50-01-02P Cockpit Door Locking System - System (Control Unit, Toggle Switch, Lights on Control Panel, Buzzer) (O)

e07dcab5-f3e1-45c4-a786-9a0f350f70d8	27 MAY 2015
	ALL

- Move the manual lock bolt(s) to CLOSE position.

Note

When the door is locked with the manual bolt(s), the emergency access to the cockpit is unavailable.

Two crew members are mandatory to stay in the cockpit permanently.

Note

Any part of the CDLS may be inoperative provided that the complete system is deactivated in the unlocked position and is not required by operational regulations for the intended flight.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 52 DOORS	MOP.52 Page n°09
---	--	-------------------------

52-50-01-03 Cockpit Door Locking System - Call Pushbutton on Door Call Panel

c99628b7-1380-41ee-bc3b-333aa2676ecf		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that the crew members interphone is operative.

52-50-01-04 Cockpit Door Locking System - EMER Pushbutton on Door Call Panel

Cockpit Door Locking System - EMER Pushbutton on Door Call Panel

ac2f7b67-1745-4dfc-b8ee-87491b02b94b		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative provided that the crew members interphone is operative.

See Operational procedure MOP.52.50-01-04P Cockpit Door Locking System - EMER Pushbutton on Door Call Panel (O)

52-50-01-04P Cockpit Door Locking System - EMER Pushbutton on Door Call Panel (O)

Cockpit Door Locking System - EMER Pushbutton on Door Call Panel (O)

4feeb75b-e955-408e-b9ce-2ad861aca0bb		27 MAY 2015
		ALL

- Move the manual lock bolt(s) to CLOSE position.

Note

When the door is locked with the manual bolt(s), the emergency access to the cockpit is unavailable.

Two crew members are mandatory to stay in the cockpit permanently.

Note

Any part of the CDLS may be inoperative provided that the complete system is deactivated in the unlocked position and is not required by operational regulations for the intended flight.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 52 DOORS	MOP.52 Page n°10
---	--	-------------------------

52-50-01-05

Cockpit Door Locking System - OPEN Light on Door Call Panel

7ba00e7a-8d60-4813-a07e-78637b385a00		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative.

52-50-01-06

Cockpit Door Locking System - DENY Light on Door Call Panel

be56546b-4fa9-4e77-b02a-58583b23f6c1		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that the crew members interphone is operative.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 56 WINDOWS	MOP.56 Page n°01
---	--	-------------------------

56-11-01 Windshield (Including Main Windshield, FWD and AFT Windows)

5f6fba7b-ce33-4729-bd2b-4abf0635e931	22 SEP 2022
	ALL
	EASA - APPROVED

56-11-01A (A)

RI	NI	NR	PLACARD	O	M
A	6	6	NO	<u>YES</u>	<u>YES</u>

Structural damages may be present provided:

- (a) Flight is conducted unpressurized, and
- (b) Vision through affected cockpit windshield is acceptable to the pilot, and
- (c) Operations are limited to one calendar day.

Note

A damaged cockpit window must be assessed in accordance with Structural Repair Manual Refer to SRM 56-10-00. If it is assessed as acceptable by maintenance personnel, the vision through this cockpit window must also be assessed as being acceptable by the pilot.

See Operational procedure MOP.56.11-01P Windshield (Including Main Windshield, FWD and AFT Windows) (O)

See Maintenance procedure MMP.56.11-01 Windshield (Including Main Windshield, FWD and AFT Windows) (M)

- OR -

56-11-01B (B)

RI	NI	NR	PLACARD	O	M
C	6	6	NO	NO	<u>YES</u>

External ply may be cracked, provided that vision through affected cockpit windshield is acceptable to the pilot.

Note

A cockpit window with minor damages, as described in Refer to SRM 56-10-00, is considered operative, but the vision through this cockpit window must be acceptable to the pilot.

See Maintenance procedure MMP.56.11-01 Windshield (Including Main Windshield, FWD and AFT Windows) (M)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 56 WINDOWS	MOP.56 Page n°02
---	--	-------------------------

56-11-01P Windshield (Including Main Windshield, FWD and AFT Windows) (O)

Windshield (Including Main Windshield, FWD and AFT Windows) (O)

90e36190-42ee-4bde-b49c-184c8ffb2ae4	25 SEP 2020
	ALL

Unpressurized Flight

Limitation

Maximum operating altitude 10 000 ft

Normal Procedures

- ▶ OVBD VALVE FULL OPEN
- ▶ CAB PRESS MODE SEL MAN
- ▶ MAN RATE knob MAX INCREASE
- ▶ BLEED VALVE ON

Note

Control aircraft vertical speed to take into account passenger comfort.

56-21-01-01 Passenger Compartment Window - Passenger Configuration

e70aef3b-c182-4e1d-a2d4-4bd5084c3e27	07 OCT 2020
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	-	-	NO	<u>YES</u>	<u>YES</u>

One or more cabin windows may be cracked provided that:

- (a) Flight is conducted unpressurized, and
- (b) Operations are limited to one calendar day.

See Operational procedure [MOP.56.21-01P Passenger Compartment Window \(O\)](#)

See Maintenance procedure [MMP.56.21-01 Passenger Compartment Window \(M\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 56 WINDOWS	MOP.56 Page n°03
---	--	-------------------------

56-21-01-02 Passenger Compartment Window - Cargo Configuration

19fdaffc-92cd-433d-a52e-c85b2af56d8d	07 OCT 2020
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	-	-	NO	<u>YES</u>	<u>YES</u>

One or more cabin windows may be cracked provided that the flight is conducted unpressurized.

See Operational procedure MOP.56.21-01P Passenger Compartment Window (O)

See Maintenance procedure MMP.56.21-01 Passenger Compartment Window (M)

56-21-01P Passenger Compartment Window (O)

fe246b7f-89e6-4ae4-94ec-58bf0a79152d	29 SEP 2020
	ALL

Unpressurized Flight

Limitation

Maximum operating altitude 10 000 ft

Normal Procedures

- ▶ OVBD VALVE FULL OPEN
- ▶ CAB PRESS MODE SEL MAN
- ▶ MAN RATE knob MAX INCREASE
- ▶ BLEED VALVE ON

Note

Control aircraft vertical speed to take into account passenger comfort.



VT / ATR 72-600

MEL

OPERATIONAL PART

ATA 56 WINDOWS

MOP.56

Page n°04

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 61 PROPELLERS	MOP.61 Page n°01
---	---	--------------------------------

61-21-02 PEC Channel

db76d0b7-5ae1-4f68-867c-569df2dee7ef	27 MAY 2015
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	4	2	YES	<u>YES</u>	NO

Two may be inoperative provided that:

- (a) One channel is operative on each engine, and
- (b) Reversers are not used when operated on narrow runways (width < 30 m (98 ft)), and
- (c) Operations are limited to two calendar days .

See Operational procedure MOP.61.21-02P PEC Channel (O)

61-21-02P PEC Channel (O)

6c625107-0921-40b0-bb72-2d2b0f5d185f	15 APR 2025
	ALL

On the engine affected by a PEC SGL CH light illuminated :

Other channel test :

Engine not running - PL on GI - CL on FUEL S.O.

- ▶ Set WOW on FLT position on RH Maintenance panel
- ▶ Advance CL to AUTO
- ▶ Check PEC FAULT illuminates after 30 s
- ▶ Retard CL to FUEL S.O.
- ▶ Check PEC FAULT extinguishes after 30 s
- ▶ Set WOW on NORM position on RH Maintenance panel

Overspeed governor test:

Engine running - PL above FI - CL on AUTO - Make sure NP is above 77 %

- ▶ Select PEC to OFF
- ▶ Slowly advance PL up to reach NP = 102.5 % +/- 1 %.
- ▶ Increase TQ by 5 % and check NP unchanged.
- ▶ Retard PL to GI.
- ▶ Select PEC to ON and check PEC OFF extinguishes.

Note

Low pitch stop is automatically checked when propeller is unfeathered.

61-21-06 Propeller Speed Selection in PIU

b5ced2c7-cc7c-4dc4-a05b-92c7ee14db11	01 AUG 2024
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	NO	<u>YES</u>	NO

May be inoperative provided that both CL are set to 100 % OVRD .

Note

If affected side cannot be identified, the Propeller Speed Selection of both PIUs should be considered as inoperative.

See Operational procedure MOP.61.21-06P Propeller Speed Selection in PIU (O)

61-21-06P Propeller Speed Selection in PIU (O)

b9082811-2733-48c9-8d8b-de88e7dcbafc	01 AUG 2024
	ALL

During Preliminary Cockpit Preparation check:

- Before each affected engine start
 - ▶ PL GI
 - ▶ CL FUEL S.O.
 - ▶ WOW SWITCH..... FLT
 - ▶ CL AUTO
- After 30 s
 - ▶ PEC FAULT LIGHT..... CHECK TURN ON
 - ▶ CL FUEL S.O.
 - ▶ PEC RESET
 - ▶ PEC FAULT LIGHT.....CHECK TURN OFF
 - ▶ WOW SWITCH..... NORM

During propeller unfeathering

- ▶ SGL CH INDICATION..... CHECK TURN ON
- ▶ SGL CH INDICATION..... CHECK TURN OFF

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 61 PROPELLERS	MOP.61 Page n°03
---	---	--------------------------------

61-22-02-01 ATPCS

033b28bc-5652-476c-b563-1703fdc9e284	14 MAY 2025
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

One may be inoperative provided that:

- (a) At least one AFU is checked operative, and
- (b) Operations are conducted in compliance with applicable AFM Deviation Guide.

Note

NO GO in case of FTA.

See Operational procedure MOP.61.22-02-01P ATPCS (O)

61-22-02-01P ATPCS (O)

be32c58d-05ee-40bd-9a78-b6dbff6d5bba	24 JUN 2025
ALL	

[Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Dispatch with ATPCS Off.](#)

61-22-02-02 Uptrim Function

ceeb5523-4691-4a59-b415-c27d3588cbcc	24 JUN 2025
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
C	2	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) Autofeather is checked operative before each takeoff, and
- (b) Operations are conducted in compliance with applicable AFM Deviation Guide.

Note

NO GO in case of FTA.

See Operational procedure MOP.61.22-02-02P Uptrim Function (O)

61-22-02-02P Uptrim Function (O)

d2d66be1-33f2-4834-908f-95672bb390ad	24 JUN 2025
ALL	

[Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Dispatch with Uptrim Function Inoperative](#)

61-22-02-03 Autofeather Function

b9655232-4cd0-4f8f-a118-038a119850e5	14 MAY 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	YES	<u>YES</u>	NO

May be inoperative provided that:

- (a) Both AFU are checked operative,
- (b) EEC/uptrim is operative, and
- (c) Operations are conducted in compliance with applicable AFM Deviation Guide.

Note

NO GO in case of FTA.

See Operational procedure [MOP.61.22-02-03P Autofeather Function \(O\)](#)

61-22-02-03P Autofeather Function (O)

8cec5d1a-95c2-48d1-854e-02189cf8e229	24 JUN 2025
	ALL

[Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Dispatch with Autofeather System Inoperative](#)

61-22-03 ATPCS ARM Light

2a260a29-c67e-4ce4-b3bd-7174734a39ec	14 MAY 2025
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	1	0	YES	NO	NO

May be inoperative provided that ATPCS is considered inoperative.
[Refer to Item 61-22-02-01MOP.61.22-02-01 ATPCS.](#)

Note

NO GO in case of FTA.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 61 PROPELLERS	MOP.61 Page n°05
---	---	--------------------------------

61-22-05 Torque Signal

ea82c521-290b-4f8a-a1fb-5e6139bf372d	18 MAY 2022
	1658-1718
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	4	3	YES	<u>YES</u>	NO

One may be inoperative provided ATPCS operates in normal condition.

Note

ARM light flashing indicates the loss of torque signal redundancy on one AFU.

See Operational procedure MOP.61.22-05P Torque Signal (O)

61-22-05P Torque Signal (O)

1a807633-9c25-4cdb-b741-56f01279eb98	22 MAR 2022
	1658-1718

Maintain ATPCS test switch on any ARM position for more than 20 s.

- If an AFU has detected a single torque signal failure, corresponding torque needle will drop from 78 % to 57 % after 20 s.
- If both torque signals are valid on AFU, corresponding torque needle will remain at 78 % after 20 s.

Note

Dispatch is allowed if one AFU has one torque signal failure and the other AFU has both torque signal valid.

61-42-01 NP Indications

1a766240-f74f-412c-8a9e-b6835353b14a	27 MAY 2015
	ALL

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One may be inoperative provided that:

- ETOPS Operations are not conducted, and
- Aircraft is not operated into known or forecast icing conditions .

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 61 PROPELLERS	MOP.61 Page n°06
---	---	--------------------------------

61-50-01 Propeller Brake

c106b4ff-441f-49e1-939a-d89e4f20940b	24 JUN 2025
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
D	1	0	YES	<u>YES</u>	<u>YES</u>

May be inoperative provided that it is deactivated.

Note

Hotel mode is not available.

[See Operational procedure MOP.61.50-01P Propeller Brake \(O\)](#)

[See Maintenance procedure MMP.61.50-01 Propeller Brake \(M\)](#)

61-50-01P Propeller Brake (O)

ori003959	29 MAR 2023
ALL	

CAUTION

Passenger embarkment and disembarkment during night are not performed, except if a GPU is available.

For day light operations, if GPU is unavailable :

- batteries are maintained ON during passenger embarkement and disembarkement to energise PA, interphone system and emergency exit lights,
- as «NO DEVICE» and «SEAT BELTS» are not available on batteries, use interphone or PA for emergency and normal announces on ground,
- before engine start, cargo door is opened and closed with batteries, all doors must be closed.

If GPU is available, before departure, start engine 1 before engine 2 (in order to safely disconnect the GPU).

After landing, connection of the GPU must be done only when the two propellers are stopped.

Note

If necessary, batteries deliver enough power to activate 2 min of minimum cabin and flight crew compartment lighting in addition of cargo door operation and engine start. The 2 minutes light push button switch is located on the panel at the right hand side of the passenger door.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 61 PROPELLERS	MOP.61 Page n°07
---	---	--------------------------------

61-50-02 Propeller Brake Switch Guard (if installed)

8d1bc9d6-ed14-4dd6-bb38-dfd9554b23b7		01 AUG 2024
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	-	0	YES	NO	NO

May be inoperative provided that propeller brake is considered inoperative.
[Refer to Item 61-50-01 Propeller Brake \(if installed\).](#)

61-51-01 PROP BRAKE UNLK Light

c3b4cd5e-5ac7-49e3-8f58-ec2e41b3b779		22 SEP 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	1	0	YES	NO	NO

May be inoperative provided that propeller brake is considered inoperative.
[Refer to Item 61-50-01 Propeller Brake](#)

61-51-02 PROP BRK Light

PROP BRK Local Light

7727ecb2-75e5-4432-b0df-d55de2c5572d		01 AUG 2024
		ALL

RI	NI	NR	PLACARD	O	M
C	1	0	YES	NO	NO

May be inoperative provided that propeller brake is not used.

61-51-03 PROP BRK Ready Light

3d2b6ab2-7376-420e-b429-15fb975dd3b5		22 SEP 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	YES	NO

May be inoperative provided that propeller brake is not used.

[See Operational procedure MOP.61.51-03P PROP BRK Ready Light \(O\)](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 61 PROPELLERS	MOP.61 Page n°08
---	---	--------------------------------

61-51-03P PROP BRK Ready Light (O)

02cf22fd-a0d2-4479-b4ed-5b7e229af6ce		22 SEP 2022
		ALL

- If propeller brake releasing is needed

► BLUE HYD PRESS CHECK 3 000 PSI

 ► PROP BRK RELEASE

 ► UNLOCK LIGHT..... CHECK EXTINGUISHES AFTER 6 s
- If PROP BRK warning is activated

► CL FUEL S.O.

61-60-01 Propeller System - PROP FEATH PUMP and PROP OVSP Test Switches (RH Maintenance Panel)

Propeller System - PROP FEATH PUMP and PROP OVSP Test Switches (RH Maintenance Panel)		
8fbafc5f-1d78-4709-b041-dccfe266224c		21 OCT 2020
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	NO	NO	NO

May be inoperative provided test switch remains in the neutral and guarded position.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 73 ENGINE FUEL AND CONTROL	MOP.73 Page n°01
---	--	--------------------------------

73-13-01 IDLE GATE FAIL Light

94990823-e6d3-4e15-a2b7-d712f340bd55		19 OCT 2020
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	1	0	YES	<u>YES</u>	NO

May be inoperative.

[See Operational procedure MOP.73.13-01P IDLE GATE FAIL Light \(O\)](#)

73-13-01P IDLE GATE FAIL Light (O)

5ae5f8ee-be50-4c57-9d72-26701ceace67		16 OCT 2020
		ALL

Normal Procedures

• AFTER TAKEOFF

▶ IDLE GATE lever CHECK PUSHED IN

• AT LANDING

▶ IDLE GATE lever CHECK PULLED OUT

73-15-01 Fuel Heater

12f6ef57-a3d1-4890-91a3-32dab92cc491

18 MAY 2022

ALL

EASA - APPROVED

73-15-01A LOW Fuel Temperature Reported (A)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	<u>YES</u>

May be inoperative provided that:

- (a) Fuel anti-icing additives meets the engine manufacturer's specification, and
- (b) Engine oil level is checked before the first flight of each day.

[See Maintenance procedure MMP.73.15-01 Fuel Heater \(M\)](#)

- OR -

73-15-01B LOW Fuel Temperature Reported (B)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

May be inoperative provided that flight can be conducted in atmospheric conditions above 0 ° SAT

- OR -

73-15-01C HIGH Fuel Temperature Reported (C)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

May be inoperative provided that no fault in other fuel systems (ATA 28) is reported or is under MEL dispatch.

- OR -

73-15-01D Fuel Temperature Indicator Inoperative (D)

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

May be inoperative provided that:

- (a) Flight can be conducted in atmospheric conditions above 0 ° SAT, and
- (b) No other fault in fuel systems (ATA 28) is reported or is under MEL dispatch.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 73 ENGINE FUEL AND CONTROL	MOP.73 Page n°03
---	--	--------------------------------

73-23-01 PWR MGT Rotary Selector

4f70347c-8f88-4fc3-9e5d-948087b1eb75	14 MAY 2025
ALL	
EASA - APPROVED	

RI	NI	NR	PLACARD	O	M
A	2	1	YES	<u>YES</u>	NO

One may be inoperative provided that operations are limited to two calendar days .

Note

NO GO in case of FTA.

See Operational procedure MOP.73.23-01P PWR MGT Rotary Selector (O)

73-23-01P PWR MGT Rotary Selector (O)

e23a7b04-2eb0-4279-8fe8-f162f46744ce	15 APR 2025
ALL	

■ If One rotary selector stuck in TO position

► CL 1 + 2, for the whole flight 100 % OVRD

● For CLIMB and CRUISE

► Valid rotary selector..... CLIMB / CRUISE

► TQ affected side According to the non affected one

■ One rotary selector stuck in MCT position

► ATPCS is lost: Refer to ATPCS (and Associated Test) (O).

► CL 1 + 2, for the whole flight 100 % OVRD

● For TAKEOFF

► Inhibit CONFIG WARNING by depressing MASTER WARNING pb when applying power.

Note

► *EWD alert will not disappear.*

● CLIMB and CRUISE

► Valid rotary selector..... CLIMB / CRUISE

► TQ affected side According to the non affected one

cont'd... >>>

- One rotary selector stuck in CLB or CRZ or CRZ 1 position
- ▶ ATPCS is lost: [Refer to ATPCS \(and Associated Test\) \(O\)](#).
- For TAKEOFF
- ▶ CL 1 + 2 100 % OVRD
- ▶ Inhibit CONFIG WARNING by depressing MASTER WARNING pb when applying power.
- Note

▶ EWD alert will not disappear.
- For CLIMB and CRUISE
- ▶ Valid rotary selector..... CLIMB / CRUISE
- ▶ CL 1 + 2 AUTO
- ▶ TQ affected side According to the non affected one
- For FINAL APPROACH
- ▶ CL 1 + 2 100 % OVRD

73-23-02 Engine Control

EEC					
d268a650-cc35-46a2-b88e-621495a75abb			14 MAY 2025		
			ALL		
RI	NI	NR	PLACARD	O	M
A	2	1	YES	YES	NO

One EEC counter and associated TQ target bug may be inoperative provided that:

(a) The DC HYD pump is operative, and

(b) The associated pack and bleed valve are operative, and

(c) Operations are conducted in compliance with applicable AFM Deviation Guide, and

(d) The Operations are limited to two [calendar days](#) .

Note

Disregard HBV flag on TQ 1(2) indication.

NO GO in case of FTA.

[See Operational procedure MOP.73.23-02P Engine Control \(O\)](#)

73-23-02P Engine Control (O)

EEC (O)					
ca78fe8a-755a-48ab-9f3c-2dd27f8b353e			24 JUN 2025		
			ALL		

[Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Dispatch with One EEC OFF](#)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 73 ENGINE FUEL AND CONTROL	MOP.73 Page n°05
---	--	--------------------------------

73-31-01 Fuel Flow Indication

9db95511-37ff-4e6d-8fe2-1be3a180b358		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
B	2	1	YES	NO	NO

One may be inoperative.

73-31-02 Fuel Used

21defcaf-7061-4354-8280-0c44a8daac8d		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	1	YES	NO	NO

One may be inoperative provided that associated tank FUEL QTY indicator is operative.

73-34-01 Fuel Clog Alert

fb6e5659-a51d-44fb-a89a-dde26d0b487e		16 FEB 2018
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	2	1	YES	NO	NO

One may be inoperative provided that:

- Associated engine parameters are monitored during the **flight**, and
- Operations are limited to one **calendar day** and aircraft does not depart an airport where repair or replacement may be carried out.

73-35-01 Fuel Temperature Indication

6a4d436d-69bb-4468-b3d2-93b3e2d14cbd		01 AUG 2024
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
-	2	0	YES	NO	NO

May be inoperative provided that associated fuel heater is considered inoperative: [Refer to Item 73-15-01 Fuel Heater — Fuel Temperature Indicator Inoperative \(D\)](#).

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 73 ENGINE FUEL AND CONTROL	MOP.73 Page n°06
---	--	--------------------------------

73-60-01
ENG - RH Maintenance Panel Guarded Switches

ENG - RH Maintenance Panel Guarded Switches		
ea87f588-0b6d-4055-9e47-081aa484661f		21 OCT 2020
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	-	0	NO	NO	NO

May be inoperative provided test switch remains in the neutral and guarded position.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 74 IGNITION	MOP.74 Page n°01
---	---	-----------------------------

74-21-01 Ignition System (A or B)

476c62b0-6cc6-4413-9ef7-1cf5794dab94		01 AUG 2024
		ALL

RI	NI	NR	PLACARD	O	M
A	4	2	YES	NO	NO

- Any in excess of two may be inoperative provided that:
- (a) Operations are limited to three **calendar days**, and
 - (b) **ETOPS** Operations are not conducted, and
 - (c) One is operating on each engine and used.

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 75 AIR	MOP.75 Page n°01
---	--	-------------------------

75-20-01 HBV Discharge Flapper

0e07d63b-641c-43f7-b2c7-18d82653d88c		29 MAR 2019
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
D	4	0	NO	NO	NO

All may be inoperative.

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 77 ENGINE INDICATING	MOP.77 Page n°01
---	--	--------------------------------

77-00-02 AFU

13b5456b-4957-4d93-9477-b3da7c0dc5ab		14 MAY 2025
		ALL

RI	NI	NR	PLACARD	O	M
B	2	1	YES	<u>YES</u>	<u>YES</u>

One may be inoperative provided that:

- (a) ETOPS operations are not conducted, and
- (b) AFU is deactivated, and
- (c) ATPCS is considered inoperative, and
- (d) Operations are conducted in compliance with applicable AFM Deviation Guide.

Note

NO GO in case of FTA.

See Operational procedure MOP.77.00-02P AFU (O)

See Maintenance procedure MMP.77.00-02 AFU (M)

77-00-02P AFU (O)

41aea807-a4aa-4449-b8f5-6c94afb02b62		24 JUN 2025
		ALL

[Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Dispatch with ATPCS Off](#)

77-11-01-01 NH Indications

c454d30b-cb07-4b67-8bf0-d9118e5f33ce		22 SEP 2022
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	4	2	YES	NO	NO

Either pointer or counter may be inoperative on each indicator.

77-11-01-02 NH Indicator

1a36c1a5-d88c-49e0-98d0-d4cefb6f323f		01 AUG 2024
		ALL

RI	NI	NR	PLACARD	O	M
C	2	1	YES	<u>YES</u>	NO

One Indicator (pointer and counter) may be inoperative provided that:

- (a) ETOPS Operations are not conducted, and
- (b) Both engines TQ indicator and NP indicator are operative.

See Operational procedure MOP.77.11-01-02P NH Indicator (O)

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 77 ENGINE INDICATING	MOP.77 Page n°02
---	--	--------------------------------

77-11-01-02P NH Indicator (O)

f8279b1e-1926-4aec-9aea-4c62977710bf		27 MAY 2015 ALL
--------------------------------------	--	--------------------

- ▶ When starting affected engine, select CL FTR 5 s after START pb has been depressed.

77-11-02 NL Indicator

6b55d947-c94c-4b08-8739-39543c018825		09 MAY 2019 ALL EASA - APPROVED
--------------------------------------	--	---------------------------------------

RI	NI	NR	PLACARD	O	M
C	2	0	YES	NO	NO

One or both may be inoperative provided that associated NH indicator is operative and monitored.

77-13-01-01 TQ Indications - Digital Counter

TQ Indications - Digital Counter

d1570907-613a-4ca1-aef0-d27f0d388dd9		01 JAN 2024 ALL
--------------------------------------	--	--------------------

RI	NI	NR	PLACARD	O	M
C	4	2	YES	YES	NO

One or both Digital counters may be inoperative provided that:

- (a) Both EEC are operative and,
- (b) HBV is checked operative.

Note

When only a TQ Pointer is inoperative AFU is considered inoperative and dispatch must be done under [Refer to Item 77-00-02MOP.77.00-02 AFU](#).

See Operational procedure [MOP.77.13-01-01P TQ Indications - Digital Counter \(O\)](#)

77-13-01-01P TQ Indications - Digital Counter (O)

ce4c2e8e-0787-4e4b-9835-30627a95884d		12 NOV 2020 ALL
--------------------------------------	--	--------------------

• During flight preparation check HBV operative

- ▶ HBV FLAG ON TQ DIGITAL INDICATION..... CHECK NOT DISPLAYED
- ▶ ---.- ON TORQUE DIGITAL INDICATION CHECK NOT DISPLAYED

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 77 ENGINE INDICATING	MOP.77 Page n°03
---	--	--------------------------------

77-13-01-02 TQ Indications - Pointer & Digital Counter

75f9954a-3351-4950-9c85-04f4826cf4ef	14 MAY 2025
	ALL

RI	NI	NR	PLACARD	O	M
C	4	2	YES	<u>YES</u>	NO

Both Pointer and Digital counter on the same ENG may be inoperative provided that:

- (a) ETOPS operations are not conducted, and
- (b) ATPCS checked operative, and
- (c) Both EECs are operative, and
- (d) All NH and NP Indications are operative, and
- (e) Operations are conducted in compliance with applicable AFM Deviation Guide.

Note

NO GO in case of FTA.

See Operational procedure MOP.77.13-01-02P TQ Indications (O)

77-13-01-02P TQ Indications (O)

3086aa0d-33f1-4d77-8b2d-cfc31e7bdad5	24 JUN 2025
	ALL

For dispatch with both Pointer and Digital counter on the same ENG inoperative, [Refer to AFM - DEVIATION GUIDE SUPPLEMENTS Dispatch with TQ Indications Inoperative \(Both Pointer Digital Counter on the Same ENG\)](#).

77-14-01 TQ Target Indication

0b640cf0-456f-4773-8105-9406c7251d75	24 OCT 2017
	ALL
	EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	2	0	NO	<u>YES</u>	NO

One or both maybe inoperative.

See Operational procedure MOP.77.14-01P TQ Target Indication (O)

77-14-01P TQ Target Indication (O)

c5f99735-76fb-46d8-853b-581743ed5470	22 SEP 2022
	ALL

■ If one TQ target indication is inoperative

- TQ TARGET (affected side) : USE OPERATIVE TARGET INDICATION

■ If both TQs target indication are inoperative

TQ TARGET 1+2: USE TQ TABLE ([Refer to QRH - QRH PER.2.Torque Value](#))

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 77 ENGINE INDICATING	MOP.77 Page n°04
---	--	--------------------------------

77-20-01 ITT Indications

454e8bb3-1d53-4535-9660-275c97110279		29 OCT 2019
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
C	4	2	YES	NO	NO

Either pointer or counter may be inoperative on each indicator.

77-21-01 Excessive ITT Alert

e9a3dde3-91af-4b4d-a10b-419d080e1128		27 MAY 2015
		ALL
		EASA - APPROVED

RI	NI	NR	PLACARD	O	M
A	2	0	YES	NO	NO

May be inoperative provided that:

- (a) Associated ITT indicator is operative and monitored throughout the flight ,
and
- (b) Operations are limited to three calendar days .

77-60-01 DATA BUS (RH Maintenance Panel)

DATA BUS (RH Maintenance Panel)		
b6172b18-c68b-4b9c-8ffe-f95bafb784c8		21 OCT 2020
		ALL

RI	NI	NR	PLACARD	O	M
C	1	0	NO	NO	NO

May be inoperative provided test switch remains in the neutral and guarded position.

 VT / ATR 72-600 MEL	OPERATIONAL PART ATA 79 OIL	MOP.79 Page n°01
---	--	-------------------------

79-32-01 Oil Temperature Indication

c77188ac-ed49-4e07-af61-092e4abc8fa9

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
B	2	1	YES	NO	<u>YES</u>

One may be inoperative provided that:

- (a) The associated fuel temperature indication is operative, and
- (b) The Oil pressure indication is operative, and
- (c) The affected engine oil level is checked before the first flight of each day.

See Maintenance procedure [MMP.79.32-01 Oil TEMP Indication \(M\)](#)

79-33-01 Oil Pressure Indication

340f3c13-ee57-4f3d-a68c-7ecc1cc38458

27 MAY 2015

ALL

RI	NI	NR	PLACARD	O	M
B	2	1	YES	NO	<u>YES</u>

One may be inoperative provided that the associated ENG OIL PRESS alert is checked operative.

See Maintenance procedure [MMP.79.33-01 Oil Pressure Indication \(M\)](#)



VT / ATR 72-600
MEL

OPERATIONAL PART

ATA 79 OIL

MOP.79

Page n°02

PAGE
INTENTIONALLY
LEFT BLANK

 VT / ATR 72-600 MEL	MEL TOC Table of Content	MMP. Page n°01
---	---	------------------------------

MAINTENANCE PART

ATA 21 AIR CONDITIONING	MMP.21
ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MMP.22
ATA 23 COMMUNICATIONS	MMP.23
ATA 24 ELECTRICAL POWER	MMP.24
ATA 25 EQUIPMENT	MMP.25
ATA 26 FIRE PROTECTION	MMP.26
ATA 27 FLIGHT CONTROLS	MMP.27
ATA 28 FUEL SYSTEM	MMP.28
ATA 29 HYDRAULIC SYSTEM	MMP.29
ATA 30 ICE AND RAIN PROTECTION	MMP.30
ATA 31 INDICATING AND RECORDING SYSTEMS	MMP.31
ATA 32 LANDING GEAR	MMP.32
ATA 35 OXYGEN	MMP.35
ATA 36 PNEUMATIC SYSTEM	MMP.36

 VT / ATR 72-600 MEL	 MEL TOC Table of Content	MMP. Page n°02
---	--	-------------------------------

ATA 46 INFORMATION SYSTEMS	MMP.46
----------------------------	--------

ATA 52 DOORS	MMP.52
--------------	--------

ATA 56 WINDOWS	MMP.56
----------------	--------

ATA 61 PROPELLERS	MMP.61
-------------------	--------

ATA 73 ENGINE FUEL AND CONTROL	MMP.73
--------------------------------	--------

ATA 77 ENGINE INDICATING	MMP.77
--------------------------	--------

ATA 79 OIL	MMP.79
------------	--------

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 21 AIR CONDITIONING	MMP.21 Page n°01
---	---	-----------------------------

21-22-02 Emergency Ram Air Valve (ERAV) (M)

b69400bb-8a2b-4ba6-9428-cad86c30f49b

22 JUL 2020

1658-1718

■ In case of ERAV (A)

Emergency Ram Air Check Valve is verified operative - *Refer to MP ATR-A-21-51-40-01001-340A-A.*

- OR -

■ In case of ERAV (B)

Emergency Ram Air Valve is verified CLOSED - *Refer to MP ATR-A-21-22-50-00ZZZ-560Z-A.*

Emergency Ram Air Check Valve is verified operative - *Refer to MP ATR-A-21-51-40-01001-340A-A.*

21-22-03 Emergency Ram Air Check Valve (ERACKV) (M)

01f3bd45-ded7-4776-8790-b53d273129b4

22 JUL 2020

1658-1718

Emergency Ram Air Valve is verified operative - *Refer to MP ATR-A-21-22-50-00001-320A-A.*

21-23-01 Overboard Valve (M)

c9d14da0-8abf-4344-9450-e16f722ac43b

19 MAY 2022

ALL

► Overboard Ventilation Valve De-energization

Refer to MP ATR-A-21-23-20-00ZZZ-560Z-A , setting the valve open in intermediate position.

Note

► *Avoid leaving avionics selected ON for a long period of time.*

21-30-01 Pressurization System (M)

9d253ad8-5e40-4e1c-8a23-c91c4a1c5990

19 MAY 2022

1192-1568

► Electropneumatic Outflow Valve and Pneumatic Outflow Valve Blockage in Open Position

Refer to MP ATR-A-21-31-20-00ZZZ-560Z-A.

Pressurization System - Passenger and Cargo Configuration System (M)

89b49954-b7fd-49cf-84c9-36c3c4884800

14 JAN 2022

1658-1718

■ In case of ETOPS Operations - Passenger and Cargo Configuration System (A)

Outflow valve is secured in open position - *Refer to MP ATR-A-21-31-20-02001-560A-A.*

Emergency Ram Air Valve is checked operative - *Refer to MP ATR-A-21-22-50-00001-320A-A.*

- OR -

cont'd... >>>

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 21 AIR CONDITIONING	MMP.21 Page n°02
---	---	-------------------------

cont'd... >>>

■ **In case of Pressurization System - Passenger and Cargo Configuration (B)**

Outflow valve is secured in open position - *Refer to MP ATR-A-21-31-20-02001-560A-A.*

[Refer to 21-50-01 Both Packs inoperative \(M\).](#)

- OR -

■ **In case of Pressurization System - Passenger and Cargo Configuration (C)**

Outflow valve is secured in open position - *Refer to MP ATR-A-21-31-20-02001-560A-A.*

21-31-01 Automatic Pressurization Control (M)

0d941797-69bc-45de-850a-b4e7472c5dd4

22 JUL 2020

1658-1718

■ **In case of ETOPS Operations (A)**

MAN mode is verified operative - *Refer to MP ATR-A-21-31-XX-00002-320A-A.*

Emergency Ram Air Valve is checked operative - *Refer to MP ATR-A-21-22-50-00001-320A-A.*

- OR -

■ **In case of AUTOMATIC PRESSURIZATION CONTROL (B)**

MAN mode is verified operative - *Refer to MP ATR-A-21-31-XX-00002-320A-A.*

- OR -

■ **In case of OUTFLOW VALVE NORM (C)**

Outflow valve BK UP mode is verified operative - *Refer to MP ATR-A-21-31-20-00001-320A-A.*

DUMP and DITCH checked operative - *Refer to MP ATR-A-21-31-XX-01001-320A-A and Refer to MP ATR-A-21-31-XX-02001-320A-A.*

MAN mode is verified operative - *Refer to MP ATR-A-21-31-XX-00002-320A-A.*

- OR -

■ **In case of OUTFLOW VALVE BK UP (D)**

Outflow valve NORM mode is verified operative - *Refer to MP ATR-A-21-31-20-00001-320A-A.*

MAN mode is verified operative - *Refer to MP ATR-A-21-31-XX-00002-320A-A.*

- OR -

■ **In case of MAN MODE (E)**

Automatic Pressurization Control is verified operative - *Refer to MP ATR-A-21-31-20-00001-320A-A.*

21-31-03 Electropneumatic Outflow Valve (M)

7d3d4f46-f8f7-4688-b716-4c30dc900c11

19 MAY 2022

1192-1568

Refer to MP ATR-A-21-31-20-01ZZZ-560Z-A.

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 21 AIR CONDITIONING	MMP.21 Page n°03
---	---	--------------------------------

21-34-01 Safety Valve (SFV) (M)

7aa05d93-3c98-4401-ade1-98462b3f2dd3

24 JUL 2020

1658-1718

■ In case of Safety Valve (SFV) (A)

Manual Cabin Pressure Control System is selected.

DUMP Pushbutton is selected.

Both safety valves are secured in open position - *Refer to MP ATR-A-21-31-20-03001-560A-A.*

[Refer to Item # 21-50-01, Both Packs inoperative \(M\).](#)

- OR -

■ In case of Safety Valve (SFV) (B)

Both safety valves are secured in open position - *Refer to MP ATR-A-21-31-20-03001-560A-A.*

21-50-01 Pack (M)

f734bc1a-6b5c-4a00-aced-de37d9b41cd9

22 JUL 2020

1658-1718

1) One Pack Inoperative

■ In case of ETOPS Operations (A)

Emergency Ram Air Valve is checked operative - *Refer to MP ATR-A-21-22-50-00001-320A-A.*

- OR -

■ In case of One Pack Inoperative (B)

Associated Bleed valve is secured closed - *Refer to MP ATR-A-36-11-60-00002-560A-A.*

Cross bleed valve is secured closed - *Refer to MP ATR-A-36-11-20-01001-560A-A.*

- OR -

■ In case of ETOPS Operations (C)

Associated Bleed valve is secured closed - *Refer to MP ATR-A-36-11-60-00002-560A-A.*

Cross bleed valve is secured closed - *Refer to MP ATR-A-36-11-20-01001-560A-A.*

Emergency Ram Air Valve is checked operative - *Refer to MP ATR-A-21-22-50-00001-320A-A.*

- OR -

2) Both Packs Inoperative (E) and (G)

■ Both Packs Inoperative

Emergency Ram Air Valve is checked operative - *Refer to MP ATR-A-21-22-50-00001-320A-A.*

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 21 AIR CONDITIONING	MMP.21 Page n°04
---	---	--------------------------------

21-50-02 Flow Control Valve (FCV) (M)

fff908ea-662f-47f9-930c-48e83492364c

22 JUL 2020

1658-1718

■ In case of ONE FCV INOPERATIVE - ETOPS Operations (A)

Affected FCV is locked in CLOSED position - *Refer to MP ATR-A-21-11-50-01001-560A-A.*

Emergency Ram Air Valve is checked operative - *Refer to MP ATR-A-21-22-50-00001-320A-A.*

- OR -

■ In case of ONE FCV INOPERATIVE (B)

Affected FCV is locked in CLOSED position - *Refer to MP ATR-A-21-11-50-01001-560A-A.*

- OR -

■ In case of BOTH FCVs INOPERATIVE (C)

Both FCVs are secured CLOSED - *Refer to MP ATR-A-21-11-50-01001-560A-A.*

[Refer to Item # 21-50-01, Both Packs inoperative \(M\).](#)

21-50-03 Integrated Air System Controller (IASC) (M)

20ec1988-b796-4989-9977-048aa1d89372

22 JUL 2020

1658-1718

■ In case of INTEGRATED AIR SYSTEM CONTROLLER CHANNEL A (A)

Open, secure and tag C/B IASC CHA SUPPLY.

Opposite IASC channel is verified operative - *Refer to MP ATR-A-21-61-10-00001-320A-A.*

CPCS Outflow "NORM" automatic mode is verified operative - *Refer to MP ATR-A-21-31-20-00001-320A-A.*

Emergency Ram Air Valve is checked operative - *Refer to MP ATR-A-21-22-50-00001-320A-A.*

- OR -

■ In case of INTEGRATED AIR SYSTEM CONTROLLER CHANNEL B (B)

Open, secure and tag C/B IASC CHB SUPPLY .

Opposite IASC channel is verified operative - *Refer to MP ATR-A-21-61-10-00001-320A-A.*

CPCS Outflow BK UP automatic mode is verified operative - *Refer to MP ATR-A-21-31-20-00001-320A-A.*

Emergency Ram Air Valve is checked operative - *Refer to MP ATR-A-21-22-50-00001-320A-A.*

- OR -

■ In case of INTEGRATED AIR SYSTEM CONTROLLER (CHANNEL A+B) - PASSENGER CONFIGURATION (C)

Open, secure and tag C/B IASC CHA SUPPLY and C/B IASC CHB SUPPLY .

Operational check of ERAV check valve and emergency RAM AIR function - *Refer to MP ATR-A-21-51-40-01001-340A-A.*

cont'd... >>>

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 21 AIR CONDITIONING	MMP.21 Page n°05
---	---	-------------------------

cont'd... >>>

- OR -

■ In case of **INTEGRATED AIR SYSTEM CONTROLLER (CHANNEL A+B) - CARGO CONFIGURATION (D)**

Open, secure and tag C/B IASC CHA SUPPLY and C/B IASC CHB SUPPLY .

Operational check of ERAV check valve and emergency RAM AIR function - *Refer to MP ATR-A-21-51-40-01001-340A-A.*

21-50-04 Pack Temperature Sensor Channels (PTS) (M)

4421b513-3794-441d-8700-55f6d1bd3e7a		24 JUL 2020
		1658-1718

Pack Discharge Temperature Sensors (PDTS) are verified operative - *Refer to MP ATR-A-21-51-40-00001-340A-A.*

21-50-05 Pack Inlet Temperature Sensor (PITS) (M)

675d1f6c-6a54-46e2-815f-022923d7a623		24 JUL 2020
		1658-1718

■ In case of **ONE SENSOR INOPERATIVE (B)**

[Refer to Item 21-50-01 One pack inoperative \(M\).](#)

- OR -

■ In case of **BOTH SENSOR INOPERATIVE (C)**

[Refer to Item 21-50-01 Both packs inoperative \(M\).](#)

21-50-06 Compressor Discharge Temperature Sensor (CDTS) (M)

d8381d8c-f121-4da5-bb11-f35d8bb38759f		22 JUL 2020
		1658-1718

■ In case of **ONE SENSOR INOPERATIVE (B)**

[Refer to Item 21-50-01 One pack inoperative \(M\).](#)

- OR -

■ In case of **BOTH SENSOR INOPERATIVE (C)**

[Refer to Item 21-50-01 Both packs inoperative \(M\).](#)

21-50-07 Pack Inlet Pressure Sensor (PIPS) (M)

488b61ac-d3c8-4491-83c1-a08a119209ed		24 JUL 2020
		1658-1718

■ In case of **ONE SENSOR INOPERATIVE (A)**

[Refer to Item 21-50-01 One Pack Inoperative \(M\).](#)

- OR -

■ In case of **BOTH SENSORS INOPERATIVE (B)**

[Refer to Item 21-50-01 Both Packs Inoperative \(M\).](#)

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 21 AIR CONDITIONING	MMP.21 Page n°06
---	---	--------------------------------

21-50-08 Pack Discharge Temperature Sensor (PDTs) (M)

a7cbef44-9451-4f91-9f60-abe89e77f69f		24 JUL 2020
		1658-1718

- In case of ONE SENSOR INOPERATIVE (B)
[Refer to Item 21-50-01 One Pack Inoperative \(M\).](#)
- OR -
- In case of BOTH SENSORS INOPERATIVE (C)
[Refer to Item 21-50-01 Both Packs Inoperative \(M\).](#)

21-50-09 Pack Dispatch Pressure Sensor (PDPS) (M)

c1fcc9e4-3307-445f-a2b3-8e8b8406a969		24 JUL 2020
		1658-1718

- In case of ONE SENSOR INOPERATIVE (A)
[Refer to Item 21-50-01 One Pack inoperative \(M\).](#)
- OR -
- In case of BOTH SENSORS INOPERATIVE (B)
[Refer to Item 21-50-01 Both Packs inoperative \(M\).](#)

21-51-01 Pack Valve (M)

005e5080-471c-4e69-bfa1-74072375cf49		01 AUG 2024
		1192-1568

Refer to MP ATR-A-21-11-50-00ZZZ-560Z-A.

21-51-02 Pack FAULT Alert (M)

4012ca69-94de-4158-818e-b8d7bf6a7902		24 JUL 2020
		1658-1718

- [Refer to Item # 21-50-01 Pack - Single Pack Inoperative \(M\)](#)
- OR -
- [Refer to Item # 21-50-01 Pack - Both Packs Inoperative \(M\)](#)

21-51-08 Mix Manifold Temperature Sensor (MIXTS) (M)

25ea5b93-739e-4e9d-9d7e-8325162e3a50		22 JUL 2020
		1658-1718

Pack Discharge Temperature Sensors (PDTs) are verified operative - Refer to MP ATR-A-21-51-40-00001-340A-A.

21-51-09 Ventilated Temperature Sensor (VENTS) (M)

61da31c5-f6d8-4cac-87f4-3c6358183f60		24 JUL 2020
		1658-1718

- In case of VENTS (A)
 Associated MIXTS is verified operative - Refer to MP ATR-A-21-61-20-00001-340A-A.
- OR -

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 21 AIR CONDITIONING	MMP.21 Page n°07
---	---	-----------------------------

cont'd... >>>

■ **In case of VENTS (B)**

Both MIXTS are verified operative - *Refer to MP ATR-A-21-61-20-00001-340A-A.*

21-61-04 Ram Air Regulating Valve (RARV) (M)

9a685d8c-5b70-435b-afdd-9a5b08c4cd66	24 JUL 2020
	1658-1718

■ **In case of Ram Air Regulating Valve (RARV) (B)**

Emergency Ram Air Valve is checked operative - *Refer to MP ATR-A-21-22-50-00001-320A-A.*



VT / ATR 72-600

MEL

MAINTENANCE PART

ATA 21 AIR CONDITIONING

MMP.21

Page n°08

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM	MMP.22 Page n°01
---	--	--------------------------------

22-16-04 Autopilot Quick Disconnect (Quick Release Control) (M)

1ddfbf8b-09e0-463c-b139-edc6ba282b19

14 MAY 2025

ALL

Procedure to follow to check override means on ground:

CAUTION

► This maintenance procedure can be performed by the crew.

- AVIONICS VENT EXHAUST MODE..... NORM
- STICK PUSHER..... OFF
- AIR BLEEDS..... OFF
- RADAR..... OFF
- Switch WOW on Flight position, angle of attack probes positioned in normal angle of attack. (horizontal position).

[Refer to FCOM - DSC.32.1.2.5.1 WOW Selector](#)

- Engage the autopilot by pressing AP pb on FGCP .
- Check that the AP disconnection is operative by pressing the non affected Quick Release Control pb .

Check the other AP disconnection means (AP must be engaged before each actions):

- Normal pitch trim rocker on captain control wheel (nose up and nose down).
- Normal pitch trim rocker on first officer control wheel (nose up and nose down).
- Stand by pitch trim rockers (up and down).
- Push, then pull on captain control wheel (repeat the same actions on first officer control wheel).
- Force on rudder pedals (only on a captain or first officer side) : one time left and one time right.
- Press on YD pb .

22-18-03 Yaw Damper Function (M)

b2c337ac-552b-4b54-bac8-1387139ca905

15 APR 2025

ALL

To verify that Rudder Releasable Centering Unit (RCU) is operative - *Refer to MP ATR-A-27-21-30-00ZZZ-320Z-A.*



VT / ATR 72-600
MEL

MAINTENANCE PART

ATA 22 AUTOMATIC FLIGHT CONTROL SYSTEM

MMP.22

Page n°02

PAGE
INTENTIONALLY
LEFT BLANK

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 23 COMMUNICATIONS	MMP.23 Page n°01
---	---	-----------------------------

23-31-01-01 Passenger Address System – Passenger Configuration (M)

Passenger Address System – Passenger Configuration (M)

17196246-f4aa-4a15-b96e-59e45366e3c3		15 APR 2025
		ALL

Open, secure and tag C/B COM/PUBLIC ADDRESS.

23-31-01-02 Passenger Address System – Cargo Configuration (M)

Passenger Address System - Cargo Configuration (M)

5aa63c3f-0029-481a-8902-e8e51bafedae		15 APR 2025
		ALL

Open, secure and tag C/B COM/PUBLIC ADDRESS.



VT / ATR 72-600

MEL

MAINTENANCE PART

ATA 23 COMMUNICATIONS

MMP.23

Page n°02

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 24 ELECTRICAL POWER	MMP.24 Page n°01
---	---	-----------------------------

24-22-01 ACW Generation (Generator and (or) Related GCU) (M)

458eede6-649e-441c-9106-f91c355d50a1

01 AUG 2024

ALL

This procedure has to be performed before the next flight following the ACW generator channels fault triggering to detect a mechanical damage (bearing failure...).

- ▶ Perform a visual inspection of the failed alternator:
 - ▶ Look for overheating and/or presence of debris/chips in the alternator-cooling outlet.
 - ▶ Check for unusual noise from the alternator by manually rotating the propeller.
- **If check satisfactory:**
 - ▶ Repeat this inspection on a daily basis until the ACW generator failure is repaired.
- **If check not satisfactory:**
 - ▶ Replace the failed ACW generator before flight.



VT / ATR 72-600

MEL

MAINTENANCE PART

ATA 24 ELECTRICAL POWER

MMP.24

Page n°02

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 25 EQUIPMENT	MMP.25 Page n°01
---	--	--------------------------------

25-11-02 Flight Deck Observer Seat (M)

d44eb14f-72ed-4f04-8850-9fc96d8aed31

15 APR 2025

ALL

For removal, Refer to MP ATR-A-25-11-10-01ZZZ-520Z-A.

25-11-03 Flight Crew Seat - Armrest (M)

3e70ff9d-f783-4442-abda-5901d84940ce

24 JUN 2025

ALL

PROCEDURE TO BE DEVELOPED IN THE OPERATOR'S MEL

Procedure(s) to secure or remove armrest are established and used by the operator.

WARNING

- PENDING THE DEFINITION OF THE MAINTENANCE PROCEDURE, THIS ITEM IS CONSIDERED A NO GO

25-21-01 Required Cabin Attendant Seat (M)

838138ae-7284-44d6-83d9-c3fbfc2cb90b

22 SEP 2022

ALL

CAUTION

- This maintenance procedure can be performed by the crew.

Folding type seat is stowed and secured in the retracted position.

Install «DO NOT OCCUPY» placard on the seat.

25-31-01-01 Passenger Seats (M)

5d640f44-649c-4874-82fb-9eda73fd2f8e

22 SEP 2022

1192-1658

CAUTION

- This maintenance procedure can be performed by the crew.

Identify the affected seat(s) and prohibit the use of the affected seat(s) by a placard "DO NOT OCCUPY".

Visual inspection is performed to check for any apparent sharp edge.

25-31-01-02 Passenger Seats - Underseat Baggage Restraining Bars (M)

1f1c1d02-1dc3-4b22-90b3-9df872178591

22 SEP 2022

1192-1658

CAUTION

- This maintenance procedure can be performed by the crew.

Visual inspection is performed to check for any apparent sharp edge.

25-31-01-03 Passenger Seats - Passenger Seat Armrests (M)

29f4493a-ff74-44c5-9f25-b65c6c4ed687

22 SEP 2022

1192-1658

CAUTION

- This maintenance procedure can be performed by the crew.

cont'd... >>>

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 25 EQUIPMENT	MMP.25 Page n°02
---	--	-------------------------

cont'd... >>>

Recline function is checked operative.

Visual inspection is performed to check for any apparent sharp edge.

25-31-01-04 Passenger Seats - Recline Function (M)

a82aacbc-a335-4fbb-aff9-3a9e41173e92	24 JUN 2025
1192-1350;1376-1455;1658-1718	

CAUTION

- This maintenance procedure can be performed by the crew.

Push on the back of the seat to secure it in the upright position. The inoperative recline actuator will lock in that position.

25-41-02 Interior Lavatory Door Ashtray (M)

d6860200-cb8f-4178-9a82-3e9fc0f1cb89	24 JUN 2025
ALL	

PROCEDURE TO BE DEVELOPED IN THE OPERATOR'S MEL

To provide instructions to lock closed and placard the inoperative lavatory.

WARNING

- PENDING THE DEFINITION OF THE MAINTENANCE PROCEDURE, THIS ITEM IS CONSIDERED A NO GO

25-54-23 Cargo Restraint System (M)

17017ccb-8a00-4a11-898e-1f1619b87b6f	22 SEP 2022
ALL	

CAUTION

- This maintenance procedure can be performed by the crew.

The crew checks that the WBM limitations and instructions are applied by ground personnel who loads the aircraft.

[Refer to WBM - CARGO COMPARTMENT LOADING AND RESTRAINT SYSTEM](#)

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 26 FIRE PROTECTION	MMP.26 Page n°01
---	--	-------------------------

26-12-03 ENG 2 NAC OVHT (M)

e447d1d7-9fab-448f-924c-0bb02e5d28bc

24 JUN 2025

ALL

CAUTION

► This maintenance procedure can be performed by the crew.

► Open, secure and tag C/B ENG IND/NAC 2 OVHT DET .

[Refer to MMP.28.21-02 Electrical Fuel Pump \(M\)](#) for detailed explanations on how to open, secure and tag a C/B.

26-17-01-01 Toilet Smoke Detection System - Passenger Configuration (M)

Toilet Smoke Detection System – Passenger Configuration (M)

8fca2fb3-1a6b-4897-814c-4551d6050a0f

24 JUN 2025

ALL

Refer to MP ATR-A-26-25-20-00ZZZ-281Z-A

PROCEDURE TO BE DEVELOPED IN THE OPERATOR'S MEL

To provide instructions to verify/test the Lavatory waste Compartment Flapper Door and to provide instructions to verify/test the AFT SMOKE DETECTION FANs.

WARNING

► PENDING THE DEFINITION OF THE MAINTENANCE PROCEDURE, THIS ITEM IS CONSIDERED A NO GO

26-21-01 AGENT DISCH Light (Engine) (M)

8a68d305-478e-467f-a323-13901c4e48d4

19 MAY 2022

ALL

Refer to MP ATR-A-26-21-XX-00ZZZ-362Z-A .

26-25-00 Lavatory Fire Extinguisher (M)

fd66c87d-26a8-4876-ab2b-f1baf12fc551

22 SEP 2022

ALL

CAUTION

► This maintenance procedure can be performed by the crew.

Close and lock the lavatory's door from outside with the oxygen release tool.

Placard the door with the appropriate sticker.

Inform the passenger that the lavatory will not be accessible during the flight.



VT / ATR 72-600

MEL

MAINTENANCE PART

ATA 26 FIRE PROTECTION

MMP.26

Page n°02

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 27 FLIGHT CONTROLS	MMP.27 Page n°01
---	--	--------------------------------

27-32-03 First Officer Pitch Trim Rocker Switch Cover (M)

c1bbc11e-f418-4aff-9f62-3048778d3a2f

24 JUN 2025

ALL

CAUTION

► This maintenance procedure can be performed by the crew.

► Open, secure and tag C/B R NORM PITCH TRIM.

[Refer to MMP.28.21-02 Electrical Fuel Pump \(M\)](#) for detailed explanations on how to open, secure and tag a C/B.

27-36-02 Stick Pusher Actuator (M)

3eecb395-eda6-41b3-85e5-034caca2bc7f

19 MAY 2022

ALL

■ If control column is stuck

Stick Pusher Deactivation

► Open, secure and tag C/B FLT CTL / STICK PUSHER / PWR SPLY

Stick Pusher Actuator Removal

Refer to MP ATR-A-27-36-30-00ZZZ-520Z-A .

27-37-01 Pitch Elevators Coupling System (M)

59464e2f-c084-448c-8937-cd4e04267b22

19 MAY 2022

ALL

■ If "PITCH DISC" warning message appear on EWD and pitch coupling system is disconnected in flight

► Perform visual inspection as per (*Refer to MP ATR-A-55-1X-XX-01ZZZ-310Z-A*) before next flight.

■ If "PITCH DISC" warning message appear on EWD and pitch coupling system is disconnected on ground

► No maintenance action is required before the [Ferry Flight](#).

■ If "PITCH RECONNECT" warning message is flashing on EWD

► Deactivate the elevator reconditioning device as per (*Refer to MP ATR-A-27-31-40-00ZZZ-560Z-A*).

27-37-02 Elevators Clutch Reconditioning Device (M)

3eadb632-6fd1-4835-962c-468bd8edb389

01 AUG 2024

ALL

Refer to MP ATR-A-27-31-40-00ZZZ-560Z-A.

27-61-01 Spoiler Control System (M)

fb265fd3-e2c1-44ed-85dd-15483137bdb1

19 MAY 2022

ALL

Refer to MP ATR-A-27-61-XX-00ZZZ-560Z-A .

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 27 FLIGHT CONTROLS	MMP.27 Page n°02
---	--	--------------------------------

27-65-01 Spoiler Position Indicating System (M)

5dd07183-8c42-4cc7-abb7-c1db9182fb41	19 MAY 2022
	ALL

Refer to MP ATR-A-27-61-XX-00ZZZ-560Z-A .

27-70-01-01 GUST LOCK System - Aileron (M)

73618683-647e-47fe-a731-a6b51ac1a0b3	01 AUG 2024
	ALL

Deactivation of aileron gust lock system

Note

This task is to be performed on the both sides.

- ▶ Place GUST LOCK lever on "OFF" position.
- ▶ Open, secure and tag C/B FLT CTL/GUST LOCK AIL.
- ▶ Display warning notice in the flight compartment prohibiting operation of gust lock control
- ▶ Open access panel 533AB (633AB) then 544AB (644AB).
- ▶ Retract the actuator, if necessary, by means of an ALLEN KEY
- ▶ Check the clearance (8 mm +/- 3 mm) between the cam and the rocking lever
- ▶ Close C/B FLT CTL/GUST LOCK AIL and make sure that gust lock actuators do not engage inadvertently.
- ▶ Open, secure and tag C/B FLT CTL/GUST LOCK AIL.
- ▶ Make certain that working area is clear and clean of tools and miscellaneous items
- ▶ Close access doors
- ▶ Remove warning notice in the flight compartment
- ▶ Place GUST LOCK lever on "ON" position.

Note

▶ *After 8 s, AIL LOCK LIT Alert will be triggered.*

- ▶ Rotate PILOT HANDWHEEL to the right to reach aileron stop
- ▶ Install tool P/N S0003024900000 or 98S27105002000 between the PILOT HANDWHEEL and the STEERING HANDWHEEL

Note

▶ *The tool shall be removed and stored before leaving the parking; the ailerons shall be kept on the stops manually during the taxiing operations.*

Perform a daily inspection of Aileron hinge fitting stops (on RH and LH)

- ▶ Install notice prohibiting operation of flight controls in flight compartment.
- ▶ Install access platform.
- ▶ Remove fairing 555AB or 655AB according to aileron to be inspected.


Note

▶ *LH and RH wings aileron hinge fitting stops must be inspected.*

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 27 FLIGHT CONTROLS	MMP.27 Page n°03
---	--	--------------------------------

cont'd... >>>

- ▶ Manually move the aileron until reaching the upper stop.
- ▶ Perform a Detailed Visual Inspection of aileron center fitting, aileron control fitting and lower stop as per *Refer to NDTM 51-90-00* . In case of findings, contact ATR prior any action.
- ▶ Manually move the aileron until reaching the lower stop.
- ▶ Perform a Detailed Visual Inspection of aileron center fitting, aileron control fitting and upper stop as per *Refer to NDTM 51-90-00* . In case of findings, contact ATR prior any action.
- ▶ Install fairing 555AB or 655AB.
- ▶ Remove warning notices and access platform.

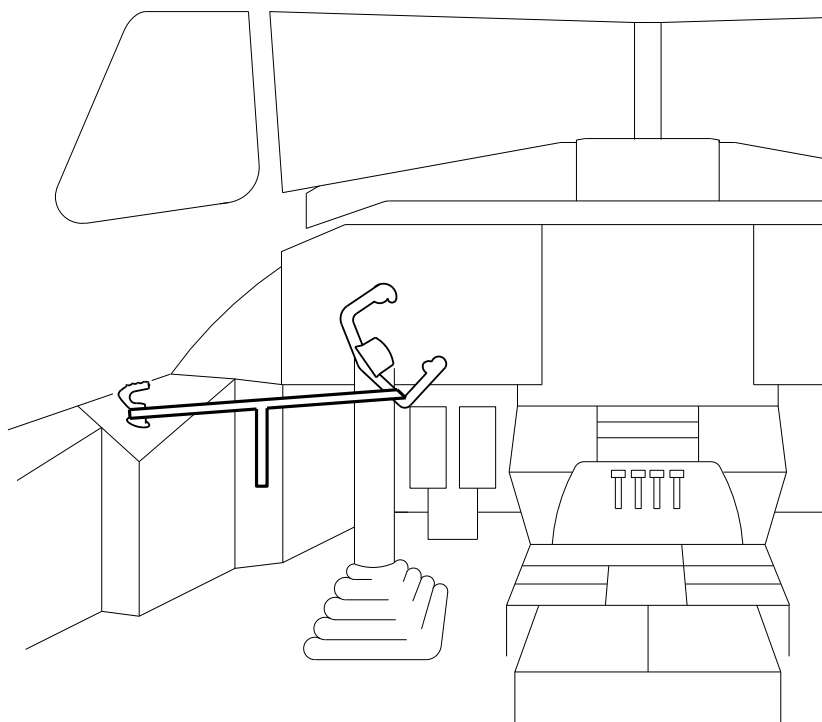

ICN-XX-Y-270000-T-FB429-00001-A-01-N

27-70-01-02 GUST LOCK System - Elevator (M)

c3332d43-1a4f-4792-aea9-5c6cd1180c3a

27 MAY 2015

ALL

- ▶ Perform a daily inspection of elevator hinge fitting stops (on RH and LH)

cont'd... >>>

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 27 FLIGHT CONTROLS	MMP.27 Page n°04
---	--	-------------------------

cont'd... >>>

- ▶ Install notice prohibiting operation of flight controls in flight compartment.
- ▶ Install access platform.
- ▶ Remove access panels 333CB and 343CB.
- ▶ Maintain elevators in full nose up position (trailing edge upward).
- ▶ Perform a Detailed Visual Inspection of elevators inboard hinge fittings and stops as per *Refer to NDTM 51-90-00* . In case of findings, contact ATR prior any action.
- ▶ Install access panels 333CB and 343CB.
- ▶ Remove warning notices and access platform.

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 28 FUEL SYSTEM	MMP.28 Page n°01
---	--	--------------------------------

28-21-02 Electrical Fuel Pump (M)

9c7aaae8-a5ee-4383-a8e8-2bcfb15a4cbe		01 AUG 2024
		ALL

CAUTION	► This maintenance procedure can be performed by the crew.
----------------	--


Open, secure and tag C/B FUEL / FUEL FEED / ENG 1 (2) / ELEC PUMP.

The equipment (clamp and vault) needed to perform this action is available in the fuse box, located in the cockpit.


cont'd... >>>



Picture 1

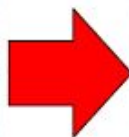

Pictures 2 and 3

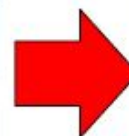

Pictures 4 and 5

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 28 FUEL SYSTEM	MMP.28 Page n°03
---	--	--------------------------------

28-25-01-01 Refueling Control Panel - Refueling Control Panel (M)

7b145a6f-0b7a-40ce-b82b-b84e64ac1586

01 AUG 2024

ALL

Gravity Refueling

Refer to MP ATR-A-12-11-28-00ZZZ-211Z-A.

CAUTION

- This maintenance procedure can be performed by the crew.

Gravity refueling is performed by ground staff following the instructions of the MP above, included in the ground operations manual (Refer to OMA.08.02.02.4).

-OR-

Manual Refueling with handle ring control

Refer to MP ATR-A-12-11-28-00ZZZ-211Z-A.

Note

Manual refueling procedure using the handle ring control cannot be used if drainage of the refuel pipe is required (As Refuelling Control Panel is inoperative and surge valve cannot be controlled).

28-25-01-02 Refueling Control Panel - Fuel Preselector (M)

5501a39e-3cb5-4827-b8b6-3f70f149d1d7

01 AUG 2024

ALL

Manual Refueling

Refer to MP ATR-A-12-11-28-00ZZZ-211Z-A.

CAUTION

- This maintenance procedure can be performed by the crew, following the instructions of the MP mentioned above and which are repeated below.

CAUTION

- Stop the refueling operation before overflow.

cont'd... >>>

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 28 FUEL SYSTEM	MMP.28 Page n°04
---	--	--------------------------------

cont'd... >>>

- 1) On refueling panel:
 - A) Display selected fuel quantity.
 - B) Select REFUEL on REFUELING / REFUEL / OFF / DEFUEL SWITCH.
 - C) Select OPEN on REFUELING / REFUEL VALVE / LH(RH) SWITCHES.
 - D) Pressurize fuel tanker. Refueling in progress.
 - E) Check that REFUELING / VALVE / LH(RH) SWITCHES come ON.
- 2) For each fuel tank, perform refueling and check loaded fuel quantity using fuel quantity indicator located on REFUELING CONTROL PANEL and/or FUEL QUANTITY INDICATION in the cockpit.
- 3) Check for coherence between the loaded fuel quantity checked on aircraft and the fuel quantity indication of fuel tanker.
- 4) When selected fuel quantity is reached, select OFF on REFUELING / REFUEL / OFF / DEFUEL SWITCH.
- 5) Select NORM on REFUELING / REFUEL VALVE / LH(RH) SWITCHES.
- 6) Shut down fuel tanker pressurization.
- 7) Check that REFUELING / VALVE / LH(RH) LIGHTS go OFF.

28-25-01-03 Refueling Control Panel - Preselected Qty (M)

706abc62-82df-4ce3-9e2a-f8b3ac5ef12f		22 SEP 2022 ALL
--------------------------------------	--	--------------------

[Refer to MMP.28.25-01-02 Refueling Control Panel - Fuel Preselector \(M\)](#)

28-25-01-04 Refueling Control Panel - Refueling Control Panel Door Indication (M)

9085bef7-ffc6-4236-aa27-edbe85a3246d		22 SEP 2022 ALL
--------------------------------------	--	--------------------

CAUTION

- This maintenance procedure can be performed by the crew.

Open, secure and tag C/B FUEL / RCP.

[Refer to MMP.28.21-02 Electrical Fuel Pump \(M\)](#) for detailed explanations on how to open, secure and tag a C/B.

28-25-02 Pressure Refueling Cap (M)

793ec7bd-bb6d-4efa-94e7-1e7adf9d02b4		22 SEP 2022 ALL
--------------------------------------	--	--------------------

- Check that refuel valves are closed : “REFUELING / VALVE OPEN / LH(RH)” indicator lights go OFF (refer to JIC 12-11-00 FLG 10020 – § 5 REFUELING).
- Perform detailed visual inspection to check absence of fuel leakage in the refuel coupling area.

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 28 FUEL SYSTEM	MMP.28 Page n°05
---	--	--------------------------------

28-42-01 Fuel QTY Indication (M)

Fuel QTY Indication (M)

46e901b1-b423-4ec2-a229-8631d6772404

01 AUG 2024

ALL

1) Manual refueling

Refer to [MMP.28.25-01-02 Refueling Control Panel - Fuel Preselector \(M\)](#) for manual refueling.

2) Visual Examination of the Fuel Level with the Manual Magnetic Indicators

Refer to [MMP.28.42-03-1 Visual Examination of the Fuel Level with the Manual Magnetic Indicators](#)

3) Functional test of feeder tank low level sensor

Refer to *MP ATR-A-28-42-70-04ZZZ-340Z-A* (FUNCTIONAL TEST OF FEEDER TANK LOW LEVEL SENSOR) to check the opposite side Fuel LO LVL alert.

42-03 Fuel LO LVL Alert (M)

28-Visual Examination of the Fuel Level with the Manual Magnetic Indicators

Visual Examination of the Fuel Level with the Manual Magnetic Indicators (M)

ori017085

01 AUG 2024

ALL

Refer to *MP ATR-A-12-11-28-00ZZZ-310Z-A* for checking fuel level using manual (magnetic) indicators.

CAUTION

This maintenance procedure can be performed by the crew, following the instructions of the MP mentioned above and which are repeated below.

1) Job Set-up

a) Aircraft maintenance configuration

- 1) Make sure that the fuel electric pumps are OFF for a minimum of 5 min.
- 2) Make sure that the A/C pitch attitude is between -3 degrees and +1 degree.
- 3) Make sure that the A/C roll attitude is between -2 degrees and +2 degrees.

b) Principle for reading value of Manual Magnetic Indicator (MMI)

- 1) Put an ACCESS PLATFORM - WING/FUSELAGE in position.
- 2) Push and turn the control handle knob a quarter turn to unlock the rule that has graduations.
- 3) Let the rule that has graduations move down until float retention is felt.
- 4) Slowly push the rule that has graduations to move the assembly (rule and float) up.
- 5) Let the assembly (rule and float) move down until the float touches the fuel level.

Note

This operation is to make sure that the float moves freely along the tube and its position is same as the fuel level.


- 6) Read the rule graduations related to the contour of the bottom surface.

cont'd... >>>

cont'd... >>>

2) Procedure

a) Determination of the Fuel Level in the Tank

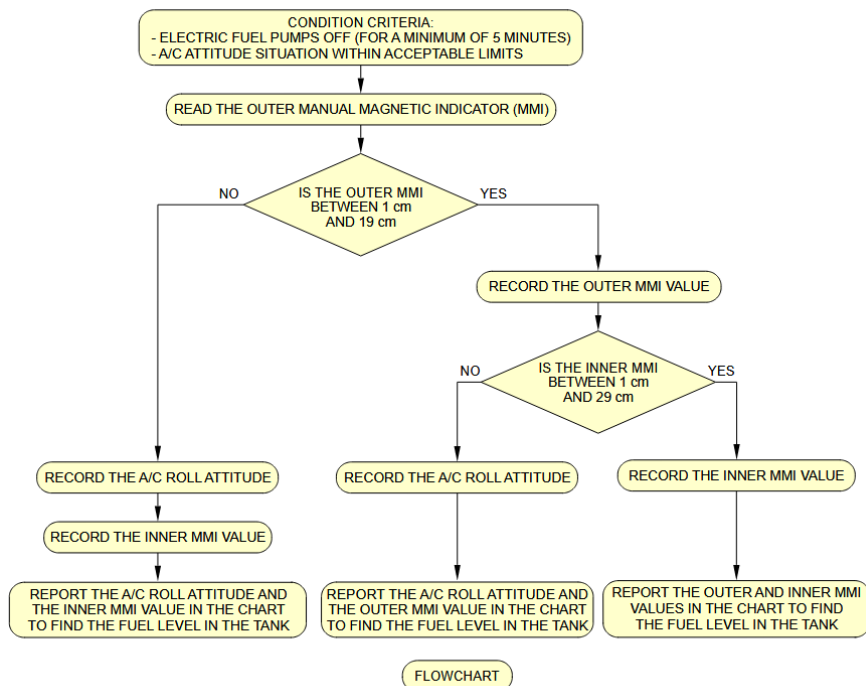

ICN-ATR-A-121128-A-FB429-06OZF-A-001-01

[See Fig. Fuel-Quantity Chart Template](#)

cont'd... >>>

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 28 FUEL SYSTEM	MMP.28 Page n°07
---	--	--------------------------------

cont'd... >>>

- 1) Is the outer MMI value between 1cm and 19cm ? YES (Go to (2)) / NO (Go to (8))
- 2) Record the outer MMI value.
- 3) Is the inner MMI value between 1cm and 29cm ? YES (Go to (4)) / NO (Go to (6))
- 4) Record the inner MMI value.
- 5) Use the chart with the outer and the inner MMI values to find the fuel level in the tank.

[See Fig. Example with both MMI in the range](#)

- 6) Record the A/C roll attitude value.

[See Fig. Inclinator](#)

Note

You can use :

- Roll attitude clinometer,
- ROLAT parameter on MCDU.

- 7) Use the chart with the outer MMI and the roll attitude values to find the fuel level in the tank.

[See Fig. Example with inner MMI out of range \(0 cm or 30 cm\) and A/C roll attitude is 0degree](#)

- 8) Record the A/C roll attitude value.

[See Fig. Inclinator](#)

Note

You can use :

- Roll attitude clinometer,
- ROLAT parameter on MCDU.

- 9) Record the inner MMI value.
- 10) Use the chart with the inner MMI and the roll attitude values to find the fuel level in the tank.

[See Fig. Example with outer MMI out of range \(0 cm or 20 cm\) and A/C roll attitude is +1degree](#)


3) Close-Up

- 1) Push the rule to move the assembly (rule and float) up and then lock it.
- 2) Remove all the fixtures, tools, test and support equipment used during this procedure.
- 3) Make sure that the work area is clean and clear of tools and other items.
- 4) Remove access platform(s).

cont'd... >>>

cont'd... >>>

4) Charts and schematics

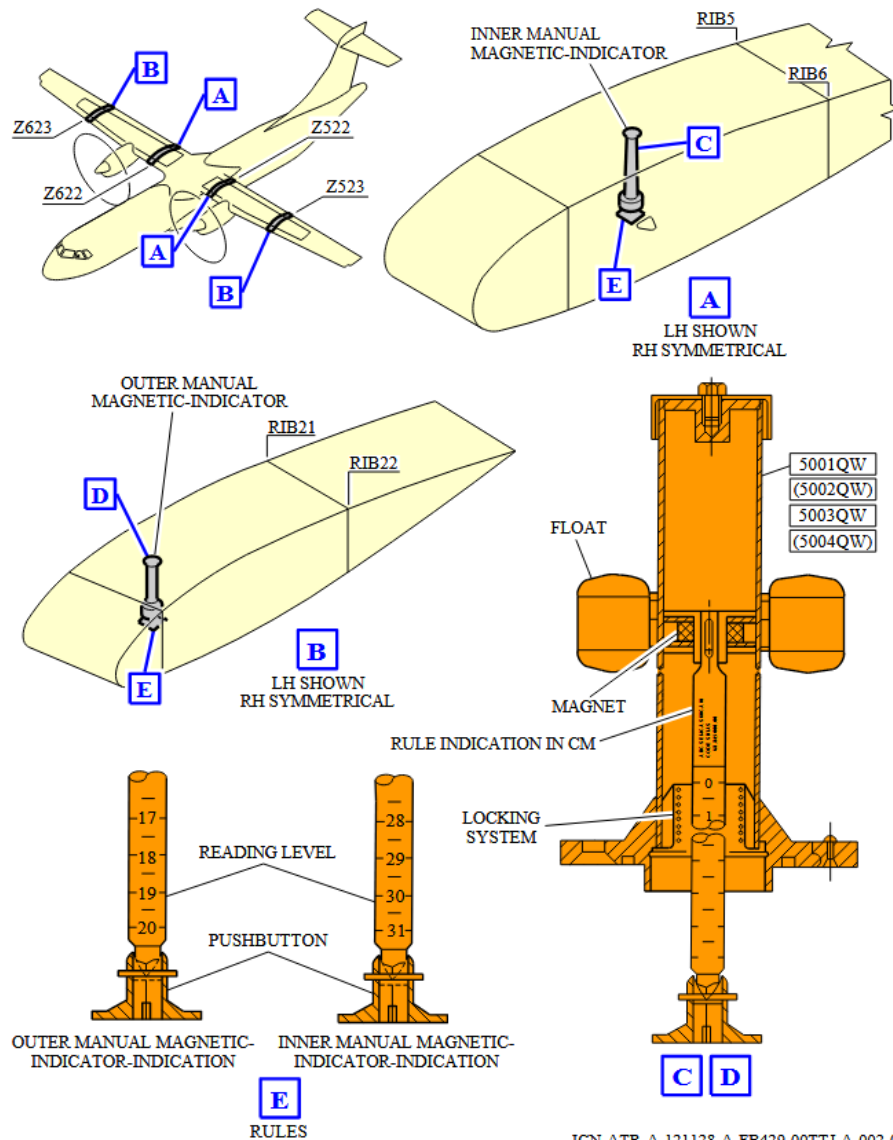


ICN-ATR-A-121128-A-FB429-00TTJ-A-002-01

Figure ICN-ATR-A-121128-A-FB429-00TTJ-A-002-01 SHEET (1/1) - Manual Magnetic Indicators (Dipstick)

cont'd... >>>

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 28 FUEL SYSTEM	MMP.28 Page n°09
---	--	---------------------------------------

cont'd... >>>

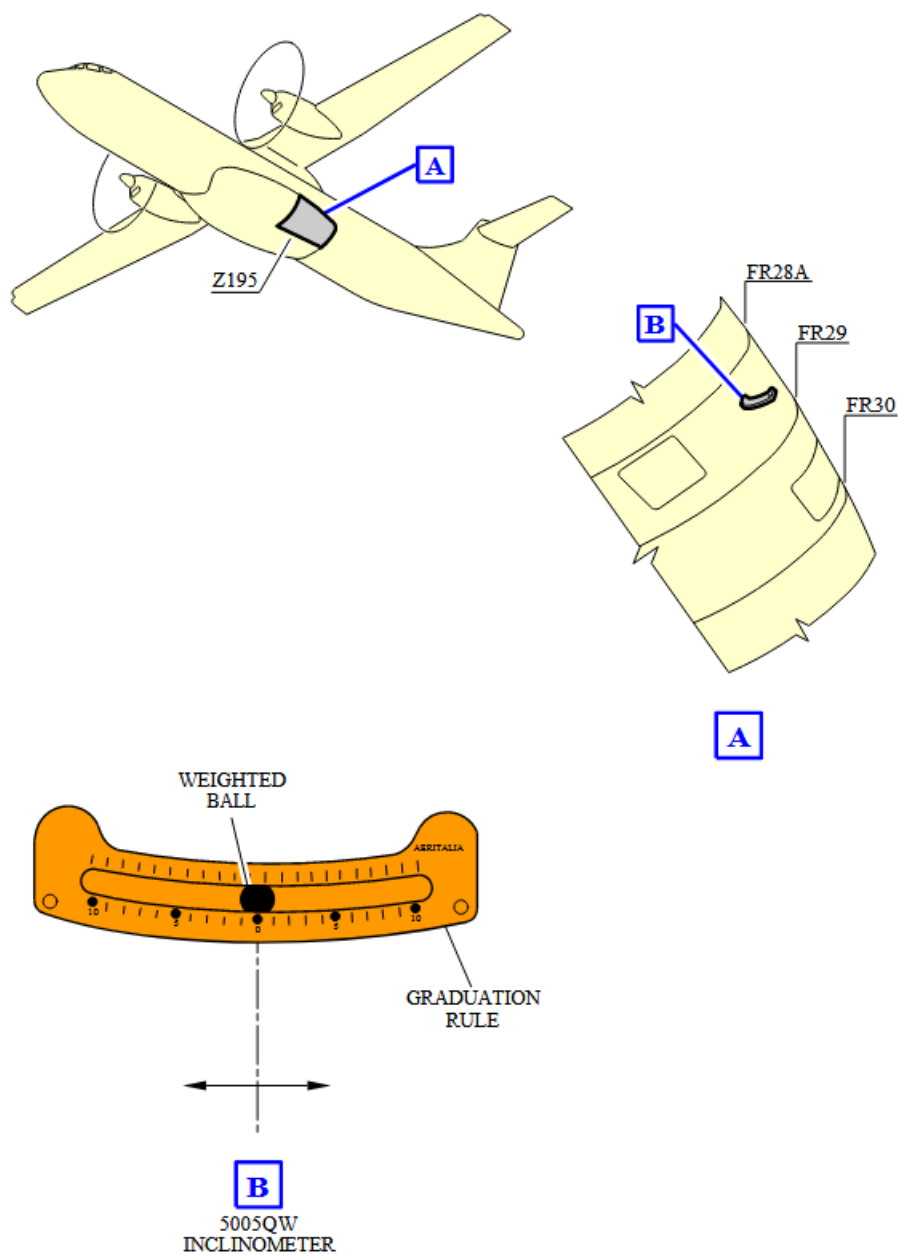

ICN-ATR-A-121128-A-FB429-00TTK-A-002-01

Figure ICN-ATR-A-121128-A-FB429-00TTK-A-002-01 SHEET (1/1) - Inclinometer

cont'd... >>>

cont'd... >>>


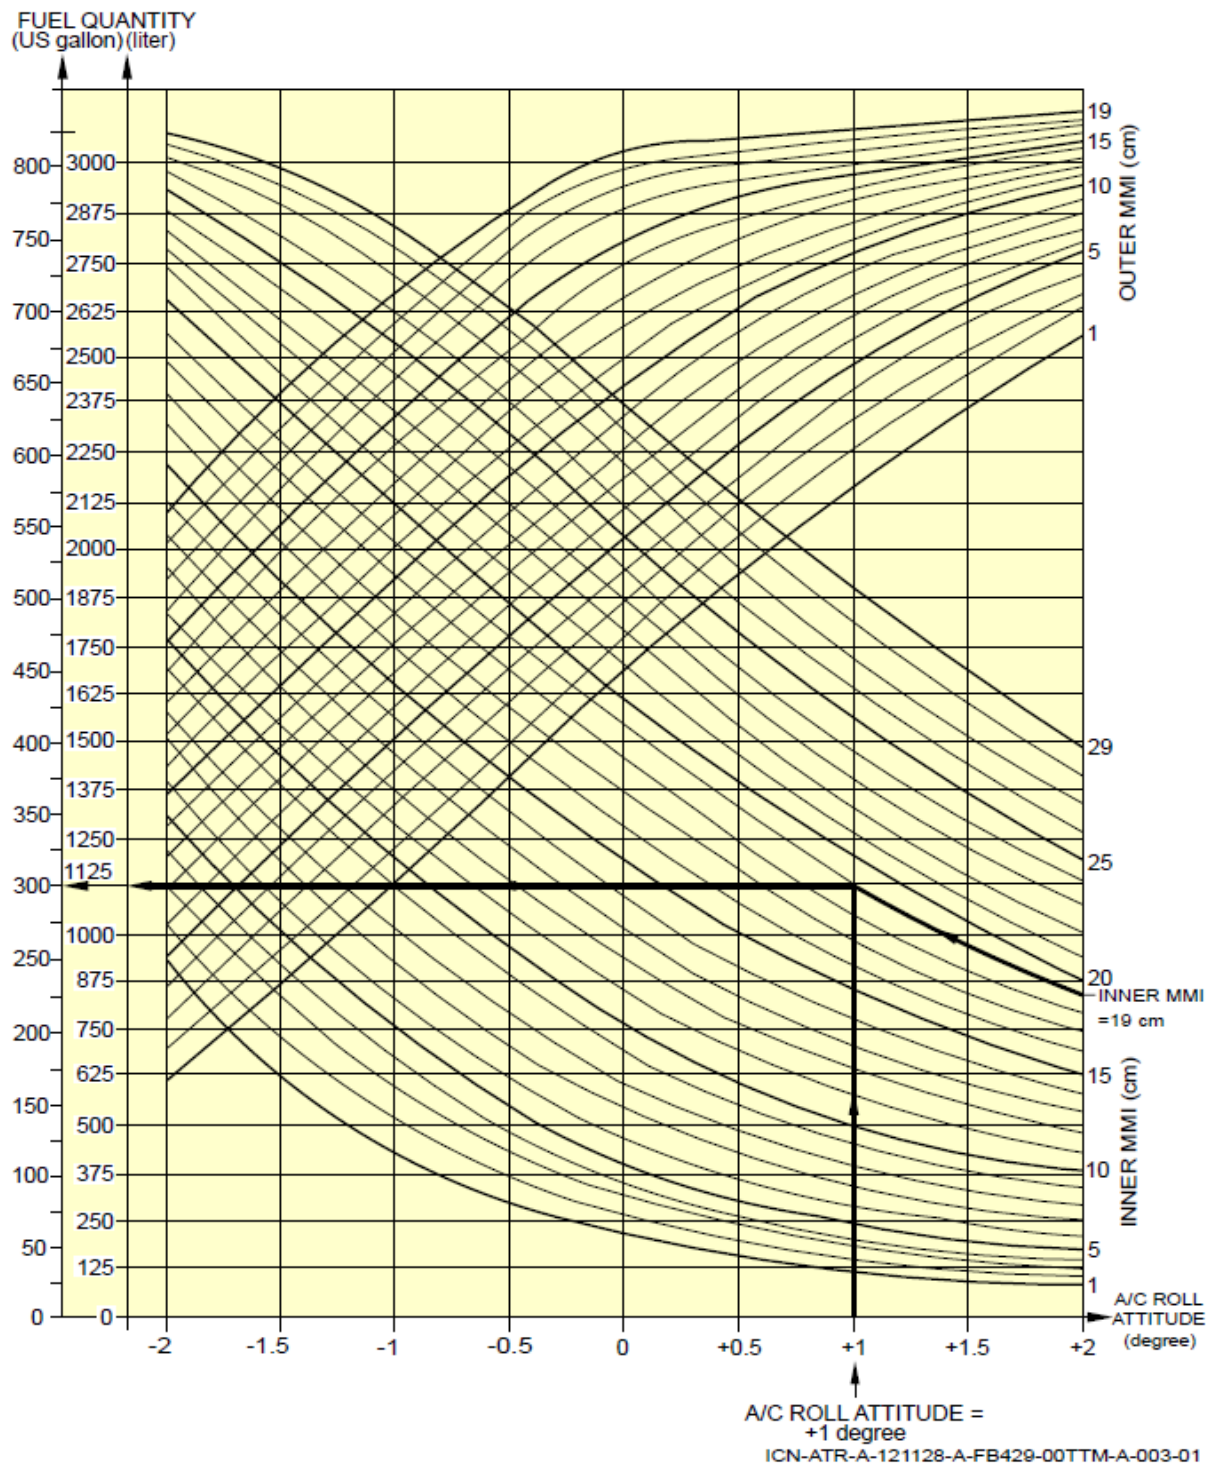


Figure ICN-ATR-A-121128-A-FB429-00TTM-A-003-01 (SHEET 1) - Example with outer MMI out of range (0 cm or 20 cm) and A/C roll attitude is +1 degree

cont'd... >>>

cont'd... >>>

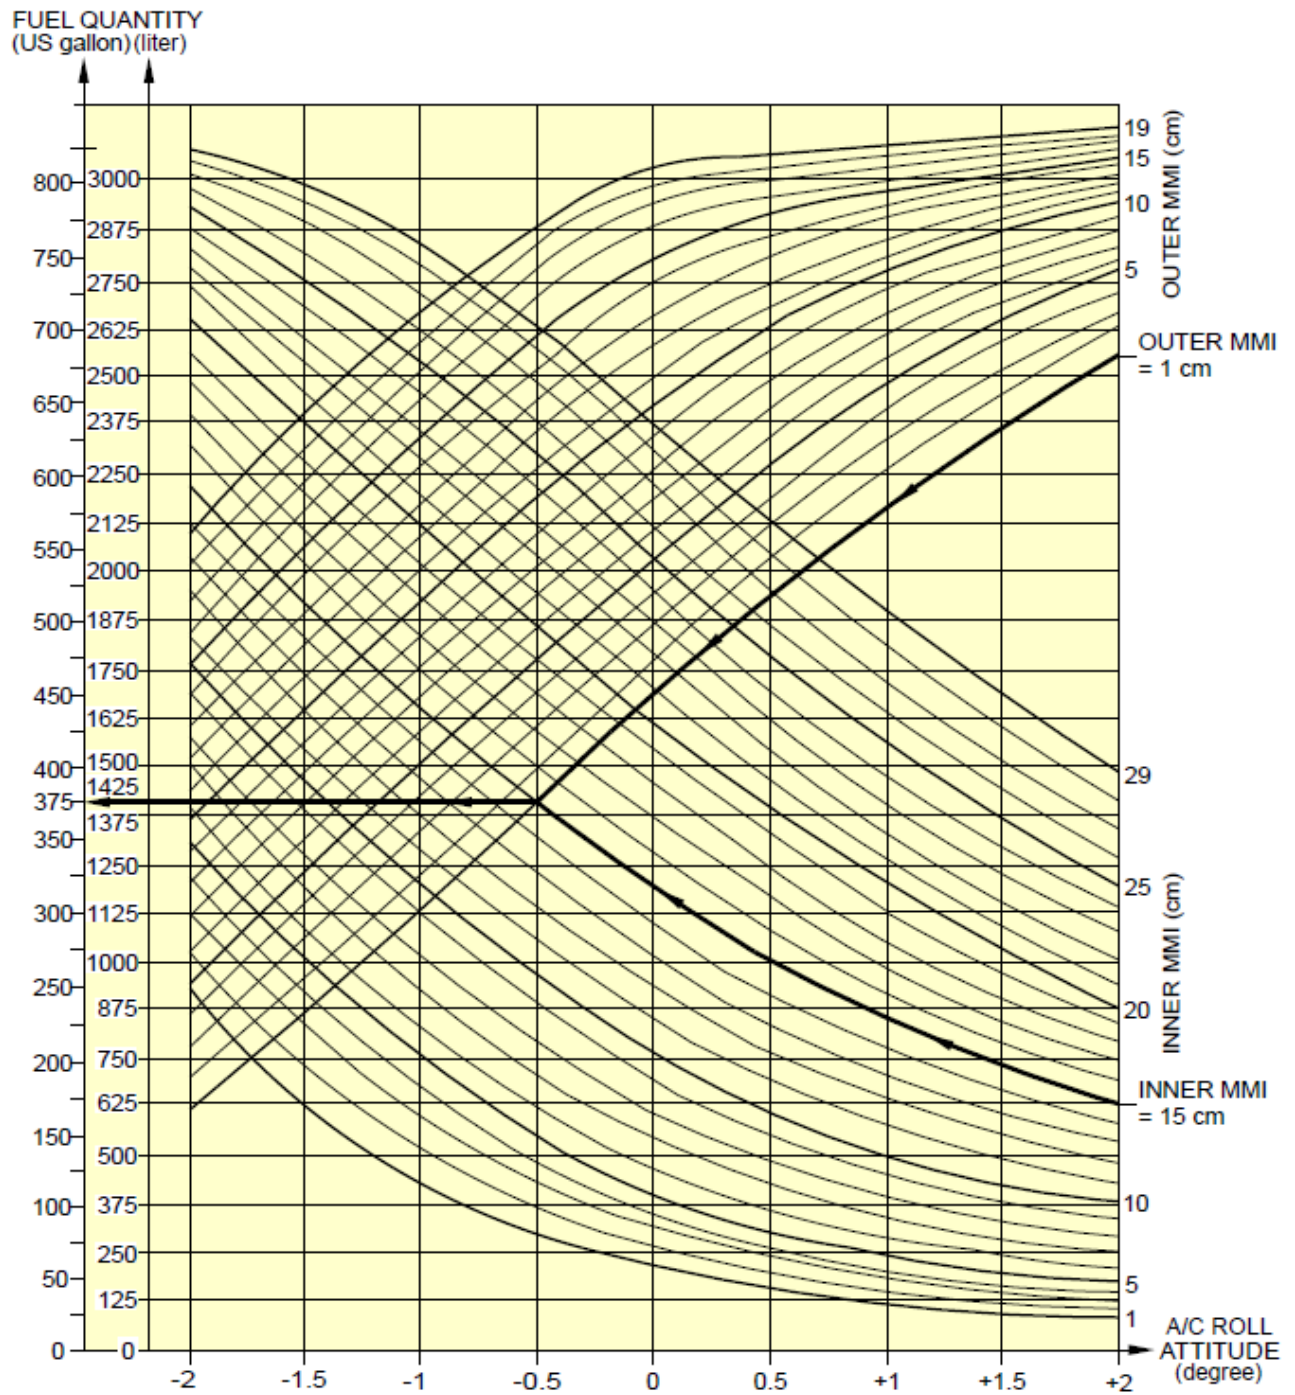


ICN-ATR-A-121128-A-FB429-00TTO-A-003-01

Figure ICN-ATR-A-121128-A-FB429-00TTO-A-003-01 (SHEET 1) - Example with both MMI in the range

cont'd... >>>

cont'd... >>>

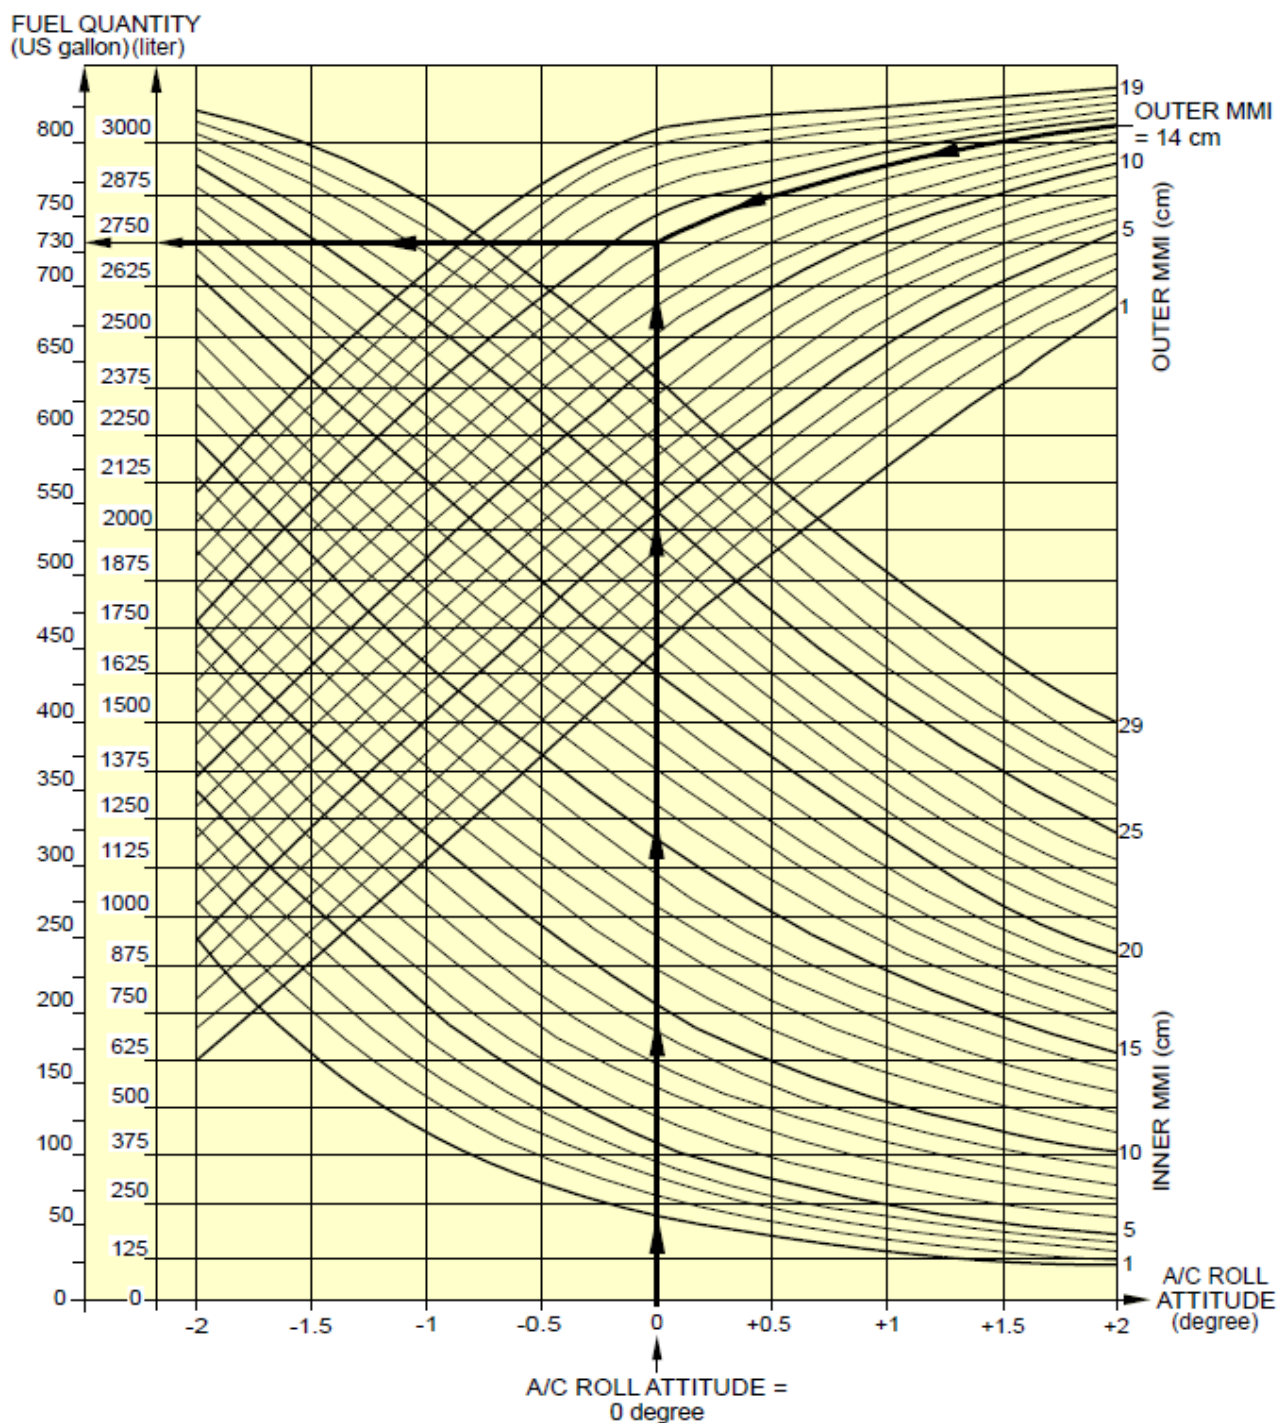


ICN-ATR-A-121128-A-FB429-00TTQ-A-003-01

Figure ICN-ATR-A-121128-A-FB429-00TTQ-A-003-01 (SHEET 1) - Example with inner MMI out of range (0 cm or 30 cm) and A/C roll attitude is 0 degree

cont'd... >>>

cont'd... >>>

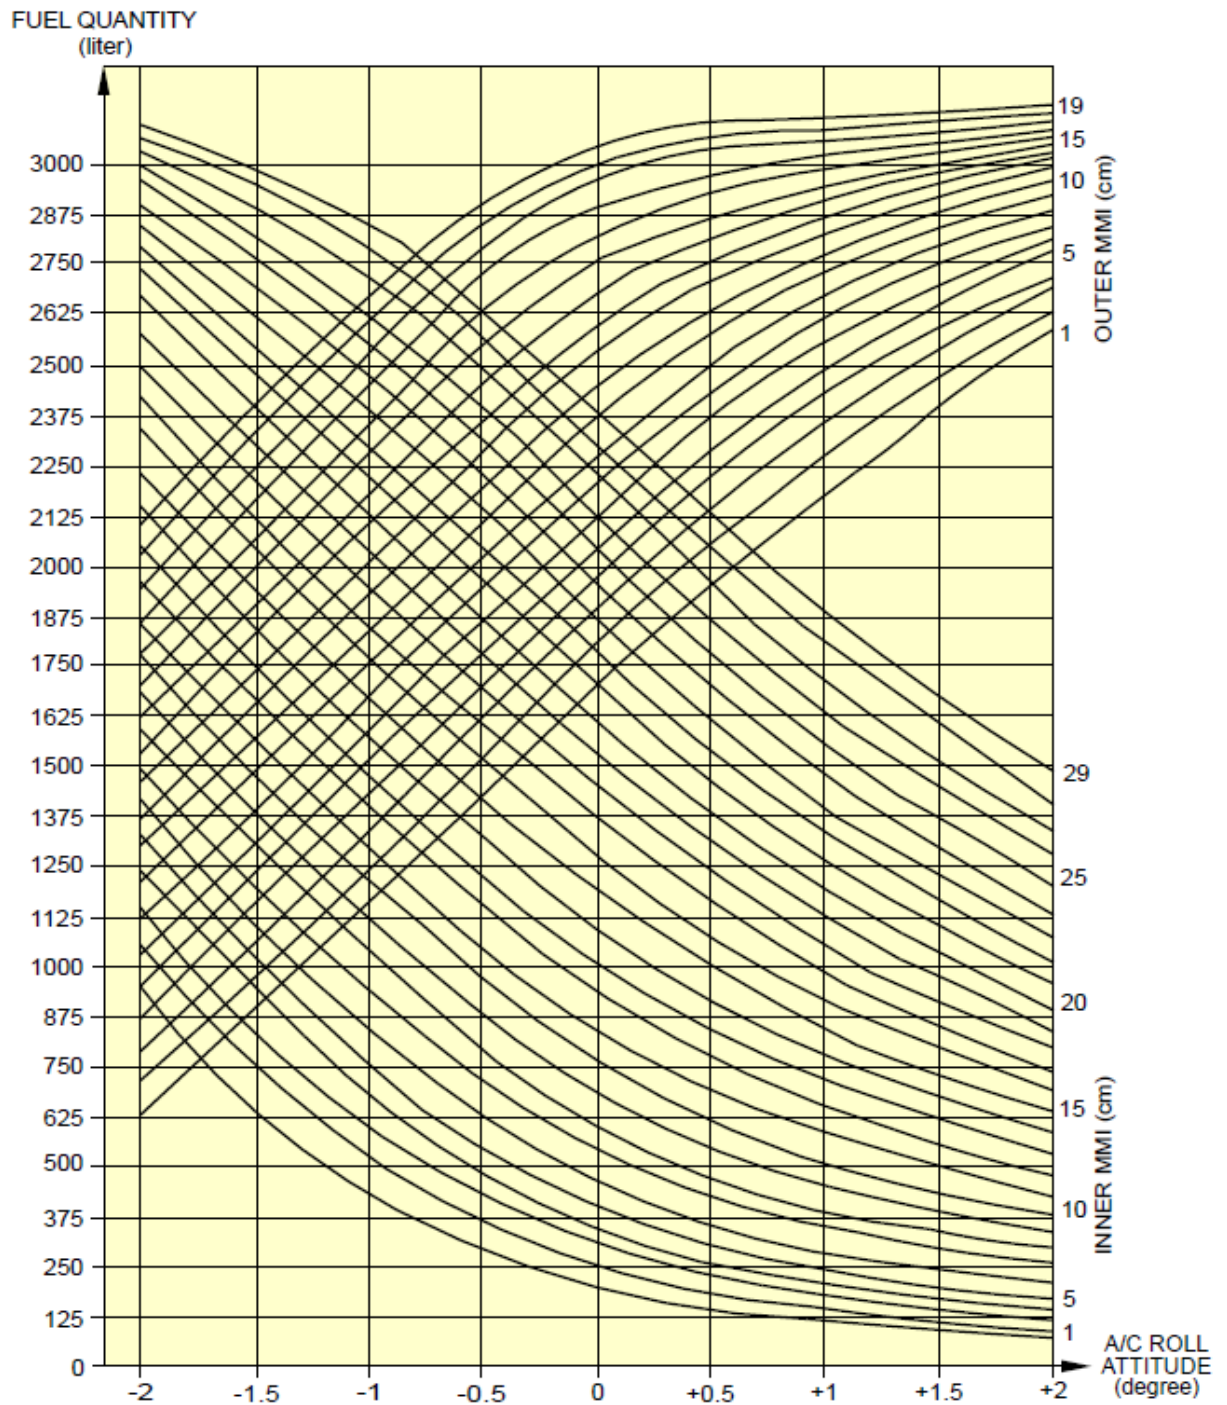

ICN-ATR-A-121128-A-FB429-06D6I-A-002-01

Figure ICN-ATR-A-121128-A-FB429-06D6I-A-002-01 (SHEET 1) - Fuel-Quantity Chart Template

 VT / ATR 72-600 MEL	 MAINTENANCE PART ATA 28 FUEL SYSTEM	MMP.28 Page n°14
---	--	---------------------------------

28-Functional test of feeder tank low level sensor

ori017084		12 JUL 2024
		ALL

Refer to MP ATR-A-28-42-70-04ZZZ-340Z-A (FUNCTIONAL TEST OF FEEDER TANK LOW LEVEL SENSOR) to check the opposite side Fuel LO LVL alert.

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 29 HYDRAULIC SYSTEM	MMP.29 Page n°01
---	---	-----------------------------

29-11-01 Main HYD Pump (M)

ab380eee-7d0a-44f3-a7ee-b1be718dd591

22 SEP 2022

ALL

Refer to MP ATR-A-29-XX-XX-00ZZZ-281Z-A to check the level of hydraulic fluid.

CAUTION

- ▶ This maintenance procedure can be performed by the crew, following the instructions of the JIC mentioned above and which are repeated below.
- ▶ CHECK THE FLUID LEVEL BY THE SIGHT GLASS INDICATOR ON THE UPPER PART OF RESERVOIR.
- ▶ IN CASE OF LOW LEVEL CONTACT MMS FOR REFILLING.



VT / ATR 72-600

MEL

MAINTENANCE PART

ATA 29 HYDRAULIC SYSTEM

MMP.29

Page n°02

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 30 ICE AND RAIN PROTECTION	MMP.30 Page n°01
---	--	-------------------------

30-31-05 PITOT Probes HTG Fault Lights (M)

9e0b0ba8-a3fc-4b3b-b549-1dc1e462a535

19 MAY 2022

ALL

Refer to MP ATR-A-34-11-10-00ZZZ-366Z-A to check pitot probes heating resistance.

30-80-01 Ice Detection System (M)

8a280089-2d57-48bd-9dff-ca41ec409075

24 JUN 2025

ALL

CAUTION

► This maintenance procedure can be performed by the crew.

► Open, secure and tag C/B ANTI/DE ICING/ ICE DET.

[Refer to MMP.28.21-02 Electrical Fuel Pump \(M\)](#) for detailed explanations on how to open, secure and tag a C/B.



VT / ATR 72-600

MEL

MAINTENANCE PART

ATA 30 ICE AND RAIN PROTECTION

MMP.30

Page n°02

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 31 INDICATING AND RECORDING SYSTEMS	MMP.31 Page n°01
---	---	--------------------------------

31-32-04 DFDR Required Parameters - Variable and Discrete (M)

13b7c626-71c6-4608-a1f6-0219365e5143		24 JUN 2025
ALL		

PROCEDURE TO BE DEVELOPED IN THE OPERATOR'S MEL

Procedure(s) are established and used to analyze the DFDR required parameters recorded.

WARNING

- PENDING THE DEFINITION OF THE MAINTENANCE PROCEDURE, THIS ITEM IS CONSIDERED A NO GO



VT / ATR 72-600
MEL

MAINTENANCE PART

ATA 31 INDICATING AND RECORDING SYSTEMS

MMP.31

Page n°02

PAGE
INTENTIONALLY
LEFT BLANK

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 32 LANDING GEAR	MMP.32 Page n°01
---	---	-----------------------------

32-42-01 Wheel Brake (M)

5896ce38-e9dd-444b-898d-d69c8e5eabb3

19 MAY 2022

ALL

For deactivation, *Refer to MP ATR-A-32-42-50-01ZZZ-560Z-A* .

Note

Dispatch is not possible with wheel brake removed.

32-51-01 Nose Wheel Steering (M)

7a3e201e-0caf-4a6d-baba-31b59b4e3039

24 JUN 2025

ALL

CAUTION

► This maintenance procedure can be performed by the crew.

► Open, secure and tag C/B L/G-BRK/NOSE WHEEL STRG .

[Refer to MMP.28.21-02 Electrical Fuel Pump \(M\)](#) for detailed explanations on how to open, secure and tag a C/B.



VT / ATR 72-600

MEL

MAINTENANCE PART

ATA 32 LANDING GEAR

MMP.32

Page n°02

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 35 OXYGEN	MMP.35 Page n°01
---	---	--------------------------------

35-12-10 Oxygen Overboard Discharge Indicator (Green Disc) (M)

4c93c7ae-ca8c-4598-a083-f1dd5270b9b0

19 MAY 2022

ALL

Refer to MP ATR-A-35-12-XX-00ZZZ-362Z-A.

35-20-03 Passenger Service Unit (M)

759795e3-377e-49ff-9656-157216075fdb

22 SEP 2022

ALL

CAUTION

- This maintenance procedure can be performed by the crew.

4 seats by concerned passenger service unit must be placarded « DO NOT OCCUPY » by the cabin attendant.

35-35-01 Potable Oxygen Bottle (M)

Portable Oxygen Bottle (M)

0d1f4bb8-0268-45e2-a0f8-eccbc218d5c9

22 SEP 2022

ALL

CAUTION

- This maintenance procedure can be performed by the crew.

The crew placard the inoperative equipment with the inoperative stickers available on board.
The inoperative bottle is secured in an overhead bin.



VT / ATR 72-600

MEL

MAINTENANCE PART

ATA 35 OXYGEN

MMP.35

Page n°02

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 36 PNEUMATIC SYSTEM	MMP.36 Page n°01
---	---	--------------------------------

36-11-01 HP Valve (M)

3a543cb7-7d35-4c6a-bbc9-a0dfa8532991

19 MAY 2022

1192-1568

Refer to MP ATR-A-36-11-60-01ZZZ-560Z-A .

High Pressure Valve (HPV) (M)

2d421add-013a-422d-ba53-57e840404253

14 JAN 2022

1658-1718

■ In case of One HPV Inoperative - ETOPS Operations (A)

Associated HPV is locked in CLOSED position - *Refer to MP ATR-A-36-11-60-01002-560A-A .*

Emergency Ram Air valve is verified operative - *Refer to MP ATR-A-21-22-50-00001-320A-A.*

- OR -

■ In case ONE HPV INOPERATIVE (B)

Associated HPV is locked in CLOSED position - *Refer to MP ATR-A-36-11-60-01002-560A-A .*

- OR -

■ In case of BOTH HPV INOPERATIVE - PASSENGER CONFIGURATION (C)

- 1) Both HPV are locked in CLOSED position - *Refer to MP ATR-A-36-11-60-01002-560A-A .*
- 2) OFV is secured in open position - *Refer to MP ATR-A-21-31-20-02001-560A-A.*
- 3) Both PRSOVs are secured in CLOSED position - *Refer to MP ATR-A-36-11-60-00002-560A-A.*
- 4) [Refer to Item # 21-50-01 Both Packs inoperative \(M\).](#)

- OR -

■ In case of BOTH HPV INOPERATIVE – CARGO CONFIGURATION (D)

- 1) Both HPV are locked in CLOSED position - *Refer to MP ATR-A-36-11-60-01002-560A-A .*
- 2) OFV is secured in open position - *Refer to MP ATR-A-21-31-20-02001-560A-A.*
- 3) Both PRSOVs are secured in CLOSED position - *Refer to MP ATR-A-36-11-60-00002-560A-A.*
- 4) [Refer to Item # 21-50-01 Both Packs inoperative \(M\).](#)

36-11-02 BLEED Valve (M)

072d6b42-fa3d-4d82-b2c4-e09a02a9a4f6

19 MAY 2022

1192-1568

Refer to MP ATR-A-36-11-60-00ZZZ-560Z-A .

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 36 PNEUMATIC SYSTEM	MMP.36 Page n°02
---	---	-------------------------

6cf4ccfa-7498-4f5d-a21c-c09dabd0ae7d		14 JAN 2022
		1658-1718

■ In case of ETOPS Operations (A)

Associated Pressure Regulating Shut Off Valve (PRSOV) is locked in CLOSED position -
Refer to MP ATR-A-36-11-60-00002-560A-A.

Emergency Ram Air valve is verified operative - *Refer to MP ATR-A-21-22-50-00001-320A-A.*

- OR -

■ In case of ONE BLEED VALVE INOPERATIVE (B)

Associated Pressure Regulating Shut Off Valve (PRSOV) is locked in CLOSED position -
Refer to MP ATR-A-36-11-60-00002-560A-A.

- OR -

■ In case of BOTH BLEED VALVES INOPERATIVE - PASSENGER CONFIGURATION (C)

- 1) Both PRSOV are locked in CLOSED position - *Refer to MP ATR-A-36-11-60-00002-560A-A.*
- 2) [Refer to Item # 21-50-01 Both Packs Inoperative \(M\).](#)
- 3) OFV secured in open position - *Refer to MP ATR-A-21-31-20-02001-560A-A.*

- OR -

■ In case of BOTH BLEED VALVES INOPERATIVE - CARGO CONFIGURATION (D)

- 1) Both PRSOV are locked in CLOSED position - *Refer to MP ATR-A-36-11-60-00002-560A-A.*
- 2) [Refer to Item # 21-50-01 Both Packs Inoperative \(M\).](#)
- 3) OFV secured in open position - *Refer to MP ATR-A-21-31-20-02001-560A-A.*

36-11-03 Bleed FAULT Alert (M)

cb1cdc4e-3b5a-4704-8bb0-7007e787a0ca		07 SEP 2020
		1658-1718

■ In case of Bleed FAULT Alert (B)

[Refer to Item # 36-11-02 Bleed Valve - One Bleed Valve Inoperative \(M\).](#)

- OR -

■ In case of Bleed FAULT Alert (C)

[Refer to Item # 36-11-02 Bleed Valve - Both Bleed Valves Inoperative \(M\).](#)

36-11-04 Ground X Feed Valve (M)

4a428ad2-c6c5-4b4a-ad1c-a513435a0a79		19 MAY 2022
		1192-1568

Refer to MP ATR-A-36-11-20-00ZZZ-560Z-A .

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 36 PNEUMATIC SYSTEM	MMP.36 Page n°03
---	---	---------------------------------------

Cross Bleed Valve (CBV) (M)

997743ae-a7e1-414b-9bcd-9622be6b1b21

01 AUG 2024

1658-1718

Cross Bleed Valve is secured in CLOSED position - *Refer to MP ATR-A-36-11-20-01ZZZ-560Z-A.*

36-11-05 GRD X FEED - X VALVE OPEN Light (M)

32836591-804b-4c2b-91e4-0c99cf71c337

01 AUG 2024

ALL

Check of crossfeed valve:

Location: under passenger compartment, access doors 231DF and 231EF.

- ▶ Open, secure and tag C/B AIR BLEED/X FEED.
- ▶ Open access doors 231DF and 231EF.
- ▶ Check that mechanical indicator shows closed.
- ▶ Close access doors.
- ▶ Install placard.

36-11-06 OVHT Alert (M)

ef80070f-63b0-4a68-b72a-6843af5a82ae

19 MAY 2022

1658-1718

■ In case of OVHT Alert (A)

[Refer to Item # 36-11-02 Bleed Valve \(M\) - One Bleed Valve inoperative](#)

- OR -

■ In case of OVHT Alert (B)

[Refer to Item # 36-11-02 Bleed Valve \(M\) - Both Bleed Valves inoperative](#)

36-11-07 Bleed Switching Pressure Sensor (BSPS) (M)

c22a6dca-0597-469a-b8fd-e658c1793c56

19 MAY 2022

1658-1718

■ In case of ONE BSPS INOPERATIVE (A)

[Refer to Item # 36-11-02 Bleed Valve \(M\) - One Bleed Valve inoperative.](#)

- OR -

■ In case of BOTH BSPS INOPERATIVE (B)

[Refer to Item # 36-11-02 Bleed Valve \(M\) - Both Bleed Valves inoperative.](#)

36-22-01 LEAK Alert (M)

6f713d4d-37a0-4722-9bd1-25d5442dfe75

01 AUG 2024

1658-1718

■ In case of LEAK Alert (A)

[Refer to Item # 36-11-02 Bleed Valve - One Bleed Valve Inoperative \(M\), and](#)

[Refer to Item # 36-11-04 Cross Bleed Valve \(CBV\) \(M\).](#)

cont'd... >>>

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 36 PNEUMATIC SYSTEM	MMP.36 Page n°04
---	---	-------------------------

cont'd... >>>

- OR -

■ In case of LEAK Alert (B)

[Refer to Item # 36-11-02 Bleed Valve - Both Bleed Valves Inoperative \(M\).](#)

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 46 INFORMATION SYSTEMS	MMP.46 Page n°01
---	--	-----------------------------

46-25-02 Electronic Flight Bag - Mounting Device (M)

7d477ad9-7e88-4db2-842a-1872457b0e18

01 JUL 2023

CAUTION

- ▶ This check can be performed by the crew.

In case of not satisfactory check, maintenance action must be performed by the technical center.

- ▶ Following checks must be performed:

- Check if the affected mounting device does not present any damage detrimental to the adjacent flight crew safety.
- Check if the affected mounting device does not block access to any aircraft system.

■ If check satisfactory:

- ▶ No maintenance action is required.

■ If check not satisfactory:

- ▶ Action maintenance is required.

Affected mounting device must be removed. For removal, *Refer to MP ATR-A-46-26-10-00ZZZ-520Z-A.*



VT / ATR 72-600
MEL

MAINTENANCE PART
ATA 46 INFORMATION SYSTEMS

MMP.46

Page n°02

PAGE
INTENTIONALLY
LEFT BLANK

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 52 DOORS	MMP.52 Page n°01
---	--	-------------------------

52-11-01 Door Alert System (M)

903169b9-1c9d-48ec-b8ef-9be412397f77

22 SEP 2022

ALL

CAUTION

- ▶ This maintenance procedure can be performed by the crew.
- ▶ Check that flight compartment overhead hatch is closed:
 - ▶ Manually operate handle to ensure the shoot bolt operates normally.
 - ▶ Close and latch the hatch.
 - ▶ Verify the handle is flush in the closed position.

Note

Applicable only for Flight Compartment Overhead Hatch

52-11-02 Secondary Handrail (if installed) (M)

ac068687-cff4-4fcf-95f1-a48a1e361742

15 APR 2025

ALL

For removal, Refer to MP ATR-A-52-11-20-A0ZZZ-520Z-A.

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 52 DOORS	MMP.52 Page n°02
---	--	-------------------------

52-31-01 Cargo Door Motor Actuator (M)

2f1320b2-1f49-48c5-b8f2-7e37153dd67d		22 SEP 2022
		ALL

■ **52-31-01A**

Refer to MP ATR-A-52-31-XX-01ZZZ-540Z-A.

CAUTION

- ▶ This maintenance procedure can be performed by the crew, assisted by a ground staff (MANUT), following the instructions of the MP mentioned above and which are repeated below.

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 52 DOORS	MMP.52 Page n°03
---	--	-------------------------

cont'd... >>>

PREPARATION	
PNT	ON PANEL 122VU, OPEN, SECURE AND TAG CIRCUIT BREAKER: 1MP DOORS/CARGO ACTG/ACTR Refer to MMP.28.21-02 Electrical Fuel Pump (M)
MANUAL OPENING OF CARGO DOOR	
MANUT	1) PUSH FLAP TO GRASP HANDLE OF LEVER (1). 2) DEPRESS HANDLE AND PULL LEVER (1) FULLY DOWN. 3) PULL LEVER (2) FULLY DOWN.
MANUT	OPEN ACCESS DOOR 221AL FOR ACCESS TO CARGO DOOR CONTROL PANEL 5001VU. CAUTION MAKE CERTAIN THAT THE HANDLES ARE FULLY DOWN AND THAT, AT THE BEGINNING OF THE UNLOCKING SEQUENCE, THE BLUE LIGHT GOES OFF WHILE THE GREEN LIGHT COMES ON.
PNT	OPEN MANUAL CONTROL ACCESS PANEL 221BC ON ACTUATOR FAIRING. CAUTION IN ANY CASE, TAKE CARE NOT TO PUT THE STRUT IN TENSION AND NOT TO REACH THE EXTENSION MECHANICAL STOP ON THE ACTUATOR.
PNT	INSTALL THE PORTABLE CRANK IN THE SQUARE BIT DRIVE.
MANUT	TURN THE PORTABLE CRANK CLOCKWISE. Note <i>The crank must be turned 450 times from the door close to open position. Make certain that the green light comes on at the end of the unlocking sequence.</i>
MANUT	STRIKE SLOWLY ON THE RIGHT SIDE OF THE HOLD OPEN STRUT AND LOCK IT. WARNING DO NOT OPERATE THE CRANK WHEN HOLD OPEN STRUT IS LOCKED.
PNT	REMOVE THE PORTABLE CRANK FROM THE SQUARE BIT DRIVE AND STOW IT.
PNT	CLOSE MANUAL CONTROL ACCESS PANEL 221BC ON ACTUATOR FAIRING.

cont'd... >>>

cont'd... >>>

MANUT	CLOSE ACCESS DOOR 221AL ON CARGO DOOR CONTROL PANEL 5001VU.
MANUAL CLOSING OF CARGO DOOR	
MANUT	UNLOCK HOLD OPEN STRUT BY LOCKING DEVICE (4) AND STRIKE IT SLOWLY ON THE LEFT SIDE.
MANUT	OPEN ACCESS DOOR 221AL FOR ACCESS TO CARGO DOOR CONTROL PANEL 5001VU.
PNT	OPEN MANUAL CONTROL ACCESS PANEL 221BC ON ACTUATOR FAIRING.
PNT	INSTALL THE PORTABLE CRANK IN THE SQUARE BIT DRIVE.
MANUT	TURN THE PORTABLE CRANK COUNTER-CLOCKWISE. Note <i>The crank must be turned 450 times from the door open to close position.</i>
MANUT	FOLD BACK LEVER (2) THEN LEVER (1) IN ITS RECESS.
MANUT	MAKE SURE THAT THE LEVER (1) IS FULLY IN ITS PLACE (FLUSH WITH THE DOOR SKIN) MAKING SURE THAT YOU HAVE DEPRESSED THE SPRING LOADED CATCH (5) AND FULLY PUSHED IN THE LEVER (1) UNTIL THE HANDLE REACHES THE TRAVEL END. ON PANEL 5001VU, MAKE SURE THAT THE LIGHT "DOOR LCHD" IS ON. CAUTION VERIFY THAT THE LEVER (1) IS POSITIVELY ENGAGED AND LOCKED BY PULLING IT OUT (APPLY THE EFFORT NORMALLY TO THE LEVER (1) AND PARALLELY TO THE SPRING LOADED CATCH (5)). Note <i>ON PANEL 5001VU, AT START OF LOCKING SEQUENCE, GREEN LIGHT GOES OFF.</i>
MANUT	CHECK THAT AT END OF LOCKING SEQUENCE, BLUE LIGHT COMES ON.
MANUT	CLOSE ACCESS DOOR 221AL ON CARGO DOOR CONTROL PANEL 5001VU.
MANUT	DOOR CLOSING AND LOCKING MUST BE VERIFIED FROM OUTSIDE THROUGH THE THREE VIEW PORTS BY CHECKING THAT THE BLACK CHROMIUM INDICATION ON LATCHLOCK PINS APPEARS.

cont'd... >>>


 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 52 DOORS	MMP.52 Page n°05
---	--	-------------------------

cont'd... >>>


PNT	REMOVE AND STOW THE PORTABLE CRANK.
PNT	CLOSE MANUAL CONTROL ACCESS PANEL 221BC ON ACTUATOR FAIRING.
CLOSE-UP	
PNT	ON PANEL 122VU, REMOVE SAFETY CLIPS AND TAGS AND CLOSE CIRCUIT BREAKER PREVIOUSLY OPENED.

cont'd... >>>


cont'd... >>>

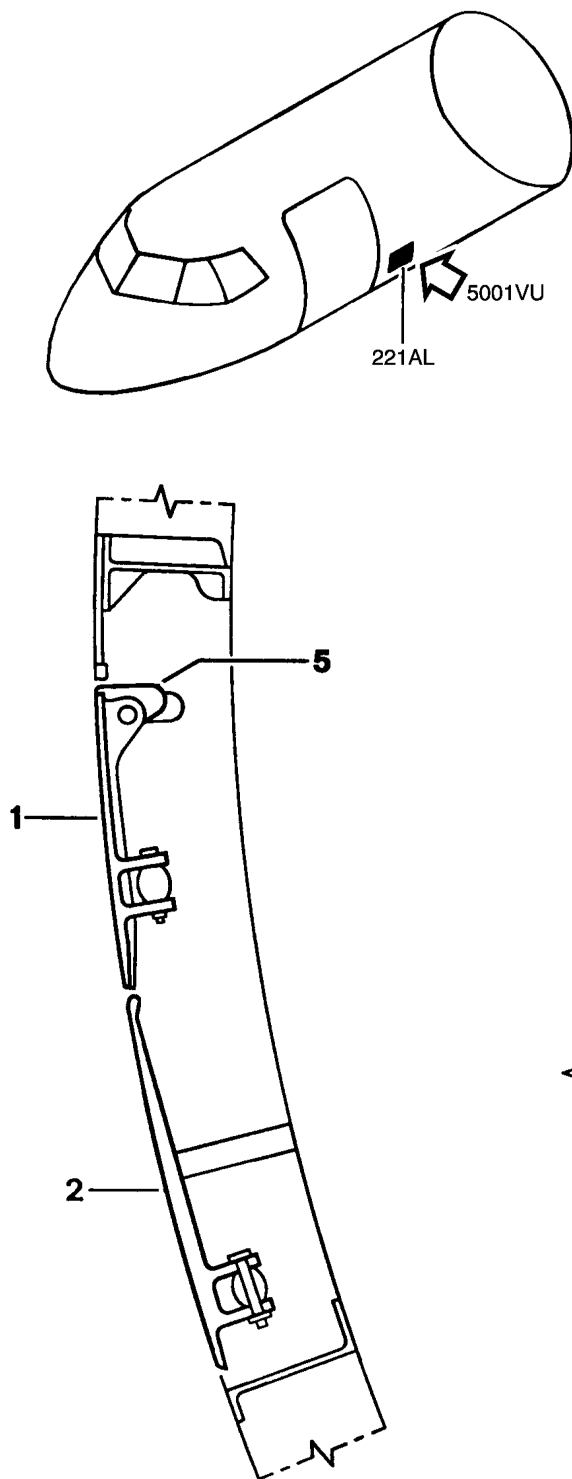

DOOR IN OPEN POSITION

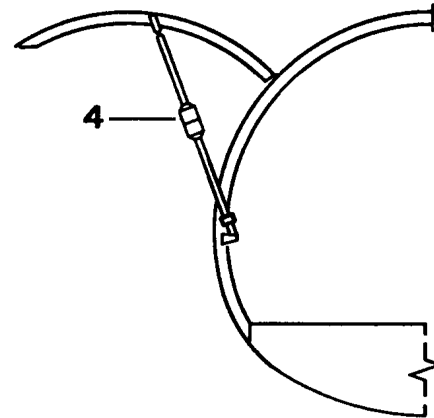

DOOR IN CLOSED POSITION



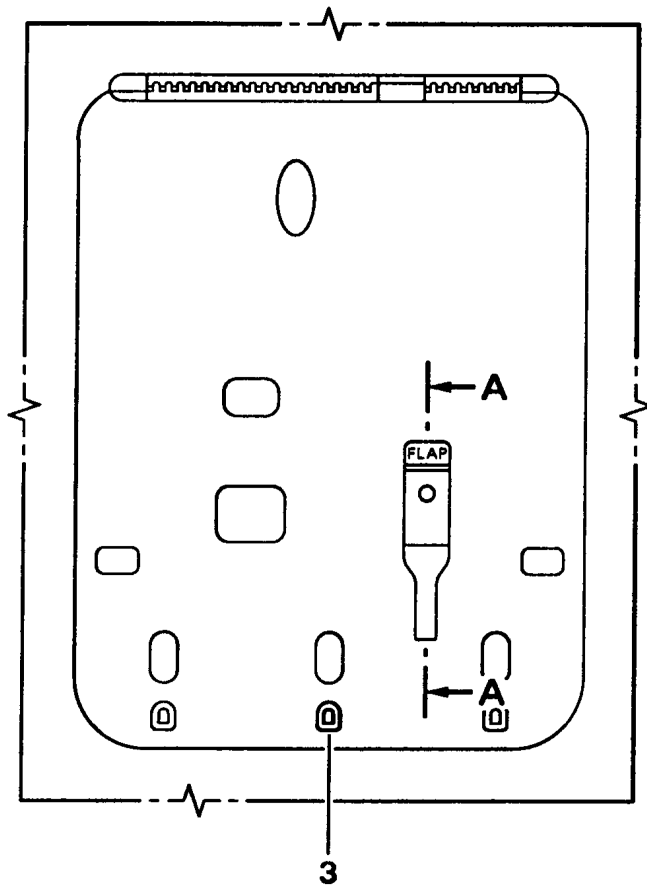


SJ5_523100_OAC_00100_003_C_AD

cont'd... >>>

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 52 DOORS	MMP.52 Page n°07
---	--	---------------------------------------

cont'd... >>>

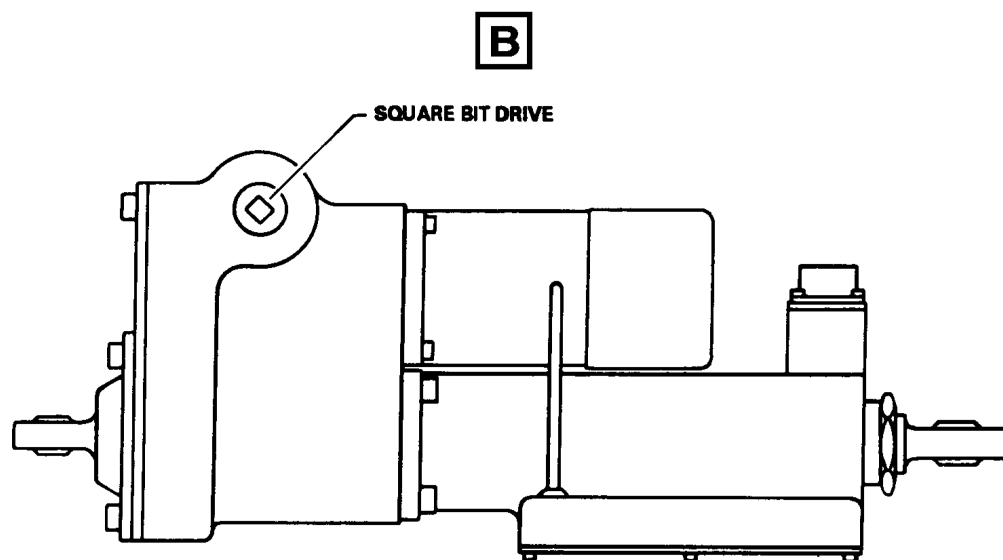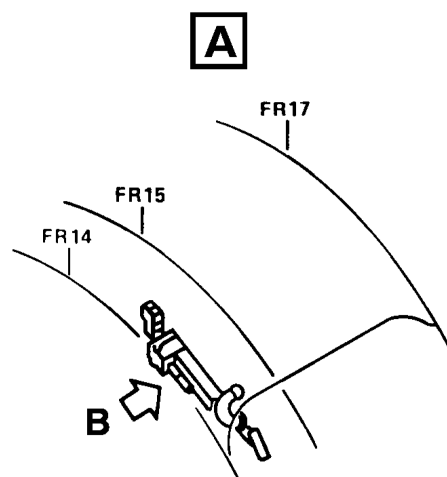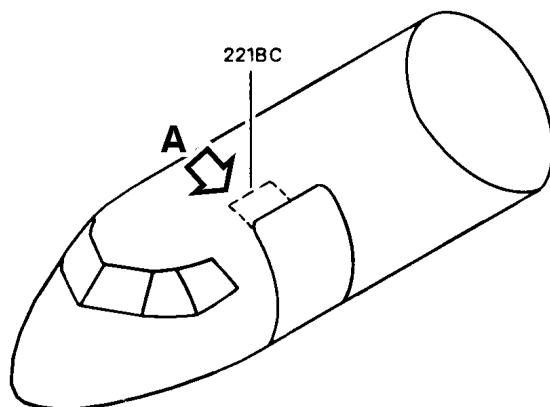

SJ5_523100_OAC_00115_017_C_AC

■ 52-31-01B

Refer to MP ATR-A-52-31-30-01ZZZ-520Z-A.

 VT / ATR 72-600 MEL	 MAINTENANCE PART ATA 52 DOORS	MMP.52 Page n°08
---	--	---------------------------------

52-42-01 Service Door - Hold Open Device (M)

f3265303-8c57-4b72-bee6-a65f64a31833		01 AUG 2024
		ALL

Refer to MP ATR-A-53-67-XX-00ZZZ-560Z-A .

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 56 WINDOWS	MMP.56 Page n°01
---	--	-----------------------------

56-11-01 Windshield (Including Main Windshield, FWD and AFT Windows) (M)

Windshield (Including Main Windshield, FWD and AFT Windows) (M)

7994d8cc-8ab8-4d82-a4ae-88a6c91614a9		25 SEP 2020
		ALL

Refer to SRM 56.10.00

56-21-01 Passenger Compartment Window (M)

7014e4d1-e26f-4ab5-b9ba-d4376f27f035		27 MAY 2015
		ALL

Refer to SRM 56.21.00



VT / ATR 72-600

MEL

MAINTENANCE PART

ATA 56 WINDOWS

MMP.56

Page n°02

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 61 PROPELLERS	MMP.61 Page n°01
---	---	-----------------------------

61-50-01 Propeller Brake (M)

16596579-b13e-4857-b280-ed0a5b5119eb		19 MAY 2022
		ALL

Refer to MP ATR-A-61-51-60-02ZZZ-560Z-A .



VT / ATR 72-600

MEL

MAINTENANCE PART

ATA 61 PROPELLERS

MMP.61

Page n°02

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 73 ENGINE FUEL AND CONTROL	MMP.73 Page n°01
---	--	--------------------------------

73-15-01 Fuel Heater (M)

aac38c02-1445-4e54-b369-8ca32a41d4cb

16 OCT 2020

ALL

■ If TOO LOW TEMP

Fuel anti icing additive for all fuel:

To be added in compliance with Engine Maintenance Manual (*Refer to Engine Maintenance Manual 72-00-00 - Anti-icing Additives Table*).

Check of oil level:

- ▶ Open left hinged cowl (435AL or 445AL).
- ▶ Check that oil level is to "FULL".
- ▶ Close cowl(s).

PAGE
INTENTIONALLY
LEFT BLANK

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 77 ENGINE INDICATING	MMP.77 Page n°01
---	--	--

77-00-02 AFU (M)

b252952d-9060-49a8-ad89-178a93850faf

28 OCT 2020

ALL

This task is performed to deactivate the AFU and then to avoid an untimely autofeather in flight:

- ▶ Open " C/B ENG CTL/ENG 1 (2) / AFU "
- ▶ Open " C/B ENG CTL/ENG 1 (2) / FEATH CTL & AFU "
- ▶ Open nacelle cowling left side.
- ▶ Disconnect AFU connector
- ▶ Secure and cap electrical connectors.
- ▶ Close nacelle cowling.
- ▶ Close previously opened C/Bs



VT / ATR 72-600

MEL

MAINTENANCE PART

ATA 77 ENGINE INDICATING

MMP.77

Page n°02

***PAGE
INTENTIONALLY
LEFT BLANK***

 VT / ATR 72-600 MEL	MAINTENANCE PART ATA 79 OIL	MMP.79 Page n°01
---	--	--------------------------------

79-32-01 Oil TEMP Indication (M)

f348196e-0287-41fa-90c0-f7a0fa5dda5b

19 MAY 2022

ALL

Refer to MP ATR-A-12-13-79-00ZZZ-310Z-A .

79-33-01 Oil Pressure Indication (M)

7d0e2028-dd38-4874-b89b-ae58b01d1832

19 MAY 2022

ALL

Refer to MP ATR-A-79-34-XX-00ZZZ-320Z-A .



VT / ATR 72-600

MEL

MAINTENANCE PART

ATA 79 OIL

MMP.79

Page n°02

***PAGE
INTENTIONALLY
LEFT BLANK***