


3. OPERATING INSTRUCTION

3-1. IDENTIFICATION OF PARTS

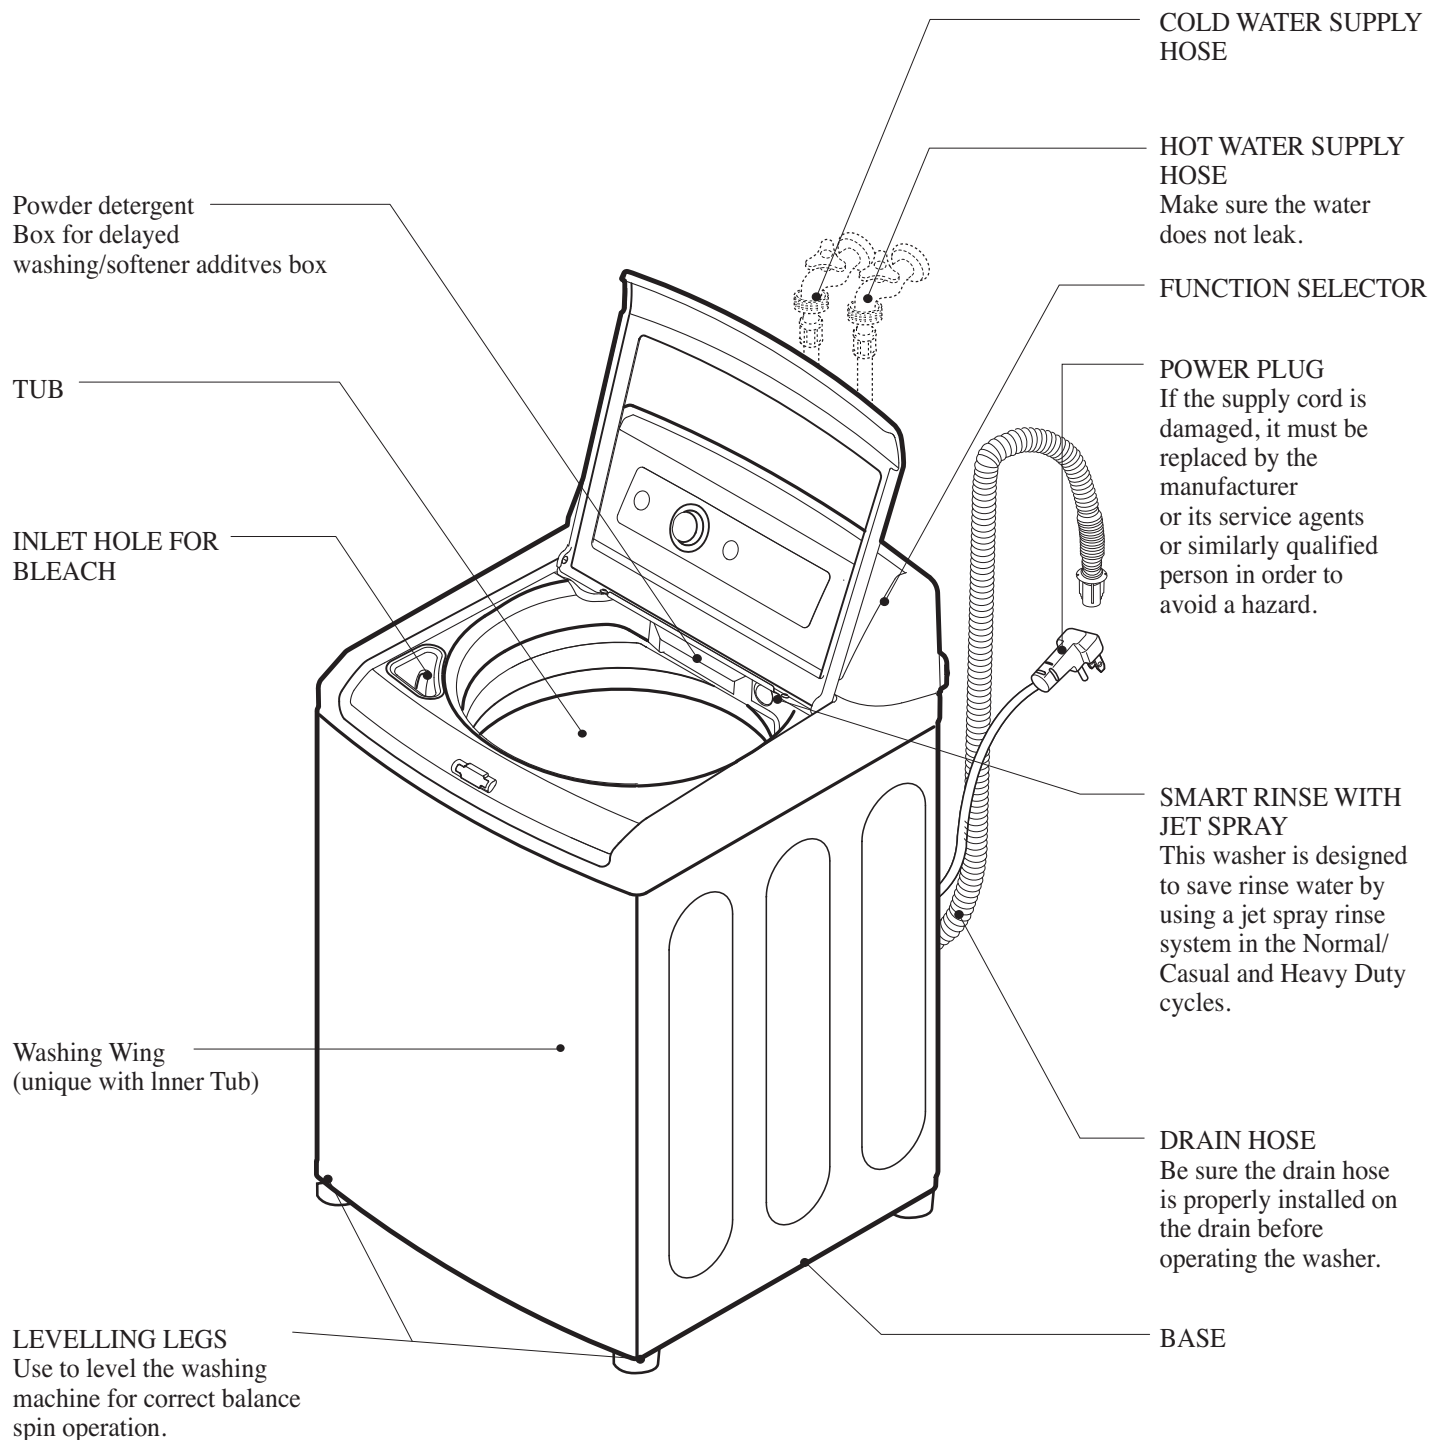

3-2. BEFORE STARTING TO WASH

Care Labels

- Look for a care label on your clothes.
This will tell you about the fabric content of your garment and how it should be washed.
Sort clothes into loads that can be washed with the same wash cycle, water temperature, and spin speed.



Sorting


To get the best results, different fabrics need to be washed in different ways.

- | | |
|--|--|
| • SOIL (Heavy, Normal, Light) | Separate clothes according to the type and amount of soil. |
| • COLOR (Whites, Lights, Darks) | Separate white fabrics from colored fabrics. |
| • LINT (Lint producers, Collectors) | Separate lint producers and lint collectors. |
| Lint Producers | Terry cloth, Chenille, Towels, Diapers |
| Lint Collectors | Synthetics, Corduroy, Permanent Press, Socks |



Check before Loading

- **Check all pockets to make sure that they are empty.** Things such as nails, hairclips, matches, pens, coins, and keys can damage both your washer and your clothes.
- **Mend any torn garments or loose buttons.** Tears or holes may become larger during washing.
- Remove belts, underwires, etc. to prevent damage to the machine or your clothes.
- **Pretreat any dirt and stains.**
- Make sure the clothes are washable in water.
- Check the washing instructions.
- Remove any paper or tissue in the pockets.
- underwire

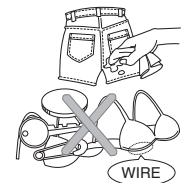

Pretreatment on stains or heavy soil

- Pretreat shirt collars and cuffs with a pre-wash product or liquid detergent when placing them in the washer.
Before washing treat special stains with bar soaps, liquid detergent, or a paste of water and powdered detergent.
- Use a pretreat soil and stain remover.
Treat stains **AS SOON AS POSSIBLE**. The longer they are left, the harder they are to remove.
(For more detail refer to page 14-15)

Loading

Do not wash fabrics containing flammable materials (waxes, cleaning fluids, etc.).

Load Size

The **WATER LEVEL** should just cover the clothes. Adjust the load size accordingly. Loosely load clothes no higher than the top row of holes in the washer tub. To add items after washer has started, press the **Start** button and submerge additional items. Close the lid and press the Start button again to restart.

- ※ Do not wash waterproofed fabrics (such as skiing outfits, diapers, or nappy auto seat covers.)

Light and Large-sized clothing

Clothes like downs and woolens are lightweight, large, and float easily. Use a nylon net and wash them in a small amount of water. If the laundry floats during the wash cycle, it may become damaged. Use dissolved detergent to prevent the detergent from clumping.

- ※ Do not wash water-proof textiles (Skiing outfit, baby diaper, nappy automobile seat covers.)

Long laundry items

Use nylon bag nets for long, delicate items. For laundry with long strings or long length, a bag will prevent tangling during washing. **Fasten zippers, hooks, and strings** to make sure that these items don't snag on other clothes.

- ※ The nylon washing bag is not supplied by Kenmore.



1) Using Water

Water Temperature

- The machine sets the appropriate temperature automatically according to the wash program .
You can override the preset selection by pressing the **water temperature icon**. **Touch the arrow buttons up or down until your desired temperature setting is displayed.**
- The temperature of the water impacts the effectiveness of all laundry additives and therefore, the cleaning results.
- We recommend temperatures of:
 - HOT 120°F (120-140°F) White items, diapers, underclothing and heavily soiled, colorfast items.
 - WARM 90°F (85-105°F) Most items
 - COLD 66°F (65-75°F) Only very bright colors with light soil.
- When washing in COLD water additional steps may be needed:
 - Adjust detergent amount and pre-dissolve detergent in WARM water
 - Pretreat spots and stains
 - Soak heavily soiled items
 - Use appropriate bleach

* Temperature below 18°C (65°F) will not activate laundry additives and may cause lint, residue, poor cleaning, etc.
In addition, detergent manufactures and care labels define COLD water as 26~29°C (80-85°F).
If the temperature of the water in the tub is too cold for your hands, the detergent will not activate and clean effectively.

Note

If iron is present in the water, the clothes may become an all-over yellow or they may be stained with brown or orange spots or streaks. Iron is not always visible. Installation of water softener or an iron filter may be necessary for severe cases.

2) Using Detergent

Detergent

Follow the detergent package directions. Using too little detergent is a common cause of laundry problems. Use more detergent if you have hard water, large loads, greasy or oily soils or lower water temperature.

Choosing the Right Detergent


Your washing machine is designed for use with only High-Efficiency (HE) detergents. HE detergents are formulated specifically for top-load washers and contain suds-reducing agents. Always look for the HE symbol when purchasing detergent. HE detergents produce fewer suds, dissolve more efficiently to improve washing and rinsing performance, and help to keep the interior of your washer clean. Using a regular detergent will cause unsatisfactory performance, oversudsing, machine build-up, and could damage the machine.

Using the Liquid Bleach Dispenser

The bleach dispenser automatically dilutes and dispenses liquid chlorine bleach at the proper time in the wash cycle.

1. Check clothing care labels for special instructions.
2. Measure liquid bleach carefully, following instructions on the bottle.
 - Never pour undiluted liquid chlorine bleach directly onto clothes or into the wash basket.
 - Do not pour powdered bleach into bleach dispenser.
 - Avoid overfilling or splashing when adding bleach to the dispenser. The maximum capacity of the bleach dispenser is one cup of bleach per wash cycle. Overfilling could result in premature dispensing of bleach.

Do NOT add more bleach than is required for your particular load.
3. Before starting the washer, pour measured amount of bleach directly into bleach dispenser. If you prefer to use powdered bleach, add it into the wash basket directly before adding clothes.

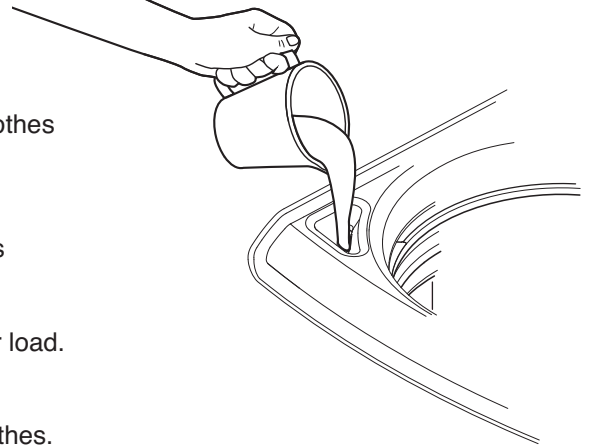

⚠ WARNING Do NOT mix chlorine bleach with ammonia or acids, such as vinegar or rust / scale remover. Mixing chemicals like these can produce irritating and toxic fumes. Put the manufacturer's recommended amount of undiluted liquid chlorine bleach into the bleach dispenser. During the final portion of the wash cycle, two sequential flushes of the dispenser put all the bleach into the wash load and completely flush the dispenser to eliminate the carryover of bleach to a subsequent load. Any liquid remaining in the bleach dispenser at the end of the cycle is water, not bleach. To prevent unintentional self-siphoning of the bleach, never fill the dispenser higher than the maximum fill level marked on the dispenser. When adding bleach to the dispenser, be careful to avoid spilling it into the laundry load or leaving droplets of bleach around the dispenser. These things will damage your laundry items.

Using the Dispenser Drawer

ABOUT THE DISPENSER

The automatic dispenser consists of two compartments which hold:

- Liquid fabric softener.
- Liquid or powdered detergent.

All laundry products can be added at once in their respective dispenser compartments. They will be dispensed at the appropriate time for the most effective cleaning.

After adding the laundry products to the dispenser, close the dispenser drawer.

Close the dispenser drawer gently to avoid spilling or starting the siphoning action.

To add detergent, bleach, and fabric softener to the automatic dispenser:

- Open the dispenser drawer.
- Load the laundry products into the appropriate compartments.
- Close the lid slowly and smoothly to avoid spilling, splashing, or premature dispensing of the contents.

NOTE: It is normal for a small amount of water to remain in the dispenser compartments at the end of the cycle.

NOTE: Do not use powdered or liquid bleach in the dispenser drawer.

