
уководство пользователя подводного эхолота для поиска рыбы высокой четкости

I. Перед использованием данного оборудования внимательно прочитайте руководство и эксплуатируйте его в строгом соответствии с инструкциями.

1. Перед включением камеры обязательно подключите головку гарнитуры.
2. Чтобы увеличить срок службы камеры и монитора, не подключайте и не отключайте головку гарнитуры, когда она включена, чтобы избежать короткого замыкания.
3. Перед включением камеры выключите выключатель инфракрасного излучения и не подключайте и не отключайте камеру при включенном инфракрасном излучении.
4. При выключении камеры после использования, сначала выключите инфракрасный свет, затем выключите питание, а затем отсоедините камеру.
5. Прежде чем определить, совпадает или нет, не обменивайте заводской монитор, камеру и других производителей штепсельной вилки, легко короткого замыкания сгорел. Если вам нужно поменять, вы можете связаться с заводом, а затем работать после определения.
6. Выключите монитор при зарядке, и использовать 5V зарядное устройство с током не более 2A

II. Иллюстрация описания работы клавиш:

Рекомендации по эксплуатации дисплея

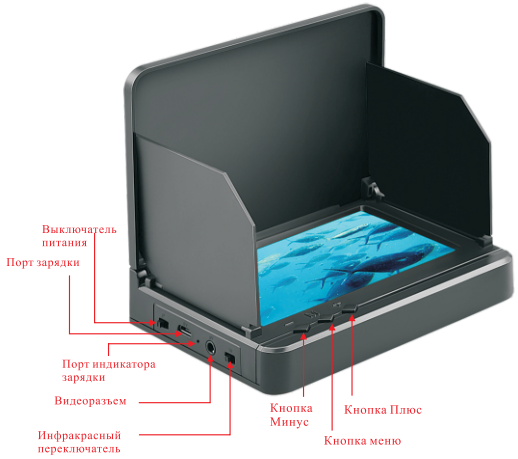






Manual for high definition underwater fish detector

I. Before using the equipment, please read the instructions carefully and operate in strict accordance with the instructions

1.Please be sure to plug the camera and headphone in place before turning on the device
2..In order to increase the service life of the camera and monitor, please do not plug and u nplug the headphone to avoid short circuit when turning on the device.
3.Please turn off the switch of the infrared lamp before starting the machine, and the cam era cannot be plugged in and out with the infrared lamp on.
4.When the device is shutting down after use, please turn off the infrared lamp first, then t urn off the power, and then unplug the camera
5.Before confirming whether it is consistent, please do not exchange and plug the display and camera of our factory with those of other manufacturers, which is easy to be short cir cuited and burnt. If you need to change, you can communicate with our factory, and opera te after defining.
6.Please turn off the display when charging, use a charger with a voltage of 5V and a curr ent of no more than 2A.

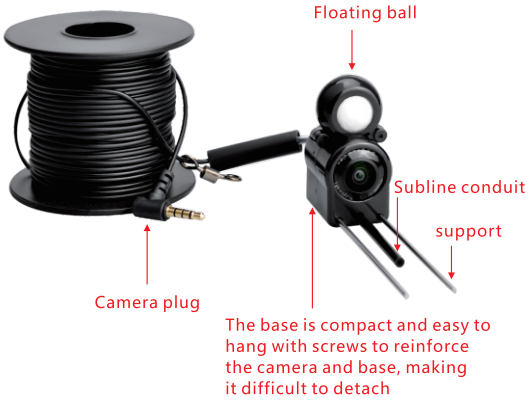

II. Button operation description illustration

Display operating instructions



