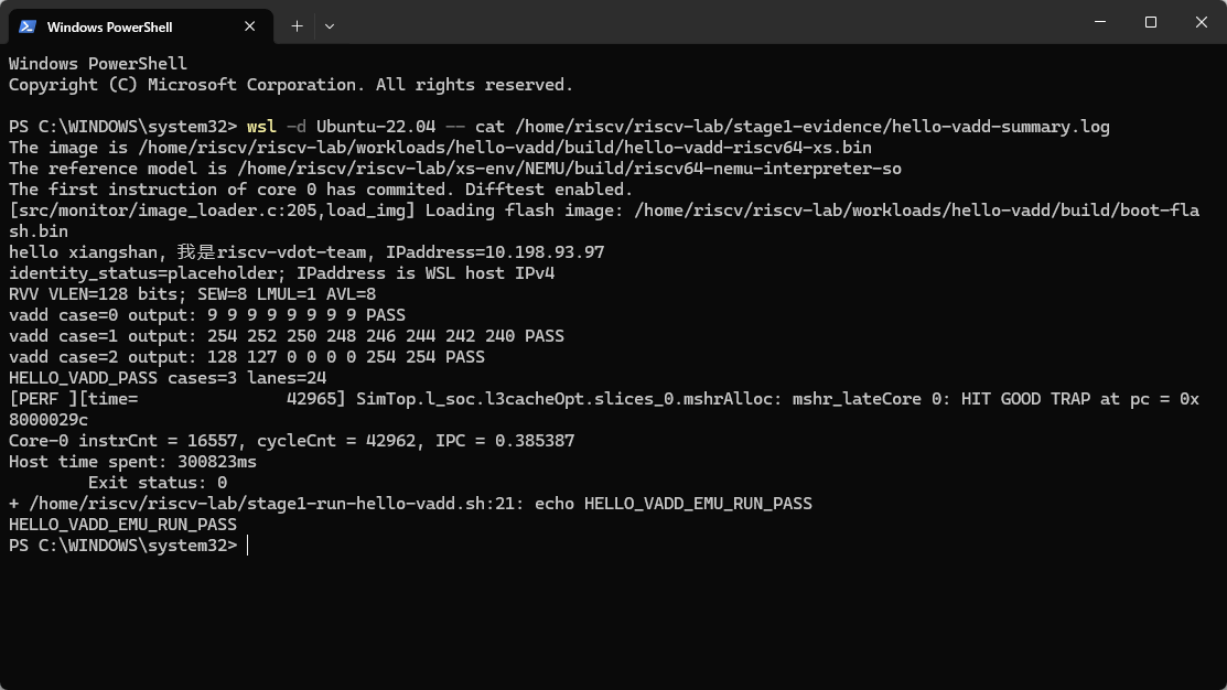
Windows PowerShell
Windows PowerShell
Copyright (C) Microsoft Corporation. All rights reserved.
PS C:\WINDOWS\system32> wsl -d Ubuntu-22.04 -- cat /home/riscv/riscv-lab/stage1-evidence/hello-vadd-summary.log
The image is /home/riscv/riscv-lab/workloads/hello-vadd/build/hello-vadd-riscv64-xs.bin
The reference model is /home/riscv/riscv-lab/xs-env/NEMU/build/riscv64-nemu-interpreter-so
The first instruction of core 0 has commited. Difftest enabled.
[src/monitor/image_loader.c:205,load_img] Loading flash image: /home/riscv/riscv-lab/workloads/hello-vadd/build/boot-flash.bin
hello xiangshan, 我是riscv-vdot-team, IPaddress=10.198.93.97
identity_status=placeholder; IPaddress is WSL host IPv4
RVV VLEN=128 bits; SEW=8 LMUL=1 AVL=8
vadd case=0 output: 9 9 9 9 9 9 9 9 PASS
vadd case=1 output: 254 252 250 248 246 244 242 240 PASS
vadd case=2 output: 128 127 0 0 0 0 254 254 PASS
HELLO_VADD_PASS cases=3 lanes=24
[PERF][time= 42965] SimTop.l_soc.l3cacheOpt.slices_0.mshrAlloc: mshr_lateCore 0: HIT GOOD TRAP at pc = 0x8000029c
Core-0 instrCnt = 16557, cycleCnt = 42962, IPC = 0.385387
Host time spent: 300823ms
Exit status: 0
+ /home/riscv/riscv-lab/stage1-run-hello-vadd.sh:21: echo HELLO_VADD_EMU_RUN_PASS
HELLO_VADD_EMU_RUN_PASS
PS C:\WINDOWS\system32>