
## Revision


Revision helps to show the current version of AVEVA or Indusoft that you are running. If you make an update, it will increase.


Need to have \_CML\_Revision table.


When you run the app, make sure on your table that you put the Current\_[Project#]

The db needs to be set:

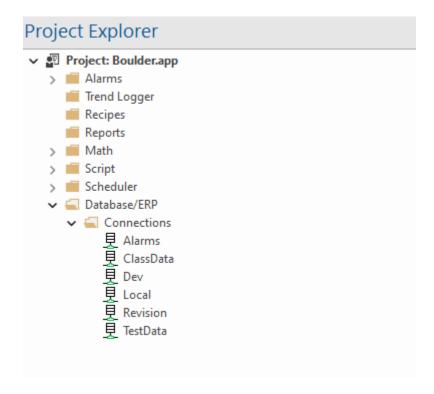


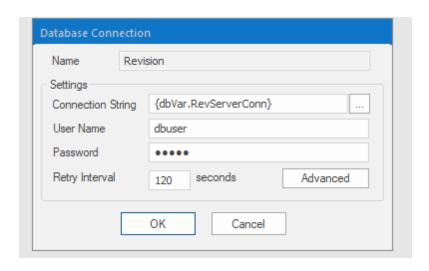

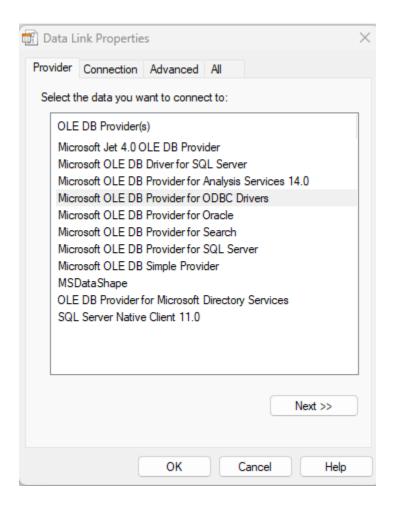


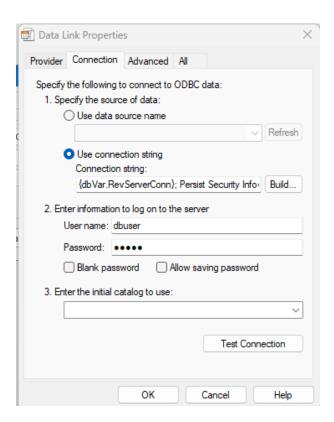

In the database you need to have the current version so the app loads with no issues

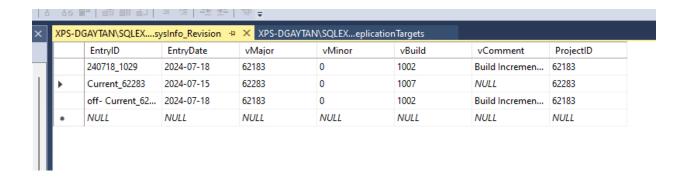


- 1. All the HMIs need to be logged in and running. Go to Program Files x86 -> AVEVA -> AVEVA EDGE -> Bin -> drag runStartUp.exe don't let go.
  - Press alt key and let go
  - It will create a shortcut
  - Pin to star and pin to task menu
- 2. File Sharing for the C Drive for everyone on isw\_Share and iws\_BAK

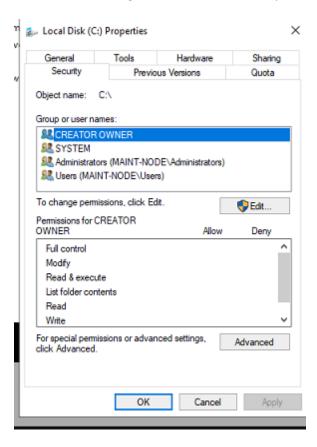

Go to security -> add everyone and give them full access. In sharing go to advance sharing and make sure he has full access.

3. Make sure to right-click on the C drive, select Network and Sharing, and select All Network. Then, turn off password protection on all the HMIs.

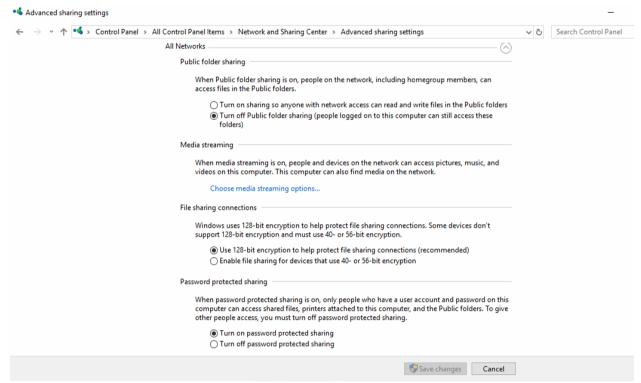

All computers must have the same password for admin and password.