

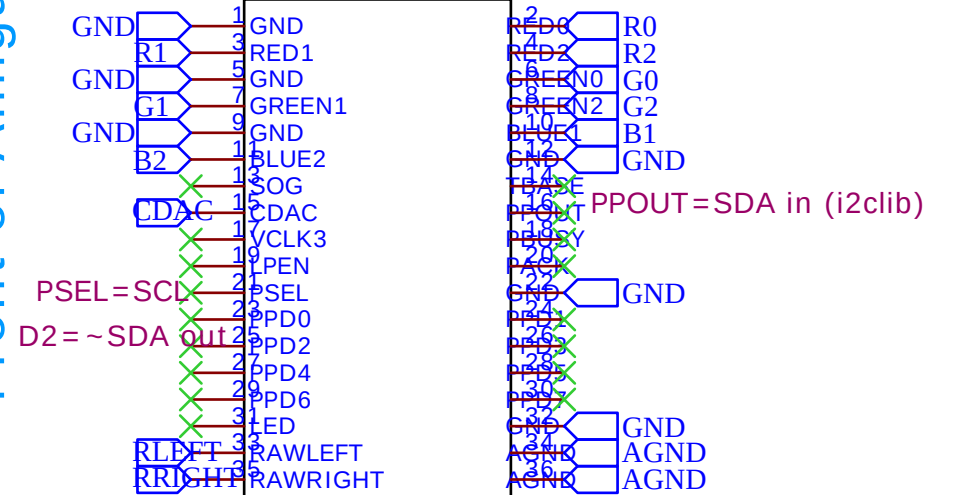
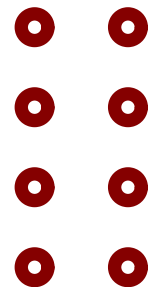
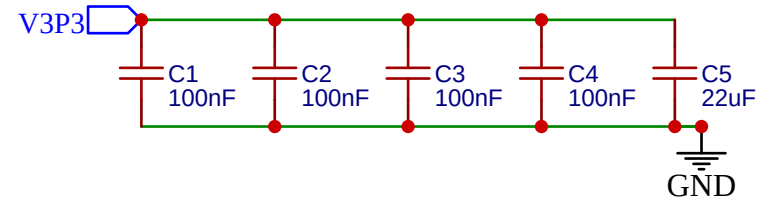
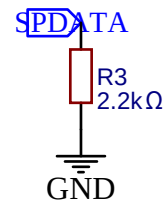
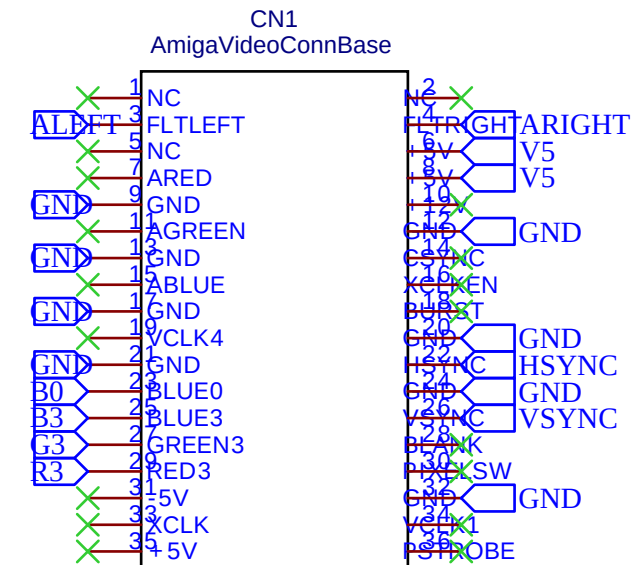


Rev 7.1

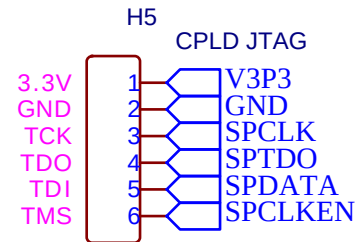





HDMI Options

HDMI Switch

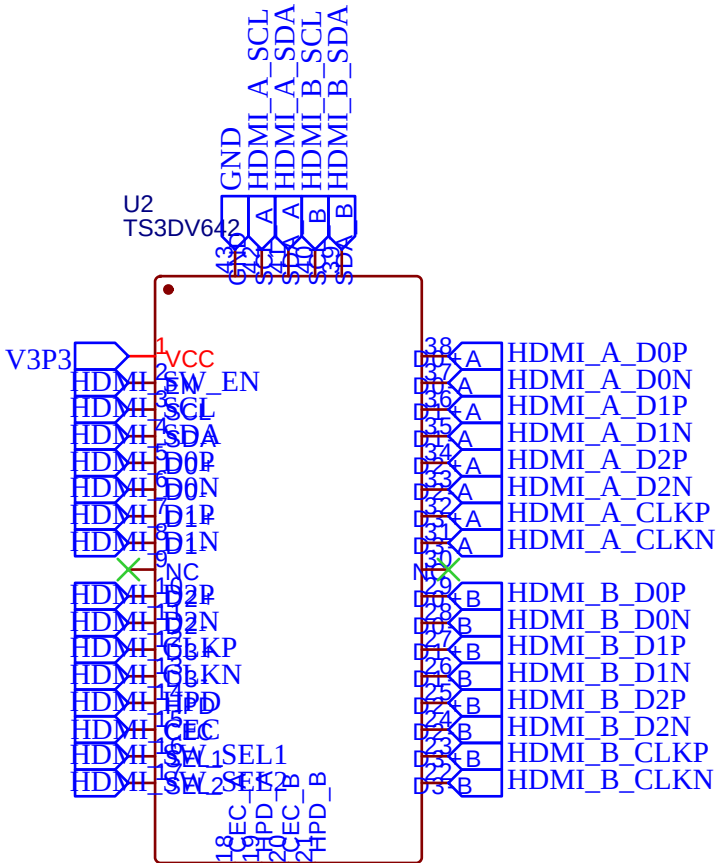


HDMI female inner dimensions:
14mm x 4.55mm
HDMI male outer dimensions:
13.90mm x 4.45mm

HDMI Male Edge

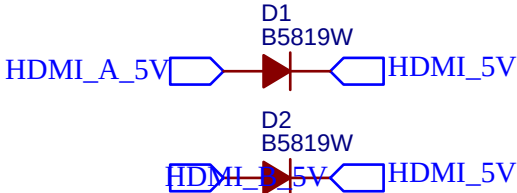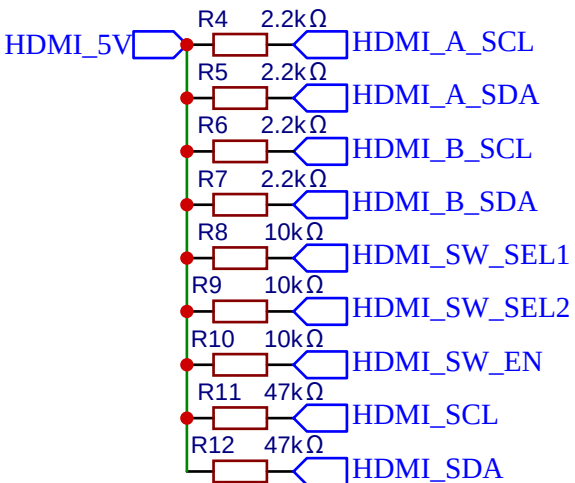
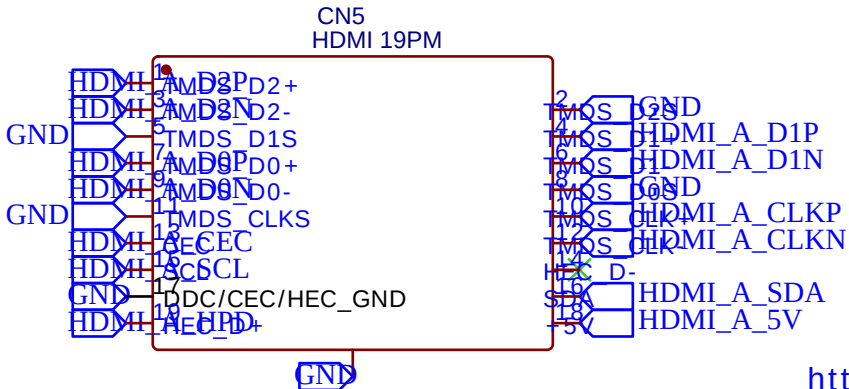


HDMI Female Raised (rear)

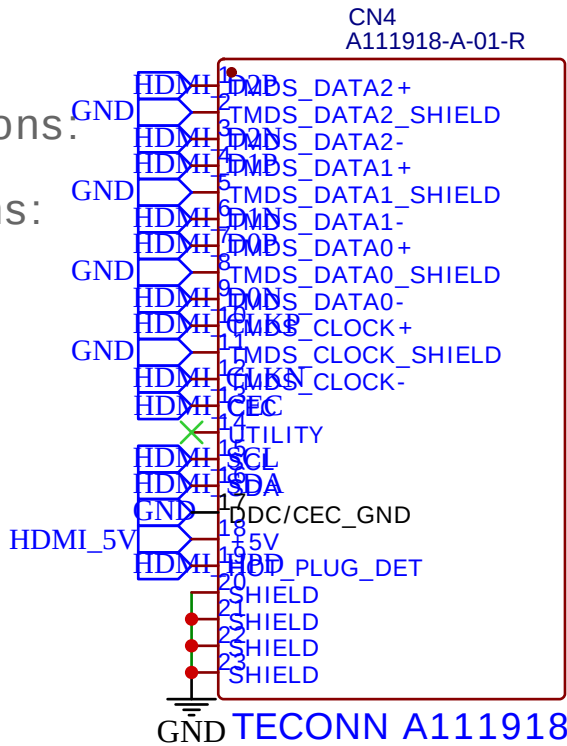


Top of connector to SMD surface is 9.2mm
http://www.teconn.com.cn/products_content-5098170.html
Molex 105156-1006 appears compatible, available at Mouser

HDMI signal header for Pi adapter

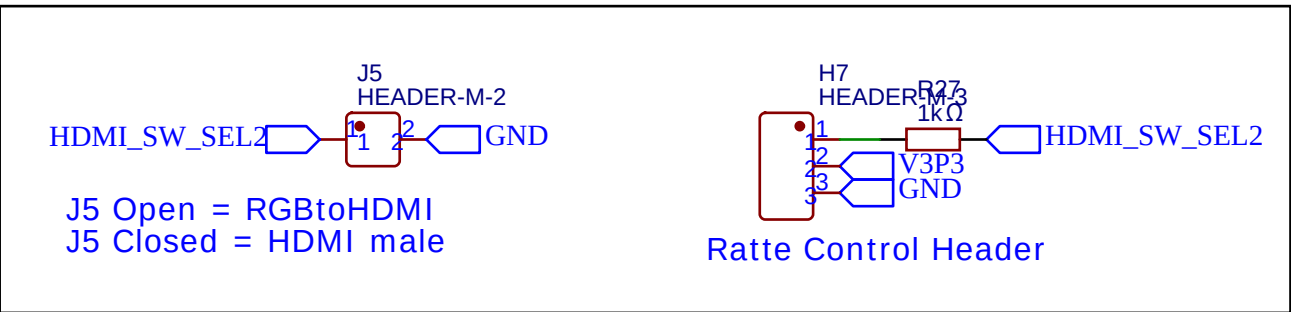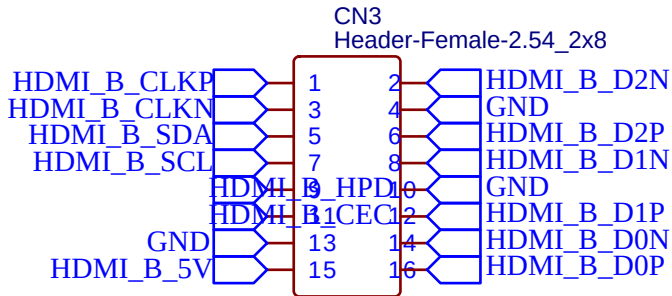

HDMI Female footprint (rear)

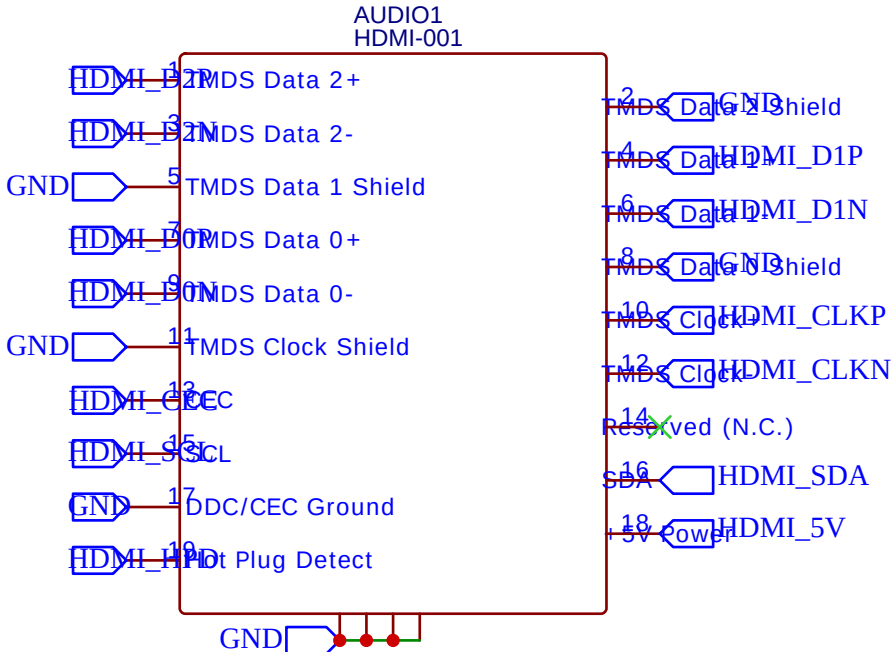


Possible HDMI Female Raised alternatives

<https://www.digikey.com/en/products/detail/molex/1051561006/4693413>

<https://www.digikey.com/en/products/detail/dlk-electronics/54519B021A1/24374855>

DLK has others, like 54519B02171 and 54519B04101, but I've not researched the differences.


HDMI Female Raised (rear)

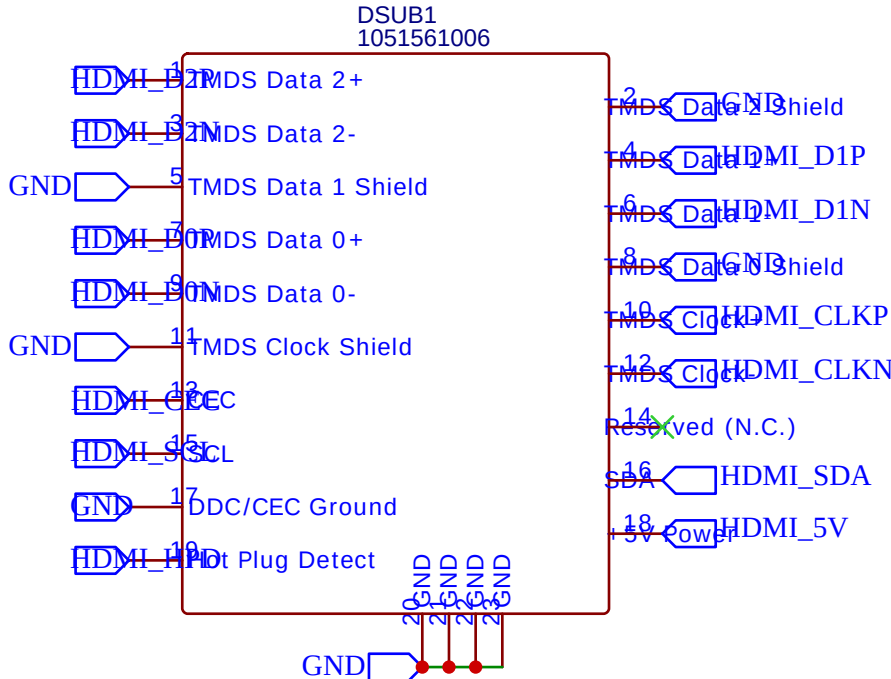


Molex 1051561006

TITLE: HDMI connectors and switch		REV: 7.1
Company: eebugs.com		Sheet: 2/5
Date: 2026-06-03		Drawn By: cdhooper

Raspberry Pi connector and other options

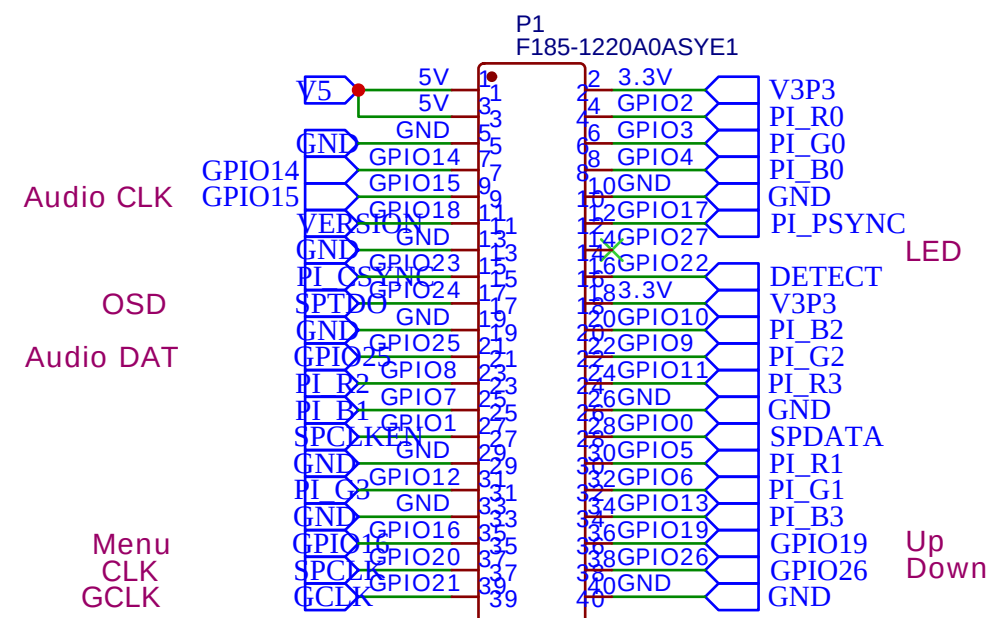

Could possibly use
1301-9503 C5479763, but untested.

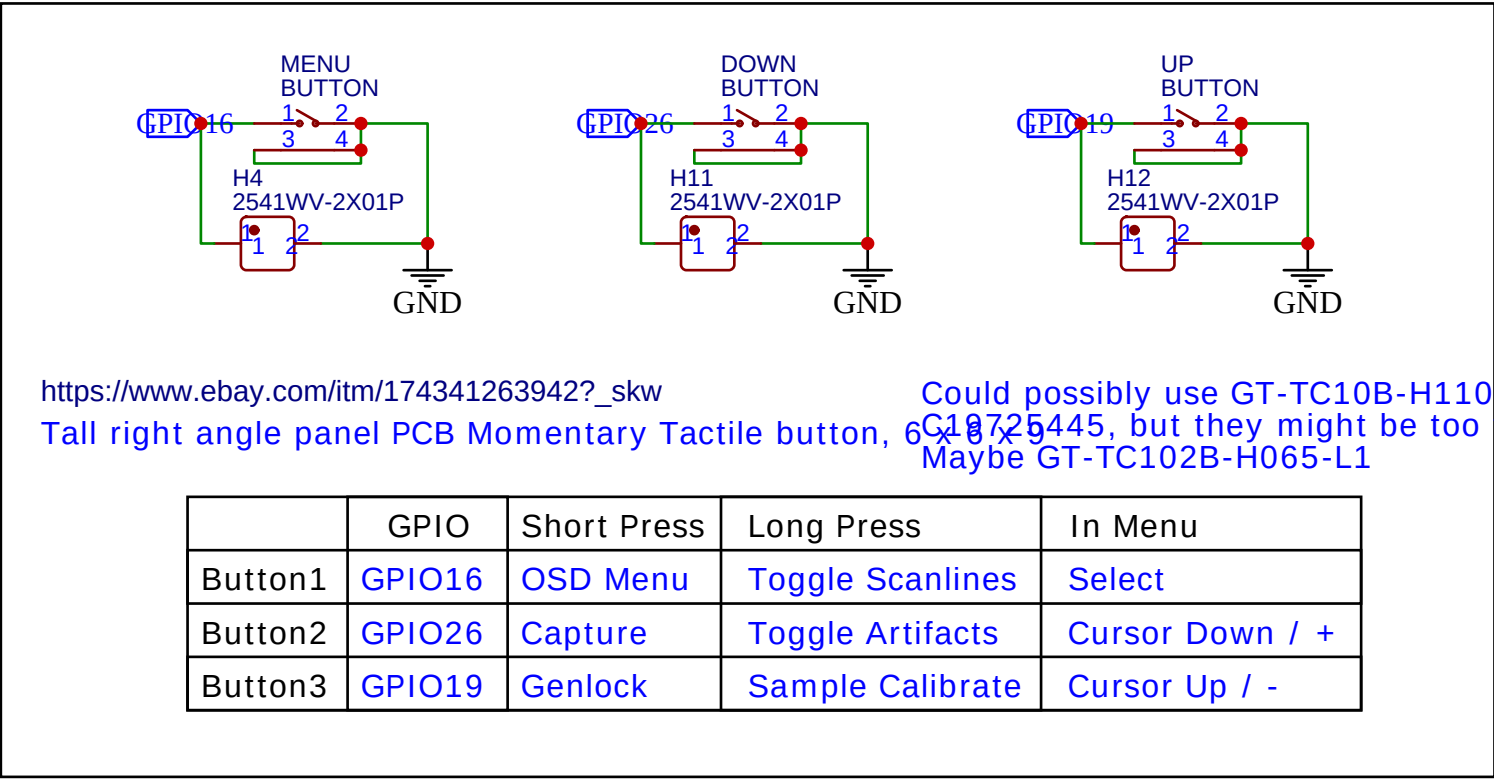

https://www.ebay.com/itm/174341263942?_skw=C18725445
Tall right angle panel PCB Momentary Tactile button, 6x8x5mm, but they might be too tall.
Maybe GT-TC102B-H065-L1

HDMI Audio

Connect 1-2 on J1, J2, J3 for no Gotek OSD mode

Gotek OSD disabledGotek OSD Mode

- U3P4 -> GPIO15R
U4P4 -> SPTDOR
U5P4 -> GPIO25R
- BCK -> GPIO15R
U7P4 -> GPIO25R

There is probably no reason to ever set J4.



Might be able to use TI CD74HCT175M96 in place of the 3x flip-flops

From, the original RGBtoHD Audio board:
To change into One GPIO mode, cut the pcb bridges on jumpers JP2 (1-2), JP3 (2-3), JP4 (2-3) and JP5 (2-3) with a sharp knife. The best way is to dig the bridge out with the point of a type knife or possibly use a Dremel with a small grinding bit. Then make solder bridges on JP3 (1-2), JP4 (1-2) and JP5 (1-2) leaving JP2 open with no bridges at all. See below: (The changes are auto detected by the software and the connection type will be displayed on page 1 or in the system summary menu.)
On this board, always Jumper J1, J2, and J3 in the same manner.
For two GPIO mode (no FlashFloppy OSD), set J1, J2, and J3 to 1-2.
For single GPIO mode (FlashFloppy OSD), set J1, J2, and J3 to 2-3.



Flashfloppy OSD

STM32F103C8T6
72 MHz 32-bit ARM Cortex-M3
32 KB SRAM, 256KB Flash,
USB, ADC, USART, Timer


103 = Value Line
C = 48 pins
8 = 64 KB flash
T = LQFP
6 = -40 to 85 °C
7 = -40 to 105 °C

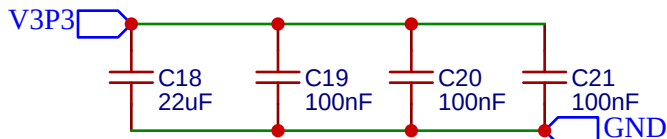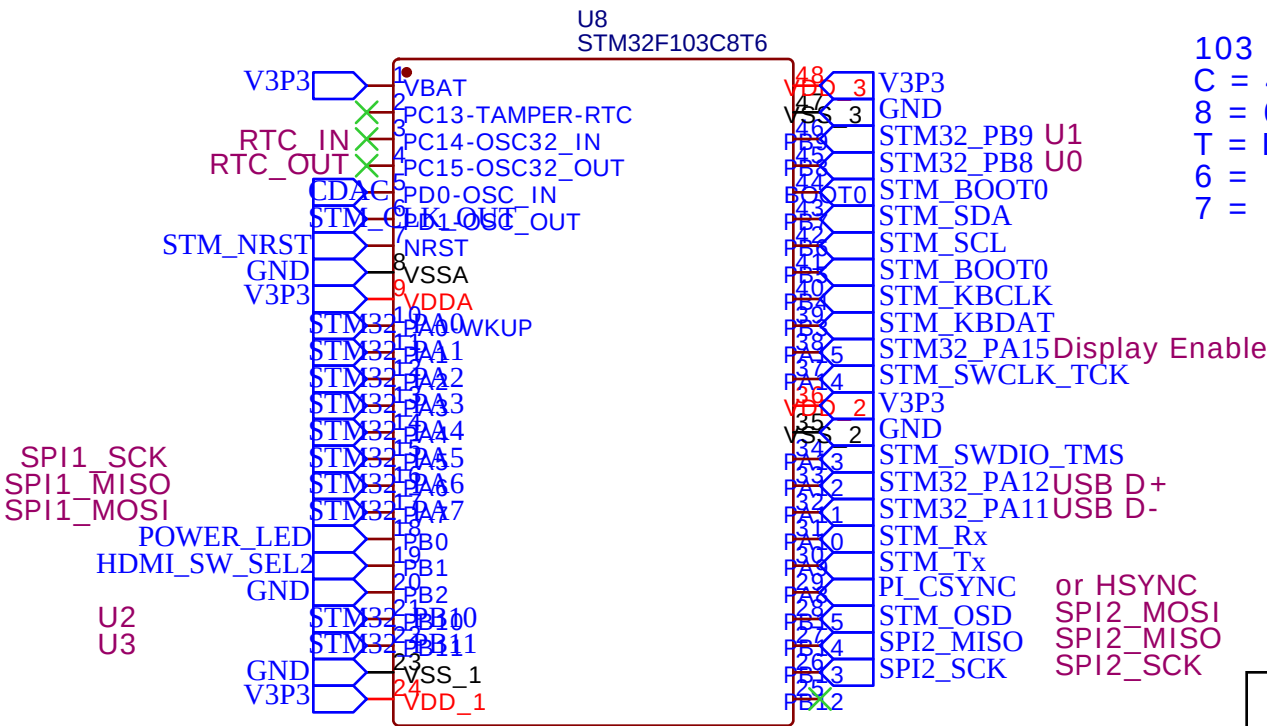


Could use PB10/PB11 as I2C2
Could use PA5/PA6/PA7 as SPI
PA3 USART2_RX
Amiga serial port snoop? Check for spare GPIO

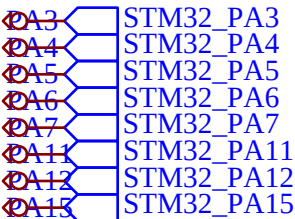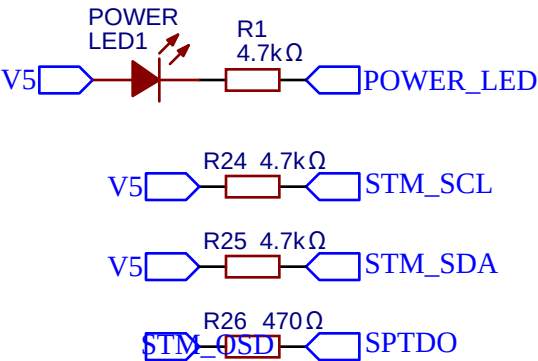


Clock Option

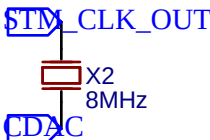


Serial Console

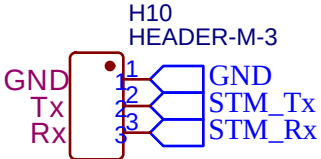


Encoder + Options

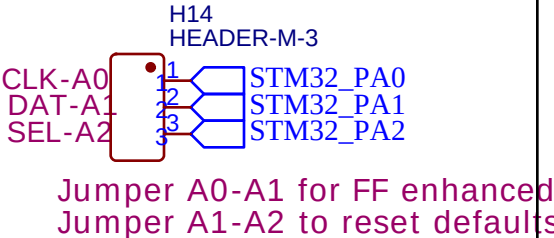


Debug

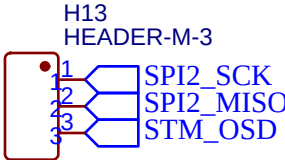


ST-Link

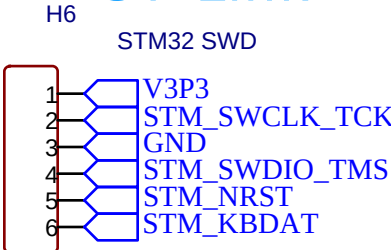


FlashFloppy

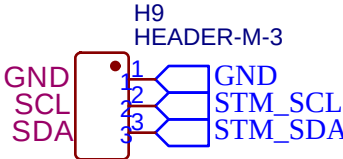


User Options

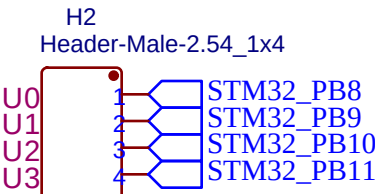


Amiga Keyboard

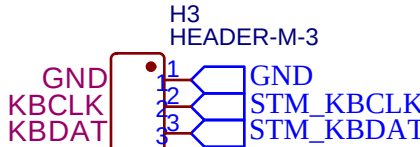

CH340 USB-Serial

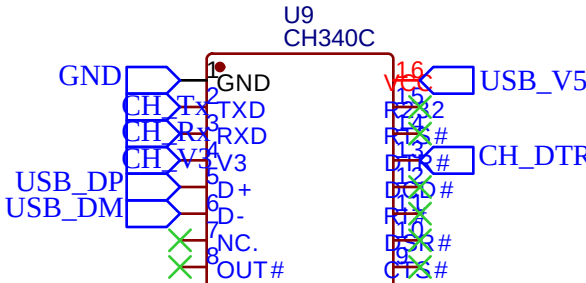

USB Conn

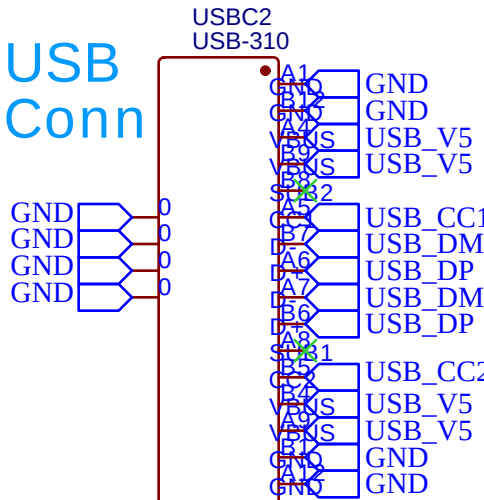

DFU

