



Rev 7.2

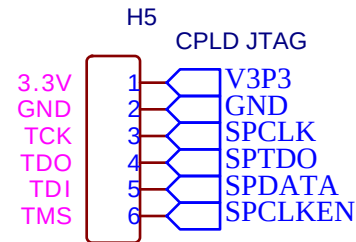


Rear of Amiga ->

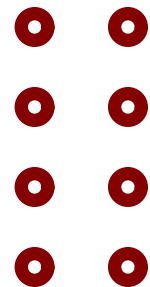


TITLE: CPLD + Edge		REV: 7.2
	Company: eebugs.com	Sheet: 1/5
	Date: 2026-06-03 Drawn By: cdhooper	

HDMI Female Raised (front)


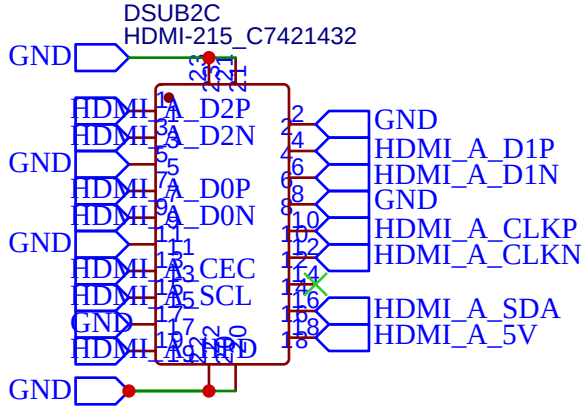


HDMI Female Raised (front)


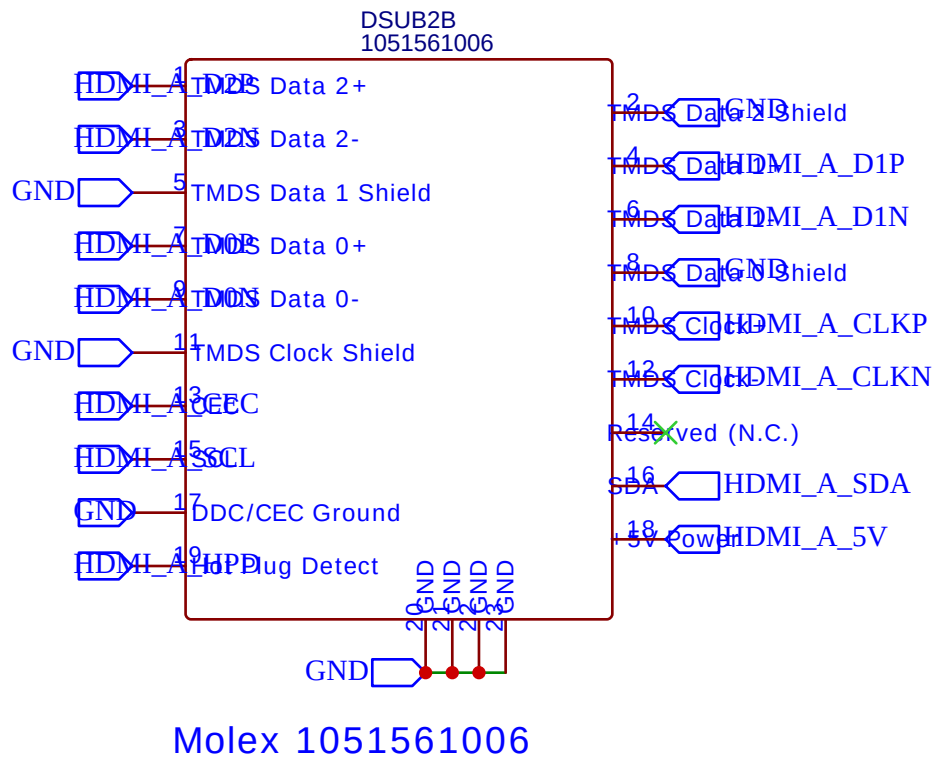


HDMI Components


HDMI Switch

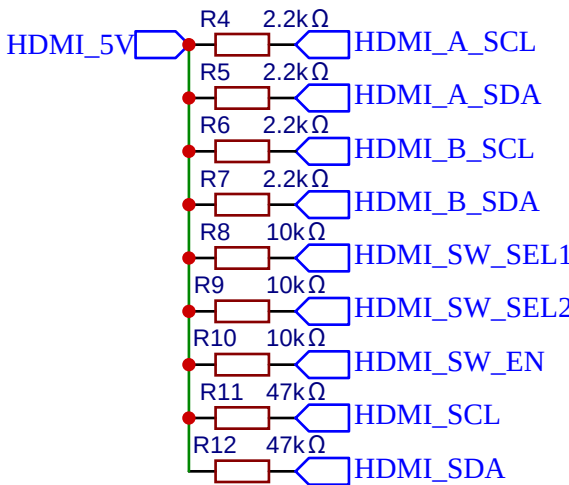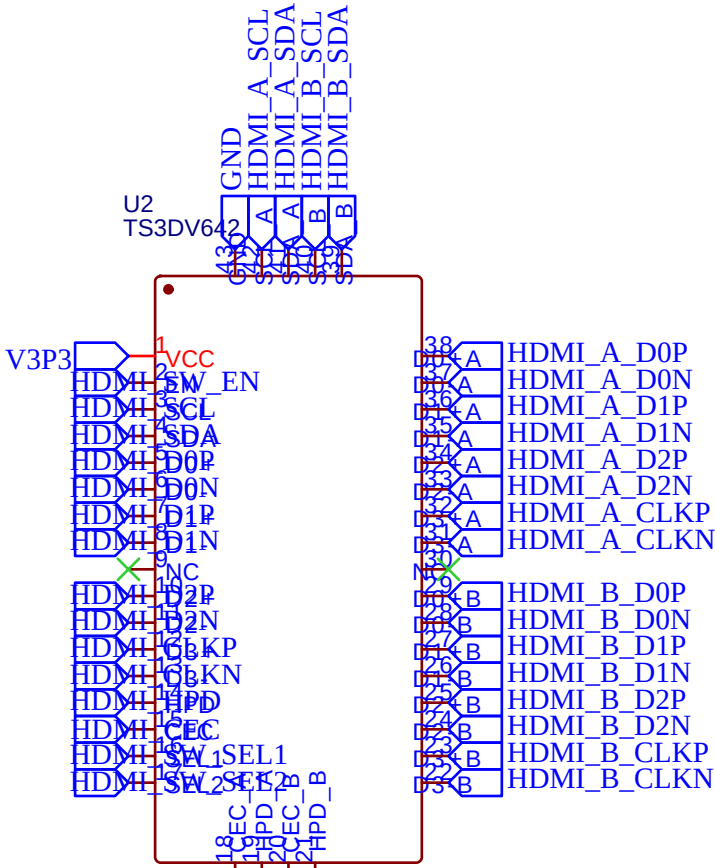


HDMI signal header for Pi adapter

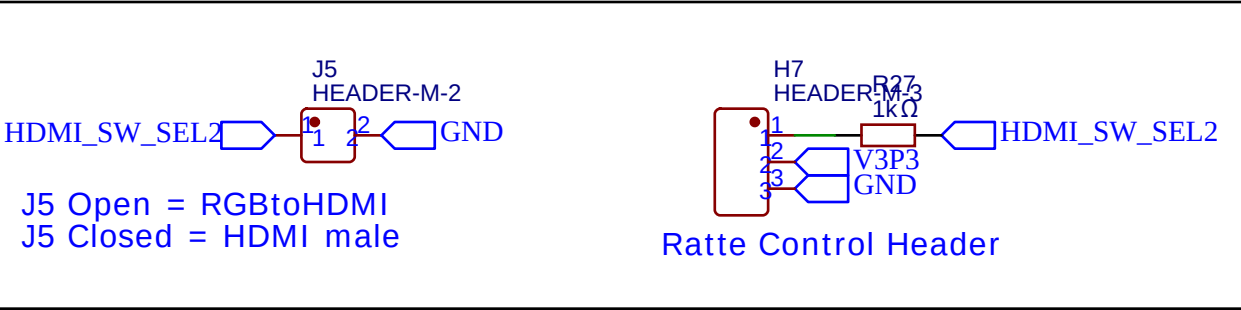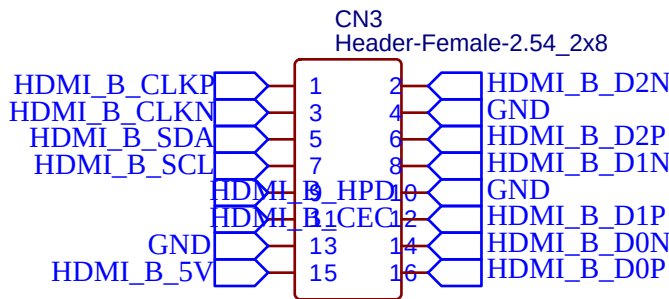


HDMI Female (rear)

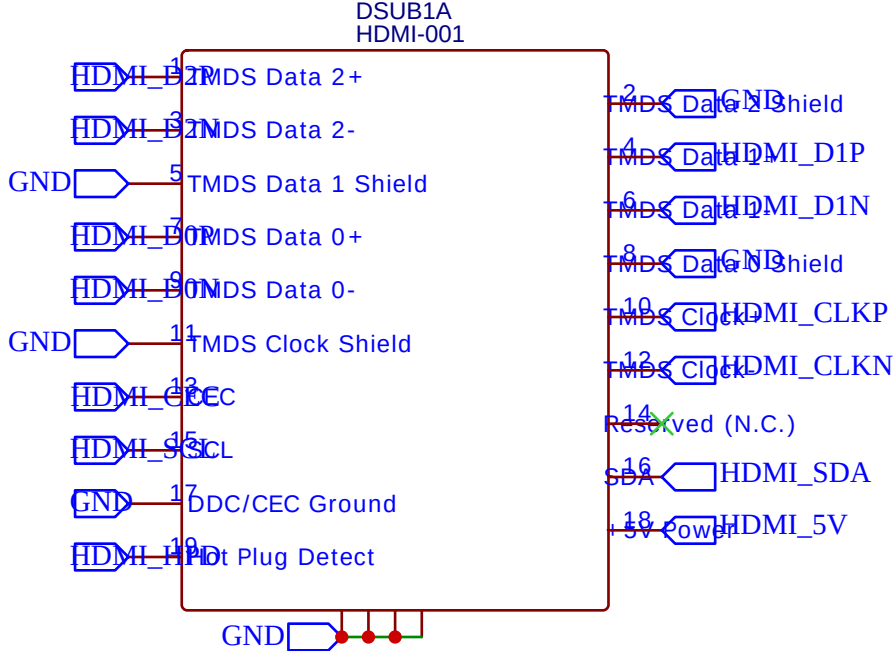


HDMI Female Raised (rear)

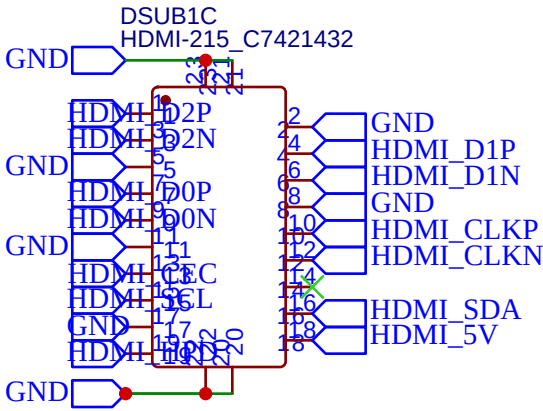

HDMI Female Raised (rear)

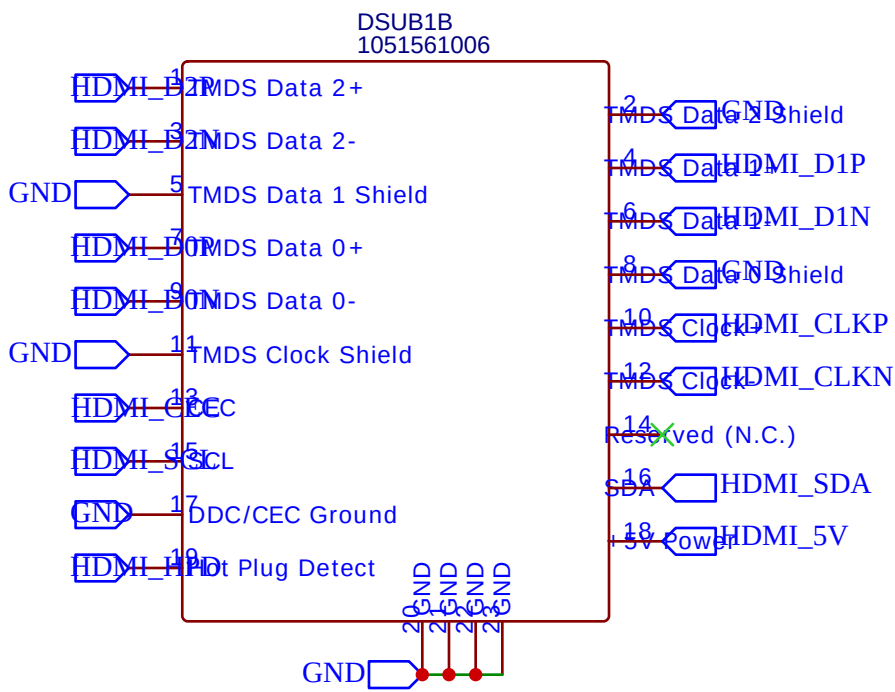


HDMI Female Raised (rear)

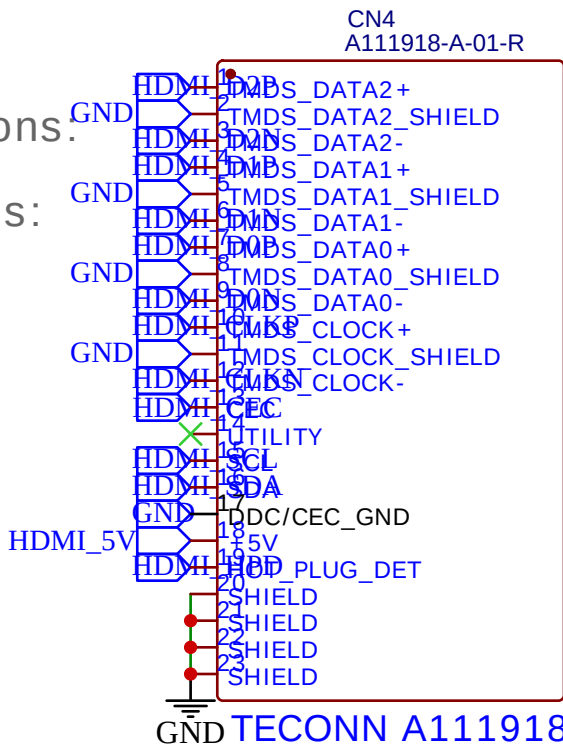

HDMI female inner dimensions:
14mm x 4.55mm
HDMI male outer dimensions:
13.90mm x 4.45mm

HDMI Male Edge

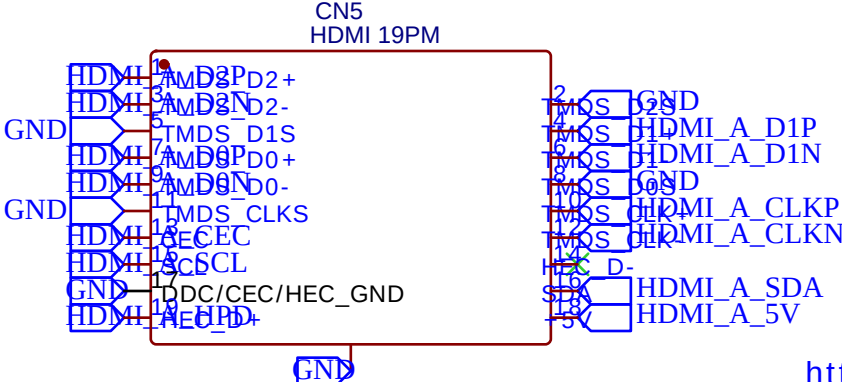


Possible HDMI Female Raised alternatives
<https://www.digikey.com/en/products/detail/molex/1051561006/4693413>
<https://www.digikey.com/en/products/detail/dlk-electronics/54519B021A1/24374855>
DLK has others, like 54519B02171 and 54519B04101, but I've not researched the differences.

Top of connector to SMD surface is 9.2mm
http://www.teconn.com.cn/products_content-5098170.html
Molex 105156-1006 appears compatible, available at Mouser

TITLE: HDMI connectors and switch		REV: 7.2
Company: eebugs.com		Sheet: 2/5
Date: 2026-06-28		Drawn By: cdhooper

Raspberry Pi connector and other options

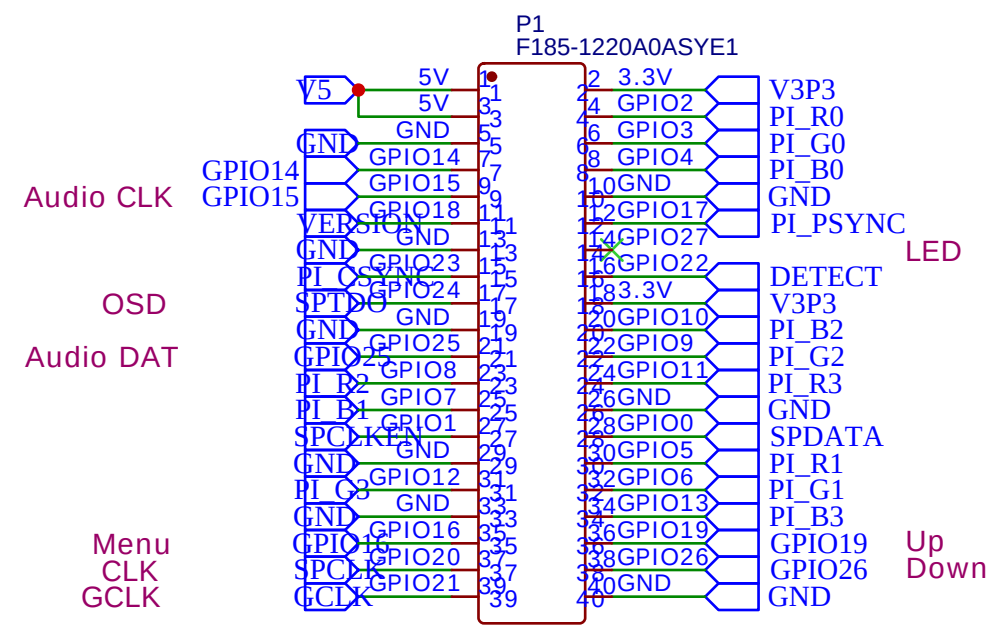

Could possibly use
1301-9503 C5479763, but untested.

https://www.ebay.com/itm/174341263942?_skw=C18725445
Tall right angle panel PCB Momentary Tactile button, 6x18x5445, but they might be too tall.
Maybe GT-TC102B-H065-L1

	GPIO	Short Press	Long Press	In Menu
Button1	GPIO16	OSD Menu	Toggle Scanlines	Select
Button2	GPIO26	Capture	Toggle Artifacts	Cursor Down / +
Button3	GPIO19	Genlock	Sample Calibrate	Cursor Up / -

HDMI Audio

Connect 1-2 on J1, J2, J3 for no Gotek OSD mode

Gotek OSD disabledGotek OSD Mode

U3P4 -> GPIO15R
U4P4 -> SPTDOR
U5P4 -> GPIO25R
BCK -> GPIO15R
U7P4 -> GPIO25R






There is probably no reason to ever set J4.

Might be able to use TI CD74HCT175M96 in place of the 3x flip-flops









From, the original RGBtoHD Audio board:
To change into One GPIO mode, cut the pcb bridges on jumpers JP2 (1-2), JP3 (2-3), JP4 (2-3) and JP5 (2-3) with a sharp knife. The best way is to dig the bridge out with the point of a type knife or possibly use a Dremel with a small grinding bit. Then make solder bridges on JP3 (1-2), JP4 (1-2) and JP5 (1-2) leaving JP2 open with no bridges at all. See below: (The changes are auto detected by the software and the connection type will be displayed on page 1 or in the system summary menu.)
On this board, always Jumper J1, J2, and J3 in the same manner.
For two GPIO mode (no FlashFloppy OSD), set J1, J2, and J3 to 1-2.
For single GPIO mode (FlashFloppy OSD), set J1, J2, and J3 to 2-3.

TITLE: Audio sampling		REV: 7.2
EasyEDA	Company: eebugs.com	Sheet: 4/5
	Date: 2026-06-26	Drawn By: cdhooper

STM32F103C8T6
72 MHz 32-bit ARM Cortex-M3
32 KB SRAM, 256KB Flash,
USB, ADC, USART, Timer

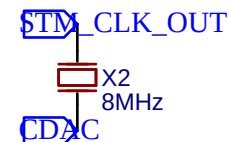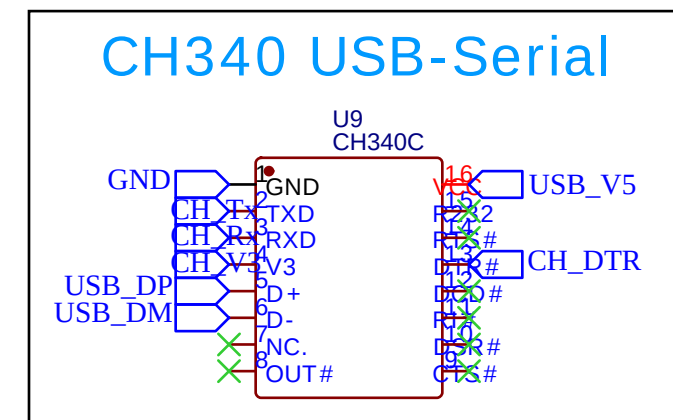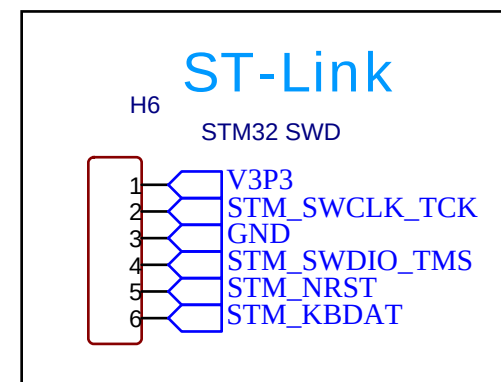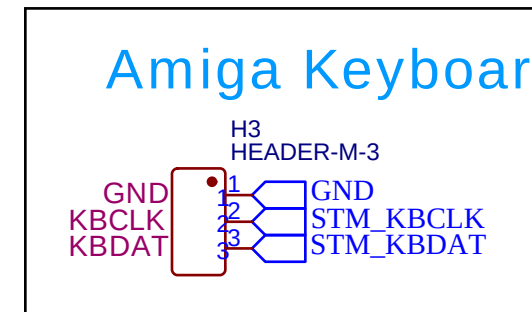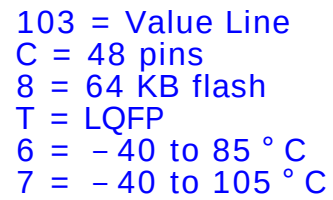

Amiga serial port snoop? Check for spare GPIO

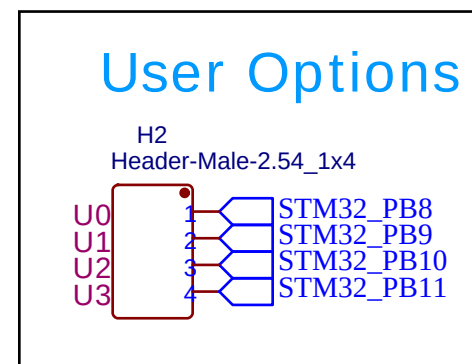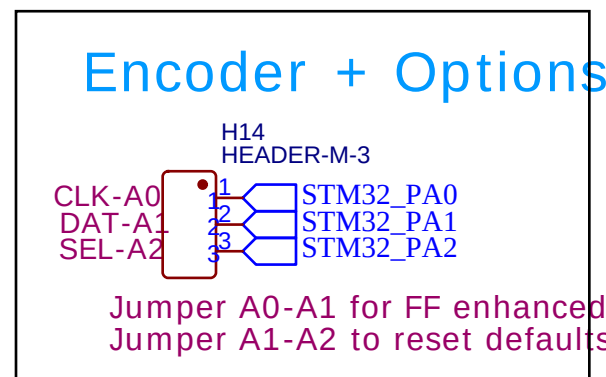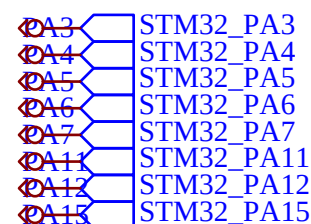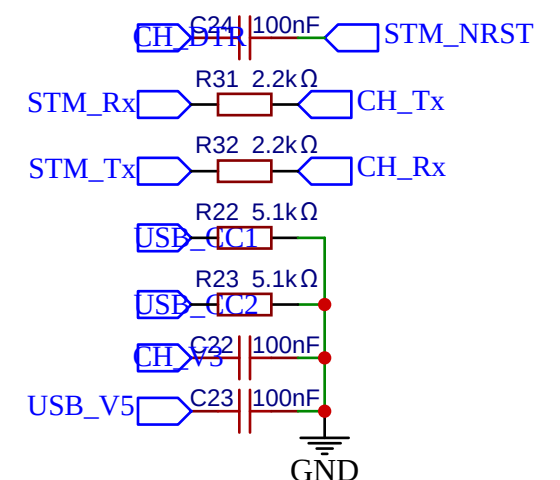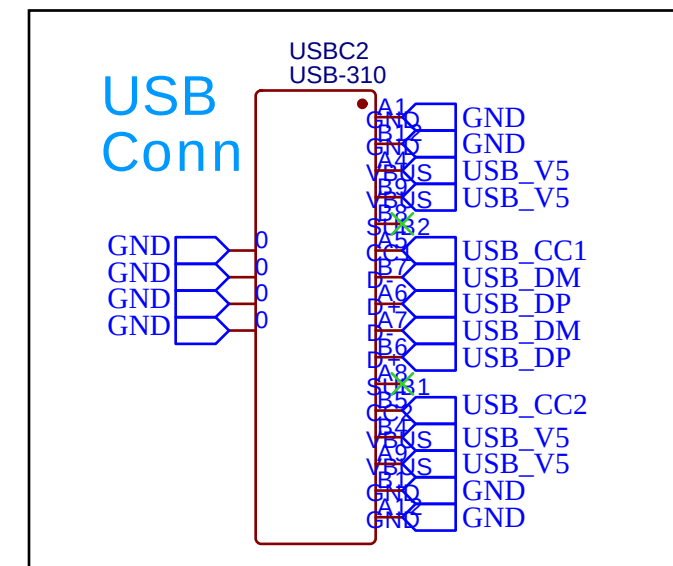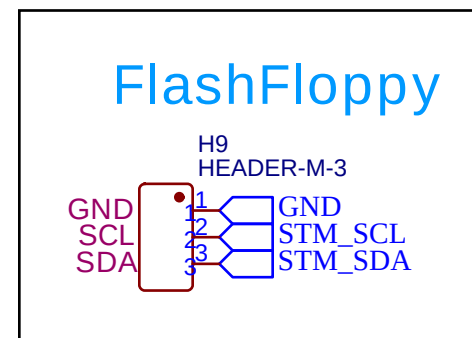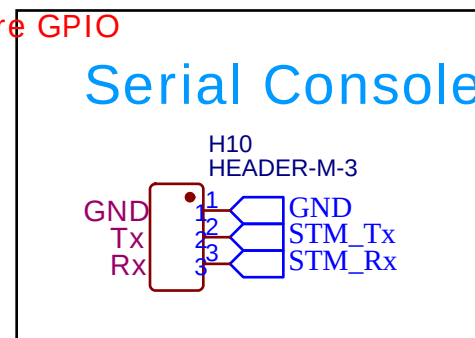

TITLE: Gotek OSD STM32 CPU		REV: 7.2
 EasyEDA	Company: eebugs.com	Sheet: 5/5
	Date: 2026-06-03 Drawn By: cdhooper	