HOW TO

# MR. COOL AC & HEAT UNIT

Don’t switch quickly between heat & cool, give it a few minutes.
Please turn off the unit when you’re out, thanks for helping us save energy!

1. Power On – Press the orange power button.

2. Choose Mode:

| Cool | Heat | Dry | Auto |
|---|---|---|---|
| 72° | 68° | 72° | 73° |

3. Set Temp – Use ▲/▼ arrows.

4. Fan Speed (Optional)
Press FAN to adjust.

5. Swing (Optional) – Press SWING for airflow movement.

6. Wait 1–3 minutes for warm/cool air.

**For Cooling**

Select Cool mode: Set temp to 72–75°F

**For Heating**

Select Heat mode:
Set temp to 68–72°F

Thirteen 4Six

HOW TO

# USE WASHER

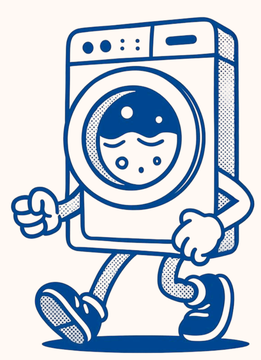

**Washer (Bottom Unit)**

1. Open Lid & Load Clothes – Don’t overfill.
2. Add Detergent – Liquid detergent has been provided.
3. Set Load Size – Small, Medium, or Large.
4. Choose Cycle – “Colors – Regular” works for most loads.
5. Start – Pull knob to begin wash.

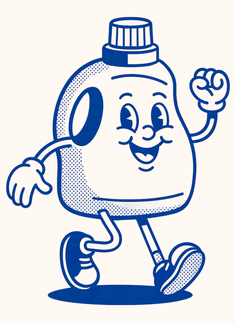

HOW TO

# USE DRYER

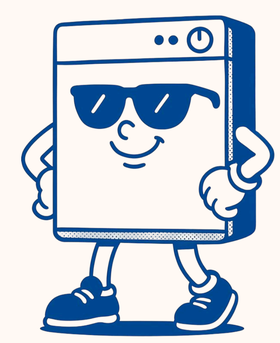

**Dryer (Top Unit)**

1. Move Clothes Up – To front-load dryer.
2. Clean Lint Filter – If full, remove lint and replace.
3. Set Heat & Time – Medium heat (Easy Care) for most. Turn timer knob to 40–60 mins.
4. 4. Start – It begins when you set the time.

Don’t overload either machine.
Check pockets before washing.
Always clean the dryer lint filter after use.

Thirteen 4Six