Remote Control instruction

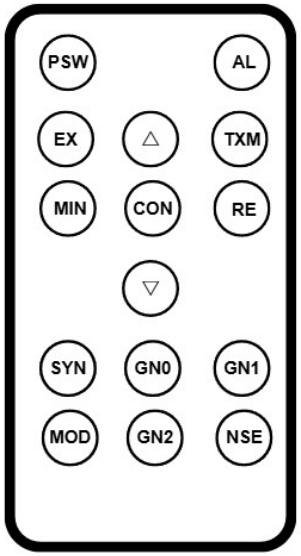

Important Notice

Do not adjust or configure the system yourself. Unauthorized changes may cause malfunctions or reduce detection performance. If any issues occur, contact our technical team first. Follow their instructions before using the remote controller to ensure safe operation.

Basic System Check

Before adjusting the system, please check the following:

1. Power on the device and make sure it starts normally.
2. Test with a security tag to see if the alarm works.
3. If there is false alarm or no alarm, check the environment first.

Possible interference sources:

- High-power electrical appliances
- Metal structures
- Walls close to the antennas
- Security tags placed near the system

It is recommended not to place tags or electrical devices within 1–2 meters of the system.

Parameter Functions

Remote Control – Power (Sensitivity) Adjustment

The remote control can only be used to adjust the system power (sensitivity).

Enter System Mode

Press **PSW**, the screen shows **P167**.
Press △ until **P168** appears, then press **CON** to confirm.
When **(-) flashes**, the system mode has been entered.
After adjusting parameters, press **CON** to **save** the settings.
Press **PSW** or **EX** to exit without saving.

Sensitivity Adjustment

Step 1 – Select Level (GN0)
Press **GN0**, then use △ / ▽ to choose the level:

- **0** – Low
- **1** – Medium *(Default)*
- **2** – High

Step 2 – Adjust Power (GN1)
Press **GN1**, then use △ / ▽ to adjust sensitivity.

- Range: **1 – 9**
  Default: **9 (Maximum)**

Adjustment order:

First set GN0 level, then adjust GN1 power.