ASSEMBLY DOCUMENT


PREPARED BY	CHECKED BY	APPROVED BY
Cemil Kendir	Gunes Kendir	Cemre Kendir

Revision Records

Rev. Code	Release Date	Changes
+	29.09.2026	First release

(c) 2022 by SCGC Elektronik A.S. All rights Reserved. No part of this document may be produced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of SCGC.

PAGE : TOP ASSEMBLY VIEW

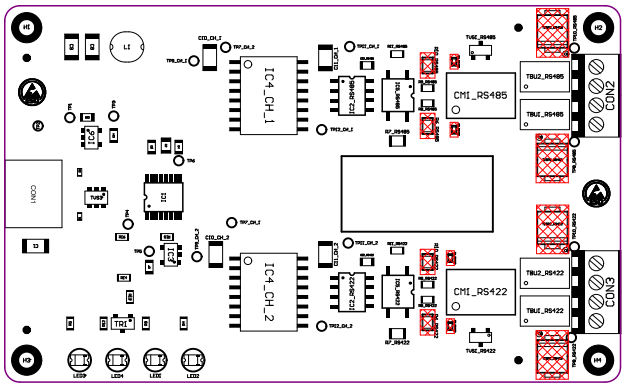

NOT1 Components highlighted in red will not be assembled (NC).

PAGE : TOP ASSEMBLY VIEW

		USB to RS485_RS422 Converter			
		ASSEMBLY DOCUMENT		**FO_PRJ_01101 _AA**	
		FO Doc.Rev	.pFoRevision	PBA Rev	AAAA
Haz/Prep	**Cemil Kendir**	FO Tarih/Date	.pFoDate	Scale	SCALE: 2.00
Kont/Check	**Gunes Kendir**	Ortam/Env	Altium Designer 23.9.2		
Onay/Appr	**Cemre Kendir**				

(c) 2022 by SCGC Elektronik A.S. All rights Reserved. No part of this document may be produced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of SCGC.

PAGE : BOTTOM ASSEMBLY VIEW




NOT1 Components highlighted in red will not be assembled (NC).

PAGE : BOTTOM ASSEMBLY VIEW

		USB to RS485_RS422 Converter			
		ASSEMBLY DOCUMENT		**FO_PRJ_01101 _AA**	
		FO Doc.Rev	.pFoRevision	PBA Rev	AAAA
Haz/Prep	**Cemil Kendir**	FO Tarih/Date	.pFoDate	Scale	SCALE: 2.00
Kont/Check	**Gunes Kendir**	Ortam/Env	Altium Designer 23.9.2		
Onay/Appr	**Cemre Kendir**				

(c) 2022 by SCGC Elektronik A.S. All rights Reserved. No part of this document may be produced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of SCGC.

PAGE : TOP THT ASSEMBLY VIEW

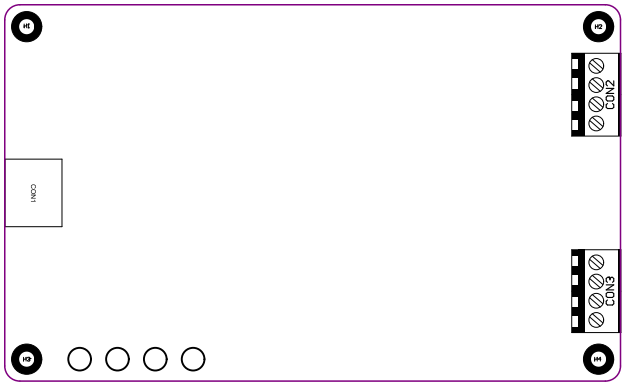

NOT1 Components highlighted in red will not be assembled (NC).

PAGE : TOP THT ASSEMBLY VIEW

		USB to RS485_RS422 Converter			
		ASSEMBLY DOCUMENT		**FO_PRJ_01101 _AA**	
		FO Doc.Rev	.pFoRevision	PBA Rev	AAAA
Haz/Prep	**Cemil Kendir**	FO Tarih/Date	.pFoDate	Scale	SCALE: 2.00
Kont/Check	**Gunes Kendir**	Ortam/Env	Altium Designer 23.9.2		
Onay/Appr	**Cemre Kendir**				

(c) 2022 by SCGC Elektronik A.S. All rights Reserved. No part of this document may be produced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of SCGC.

PAGE : BOTTOM THT ASSEMBLY VIEW




NOT1 Components highlighted in red will not be assembled (NC).

PAGE : BOTTOM THT ASSEMBLY VIEW

		USB to RS485_RS422 Converter			
		ASSEMBLY DOCUMENT		**FO_PRJ_01101 _AA**	
		FO Doc.Rev	.pFoRevision	PBA Rev	AAAA
Haz/Prep	**Cemil Kendir**	FO Tarih/Date	.pFoDate	Scale	SCALE: 2.00
Kont/Check	**Gunes Kendir**	Ortam/Env	Altium Designer 23.9.2		
Onay/Appr	**Cemre Kendir**				

(c) 2022 by SCGC Elektronik A.S. All rights Reserved. No part of this document may be produced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of SCGC.

PAGE : TOP CONFORMAL COATING MASK

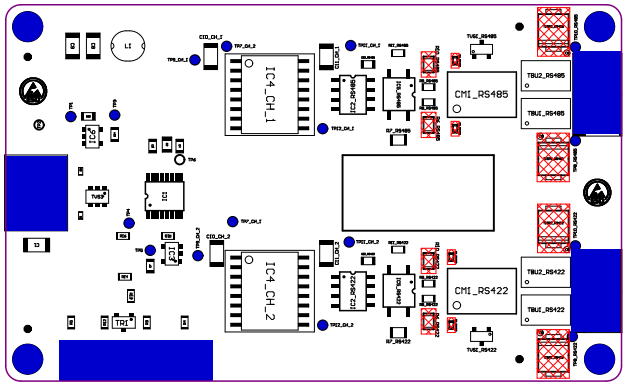

The areas highlighted in blue indicate the areas that must be masked during conformal coating.

NOT1 Components highlighted in red will not be assembled (NC).

PAGE : TOP CONFORMAL COATING MASK

		USB to RS485_RS422 Converter			
		ASSEMBLY DOCUMENT		**FO_PRJ_01101 _AA**	
		FO Doc.Rev	.pFoRevision	PBA Rev	AAAA
Haz/Prep	**Cemil Kendir**	FO Tarih/Date	.pFoDate	Scale	SCALE: 2.00
Kont/Check	**Gunes Kendir**	Ortam/Env	Altium Designer 23.9.2		
Onay/Appr	**Cemre Kendir**				

(c) 2022 by SCGC Elektronik A.S. All rights Reserved. No part of this document may be produced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of SCGC.

PAGE : BOTTOM CONFORMAL COATING MASK



The areas highlighted in blue indicate the areas that must be masked during conformal coating.


NOT1 Components highlighted in red will not be assembled (NC).

PAGE : BOTTOM CONFORMAL COATING MASK

		USB to RS485_RS422 Converter			
		ASSEMBLY DOCUMENT		**FO_PRJ_01101 _AA**	
		FO Doc.Rev	.pFoRevision	PBA Rev	AAAA
Haz/Prep	**Cemil Kendir**	FO Tarih/Date	.pFoDate	Scale	SCALE: 2.00
Kont/Check	**Gunes Kendir**	Ortam/Env	Altium Designer 23.9.2		
Onay/Appr	**Cemre Kendir**				

(c) 2022 by SCGC Elektronik A.S. All rights Reserved. No part of this document may be produced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of SCGC.

PAGE : TOP ECOBOND APPLICATION

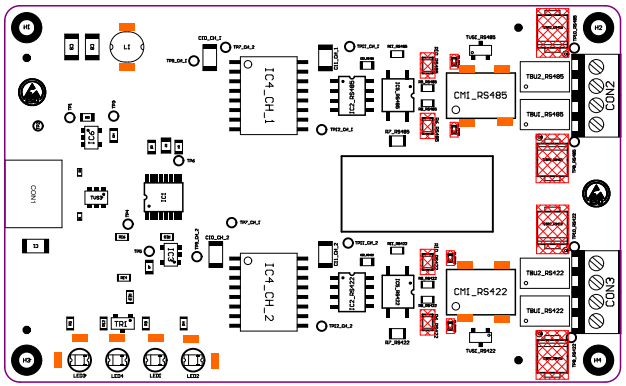

The areas highlighted in orange indicate where Ecobond should be applied.

NOT1 Components highlighted in red will not be assembled (NC).

PAGE : TOP ECOBOND APPLICATION

		USB to RS485_RS422 Converter			
		ASSEMBLY DOCUMENT		**FO_PRJ_01101 _AA**	
		FO Doc.Rev	.pFoRevision	PBA Rev	AAAA
Haz/Prep	**Cemil Kendir**	FO Tarih/Date	.pFoDate	Scale	SCALE: 2.00
Kont/Check	**Gunes Kendir**	Ortam/Env	Altium Designer 23.9.2		
Onay/Appr	**Cemre Kendir**				

(c) 2022 by SCGC Elektronik A.S. All Rights Reserved. No part of this document may be produced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of SCGC.

PAGE : BOTTOM ECOBOND APPLICATION



The areas highlighted in orange indicate where Ecobond should be applied.


NOT1 Components highlighted in red will not be assembled (NC).

PAGE : BOTTOM ECOBOND APPLICATION

		USB to RS485_RS422 Converter			
		ASSEMBLY DOCUMENT		**FO_PRJ_01101 _AA**	
		FO Doc.Rev	.pFoRevision	PBA Rev	AAAA
Haz/Prep	**Cemil Kendir**	FO Tarih/Date	.pFoDate	Scale	SCALE: 2.00
Kont/Check	**Gunes Kendir**	Ortam/Env	Altium Designer 23.9.2		
Onay/Appr	**Cemre Kendir**				

(c) 2022 by SCGC Elektronik A.S. All rights Reserved. No part of this document may be produced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of SCGC.

PAGE : TOP ARALDITE APPLICATION

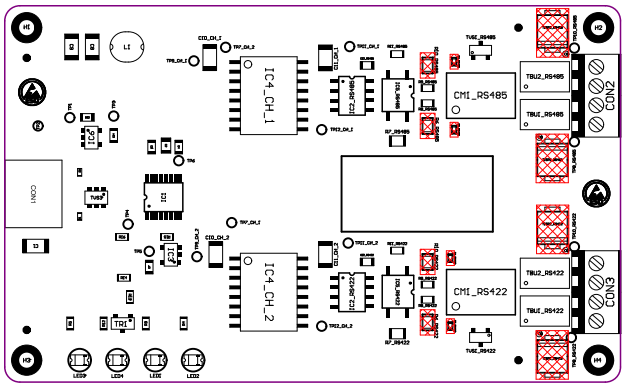

The areas shaded in green are the areas where araldite should be applied.

NOT1 Components highlighted in red will not be assembled (NC).

PAGE : TOP ARALDITE APPLICATION

		USB to RS485_RS422 Converter			
		ASSEMBLY DOCUMENT		**FO_PRJ_01101 _AA**	
		FO Doc.Rev	.pFoRevision	PBA Rev	AAAA
Haz/Prep	**Cemil Kendir**	FO Tarih/Date	.pFoDate	Scale	SCALE: 2.00
Kont/Check	**Gunes Kendir**	Ortam/Env	Altium Designer 23.9.2		
Onay/Appr	**Cemre Kendir**				

(c) 2022 by SCGC Elektronik A.S. All rights Reserved. No part of this document may be produced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of SCGC.

PAGE : BOTTOM ARALDITE APPLICATION



The areas shaded in green are the areas where araldite should be applied.


NOT1 Components highlighted in red will not be assembled (NC).

PAGE : BOTTOM ARALDITE APPLICATION

		USB to RS485_RS422 Converter			
		ASSEMBLY DOCUMENT		**FO_PRJ_01101 _AA**	
		FO Doc.Rev	.pFoRevision	PBA Rev	AAAA
Haz/Prep	**Cemil Kendir**	FO Tarih/Date	.pFoDate	Scale	SCALE: 2.00
Kont/Check	**Gunes Kendir**	Ortam/Env	Altium Designer 23.9.2		
Onay/Appr	**Cemre Kendir**				

(c) 2022 by SCGC Elektronik A.S. All rights Reserved. No part of this document may be produced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of SCGC.

PAGE : TOP JUMPER WIRE ROUTING

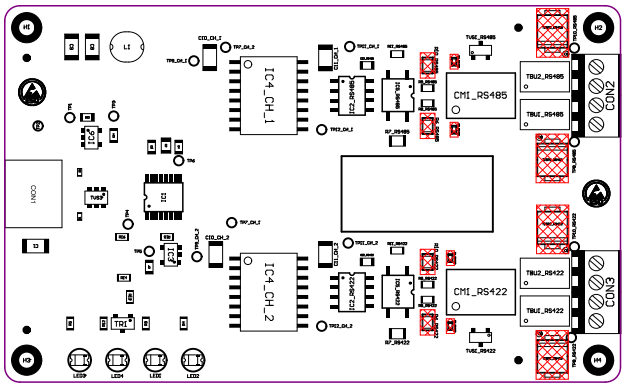

The traces shown in purple are implemented using jumper wires

NOT1 Components highlighted in red will not be assembled (NC).

PAGE : TOP JUMPER WIRE ROUTING

		USB to RS485_RS422 Converter			
		ASSEMBLY DOCUMENT		**FO_PRJ_01101 _AA**	
		FO Doc.Rev	.pFoRevision	PBA Rev	AAAA
Haz/Prep	**Cemil Kendir**	FO Tarih/Date	.pFoDate	Scale	SCALE: 2.00
Kont/Check	**Gunes Kendir**	Ortam/Env	Altium Designer 23.9.2		
Onay/Appr	**Cemre Kendir**				

(c) 2022 by SCGC Elektronik A.S. All rights Reserved. No part of this document may be produced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of SCGC.

PAGE : BOTTOM JUMPER WIRE ROUTING



The traces shown in purple are implemented using jumper wires

NOT1 Components highlighted in red will not be assembled (NC).

PAGE : BOTTOM JUMPER WIRE ROUTING

		USB to RS485_RS422 Converter			
		ASSEMBLY DOCUMENT		**FO_PRJ_01101 _AA**	
		FO Doc.Rev	.pFoRevision	PBA Rev	AAAA
Haz/Prep	**Cemil Kendir**	FO Tarih/Date	.pFoDate	Scale	SCALE: 2.00
Kont/Check	**Gunes Kendir**	Ortam/Env	Altium Designer 23.9.2		
Onay/Appr	**Cemre Kendir**				

(c) 2022 by SCGC Elektronik A.S. All rights Reserved. No part of this document may be produced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of SCGC.