

CA378-AOIS_USB3-IFB FW Update Procedure

CenturyArks Co., Ltd.

2024/08/07

Version 2.0.0

Table of Contents

1. Software download procedure
2. FW update procedure

1.1. Download

Download the following binary file.

FW update application

https://github.com/centuryarks/CA378-AOIS_USB3-IFB/releases/download/v2.0.0_release/FW_Updater_v2.0.0.zip


FW image file

https://github.com/centuryarks/CA378-AOIS_USB3-IFB/releases/download/v2.0.0_release/Cx3Rgb24IMX378_v2.0.0.img

2. FW update procedure


2.1. Advance preparation

The folder structure of the unzipped FW_Updater_v2.0.0.zip downloaded from GitHub is as follows.

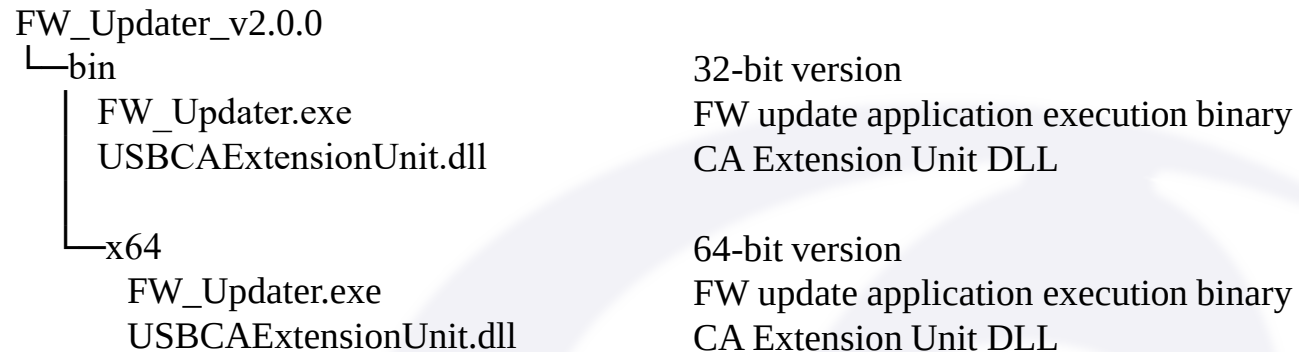

Copy the FW image file to the same folder as the FW update application executable binary.

Example: When updating FW using a 64-bit FW update application

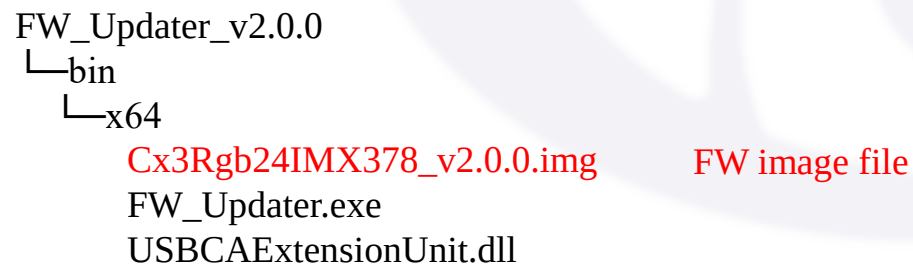

2.2. USB cable connection

Connect the USB cable and check that "USBCA-378" is recognized under Camera in Device Manager.

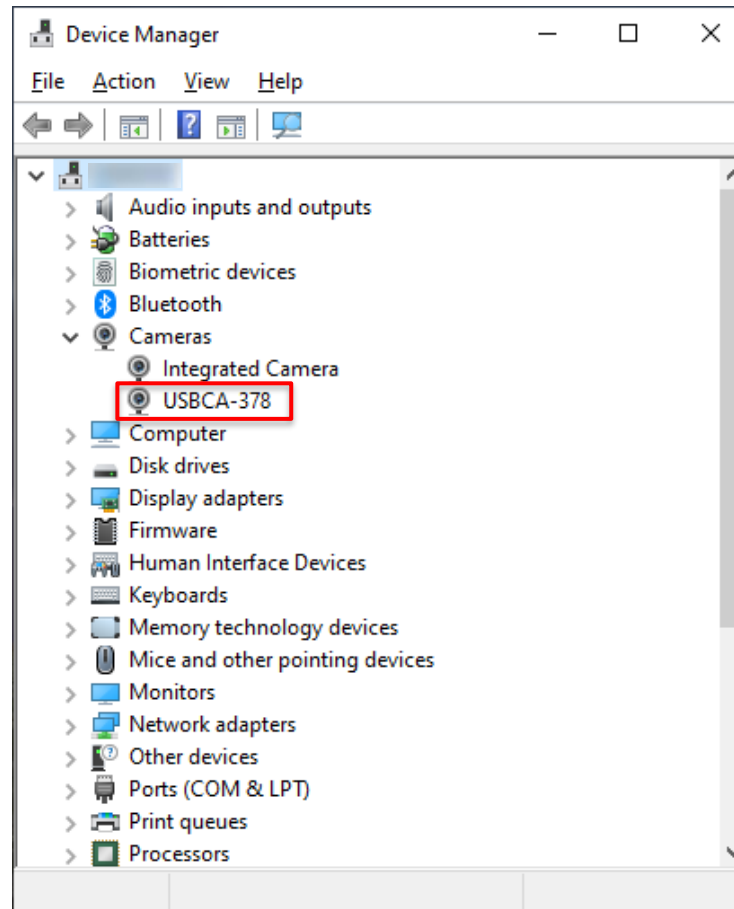


Figure 2.2. Device Manager screen

2. FW update procedure

2.3. Double-click FW_Updater.exe to start the FW update application (console app).

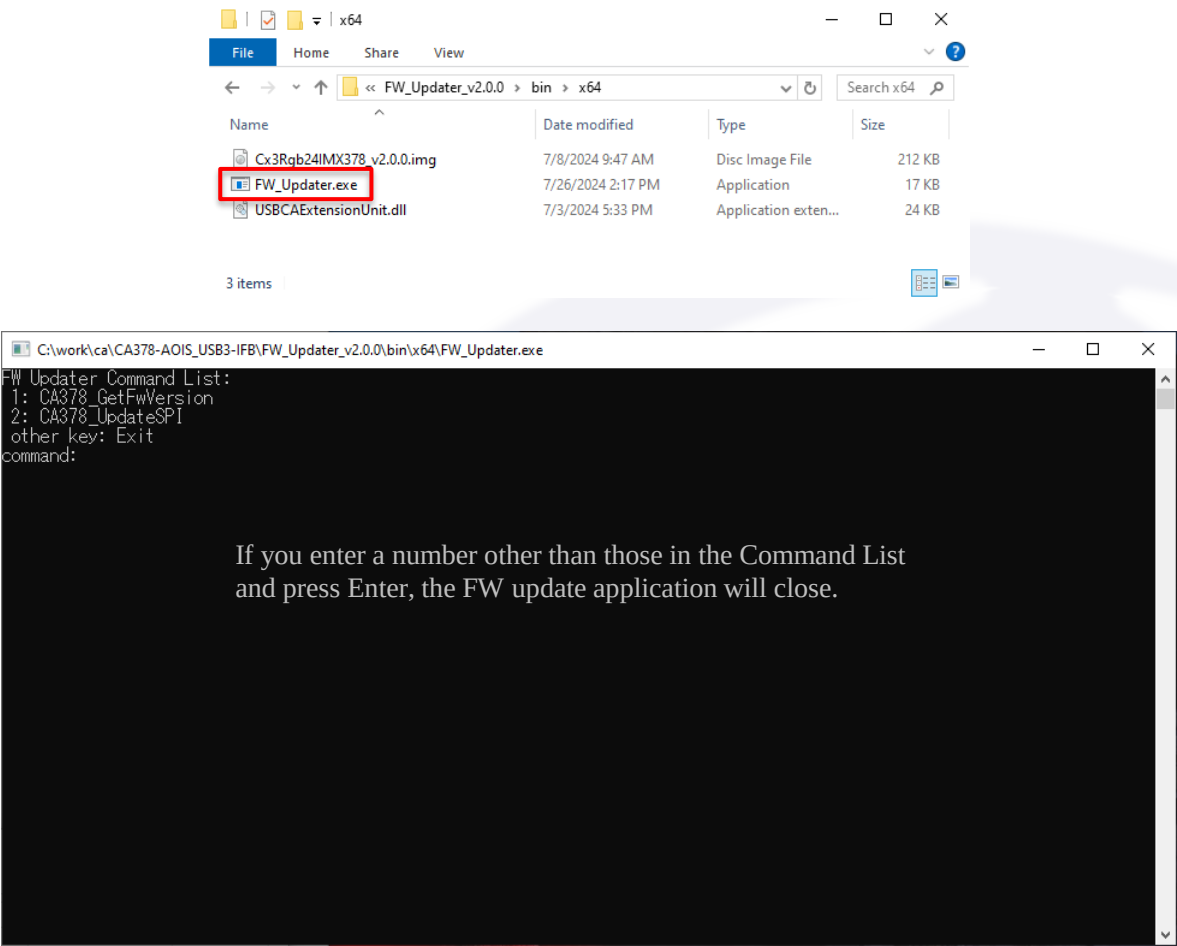


Figure 2.3. FW update application displayed on the command prompt

2.4. Enter the number 2 of Command List 2: CA378_UpdateSPI and press Enter.

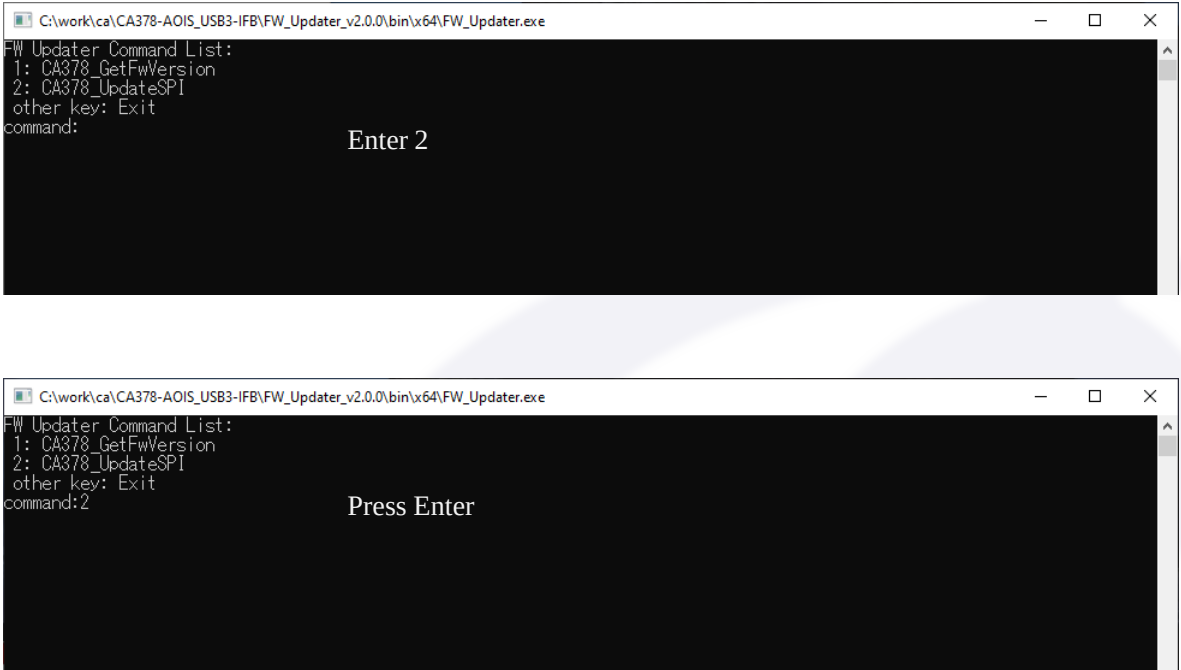


Figure 2.4. 2: Starting CA378_UpdateSPI

2.5. Enter the number of the FW image you want to update from the Image List and press Enter.

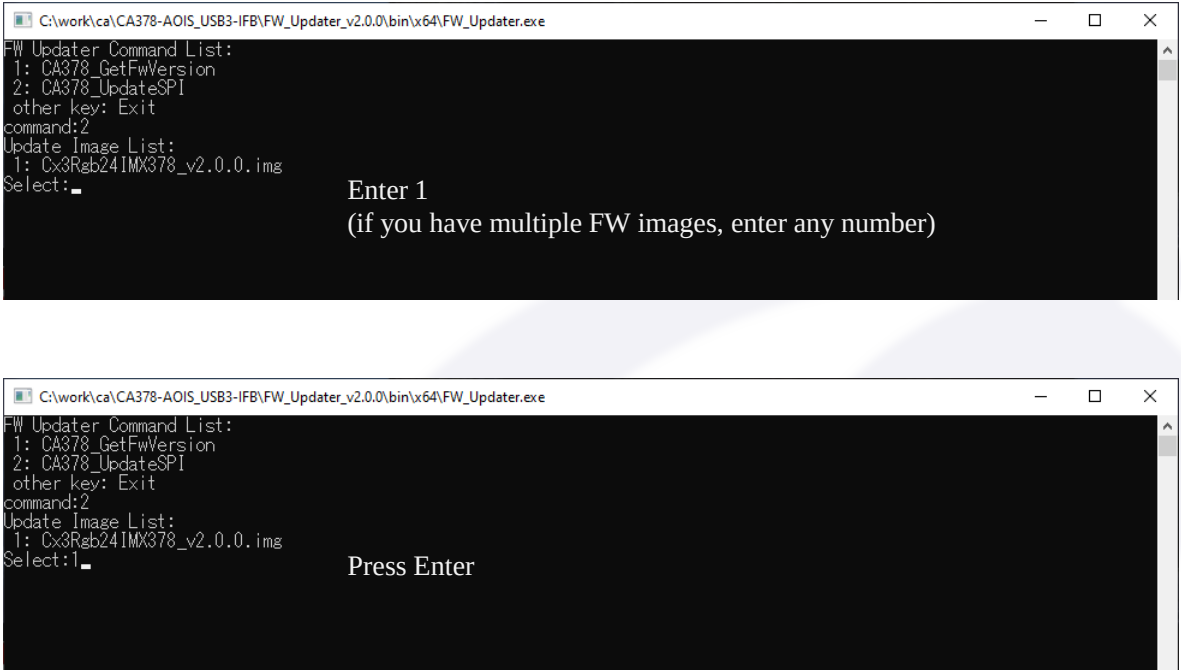


Figure 2.5. 2: FW image selection

2.6. Wait until the FW image writing is complete, and then press Enter.

***Do not unplug the USB cable until the firmware writing is complete, as this may cause the system to fail to boot.**

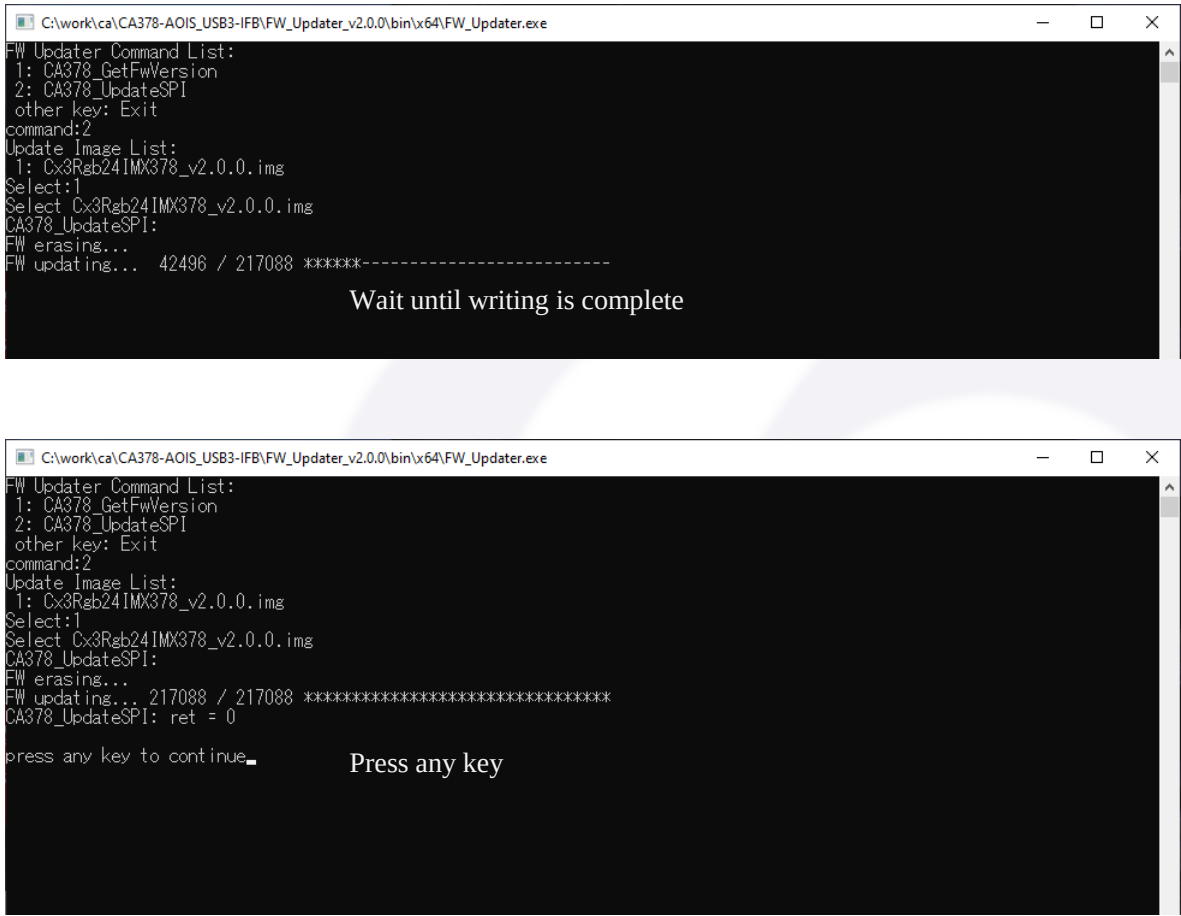


Figure 2.6. 2: Running CA378_UpdateSPI

2.7. After writing the FW image, unplug and plug in the USB cable and check the FW version.

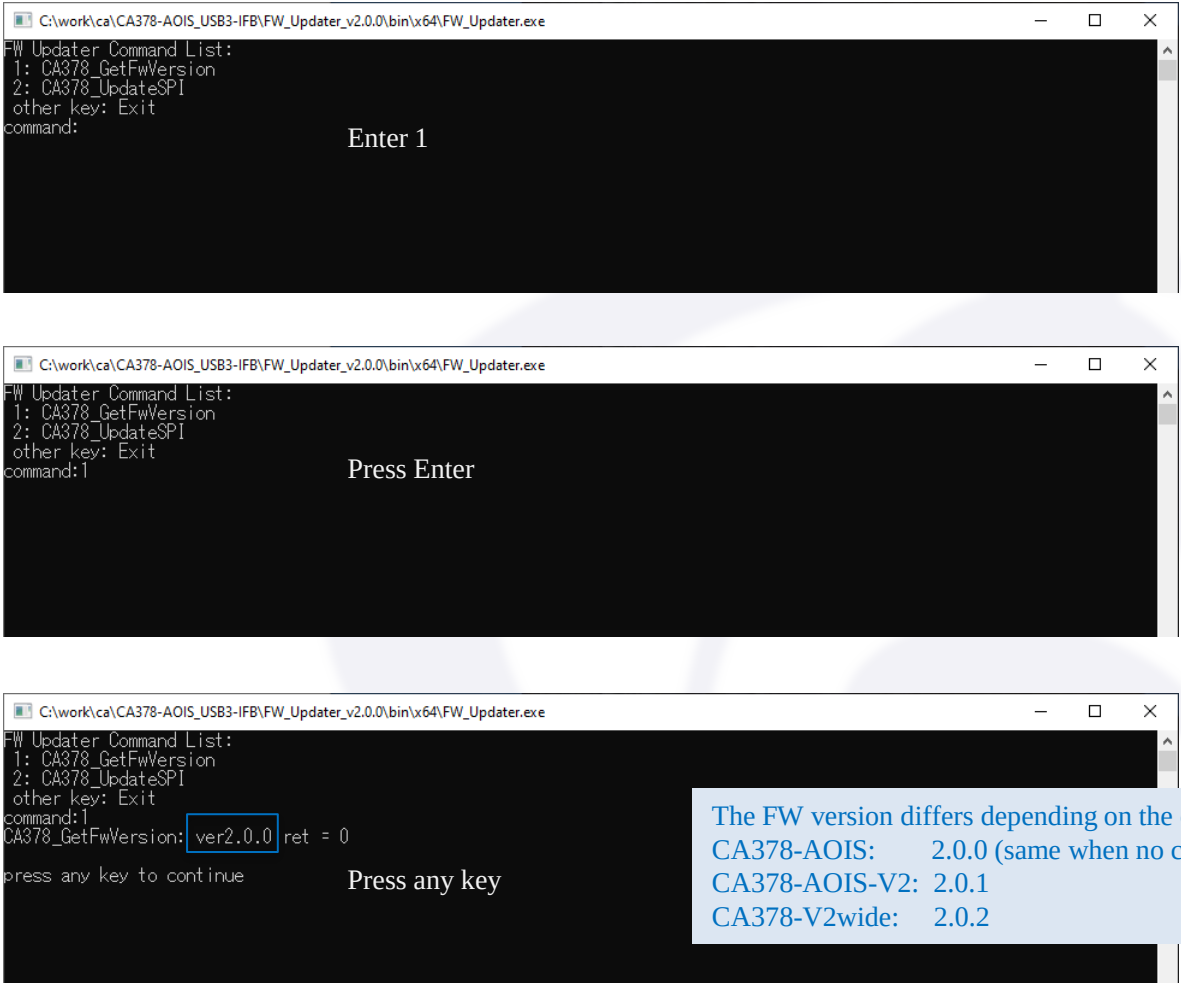


Figure 2.7. 1: Executing CA378_GetFwVersion