
Yowler 1page Guide:

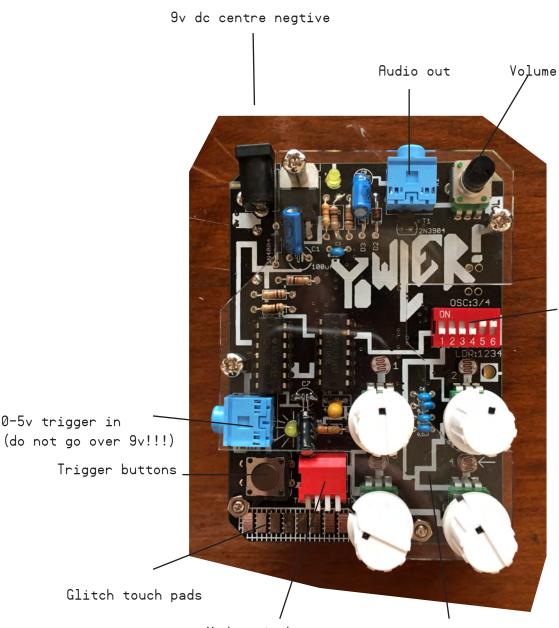

Oscilator switches:

1.osc1 LDR on/off

2.osc2 LDR on/off

3.osc3 LDR on/off

4.osc4 LDR on/off

5.osc3 on/off

6.osc4 on/off

Mode switches:

1.trigger on/off

2.triger decay on/off

3.filter on/off

4.mono/sterio output

Pitch knobs for:

osc1 osc2

osc3 osc4