



DZMS Web Client Quick Start Guide

For software version DZMS 4.x

Nov, 2023 Part Number: 830-04135-08



DZS
Global Headquarters
Plano, TX, USA
info@dzsi.com
www.dzsi.com/contact-us/

COPYRIGHT C2000-2023 DZS and its licensors.

All rights reserved.

No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language in any form or by any means, electronic, mechanical, magnetic, manual, or otherwise, or disclosed to third parties without the express written permission from DZS. DZS, the DZS logo, and all DZS product names are trademarks of DZS Inc. Other brand and product names are trademarks of their respective holders. Specifications, products, and/or product names are all subject to change. DZS makes no representation or warranties with respect to the contents hereof and specifically disclaim any implied warranties of merchantability, non-infringement, or fitness for a particular purpose. Further, DZS reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of DZS to notify any person of such revision or changes.

Chapter 1	DZMS Web Client Overview	1
	Contacting DZS Global Support and Service	2
Chapter 2	DZMS Web Client Quick Start Procedures	3
	Getting Started	4
	Adding a Device	9
	Provisioning Examples	10
	Types of Provisioning.....	10
	Provisioning Examples with Existing Service Group.....	19
	Provisioning Examples with New Service Group	23
	Managing Services on a Single ONU/Ethernet Port.....	32
	Managing Upstream/ Downstream	37
	Deleting Multiple Services from Multiple ONUs/Ethernet Ports	40
	Creating/Defining Services and Advanced Services	41
	Templates Based Provisioning Model	41
	Services and Service Groups	42
	Basic Services and Templates	46
	Advanced Services.....	49
	Advanced Service Templates.....	51

1

CHAPTER 1 DZMS WEB CLIENT OVERVIEW

The DZMS Web Client provides a browser based means for accessing and provisioning PON(GPON and XGS-PON) and ActiveEthernet services. This Quick Start Guide shows how to add a device, gives multiple provisioning examples, and discusses provisioning options, service group creation, and the templates based model used in the DZMS Web Client, including procedures.



1-1 CONTACTING DZS GLOBAL SUPPORT AND SERVICE

DZS is building the networks of the future. By leveraging our online resources and global support team, we are committed to delivering world-class technical and product support 24/7, when customers need it. To contact DZS Customer Support, please visit

<https://dzsi.com/support/support-center>

2

CHAPTER 2 DZMS WEB CLIENT QUICK START PROCEDURES

This chapter describes how to provision Passive Optical Network (PON) and ActiveEthernet (AE) services with DZMS Web Client. It includes:

- [Getting Started, pg 4](#)
- [Adding a Device, pg 9](#)
- [Provisioning Examples, pg 10](#)
- [Managing Services on a Single ONU/Ethernet Port, pg 32](#)
- [Managing Upstream/ Downstream, pg 37](#)
- [Deleting Multiple Services from Multiple ONUs/Ethernet Ports, pg 40](#)
- [Creating/Defining Services and Advanced Services, pg 41](#)


2-1 GETTING STARTED

- [Changing the Admin Password, pg 4](#)
- [Adding New Users, pg 5](#)
- [Activating Users, pg 6](#)
- [Adding Permission Groups, pg 7](#)
- [Defining Permissions for Users, pg 8](#)
- [Viewing Permissions Matrix for Users, pg 8](#)

Changing the Admin Password

To change the admin password, you must be logged in as the admin. By default, the password for the admin user is DZSone23!.

- 1 Toward the right side of the top banner, click **Change password**.

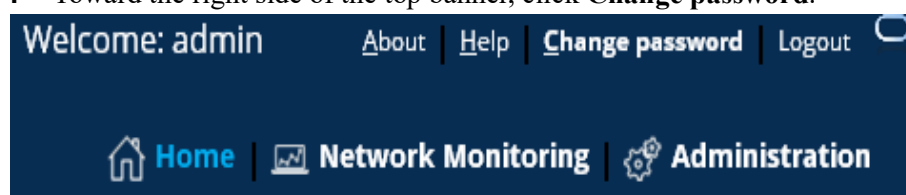

- 2 Enter the current password in the **Current Password** text box.

Change Password for admin

OKCancel

* Current Password

* New Password

* Confirm Password

Password Rules

The minimum password length is : : 4
The maximum password length is : : 16
The valid character set is : A-Z,a-z,0-9.
The valid special character set is : !#\$%&'()*+,-./:;?@[\\]^_`{|}~

- 3 Following the **Password Rules** on the bottom of the page enter a new password in the **New Password** text box, then enter the same password in the **Confirm Password** text box and click **OK**.

Adding New Users

To add new users, you must be logged in as the admin or have administrator privileges.

- 1 Click the **Administration** button in the top banner (or the **ADMINISTRATION** graphic/link from the home page).

- 2 Click **Create New User** button at the top right of the screen.
- 3 Add the appropriate information in the Name, Display Name, and Email Address text boxes.
- 4 Select Yes or not in the **OSS Gateway User** field.
- 5 In the **Account Status** drop down select Active (to activate the user account immediately) or Inactive (to activate the user account at a later time).

See [Activating Users, pg 6](#) for an example.

- 6 From the **Assign Permission Groups** section select and move permission groups (defined privileges) from the **Available Permission Groups** window to the **Selected Permission Groups** window.

See [Adding Permission Groups, pg 7](#) for an example.

- 7 Click **Save**.

Activating Users

To activate a user, you must be logged in as the admin or have administrator privileges.

- 1 Click the **Administration** button in the top banner (or the **ADMINISTRATION** graphic/link from the home page).
- 2 Click the **User and Groups** tab and then the **Users** tab. You can search for the user by any of the attributes for the user account (Name, Account Status, Display Name, Email Address).

The screenshot shows the 'Users and Groups' interface. At the top, there are tabs: 'Users and Groups', 'User Permission Matrix', 'Security Configuration', 'ZMS Properties', 'License', 'Logging', 'Video Channel Information', 'Performance Monitoring', and 'HA Monitoring'. The 'Users and Groups' tab is selected, and the 'Users' sub-tab is active. Below the tabs, there is a search bar and a table of users. The table has columns: Name, Account Status, Display Name, and Email Address. The users listed are: lbarrington (Active, Lonnie Barrington, lonnie.barrington@dzsi.com), readonly (Active), George Sample (Active, George Sample, gsample@sample.com), test (Active), and test2 (Active). Below the table, there is a section for 'Assigned Permission Groups of Selected User' and 'Assigned Permissions of Selected Group'. The 'Assigned Permission Groups of Selected User' section shows a list of groups: Reports, Network Elements. The 'Assigned Permissions of Selected Group' section shows a table with columns: Permission, Description. The permissions listed are: REPORTS APP, Reports App/Menu Access.


- 3 Click the link for the **Name** of the user account you wish to edit.
- 4 Change the **Account Status** drop down to Active.

The screenshot shows the 'Settings for User: George Sample' form. At the top, there are tabs: 'Users and Groups', 'User Permission Matrix', 'Security Configuration', 'ZMS Properties', 'License', and 'Users'. The 'Users' tab is selected, and the 'Users' sub-tab is active. Below the tabs, there is a search bar and a table of users. The user 'George Sample' is selected. Below the table, there is a section for 'Assigned Permission Groups of Selected User' and 'Assigned Permissions of Selected Group'. The 'Assigned Permission Groups of Selected User' section shows a list of groups: Reports, Network Elements. The 'Assigned Permissions of Selected Group' section shows a table with columns: Permission, Description. The permissions listed are: REPORTS APP, Reports App/Menu Access.


- 5 Click **Save**.

Adding Permission Groups

To create a new Permission Group, you must be logged in as the admin or have administrator privileges.

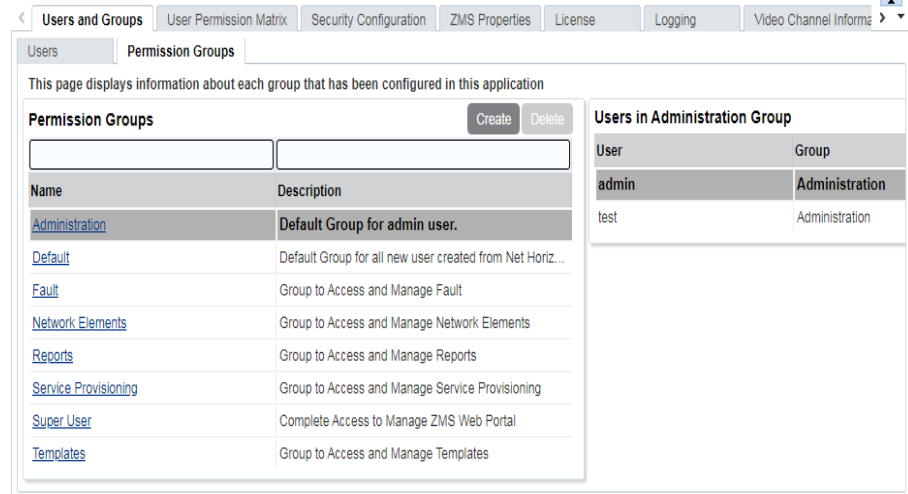

- 1 Click the **Administration** button in the top banner (or the **ADMINISTRATION** graphic/link from the home page).
- 2 Click the **User and Groups** tab and then the **Permission Groups** tab.
- 3 Click **Create**.

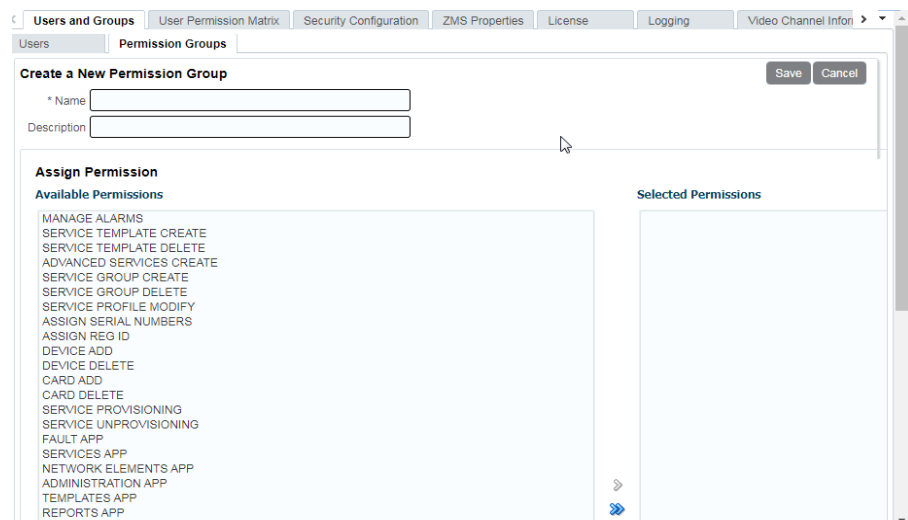

- 4 Specify **Name** for the group.
- 5 (Optional) Specify **Description** for this group.
- 6 From the **Assign Permission** section select and move permissions (set of defined privileges) from the **Available Permissions** window to the **Selected Permissions** window. Each permission is described in the right pane of the window.

7 Click Save.

Defining Permissions for Users

To define permissions for a user, you must be logged in as the admin or have administrator privileges.

- 1 Click the **Administration** button in the top banner (or the **ADMINISTRATION** graphic/link from the home page).
- 2 Click the **User and Groups** tab and then the **Users** tab. You can search for the user by any of the attributes for the user account (Name, Account Status, Display Name, Email Address).
- 3 Click the link for the **Name** of the user account.
- 4 Click on the **Membership Groups** tab.
- 5 Select and move permissions (set of defined privileges) from the **Available** window to the **Selected** window.
- 6 Click **Save**.

Viewing Permissions Matrix for Users

To view permissions for all users:

- 1 Click the **Administration** button in the top banner (or the **ADMINISTRATION** graphic/link from the home page).
- 2 Click the **User Permission Matrix** tab.

<

Users and Groups

User Permission Matrix

Security Configuration

ZMS Properties

License

Logging

Video Channel Information

>

User Permissions

Reset


		ADMINISTRATION APP CARD ADD CARD DELETE DEVICE ADD DEVICE DELETE NETWORK ELEMENTS A... REPORTS APP ADVANCED SERVICES CREATE ASSIGN REG ID ASSIGN SERIAL NUMBERS FAULT APP MANAGE ALARMS SERVICE GROUP CREATE SERVICE GROUP DELETE SERVICE PROFILE MODI... SERVICE PROVISIONING SERVICE TEMPLATE CREATE SERVICE TEMPLATE DELETE SERVICES APP TEMPLATES APP																					
admin		<	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
George Sample	George Sample	—	<	<	<	<	<	<	—	—	—	—	—	—	—	—	—	—	—	—	—	—	

2-2 ADDING A DEVICE

Adding a Device


To add a device, you must be using an account with administrative privileges.

- 1 Click **Network Elements** in the banner at the top of the screen (or the **NETWORK ELEMENTS** graphic/link from the home page).
- 2 Right click **Network Elements** in the left hand pane and select **Add Device**.

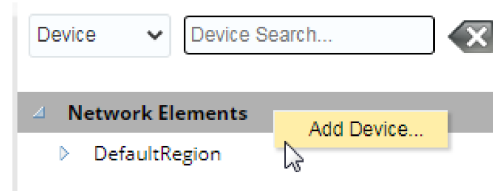


- 3 Enter the IP address and select the SNMP version for the device and click **Add**.

- 4 View the confirmation dialogue and click **OK**.

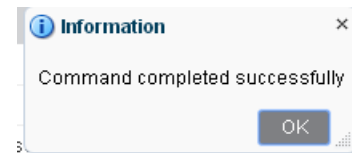

- 5 The device can then be viewed in the **Network Elements** page as well as accessed for provisioning services.

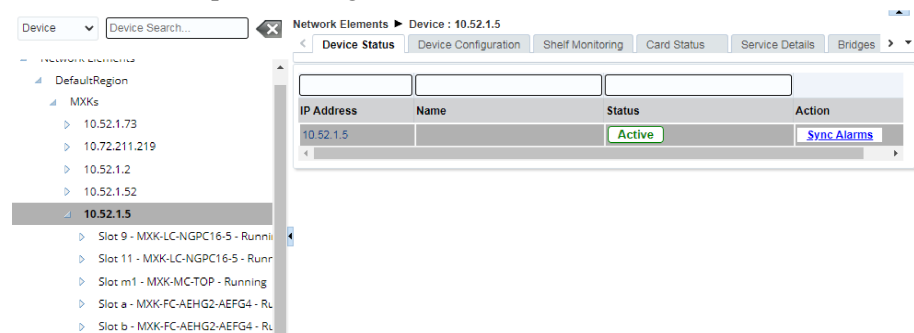

2-3 PROVISIONING EXAMPLES

Provisioning using the Web client uses a simple four step procedure with variations.

1. Select Provisioning Type
2. Select ONU/ Eth Port, (Eth port can be selected only under the Provisioning Type: Provisioning By ONU/ETH port)
3. Select Service Group
4. Provision Service

The variations provide means for pre-provisioning, assigning single services, assigning multiple services at one time, activating by serial number or registration ID. See the following examples for the variations in the basic procedure:

- [Types of Provisioning, pg 10](#)
 - [Provisioning ONU By Serial Number, pg 10](#)
 - [Provisioning ONU By Registration ID, pg 13](#)
 - [Provisioning by ONU/ETH Port, pg 14](#)
- [Provisioning Examples with Existing Service Group, pg 19](#)
- [Provisioning Examples with New Service Group, pg 23](#)
 - [Creating a service group with existing services, pg 23](#)
 - [Creating a service group by Wizard, pg 26](#)
 - [Creating a service group by MXK's Virtual ONU Template, pg 30](#)

The procedure for deleting services is covered in [Deleting Service from an ONU/Ethernet Port, pg 34](#).

2- 3.1 Types of Provisioning

- [Provisioning ONU By Serial Number, pg 10](#)
- [Provisioning ONU By Registration ID, pg 13](#)
- [Provisioning by ONU/ETH Port, pg 14](#)
- [Bulk Service Provisioning, pg 16](#)

Provisioning ONU By Serial Number

Once an ONU has been connected to a MXK/MXK-F?Vx series device aware of DZMS, it's serial number is then available within DZMS. The **Provision ONU By Serial Number** method allows the operator to choose a specific ONU without knowledge of which device or whether it has been assigned to a specific port.

An ONU serial number can be found in a sticker on the ONU in decimal notation. e.g. SN:**13968300**, S/N: **2564799**. In addition, an FSAN ID is shown as ZNTS for DZS ONUs followed by the hexadecimal notation of the serial number. For example, a small sticker on an ONU 2510 shows the FSAN serial number, e.g. FSAN-**ZNTS00F1B37F**. The first four characters, ZNTS, are vendor specific ID, and the following characters, 00F1B37F, are serial number in hex format. Either hexadecimal or decimal numbering system can be used to search for ONUs.

This provisioning example uses **Provisioning ONU by Serial Number**.

- 1 Click the **Service Provisioning** button in the top banner (or the **SERVICE PROVISIONING** graphic/link from the home page).
- 2 Click the **Provision ONU By Serial Number** select bar in the **Add Services** pane.
- 3 Select ONU:
 - a Use the radio buttons to select whether to search for unassigned, assigned, or all ONUs and whether the serial number should be displayed in hexadecimal (**Hex**) or decimal (**Dec**) format.
 - b Click the search icon (handheld magnifying glass).
 - c Set up the search criteria then click **Search**.
 - d From the list of serial numbers, select an ONU.
 - e Click **OK**.
- 4 Select Service Group. From the **Service Group** drop-down select the service group

Add Services | Manage Services | Bulk Service Deletion | Bulk Service Provisioning

☐ Provision By ONU/ETH Port
 ☒ Provision ONU By Serial Number
 ☐ Provision ONU By Reg ID

☒ Unassigned
 ☐ Assigned
 ☐ All

☒ Hex
 ☐ Dec

Serial Number: 

Device:

Shelf:

Card:

Port:

ONU: 

☒ By Service Group
 ☐ By Services

Service Group:

Service Group Details : QuickStartEx2

Service Name	Model Name	ONT Port Name
QuickStartEx2DataService1	zhone-2427	ethernet-1
QuickStartEx2DataService2	zhone-2427	ethernet-2
QuickStartEx2VoiceService1	zhone-2427	pots-1
QuickStartEx2RFService1	zhone-2427	rf-1
QuickStartEx2WlanService1	zhone-2427	wlan-1

Provisioned Services on Selected ONU(s)

ONU	Service Type	ONT Port	Service Group	Service	ONT Model	VLAN ID
-----	--------------	----------	---------------	---------	-----------	---------

Services will be displayed once Provisioned ONU(s)/Eth Port(s) are selected.

- 5 In this case we selected an unassigned serial number, the OLT slot and port are known, and DZMS proposes the next available ONU ID. At this point there are two choices, **Assign Serial Number** to the chosen port or **Assign SN & Provision Service**. This example uses **Assign SN & Provision Service**.

- 6 Edit the override fields as desired, and then click **Confirm**.

Selected ONU(s)

172.16.80.54/1/3/16/2

Selected CPE Port: (Device: 172.16.80.54) (Shelf: 1) (Card: 3) (Port: 16) (ONU: 2) (ONT Port)

Onuld	PortName	ServiceGroup	ServiceMember	Override
2	ethernet-1	QuickStartEx2	QuickStartEx2DataService1	Click to Set
2	ethernet-2	QuickStartEx2	QuickStartEx2DataService2	Click to Set
2	pots-1	QuickStartEx2	QuickStartEx2VoiceService1	Click to Set
2	rf-1	QuickStartEx2	QuickStartEx2RfService1	None
2	wlan-1	QuickStartEx2	QuickStartEx2WlanService1	Click to Set

Override Fields

BRIDGE

VLAN ID: 101

- 7 In the log information page, there are two options, **Finish** or **Manage Service**.

Progress information messages for this page are listed below.

Finish Manage Service

Successfully created QuickStartEx2DataService1 (Data) Service on 172.16.80.54, ONU : 2(1-3-16-2), Port: 'ethernet-1'

Successfully created QuickStartEx2DataService2 (Data) Service on 172.16.80.54, ONU : 2(1-3-16-2), Port: 'ethernet-2'

Successfully created QuickStartEx2VoiceService1 (Voice) Service on 172.16.80.54, ONU : 2(1-3-16-2), Port: 'pots-1'

Successfully created QuickStartEx2RfService1 (Rf) Service on 172.16.80.54, ONU : 2(1-3-16-2), Port: 'rf-1'

Successfully created QuickStartEx2WlanService1 (Wifi) Service on 172.16.80.54, ONU : 2(1-3-16-2), Port: 'wlan-1'

- a To exit the log information page, click **Finish**.
- b To view the provisioning information in the **Manage Service** screen, click **Manage Service**. If the provisioning information didn't show up, syncing device might solve the problem.

Add Services Manage Services Bulk Service Deletion Bulk Service Provisioning

Device: 172.16.80.54 MXKF Shelf: 1 Card: Slot 3 - MXK-LC-GP16 Port: 16

Provisioned ONU: 1-3-16-2(SN:03363105)

Provisioned Services

Device	IP Address	Shelf	Card	Port	ONU	Service Group	Service Name	ONT Model	Connection Type	UNI Port	VLAN	SLAN
MXKF	172.16.80.54	1	3	16	2	QuickStartEx2	QuickStartEx2Da...	2424A	Ethernet	1	101	0
MXKF	172.16.80.54	1	3	16	2	QuickStartEx2	QuickStartEx2RfSer...	2424A	RF	1	101	0
MXKF	172.16.80.54	1	3	16	2	QuickStartEx2	QuickStartEx2Voice...	2424A	SIP	1	101	0
MXKF	172.16.80.54	1	3	16	2	QuickStartEx2	QuickStartEx2Wlan...	2424A	WIRELE...	1	101	0

Bridge

Name: 1-3-16-469-gponport-101

Bridge Type: Downlink

Vpi: 0

Vci: 0

VLAN: 101

SLAN: 0

Ingress Packet Rule Group: 0

GEM Port

Gpon Traffic Profile: 99:CBR,512

Encrypted: False

Provisioning ONU By Registration ID

The registration ID (Reg ID) provides an alternative, hardware-independent, method for activating an ONU. It allows service providers a flexible method for ONU replacement.

A Reg ID is a 10-digit number assigned to a customer. It is provisioned into MXK/MXK-F, and communicated to installation technicians to enter it into the ONU in the field.

This example will set the Reg ID and Service Group for a specific ONU. Please use MXK/MXK-F/ONT configuration guides for details on the procedure.

- 1 Click the **Service Provisioning** button in the top banner (or the **SERVICE PROVISIONING** graphic/link from the home page).
- 2 Click **Provision ONU By Reg ID** in the **Add Services** pane.
- 3 In the **Provision ONU By Reg ID** pane, select or enter a unique 10-digit Reg ID to be assigned in the **Reg ID** text box. (Note: DZMS will search for previously assigned Reg IDs as you enter each digit. DZMS will offer a selection of previously assigned Reg IDs until the entered value is totally unique and then it will declare “No results found”.) This example enters 8888888888 as the Reg ID.
- 4 Select ONU.

From the **Device, Card, Port, ONU** drop-downs select the location for this ONU.

- 5 From the **Service Group** drop-down select a service group.

For this example we are selecting QuickStartEx2.

Add Services Manage Services Bulk Service Deletion Bulk Service Provisioning

☐ Provision By ONU/ETH Port
 ☐ Provision ONU By Serial Number
 ☒ Provision ONU By Reg ID

Reg ID:
 Device:
 ONU:

Shelf:
 Card:
 Port:

☒ By Service Group
 ☐ By Services

Service Group:

Service Group Details : QuickStartEx2

Service Name	Model Name	ONT Port Name
QuickStartEx2DataService1	zhone-2427	ethernet-1
QuickStartEx2DataService2	zhone-2427	ethernet-2
QuickStartEx2VoiceService1	zhone-2427	pots-1
QuickStartEx2RfService1	zhone-2427	rf-1
QuickStartEx2WlanService1	zhone-2427	wlan-1

Provisioned Services on Selected ONU(s)

ONU	Service Type	ONT Port	Service Group	Service	ONT Model	VLAN ID
Services will be displayed once Provisioned ONU(s)/Eth Port(s) are selected.						

- 6 In this case we selected an unused Reg ID. At this point there are two choices, **Assign Reg ID** or **Assign Reg ID & Provision Service**. For this example, we select **Assign Reg ID & Provision Service**.

- 7 Edit the override fields as desired. When completed then click **Confirm**.
- 8 Click **Finish** to exit the log information page or click **Manage Service** to view the provisioning information in the **Manage Service** screen.

Provisioning by ONU/ETH Port

The **Provision By ONU/ETH Port** pane either shows ONU(s) if a GPON card is selected or shows ETH ports if an ActiveEthernet card is selected.

A single or multiple ONU/ETH ports can be selected at once for provisioning.

Mechanisms exist for:

- Pre-provisioning that is ONU/ETH ports for OLT ports/ActiveEthernet slots that are not physically connected yet,
- provisioning connected ONT/ETH ports,
- or applying additional Service Groups to already provisioned ONU/ETH ports connected or not. Note that applying additional Service Groups works if the Service Group being applied does not conflict with a previously provisioned Service Group. For example, first Service Group applied to ETH ports 1 and 2 on ONT, if second Service Group applies to ETH ports 3 and 4 then there is no conflict.

The following example procedure can be used for the first two mechanisms in the above list:

- 1 Click the **Service Provisioning** button in the top banner (or the **SERVICE PROVISIONING** graphic/link from the home page).
- 2 Click the **Provision By ONU/ETH Port** select bar in the **Add Services** pane.
- 3 Select ONU/ETH port
 - a Use the **Device** drop-down to select the device.
 - b Use the **Shelf** drop-down to select the shelf.
 - c Use the **Card** drop-down to select the card.
 - d If a GPON card is selected, then an additional **Port** drop-down is visible. Use the **Port** drop-down to select GPON OLT port.

- e If a GPON card is selected, then use the **Un-Provisioned ONU(s)** drop-down to select one or more ONUs. If an ActiveEthernet card was selected then use the **Un-Provisioned Eth Port(s)** drop-down to select one or more Ethernet Ports.

Add Services
Manage Services
Bulk Service Deletion
Bulk Service Provisioning

Provision By ONU/ETH Port
Provision ONU By Serial Number
Provision ONU By Reg ID

Device
10.156.8.219 MXK-F-21
Provisioned ONU(s) :
Shelf
1
Un-Provisioned ONU(s) :
1-1-1-37; 1-1-1-39; 1-1-1-40
Card
Slot 1 - MXK-LC-GP16 -
Port
1
Service Group

Service Group Details :

Service Name	Model Name	ONT
Group Details will be displayed once Group is selected.		

Provisioned Services on Selected ONU(s)

Services will be displayed once Provisioned ONU(s)/Eth Port(s) are select

- 4 From the **Service Group** drop-down select the service group.
- 5 Provision Service
 - a Click **Provision Service**.
 - b Enter appropriate subscriber specific info for each appropriate service.
 - c Click **Confirm**.
 - d Click **Finish** to exit the log information page or click **Manage Service** to view the provisioning information in the **Manage Service** screen.

Bulk Service Provisioning

Use the **Bulk Service Provisioning** tab to provision multiple services to multiple ONUs/Ethernet ports, or multiple devices/MXKs with the service provision template.

- 1 Click the **Service Provisioning** button in the top banner (or the **SERVICE PROVISIONING** graphic/link from the home page).
- 2 Click the **Bulk Service Provisioning** pane.
- 3 Download the bulk service provision template
 - a In the **Download Bulk Service Provision Template** pane, select **Provision By: Service Group** or **Services** Radio button.
 - b Select the CPE model(s) from the **CPE Model** drop-down.
Based on the selection, **Service Group** drop-down will be populated.

- c** Select the service groups/services required for the Template.

Download Bulk Service Provision Template

Provision By ☒ Service Group ☐ Services

* CPE Model

* Service Group

Download Template

- d** Click on the **Download Template** button.

An Excel file is downloaded. Each service group will have a corresponding Excel sheet.

- 4** Fill the Excel file with provisioning records.

- 5** Upload the Bulk Service Provision Template.

- a** Upload the Excel file by clicking the **Choose File** button.

- b** Click on the **Process Uploaded File** button.

The **Provisioning ONT Details** page appears.

- c** The **Provisioning ONT Details** page loads the contents from the Excel template file. Users can modify the contents if needed. Click the **Next** button, this action will validate the data given by the user. The validation status appears.

Provisioning ONT Details								Next	Cancel
Service Group	Device IP	Shelf	Card	Port	ONU	FSAN	ONT Name		
DefaultData	10.156.8.219	1	1	1	2				
DefaultData	10.156.8.219	1	1	1	2				

Override Fields
 No data to display.

- d** Users can click the **Modify** button to modify the contents if needed, or click the **Confirm** button to confirm the provisioning contents.

Confirmation!										Confirm	Modify	Cancel
Service Group	Device IP	Shelf	Card	Port	ONU	FSAN	ONT Name	Description	Validation Status			
DefaultData	10.156.8.219	1	1	1	1							
DefaultData	10.156.8.219	1	1	1	2							

- e** A task reference name will be generated by default. Users can change the name if needed and then click **Save and Submit**. It saves all the data given by the user to the DZMS DB and initiates a new thread for service provisioning which will run in the background.

Or if users want to change the provisioning contents, click **Modify** to go back to the **Provisioning ONT Details** page.


6 All the tasks are listed in the **Bulk Service Provision Status** pane.

Bulk Service Provision Status			
Task Reference Name	Date Created	Owner	Status
ZMS_0607201916121	6/7/2019	test	Processed

You can find the task using the task reference name and its corresponding graph on the right **Status Graph** pane.


Click the **Refresh** button will refresh the status.

Service Group	Device IP	Shelf	Card	Port	ONU	FSAN	Status
DefaultData	172.16.80.68	1	1	1	1		SUCCESS
Successfully created DefaultData (Data) Service on 172.16.80.68, ONU : 1(1-1-1-1), Port: 'ethernet-1'							
DefaultData	172.16.80.68	1	1	1	2		SUCCESS
Successfully created DefaultData (Data) Service on 172.16.80.68, ONU : 2(1-1-1-2), Port: 'ethernet-1'							



2- 3.2 Provisioning Examples with Existing Service Group

This provisioning example provisions the ONU with the default triple play service group.

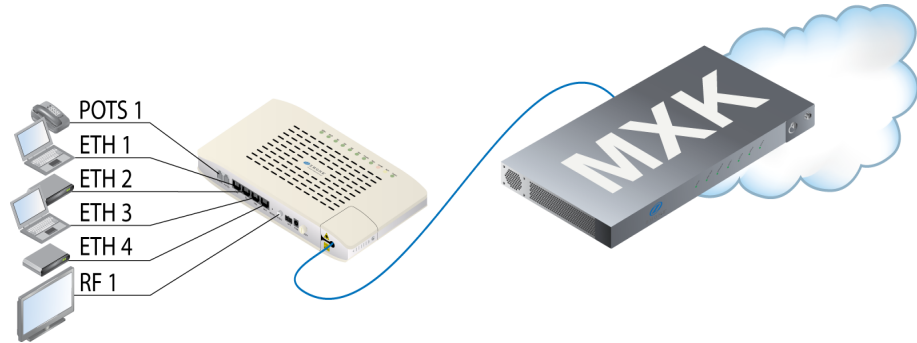

This example uses Provision ONU By Serial Number. Please see “[Types of Provisioning, pg 13](#)” for a discussion of the provisioning options.

Provisioning with Existing Service Group

- 1 Click the **Service Provisioning** button in the top banner (or the **SERVICE PROVISIONING** graphic/link from the home page).
- 2 In the **Add Services** pane:
 - a Select the **Provision ONU By Serial Number** radio button
 - b Use the radio buttons to select whether to filter for unassigned, assigned, or all ONU. To search by serial number choose whether to search by hexadecimal (**Hex**) or decimal (**Dec**) format

Add Services
Manage Services
Bulk Service Deletion
Bulk Service Provisioning

☐ Provision By ONU/ETH Port
☒ Provision ONU By Serial Number
☐ Provision ONU By Reg ID

☒ Unassigned
☐ Assigned
☐ All

☒ Hex
☐ Dec

Serial Number

🔍

- c To find an ONU click the search icon (hand-held magnifying glass) 🔍

Search and Select: Serial Number (Hex)

Device IP

Starts with

Shelf

Equals

Card

Equals

Port

Equals

Search

Reset

Add Fields

Reorder

Serial Number Hex	Serial Number Dec	Device	Device IP	Shelf	Card	Port	Vender ID	ONT Model
03363105	53883141	MXKF	172.16.80.54	1	3	16	ZNTS	2424A
033B0C7B	54201467	MXK-13	172.16.80.68	1	10	1	ZNTS	2426A

OK

Cancel

In this example we are searching by the IP address of the MXK. With this advanced searching page, you can search for ranges and filter down to card or OLT port.

d Click **Search**.

e From the list of serial numbers, select an ONU.

f Click **OK**.

3 Select **Service Group**. From the **Service Group** drop-down menu select the service group.

Add Services

Manage Services

Bulk Service Deletion

Bulk Service Provisioning

Provision By ONU/ETH Port

Provision ONU By Serial Number

Provision ONU By Reg ID

Unassigned

Assigned

All

Hex

Dec

Serial Number

03363105

Device

172.16.80.54 MXKF

Shelf

1

Card

Slot 3 - MXK-GLC-GP16 -

Port

16

Assigned ONU :

1-3-16-8(SN:03363105)

By Service Group

By Services

Service Group

Start Typing...

DefaultData

DefaultPVE

DefaultRF

DefaultVideo

DefaultVoice

DefaultWifi

TestRuleGroup

Search...

Clear Onu

Provision Service

Service Group Details : DefaultRF

Service Name	Model Name
DefaultRF	zhone-2403

Provisioned Services on Selected ONU(s)

ONU	Service Type	ONT Port	Service Group	Service	ONT Model	VLAN ID	SLAN
-----	--------------	----------	---------------	---------	-----------	---------	------

Services will be displayed once Provisioned ONU(s)/Eth Port(s) are selected.

4 Click **Provision Service**.

Now the Serial Number, Device, Shelf, Card and OLT Port the ONT is attached to will be displayed in the Add Services pane.

Note that from this screen you can either assign the serial number to an ONU or assign the serial number to an ONU and provision service from an existing service group.

To assign the serial number to an ONU, select an ONU from the ONU drop-down and then click **Assign Serial Number**.

To assign the serial number to an ONU and provision service from an existing service group, use the ONU drop-down and Service Group drop-down, and then click **Assign SN & Provision Service**. In this example we are using the latter option.

Add Services | Manage Services | Bulk Service Deletion | Bulk Service Provisioning

☐ Provision By ONU/ETH Port ☒ Provision ONU By Serial Number ☐ Provision ONU By Reg ID

☒ Unassigned ☐ Assigned ☐ All

☒ Hex ☐ Dec

Serial Number:

Device:

Shelf:

Card:

Port:

ONU:

☒ By Service Group ☐ By Services

Service Group:

Service Group Details : TriplePlay

Service Name	Model Name	ONT Port Name
TriplePlayDataService1	zhone-2427	ethernet-1
TriplePlayDataService1	zhone-2427	ethernet-2
TriplePlayVideoService2	zhone-2427	ethernet-3
TriplePlayVideoService2	zhone-2427	ethernet-4
TriplePlayVoiceService1	zhone-2427	pots-1
TriplePlayVoiceService1	zhone-2427	pots-2
TriplePlayWanService1	zhone-2427	wlan-1
TriplePlayWanService1	zhone-2427	wlan-2
TriplePlayWanService2	zhone-2427	wlan-3
TriplePlayWanService2	zhone-2427	wlan-4

- a** In the **Add Services** pane use the **ONU** drop-down to select an ONU to assign to this serial number (and device).
- b** From the **Service Group** drop-down select an existing service group. For this example select TriplePlay. Note that the service name shows up as a member of the **Service Group Details** window.
- c** Click **Assign SN & Provision Service** button.

- d** If any field in this service group has overridden feature enabled, then this field will be displayed. After changing the value on the override fields, click the **Confirm** button.

Selected ONU(s)

✓ 172.16.80.54/1/3/16/3

Selected CPE Port: (Device: 172.16.80.54) (Shelf: 1) (Card: 3) (Port: 16) (ONU: 3)

Cancel Confirm

Onuld	PortName	ServiceGroup	ServiceMember	Override
3	ethernet-1	TriplePlay	TriplePlayDataService1	Click to Set
3	ethernet-2	TriplePlay	TriplePlayDataService1	Click to Set
3	ethernet-3	TriplePlay	TriplePlayVideoService2	Click to Set
3	ethernet-4	TriplePlay	TriplePlayVideoService2	Click to Set
3	pots-1	TriplePlay	TriplePlayVoiceService1	Click to Set
3	pots-2	TriplePlay	TriplePlayVoiceService1	Click to Set
3	wlan-1	TriplePlay	TriplePlayWlanService1	Click to Set
3	wlan-2	TriplePlay	TriplePlayWlanService1	Click to Set
3	wlan-3	TriplePlay	TriplePlayWlanService2	Click to Set
3	wlan-4	TriplePlay	TriplePlayWlanService2	Click to Set

Override Fields

BRIDGE

VLAN ID 101

- e** When you receive the Provisioning is Complete... message, click **Finish**.

Progress information messages for this page are listed below.

Finish Manage Service

Successfully created TriplePlayDataService1 (Data) Service on 172.16.80.54, ONU : 7(1-3-16-7), Po...

Successfully created TriplePlayDataService1 (Data) Service on 172.16.80.54, ONU : 7(1-3-16-7), Po...

Successfully created TriplePlayVideoService2 (Video) Service on 172.16.80.54, ONU : 7(1-3-16-7), ...

Successfully created TriplePlayVideoService2 (Video) Service on 172.16.80.54, ONU : 7(1-3-16-7), ...

Successfully created TriplePlayVoiceService1 (Voice) Service on 172.16.80.54, ONU : 7(1-3-16-7), P...

Successfully created TriplePlayVoiceService1 (Voice) Service on 172.16.80.54, ONU : 7(1-3-16-7), P...

Successfully created TriplePlayWlanService1 (Wifi) Service on 172.16.80.54, ONU : 7(1-3-16-7), Por...

Successfully created TriplePlayWlanService1 (Wifi) Service on 172.16.80.54, ONU : 7(1-3-16-7), Por...

Successfully created TriplePlayWlanService2 (Wifi) Service on 172.16.80.54, ONU : 7(1-3-16-7), Por...

Successfully created TriplePlayWlanService2 (Wifi) Service on 172.16.80.54, ONU : 7(1-3-16-7), Por...

Note this provisioning example only has data, video and rf services which do not require any subscriber specific information. For an example of providing subscriber specific information, see [Creating a service group by Wizard, pg 26](#) which is for a voice service.


2- 3.3 Provisioning Examples with New Service Group

User can create a service group either with existing services or use Service Group Wizard:

- [Creating a service group with existing services, pg 23](#)
- [Creating a service group by Wizard, pg 26](#)
- [Creating a service group by MXK's Virtual ONU Template, pg 30](#)

Creating a service group with existing services

This example will show how to create a Service Group with existing services.

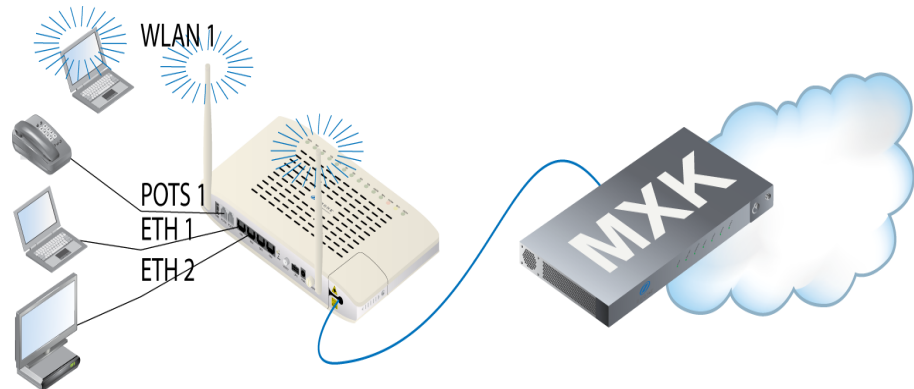

The Service Group defines the interfaces for a zNID 2427.

- Eth 1 for data,
- Eth 2 for video,
- POTS 1 for voice,
- WLAN 1 for wifi.

- 1 Click the **Templates** button in the top banner (or the **TEMPLATES** graphic/link from the home page).
- 2 Click **Classic Create** button near the top center of the **Service Group Details** section.

Service Groups
Services
Advanced Services

Service Group Template
Name
DefaultData
DefaultPWE
DefaultRF
DefaultVideo
DefaultVoice
DefaultWifi
Service_Group_Voice

Service Groups Details
Wizard Create
MXK Create
Classic Create
Edit
Delete

CPE System Template : : None

Service Group Members in : DefaultData

Service Name	ONT Model	Port Name	Service Type
DefaultData	zhone-2424	ethernet-1	Data

3 In the **Service Selection** pane, enter a name for the service group.

- 4** From the **ME Profile** dropdown, select the internal ME profile of the ONU model. By specifying an internal ME profile name in the initial setup on an ONU, the MXK knows the model of this ONU, and will provision that ONU with Unified Service Provisioning. For example, internal ME profile zhone-2427 defines there are 4 Ethernet ports, 2 POTS ports, and 1 RF port, 4 Wifi ports.

5 Add services to the interfaces:

- a** From the **Service** pane, click **Add**.
- b** In the **Add Services** window, select **Data** from the **Service Type** drop-down menu, select **ethernet-1** from the **Ports** drop-down menu, select **DefaultData** from the **Services** drop-down menu, and click **OK** to move it to the **Services** pane.

- c** Following the same method for **ethernet-2** select **Video** and **DefaultVideo**.
- d** For **pots-1** select **Voice** and **DefaultVoice**.

e For **wlan-1** select **Wifi** and **DefaultWifi**.

Service Selection

* Service Group : QuickStartEx1 Ethernet : 4

ME Profile : zhone-2427 Pots : 2

CPE System : <Optional> Rf : 1

Wifi : 4

RG : Enabled

Service Type	CPE Ports	Services
Wifi	wlan-1	DefaultWifi
Voice	pots-1	DefaultVoice
Video	ethernet-2	DefaultVideo
Data	ethernet-1	DefaultData

6 Click **View and Confirm**.

Service Confirmation

Service Group : QuickStartEx1

ME Profile : zhone-2427

Modify Save Cancel

ONT Model	Port Name	Service Name	Service Type
zhone-2427	ethernet-1	DefaultData	Data
zhone-2427	ethernet-2	DefaultVideo	Video
zhone-2427	pots-1	DefaultVoice	Voice
zhone-2427	wlan-1	DefaultWifi	Wifi

7 Click **Save**.

Service Groups Details Wizard Create MXK Create Classic Create Edit Delete

CPE System Template : : None

Service Group Members in : QuickStartEx1

Service Name	ONT Model	Port Name	Service Type
DefaultData	zhone-2427	ethernet-1	Data
DefaultVideo	zhone-2427	ethernet-2	Video
DefaultVoice	zhone-2427	pots-1	Voice
DefaultWifi	zhone-2427	wlan-1	Wifi

The new **Service Group** may be selected using any of the provisioning methods.

Please see [Types of Provisioning, pg 10](#) for a discussion of the provisioning options.

Creating a service group by Wizard

By using Wizard Create, users can create service group, services, and advanced service templates from a single screen. Service Group Wizard is designed to provide users a more convenient way to create service groups. Users can use the steps in the [Provisioning Examples with New Service Group, pg 23](#) too.

- 1 Click the **Templates** button in the top banner (or the **TEMPLATES** graphic/link from the home page).

Service Name	ONT Model	Port Name	Service Type
DefaultData	zhone-2424	ethernet-1	Data

- 2 In the **Service Groups** window, select the **Wizard Create** button in the **Service Groups Details** section.
- 3 Select the Model from the **Model Name** drop-down (e.g. zhone-2427). **Service Groups** tab will display the available port types based on the Model selection. For example, for model zhone-2427, available ports are Ethernet, POTS, RF, WLAN, MGMT, TR69, 802.1x, Radius, and RG).
- 4 Specify a service group name in the **Service Group Name** field.

* Model Name :

* Service Group Name :

CPE System :

Ethernet POTS RF WLAN MGMT TR69 802.1x Radius RG

Data: Service [ethernet-1]

☒ ethernet-1 ☐ ethernet-2 ☐ ethernet-3 ☐ ethernet-4

Use Existing Service : ☐

* Service Name :

Bridge Add Fields

Use Existing Bridge Template : ☐

Bridge Type :

* Tagging Type :

* VLAN ID :

Ingress PRG Template :

Egress PRG Template :

GPON Traffic Profile Add Fields

Use Existing GTP Template : ☐

* Traffic Class :

* Dynamic Bandwidth Allocation(DBA) : ☐ True ☒ False

Guaranteed Bandwidth(in Kbps) :

Select to override GTP : ☐

ONT Connection Add Fields

Use Existing ONT Conn Template : ☐

* Connection Type :

* UNI VLAN/Guided VLAN : ☒ UNI VLAN ☐ GUIDED VLAN

UNI VLAN ID :

Guided VLAN :

* RG Mode :

Add Ethernet Subscriber : ☐

By default, the given Service Group Name will be used as the prefix for all template names. For example, after changing Service Group Name to “QuickStartEx2”, the Service Name in the **Data: Service** section is changed to “QuickStartEx2DataService1” from the default name “DataService1”, the Service Name in the **Voice: Service** section is changed to “QuickStartEx2VoiceService1” from the default name “VoiceService1” etc.

User can also customize names for templates.

5 Create Data Services on Ethernet interfaces.

- a** Select Ethernet tab in the **Service Types** tab view. If this is the first time viewing the **Service Groups** tab, the Ethernet tab is shown by default.
- b** Click the Ethernet port(s) checkboxes in the **Data: Service** panel that you wish to set this service for.
- c** Specify Service Name.

Note: Users can use the default service configuration; customize the service configuration; or select an existing service by checking **Use Existing Service** and click on the search icon (handheld magnifying glass), then select a service from the **Search and Select:Service** window. Note that if users selected Use Existing Service, users cannot modify any templates in the service.

- d** Configure Bridge. Below image of Bridge panel.

Note: Users can use the default bridge settings, customize the Bridge template, or select an existing bridge template by checking **Use Existing Bridge Template**, and then select a bridge template from the **Search and Select: Bridge Template** window.

Specify your desired values to the fields.

Circle icons to the right of fields indicate whether field value can be overridden by entering a different value while provisioning. Blue indicates value can be overridden, Gray indicates value is locked by the template to value shown. Click circle icon to toggle status.

The + button is used to open a new window so users can create/clone/modify/delete Advance Service templates.

Click **Add Fields** link at the right upper corner to add attributes to be edited on the Bridge panel.

- e Configure GPON Traffic Profile. Below image of GPON Traffic Profile panel.

GPON Traffic Profile [Add Fields](#)

Use Existing GTP Template : ☒

GTP Template Name : 

* Traffic Class :

* Dynamic Bandwidth Allocation(DBA) : ☐ True ☒ False

Guaranteed Bandwidth(in Kbps) :

Select to override GTP : ☐

Note: Users can use the default GTP settings, customize the GTP template, or select an existing GTP template by checking **Use Existing GTP Template** and then select a GTP template from the **Search and Select: Gpon Traffic Profile Template** window.

Select desired values to the fields.

If **Dynamic Bandwidth Allocation (DBA)** is True, users can specify **DBA Fixed Upstream CBR Bandwidth, DBA Fixed Upstream UBR Bandwidth, DBA Assured Upstream Bandwidth, and DBA Max Upstream Bandwidth.**

Select to override GTP circle icon indicates whether GTP values can be overridden by entering different values while provisioning. Blue indicates GTP values can be overridden. Gray indicates GTP values are locked by the template to values shown.

Click **Add Fields** link at the right upper corner to add attributes to be edited on the GPON Traffic Profile panel.

- f Configure ONT Connection. Below image of ONT Connection panel.
- g (Optional) Specify **Ethernet Subscriber** in the **Ethernet Subscriber** window.

To view the **Ethernet Subscriber** panel, click the **Add Ethernet Subscriber** check box at the bottom of the **ONT Connection** panel.

The screenshot shows two side-by-side configuration panels. The left panel, titled 'ONT Connection', includes fields for 'Use Existing ONT Conn Template' (checkbox), '* Connection Type' (dropdown set to 'Ethernet'), '* UNI VLAN/Guided VLAN' (radio buttons for 'UNI VLAN' and 'GUIDED VLAN'), 'UNI VLAN ID' (text box with '0'), 'Guided VLAN' (text box with '0'), '* RG Mode' (dropdown set to 'Bridged'), and 'Add Ethernet Subscriber' (checkbox, checked). The right panel, titled 'Ethernet Subscriber (Optional)', includes fields for 'Use Existing Ethernet Template' (checkbox), 'Line Status Alarm' (dropdown set to 'Disabled'), 'Subscriber Description' (text box), 'Alarm Severity' (dropdown set to 'Major'), 'Power Range' (dropdown set to 'Disabled'), 'Power Shed' (dropdown set to 'Enable'), and 'Auth Mode' (dropdown set to 'Disable'). Blue circle icons are present to the right of several fields in the right panel.

Circle icons to the right of fields indicate whether field value can be overridden by entering a different value while provisioning. Blue indicates value can be overridden, Gray indicates value is locked by the template to value shown. Click circle icon to toggle status.

- h** To add Data service with different parameters to other Ethernet ports, click the **Add Ethernet Service** button.

The screenshot shows the 'Service Groups' configuration window. At the top, there are tabs for 'Service Groups', 'Services', and 'Advanced Services'. Below these are fields for '* Model Name' (dropdown set to 'zhone-2427'), '* Service Group Name' (dropdown set to 'QuickStartEx2'), and 'CPE System' (dropdown set to '<Optional>'). A 'View & Confirm' button is visible. Below these fields are tabs for 'Ethernet', 'POTS', 'RF', 'WLAN', 'MGMT', 'TR69', '802.1x', 'Radius', and 'RG'. The 'Ethernet' tab is selected. In the center, there is a section for 'Data: Service [ethernet-1]' with a 'Data: Service' sub-section. It includes checkboxes for 'ethernet-1', 'ethernet-2', 'ethernet-3', and 'ethernet-4', a 'Use Existing Service' checkbox, and a '* Service Name' dropdown set to 'QuickStartEx2DataService'. Below this is a 'Bridge' section with fields for 'Use Existing Bridge Template' (checkbox), 'Bridge Type' (dropdown set to 'Downlink'), and '* Tagging Type' (dropdown set to 'Single Tagged(TG)'). To the right is a 'GPON Traffic Profile' section with fields for 'Use Existing GTP Template' (checkbox), '* Traffic Class' (dropdown set to 'CBR'), and '* Dynamic Bandwidth Allocation(DBA)' (radio buttons for 'True' and 'False', with 'False' selected). An 'Add Ethernet Service' button is located at the top right of the Ethernet tab area.

- 6** Create **Voice** service on **POTS**, **Wifi** service on **WLAN**, **RF** service on **RF** port etc. from the same screen by clicking on the corresponding tab in the **Service Groups** tab.
- 7** Once all the services are configured, click on the **View & Confirm** button in the **Service Groups** window.

8 Verify the services list on the **Service Groups Details** window.

Confirmation!
Please confirm and save your changes. If you want to change the configuration after saving, please use Service Groups, Services and Advanced Services Template screens.

Service Groups Details [Modify] [Save] [Cancel]

CPE System Template : : None

Service Group Members in : QuickStartEx2

Service Name	ONT Model	Port Name	Service Type
QuickStartEx2DataService1	zhone-2427	ethernet-1	Data
QuickStartEx2DataService2	zhone-2427	ethernet-2	Data
QuickStartEx2VoiceService1	zhone-2427	pots-1	Voice
QuickStartEx2RfService1	zhone-2427	rf-1	Rf
QuickStartEx2WlanService1	zhone-2427	wlan-1	Wifi

- 9 To view the individual service details, click the service name from the **Service Group Members in: ServiceGroupName** section.
- 10 To return to the **Service Group Wizard** screen for modifications, click the **Modify** button in the **Service Groups Details** window.
- 11 Once satisfied with service Configuration, click the **Save** button in the **Service Groups Details** window.

Creating a service group by MXK's Virtual ONU Template

By using MXK Create, users can create service group, services, and advanced service templates from MXK Templates in a single screen.

- 1 Click the **Templates** button in the top banner (or the **TEMPLATES** graphic/link from the home page).

Service Groups [Services] [Advanced Services]

Service Group Template

Name

- DefaultData**
- DefaultPWE
- DefaultRF
- DefaultVideo
- DefaultVoice
- DefaultWifi
- Service_Group_Voice

Service Groups Details [Wizard Create] [MXK Create] [Classic Create] [Edit] [Delete]

CPE System Template : : None

Service Group Members in : DefaultData

Service Name	ONT Model	Port Name	Service Type
DefaultData	zhone-2424	ethernet-1	Data

- 2 In the **Service Groups** window, select the **MXK Create** button in the **Service Groups Details** section.
- 3 Select the Device IP from the **Device** drop-down (e.g. 10.52.1.64). **Virtual ONU Template** drop-down will display the available Virtual ONU Template from the selected Device.

- 4 Specify a service group name in the **Service Group Name** field, as there are DZMS default names which cause name Conflict with the MXK Template names.

The screenshot shows the 'Service Groups' configuration window with the 'Services' tab selected. The 'Data: Service [ethernet-1]' section is active. The 'Service Name' is 'DefaultData_64MXKData1'. The 'Bridge' section shows 'Bridge Type' as 'TLS', 'Tagging Type' as 'Single Tagged(TG)', and 'VLAN ID' as '5'. The 'ONT Connection' section shows 'ONT Conn Template Name' as 'DefaultData_64MXKDataO', 'Connection Type' as 'Ethernet', 'UNI VLAN/Guided VLAN' as 'UNI VLAN', 'UNI VLAN ID' as '5', 'Guided VLAN' as '0', and 'RG Mode' as 'Bridged'. The 'GPON Traffic Profile' section shows 'GTP Template Name' as 'DefaultData_64MXKDataO', 'Traffic Class' as 'UBR', and 'DBA Max Upstream Bandwidth' as '10000'. The 'View & Confirm' button is visible in the top right corner.

- 5 The overridden fields in blue are the only fields that can be changed when provisioning. All configurations in the MXK Virtual ONU template will be replicated into a DZMS Template. This can be used to provision an ONU like other Service Groups.
- 6 Once configured, click on the **View & Confirm** button in the **Service Groups** window.
- 7 Verify the services list on the **Service Groups Details** window.

The screenshot shows the 'Service Groups Details' window. The 'Confirmation!' section at the top states: 'Please confirm and save your changes. If you want to change the configuration after saving, please use Service Groups, Services and Advanced Services Template screens.' Below this, the 'Service Group Members in: DefaultData_64MXK' section contains a table with the following data:

Service Name	ONT Model	Port Name	Service Type
DefaultData_64MXKData1	zhone-default	ethernet-1	Data

The 'Modify', 'Save', and 'Cancel' buttons are visible in the top right corner.

- 8 To view the individual service details, click the service name from the **Service Group Members in: ServiceGroupName** section.
- 9 To return to the **Service Group Wizard** screen for modifications, click the **Modify** button in the **Service Groups Details** window.
- 10 Once satisfied with service Configuration, click the **Save** button in the **Service Groups Details** window.

2-4 MANAGING SERVICES ON A SINGLE ONU/ETHERNET PORT

- [ONU Delete/ Port Delete, pg 32](#)
- [Deleting Service from an ONU/Ethernet Port, pg 34](#)
- [Deleting All Services from an ONU/Ethernet Port, pg 35](#)
- [Changing VLAN, pg 36](#)
- [Launching ONT Web UI, pg 36](#)

ONU Delete/ Port Delete

Based on the Card type (GPON card or Active Ethernet card) selected by users, either the **ONU Delete** or the **Port Delete** button appears in the **Manage Services** window.

The **ONU Delete** button will remove all provisioning from the ONU. The Serial Number and the ME profile will be removed from the ONU configuration and onu-added will be set to false. All CPE-MGR interfaces to the ONT will be removed. The ONT will not be accessible until the Serial Number is assigned.

The **Port Delete** button will remove all USP provisioning from Eth port. The ME profile will be removed from the Eth port configuration. All CPE-MGR interfaces to the ActiveE zNID will be removed.

In the Web Client user interface the ONU is the sub-port of the OLT. Services may be assigned to the ONU. For this example we will use **ONU Delete**.

- 1 Click the **Service Provisioning** button in the top banner (or the **SERVICE PROVISIONING** graphic/link from the home page).
- 2 Click the **Manage Services** tab.

- 3 Select the ONU by selecting the **Device, Shelf, Card, Port** and **Provisioned ONU** in the pane. (Select the Ethernet port by selecting the **Device, Shelf, Card, and Provisioned Eth Port** in the pane.).

Add Services
Manage Services
Bulk Service Deletion
Bulk Service Provisioning

Device:
Shelf:
Card:
Port:

Provisioned ONU:

Provisioned Services

Device	IP Address	Shelf	Card	Port	ONU	Service Group	Service Name	ONT Model	Connection Type	UNI Port	VLAN	SLAN
MXKF	172.16.80.54	1	3	2	3	QuickStartEx2	QuickStartEx2Da...		Ethernet	1	101	0
MXKF	172.16.80.54	1	3	2	3	QuickStartEx2	QuickStartEx2Data...		Ethernet	2	101	0
MXKF	172.16.80.54	1	3	2	3	QuickStartEx2	QuickStartEx2RtSer...		RF	1		
MXKF	172.16.80.54	1	3	2	3	QuickStartEx2	QuickStartEx2Voice...		SIP	1	101	0
MXKF	172.16.80.54	1	3	2	3	QuickStartEx2	QuickStartEx2Wan...		WIRELE...	1	101	0

Bridge [Edit](#)
Name: 1-3-2-260-gponport-101
Bridge Type: Downlink
View

GEM Port [Edit](#)
Gpon Traffic Profile: 99:CBR,512
Encrypted:

- 4 Click **ONU Delete**.
- 5 Click **Yes** for the confirmation warning.
- 6 Click **OK** for the successfully completed message.

Deleting Service from an ONU/Ethernet Port

The Delete Services button can delete individual service selected on the ONU/Ethernet Port.

- 1 Click the **Service Provisioning** button in the top banner (or the **SERVICE PROVISIONING** graphic/link from the home page).
- 2 Click the **Manage Services** tab.
- 3 To delete service from an ONU, select the ONU by selecting the **Device, Shelf, Card, Port** and **Provisioned ONU** in the pane. (To delete service on an Ethernet port, select the Ethernet port by selecting the **Device, Shelf, Card, and Provisioned Eth Port** in the pane.).

[Add Services](#) | **[Manage Services](#)** | [Bulk Service Deletion](#) | [Bulk Service Provisioning](#)

Device: Provisioned ONU:
 Shelf:
 Card:
 Port:

Provisioned Services												Refresh	Launch ONT Web UI	Add Service	Delete Service	Delete All Service(s)	Modify VLAN	ONU Delete
Device	IP Address	Shelf	Card	Port	ONU	Service Group	Service Name	ONT Model	Connection Type	UNI Port	VLAN	SLAN						
MXKF	172.16.80.54	1	3	2	3	QuickStartEx2	QuickStartEx2Da...		Ethernet	1	101	0						
MXKF	172.16.80.54	1	3	2	3	QuickStartEx2	QuickStartEx2Data...		Ethernet	2	101	0						
MXKF	172.16.80.54	1	3	2	3	QuickStartEx2	QuickStartEx2R/Ser...		RF	1								
MXKF	172.16.80.54	1	3	2	3	QuickStartEx2	QuickStartEx2Voice...		SIP	1	101	0						
MXKF	172.16.80.54	1	3	2	3	QuickStartEx2	QuickStartEx2Wan...		WIRELE...	1	101	0						

Bridge [Edit](#)
 Name : 1-3-2-260-gponport-101
 Bridge Type : Downlink
View - A

GEM Port [Edit](#)
 Gpon Traffic Profile : 99:CBR,512
 Encrypted :


- 4 Select the Service you want to remove from the ONU/Ethernet Port under the **Provisioned Services** pane.
For this example we will delete the data service.
Under the **Connection Type** column Select the **Ethernet** service.
- 5 Click **Delete Service**.
- 6 Click **Yes** for the confirmation warning.
- 7 Click **Finish** in the right hand corner of the screen for the successfully completed message.

Deleting All Services from an ONU/Ethernet Port

The **Delete All Services** button removes all USP services from the ONU/Ethernet port.

To delete all USP services from the ONU/Ethernet port:


- 1 Click the **Service Provisioning** button in the top banner (or the **SERVICE PROVISIONING** graphic/link from the home page).
- 2 Click the **Manage Services** tab.
- 3 Select the ONU by selecting the **Device, Shelf, Card, Port** and **Provisioned ONU** in the pane.(Select the Ethernet port by selecting the **Device, Shelf, Card, and Provisioned Eth Port** in the pane.).
- 4 Click **Delete All Service(s)**.

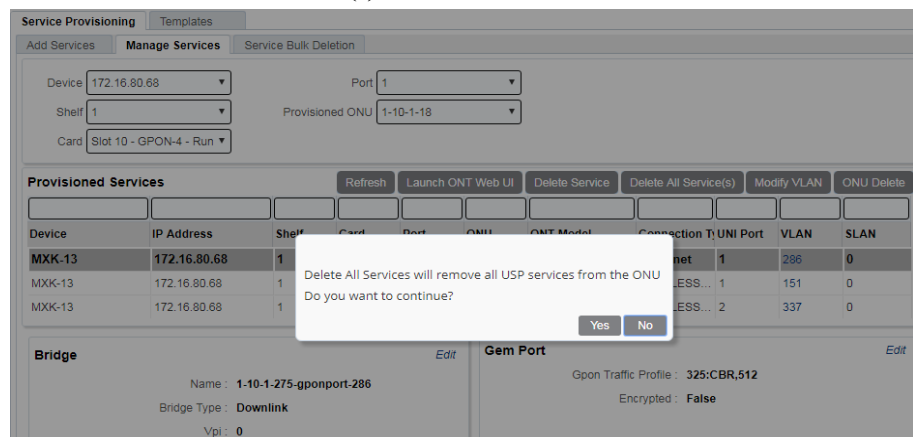

- 5 Click **Yes** for the confirmation warning.
- 6 Click **Finish** in the right hand corner of the screen for the successfully completed message.

Changing VLAN

- 1 Click the **Service Provisioning** button in the top banner (or the **SERVICE PROVISIONING** graphic/link from the home page).
- 2 Click the **Manage Services** tab.
- 3 Select the ONU by selecting the **Device, Shelf, Card, Port** and **Provisioned ONU** in the pane.(Select the Ethernet port by selecting the **Device, Shelf, Card,** and **Provisioned Eth Port** in the pane.).
- 4 Click **Modify VLAN**.
- 5 In the **Modify VLAN ID** screen, enter a VLAN, then click **Change VLAN ID**.

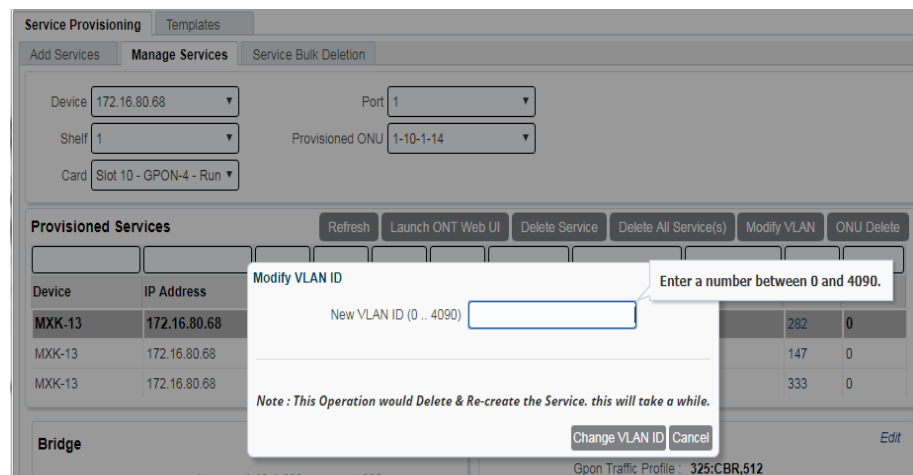

- 6 Click **Finish** in the right hand corner of the screen for the successfully completed message.

Launching ONT Web UI

- 1 Click the **Service Provisioning** button in the top banner (or the **SERVICE PROVISIONING** graphic/link from the home page).
- 2 Click the **Manage Services** tab.
- 3 Select the ONU by selecting the **Device, Shelf, Card, Port** and **Provisioned ONU** in the pane.(Select the Ethernet port by selecting the **Device, Shelf, Card,** and **Provisioned Eth Port** in the pane.).
- 4 Click **Launching ONT Web UI**.
- 5 The ONT web UI appears.

2-5 MANAGING UPSTREAM/ DOWNSTREAM

The **Manage Upstream/Downstream** screen manage upstream and downstream rates on the devices by using the following three panes:

- **Applied Packet Rules**
All the Packet rule records (Rate Limit Discard and Color Aware Rate Limit Discard) applied in the network. This functionality can identify all customers under one rate limit (package) and change them to a new package.
- **Upstream Rate**
This bulk modify feature works with the GTP profiles.
- **Applied System Profiles**
This bulk modify feature also works with the cpe-system-common profiles.


Managing Upstream or Downstream

Use the following procedure to modify/apply packet rules, GTPs, and system profiles:

- 1 To enable the Managing Upstream/Downstream rate change functionality, you need to select the corresponding permission in the **Permission Groups** tab. To do this, you must be logged in as an administrator or have administrator privileges.

For instructions on how to access to the permission groups list and assign permission to a group, refer to the [Adding Permission Groups, pg 7](#).

As an example, you can select an existing group and then choose **MANAGE UPSTREAM DOWNSTREAM RATE** from the Available Permissions list, moving it to the Selected Permissions list. Finally, click **Save** to apply the change

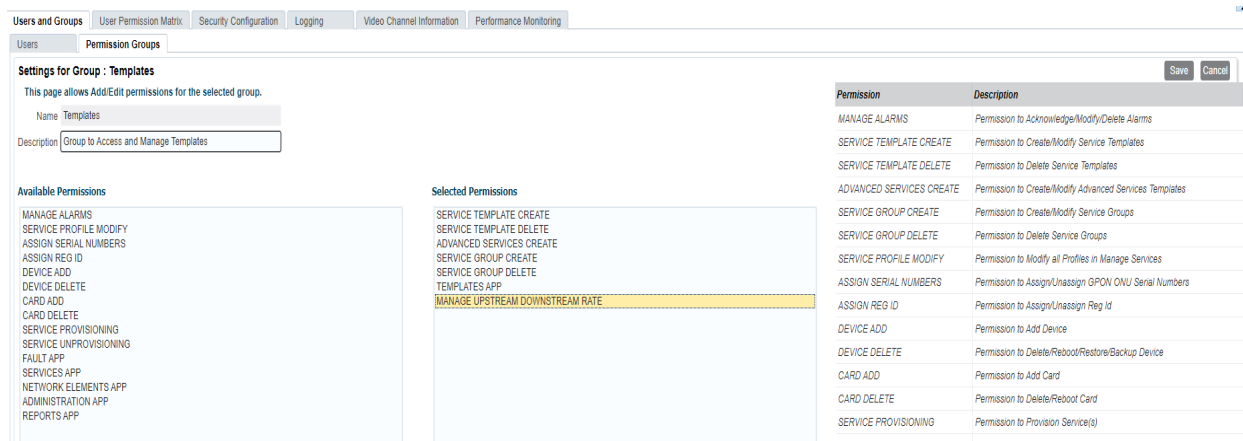

- 2 Click the **Templates** button in the top banner (or the **TEMPLATES** graphic/link from the home page)

- 3 Click the **Manage Upstream/Downstream** tab.
- 4 To manage downstream rates, modify a packet rule and apply to all the devices in the network that already have the selected packet rule applied.
 - a In the **Applied Packet Rules** pane, select the packet Rule record that needs to be modified, then click **Edit**.

Basic Templates	Services	Service Groups	Advanced Services	Manage Upstream/Downstream	
-----------------	----------	----------------	-------------------	----------------------------	--

Applied Packet Rules Edit					
Template Name	ConfigType	Rate	Peak Rate	High Priority	Low Priority
100M	Rate Limit Discard	102457			
100M	Rate Limit Discard	102400			

- b Edit the packet rule and click **Apply**.

Modifying 100M

Note : The configuration changes will apply to all device(s) provisioned by this template in the network.

RateLimitType ☒ Single ☐ Dual * Burst Size is auto generated.

Rate (in Kbps)

Apply Cancel

- c Any failures that occur while applying the changes will result in a pop-up message displaying details about the devices on which the changes were not applied.
- 5 To manage upstream rates, select and edit a GTP and apply to all the devices in the network that already have the selected GTP applied:
 - a In the **Upstream Rate** pane, select the GTP that needs to be modified, then click **Edit**.

Upstream Rate Edit						
TemplateName	Description	Traffic Class	DBA Max Upstream Bandwidth (in Kbps)	DBA Fixed Upstream CBR Bandwidth (in Kbps)	DBA Fixed Upstream UBR Bandwidth (in Kbps)	DBA Assured Upstream Bandwidth (in Kbps)
testvoiceSRGVoiceGTP1		CBR	0	0	0	0
testGTP		UBR	0	0	0	0

- b Edit the GTP and click **Apply**. The changes will be applied to all the devices in the Network that already have the selected GTP applied.

Modifying testvoiceSRGVoiceGTP1

Traffic Class

DBA Max Upstream Bandwidth (in Kbps)

DBA Fixed Upstream CBR Bandwidth (in Kbps)

DBA Fixed Upstream UBR Bandwidth (in Kbps)

DBA Assured Upstream Bandwidth (in Kbps)

Apply Cancel

- c Any failures that occur while applying the changes will result in a pop-up message displaying details about the devices on which the changes were not applied.
- 6 To manage the values in the cpe-system-profile, select and edit a cpe-system-profile and apply to all the devices in the network that already have the selected cpe-system-profile applied:
- a In the **Applied System Profile** pane, select the cpe-system-profile that needs to be modified, then click **Edit**.

Applied System Profiles Edit										
Template Name	Description	Firewall	Cookie Protection	VLAN Routing	Static Route List	Bridge Loop Detect	Block Upstream DHCP Offer	Block Downstream DNS Query	TR69 Authentication	Authentication Method
DynOmciCpeSystemCommon	DynOmciCpeSystemCommon Template	Enable	Enable	Disable	None	Enable	Enable	Enable	Disable	Auto
testCommon		Disable	Disable	Enable	None	Enable	Enable	Enable	Disable	Dot_tx

- b Edit the GTP and click **Apply**. The changes will be applied to all the devices in the Network that already have the selected GTP applied.

Modifying DynOmciCpeSystemCommon

Template Name **DynOmciCpeSystemCommon** Description **DynOmciCpeSystemCommon**

Common ACS

Firewall	Enable	Power Shutdown Delay(0..60)	0
Cookie Protection	Enable	Power Restore Delay(0..10)	0
VLAN Routing	Disable	Bridge Loop Detect	Enable
Static Route List	None	Block Upstream DHCP Offer	Enable
DNS Host List	None	Block Downstream DNS Query	Enable
Inform Interval	300	HSIA Timer	300
Admin Password		HSIA Test Hostname	www.google.com
Support Password		Community Name	
User Password			
Power Supply	0		

Apply Cancel

- c Any failures that occur while applying the changes will result in a pop-up message displaying details about the devices on which the changes were not applied.

2-6 DELETING MULTIPLE SERVICES FROM MULTIPLE ONUS/ETHERNET PORTS

Use the **Bulk Service Deletion** tab to remove multiple services from multiple ONUs or Ethernet ports.

Deleting Multiple Services from Multiple ONUs/Ethernet Ports

To delete multiple services from multiple ONUs or Ethernet ports:

- 1 Click the **Service Provisioning** button in the top banner (or the **SERVICE PROVISIONING** graphic/link from the home page)
- 2 Click the **Bulk Service Deletion** tab.

Device	IP Address	Card	Port	ONU	ONT Model	GroupName	ServiceName	Connection Type	UNI Port	VLAN	SLAN
MXKF	172.16.80.54	3	1	4		testGrp	DefaultData	Ethernet	2	101	0
MXKF	172.16.80.54	3	1	7				Ethernet	1	101	0
MXKF	172.16.80.54	3	1	8		testGrp	DefaultData	Ethernet	2	101	0
MXKF	172.16.80.54	3	1	10				IPTV	2	287	0
MXKF	172.16.80.54	3	1	10				Ethernet	1	289	0
MXKF	172.16.80.54	3	1	11				Ethernet	1	434	0
MXKF	172.16.80.54	3	1	11				IPTV	2	101	0
MXKF	172.16.80.54	3	1	11				SIP	1	101	0
MXKF	172.16.80.54	3	1	12				Ethernet	1	543	0

- 3 By default, **Delete By Services** tab appears. You can select **Delete By ONU Port** as you desired.
- 4 (optional) Use the filters to narrow down the number of items on the page. The filters use an AND operation to narrow down.
- 5 Select one or multiple services on an ONU, or multiple ONUs using Ctrl+click or Shift+click .
Note that services/ ONUs from multiple devices can be selected at the same time.
- 6 Click **Delete Service(s)**.
- 7 Click **Yes** for the confirmation warning.
- 8 Click **Finish** in the right hand corner of the screen for the successfully completed message.

2-7 CREATING/DEFINING SERVICES AND ADVANCED SERVICES

Provisioning ONTs is a complex process. An attempt to simplify this task is by using templates. These templates can be nested, with Service Groups containing Services and Services containing Advanced Services. DZMS Web Client is built to realize you may not have created, for example, an Advanced Service when you are working on a Service, so there are ways to select and to create an Advanced Service from within Service creation. Similarly, Services can be selected or created when working on a Service Group.


- [Templates Based Provisioning Model, pg 41](#)
- [Services and Service Groups, pg 42](#)
- [Basic Services and Templates, pg 46](#)
- [Advanced Services, pg 49](#)
- [Advanced Service Templates, pg 51](#)

2-7.1 Templates Based Provisioning Model

DZMS Web Client has a number of default templates for Service Groups, Services, and Advanced Services.

Service Provisioning

1. Select ONU/ETH Port
Where Found: Select Provision by ONU/Eth, Provision ONU by Serial Number or Provision ONU by Reg ID
2. Assign Service Group

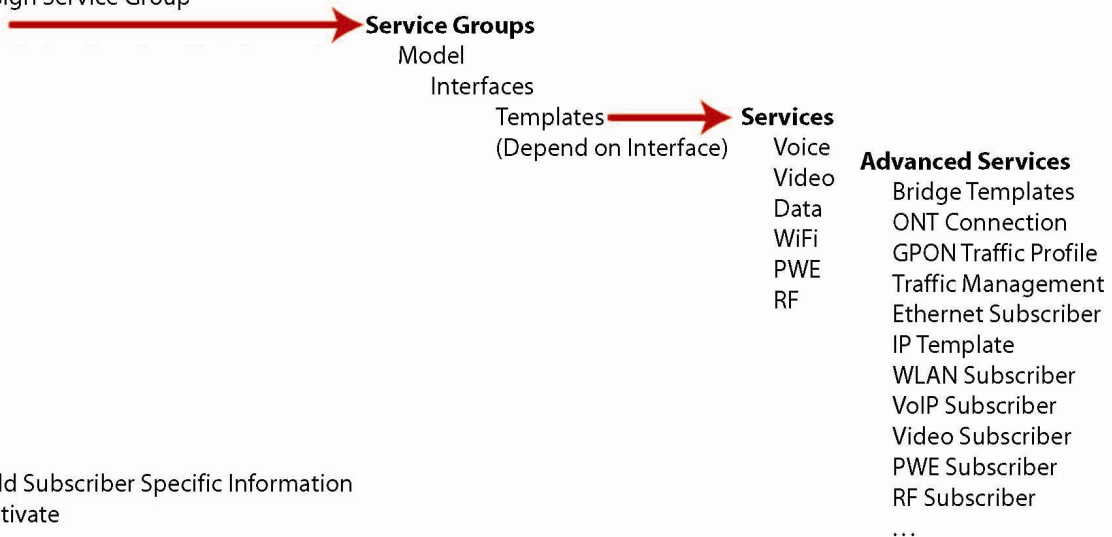

3. Add Subscriber Specific Information
4. Activate

2- 7.2 Services and Service Groups

Services templates are a combination of Advanced Services templates. The type of service determines which advanced services are added to the template. For example, a data service would have a **GPON Traffic Profile**, a **Bridge Template** and a **CPE Connection Template** at a minimum. A voice service would add a **VoIP Subscriber Template**, an **IP Template** and a **SIP Dial Plan Template** to the above list for data service.

Creating a Service Group

This section uses the **Classic Create** button to create a new service group. For the details and other options (**Wizard** and **MXK Create** buttons) refer to the [Provisioning Examples with New Service Group, pg 23](#).


- 1 Click the **Templates** button in the top banner (or the **TEMPLATES** graphic/link from the home page).
- 2 Click **Service Group** tab.
- 3 Click **Classic Create**.
- 4 In the **Service Selection** pane, enter a name in the **Service Group** field.
- 5 Select the ME profile for the ONU model from the **ME Profile** dropdown menu.
- 6 (Optional) Select the **CPE System**.
- 7 Select services for interfaces.

Click **Add** to open the **Add Services** window.

For each appropriate interface select a service (or services)

To setup DefaultData for eth 1:

- a From the **Service Type** dropdown select **Data**.
- b From the **Ports** dropdown select **ethernet-1**.
- c From the **Services** dropdown, select **DefaultData**.
- d Click **OK**.

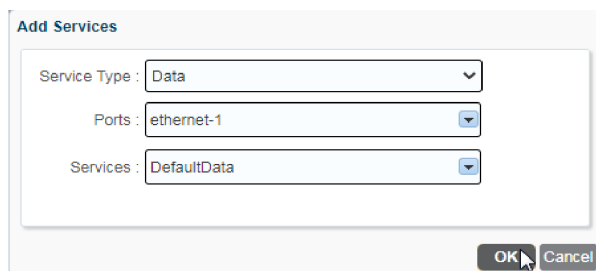

To setup DefaultVoice for pots 1:

- a From the **Service Type** dropdown select **Voice**.
- b From the **Ports** dropdown select **pots-1**.

- c From the **Services** dropdown, select **DefaultVoice**.
- d Click **OK**.

To setup **DefaultWifi** for **WLAN 1 (wireless LAN)**:

- a From the **Service Type** dropdown select **Wifi**.
- b From the **Ports** dropdown select **wlan-1**.
- c From the **Services** dropdown, select **DefaultWifi**.
- d Click **OK**.

8 Click the gray **View & Confirm**.

ONT Model	Port Name	Service Name	Service Type
zhone-2427	ethernet-1	DefaultData	Data
zhone-2427	ethernet-2	DefaultVideo	Video
zhone-2427	pots-1	DefaultVoice	Voice
zhone-2427	wlan-1	DefaultWifi	Wifi

To delete or modify a service from an interface, click **Modify**. The **Service Group Creation** pane will reappear. To delete services, select a port, then select the service(s) in **Selected Services** window to delete. Then use the left arrow to move back to **Available Services**. Once satisfied click **View & Confirm** to return to review pane.

9 Click the **Save** button.

Creating/ Cloning/ Modifying/ Deleting a Service

- 1 Click the **Templates** button in the top banner (or the **TEMPLATES** graphic/link from the home page).
- 2 Click the **Services** tab.

Service	Service Type	GPON Traffic Profile Template	Bridge Template	ONT Connection Template	Ethernet Subscriber Template
DefaultData	Data Service	GponTrafficProfileDefault	DownlinkSingleTagged	DataRGCPeConnection	
DefaultPWE	Pwe Service	GponTrafficProfileDefault	DownlinkSingleTagged	PweRGCPeConnection	
DefaultRF	Rf Service				
DefaultVideo	Video Service	GponTrafficProfileDefault	DownlinkVideoSingle	VideoRGCPeConnection	DynOmciCpeEthServ
DefaultVoice	Voice Service	GponTrafficProfileDefault	DownlinkSingleTagged	VoiceRGCPeConnection	
DefaultWifi	Wifi Service	GponTrafficProfileDefault	DownlinkSingleTagged	WifiRGCPeConnection	
NL-Internet	Data Service	1200000000:UBR,256,0,0,857...	TestData	BRouted	
XGS_Data	Data Service	1200000000:UBR,256,0,0,857...	DownlinkSingleTagged	DynOmciCpeConnection	
Service_Group_VoiceVol...	Voice Service	Service_Group_VoiceVoiceGT...	Service_Group_VoiceVol...	Service_Group_VoiceVol...	

The existing services and their associated templates are displayed.

3 To create a new service, click **Create New Service**.

A service is the collection of templates. Careful naming of templates, including an indication of application or internal options, will make provisioning easier.

- a** Select the template from the drop downs.
- b** If the attributes are not appropriate, select Create New Eth Sbr from the **Ethernet Service Template** drop down in the **Advanced Data Service (Optional)** pane.

- c** Create a new Ethernet Subscriber Template in the **Ethernet Subscriber** window.

d Click **OK**. You will return to the **Service Details** window.

e Verify all the fields in the **Service Details** window. Make sure the newly created Ethernet subscriber template is selected. Click **Next**.

f Click **Save**.

4 To clone a service

a Select the service from the service list, and click **Clone Service**.

b Specify the name of the new service, and select the template from the drop downs.

c Click **Next**.

d Verify the Service Details in the **Service Details** window.

e Click **Save**. The new cloned service appears in the service list.

5 To modify a service

a Select the service from the service list, and click **Edit Service**.

b Make changes in the **Service Details** window.

c Click **Next**.

d Verify the Overriding Fields in the **Service Details** window.

e Click **Save**.

6 To delete a service

- a** Select the service from the service list, and click **Delete Service**.
- b** Click **OK** in the Confirmation window.
- c** Click **Finish** in the right hand corner of the screen for the successfully completed message.

2- 7.3 Basic Services and Templates

Basic Templates are the basic building blocks in creating a service. It is a simplified template screen with useful/clear default templates.

Below are the most common basic services and their templates for creating a Service:

- **Data/Video Service**
 - Upstream Rate
 - Downstream Rate
 - ONT Connection
 - Ethernet Subscriber
- **Voice Service**
 - ONT Connection
 - VoIP Subscriber
 - VoIP Server
 - VoIP Features
 - VoIP Media
- **Wifi Service**
 - ONT Connection
 - WLAN Subscriber
 - WLAN Advanced
 - WLAN
- **System**
 - System Templates
 - System Common Templates

Creating an Basic Template

- 1 Click the **Templates** button in the top banner (or the **TEMPLATES** graphic/link from the home page).
- 2 The **Basic Templates** tab appears.

Basic Templates | Services | Service Groups | Advanced Services | Manage Upstream/Downstream

Data Rate/Bandwidth
[Upstream Rate](#)
[DownStream Rate](#)

Data/Video
[ONT Connection](#)
[Ethernet Subscriber](#)

Voice
[ONT Connection](#)
[VOIP Subscriber](#)
[VOIP Server](#)
[VOIP Media](#)
[VOIP Features](#)

Wifi
[ONT Connection](#)
[WLAN Subscriber](#)
[WLAN Advanced](#)
[WLAN](#)

System
[System Templates](#)
[System Comm Templates](#)

Upstream Rate (200M) Reload Create Clone Edit Delete

Template Name	Description	Traffic Class	DBA Max Upstream Bandwidth (in Kbps)	DBA Fixed Upstream UBR Bandwidth (in Kbps)	DBA Fixed Upstream CBR Bandwidth (in Kbps)	DBA Assured Upstream Bandwidth (in Kbps)
200M	Upstream 200Mbps	UBR	0	0	0	0
50M	Upstream 50Mbps	UBR	0	0	0	0
100MGTP		UBR	13696	4096	4480	5120
Data_Service_Group_AngiDataGTP1		CBR	0	0	0	0
SG_001DataGTP1		CBR	0	0	0	0
SRG_Vlan_filterDataGTP1		CBR	0	0	0	0

The existing services and their associated templates are displayed.

- 3 To create a new Upstream Template, click on the **Upstream Rate** link and select the **Create** button.

Upstream Rate (200M) Reload Create Clone Edit Delete

Template Name	Description	Traffic Class	DBA Max Upstream Bandwidth (in Kbps)	DBA Fixed Upstream UBR Bandwidth (in Kbps)	DBA Fixed Upstream CBR Bandwidth (in Kbps)	DBA Assured Upstream Bandwidth (in Kbps)
200M	Upstream 200Mbps	UBR	0	0	0	0
50M	Upstream 50Mbps	UBR	0	0	0	0
100MGTP		UBR	13696	4096	4480	5120
Data_Service_Group_AngiDataGTP1		CBR	0	0	0	0
SG_001DataGTP1		CBR	0	0	0	0
SRG_Vlan_filterDataGTP1		CBR	0	0	0	0
testGTP		UBR	0	0	0	0
testinggtp2Angi		UBR	0	0	0	0
testingGTP_Angitha		CBR	0	0	0	0
testGTP2Angi		CBR	0	0	0	0

4 Select/enter the attributes as appropriately.

GPON Traffic Profile Template

* Template Name Description

Note : For GPON, the max bandwidth available is 1Gbps (1048576 Kbps) and for NGPON the max bandwidth available is 8.19Gbps (8594944 Kbps) on the hardware.
When creating Gpon Traffic Profile Template, please follow the tool tip for more info on each fields.

Traffic Class

Compensated ☐ True ☒ False

Shared ☐ True ☒ False

Dynamic Bandwidth Allocation(DBA) ☐ True ☒ False

Guaranteed Bandwidth (in Kbps)

DBA Fixed Upstream UBR Bandwidth (in Kbps)

DBA Fixed Upstream CBR Bandwidth (in Kbps)

DBA Assured Upstream Bandwidth (in Kbps)

DBA Max Upstream Bandwidth (in Kbps)

Extra Upstream Bandwidth Type ☒ Non Assured ☐ Best Effort


Priority

Weight

5 Click **OK**.

2- 7.4 Advanced Services

Advanced services are the basic building blocks which services are created from.

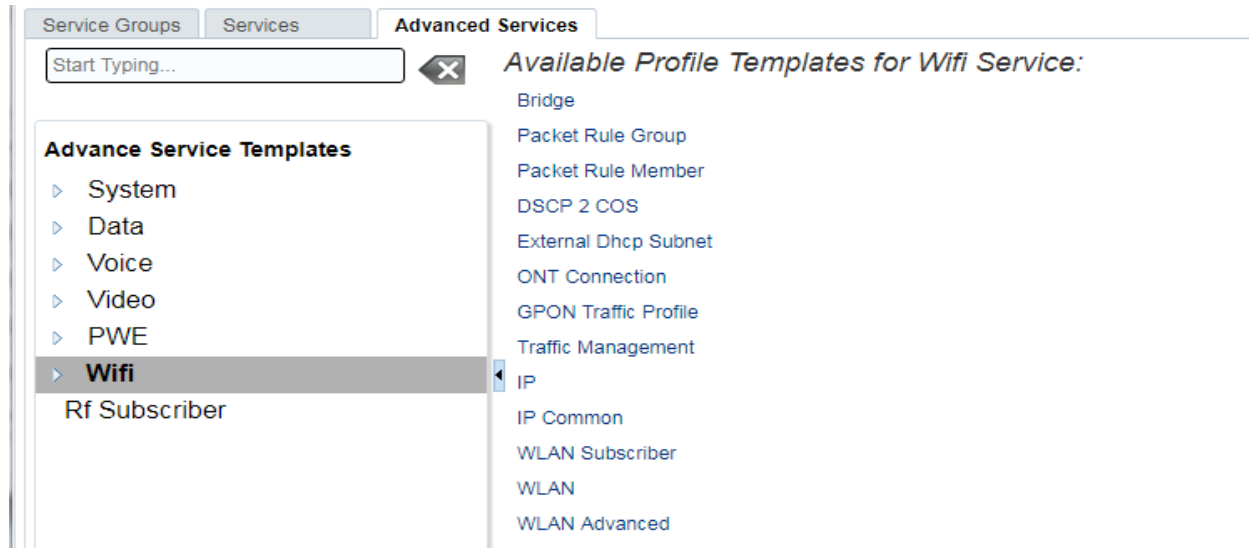

Creating an Advanced Service

- 1 Click the **Templates** button in the top banner (or the **TEMPLATES** graphic/link from the home page).
- 2 Click the **Advanced Services** tab.
- 3 In the **Advanced Services** tab select any of the existing **Advance Service Templates**.

To create a new **GPON Traffic Profile**:

- a. Select **Data** from the **Advance Service Templates** list.
- b. On the right pane, select **GPON Traffic Profile**. The **Advance Service Templates** list will close any open groups and expand **Data** showing a tree of profiles, with GPON Traffic Profile selected. The right pane will now show all previously created GPON Traffic Profiles.
- 4 Click **Create**.
- 5 Enter a name in the **Template Name** field.

6 Select/Enter the attributes as appropriate.

GPON Traffic Profile Template

* Template Name Description

Traffic Class

Compensated ☐ True ☒ False

Shared ☐ True ☒ False

Dynamic Bandwidth Allocation(DBA) ☐ True ☒ False

Guaranteed Bandwidth (in Kbps)

DBA Fixed Upstream UBR Bandwidth (in Kbps)

DBA Fixed Upstream CBR Bandwidth (in Kbps)

DBA Assured Upstream Bandwidth (in Kbps)

DBA Max Upstream Bandwidth (in Kbps)

Extra Upstream Bandwidth Type ☒ Non Assured ☐ Best Effort

Priority

Weight

OK Cancel

7 Click **OK**.

2- 7.5 Advanced Service Templates

The following list shows the relationship between services and advanced services.

- **System**
 - **System Template**
 - System Common
 - Static Route List
 - Static Route
 - DNS Host List
 - DNS Host
 - **Port Fwd List**
 - Port Fwd
 - **DHCP Server**
 - Conditional DHCP Server List
 - Conditional DHCP Server
 - Static MAC IP List
 - Static MAP IP
- **Data**
 - **Bridge**
 - Packet Rule Group
 - Packet Rule Member
 - DSCP 2 COS
 - External Dhcp Subnet
 - **IP**
 - IP Common
 - **ONT Connection**
 - **GPON Traffic Profile**
 - **Ethernet Subscriber**
 - Traffic Management
 - LLDP Med Policy List
 - LLDP Med Policy
 - Access Control List
 - Access Control
 - VLAN Filter List
 - VLAN Filter
- **Voice**
 - **Bridge**
 - Packet Rule Group
 - Packet Rule Member
 - DSCP 2 COS
 - External Dhcp Subnet
 - **ONT Connection**
 - **GPON Traffic Profile**
 - **Traffic Management**
 - **IP**
 - IP Common
 - **VoIP Subscriber**
 - VoIP Features
 - VoIP Media
 - VoIP Server
 - SIP Dial Plan

- **Video**
 - **Bridge**
 - **Packet Rule Group**
 - **Packet Rule Member**
 - **DSCP 2 COS**
 - **External Dhcp Subnet**
 - **Multicast Control Lists**
 - **Multicast Control List**
 - **ONT Connection**
 - **GPON Traffic Profile**
 - **Ethernet Subscriber**
 - **Traffic Management**
 - **LLDP Med Policy List**
 - **LLDP Med Policy**
 - **Access Control List**
 - **Access Control**
 - **VLAN Filter List**
 - **VLAN Filter**
 - **Video Template**
 - **Video ACL**
- **PWE**
 - **Bridge**
 - **Packet Rule Group**
 - **Packet Rule Member**
 - **DSCP 2 COS**
 - **External Dhcp Subnet**
 - **ONT Connection**
 - **GPON Traffic Profile**
 - **Traffic Management**
 - **IP**
 - **IP Common**
 - **PWE Subscriber**
 - **PWE Common**
- **WiFi**
 - **Bridge**
 - **Packet Rule Group**
 - **Packet Rule Member**
 - **DSCP 2 COS**
 - **External Dhcp Subnet**
 - **ONT Connection**
 - **GPON Traffic Profile**
 - **Traffic Management**
 - **IP**
 - **IP Common**
 - **WLAN Subscriber**
 - **WLAN**
 - **WLAN Advanced**
- **Rf Subscriber**