
2.2 Loading Media


Load media into the printer as follows:

1. Open the media cover. Rotate and unlock the Printhead Latch and raise the Printhead Assembly.
2. Rotate the Media Guide down.

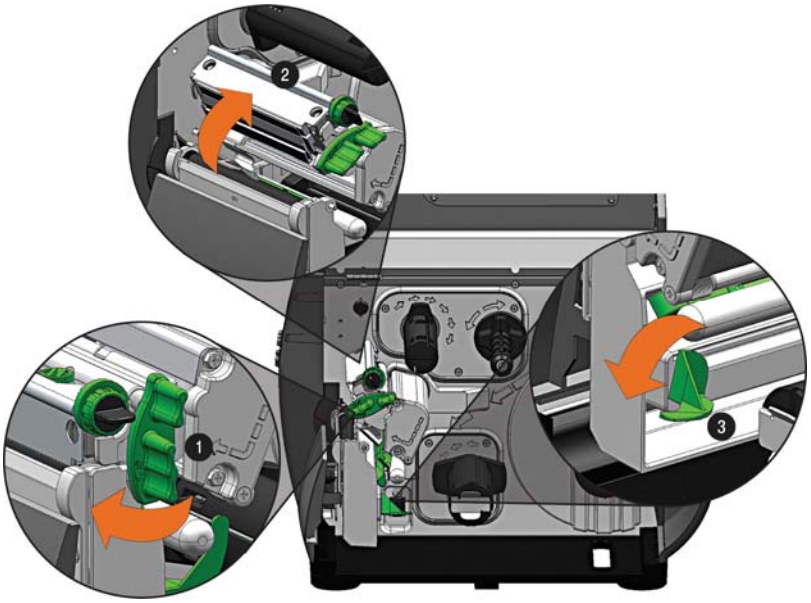

❶	Printhead Latch
❷	Printhead Assembly
❸	Media Guide


3. Slide the Roll Media onto the Media Hub.
4. Route the Media through the printer as shown. Raise the Media Guide. The Media Guide should be pushed inward so that it is just touching the edge of the Media.

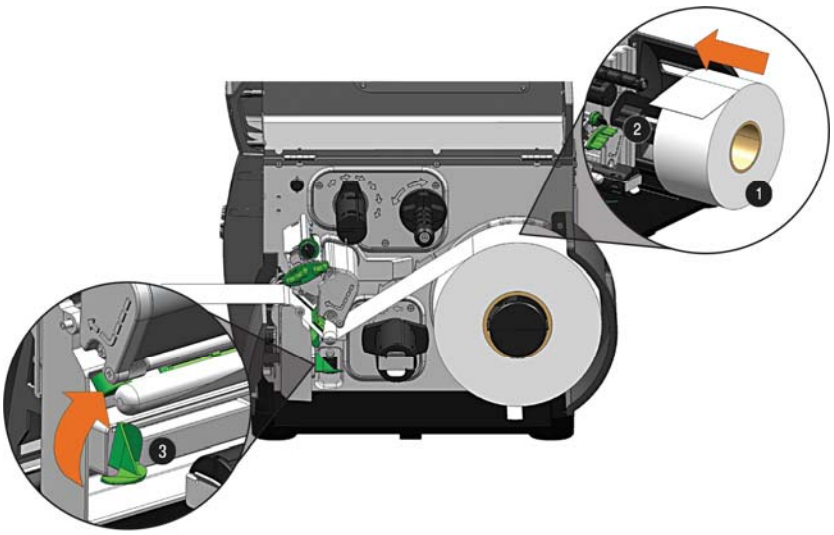

❶	Roll Media
❷	Media Hub
❸	Media Guide

5. Close the Printhead Assembly and rotate the Printhead Latch to the locked position.

6. Close the cover and press the FEED button several times to position the media and ensure proper tracking.

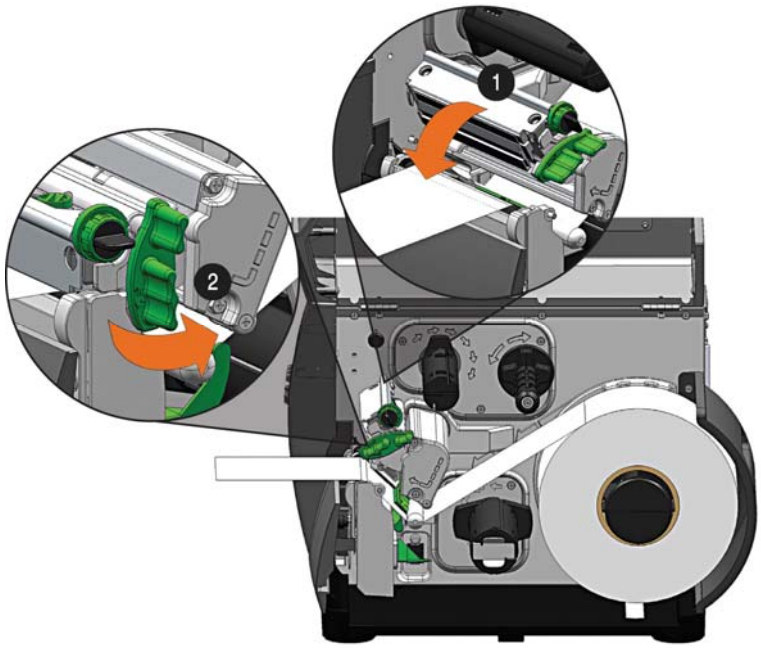

❶ Printhead Assembly
❷ Printhead Latch

If the printer does not correctly sense the top of each label, it may be necessary to calibrate the printer (see Section 3.4 Media Calibration).


The printer is factory set to use 4-inch media (and ribbon, if thermal transfer equipped). When using a different width of media/ribbon, refer to Section 5.3.

2.3 Media Sensor Adjustment

The Media Sensor needs to be positioned so that the printer can detect the presence of media and the top-of-form (except for continuous stock, where the TOF is set through the front panel).

To adjust:

1. With media loaded, as described in Section 2.2, grasp the Slide Tab and move the Sensor Eye Mark into position over media according to the table below.

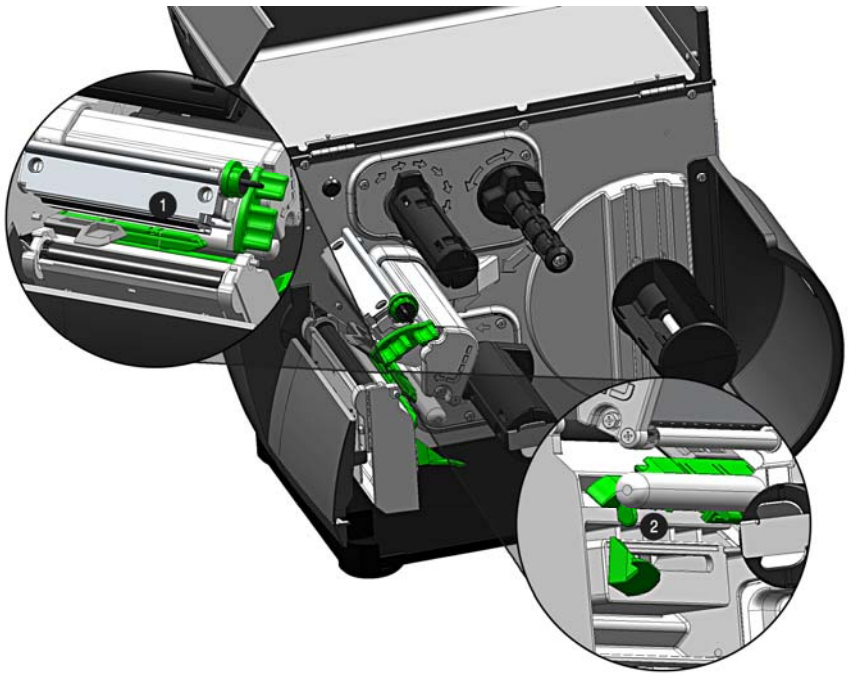

❶ 'Sensor Eye' Mark
❷ Slide Tab

Media Sensor Selection and Adjustment		
Media Type	**Sensor Eye Mark Position**	**Sensing Required**
Die-cut	Near the middle of the label	Gap
Notched	Centered over the notch	Notch
Reflective	Centered over the black mark	Black Mark
Continuous	Near the middle of the media	Continuous

3.4 Media Calibration

3.4.1 Quick Calibration

Quick Calibration should be performed as part of the media loading routine to fine-tune the sensing parameters.

(1) This calibration is not necessary when using continuous stock.

(2) Media containing large gaps may require a change in the PAPER EMPTY DISTANCE before proceeding.

Calibrate the printer as follows:

1. Ensure that the printer is ON and in an idle state (i.e., not off-line) with media loaded, the media sensor adjusted, and the sensor type selected.

2. Press and hold the FEED Key until at least one full label has been output then release the key and wait for the printer to process the data. There are two possible outcomes:

   CALIBRATION COMPLETE - will be displayed, and the media will be advanced to the next top of form if calibration was successful; or,

   CALIBRATION FAILED will be displayed if calibration was not successful. In this case, check the hints listed below to help resolve the problem:

Calibration Hints:

WARNING LOW BACKING is a normal message when calibrating die-cut media mounted on a highly translucent liner or notched tag stocks.

If the initial attempt fails, press and hold the FEED Key until two successive label TOFs have been output. If, however, CALIBRATION FAILED is displayed again, perform the Standard Calibration routine, see Section 3.4.3.

3.4.2 Empty Calibration

Empty Calibration calibrates the printer's media sensor to detect an 'Out of Stock' condition. Calibrate the printer as follows:

1. Ensure that the printer is ON and in an idle state (i.e., not off-line) with media removed.

2. Press and hold the Pause & Feed Keys together. The printer will now be calibrated for the 'Out of Stock' condition.

3.4.3 Standard Calibration

The Standard Calibration can be performed using the NETira CT Utility (see Section 3.3) or using the front panel buttons via the printer's menu, see Section 4.5. Standard Calibration provides dynamic readings, which can be helpful when using media with small position-critical notches or marks. Three calibration samples are required:

Empty – with nothing over the sensor;

Gap, Notch, Hole or Mark – with media liner, a notch, hole, or a mark over the sensor; and,

Paper – with the label (and liner, if any) over the sensor.

Calibrate the Media Sensor using the steps below:

☑ The Sensor Calibration menu item is only accessible in the Advanced Menu mode.

Step	Action	Displayed Message	Comment
A	Turn ON the printer.	READY	Wait briefly for initialization to complete.
B	Press MENU Button. Make sure MEDIA SETTINGS is highlighted and press ENTER. Then using the DOWN Button, scroll to SENSOR CALIBRATION.	(Printer Menu)	
C	Press ENTER to access SENSOR CALIBRATION. Then using the DOWN Button, scroll to PERFORM CALIBRATION. Press ENTER again and then press YES to proceed.	PERFORM CALIBRATION	Press NO to abort this procedure.
D	With no media installed, press ESC.	REMOVE LABEL STOCK PRESS ESC KEY Yyy	This sets the empty value, where "yyy" represents the current sensor reading.
E	Proceed according to the media type: Die-Cut – Remove a label or two from the liner then install the media. Position the Media Sensor under the liner area and press ESC. Notched (or Reflective) – Install media. Position the Media Sensor under a notch (or black mark) and press ESC. Continuous – Press ESC then proceed to Step F.	*For die-cut media:* SCAN BACKING PRESS ESC KEY yyy *For Notched/Reflective media:* SCAN MARK PRESS ESC KEY yyy *For continuous media:* REMOVE LABEL STOCK PRESS ESC KEY Yyy	This sets the gap (or mark) value, where "yyy" represents the current sensor reading. ☑ *See Section 2.3 for sensor adjustment instructions.* *Do not position a perforation over the sensor when taking the sample.* *(3) For small notches or reflective marks, ensure that the labels exit straight from the printer.* *(4) Unless otherwise noted, do not move the Media Sensor after this step.*

Standard Calibration (continued)

Step	Action	Displayed Message	Comment
F	Proceed according to the media type: All media except Continuous – Position label material (and liner, if any) over the sensor then press the ESC Key. Continuous – Install media. Position the Media Sensor under the stock and press ESC.	SCAN PAPER PRESS ESC KEY yyy	This sets the paper value, where "yyy" represents the current sensor reading. *(1) If using preprinted media, ensure that the area placed over the sensor is free of text, graphics, or borders.* *(2) See Section 2.3 for sensor adjustment instructions.*
G	Observe the calibration result.	*CALIBRATION COMPLETE*	Calibration was successful. ☑ *If WARNING LOW BACKING is displayed, calibration was successful.*
H	Press ESC then EXIT to return to READY. When calibrating gap or reflective media, press and hold the FEED Key until at least one label is output.	*CALIBRATION COMPLETE* *Followed by…* *READY*	The printer is now ready for use.