



Elmar Wings

AI with an Arduino Nano 33 BLE Sense

Realtime Object Detection with the ArduCAM

Version: 1765
July 9, 2025

Contents

Contents	3
List of Figures	9
List of Listings	11
1. Introduction	15
1.1. Introduction	15
1.2. Challenges and Solutions	15
1.3. Structure	15
I. Arduino IDE	17
2. Beschreibung der Software IDE	19
2.1. Installation der Arduino IDE	19
2.2. Beschreibung der Entwicklungsumgebung	19
2.3. Erste Schritte in der Entwicklungsumgebung	19
2.3.1. Auswahl des Mikrocontrollers	19
2.3.2. Bibliotheken einbinden	20
2.4. Programmierung	20
2.4.1. header	20
2.4.2. setup()	20
2.4.3. loop()	20
2.5. Erster Programmtest	21
3. Arduino IDE 2.3.x	23
3.1. Arduino IDE Description	23
3.2. Installation of the Arduino IDE	24
3.2.1. Download of the Arduino IDE	24
3.2.2. Summary of Options	24
3.2.3. Installation on Windows	25
3.2.4. Installation (MacOS)	27
3.3. Overview	29
3.4. Features	30
3.4.1. Sketchbook	30
3.4.2. Boards Manager	31
3.4.3. Library Manager	31
3.5. Integrating and Using a Custom Library in Arduino IDE	32
3.5.1. Creating the Library Files	32
3.5.2. Installation and Integration of the Library	32
3.5.3. Using Symbolic Links for Library Integration	32
3.5.4. Windows Tool <code>mklink</code> to Create Symbolic Links	32
3.5.5. MacOS Command <code>ln -s</code> to Create Symbolic Links	34
3.5.6. Verifying Library Availability in the Arduino IDE	34
3.5.7. Serial Monitor	35
3.5.8. Serial Plotter	35

3.6. Examples	35
3.7. Debugging	36
3.8. Autocompletion	36
3.9. Conclusion	37
4. To-Do	39
5. Setup for the Arduino Nano 33 BLE Sense	41
5.1. Introduction	41
5.2. Configuration for the Arduino Nano 33 BLE Sense	41
5.2.1. Installation of the driver	41
5.2.2. Connection and Configuration of the Arduino Board to the Computer	42
5.2.3. Select the Appropriate Port	42
5.2.4. Upload and Verify a Sketch	44
5.3. Test the Configuration	45
5.3.1. Testing the Steps by an Example Sketch blink.ino	45
5.3.2. Description of Basic Sketch for Printing 'Hello'	46
6. Comments with doxygen	49
6.1. Installation	49
6.1.1. doxygen	49
6.1.2. Graphviz	51
6.2. Configuration of Graphviz and doxygen with doxywizard	54
6.2.1. Graphviz	54
6.2.2. DoxyWizard	54
6.2.3. Saving the Configuration	60
6.3. Run of doxygen	60
6.3.1. Run of doxygen using DoxyWizard	60
6.3.2. Run of doxygen using a Command Shell	60
6.4. Syntax and Keywords	61
6.4.1. Keywords for Files	62
6.4.2. Keywords for Functions	63
6.4.3. Keywords for Definitions	63
6.5. Use of Documentation	63
6.6. Add Ons	63
6.6.1. Mainpage	63
6.6.2. Use of simple HTML Commands	64
6.6.3. Inserting Enumerations	64
6.6.4. Inserting Images	65
6.6.5. Inserting HTML pages	65
II. Arduino Nano 33 BLE Sense - Onboard Sensoren	67
7. Hardwarebeschreibung des Arduino	69
7.1. Aufbau des Arduinos	69
7.2. Integrierte Sensorik	69
7.2.1. 9-Achs-IMU für die Bewegungserkennung (LSM9DS1)	69
7.2.2. Näherungs-,Umgebungslicht-, Farb- und Gestensensor (APDS9960)	70
7.2.3. Barometrischer Drucksensor (LPS22HB)	70
7.2.4. Digitales Mikrophon (MP34DT05)	71
7.2.5. DC-DC-Wandler (MPM3610)	71
7.3. Beschreibung der Schnittstellen	71
7.3.1. I ² C	71

7.3.2. USB	72
7.3.3. Bluetooth®5	72
7.3.4. Weitere Kommunikationsschnittstellen	72
7.3.5. Digitale Ein- und Ausgangspins	73
7.3.6. Analoge Eingangspins	73
7.3.7. Weitere Pins	73
7.3.8. LED-Lampen	73
7.4. Hinweis Arduino 33 BLE Sense Lite	73
7.5. Bezugsquellen	74

III. Arduino Nano 33 BLE Sense - External Sensors and Actors 75

8. Drehwinkel-Encoder	77
8.1. Encoder	77
8.2. Drehwinkel-Encoder	77
9. Schrittmotor NEMA 17	79
9.1. Beschreibung eines Schrittmotors	79
9.1.1. Aufbau und Funktionsweise eines Schrittmotors	79
9.1.2. Schrittmotor Bauformen	80
9.1.3. Betriebsarten unipolar und bipolar	81
9.1.4. Mikroschrittverfahren	81
9.2. Schrittverluste verhindern	81
9.2.1. Auswahl des Schrittmotors	81
9.2.2. Betriebsart	82
9.2.3. Externe Ereignisse	84
9.3. Beschreibung des verwendeten Schrittmotors	84
9.4. Spezifikation	85
9.5. Anschluss an den DRV8825	85
9.6. Weiterführende Literatur	85
10. Schrittmotortreiber DRV8825	87
10.1. Allgemeine Beschreibung eines Motortreibers	87
10.2. Spezifische Beschreibung des Schrittmotortreibers DRV8825	87
10.2.1. Anschluss des Treibers mit dem Arduino Nano 33 BLE Sense	87
10.3. Spezifikationen	87
10.4. Kalibrierung	87
10.5. Einfaches Beispiel mit Code	89
10.6. Weiterführende Literatur	89
11. Geschwindigkeitssensor LM393	91
11.1. Allgemeine Beschreibung des Sensors	91
11.2. Spezifische Beschreibung des Sensors	91
11.2.1. Funktionsweise der Lichtschranke	91
11.2.2. Signalverarbeitung mit dem LM393 Komparator	92
11.2.3. Anschluss des Sensors mit dem Arduino Nano 33 BLE Sense	92
11.3. Spezifikationen	93
11.4. Bibliothek	93
11.4.1. Installation	93
11.4.2. Code-Beispiel	93
11.5. Kalibrierung	95
11.6. Einfaches Beispiel mit Code	95
11.7. Tests	95
11.8. Weiterführende Literatur	95

12. OLED-Display	97
12.1. Allgemeine Beschreibung eines OLED-Displays	97
12.2. Spezifische Beschreibung OLED-Displays	97
12.3. Anschluss des Sensors mit dem Arduino Nano 33 BLE Sense	97
12.4. Spezifikationen	98
12.5. Bibliothek	98
12.5.1. Installation	98
12.5.2. Code-Beispiel	98
12.6. Einfaches Beispiel mit Code	98
12.7. Weiterführende Literatur	98
13. Sensor XY	101
13.1. General	101
13.2. Specific Sensor/Actor	101
13.3. Specification	101
13.4. Library	101
13.4.1. Description	101
13.4.2. Installation	101
13.4.3. Functions	101
13.5. Example	101
13.5.1. Manual	102
13.5.2. Inside the Example	102
13.5.3. Code	102
13.5.4. Files	102
13.6. Calibration	102
13.7. Simple Code	102
13.8. Simple Application	102
13.9. Tests	102
13.9.1. Simple Function Test	102
13.9.2. Test all Functions	102
13.10 Further Readings	102
14. Actor XY	103
14.1. General	103
14.2. Specific Sensor/Actor	103
14.3. Specification	103
14.4. Library	103
14.4.1. Description	103
14.4.2. Installation	103
14.4.3. Functions	103
14.5. Example	103
14.5.1. Manual	104
14.5.2. Inside the Example	104
14.5.3. Code	104
14.5.4. Files	104
14.6. Calibration	104
14.7. Simple Code	104
14.8. Simple Application	104
14.9. Tests	104
14.9.1. Simple Function Test	104
14.9.2. Test all Functions	104
14.10 Further Readings	104

Contents	7
IV. Anhang	105
15. Materialliste	107
Literaturverzeichnis	109
Stichwortverzeichnis	115
Index	115

List of Figures

2.1. Hauptoberfläche in der Arduino IDE (Eigenaufnahme)	19
2.2. Installation des Boards (Eigenaufnahme)	20
2.3. Herunterladen von Bibliotheken (Eigenaufnahme)	20
3.1. Menu Button	23
3.2. Arduino IDE 2.3.3 Download	24
3.3. Summary of DownloadOptions	25
3.4. Arduino IDE Create Agent Installation	25
3.5. Arduino Setup Installation options	26
3.6. Arduino Setup Installation Folder	26
3.7. Arduino IDE Sketch	26
3.8. Steps for Installation	27
3.9. ArduinoIDE Create Agent Installation	27
3.10. Open the Download folder	28
3.11. Copy to the Applications Folder	28
3.12. Arduino IDE Sketch	29
3.13. Overview	30
3.14. Sketchbook	30
3.15. Board Manager	31
3.16. Library Manager	31
3.17. Command Prompt with Administrator Privileges	33
3.18. Command Prompt	33
3.19. Including the Nano33BLESenseLED Library	34
3.20. Serial Monitor	35
3.21. Examples	36
3.22. Debugging Example	36
3.23. Autocomplete	37
3.24. Menu Bar Option	37
5.1. Arduino Mbed OS Nano Boards Installation	42
5.2. Select the Connected board - here Arduino Nano 33 BLE Sense	42
5.3. Arduino Nano 33 BLE Sense Reset Button	43
5.4. green and orange Builtin-LED	44
5.5. Select Available Port for Uploading Arduino Sketch	44
5.6. Upload the Program in Arduino board	45
5.7. Setting the Port	45
5.8. LED Example Sketch	46
5.9. LED-Built Example	46
6.1. Exmaple output of Graphviz	49
6.2. Start image from the website https://doxygen.nl/	50
6.3. Download area from the website https://doxygen.nl/	50
6.4. Query after the complete installation during the installation process of doxygen	51
6.5. Query after the complete installation during the installation process of doxygen	51
6.6. Start image from the website https://www.graphviz.org/	52

6.7. Download area from the website https://www.graphviz.org/download/	52
6.8. Query for adding the Graphviz path to the system variable <code>PATH</code> . . .	53
6.9. Query for the path to Graphviz	53
6.10. Query for the start menu of Graphviz	54
6.11. DoxyWizard tab “Wizard” - Project	55
6.12. DoxyWizard tab “Wizard” - Mode	56
6.13. DoxyWizard tab “Wizard” - Diagrams	56
6.14. DoxyWizard tab “Wizard” - Output	57
6.15. DoxyWizard tab “Wizard” - Expert - Build	58
6.16. DoxyWizard tab “Wizard” - Expert - Dot	59
6.17. DoxyWizard tab “Wizard” - Run	60
7.1. Arduino Nano 33 BLE Sense (Vereinfachte Darstellung)	69
7.2. Arduino Nano Pinbelegung [Ard.2024]	71
9.1. Prinzipieller Aufbau Schrittmotor (2-phasig) [Hagl.2021]	80
9.2. Start-Stopp Frequenz [FaulhaberDriveSystems.2020]	82
9.3. Trapezförmiges Geschwindigkeitsprofil [FaulhaberDriveSystems.2020]	83
11.1. Anschluss des Sensors ans den Arduino Nano 33 BLE Sense	92
11.2. Aufrufen der Bibliotheken in der Arduino IDE	93
11.3. Installation der TimerOne Bibliothek	94
11.4. Aufrufen der Beispiele für die TimerOne Bibliothek	94
11.5. wird noch in Code umgewandelt!	96
12.1. Installation der U8g2 Bibliothek	99
12.2. wird noch in Code umgewandelt!	99

List of Listings

2.1. Blink.py	21
8.1. Testprogramm für den Encoder	78

Acronyms

AAR	Automatic Address Recognition
ADC	Analog to Digital Converter
AES	Advanced Encryption Standard
BLE	Bluetooth Low Energy
CCM	Counter with CBC-MAC
DMA	Direkt Memory Access
ECB	Electronic Codebook
EMI	Electromagnetic Interference
FPU	Floating Point Unit
I²C	Inter-Integrated Circuit
IC	Inter Circuit
IDE	Integrated Development Environment
IMU	Inertial Measurement Unit
LED	Light Emitting Diode
MUSB	Mini Universal Serial Bus
NFC	Near Field Communication
OLED	Organic Light Emitting Diode
PDM	Pulse Density Modulation
SCL	Serial Clock
SDA	Serial Data
SMD	Surface-Mounted Device
SoC	System on Chip
SPI	Serial Peripheral Interface
UV	Ultraviolettstrahlung

1. Introduction

1.1. Introduction

Bézier curves are parameter curves that can be used to represent free-form curves. They are named after the French engineer Pierre Bézier, who developed them in the 1960s at Renault to design car body shapes. During the same period, French physicist and mathematician Paul de Casteljau developed these curves independently of Pierre Bézier at Citroën. Paul de Casteljau's results were available earlier, but they were not published. This is the reason why Pierre Bézier is the namesake of these parameter curves.[Far02]

The Bézier curves are the basis for computer-aided design of models. This is referred to either as Computer Aided Design (CAD) or, when the emphasis is more on a mathematical view, Computer Aided Geometric Design (CAGD). [BN11] Computer requires a mathematical description of shapes to represent them. The most suitable description method for this is the use of parametric curves and surfaces. Here Bézier curves play the central role, because they are the most numerically stable polynomial bases used in CAD/CAGD software.[Far02]

Typography on the computer also uses Bézier curves. There are two ways of representing type with the computer. The simplest way is to save each individual letter with a fixed resolution and size as a bitmap and copy it to the memory area of the screen as needed. These so-called bitmap fonts can be displayed quickly but require a lot of memory if the characters are to be available in different sizes. In this case, an extra bitmap must be created for each size. The quality also decreases when these bitmap fonts are scaled in size and resolution. Vector fonts are an alternative. Their name is derived from the fact that they use curves defined in a two-dimensional vector space to represent the characters. The advantage here is that the characters displayed in this way can be scaled without loss of quality. Two standards have developed for vector fonts. One is the TrueType font and the other is the PostScript font. The TrueType fonts use square Bézier curves while the PostScript fonts use cubic Bézier curves. The cubic Bézier curves have more control points which leads to a better quality.

Another field of application is the control of machine tools. When moving to a corner, the axis must be braked to a standstill at the corner point and then accelerated again after direction correction. This procedure ensures that it is not possible to move at a constant speed, which has negative consequences for the cycle time and quality. A possible solution to this problem is to place a curve between the two sections instead of a sharp corner, which can be run at a constant speed. Bézier curves are suitable for this purpose because only two points and two tangents are needed to form them. In the case of a corner, the points as well as the tangents would lie on the sections that form the corner. The resulting error would be analytically controllable and would allow an adjustment of the curve tolerance.[SS14]

1.2. Challenges and Solutions

1.3. Structure

Part I.

Arduino IDE

2. Beschreibung der Software IDE

2.1. Installation der Arduino IDE

Die Programmierung von Mikrocontrollern, wie dem verwendeten Arduino Nano 33 BLE Sense Lite, erfolgt unter Verwendung der Software Arduino IDE in der Version 2.3.2. Als Alternative kann auch die Entwicklungsumgebung Qt verwendet werden, welche die Programmierung in der Programmiersprache C++ ermöglicht. Vorteil der Arduino IDE besteht in ihren Funktionen, welche das Einbinden der Software auf dem Mikrocontroller vereinfachen. Die Software Arduino IDE kann über die offizielle Webseite von Arduino bezogen werden, welche unter der folgenden URL erreichbar ist: www.arduino.cc/software erreichbar ist. Auf dieser Plattform stehen diverse Versionen, für unterschiedliche Betriebssysteme, wie Windows, Linux und Mac OS X, sowie in verschiedenen Dateiformaten, zur Auswahl bereit [ArdIDE.2024]. Die Installation der Anwendung erfolgt durch die Ausführung der heruntergeladenen Datei sowie die Befolgung der Installationsanweisungen. Im Anschluss ist eine korrekte Konfiguration des verwendeten Entwicklungsboards sowie die Installation entsprechender Bibliotheken erforderlich.

2.2. Beschreibung der Entwicklungsumgebung

Nach dem Start der installierten Anwendung öffnet sich die Hauptoberfläche, erkennbar in Abbildung 2.1

Figure 2.1.: Hauptoberfläche in der Arduino IDE (Eigenaufnahme)

Die Hauptoberfläche ist mit einer Menüleiste ausgestattet, die verschiedene Menüs wie *Datei*, *Bearbeiten* und *Sketch* enthält. Diese Menüs ermöglichen das Bearbeiten und Öffnen von Sketches, also Programmen in der IDE, das Kompilieren und Hochladen von Code sowie das Verwalten von Bibliotheken. Zudem ist in der Menüleiste ein Hilfe-Menü integriert, das bei Fragen und Problemen Unterstützung bietet. Die Symbolleiste auf der linken Seite der Hauptoberfläche bietet Schaltflächen für häufig genutzte Funktionen wie das Verwalten von Sketches, Boards und Bibliotheken. Im Zentrum der Hauptoberfläche befindet sich ein Code-Editor, welcher die Bearbeitung der Sketches ermöglicht. Nach dem ersten Kompilieren eines Sketches erscheint direkt darunter ein Ausgabefenster, welches den Kompilierungs- und Hochladeprozess sowie eventuelle Fehler während der Kompilierung anzeigt. Dadurch können Probleme im Code schnell identifiziert werden.

2.3. Erste Schritte in der Entwicklungsumgebung

2.3.1. Auswahl des Mikrocontrollers

In der Entwicklungsumgebung können Sketche geöffnet und geschrieben werden. Um den Sketch kompilieren zu können, ist es erforderlich das korrekte Board auszuwählen.

Dafür muss zunächst das entsprechende Board installiert werden. Dies erfolgt über den *Boards-Manager*, erkennbar in Abbildung 2.2.

Figure 2.2.: Installation des Boards (Eigenaufnahme)

Im *Boards Manager* steht die Datei Arduino Mbed OS Nano in der aktuellen Version 4.1.1 zum herunterladen und installieren bereit. Im Anschluss kann unter *Select Board* das Board Arduino BLE Sense 33 ausgewählt werden [ArdIDE.2024b]. Alternativ kann das Board über ein USB-Kabel angeschlossen werden. Unter *Select Board* wird bereits das korrekte Board und der entsprechende COM, also in diesem Fall der USB-Port, angeboten. Nach der Auswahl sind die Installationsanweisungen zu befolgen, um das Board zu installieren.

2.3.2. Bibliotheken einbinden

Von Arduino gibt es bereits viele offiziell unterstützte Bibliotheken. Um diese in einem Sketch nutzen zu können, ist zunächst eine Installation erforderlich. Dazu kann über den *Library Manager* die benötigte Bibliothek heruntergeladen und installiert werden, erkennbar in Abbildung 2.3. Die Suchfunktion hilft dabei, die korrekte Bibliothek zu finden [ArdIDE.2024c].

Figure 2.3.: Herunterladen von Bibliotheken (Eigenaufnahme)

Nachdem die Bibliothek installiert wurde, kann sie im header in den Sketch eingebunden werden. Bei Verwendung von Bibliotheken, die nicht im *Library Manager* zu finden sind, besteht die Möglichkeit diese über *Sketch->Include Libraries->Add .ZIP Library...* einzubinden.

2.4. Programmierung

Bei einem neuen Sketch sind bereits die Funktionen *void setup()* und *void loop()* hinterlegt.

2.4.1. header

Im *header* werden die erforderlichen Bibliotheken hinterlegt und initialisiert. Gleichzeitig können hier auch Adressen von Peripheriegeräten hinterlegt und erste wichtige Variablen definiert werden.

2.4.2. setup()

Die *void setup()*-Funktion wird bei jedem Neustart oder Reset einmal ausgeführt [ArdIDE.2024d]. In diesem Beispiel wird die serielle Kommunikation gestartet, aber auch verwendete Pins initialisiert und zugewiesen.

2.4.3. loop()

In der *void loop()*-Funktion findet der größte Teil des Programms statt. Der Inhalt dieser Funktion wird dauerhaft wiederholt, bis entweder kein Strom mehr an dem

Arduino anliegt, oder der Reset-Knopf gedrückt wird, wodurch zunächst erst die *void setup()*-Funktion wieder gestartet wird [ArdIDE.2024e].

2.5. Erster Programmtest

Um die Funktionalität eines Systems zu testen, wird in der Regel zunächst ein simples Programm oder eine grundlegende Funktion getestet. In diesem Fall kann hier über *Datei -> Beispiele -> 01.Basics -> Blink* ein Sketch geöffnet werden, in dem die auf dem Arduino Nano 33 BLE Sense Lite aufgebrachte LED in einem fest gelegten Takt blinkt. Auf diese Weise kann die korrekte Auswahl des Boards und die Übertragung des Sketches auf den Mikrocontroller getestet werden. 2.1

```
void setup() {  
    pinMode(LED_BUILTIN, OUTPUT);  
}  
void loop() {  
    digitalWrite(LED_BUILTIN, HIGH);  
    delay(1000);  
    digitalWrite(LED_BUILTIN, LOW);  
    delay(1000);  
}
```

Listing 2.1.: Blink.py

In der *void setup()*-Funktion wird in diesem Beispiel über den Ausdruck *pinMode(LED_BUILTIN, OUTPUT)* die auf dem Mikrocontroller verbaute LED in dem Sketch aufgerufen und eingebunden. In *void loop()* wird durch den Befehl *digitalWrite()* die LED eingeschaltet, indem eine Spannung an sie angelegt wird. Nach einer kurzen Verzögerung durch den gleichen Befehl wird die LED dann wieder ausgeschaltet, indem die anliegende Spannung gesenkt wird. Die Verzögerung kann mit dem *delay()*-Befehl eingestellt werden, indem der Wert in der Klammer angepasst wird. Dabei wird der Wert in Millisekunden angegeben.[Arduino.2014]

3. Arduino IDE 2.3.x

This chapter provides a comprehensive examination of the Arduino IDE, covering its features, interface options, and functionality. It includes a detailed explanation of each component's purpose and usability, a step-by-step installation guide, and instructions for initializing and configuring the environment. This foundational overview equips readers to effectively use the IDE for programming and troubleshooting Arduino-compatible hardware.

3.1. Arduino IDE Description

The Arduino IDE is an open-source official software designed for editing, compiling, and uploading code to Arduino modules. It is cross-platform and compatible with operating systems such as Windows, Linux, and macOS. Built on the Java platform, the IDE supports various Arduino modules and programming in C and C++.

The microcontrollers on Arduino boards are programmed to process information provided in the form of code. Programs written in the IDE are referred to as sketches. These sketches generate a Hex file, which is then transferred and uploaded to the microcontroller.

The IDE environment consists of two primary components: the editor and the compiler. The editor is used to write code, while the compiler compiles and uploads the code to the Arduino module.[FAD18] In version 2.3.3 of the Arduino IDE, the menu bar, located at the top of the interface, plays a crucial role by providing access to important commands such as Upload, Verify/Compile, and Save. Additionally, it includes the File menu for opening new or existing files and the Examples section, which offers prewritten sketches for various applications like Blink and Fade.

The 6 buttons are present on top of the screen are as follows:




Figure 3.1.: Menu Button

- ✓ The icon check mark is used to **Verify** the written code. After the code is entered, selecting this icon checks for any errors and confirms that the code is properly structured. This step ensures the code is ready for use with the hardware.
- ↗ The icon **Upload** in the Arduino IDE compiles your code and uploads it to the connected board, making it ready to run.
- ▶ The icon **Start Debugging** icon in the Arduino IDE initiates a debugging session, enabling you to analyze your code by setting breakpoints, stepping through execution, and inspecting variables on compatible boards.
- √ The icon **Serial Plotter** in the Arduino IDE opens a tool that visualizes real-time data sent from the board over the serial connection, displaying it as graphs for easier analysis.

The icon **Serial Monitor** in the Arduino IDE opens a terminal to view and send text-based data over the serial connection, enabling communication with the connected board in real time.

VS: hier noch einmal die letzten Grafiken in der Auflistung nach links verschieben

3.2. Installation of the Arduino IDE

3.2.1. Download of the Arduino IDE

The Arduino Nano 33 BLE Sense utilizes the Arduino Software **Integrated Development Environment (IDE)** for programming, which is the most widely used IDE for all Arduino boards and can be run both online and offline. This open-source Arduino IDE simplifies the process of writing code and uploading it to the board. Various versions of the software are available for each operating system (OS), including macOS, Linux, and Windows. The Arduino community also offers an online platform for coding and saving sketches in the cloud. This online Arduino editor is the latest version of the IDE, featuring all libraries and support for new Arduino boards. To access these software packages, visit the following Website: [Arduino-Software](#), to stay up to date, as there are daily updates available on the mentioned link.

The editor can be downloaded directly from the Arduino Software page with ease. The download options can be seen in Figure 3.2.

Downloads





Arduino IDE 2.3.3

The new major release of the Arduino IDE is faster and even more powerful! In addition to a more modern editor and a more responsive interface it features autocompletion, code navigation, and even a live debugger.

For more details, please refer to the [Arduino IDE 2.0 documentation](#).

Nightly builds with the latest bugfixes are available through the section below.

SOURCE CODE

The Arduino IDE 2.0 is open source and its source code is hosted on [GitHub](#).

DOWNLOAD OPTIONS

Windows Win 10 and newer, 64 bits

Windows MSI installer

Windows ZIP file

Linux AppImage 64 bits (X86-64)

Linux ZIP file 64 bits (X86-64)

macOS Intel, 10.15: "Catalina" or newer, 64 bits

macOS Apple Silicon, 11: "Big Sur" or newer, 64 bits

[Release Notes](#)

Figure 3.2.: Arduino IDE 2.3.3 Download

3.2.2. Summary of Options

Below is a summary 3.3 of the available download options for the Arduino IDE, tailored to different operating systems and individual needs. Choose the appropriate version for the device to ensure compatibility and access to the latest features.

Summary of Options:

Operating System	Option	Description
Windows	Windows 10 and newer (64-Bit)	Direct download for Windows 10 and newer 64-bit versions, without using the MSI installer.
	MSI Installer	Easy installation through an <code>.msi</code> package.
	ZIP File	Portable, no installation required, just extract and run directly.
Linux	ApplImage 64-Bit (x86-64)	Portable, no installation required.
	ZIP File 64-Bit (x86-64)	Portable, extract and run directly.
macOS	macOS Intel (10.15: Catalina or newer)	For Intel Macs with macOS 10.15 or newer.
	macOS Apple Silicon (11: Big Sur or newer)	For Apple Silicon Macs (M1, M2) with macOS Big Sur 11 or newer.

Figure 3.3.: Summary of DownloadOptions

3.2.3. Installation on Windows

The installation process for Arduino IDE 2 on a Windows computer will be described step by step in the upcoming section. Following the installation instructions, the subsequent chapter will provide an overview of the IDE's features, including the Board Manager, Library Manager, Sketchbook, and more.

To install the Arduino IDE 2 on a Windows computer, simply run the file downloaded from the software page Arduino Software [Arduino-Software](#). Follow the installation steps, as shown in the Figure ??, to ensure correct installation.

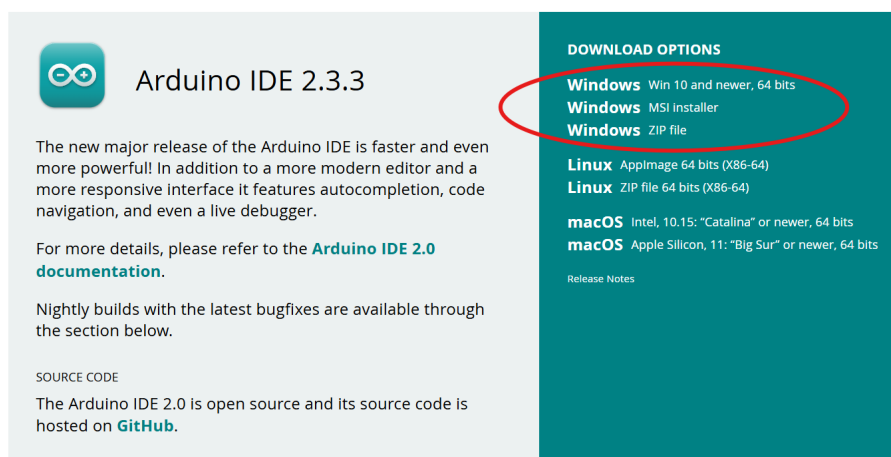
Downloads

Figure 3.4.: Arduino IDE Create Agent Installation

After the download is complete, open the `file setup` and proceed with the installation. Select all components as shown in Figure 3.5 in the dialog box, and then click `Next`.

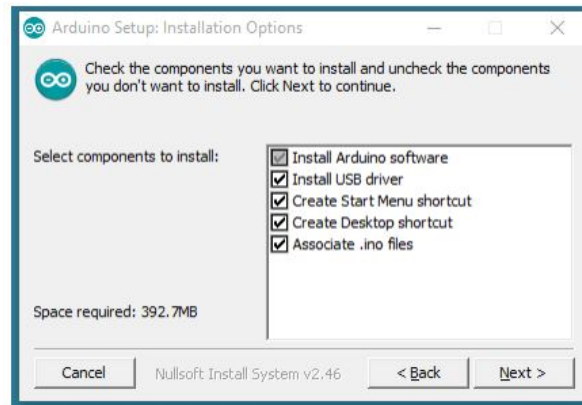


Figure 3.5.: Arduino Setup Installation options

Select the destination folder as seen in Figure 3.6 and click **Install**.

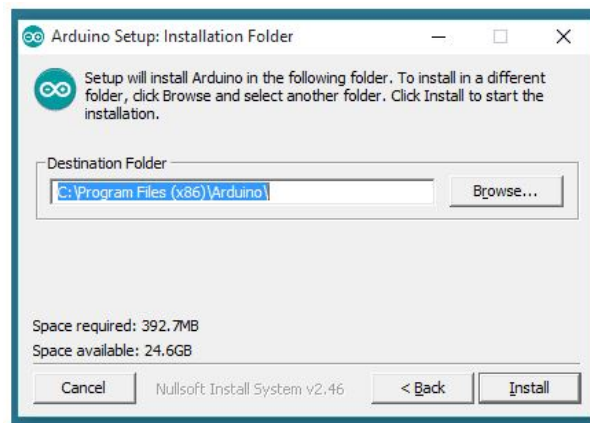


Figure 3.6.: Arduino Setup Installation Folder

Once the installation is complete, open the Arduino IDE. A default sketch will appear on the screen, as shown in Figure 3.7.

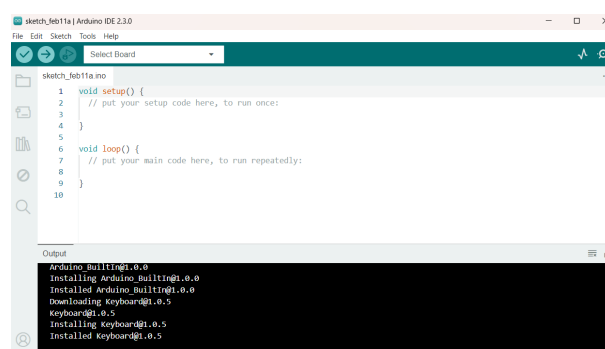


Figure 3.7.: Arduino IDE Sketch

It can be seen from the above figure 3.7 that the basic arduino sketch has two parts. The first part is the function `void setup()` which returns void and we do the initialization such as the output LED color, specifying the core etc. The second part is the function `void loop()` where we define functions which are to be performed

through out the loop. These codes are placed between paranthesis `{ }` and each function has a return type, here it has void return type.

Below in Figure 3.8 is a summary of the installation steps for the Windows version, outlining the key actions required to properly install the softwar

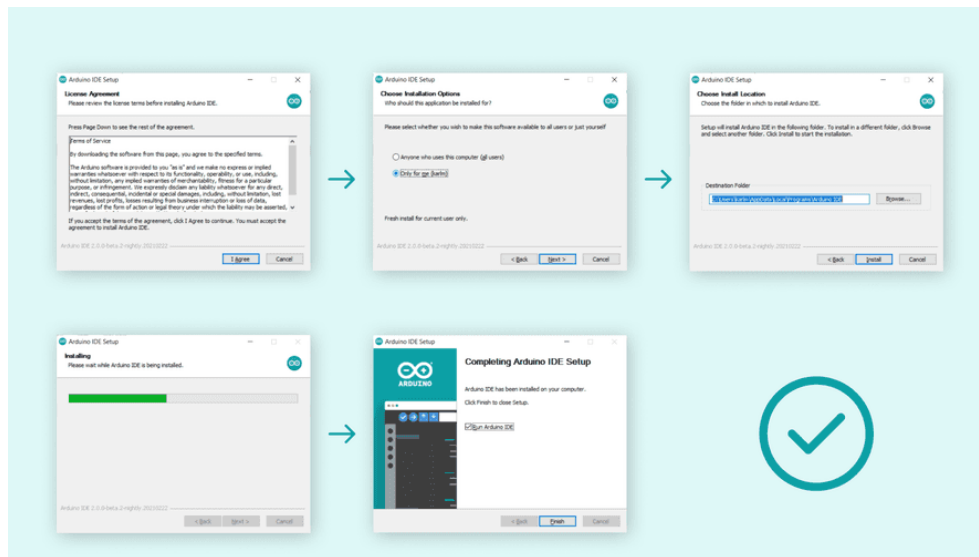


Figure 3.8.: Steps for Installation

3.2.4. Installation (MacOS)

To install the Arduino IDE, begin by downloading the latest version from the Arduino website Arduino Software [Arduino-Software](#). Select the version compatible with the specific operating system in use. In this case, Arduino 2.3.2 is being installed for macOS (Sonoma 14.4.1). The setup file is named [Arduino-Software](#) and has a size of 193,600 KB. This file is in Zip format. For those downloading Arduino IDE 2.3.X with Safari, the file will automatically extract upon download completion, while other browsers may require manual extraction. The figure below displays the latest offline version of Arduino IDE 2.3.3 3.9, which is also compatible with all operating systems.

Downloads



Arduino IDE 2.3.3

The new major release of the Arduino IDE is faster and even more powerful! In addition to a more modern editor and a more responsive interface it features autocompletion, code navigation, and even a live debugger.

For more details, please refer to the [Arduino IDE 2.0 documentation](#).

Nightly builds with the latest bugfixes are available through the section below.

SOURCE CODE

The Arduino IDE 2.0 is open source and its source code is hosted on [GitHub](#).

DOWNLOAD OPTIONS

Windows Win 10 and newer, 64 bits

Windows MSI installer

Windows ZIP file

Linux Appliance 64 bits (X86-64)

Linux ZIP file 64 bits (X86-64)

macOS Intel, 10.15: "Catalina" or newer, 64 bits

macOS Apple Silicon, 11: "Big Sur" or newer, 64 bits

[Release Notes](#)

Figure 3.9.: ArduinoIDE Create Agent Installation

S:Die Installation muss aktualisiert werden, die folgenden Bilder müssen mit einem Mac ebenso aktualisiert werden

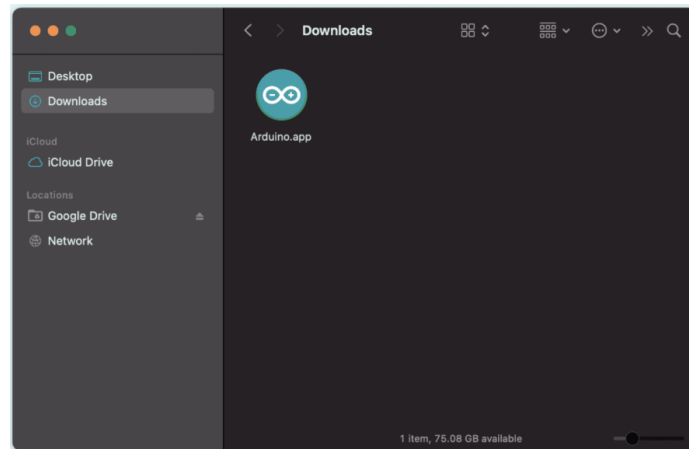


Figure 3.10.: Open the Download folder

Copy the Arduino application bundle into the application's folder (or elsewhere on the computer) then it looks like Figure 3.11.

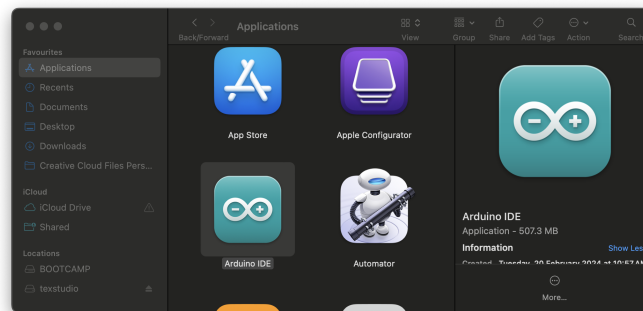


Figure 3.11.: Copy to the Applications Folder

It can be seen from the Figure 3.12 that the basic Arduino sketch has two parts.

- `void setup()`: This function returns void and performs initializations such as setting the output LED color and specifying the core.
- `void loop()`: In this function, specific operations to be executed within the loop are defined. The code for each operation is enclosed within curly braces `{ }`, and each function has a return type. In this case, the return type is `void`.

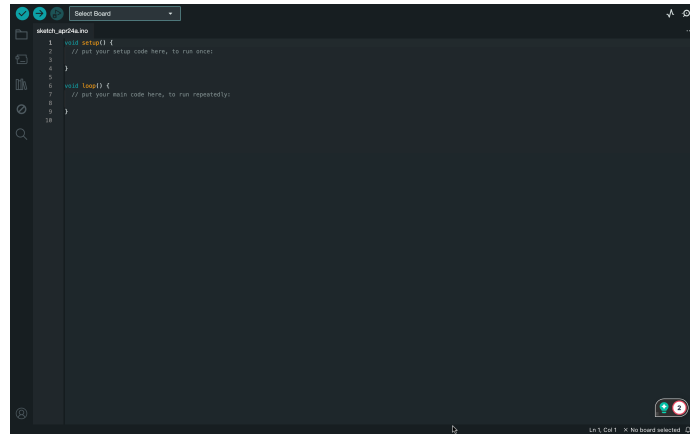


Figure 3.12.: Arduino IDE Sketch

WS:Figure 1.22 muss größer und alle Bilder in diesem Kapitel ohne Schwarzmodus

3.3. Overview

The Arduino IDE 2 features a new sidebar, making the most commonly used tools more accessible. 3.13 [Ard24a]

- **Verify / Upload** These functions are used to compile and upload code to an Arduino board.
- **Select Board and Port** detected Arduino boards automatically show up here, along with the port number.
- **Sketchbook** This section serves as a centralized repository for all sketches that are stored locally on the user's computer. The Sketchbook is designed to provide a structured, easily accessible space for managing, organizing, and editing code developed within the Arduino environment. Additionally, the Sketchbook offers a synchronization feature with the Arduino Cloud, enabling seamless access to stored sketches across devices. This cloud integration allows users to retrieve and edit sketches from the online Arduino environment
- **Boards Manager** browse through Arduino and third party packages that can be installed. For example, using a MKR WiFi 1010 board requires the Arduino SAMD Boards package installed.
- **Library Manager** browse through thousands of Arduino libraries, made by Arduino and its community.
- **Debugger** test and debug programs in real time.
- **Search** search for keywords in the written code.
- **Open Serial Monitor** opens the Serial Monitor tool, as a new tab in the console.



Figure 3.13.: Overview

3.4. Features

The Arduino IDE 2 is a versatile development tool offering features like direct library installation, cloud synchronization for sketches, and built-in debugging tools. This section highlights some of its core features, with links to more detailed resources.

3.4.1. Sketchbook

The Sketchbook is where Arduino code files, known as sketches, are stored. These files are saved with the extension `.ino`. To maintain proper organization, each sketch must be placed in a folder named exactly the same as the sketch file. For example, a sketch named `MySketch.ino` must be saved in a folder named `MySketch`. This naming convention is essential for the Arduino IDE to correctly identify and manage the sketches. As seen in Figure 3.14.

Typically, sketches are stored in a folder named `Arduino` located within the Documents directory of the system.

To access the Sketchbook, the icon folder in the sidebar of the Arduino IDE can be selected. This action opens the directory where the sketches are stored, allowing for efficient management and access to the sketches.

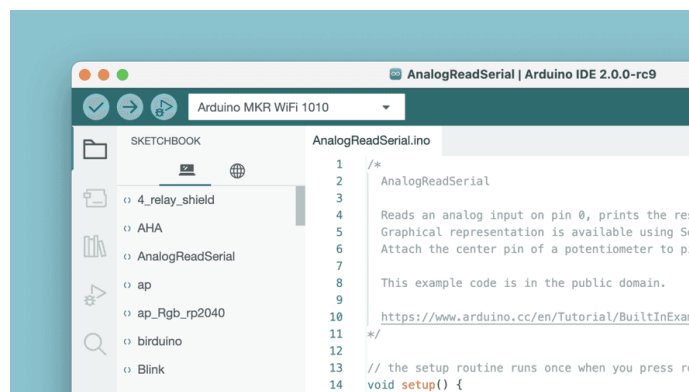


Figure 3.14.: Sketchbook

3.4.2. Boards Manager

The Board Manager can be found in the following steps: **Tools** » **Board** » **Board Manager**.

The Boards Manager in the Arduino IDE allows the installation of different board packages, as shown in Figure 3.15. A board package provides the necessary files and instructions to compile and upload code to specific types of Arduino boards.

Various board packages are available, such as avr, samd and megaavr. Each package supports different Arduino board families. For example, avr is for older boards like the Arduino Uno, while samd is used for newer boards like the Arduino Zero. Using the Boards Manager ensures that the right tools and files are installed for programming the selected board.

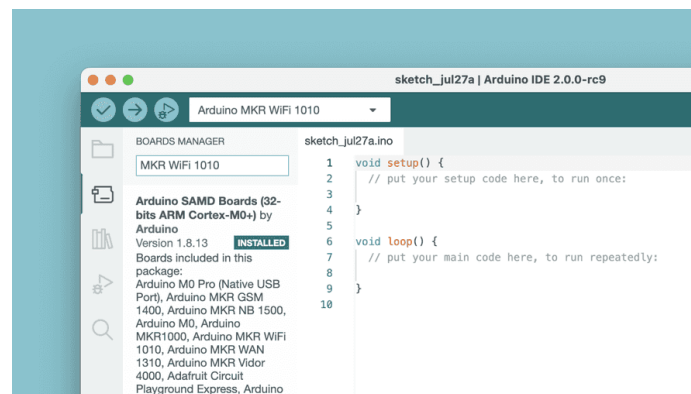


Figure 3.15.: Board Manager

3.4.3. Library Manager

The Library Manager can be found in the following steps: **Tools** » **Manage Libraries**.

The Library Manager in the Arduino IDE allows users to browse and install a wide range of libraries. Libraries extend the core Arduino functions, making it easier to perform tasks such as controlling servo motors, reading data from specific sensors, or working with modules like Wi-Fi. These libraries provide prewritten code to handle specific hardware components and simplify complex tasks, allowing for faster and more efficient development in Arduino projects. As seen in Figure 3.16.

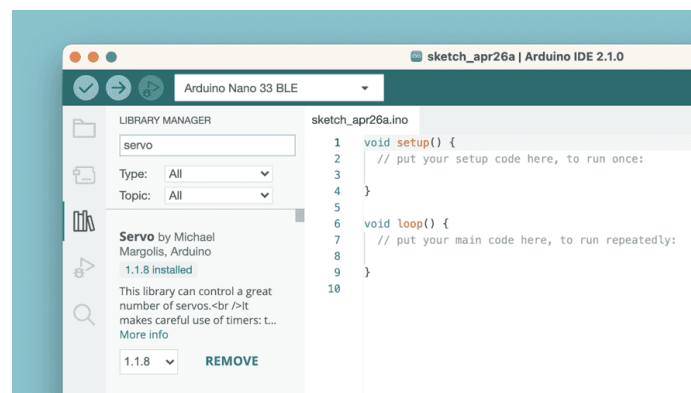


Figure 3.16.: Library Manager

3.5. Integrating and Using a Custom Library in Arduino IDE

In the development of embedded systems using the Arduino platform, libraries are essential for abstracting and simplifying complex functionality. A custom library is particularly beneficial when a specific functionality or hardware interface is repeatedly used across different projects. This section outlines the process of creating, installing, and using a custom library within an Arduino project, in the Arduino Integrated Development Environment (IDE).

3.5.1. Creating the Library Files

A well-structured custom Arduino library typically consists of at least two key components:

Header File (.h): This file contains the declarations of classes, functions, and variables that define the interface of the library. It provides the necessary definitions for the functions and classes to be used by external programs.

Source File (.cpp): This file contains the actual implementation of the functions and methods declared in the header file. It defines the behavior of the functions and classes. The library structure is organized in a way that allows for clear separation between the declaration and implementation of its functionalities.

3.5.2. Installation and Integration of the Library

Once the custom library has been created, it must be properly installed and integrated into the Arduino IDE to be used in projects.

To install a custom library in Arduino follow these steps:

1. Locate the Libraries Folder: The Arduino IDE searches for libraries in the libraries folder, which is located within the Arduino sketchbook directory. The typical path to this directory is:

```
C:/Users/<username>/Documents/Arduino/libraries
```

2. Copy the custom library folder, e.g., `Nano33BLESenseLE`, into the directory `libraries`. The final path should look like this:

```
C:/Users/<username>/Documents/Arduino/libraries/Nano33BLESenseLED
```

3. Restart the Arduino IDE: After placing the library in the correct directory, restart the Arduino IDE to ensure that it recognizes the newly added library.

3.5.3. Using Symbolic Links for Library Integration

In some cases, it may be more convenient or necessary to store the library files outside the default library directory. For example, if the libraries are stored in a GitHub repository or for better version control, the command `mklink` can be used to create a symbolic link. This allows the Arduino IDE to access the library files as if they were in the default directory, without duplicating the files.

3.5.4. Windows Tool `mklink` to Create Symbolic Links

Symbolic links allow libraries to be stored in a different location while still being treated by the Arduino IDE as if they reside in the standard directory `libraries`. This can be particularly useful for version-controlled environments, such as when using Git, or to organize libraries without duplicating files.

Steps for Creating a Symbolic Link:

1. **Open Command Prompt with Administrator Privileges:** Press **Win + S** and search for **cmd**, click on **Command Prompt** and select **Run as Administrator** as seen in Figure 3.17

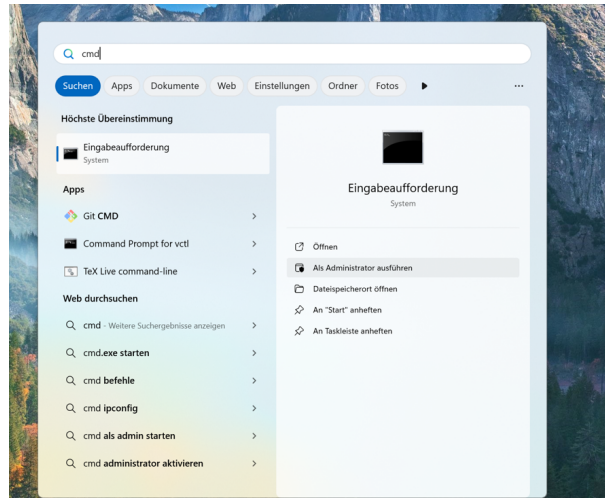


Figure 3.17.: Command Prompt with Administrator Privileges

2. **Execute the Command `mklink` :** The command for creating a symbolic link is: `mklink /D "TargetPath" "SourcePath"`

- **TargetPath:** The location where the Arduino IDE expects the library to be, here `libraries`.
- **SourcePath:** The actual location of the library.

For this example, the library is located at:

`C:/Users/MSRLabor/Documents/GitHub/241031ArduinoNano33BLESense/report/Code/Nano33BLESense/`

The target path in the Arduino IDE's libraries folder is:

`C:/Users/MSRLabor/Documents/Arduino/libraries/Nano33BLESenseLED`

The full command can be seen in Figure 3.18.

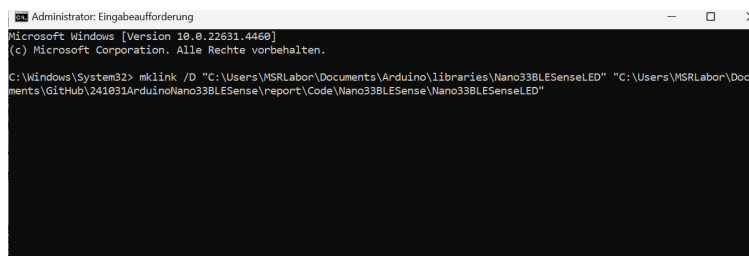


Figure 3.18.: Command Prompt

Verifying the Symbolic Link: After executing the command, navigate to the folder `libraries`. A folder named `Nano33BLESenseLED` should be present, acting as a symbolic link pointing to the actual library location.

WS:Figure 1.17, 1.18 w
an english sytem, so th
figures are on english

3.5.5. MacOS Command `ln -s` to Create Symbolic Links

1. Open Terminal: Open the `Terminal` application by searching for it in `Applications`, go to `Utilities`.
2. Execute the Command `ln -s` : The command for creating a symbolic link is:

```
ln -s "SourcePath" "TargetPath"
```

 - **TargetPath:** The location where the Arduino IDE expects the library to be, here `libraries`.
 - **SourcePath:** The actual location of the library.

For this example, the library is located at:

`C:/Users/MSRLabor/Documents/GitHub/241031ArduinoNano33BLESense/report/Code/Nano33BLESense/`

The target path in the Arduino IDE's libraries folder is:

`C:/Users/MSRLabor/Documents/Arduino/libraries/Nano33BLESenseLED`

The full command would be:

`ln -s "/Users/username/Documents/GitHub/241031ArduinoNano33BLESense/report/Code/Nano33BLESense/" "/Users/username/Documents/Arduino/libraries/Nano33BLESenseLED"`

Verifying the Symbolic Link: After executing the command, navigate to the folder `libraries`. A folder named `Nano33BLESenseLED` should be present, acting as a symbolic link pointing to the actual library location.

WS:here are some
pictures necessary as in
1.5.4

3.5.6. Verifying Library Availability in the Arduino IDE

To ensure that the custom library has been successfully integrated and is recognized by the Arduino IDE, follow these steps:

1. Restart the Arduino IDE: If the Arduino IDE was open during the library installation or after creating the symbolic link, close and reopen it. This step ensures the IDE reloads its list of available libraries.
2. Check the Library Menu: Navigate to `Sketch` go to `Include Library` and select the Library `Nano33BLESenseLED`, as seen in Figure 3.19
3. Verify Inclusion in the List: If the library is listed, it indicates successful recognition by the IDE. If not, double-check the directory structure and symbolic link to confirm they are correctly configured.
4. Compile a Test Program: Write a simple test program using functions or classes from the library. Compile the sketch to ensure there are no errors, which confirms that the library has been successfully integrated.

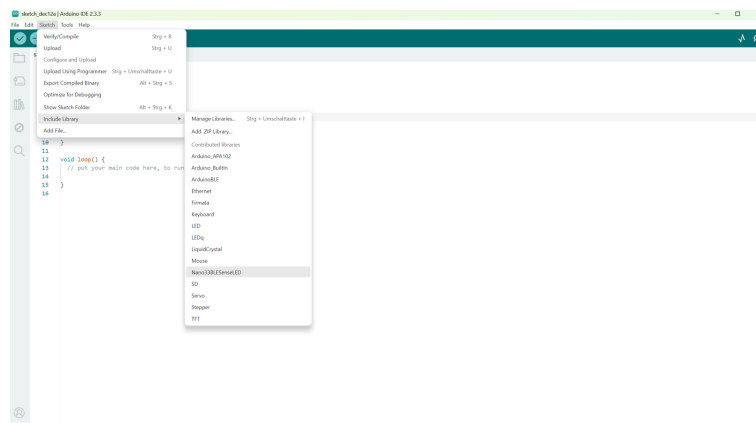


Figure 3.19.: Including the Nano33BLESenseLED Library

Once the program compiles without errors, the library is ready to use, and you can confidently include it in your Arduino projects.

3.5.7. Serial Monitor

The Serial Monitor can be found in the following steps: **Tool** **Serial Monitor**

The Serial Monitor is a tool that allows to view data streaming from the board, via for example the command `Serial.print()`.

Historically, this tool was located in a separate window but is now integrated with the editor, making it easy to run multiple instances simultaneously on your computer. The Serial Monitor can be seen in Figure 3.20.



Figure 3.20.: Serial Monitor

3.5.8. Serial Plotter

The tool Serial Plotter is great for visualizing data with graphs and monitoring, such as voltage peaks. It can monitor multiple variables simultaneously, with the option to enable specific types.

3.6. Examples

A significant component of the Arduino Documentation is the set of example sketches bundled with various libraries. These examples demonstrate the practical application of library functions, showcasing their intended uses and main features. Libraries included with certain board packages may also contain their own example sketches. To access these example sketches whether from libraries installed manually or those included with board packages navigate to **File** **Examples**, and locate the desired library from the list.

For instance, when an UNO R4 WiFi board is connected, the examples list appears with options specific to that board. An example sketch demonstrating a pre-loaded Tetris animation can be accessed by navigating to **File** **Examples** **LED Matrix** **MatrixIntro** and uploading it to the connected board. This example shows how the board's bundled code can be used in practice, assisting users in learning how to control various hardware functions directly.

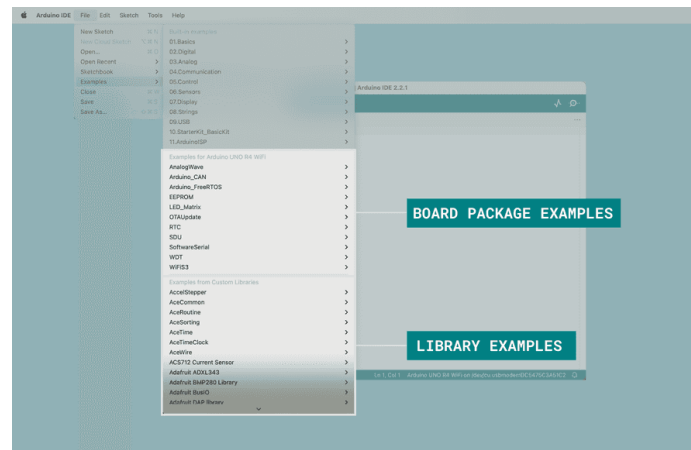


Figure 3.21.: Examples

In Figure 3.21 above, the examples list is shown when a UNO R4 WiFi board is connected to the computer.

3.7. Debugging

The tool Debugger in Arduino IDE 2.3.3 is designed to assist in testing and debugging programs by providing the ability to step through code execution in a controlled manner. This tool allows users to set breakpoints, step through code line-by-line, and inspect variables, helping to identify issues such as logic errors or incorrect variable values. The debugger enables users to pause execution at specific points in the program, allowing for a detailed examination of the program's behavior and memory state. This feature enhances the development process by making it easier to locate and fix errors during runtime, rather than relying solely on print statements or trial and error.

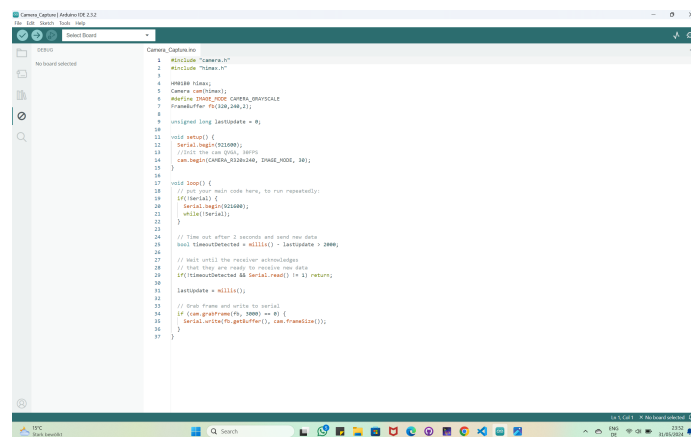


Figure 3.22.: Debugging Example

S:Debugging Bild muss
setzt werden, weil nicht
zu lesen

3.8. Autocompletion

Autocompletion is a key feature in Arduino IDE version 2, making it easier to code by suggesting functions and elements from the Arduino API. This feature helps identify and complete code more quickly, improving efficiency and accuracy.

For autocompletion to work, the board must be selected in the IDE. This ensures that the editor recognizes the correct functions and libraries for the specific board, allowing accurate suggestions. 3.23

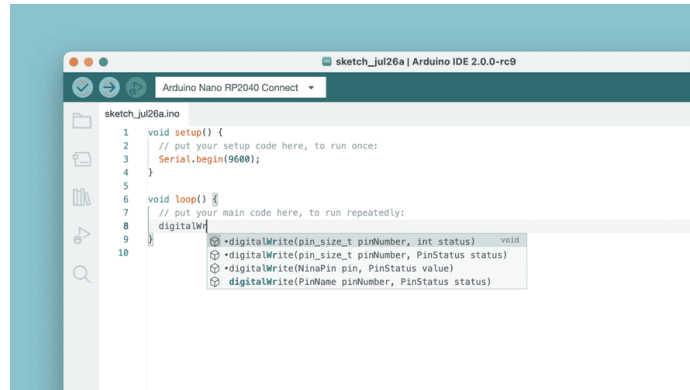


Figure 3.23.: Autocomplete

3.9. Conclusion

This guide provides an overview of key features in Arduino IDE 2, along with references to detailed articles for further exploration. Each section aims to enhance understanding and enjoyment of the wide range of functionalities included in the IDE.

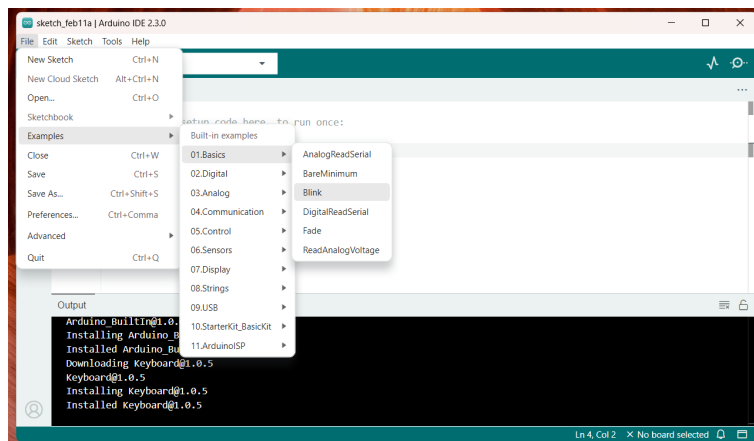


Figure 3.24.: Menu Bar Option

4. To-Do

- Mac Instalation nochmal durchführen und aktualisieren (gilt auch für die Bilder)
- In Discription: Item-Punkte anpassen mit den Bildsymbolen
- MyNote Kommentare beachten

5. Setup for the Arduino Nano 33 BLE Sense

5.1. Introduction

In this chapter, the process of connecting the Arduino Nano 33 BLE Sense to a computer or laptop and configuring essential settings to get started is explored. The steps for installing the necessary tools and ensuring the board is correctly set up in the Arduino IDE are detailed. Finally, a simple example sketch is demonstrated to verify that the board is working as expected and ready for further development.

There are set of examples which are build in Arduino (IDE) for the testing purpose, for checking all the configuration and setting up the board we can open one of the basic example `blnik.ino` first.

5.2. Configuration for the Arduino Nano 33 BLE Sense

To program the **Arduino Nano 33 BLE Sense** in an offline environment, follow these steps:

5.2.1. Installation of the driver

1. **Installation of the driver:** Begin by installing the latest version of the Arduino IDE on your computer. Refer to Section ?? for more details.
2. **Installation of the packages:** Once the IDE installation is complete, open the `Arduino IDE` and navigate to the menu `Tools`, located in the upper-left corner.
3. In the menu `Tools`, select the `Board Manager`.
4. In the window `Board Manager`, use the search bar to locate the **Arduino Nano 33 BLE Sense** by typing its name as shown in Figure 5.1 .
5. From the search results, select `Arduino Mbed OS Nano Boards` and click `Install` to install the required package.

The Mbed OS Nano Board package includes support for several Arduino Nano family boards, including the Arduino Nano 33 BLE Sense. After completing the installation, connect the Arduino Nano 33 BLE Sense to your computer using a USB-A to USB-Micro to begin programming.

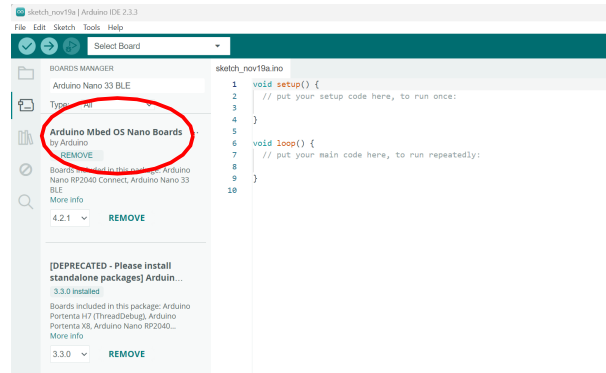


Figure 5.1.: Arduino Mbed OS Nano Boards Installation

5.2.2. Connection and Configuration of the Arduino Board to the Computer

To run either a built-in example or a custom program on the Arduino Nano 33 BLE Sense, follow these initial steps:

1. Connect the Arduino board to the computer using a USB-A-USB-micro-cable.
2. Open the Arduino IDE on the computer. A blank environment page will appear, showing the default `void setup()` and `void loop()` functions.
3. Navigate to the menu **Tools**, select **Board**, and choose the connected board, which is the **Arduino Nano 33 BLE Sense**, as shown in Figure 5.2.

This setup prepares the Arduino IDE to recognize and communicate with the Arduino Nano 33 BLE Sense.

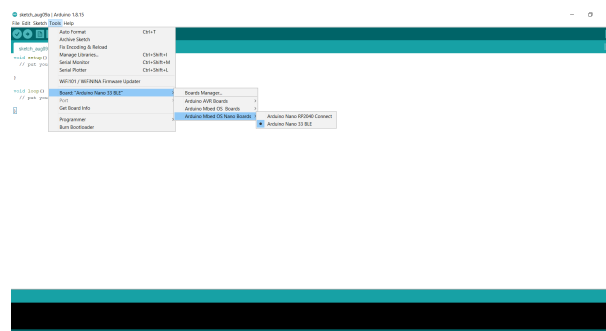


Figure 5.2.: Select the Connected board - here Arduino Nano 33 BLE Sense

5.2.3. Select the Appropriate Port

After selecting the Arduino Nano 33 BLE Sense board, the next step is to verify the connected port. To do this, the Arduino board must be set into Bootloader mode by pressing the white reset button on the board, as shown in Figure 5.4.

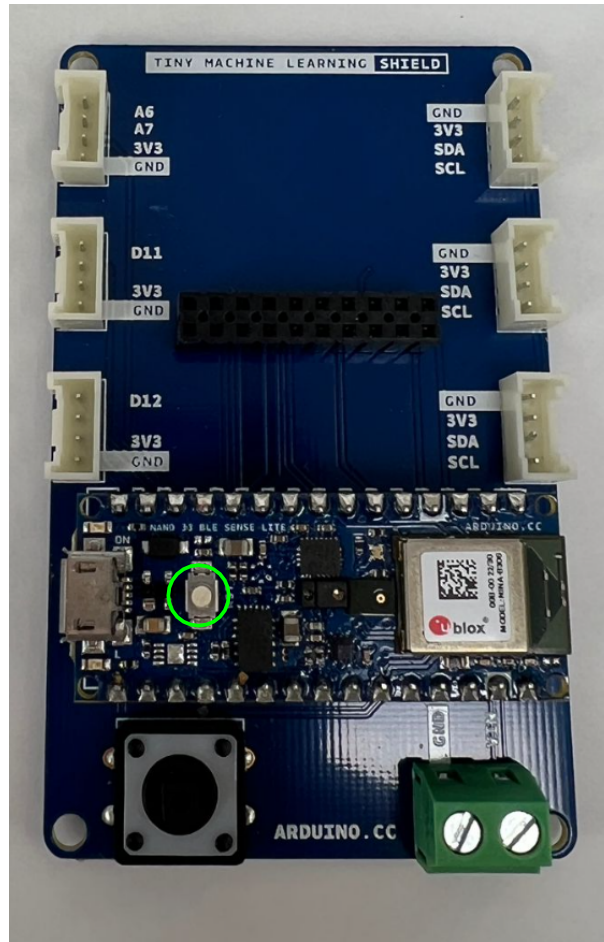


Figure 5.3.: Arduino Nano 33 BLE Sense Reset Button

By pressing the white reset button, the Arduino board will enter Bootloader mode. It is important to verify that the orange Built-in-LED is illuminated, as shown in Figure 5.4

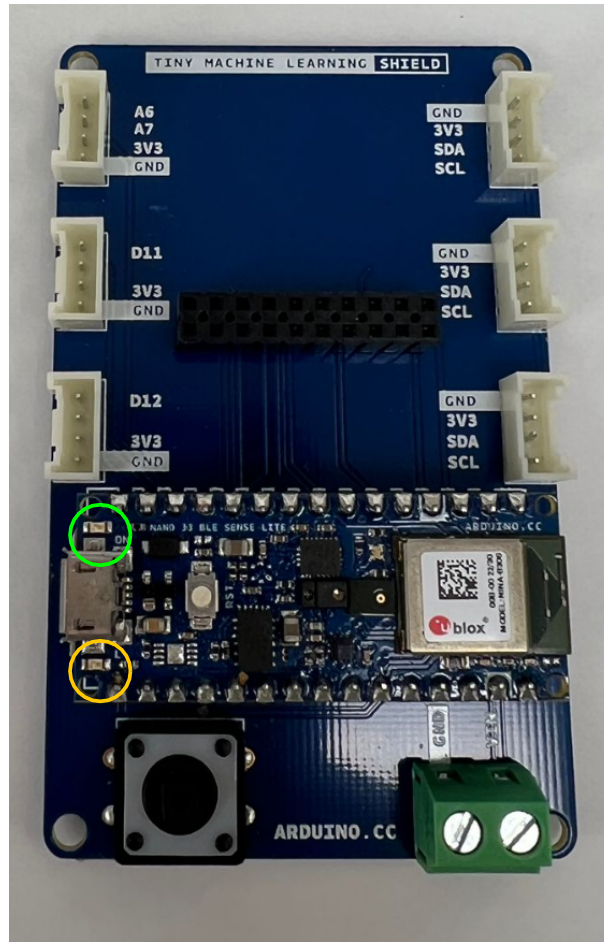


Figure 5.4.: green and orange Builtin-LED

After successfully completing the previously mentioned steps, the next task is to select the connected port before uploading the program. To do this, navigate to the menu **Tools**, select **Port**, and ensure that the available port for uploading the program is properly selected, as shown in Figure 5.5

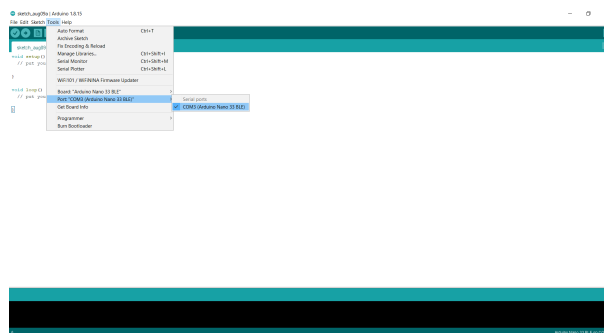


Figure 5.5.: Select Available Port for Uploading Arduino Sketch

5.2.4. Upload and Verify a Sketch

After ensuring that the appropriate port is selected, the next step is to upload the Arduino program. **Before** uploading the program, it is considered best practice to

verify it first. This process will indicate whether any errors or warnings exist in the program. Once the program is successfully verified, it can be safely uploaded by clicking the button **Upload** located below the file section, as shown in Figure 5.6. After selecting the board and port, confirm that the Arduino Nano 33 BLE Sense is properly connected to the Arduino IDE. This can be verified by checking the message in the bottom right corner of the IDE window, which should display the connected board and port.

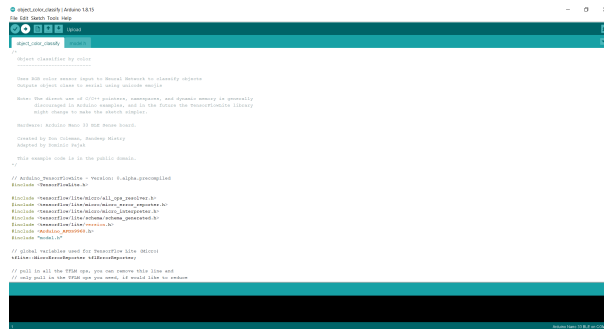


Figure 5.6.: Upload the Program in Arduino board

After uploading, the code will be compiled, and any issues in the program will be displayed in the bottom black window. Once the code is successfully uploaded and compiled on the Arduino board, it is necessary to reselect the port, as done previously. Navigate to the **Tools menu**, select **Port**, and ensure the correct port is selected, as shown in Figure 5.7, in order to view the output in the Serial Monitor.

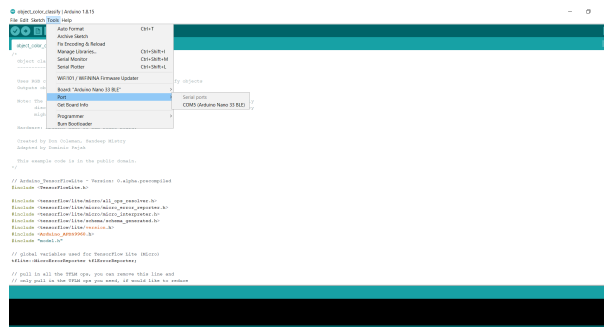


Figure 5.7.: Setting the Port

5.3. Test the Configuration

In this subsection, we will test whether the board is properly connected to the Arduino IDE by running an Example Blink Sketch. This simple test will make an onboard LED light up, verifying both the connection and basic functionality of the Arduino Nano 33 BLE Sense. By the end of this section, you will have confirmed that the hardware and software are working together seamlessly.

5.3.1. Testing the Steps by an Example Sketch `blink.ino`

The Arduino IDE contains a set of built-in examples for testing purposes. To verify the configuration and set up the board, the basic example `blink.ino` can be opened first. After uploading the example `blink.ino` the Builtin LED blinks with 2 Hz. To begin, open the Arduino IDE on the computer and follow the steps below:

1. **Open the Examples:** Once it's open, click on the **File** menu and hover over **Examples** in the dropdown menu.
2. **Selecting the Example Sketch:** A list of example categories will appear. Under the Built-in Examples, go to **01.Basics** and click on **Blink** as shown in 5.8.
3. **Blink Example Sketch:** After following steps 1 and 2, the Example Sketch **blink.ino** will open in a new window within the IDE as seen in Figure 5.9.
4. **Upload Example Sketch **blink.ino**:** Click the **Upload** button (right arrow icon) in the Arduino IDE toolbar to compile and upload the example sketch to the Arduino Nano 33 BLE Sense board. Once the upload is complete, the orange built-in LED starts blinking.

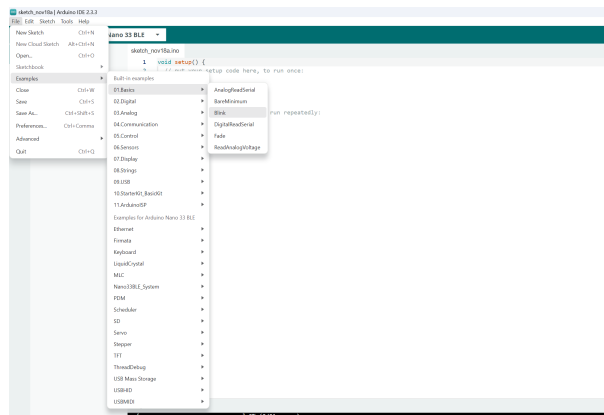


Figure 5.8.: LED Example Sketch

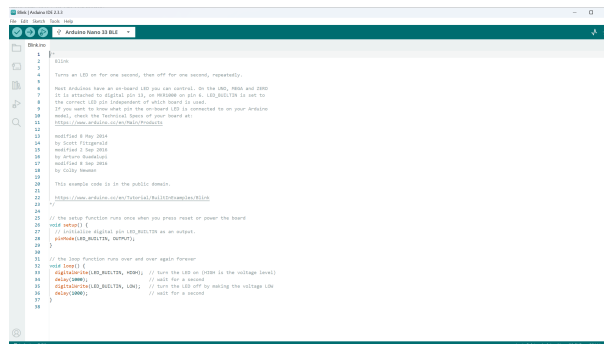


Figure 5.9.: LED-Built Example

With the successful blinking of the built-in orange LED, it is confirmed that the Arduino Nano 33 BLE Sense is properly connected to the Arduino IDE and its basic functionality has been verified. The board is now ready for further development and projects.

5.3.2. Description of Basic Sketch for Printing 'Hello'

To test the development environment and the basic functionality of the hardware, a simple example sketch that controls only one LED is suitable. This sketch provides the Arduino Integrated Development Environment (IDE). Under the path **File/Examples/01.Basics**, small example sketches can be selected. Here, the example **Fade** is used. In this case, the built-in LED, which is an RGB LED, is utilized.

```
int brightness = 0;  // how bright the LED is
int fadeAmount = 5;  // how many points to fade the LED by

// the setup routine runs once when you press reset:
void setup() {
    // declare LED_BUILTIN to be an output:
    pinMode(LED_BUILTIN, OUTPUT);
}

// the loop routine runs over and over again forever:
void loop() {
    // set the brightness of LED_BUILTIN:
    analogWrite(LED_BUILTIN, brightness);

    // change the brightness for next time through
    //the loop:
    brightness = brightness + fadeAmount;

    // reverse the direction of the fading at the ends
    //of the fade:
    if (brightness <= 0 || brightness >= 255) {
        fadeAmount = -fadeAmount;
    }
    // wait for 30 milliseconds to see the dimming
    //effect
    delay(30);
}
```

As a result, the brightness of the built-in LED should gradually fade in and out.

6. Comments with doxygen

Source code must always be documented. This includes a flowchart as well as the documentation of individual functions. The idea and structure of the software is documented in the developer documentation. The documentation of details such as constants and functions is best done in the software itself. There are various tools for this, e.g. Sphinx and Doxygen. [Hee24b; Ben17; Dev24; Ous18]

This chapter describes the use of Doxygen. Doxygen can visualise relationships between classes and their instances (inheritance hierarchy) and dependencies between methods, which is particularly useful for object-oriented projects.

doxygen is a cross-platform which is be used for Linux x86-64 since kernel 3.2.0 and gcc in version 4.6.3, Windows x86-64 since Windows XP, Mac OS X x86-64 since version 10.5, and Oracle Solaris under the general public license. doxygen is tool which generates software documentation intended for programmers from comments of source code. It supports multiple programming languages as C++, C, C#, Objective-C, Java, Python, IDL, VHDL, Fortran, PHP, ... and generates output in different output formats, HTML, CHM, RTF, PDF, LaTeX, XML, man page. It takes account the syntax and the structure of the language. Using doxygen, it is easy to keep up to date the documentation because of writing within code and systematizing the behavior of developers for they code.

The grah visualization software Graphviz is integreted in doxygen. Graphviz is a set of open-source tools. Graphviz creates graphs defined through the scripts DOT language which is a graph description language in text format. The figure 6.1 presents an example output of Graphviz.

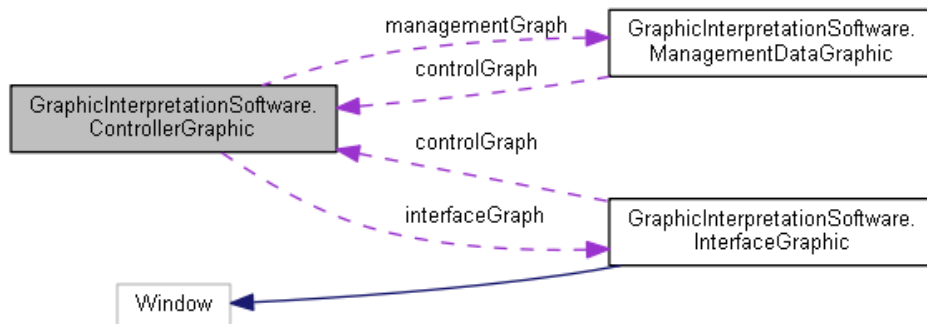


Figure 6.1.: Exmaple output of Graphviz

6.1. Installation

To use all the possibilities of doxygen, two programmes must be installed:

- doxygen
- Graphviz

6.1.1. doxygen

Firstly, the installation file must be downloaded from the website. To do this, click the green button `download` on the website <https://doxygen.nl/>, see image 6.2.

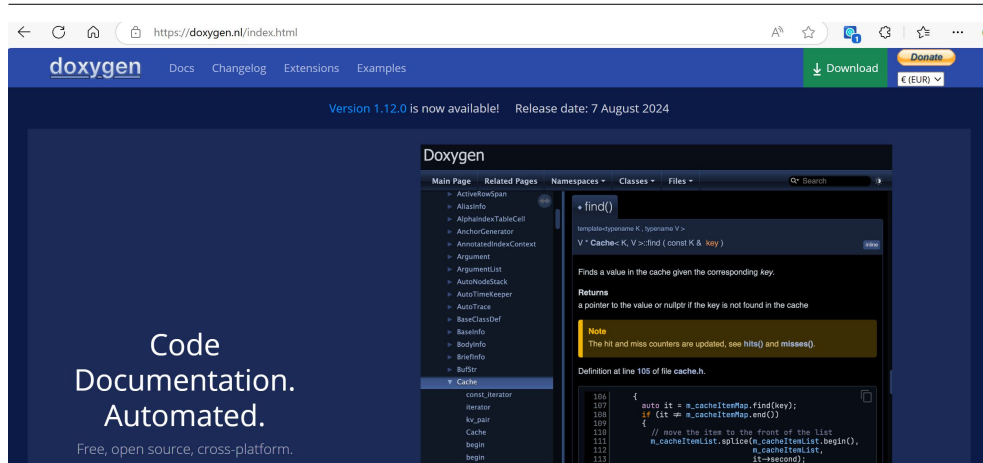


Figure 6.2.: Start image from the website <https://doxygen.nl/>

The download area appears, see image 6.3. In this area, now the version can be selected that matches the operating system of the target system.

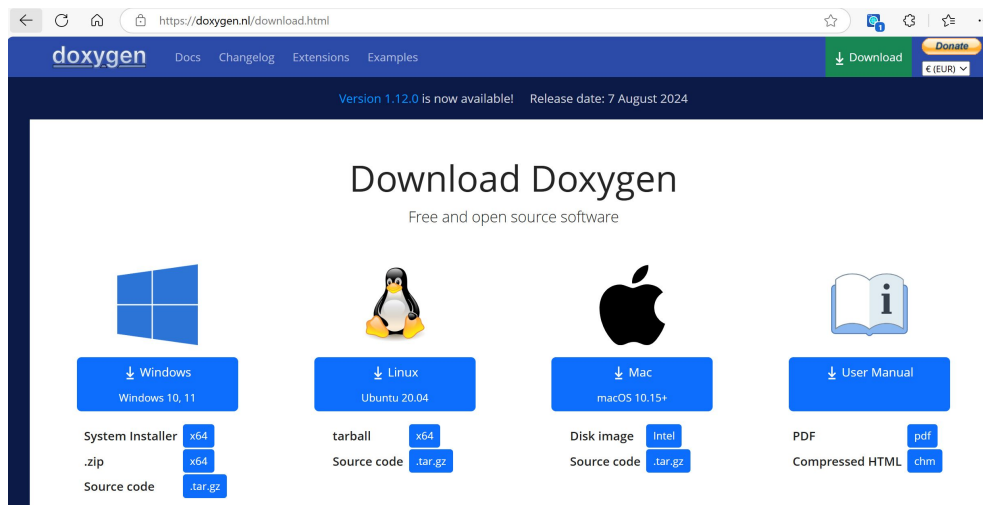


Figure 6.3.: Download area from the website <https://doxygen.nl/>

The appropriate manual [Hee24a] should also be downloaded. The system installer file [doxygen-1.12.0-setup.exe](#) is available for Windows.

After downloading the file, it must be called up. Before the installation begins, several queries are made. Firstly, the installation routine asks whether a complete installation, see image 6.4, should be carried out. Beginners should agree to this.

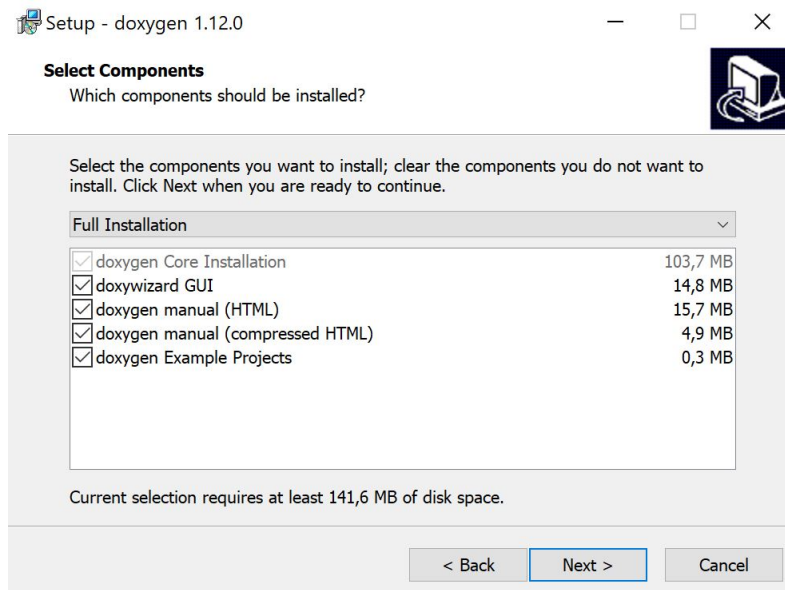


Figure 6.4.: Query after the complete installation during the installation process of doxygen

In the next step, the installation process can be started by clicking the **Install** button, see figure 6.5

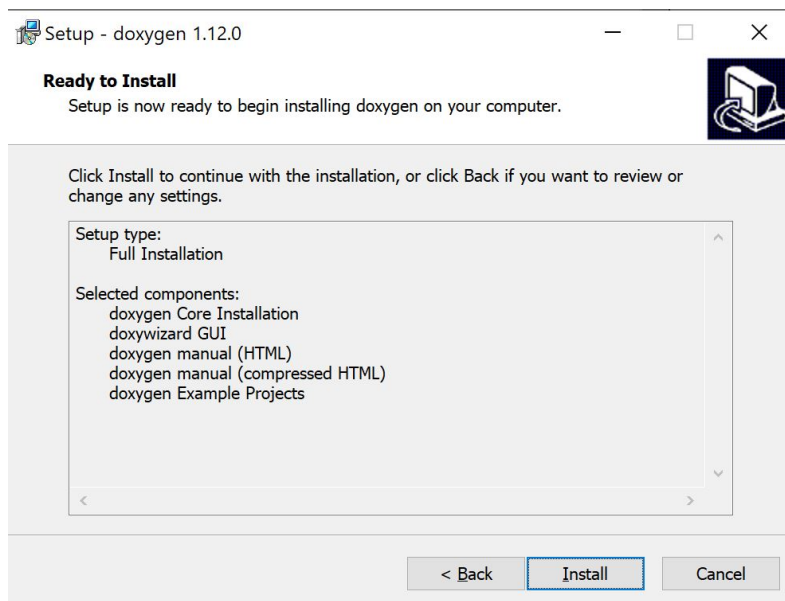


Figure 6.5.: Query after the complete installation during the installation process of doxygen

6.1.2. Graphviz

Firstly, the installation file must be downloaded from the website. To do this, click the button **download** on the website <https://www.graphviz.org/>, see image 6.6.

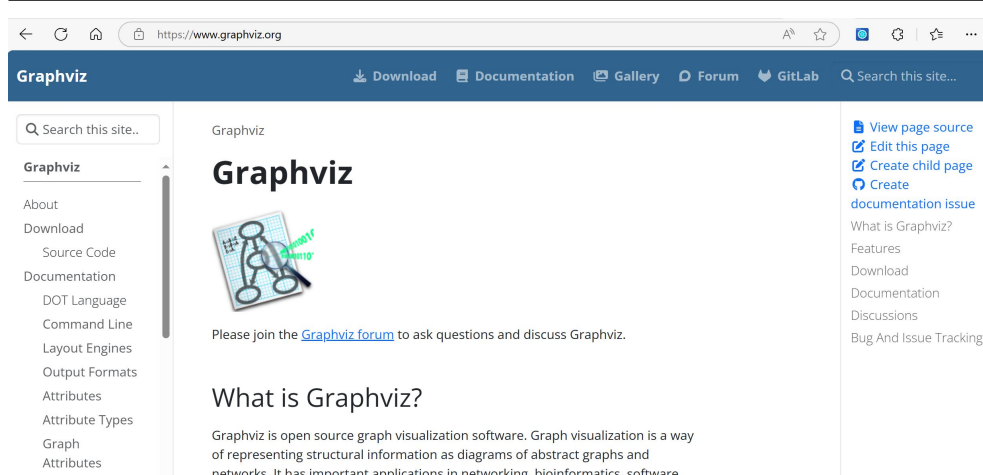


Figure 6.6.: Start image from the website <https://www.graphviz.org/>

The download area appears, see image 6.7. In this area, the version can now be selected that matches the operating system of the target system.

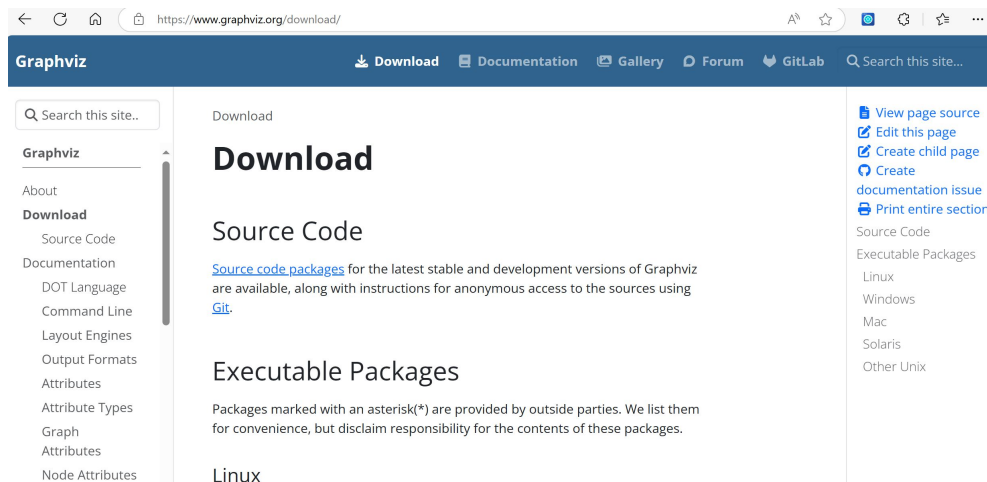


Figure 6.7.: Download area from the website <https://www.graphviz.org/download/>

The system installer file [graphviz-12.2.1 \(64-bit\) EXE installer](#) is available for Windows.

After downloading the file, it must be called up. Before the installation begins, several queries are made. First, the system asks whether the path to Graphviz should be added to the system variable **PATH**. As a beginner, add the path to all users, see figure 6.8.

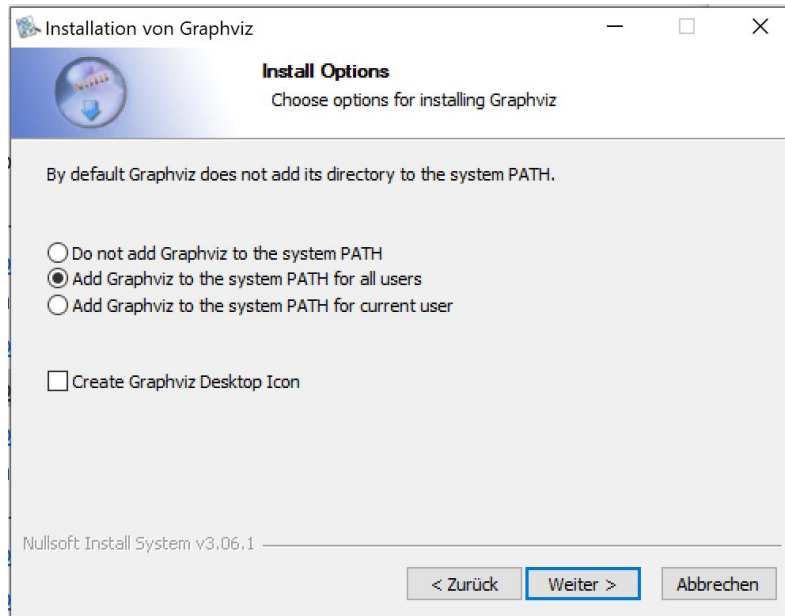


Figure 6.8.: Query for adding the Graphviz path to the system variable `PATH`

The next step asks for the path for the tool Graphviz tool, see figure 6.10.

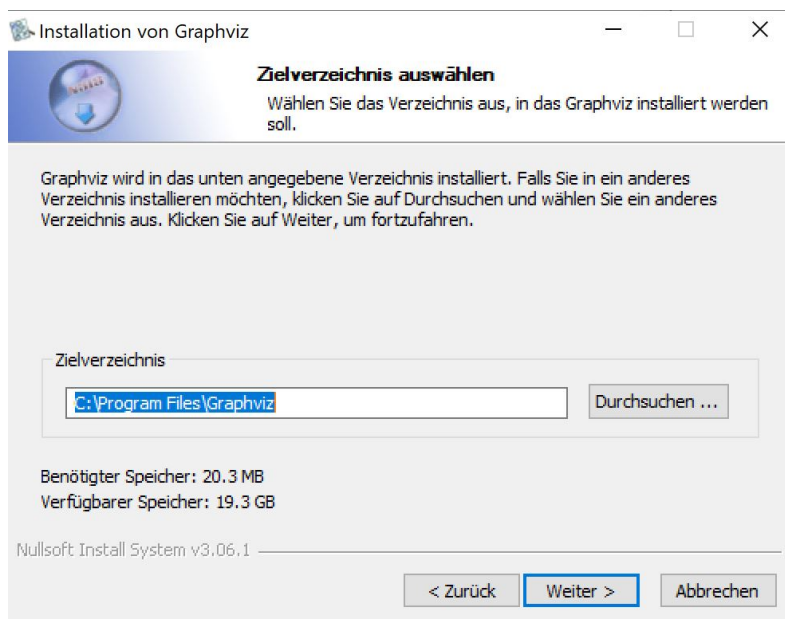


Figure 6.9.: Query for the path to Graphviz

Finally, the folder for the start menu must be set. You can select doxygen here, see figure ???. After clicking the button `Install`, the installation process starts.



Figure 6.10.: Query for the start menu of Graphviz

6.2. Configuration of Graphviz and doxygen with doxywizard

6.2.1. Graphviz

Graphviz is configured by configuring doxygen with doxywizard.

6.2.2. DoxyWizard

DoxyWizard is a frontend for using doxygen. DoxyWizard configures and saves options of generation of Doxygen. It allows to run easily the extraction the documentation from the source and is available on different platforms.

Das Werkzeug DoxyWizard har 3 tab-Reiter:

- “Wizard”
- “Expert”
- “Run”

In the following, only the tab “Wizard” and then the tab “Expert/Build” and “Expert/Dotare considered. After this, the tab “Run” is described. The tab “Expert” contains more settings which can be selected at a later stage.

DoxyWizard tab “Wizard” - Project

The following settings can be made in the tab window “Wizard/Project”, see figure 6.11:

- Directory of doxygen in which the programme `doxygen.exe` is located.
- Name of the project
- Short description of the project

- Version number of the project
- Logo of the project
- Directory of the sources and, if applicable, its subfolders
- Output directory

When specifying the path, instead of the Windows-typical backslashes “\” the normal slashes “/” have to be used.

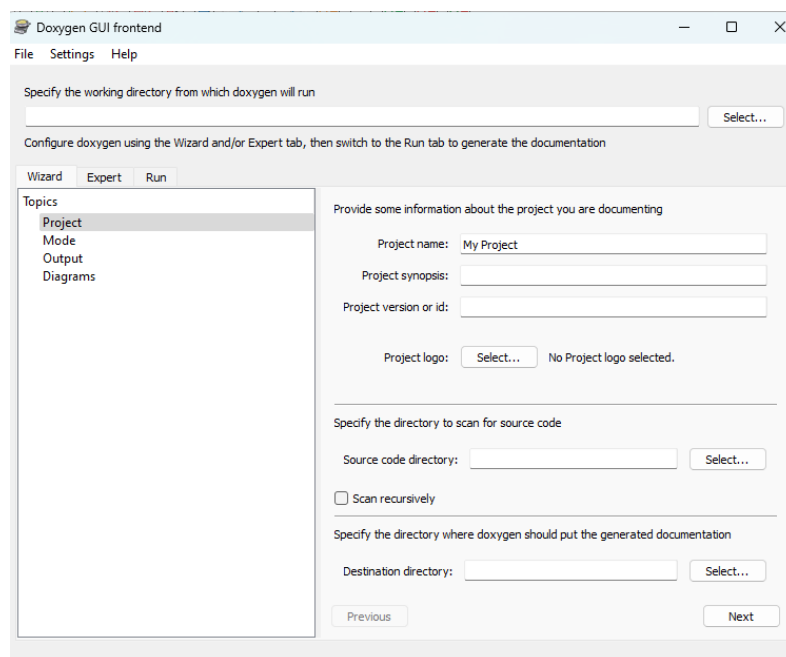


Figure 6.11.: DoxyWizard tab “Wizard” - Project

DoxyWizard tab “Wizard” - Mode

The following settings can be made in the tab window “Wizard/Mode”, see figure 6.12:

- All entities, which recommended, or documented entities only
- Optimization for the language
 - The best choice for Arduino C is C++
 - The best choice for Python is C++, too.

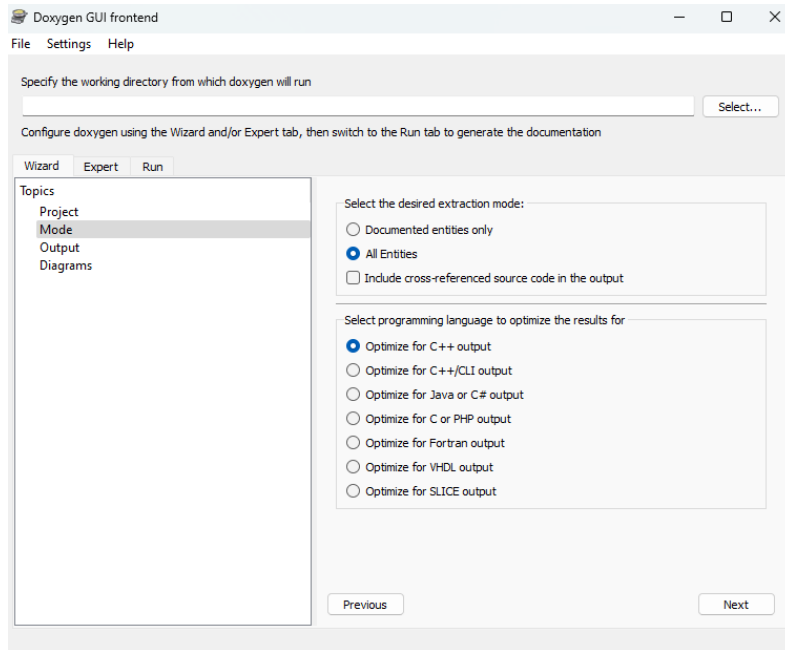


Figure 6.12.: DoxyWizard tab “Wizard” - Mode

DoxyWizard tab “Wizard” - Output

In the tab window “Wizard/Output”, see figure 6.13, the graphic support can be configured. Because of Graphviz’ installation, the support by “Use dot tool from Graphvizpackage” can be used.

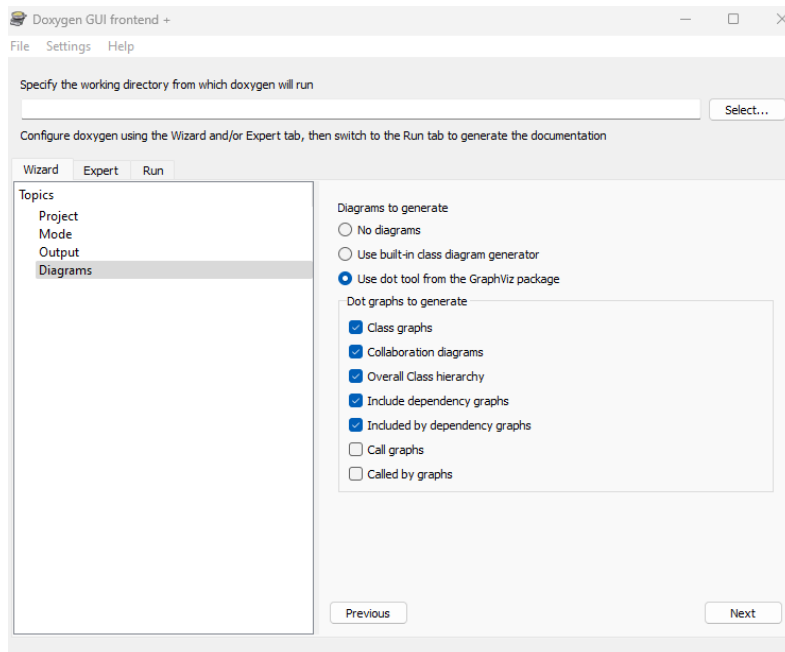


Figure 6.13.: DoxyWizard tab “Wizard” - Diagrams

DoxyWizard tab “Wizard” - Diagrams

In the tab window “Wizard/Diagrams”, see figure 6.13, different output formats can be chosen. For Beginner, the format plain HTML is a good choice. LaTeX or other formats can be configured later.

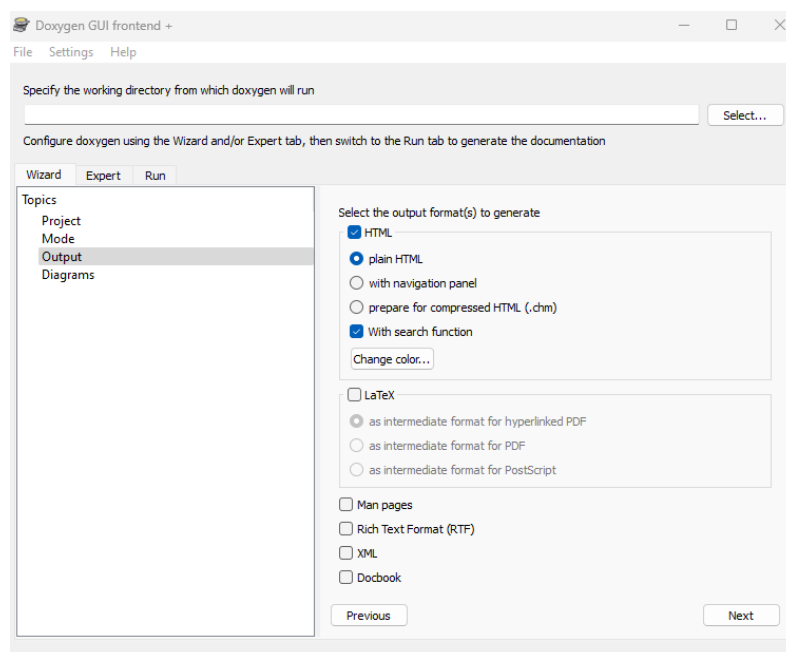


Figure 6.14.: DoxyWizard tab “Wizard” - Output

DoxyWizard tab “Wizard” - Expert - Build

In the tab window “Wizard/Expert/Build”, see figure 6.15, can select what is to be included in the documentation. The items “Extract_All” and “Extract_Private” should also be selected.

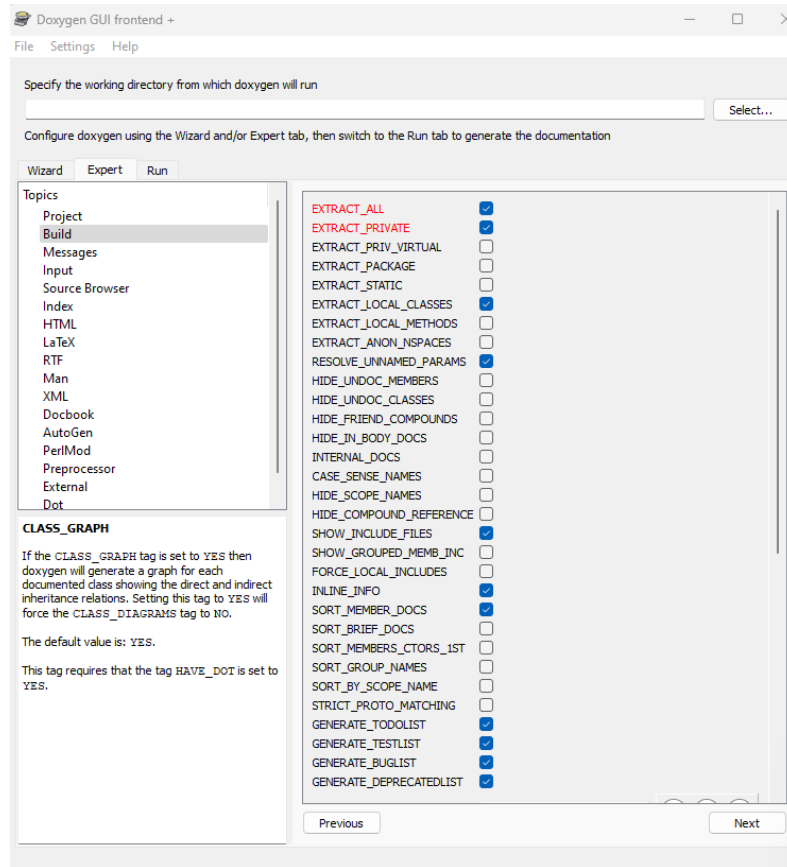


Figure 6.15.: DoxyWizard tab “Wizard” - Expert - Build

DoxyWizard tab “Wizard” - Expert - Dot

In the tab window “Wizard/Expert/Diagrams”, see figure 6.16, the option `CLASS_DIAGRAMMS` must be selected and the path for the tool specified. When specifying the path to Dot, instead of the Windows-typical backslashes “\” the normal slashes “/” have to be used.

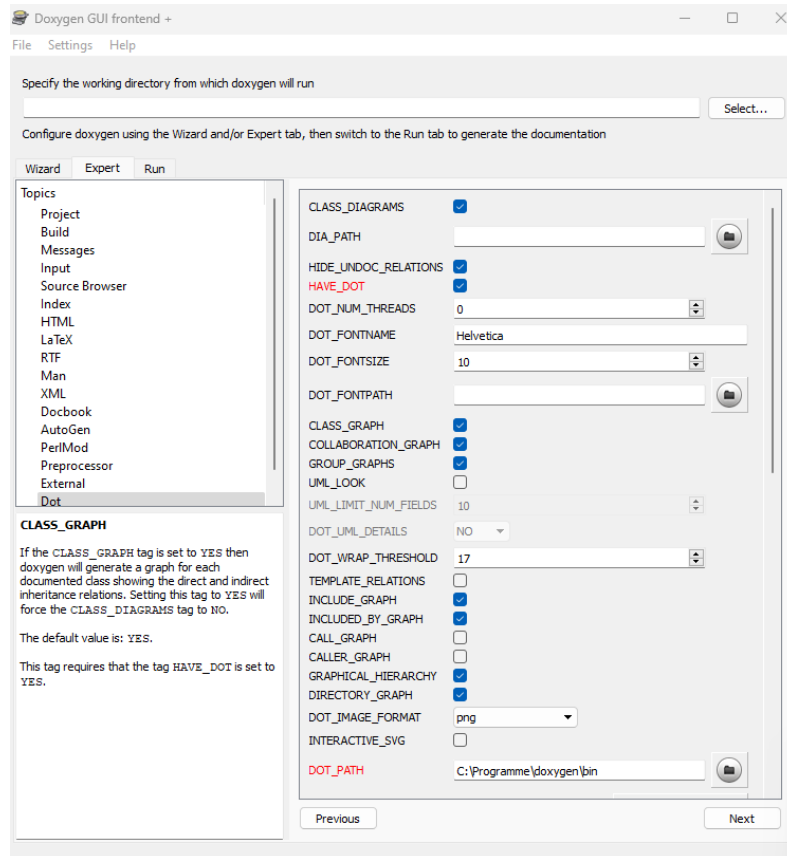


Figure 6.16.: DoxyWizard tab “Wizard” - Expert - Dot

DoxyWizard tab “Wizard” - Run

In the tab window “Wizard/Run”, see figure 6.17, the complete configuration can be shown and the doxygen can be started. The output of doxygen is shown in the window.

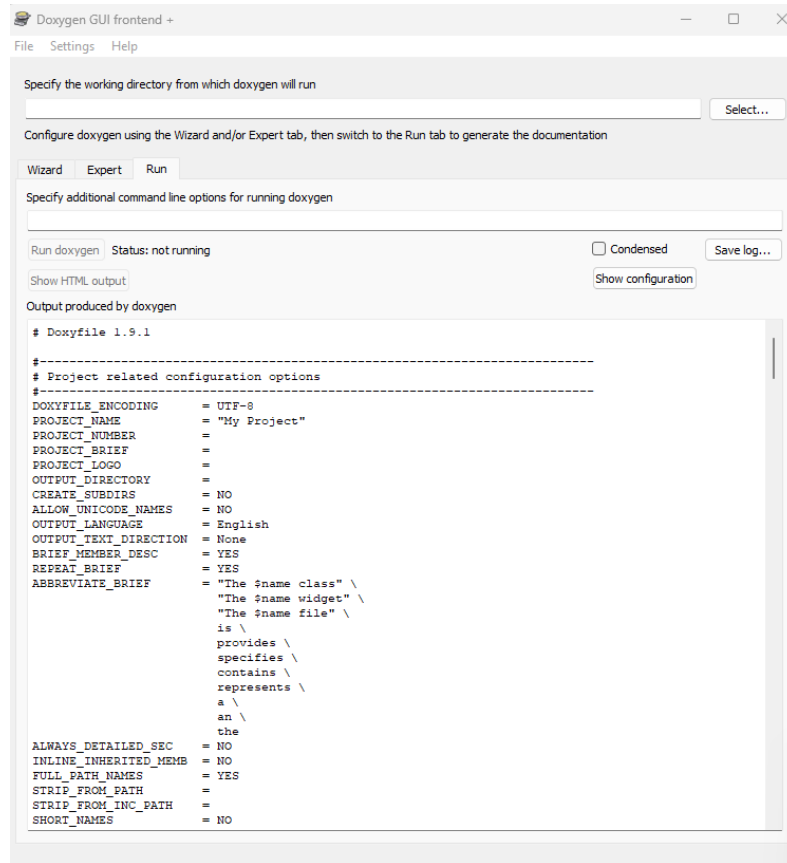


Figure 6.17.: DoxyWizard tab “Wizard” - Run

6.2.3. Saving the Configuration

The configuration of DoxyWizard can be saved in a file. To do this, call the menu **File** **Save as ...**. The file name can be freely selected. A specific extension is not required. A good choice would be the project name with the extension `.doxyfile`.

6.3. Run of doxygen

To generate the doxygen documentation, there are two possibilities:

- DoxyWizard
- Command shell

6.3.1. Run of doxygen using DoxyWizard

In the tab window “Wizard/Run”, see figure 6.17, the complete configuration can be shown and the doxygen can be started. The output of doxygen is shown in the window.

6.3.2. Run of doxygen using a Command Shell

This doxyfile can be used to generate the documentation by calling the shell command

```
doxygen -g <config_file>
```

If the project name is “Nano33BLESense” and the doxyfile has the name “Nano33BLESense.doxyfile”, then the command

```
doxygen -g Nano33BLESense.doxyfile
```

generates the documentation. The structure of the doxyfile is an ASCII file with a lot of keywords. One keyword is **INPUT**. Every file, which contains some documentation, can be added.

```
INPUT = mainpage.dox \
      Arduino.dox \
      Test \
      Test/TestLED.ino \
      Test/TestLEDBuiltinApplication.ino \
      Test/TestLEDPowerBrightness.ino \
      Test/TestLEDPowerBattery.ino \
      Test/TestLEDPower.ino \
      Test/TestLEDBuiltin.ino \
      SensorLPS22HB \
      LEDs/LED.h \
      LEDs/LED.cpp \
      LEDs/PowerLED.h \
      LEDs/PowerLED.cpp \
      LEDs/BuiltinLED.h \
      LEDs/BuiltinLED.cpp \
      LEDs/SignsOfLife.h \
      LEDs/SignsOfLife.cpp
```

It is also possible to define a logo for the project. Here, the keyword “PROJECT__-LOGO” is used for this.

```
PROJECT__LOGO = LogoDoxyGen.jpg
```

Filetype **.ino**

Für die Programmierung von Arduino-Mikrokontroller werden ino-Dateien verwendet. Die Syntax ist C++. Aufgrund der Extension müssen folgende Einstellungen gemacht werden:

```
OPTIMIZE_OUTPUT_JAVA = NO
EXTENSION_MAPPING     = ino=C++
FILE_PATTERNS         = *.c \
                      *.cc \
                      *.cxx \
                      *.cxxm \
                      *.cpp \
                      *.cppm \
                      *.ino \
                      *.ixx \
                      ...
```

6.4. Syntax and Keywords

Generally, only minor changes need to be made to the documentation. There are various options; if a variant is chosen, the convention must be implemented consistently.

The following options exist for the C++ programming language:

```
/**
 * comments
 */

/*!
 * some comments
 */

//!
//! some other comments
//!

///
/// yet other comments
///
```

The following options are available for the Python programming language:

```
## @package pyexample
# Documentation for this module.
#
# More details.

## Documentation for a function.
#
# More details.

"""! Documentation for a class.

More details.
"""
```

doxygen evaluates predefined keywords. The syntax for this is as follows:

```
/**
 * @KEYWORD DESCRIPTION
 */
```

The order of the tags has no importance. doxygen creates documentation even if the code is not completely commented. It indicates warning during compilation:

```
warning: The following parameters of <name class>
are not documented: parameter 'dv'
```

Some keywords are described in the following sections.

6.4.1. Keywords for Files

```
/** @file TestLEDPower.ino
 *
 * @date 10.12.2024
 *
 * @brief Simple program for testing the power LED
 *
 *
 * Turns the power LED on for one second, then off for one second, repeatedly.
 *
 * The LED is switched on for 1 second and switched off
 * for 1 second so that the LED flashes accordingly.
```

```

*
* On the Arduino Nano 33 BLE Sense, it is attached to digital pin 25
*
*/

```

6.4.2. Keywords for Functions

```

/**
 * @fn Name
 *
 * @brief the setup function runs once when reset or power the board is pressed
 *
 * standard function of Arduino sketches
 *
 * Initialization of the pin LED_BUILTIN as output
 *
 * @param ---
 *
 * @return void
 */

```

6.4.3. Keywords for Definitions

```

#define SET_ON true /*< Define flag for switching on */
#define SET_OFF false /*< Define flag for switching off */

```

6.5. Use of Documentation

If doxygen generates HTML documentation, there is a file [index.html](#). Calling up the file [index.html](#) displays the documentation in a browser.

6.6. Add Ons

6.6.1. Mainpage

Basically, these steps are already sufficient for documentation. However, there is not much on the start page apart from the title and version number. A customised start page can be inserted here. The keyword here is `@mainpage` and is followed by a description of the project.

In the HTML documentation, the start page corresponds to the file [index.html](#).

```

/**
 * @mainpage Example
 *
 * Description of the project <br>
 *
 * With the keyword <img>an image can be included.
 * <img src = "../images/application_screenshot.jpg" alt="Screenshot">
 *
 * @author Elmar Wings
 */

/**
 * @file example.ino

```

```
*
*  @brief A short description of the file – what does it contain, what is it for,
*
**/

/**
*  @class MyExampleClass
*
*  @brief A brief description of the class
*
*  A more detailed description of the class
*/
class MyExampleClass
{
    /**
    *  @brief A brief description of the method
    *
    *  A more detailed functional description
    */
    public static void main(String [] args)
    {
        System.out.println("Hello World!");
    }
}
```

6.6.2. Use of simple HTML Commands

Es ist möglich, HTML Kommandos einzufügen. So ergeben sich beispielsweise folgende Möglichkeiten:

- The command `<br>` forces a new line paragraph.
- The command `<b>` introduces boldface and ends with the command `</b>`.
- The command `<i>` introduces italics and ends with command `</i>`.

6.6.3. Inserting Enumerations

Enumerations can be integrated with the command `<ul>`. The complete syntax is:

```
<ul>
    <li>First</li>
    <li>Second</li>
    <li>Third</li>
</ul>
```

This then leads to an output of the following type:

- First
- Second
- Third

6.6.4. Inserting Images

The `<img>` keyword `<img>` can be used to integrate images. For the start page in particular, it makes sense to include a screenshot of the application, which can be done with:

```

```

The path `../images/` indicates to Doxygen that the image file is located in the project directory in the subfolder `images`.

6.6.5. Inserting HTML pages

It is possible to include complete HTML pages using the command `@page`. The following code is an example.

```
/** @page Arduino Nano 33 BLE Sense
```

```
<p>
<ul>
  <li>Date created: 28.8.2024</li>
  <li>Path: Code/Arduino/Blink.ino</li>
  <li>Version: 2.0</li>
  <li>Author: </li>
  <li>Reviewed by: </li>
  <li>Review Date: </li>
</ul>
</p>
```

```
<h2>Description</h2>
```

```
<p>
The Arduino Nano 33 BLE Sense is a compact, low-power microcontroller board that combines a 32-bit ARM Cortex-M4 microcontroller, 2.4 GHz BLE module, and a range of sensors including a 3-axis accelerometer, 3-axis gyroscope, magnetometer, and temperature sensor. The board features a USB Type-C connector for power and data transfer and a microSD card slot for data storage. The board is powered by a 3.7V lithium-ion battery and has a low power consumption, making it suitable for battery-powered applications. The Arduino Nano 33 BLE Sense is a versatile and powerful board that
```

```
</p>
```

```
<h2>History</h2>
```

```
<p>
The Arduino Nano 33 BLE Sense was first announced by Arduino in 2020 as a new member of the Nano family, offering a powerful solution for IoT and wearable device applications. The Arduino Nano 33 BLE Sense was designed as a source hardware platform. The board was designed to be compatible with the Arduino IDE and
```

```
</p>
```

```
*/
```


Part II.

**Arduino Nano 33 BLE Sense -
Onboard Sensoren**

7. Hardwarebeschreibung des Arduino

Figure 7.1.: Arduino Nano 33 BLE Sense (Vereinfachte Darstellung)

Pos.Nr.	Modul/Sensor
P1	Mikrophone
P2	9-Achs-IMU
P3	Näherungs-,Umgebungslicht-, Farb- und Gestensensor
P4	Drucksensor
P5	Bluetooth-Modul

Table 7.1.: Arduino Nano 33 BLE Sense [Ard.2024]

7.1. Aufbau des Arduinos

Der Arduino Nano 33 Bluetooth Low Energy (BLE) Sense Lite ist ein Mikrocontroller basierend auf dem Nordic nRF52840-System on Chip (SoC). Trotz seiner kompakten Bauweise mit einer Größe von 45 x 18 mm verfügt es über mehrere verschiedene integrierte Sensoren, Aktoren und Anschlussschnittstellen (siehe Figure 7.1). Darüber hinaus verfügt der Arduino-Prozessor über 1 MB Flash-Speicher und 256 KB RAM. Bei dem Prozessor handelt es sich um einen Arm@Cortex-M4F Prozessorkern, welcher mit einer Taktrate von 64 MHz arbeitet und für Mikrocontroller Anwendungen optimiert ist. Dieser bietet eine gute Leistung bei geringen Stromverbrauch und ist auch für Echtzeit-Verarbeitungsaufgaben geeignet. Außerdem besitzt der Prozessor eine Floating Point Unit (FPU), die eine effiziente Abarbeitung von Datenverarbeitungsoperationen ermöglicht. Mit Hilfe einer integrierten Steckverbindung (engl. „header“) kann der Mikrocontroller direkt auf ein Board gesteckt werden. [Arm.2020] [Ard.2024]

7.2. Integrierte Sensorik

Der Arduino Nano 33 BLE-Sense Lite verfügt über eine Vielzahl von integrierten Sensoren und Aktoren, mit denen verschiedene Umgebungseigenschaften erfasst werden können. Dazu gehören die in den folgenden Abschnitten beschriebenen Sensoren und Aktoren.

7.2.1. 9-Achs-IMU für die Bewegungserkennung (LSM9DS1)

Bei der Inertialmesseinheit LSM9DS1 handelt es sich um ein System-in-Package, d.h. es sind mehrere elektronische Komponenten bzw. Chips auf kleinstem Raum in einem Gehäuse kombiniert.[Lienig.2012] Die Inertial Measurement Unit (IMU) verfügt über einen 3D-Linearbeschleunigungsmesser, ein 3D-Gyroskop und einen 3D-Magnetometer. Darüber hinaus verfügt das System über eine serielle Inter-Integrated Circuit (I²C)-Busschnittstelle, die einen Standard und einen Fast Mode (100/400 kHz) bereitstellt, zudem eine serielle SPI-Standardschnittstelle. Der Sensor verfügt über einen linearen Beschleunigungsmesser (Accelerometer) mit wählbarer Skala von

$\pm 2/\pm 4/\pm 8/\pm 16$ g, der die lineare Beschleunigung in drei Achsen (x, y, z) misst und die Erfassung von Geschwindigkeits- und Positionsänderungen ermöglicht. Das Magnetfeld ist mit einer wählbaren Skala von $\pm 4/\pm 8/\pm 12/\pm 16$ Gs ausgestattet, damit misst es das magnetische Feld in den drei Achsen und ermöglicht die Bestimmung der Ausrichtung relativ zur Erdmagnetfeldrichtung. Das 3D-Gyroskop ist mit einem wählbarem Skalenendwert von: $\pm 125/\pm 250/\pm 500/\pm 1000/\pm 2000 \frac{\text{Grad}}{\text{s}}$ ausgestattet und ist für die Erfassung der Winkelgeschwindigkeit bzw. Drehbewegung um die drei Achsen zuständig.[STM1.2015][Ard.2024] Mögliche Anwendungsbereiche sind zum Beispiel eine Bewegungssteuerungen (Drohnensteuerung, Robotik und industrielle Automatisierung), Schwingungsüberwachung und -kompensation, Antennen, Plattformen, optische Bild- und Objektivstabilisierung.

7.2.2. Näherungs-,Umgebungslicht-, Farb- und Gestensensor (APDS9960)

Hierbei handelt sich um einen sehr vielseitigen Sensor. Er dient zur Gestenerkennung, Farberkennung, Abstandsmessung und Umgebungslichtmessung. Die Gestenerkennung nutzt vier gerichtete Fotodioden, um reflektierte Infrarot-Energie (von der integrierten Light Emitting Diode (LED)) zu erfassen, um physikalische Bewegungsinformationen (d.h. Geschwindigkeit, Richtung und Entfernung) in digitale Informationen zu übersetzen. Die Näherungserkennung ermöglicht die Messung der Entfernung durch die Erkennung der reflektierten Infrarot-Energie, (von der integrierten LED) mit Hilfe einer Fotodiode. Erkennungsereignisse sind interruptgesteuert und treten immer dann auf, wenn das Näherungsergebnis die oberen und/oder unteren Schwellenwerte überschreitet. Der Sensor verfügt außerdem über Offset-Einstellregister zur Kompensation des System-Offsets, der durch unerwünschte Infrarot-Energier reflexionen am Sensor verursacht wird. Die Intensität der Infrarot-LED wird werkseitig eingestellt, so dass eine Kalibrierung der Endgeräte aufgrund von Bauteilschwankungen nicht erforderlich ist. Die Farb- und Umgebungslichterkennung liefert Daten zur roten, grünen, blauen Farbspektrum und Daten zum klaren Lichtintensität. Jeder der Kanäle R, G, B, C verfügt über einen Ultraviolettstrahlung (UV)- und Infrarot-Sperrfilter und einen speziellen Datenkonverter, der gleichzeitig 16-Bit-Daten erzeugt. Diese Architektur ermöglicht Anwendungen eine genaue Messung des Umgebungslichts zu messen und die Farbe zu erkennen, was es den Geräten wiederum ermöglicht, die Farbtemperatur zu berechnen und die Hintergrundbeleuchtung des Displays dementsprechend anzupassen.[AT.2015][Ard.2024]

7.2.3. Barometrischer Drucksensor (LPS22HB)

Der LPS22HB ist ein sehr kompakter Absolutdrucksensor, der auf dem piezoresistiven Prinzip basiert. Er arbeitet als Barometer und verfügt über einen digitalen Ausgang. Zudem ist in diesem Drucksensor ein Temperatursensor integriert, mit welchem Druckmessungen zusätzlich kompensiert werden können. Das Gerät besteht aus einem Sensorelement und einer Inter Circuit (IC)-Schnittstelle, die eine Kommunikation zwischen der Sensoreinheit und der Anwendung über I²C oder Serial Peripheral Interface (SPI) ermöglicht. Das Sensorelement erfasst den absoluten Druck und besteht aus einer speziell gefertigten, hängenden Membran. Der LPS22HB ist in einem vollständig vergossenem Land-Grid-Array-Gehäuse untergebracht, das kleine Löcher aufweist. Durch diese Öffnung gelangt der externe Druck auf das Sensorelement. Der Betrieb des Sensors ist über einen Temperaturbereich von -40 °C bis +85 °C gewährleistet. [STM2.2017][Ard.2024] Anwendungsbereiche für diesen Sensor sind zum Beispiel: Wetterstationen, Höhenmesser, Luftdrucküberwachung in industriellen Prozessen oder tragbare smarte Geräte, wie Sportuhren oder Smartphones.

Figure 7.2.: Arduino Nano Pinbelegung [Ard.2024]

7.2.4. Digitales Mikrofon (MP34DT05)

Das MP34DT05-A ist ein kompaktes, stromsparendes, omnidirektionales, digitales Mikrofon mit einem kapazitiven Sensorelement und einer IC-Schnittstelle. Das Sensorelement, das in der Lage ist, akustische Wellen zu detektieren, wird mit einem speziellen Silizium-Mikrobearbeitungsverfahren für die Herstellung von Audiosensoren hergestellt. Die IC-Schnittstelle wird in einem speziellen Halbleiterherstellungsverfahren (CMOS-Verfahren[Gehrke.2022][Bernstein.2020]) hergestellt, das die Entwicklung einer speziellen Schaltung ermöglicht, die ein digitales Signal im Pulse Density Modulation (PDM)-Format extern bereitstellen kann. Das Mikrofon hat einen Signal-Rausch-Abstand von 64 dB und eine Empfindlichkeit von $-26 \text{ dBFS} \pm 3 \text{ dB}$. Sein maximaler Schalldruckpegel liegt bei 122,5 dB SPL. Der MP34DT05-A ist in einem Surface-Mounted Device (SMD)-kompatiblen, Electromagnetic Interference (EMI)-geschirmten Top-Port-Gehäuse erhältlich und arbeitet zuverlässig über einen erweiterten Temperaturbereich von -40°C bis $+85^\circ\text{C}$. Abmessungen des Gehäuses HCLGA-4 LD sind $3 \times 4 \times 1$ (in mm). Anwendung findet das Modul beispielsweise in mobilen Endgeräten, im Bereich der Spracherkennung sowie in Laptops und Notebooks.[STM3.2021][Ard.2024]

7.2.5. DC-DC-Wandler (MPM3610)

Das MPM3610-Modul ist ein integriert Gleichspannungs- zu Gleichspannungs-Wandler. Dieser kann Eingangsspannungen von bis zu 21 V verarbeiten mit einem Wirkungsgrad von mindestens 65% bei minimaler Last. Bei einer Eingangsspannung erhöht sich der Wirkungsgrad auf 85%. [Ard.2024]

7.3. Beschreibung der Schnittstellen

Der Arduino Nano 33 BLE-Sense Lite bietet eine Vielzahl von Schnittstellen (siehe Figure 7.2), die das Board mit anderen Komponenten und Geräten einfach verbinden lassen. In diesem Abschnitt sind einige Details zu den wichtigsten Schnittstellen des Boards erläutert.

7.3.1. I²C

Der I²C-Bus ermöglicht die geräteinterne Kommunikation von Mikrocontrollern mit Sensoren, externen Bildschirmen, Echtzeituhren und vielen anderen Bausteinen. Das Kommunikationsprotokoll basiert auf dem Master-Slave-Prinzip. Der Master initiiert und beendet die Kommunikation, stellt den Takt zur Synchronisation bereit und löst Kommunikationsprobleme. Jeder Slave hat eine eindeutige Adresse, mit einer Länge von 7 oder 10 Bit und ermöglicht die Adressierung von bis zu 128 bzw. 1024 unterschiedlichen Slaves in dem selben Bus. Geräte mit unterschiedlichen Adresslängen können im selben Bus koexistieren. Bevor der Master Daten überträgt oder empfängt, muss er einen Slave mit einer vorher vereinbarten Adresse ansprechen.[Meroth.2021][STM1.2015][Bernstein.2020] Sind ihre Adressen in Übereinstimmung kann im nächsten Schritt ein einzelnes Bit gesendet werden, mit dem dann festgelegt wird, ob der Master Daten an dem Slave übertragen (Binär:1) oder auslesen möchte (Binär:0). Dieser Datenaustausch wird danach bestätigt, sodass weitere Daten ausgetauscht werden können. Zur Beendigung des Datenaustausches wird ein Stop-Signal gesendet.[Gehrke.2022] In der minimalen Konfiguration werden Master und Slave über die bidirektionalen Busleitungen Serial Data (SDA) und

Serial Clock (SCL) verbunden, die über Pull-up-Widerstände an die Versorgungsspannung angeschlossen sind. Weitere Geräte können durch Verbindung ihrer SDA- und SCL-Anschlüsse mit den entsprechenden Busleitungen an den Bus angeschlossen werden.[Meroth.2021] In diesem Projekt dient der Arduino als Master und ein zusätzlich angeschlossenes Organic Light Emitting Diode (OLED)-Bildschirm als Slave.

7.3.2. USB

Das Board kann über einen Mini Universal Serial Bus (MUSB) mit einem Computer verbunden werden, um es zu programmieren oder Daten zu übertragen. Die Datenübertragungsrate beträgt dabei 12 Mbit/s. Außerdem kann der Arduino über diesen MUSB-Port Strom beziehen.

7.3.3. Bluetooth®

Die Bluetooth-Verbindung kann als drahtloser Kommunikationsweg eingesetzt werden. Das Bluetooth-Protokoll hat eine Übertragungsrate von 2 Megabit pro Sekunde (Mbps) und eine Sendeleistung von +8 Dezibel Milliwatt (dBm). Die Empfindlichkeit beträgt dabei -95 dBm. Des weiteren verbraucht diese Verbindung im Sendebetrieb 4,8 mA und 4,6 mA im Empfangsbetrieb. Das Bluetooth-Modul ist kompatibel mit mehreren Protokollen, unter anderem mit dem *Thread-Protokoll* und dem *Zigbee-Protokoll*. [Ard.2024] [NrdSem4.2024]

7.3.4. Weitere Kommunikationsschnittstellen

[Ard.2024]

- **NFC-A-Tag:** Near Field Communication (NFC) ist eine zusätzliche Funktion zur drahtlosen Kommunikation über kurze Distanzen. Zudem besitzt der NFC-A-Tag die Funktionen, sich in einen Bereitschaftsmodus versetzen zu lassen, dass durch ein NFC-fähiges Gerät dann initiiert werden kann. Außerdem unterstützt es *touch-to-pair*, diese Funktion ermöglicht eine Kopplung mit anderen NFC-fähigen Geräten durch Berührung.
- **Arm CryptoCell CC310 Security Subsystem:** Für die Durchführung kryptografischer Operationen und Sicherheitsaufgaben. [NrdSem.2024]
- **QSPI/SPI/TWI/I²S/PDM/QDEC:** Verschiedene weitere serielle Kommunikationsschnittstellen, die für den Datenaustausch verwendet werden können.
- **EasyDMA:** Direkt Memory Access (DMA) ist für die Übertragung von Daten zwischen verschiedenen Speicherbereichen, ohne dabei die CPU zu belasten. [Gehrke.2022]
- **Analog to Digital Converter (ADC):** Wandelt analoge Eingangssignale in digitale Daten um. Der Wandler hat eine Auflösung von 12 Bit und eine maximale Abtastrate von 200 Kilosamples pro Sekunde (ksp/s).
- **128-Bit-AES/ECB/CCM/AAR-Co-Prozessor:** Co-Prozessor für kryptografische Operationen, der auf dem Advanced Encryption Standard (AES) basiert. Dieser unterstützt verschiedene Betriebsmodi wie Electronic Codebook (ECB), Counter with CBC-MAC (CCM) und Automatic Address Recognition (AAR). [NrdSem2.2024]
- **Quad-SPI-Schnittstelle 32 MHz:** SPI-Schnittstelle, die eine maximale Taktrate von 32 MHz unterstützt. Quad-SPI ermöglicht es, Daten schneller als die herkömmliches SPI zu übertragen, indem es vier Datenleitungen verwendet. [NrdSem3.2023]

7.3.5. Digitale Ein- und Ausgangspins

Das Board verfügt über 14 digitale Ein- und Ausgangspins. Die digitalen Pins können nur zwei Zustände, nach dem Binär-System lesen: wenn ein Spannungssignal vorliegt und wenn kein Signal vorhanden ist (0 oder 1). Einige der Pins sind zudem zur Pulsweitenmodulation fähig (D3, D5, D6, D9, D10). Außerdem sind die digitalen Pins D11 und D12 als Master-Output-Slave-Input (MOSI) und als Master-Input-Slave-Output (MISO), in einer Serial-Peripheral-Interface (SPI) Kommunikation einsetzbar.[Ard.2024]

7.3.6. Analoge Eingangspins

Die Platine hat zusätzlich 8 analoge Eingangspins (A0-A7), die wiederum als Analog-Digital-Wandler (ADC) verwendet werden können. Außerdem sind diese Pins als digitale Ein-/Ausgangspins konfigurierbar. Der Pin A0 kann zudem als Digital-Analog-Wandler (DAC) konfiguriert werden. Die beiden Pins A4 und A5 können außerdem für die I2C-Kommunikation verwendet werden. Dabei fungiert A4 als Datenleitung (SDA), während A5 als Taktleitung (SCL) fungiert.[Ard.2024]

7.3.7. Weitere Pins

- **+3,3 V**: Erzeugt interne Stromquelle im Gerät und wird als Referenzspannung verwendet.
- **VIN**: Stromversorgung
- **5V**: Gibt 5V an die externen Komponenten ab.
- **RST-Pin**: Dient zum Zurücksetzen des Arduinos.
- **AREF-Pin**: Liefert die Spannungsreferenz, die der Mikrocontroller zur Zeit verwendet.
[Ard.2024]

7.3.8. LED-Lampen

Im Arduino selbst sind 3 LED's verbaut, die auch alle programmiert werden können. Diese sind vor allem für die Überprüfung der Sensorik oder Softwareprogrammen nützlich. Zu den LED-Lampen gehören:

- Programmierbare Power-LED (grün): Zeigt an, dass das Arduino-Board eingeschaltet ist.
- Programmierbare LED (orange)
- Programmierbare RGB-LED
[Ard.2024]

7.4. Hinweis Arduino 33 BLE Sense Lite

Der Arduino Nano 33 BLE Sense Lite ist eine komprimierte Variante vom ursprünglichen Arduino Nano 33 BLE Sense, welcher zusätzlich noch über einen Temperatur- und Feuchtigkeitssensor verfügt. Der Lite hat stattdessen einen Drucksensor integriert, über welchem auch die Temperatur gemessen werden kann, jedoch nicht die Feuchtigkeit.[PetrFilipi.2022]

7.5. Bezugsquellen

Als Bezugsquellen dienten vor allem Datenblätter der Hersteller. Die meisten Informationen konnten dem Datenblatt des Arduino entnommen werden, jedoch ist dazu anzumerken, dass sich dieses Datenblatt auf den Arduino 33 BLE Sense bezieht und nicht auf den Arduino 33 BLE Sense *Lite*. Speziell zum *Lite* gibt es jedoch kein Datenblatt, so wurde das Datenblatt vom Arduino 33 BLE Sense herangezogen. Dies stellt sonst kein Problem dar, da sich, wie in 7.4 beschrieben, nur um eine komprimierte Version des Arduino 33 BLE Sense handelt.

Part III.

Arduino Nano 33 BLE Sense - External Sensors and Actors

8. Drehwinkel-Encoder

Der Demonstrator soll mehrere Programme fahren können, deswegen wurde ein Drehwinkel-Encoder der Steuerung hinzugefügt. Dieser wird über drei Pins am Arduino angeschlossen und über zwei weitere Pins wird er mit Spannung versorgt. Durch drehen des Drehschalters werden nacheinander drei Kontakte geschlossen oder geöffnet (ein Kontakt ist immer geschlossen). Dieser dadurch entstehende Signalfuss, bestehend aus zwei um 90 Grad versetzte Sinus bzw. Cosinusschwingungen werden ausgewertet. Daraus wird bestimmt, in welche Richtung (im oder gegen Uhrzeigersinn) und wie weit (inkrementell) gedreht wurde. Mithilfe dieser Logik kann durch ein Menü eine Bewegungsstufe ausgewählt werden, die der Schrittmotor fahren soll.[Bas16] Bei einer Drehung im Uhrzeigersinn wird im Menü eine Bewegungsstufe höher und bei einer Drehung gegen den Uhrzeigersinn eine Bewegungsstufe niedriger ausgewählt. Zusätzlich zum Drehwinkel-Encoder ist auch noch ein Schaltfunktion im Bauteil selbst integriert. Durch eindrücken des Encoders wird ein Taster betätigt, durch den der eingestellte Wert bestätigt und an den Arduino zur weiteren Verarbeitung weitergegeben wird. Zur Besseren Handhabung des Drehwinkel-Encoders wurde noch ein Drehgriff angefertigt und auf dem Drehgeber montiert. Weitere Details:

- **Abmessungen** ($b \times l \times h$): 18 mm $\times$ 31 mm $\times$ 30 mm
- **Betriebsspannung:** 3,3 - 5 V [Sim19]

8.1. Encoder

Die Library Encoder ermöglicht das Zählen von Impulsen aus bestimmten Signalen, die häufig von Drehknöpfen, Motor- oder Wellensensoren sowie anderen Positionsgebern stammen. Diese Bibliothek ist für Arduino und Teensy Boards optimiert und bietet verschiedene Zählmodi, darunter 4X counting für präzise Positionserfassung. Die Verwendung erfolgt durch die Initialisierung eines Encoder-Objekts mit zwei Pins, wobei der erste Pin idealerweise über Interruptfähigkeit verfügt für optimale Leistung. Die Bibliothek unterstützt sowohl I2C- als auch SPI-Schnittstellen und bietet verschiedene Hardware- und Softwareoptionen zur Anpassung an die Anforderungen des Benutzers. Sie wird in diesem Projekt in der Version 1.4.4 verwendet.[Sto24]

8.2. Drehwinkel-Encoder

Um die Funktion und korrekte Ansteuerung des Drehwinkel-Encoders zu testen, wird das Testprogramm 8.1 verwendet. Das Programm wertet die Drehung des Encoders aus und gibt den neuen Zustand im seriellen Monitor der Arduino IDE aus [Sto24].

```
#include <Encoder.h>

const int CLK = 9;
const int DT = 2;
const int SW = 3;
long altePosition = -999;

Encoder meinEncoder(DT, CLK);

void setup()
{
    Serial.begin(9600);
    pinMode(SW, INPUT);
}

void loop()
{
    long neuePosition = meinEncoder.read();

    if (neuePosition != altePosition)
    {
        altePosition = neuePosition;
        Serial.println(neuePosition);
    }

    int StatusTaster = digitalRead(SW);
    if (StatusTaster == 0) {
        Serial.println("Switch_betaetigt");
        Serial.println("Switch_betaetigte");
    }
}
```

Listing 8.1.: Testprogramm für den Encoder

9. Schrittmotor NEMA 17

In diesem Kapitel folgt eine grundsätzliche Beschreibung eines Schrittmotors. Darauf folgt die Erläuterungen zum Aufbau und Funktionsweise eines Schrittmotors sowie die Aufzählung verschiedener Grundbauarten. Nachfolgend werden Ursachen und Lösungen zum Verhindern von Schrittfehlern und der verwendete Schrittmotor genauer erläutert.

9.1. Beschreibung eines Schrittmotors

Ein Schrittmotor ist ein Elektromotor, der sich für präzise Positionierungsaufgaben eignet. Im Gegenteil zu anderen Elektromotoren wird bei einem Schrittmotor keine Positionsmessung oder Positionsregelung benötigt. Andere mechanische Antriebssysteme benötigen einen geschlossenen Regelkreis und mechanische Bremsen um Drehzahl und Position einzuhalten. Der Motor führt durch die Rotation des Rotors diskrete Schritte aus, wobei jeder Steuerimpuls eine Verschiebung um einen konstanten Winkel bewirkt. Mit diesem Motor ist eine erreichbare Positioniergenauigkeit von $0,1^\circ$ möglich. Diese Art von Elektromotor wird beispielsweise in Druckern oder Scanner, aber auch im Kraftfahrzeugbereich verwendet. Im Kraftfahrzeugbereich werden die Schrittmotoren zur Spiegelverstellung sowie der Sitzverstellung verwendet. Das maximal erreichbare Drehmoment eines Schrittmotors liegt bei zwei Newtonmeter und die maximal erreichbare Drehzahl bei ca. 2000 Umdrehung pro Minute. Der Vorteil eines Schrittmotors ist die Wartungsfreiheit, da der Rotor keine Wicklungen hat. [Babiel.2023][Hagl.2021][Bernstein.2018][Schroder.2021]

9.1.1. Aufbau und Funktionsweise eines Schrittmotors

Der Schrittmotor besteht aus einem Stator, einem Rotor ohne Wicklungen und einer Steuerelektronik. Diese Steuerelektronik setzt sich zusammen aus einer Treiberstufe und der eigentlichen Steuerung. Bei dem Stator handelt es sich um den feststehenden äußeren Teil und bei dem Rotor um den beweglichen inneren Teil, wie in Abbildung 9.1 zu erkennen ist. Im Stator sind Spulen verbaut, die von einem Strom durchflossen werden. Hierdurch entsteht ein magnetisches Feld. Da der Rotor magnetisch ist, folgt er dem Magnetfeld des Stators. Soll eine Bewegung hervorgerufen werden, werden einzelne Wicklungsstränge ein- aus- oder umgeschaltet. Durch diesen Vorgang wird ein rotierendes Magnetfeld erzeugt. Das erzeugte Magnetfeld zieht den Rotor an. Der Rotor wird bei jedem Puls (Takt) um einen Winkelschritt weitergeschaltet. Die Anzahl der Polpaare im Stator geben die Anzahl der Schritte vor. Die Drehzahl und die Drehrichtung hängt von der Reihenfolge und der Häufigkeit der Stromimpulse ab. Es gibt drei verschiedene Betriebsarten, die abhängig von der Genauigkeit und der Drehzahl sind. Im Vollschrittbetrieb werden alle Polpaare bestromt. In dem Halbschrittbetrieb wird die Schrittzahl des Motors verdoppelt, wodurch sich die Positionsauflösung im Gegensatz zum Vollschrittbetrieb verdoppelt. Allerdings wird in diesem Betrieb das Drehmoment reduziert. In dem Mikroschrittbetrieb bewegt sich der Rotor in sehr kleinen Schritten. Hierdurch wird eine hohe Positioniergenauigkeit und ein ruhiger Lauf erreicht, da die Ströme und das Drehmoment in kleineren Schritten verändert werden. Bei einer zu hohen Schrittfrequenz kann ein Schrittverlust entstehen. Bei einem Schrittverlust überspringt der Motor einzelne Winkelschritte und landet in

einer vorherigen oder nächsten Position gleicher Phase. Durch die offene Steuerkette werden die Verluste nicht erkannt.[Hagl.2021][Bernstein.2018][Schroder.2021]

Figure 9.1.: Prinzipieller Aufbau Schrittmotor (2-phasig) [Hagl.2021]

9.1.2. Schrittmotor Bauformen

Wie bei anderen Elektromotoren gibt es auch bei dem Schrittmotor verschiedene Grundbauarten.

- Permanentmagnetereger-Schrittmotor (PM-Schrittmotor)
- Reluktanzschrittmotor (VR-Schrittmotor)
- Hybridschrittmotor

Der **permanentmagnetische Schrittmotor** hat einen Permanentmagneten in dem Rotor verbaut. Hierbei stellt sich der permanentmagnetische Rotor immer so, dass der Nordpol des Rotors dem Nordpol des Statorfeldes gegenüber liegt und der Südpol des Rotors dem Südpol des Statorfeldes. In dieser Ausrichtung ziehen sich die Pole gegenseitig an. Die Drehrichtung des Rotors hängt von der Fließrichtung des Stromes ab. Der permanentmagnetische Schrittmotor entwickelt im ausgeschalteten Zustand ein Drehmoment zur Selbsthaltung. Dies ist aufgrund des permanentmagnetischen Rotors möglich. Bei diesem Drehmoment handelt es sich um das höchste Drehmoment, das auf die Welle des Motors übertragen werden kann, ohne dass diese sich in eine rotierende Bewegung versetzt. Zu dieser Art von Schrittmotoren gehören beispielsweise der Klauenpol-Schrittmotor und der Scheibenmagnet-Schrittmotor. Bei der zweiten Bauart handelt es sich um den **Reluktanzschrittmotor**. Bei dieser Bauart besteht der Rotor aus einem weichmagnetischen Material und besitzt eine gezahnte Form. So lange der Schrittmotor von keinem Strom durchflossen wird, entsteht kein Magnetfeld. Sobald der Motor in Betrieb genommen wird, entsteht ein magnetischer Fluss innerhalb des Rotors. Wird nun eine Wicklung erregt, wird der nächste Zahn des Rotors angezogen. Dadurch, dass die Rotorzähne ungleich der Polteilung sind, kann das System unendlich lange fortgesetzt werden. Die Anzahl der Schritte und die Genauigkeit des Reluktanzschrittmotors ist abhängig von der Anzahl der Zähne auf dem Rotor. Aus technischer Sicht sind mit dieser Bauart Schrittwinkel unter 1° möglich. Damit die Drehrichtung verändert werden kann, sind mindestens zwei Strangwicklungen nötig. Bei den **Hybridschrittmotoren**, auch bekannt als Hybridschrittmotoren handelt es sich um eine Kombination aus dem Reluktanzschrittmotor und dem Permanentmagnetereger-Schrittmotor. Durch diese Kombination aus den beiden Schrittmotoren werden die Vorteile aus der kleinen Schrittweite, dem hohen Drehmoment und dem Selbsthaltungsmoment genutzt. Bei dem Hybridschrittmotor besteht der Rotor aus zwei um eine halbe Zahnteilung versetzten weichmagnetischen Polrädern, die eine zahnförmige Form haben. Bei den beiden Polrädern bildet das eine Polrad den Nordpol und das zweite Polrad den Südpol. Zwischen den beiden Polrädern befindet sich ein Permanentmagnet. Anders als bei anderen Schrittmotoren wird der Rotor bei dieser Bauart axial magnetisiert. Damit ein kleiner Schrittwinkel möglich ist, haben die Statorpole ebenfalls eine zahnförmige Form. Die Ausrichtung des Rotors ist abhängig von der Stromrichtung und wird durch den minimalen Widerstand bestimmt, der sich aus dem Stromfluss durch die einzelnen Stränge ergibt. Wird ein besonders kleiner Schrittwinkel benötigt, kann dies durch Erhöhung der Zähnezahzahl erreicht werden. [Schroder.2021] [Hagl.2021] [Babiel.2023]

9.1.3. Betriebsarten unipolar und bipolar

Neben den oben bereits genannten Betriebsarten, kann außerdem zwischen dem Unipolarbetrieb und dem Bipolarbetrieb unterschieden werden. Der große Unterschied zwischen den beiden Betriebsarten besteht darin, dass in dem Unipolarbetrieb der Strom in eine Richtung fließt. Bei dem Bipolarbetrieb hingegen fließt der Strom in beide Richtungen. Dies ist möglich, da jeder Wicklungsstrang über eine Vollbrücke gespeist wird. Ein weiterer Unterschied besteht in der Schaltung der Zweige, durch die ein Gleichstrom fließt. In dem Unipolarbetrieb werden die beiden Zweige in Reihe geschaltet. Jeder Wicklungsstrang wird mit zwei Drähten parallel gewickelt. Sind die beiden Wicklungsstränge in dem Bipolarbetrieb parallel gewickelt, müssen die Zweige parallelgeschaltet werden. Im Bipolarbetrieb kann ein höherer Wirkungsgrad erzielt werden, wo hingegen der Unipolarbetrieb eine deutlich einfachere Schaltung aufweist. [Schroder.2021]

9.1.4. Mikroschrittverfahren

Mit dem Mikroschrittverfahren können Zwischenschritte und Mikroschritte erzeugt werden. Es bietet die Fähigkeit, Geräusche und Vibrationen zu minimieren sowie die Auflösung der Umdrehung zu erhöhen. Um Zwischenschritte zu erreichen, müssen beide Wicklungen eines Schrittmotors gleichzeitig mit Strom versorgt werden. Mit dem Sinus/Cosinus-Mikroschrittverfahren können die Mikroschrittverfahren realisiert werden, indem der Strom in jeder Phase des Motors sinusförmig variiert. Durch die Anwendung sinusförmiger Ströme auf die Motorwicklungen wird eine feinere und gleichmäßigere Bewegung erzielt, was zur einer präziseren Steuerung und reduzierten mechanischen Vibrationen führt. [MarcMcComb.2024]

Ein Mikroschritt-Treiber unterteilt die Motorschrittwinkel in vier oder mehr Teil. Es handelt sich um einen Controller, der die Methode der Stromreglung verwendet, um die Mikroschritte zu erzeugen. Der Controller bietet außerdem den Vorteil einer erhöhten Flexibilität bei der Integration der Strombegrenzung und der Anpassung der Antriebscharakteristik als Reaktion auf Änderungen der Systemdynamik. Die Anzahl der Unterteilungen ist einstellbar, was eine präzise Steuerung und Anpassung an spezifische Anforderungen ermöglicht. [Babiel.2023]

9.2. Schrittverluste verhindern

Um mögliche Schrittverlusten einzugrenzen und oder sie zu verhindern, wird in diesem Kapitel beschrieben, wie die Ursachen für Schrittverluste oder Stillstand methodisch zu ermitteln sind. [FaulhaberDriveSystems.2020]

9.2.1. Auswahl des Schrittmotors

Zunächst muss ein passender Motor für die Anwendung gewählt werden. Dabei sollten folgende grundlegende Regeln erfüllt sein:

- Motorauswahl durch Höchstwerte für Drehmoment und Drehzahl (Worst-Case-Szenario)
- Verwendung eines Sicherheitsaufschlag von 30 % auf die Drehmoment-Drehzahl-Kennlinie(Kippmoment)
- Sicherstellen, dass externe Ereignisse die Anwendung nicht blockieren können

Sind die geforderten Drehmomente bei den jeweiligen Drehzahlen, den Motorspezifikation entsprechend, dann sind keine Probleme zu erwarten. Ist der Motor zu schwach gewählt und die Anwendung fordert mehr Leistung als der Motor abgeben kann, so bleibt der Motor stehen. Der nächste Schritt ist die Durchführung von Testdurchläufen.

Es soll im Betrieb überprüft werden, ob Schrittlverluste auftreten. Schrittmotoren verlieren konstruktionsbedingt nicht nur einen einzigen Schritt. Bei geringen Drehzahlen verliert der Motor ein Vielfaches von vier Schritten.[FaulhaberDriveSystems.2020]

9.2.2. Betriebsart

In diesem Abschnitt werden je nach Betriebsart mögliche Ursachen erläutert, falls der Schrittmotor bei den Tests versagt.

Start-Stopp-Betrieb

Der Motor ist mit der Last fest verbunden und wird mit konstanter Drehzahl betrieben. Innerhalb des ersten Schrittes muss der Motor auf die vorgegebene Frequenz beschleunigen wie in Abbildung 9.2 zu sehen ist.[FaulhaberDriveSystems.2020]

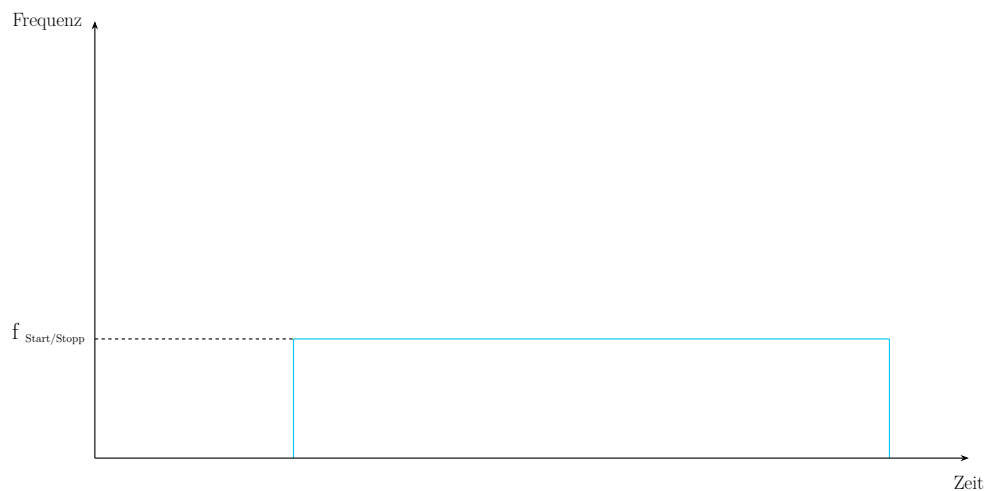


Figure 9.2.: Start-Stopp Frequenz [FaulhaberDriveSystems.2020]

Fehlerbild: Motor läuft nicht an (siehe Ursachen und Lösungen aus Tabelle 9.1)

Beschleunigung und Rampenprofil (Trapezförmig)

Der Motor kann mit einer im Controller vorgegebenen Beschleunigungsrate bis auf die Maximalfrequenz beschleunigen wie in Abbildung 9.3 zu sehen ist.[FaulhaberDriveSystems.2020]

Fehlerbild: Motor beendet die Beschleunigungsrampe nicht (siehe Ursachen und Lösungen aus Tabelle 9.2)

Ursachen	Lösungen
Last zu Hoch	Falscher Motor, größeren Motor wählen
Frequenz zu hoch	Frequenz reduzieren
Pendelt der Motor von Links nach Rechts	Es könnte eine Phase unterbrochen oder nicht angeschlossen sein, dies muss repariert werden
Phasenstrom passt nicht	Phasenstrom erhöhen

Table 9.1.: Ursachen und Lösungen: Motor läuft nicht an [FaulhaberDriveSystems.2020]

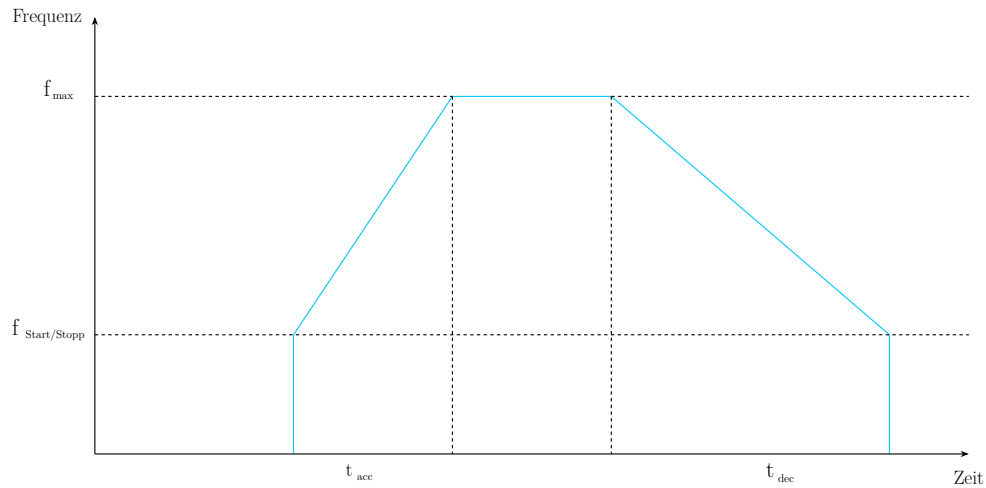


Figure 9.3.: Trapezförmiges Geschwindigkeitsprofil [FaulhaberDriveSystems.2020]

Ursachen	Lösungen
Motor bleibt bei der Resonanzfrequenz hängen	• Beschleunigung erhöhen, um die Resonanzfrequenz schneller zu durchlaufen • Start-Stopp Frequenz über dem Resonanzpunkt wählen • Halbschritt- oder Mikroschrittbetrieb verwenden • Mechanische Dämpfung vorsehen
Falsche Einstellung von Versorgungsspannung oder Strom zu gering	• Spannung oder Strom erhöhen • Motor mit geringerer Impedanz testen • Stromregelung verwenden
Maximaldrehzahl zu hoch	• Maximaldrehzahl reduzieren • Beschleunigungsrampe abflachen
Schlechte Vorgabe der Beschleunigungsrampe durch Elektronik	• Anderen Controller verwenden

Table 9.2.: Ursachen und Lösungen: Motor beendet die Beschleunigungsrampe nicht [FaulhaberDriveSystems.2020]

Fehlerbild: Motor beschleunigt bis zur Enddrehzahl und bleibt stehen, sobald eine konstante Drehzahl erreicht ist (siehe Ursachen und Lösungen aus Tabelle 9.3)

Ursachen	Lösungen
Motor wird an Leistungsgrenze betrieben und bleibt stehen aufgrund zu hoher Beschleunigung	• Ruckeln verringern durch geringere Beschleunigungsrate oder durch unterschiedliche Beschleunigungsrampen, erst steil dann flacher • Drehmoment erhöhen • Motor im Mikroschrittbetrieb betreiben • Mechanische Dämpfung vorsehen

Table 9.3.: Ursachen und Lösungen: Motor beschleunigt bis zur Enddrehzahl und bleibt stehen, sobald eine konstante Drehzahl erreicht ist. [FaulhaberDriveSystems.2020]

9.2.3. Externe Ereignisse

Lastrückkopplung

„Manchmal wird der vom Motor angetriebene Mechanismus/Last während der Bewegung „aufgezogen“ und gibt diese Energie wieder an den Motor zurück, wenn die Ströme ausgeschaltet werden. Der Mechanismus könnte z.B. ein Untersetzungsgetriebe sein.“[FaulhaberDriveSystems.2020] Wird diese Energie an den Motor zurück geleitet, kann es passieren, dass der Motor sich um einen Winkel verdreht, der mehr als einem Schritt entspricht. Dabei kann es passieren, dass der Motor nicht ausreichend Drehmoment entwickelt und nicht oder erst nach 4 Vollschritten anläuft. [FaulhaberDriveSystems.2020]

Lösungen:

- Die Kommutierung so programmieren, dass Wert und Polarität vor dem Abschalten gespeichert und beim Wiedereinschalten verwendet werden kann.
- Nicht vollständig den Strom abschalten, sondern bei Motorstillstand einen reduzierten *Stand-By* Strom aufrechterhalten

Erhöhung der Nutzlast mit der Zeit

„Manchmal läuft der Motor für eine lange Zeit störungsfrei und viel später treten die ersten Schrittverluste auf. In diesem Fall ist es sehr wahrscheinlich, dass die Last, die der Motor „sieht“, sich geändert hat. Das kann auf Verschleiß der Motorlager oder ein externes Ereignis zurückzuführen sein.“[FaulhaberDriveSystems.2020]

Lösungen:

- Prüfen ob ein externes Ereignis durch Veränderung des Mechanismus vorliegt.
- Prüfen ob Lagerverschleiß vorhanden ist. Verwendung von Kugellager erhöhen die Lebensdauer des Motors.
- Verwendung von Schmiermittel um Reibung zu verhindern.

9.3. Beschreibung des verwendeten Schrittmotors

Der hier verwendete NEMA 17 Schrittmotor ist ein bipolarer Schrittmotor. "NEMA" steht hier für die Norm des US-amerikanischen "National Electrical Manufacturers Association". Die 17 in der Modellbezeichnung steht für die Flanschgröße, welche 1,7 x 1,7 Zoll beträgt. Der NEMA 17 besitzt keinen integrierten Treiber, sondern muss

über einen externen Treiber wie den DRV8825 (Kapitel xx) angesteuert werden. In Verbindung mit dem Treiber unterstützt der Schrittmotor bis zu 1/32 Mikroschritte. Der NEMA 17 Schrittmotor findet vor allem in 3D-Druckern, CNC-Fräsen, Kameraschlitten oder Robotikachsen Anwendung.

9.4. Spezifikation

In Tabelle xx sind die Spezifikationen des NEMA 17 aufgelistet.

Spezifikation	Wert
Wellenmaße	4,5 x 22 mm (Einzelwelle)
Anschluss	4-Pol Buchse
Schritte pro Umdrehung	200
Abmessungen	42 x 42 x 42 mm
Haltemoment	0,45 Nm
Nennspannung	3,3 V
Nennstrom	1,5 A
Schrittwinkel	1,8°
Anzahl der Phasen	2
Phasenwiderstand	2,2 Ohm
Phaseninduktivität	5 mH
s Isolationswiderstand	500 V DC
Isolationsklasse	B (130°)
Trägheitsmoment	57 g · cm ²
Rastmoment	0,015 Nm
zuläss. Temperaturbereich	-10 °C bis 50 °C

Table 9.4.: Spezifikationen des NEMA 17 Schrittmotors

9.5. Anschluss an den DRV8825

Der Schrittmotor wird mit dem Schrittmotortreiber DRV8825 verbunden. Die Verbindung kann Tabelle xx entnommen werden.

DRV8825	Schrittmotor
AOUT1	Spule A, Ende 1
AOUT2	Spule A, Ende 2
BOUT1	Spule B, Ende 1
BOUT2	Spule B, Ende 2

Table 9.5.: Pin-Belegung für den Anschluss des Treibers an den Schrittmotor

9.6. Weiterführende Literatur

einfügen

10. Schrittmotortreiber DRV8825

In diesem Kapitel wird beschrieben, was ein Motortreiber ist, welche Aufgaben er erfüllt und wie man den DRV8825 mit dem Arduino Nano 33 BLE Sense verwendet.

10.1. Allgemeine Beschreibung eines Motortreibers

Ein Motortreiber ist ein Elektronikbaustein, der Mikrocontrollern wie dem Arduino Nano 33 BLE Sense ermöglicht elektrische Motoren anzusteuern. Dabei kann es sich zum Beispiel um Gleichstrommotoren oder Schrittmotoren handeln.

Motortreiber haben mehrere Funktionen. Zum einen verstärken sie die Spannung und den Strom, da Mikrocontroller meist zu wenig Leistung liefern, um den Motor direkt zu betreiben. Zum anderen sorgen Motortreiber dafür, dass man die Drehrichtung und die Drehzahl regeln kann. Außerdem haben viele Motortreiber auch eine Schutzfunktion, die vor Überstrom, Überhitzung oder Kurzschluss schützen.

10.2. Spezifische Beschreibung des Schrittmotortreibers DRV8825

Der DRV8825 ist ein Motortreiber, der vor für bipolare Schrittmotoren wie hier der NEMA 17-04 eingesetzt wird. Er wird in Druckern, CNC-Maschinen oder in der Robotik verwendet.

Der Motor lässt sich über den DRV8825 von Vollschritt bis 1/32-Schritt einstellen. Er verfügt über einen konfigurierbaren Abklingmodus (tritt bei Erreichen des Stromlimits ein), sodass langsames, schnelles oder gemischtes Abklingen verwendet werden kann. Außerdem besitzt er einen stromsparenden Schlafmodus, der die interne Schaltung abschaltet und den Ruhestromverbrauch minimiert.

Der DRV8825 verfügt über Schutzfunktionen für Überstrom, Kurzschluss, Unterspannung und Übertemperatur. Außerdem werden Fehler über den nFAULT-Pin (siehe Abbildung xx) signalisiert.

10.2.1. Anschluss des Treibers mit dem Arduino Nano 33 BLE Sense

Tabelle xx kann entnommen werden, wie der DRV8825 an den Arduino Nano 33 BLE Sense angeschlossen wird. Tabelle xx zeigt, wie der DRV8825 an den Schrittmotor NEMA 17-04 angeschlossen wird.

10.3. Spezifikationen

Die Spezifikationen sind in Tabelle xx und xx zu sehen.

10.4. Kalibrierung

Da der Treiber den Strom durch den Schrittmotor regelt ist die Kalibrierung des DRV8825 erforderlich, um zu vermeiden, dass der Schrittmotor überhitzt oder der Treiber überlastet.

DRV8825	Arduino Nano 33 BLE Sense
STEP	z.B. D3
DIR	z.B. D4
EN	GND
nRESET	HIGH (z.B. an 5V)
nSLEEP	HIGH (z.B. an 5V)
GND	GND
VDD	5V

Table 10.1.: Pin-Belegung für den Anschluss des Treibers an den Arduino

DRV8825	Schrittmotor
AOUT1	Spule A, Ende 1
AOUT2	Spule A, Ende 2
BOUT1	Spule B, Ende 1
BOUT2	Spule B, Ende 2

Table 10.2.: Pin-Belegung für den Anschluss des Treibers an den Schrittmotor

Spezifikation	Wert
Versorgungsspannung	-0,3 V bis 47 V
Digitale Eingangsspannung	-0,5 V bis 7 V
Referenzspannung	-0,3 V bis 4 V
Motorstrom	bis zu 2,5 A
Temperaturbereich	-40 °C bis 150 °C

Table 10.3.: Absolute Maximalwerte

Spezifikation	Wert
Versorgungsspannung	8,2 V - 45 V
Referenzspannung	1 V bis 3,5 V
Motorstrom	0 A bis 2,5 A

Table 10.4.: Empfohlene Betriebsbedingungen

Für die Kalibrierung wird ein Multimeter, ein Schraubendreher für das Potentiometer, der GND-Pin des Arduino und der VREF-Messpunkt (Metallplättchen am Potentiometer) benötigt.

Im ersten Schritt ist es wichtig, dass der Schrittmotor nicht angeschlossen ist. Als nächstes wird die Stromversorgung eingeschaltet. Nun wird das Multimeter verwendet, dabei wird der Pluspol am VREF-Messpunkt verbunden und der Minuspol am GND-Anschluss des Arduino. Aus dem abgelesenen Wert kann nun die Zielspannung für VREF berechnet werden und dann am Potentiometer mit dem Schraubendreher eingestellt werden. Dabei ist darauf zu achten das Potentiometer nicht zu überdrehen, da es empfindlich ist.

Nach dem Kalibrieren des Treibers kann der Schrittmotor angeschlossen werden.

10.5. Einfaches Beispiel mit Code

```
1  // Pin-Zuweisung
2  const int stepPin = 3;  // STEP
3  const int dirPin  = 4;  // DIR
4  const int enablePin = 5; // optional: nENBL (LOW = aktiv)
5
6  void setup() {
7      pinMode(stepPin, OUTPUT);
8      pinMode(dirPin, OUTPUT);
9      pinMode(enablePin, OUTPUT);
10
11     digitalWrite(enablePin, LOW); // Treiber aktivieren
12     digitalWrite(dirPin, HIGH);   // Drehrichtung setzen (HIGH oder LOW)
13 }
14
15 void loop() {
16     // Einen Schritt erzeugen:
17     digitalWrite(stepPin, HIGH);
18     delayMicroseconds(1000); // Schrittimпульsdauer (kleiner = schneller)
19     digitalWrite(stepPin, LOW);
20     delayMicroseconds(1000); // Pausenzeit (je nach gewünschter Drehzahl)
21 }
```

10.6. Weiterführende Literatur

einfügen

11. Geschwindigkeitssensor LM393

11.1. Allgemeine Beschreibung des Sensors

Der LM393 ist ein einfacher und kostengünstiger Geschwindigkeitssensor, der nach dem Prinzip der optischen Lichtschranke funktioniert. Er besteht aus einem LM393-Komparator, einem Infrarot-Sender-Empfänger-Paar und einem digitalen Ausgang. Der Sensor kann in Kombination mit einer auf einer rotierenden Welle angebrachten Lochscheibe verwendet werden.

11.2. Spezifische Beschreibung des Sensors

Der LM393 Geschwindigkeitssensor besteht aus folgenden Komponenten:

- Infrarot-LED (Sender)
- Fototransistor (Empfänger)
- Lichtschranken-Nut
- LM393 Komparator
- Status-LED
- PCB mit Pins
- Lochscheibe

Wie diese Komponenten die Funktion des Sensors ermöglichen, wird im Folgenden erklärt.

11.2.1. Funktionsweise der Lichtschranke

Die Infrarot-LED und der Fototransistor bilden eine optoelektronische Lichtschranke und sind sich gegenüber auf dem Sensor-PCB angebracht. Die beiden Komponenten sind durch die Lichtschranken-Nut getrennt, welche 5 mm breit ist. In dieser Nut rotiert die Lochscheibe, welche auf der Motorwelle montiert ist und mit 20 Löchern ausgestattet ist. Die Infrarot-LED dient als Sender der Lichtschranke und emittiert kontinuierlich Licht im infraroten Bereich (940 nm) in Richtung des Empfängers. Der Fototransistor ist der Empfänger. Dieser Fototransistor besteht aus einem Halbleitermaterial. Trifft das Infrarotlicht des Senders, durch ein Loch der Lochscheibe auf den Empfänger, so werden dort Elektronen-Loch-Paare erzeugt. Dadurch steigt der Stromfluss durch den Fototransistor. Wird das Infrarotlicht durch die Lochscheibe blockiert sinkt der Strom im Fototransistor.

Die hier verwendete Lochscheibe weist 20 Löcher auf, somit werden pro Umdrehung 20 Signale erzeugt. Da der Sensor aber auf Signaländerungen reagiert werden pro Loch zwei Impulse erzeugt, es werden also 40 Impulse pro Umdrehung gezählt.

11.2.2. Signalverarbeitung mit dem LM393 Komparator

Der LM393 ist ein Komparator, der zwei Analoge Spannungen vergleicht. Eingang A wird mit einer Referenzspannung beschaltet. Eingang B ist mit dem Fototransistor verbunden. Wenn Infrarotlicht auf dem Empfänger auftrifft (durch Loch der Lochscheibe) ändert sich die Spannung am Eingang B. Wenn die Spannung im Fototransistor durch den Lichteinfall höher wird als die Referenzspannung, dann schaltet der Komparator den digitalen Ausgang D0 auf LOW. Wenn der Lichteinfall blockiert ist und somit die Spannung im Fototransistor niedriger ist als die Referenzspannung, dann schaltet der Komparator den digitalen Ausgang D0 auf HIGH. Der LM393 Komparator wird also dazu genutzt kleine Änderungen im Analogsignal zu verstärken und in ein klares digitales Rechtecksignal umzuwandeln.

Am digitalen Ausgang D0 liegt das durch den LM393 erzeugte Signal an. Dieses kann direkt mit einem Mikrocontroller, in diesem Fall einem Arduino Nano 33 BLE Sense verbunden und ausgewertet werden.

11.2.3. Anschluss des Sensors mit dem Arduino Nano 33 BLE Sense

In Abbildung xx ist gezeigt wie der Sensor korrekt an den Arduino Nano 33 BLE Sense angeschlossen wird:

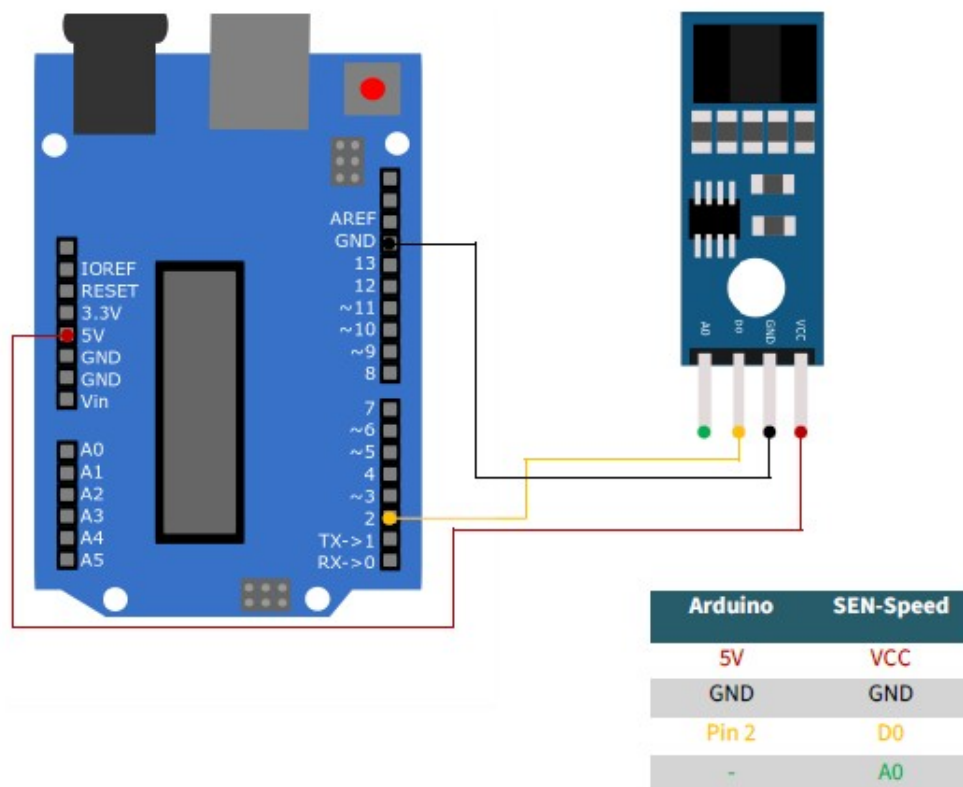


Figure 11.1.: Anschluss des Sensors ans den Arduino Nano 33 BLE Sense

Spezifikation	Wert
Modell	Speedsensor LM393 mit Lochscheibe
Versorgungsspannung	3,3 V - 5 V DC
Signalausgabe	Digital
Nutbreite (Lichtschranke)	5 mm
PCB-Abmessungen	32 mm x 14 mm
Lochscheiben-Durchmesser	25,5 mm (20 Löcher)
Besonderheiten	LED-Anzeige, Montageloch

Table 11.1.: Spezifikationen des Speedsensor LM393

11.3. Spezifikationen

11.4. Bibliothek

Für die Verwendung des Sensors mit dem Arduino Nano 33 BLE Sense wird die TimerOne-Bibliothek benötigt. Die TimerOne-Bibliothek wird verwendet, um die Zeitmessung zu ermöglichen, um aus den erzeugten Impulsen des Sensors die Drehzahl zu berechnen.

Welche Funktionen werden verwendet + Erklärung

11.4.1. Installation

Im Folgenden wird erklärt, wie die TimerOne Bibliothek installiert wird.

1. Öffnen der Arduino IDE
2. Klick auf Sketch, Bibliothek einbinden, Bibliotheken verwalten (Abbildung xx)
3. In der Suchleiste TimerOne eingeben
4. Klick auf Installieren (Version aus Abbildung xx entnehmen)

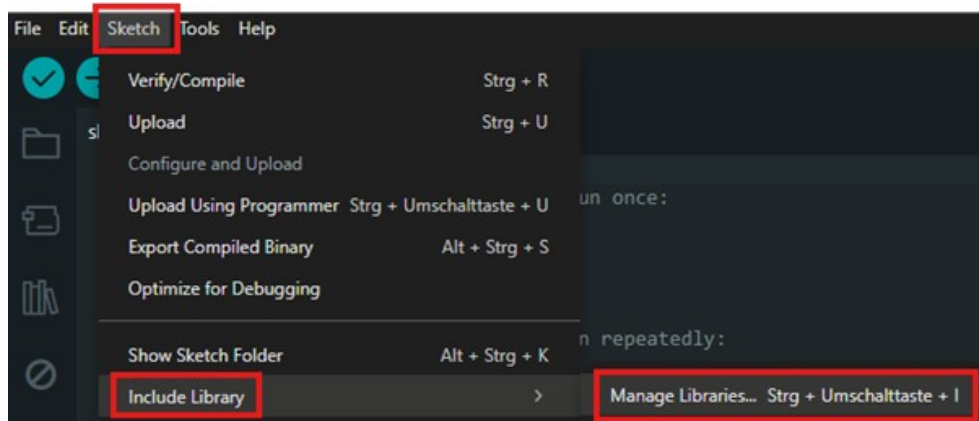


Figure 11.2.: Aufrufen der Bibliotheken in der Arduino IDE

11.4.2. Code-Beispiel

Im Folgenden ist ein Code-Beispiel gegeben, in dem die verwendeten Funktionen erklärt werden. Für weitere Funktionen der Bibliothek kann man über Datei, Beispiele, TimerOne auf verschiedene Beispiel-Codes zugreifen (Abbildung xx).



Figure 11.3.: Installation der TimerOne Bibliothek

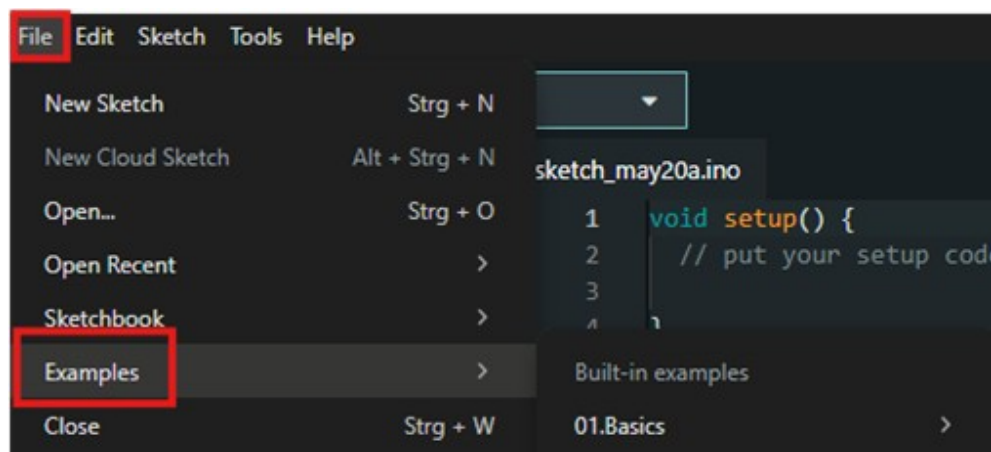


Figure 11.4.: Aufrufen der Beispiele für die TimerOne Bibliothek

11.5. Kalibrierung

Für den LM393 Geschwindigkeitssensor mit Lochscheibe ist keine spezielle Kalibrierung notwendig. Optional kann aber eine empirische Kalibrierung durchgeführt werden, indem man die Umdrehungen mit einem bekannten Drehzahlmesser vergleicht. Bei der Positionierung des Sensors muss darauf geachtet werden, dass die Lichtschranke präzise auf die Mitte der Lochscheibe ausgerichtet ist. Die Lochscheibe muss plan und fest an der Motorachse montiert werden. Außerdem muss die Variable „wheel“ im Code an die Anzahl der Löcher in der Lochscheibe angepasst werden. Da der Sensor auf Flankenwechsel reagiert, muss die Variable auf die doppelte Anzahl der Löcher gesetzt werden. Die Lochscheibe, welche für den Demonstrator verwendet wird, hat 20 Löcher, somit muss „wheel“ auf 40 gesetzt werden, wie in Abbildung xx unter Abschnitt xx zu sehen.

11.6. Einfaches Beispiel mit Code

Das Beispiel geht davon aus, dass die Lochscheibe auf einer sich rotierenden Welle befestigt ist. Mit dem folgenden Code wird die Drehzahl der Welle alle 5 Sekunden im seriellen Monitor ausgegeben.

11.7. Tests

Um sicherzugehen, dass der Sensor zuverlässig funktioniert, wird empfohlen folgende Tests anhand des einfachen Beispiels mit Code durchzuführen:

- Lichtschrankenprüfung: Drehe die Lochscheibe manuell und beobachte ob die Status-LED bei jedem Loch kurz aufblinkt.
- Signaltest: Starte den Beispielcode und überprüfe ob im eingestellten Zeitintervall Drehzahlen im seriellen Monitor ausgegeben werden.
- Stabilitätstest: Führe längere Messungen durch um sicherzustellen, dass der Sensor stabile Werte liefert.
- Reaktion auf Lichtverhältnisse: Teste den Sensor bei verschiedenen Lichtverhältnissen um externe Störungen der Lichtschranke zu erkennen.

11.8. Weiterführende Literatur

einfügen

```

// sen-speed Demo
// Der Code misst ueber einen Zeitraum (5 Sekunden voreingestellt)
// die Umdrehungen der Encoder-Scheibe, rechnet diese dann auf Umdrehungen
// pro Minute um und gibt diese über die serielle Schnittstelle aus.

// Import einer Bibliothek
#include "TimerOne.h"
#define pin 2

// Benoetigte Variablen
int interval, wheel, counter;
unsigned long previousMicros, usInterval, calc;

void setup()
{
  counter = 0; // counter auf 0 setzen
  interval = 5; // 5 Sekunden Intervall
  wheel = 20; // Loecher in der Encoder-Scheibe

  calc = 60 / interval; // Intervall auf 1 Minute hoch rechnen
  usInterval = interval * 1000000; // Intervallzeit fuer den Timer in
                                   // Mikrosekunden umrechnen
  wheel = wheel * 2; // Anzahl der Loecher in der Encoder-Scheibe mit 2
                    // multiplizieren, da der Interrupt bei jeder
                    // Aenderung des Signals ausgefuehrt wird

  pinMode(pin, INPUT); // Setzen des analogen Pins als Input
  Timer1.initialize(usInterval); // Timer initialisieren auf dem Intervall
  attachInterrupt(digitalPinToInterrupt(pin), count, CHANGE);
  // fuehrt count aus, wenn sich das Signal am Pin 2 aendert

  Timer1.attachInterrupt(output); // fuehrt nach Intervall output aus
  Serial.begin(9600); // starten der seriellen Schnittstelle mit 9600 Baud
}

// Zaehlt Loecher der Encoder-Scheibe (mit Filter)
void count(){
  if (micros() - previousMicros >= 700) {
    counter++;
    previousMicros = micros();
  }
}

// Ausgabe im seriellen Monitor
void output(){
  Timer1.detachInterrupt(); // Unterbricht Timer
  Serial.print("Drehzahl pro Minute: ");
  int speed = ((counter)*calc) / wheel;
  // Berechnung der Umdrehungen pro Minute

  Serial.println(speed);
  counter = 0; // zuruecksetzen des Zaehlers
  Timer1.attachInterrupt(output); // startet Timer erneut
}

void loop(){
  // keine loop notwendig
}

```

Figure 11.5.: wird noch in Code umgewandelt!

12. OLED-Display

In diesem Kapitel wird erklärt wie was ein OLED-Display ist, wie es funktioniert und wie es in diesem Projekt eingebunden wird.

12.1. Allgemeine Beschreibung eines OLED-Displays

Ein OLED-Display ist eine Art von Bildschirm, bei der organische Materialien Licht emittieren, wenn Strom durch sie hindurchfließt. "OLED" steht dabei für "Organic Light Emitting Diode".

Im Gegensatz zu LCD-Displays benötigen OLED-Displays keine Hintergrundbeleuchtung, da jede einzelne Pixelzelle selbst leuchtet. Außerdem sind OLED-Displays oft dünner, leichter, bieten einen besseren Kontrast und einen breiteren Betrachtungswinkel. Durch die schnelle Reaktionszeit von OLED-Displays werden sie vor allem in Smartphones, Fernsehern, Smartwatches oder High-End-Monitore verbaut.

Nachteile von OLED-Displays liegen darin, dass sie teurer sind als LCD-Displays. Außerdem haben vor allem blaue OLED-Displays oft eine kürzere Lebensdauer und im Allgemeinen besteht die Gefahr des Einbrennens (Burn-in). Das bedeutet, dass es bei statischen Bildern dazu kommen kann, dass Reste des Bildes auf dem Display sichtbar bleiben.

12.2. Spezifische Beschreibung OLED-Displays

Es wird ein 2,42 Zoll OLED-Display von Joy-IT verwendet. Dabei handelt es sich um ein Display mit 128 x 64 Pixeln, welches gelbe Schrift auf schwarzem Hintergrund darstellt. Es besitzt eine SPI- und eine I2C-Schnittstelle, sodass es mit dem verwendeten Arduino Nano 33 BLE Sense kompatibel ist.

12.3. Anschluss des Sensors mit dem Arduino Nano 33 BLE Sense

In Tabelle xx ist gezeigt wie das OLED-Display korrekt an den Arduino Nano 33 BLE Sense angeschlossen wird:

OLED-Display	Arudino Nano 33 BLE Sense
1	GND
2	3V3
4	D9
5	D8
7	A5
8	A4

Table 12.1.: Pinbelegung für I2C-Verbindung zwischen OLED-Display und Arduino Nano 33 BLE Sense

12.4. Spezifikationen

Spezifikation	Wert
Typ	Negativ OLED
Auflösung	128 x 64 Pixel
Abmessungen	71 x 50 x 7 mm
Versorgungsspannung	3 - 5 V
Versorgungsstrom	90 mA
Logik Level	3 V
High Level Eingang	mind. 2,4 V
Low Level Eingang	max. 0,6 V
Helligkeit	100 - 120 CD/cm ²
Kontrast	> 2000:1
Blickwinkel	> 160°
zuläss. Betriebstemperatur	-40 °C bis 85 °C
Lagerungstemperatur	-45 °C bis 90 °C

Table 12.2.: Spezifikationen des OLED-Displays

12.5. Bibliothek

Für die Verwendung des OLED-Displays mit dem Arduino Nano 33 BLE Sense wird die U8g2 by oliver Bibliothek benötigt.

Welche Funktionen werden verwendet + Erklärung

12.5.1. Installation

Im Folgenden wird erklärt, wie die U8g2 Bibliothek installiert wird.

1. Öffnen der Arduino IDE
2. Klick auf Sketch, Bibliothek einbinden, Bibliotheken verwalten
3. In der Suchleiste U8g2 eingeben
4. Klick auf Installieren (Version aus Abbildung xx entnehmen)

12.5.2. Code-Beispiel

Auf Code-Beispiele für die U8g2 Bibliothek kann man über Datei, Beispiele, U8g2 zugreifen.

12.6. Einfaches Beispiel mit Code

Mit dem Code-Beispiel kann getestet werden, ob das Display korrekt angeschlossen ist. Wenn die Verbindung korrekt ist, dann erscheint auf dem Display "Hello World".

12.7. Weiterführende Literatur

einfügen

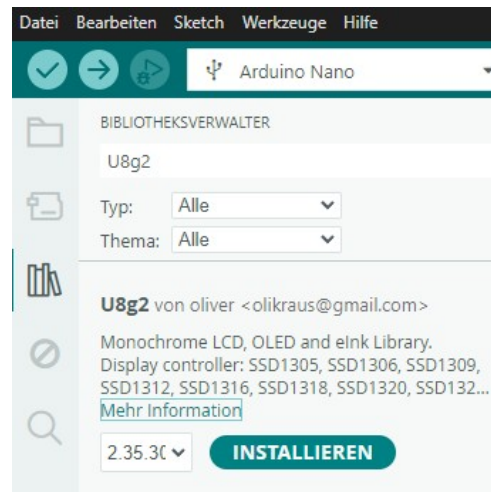


Figure 12.1.: Installation der U8g2 Bibliothek

```

1  #include <U8g2lib.h>
2  #include <Wire.h>
3
4  // Konstruktor für SSD1309 im I²C-Modus, Hardware I²C mit default Pins (A4=SDA, A5=SCL)
5  U8G2_SSD1309_128X64_NONAME2_1_HW_I2C u8g2(U8G2_R0, /* reset=*/ U8X8_PIN_NONE);
6
7  void setup() {
8      u8g2.begin(); // Initialisiert das Display
9  }
10
11 void loop() {
12     u8g2.clearBuffer();           // Bildspeicher löschen
13     u8g2.setFont(u8g2_font_ncenB08_tr); // Schriftart wählen
14     u8g2.drawStr(0, 24, "Hello World!"); // Text auf Puffer schreiben
15     u8g2.sendBuffer();           // Puffer an Display senden
16     delay(1000);                 // 1 Sekunde warten
17 }

```

Figure 12.2.: wird noch in Code umgewandelt!

13. Sensor XY

Introduction

WS:cite books,
applications, board

13.1. General

General description
cite books

13.2. Specific Sensor/Actor

cite board

13.3. Specification

- Cite the data sheet
- Extract te information from the data sheet
- Circuit Diagram

13.4. Library

13.4.1. Description

13.4.2. Installation

- data types
- data structure
- data quantity
- data quality

13.4.3. Functions

13.5. Example

In this section, a simple example is described in detail, which demonstrates how the library supports the sensor/actor.

13.5.1. Manual**13.5.2. Inside the Example****13.5.3. Code****13.5.4. Files****13.6. Calibration**

`cite method`

13.7. Simple Code**13.8. Simple Application****13.9. Tests****13.9.1. Simple Function Test****13.9.2. Test all Functions****13.10. Further Readings**

14. Actor XY

Introduction

WS:cite books,
applications, board

14.1. General

General description
cite books

14.2. Specific Sensor/Actor

cite board

14.3. Specification

- Cite the data sheet
- Extract te information from the data sheet
- Circuit Diagram

14.4. Library

14.4.1. Description

14.4.2. Installation

- data types
- data structure
- data quantity
- data quality

14.4.3. Functions

14.5. Example

In this section, a simple example is described in detail, which demonstrates how the library supports the sensor/actor.

14.5.1. Manual**14.5.2. Inside the Example****14.5.3. Code****14.5.4. Files****14.6. Calibration**


`cite method`

14.7. Simple Code**14.8. Simple Application****14.9. Tests****14.9.1. Simple Function Test****14.9.2. Test all Functions****14.10. Further Readings**

Part IV.

Anhang

15. Materialliste

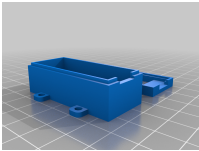Anzahl	Bezeichnung	Link	Preis
1	ARD NANO 33BLE H - Arduino Nano 33 BLE with header	www.reichelt.de - ARD NANO 33BLE H	29,50 €
			
1	ARD NANO 33BSH2 - Arduino Nano 33 BLE Sense Rev.2 with Header	www.reichelt.de - ARD NANO 33BSH2	44,80 €
			
1	ARD KIT TINYML - Arduino Lern-Kit Tiny Machine	www.reichelt.de - ARD Kit TinyML	49,24 €
			
1	Arducam B0226 Lens Calibration Tool	www.welectron.com - Arducam B0226 Lens Calibration Tool	11,90 €
			
1	3D Printed Case - A protective case for Arduino Nano 33 BLE Sense, customizable and available at Thingiverse	Thingiverse	./.
			

Stand: 03.02.2025

Literaturverzeichnis

- [Aba+16] M. Abadi et al. “TensorFlow: A System for Large-Scale Machine Learning”. In: *12th USENIX Symposium on Operating Systems Design and Implementation (OSDI 16)*. Savannah, GA: USENIX Association, Nov. 2016, pp. 265–283. ISBN: 978-1-931971-33-1. URL: <https://www.usenix.org/conference/osdi16/technical-sessions/presentation/abadi>.
- [Ada] *Adafruit GFX Library*. 2023. URL: <https://github.com/adafruit/Adafruit-GFX-Library> (visited on 06/14/2023).
- [Arda] *Arduino ABX00031 Nano 33 BLE Sense Module Benutzerhandbuch*. [pdf]. 2022. URL: <https://de.manuals.plus/arduino/abx00031-nano-33-ble-sense-module-manual> (visited on 06/26/2023).
- [Ardb] *Arduino Libraries – LCD_I2C*. 2023. URL: https://www.arduino.cc/reference/en/libraries/lcd_i2c (visited on 07/09/2023).
- [Ardc] *Arduino Libraries – SSD1306Ascii*. 2023. URL: <https://reference.arduino.cc/reference/en/libraries/ssd1306ascii/> (visited on 06/26/2023).
- [Ardd] *Arduino Libraries – Arduino_LPS22HB*. 2024. URL: https://www.arduino.cc/reference/en/libraries/arduino_lps22hb/ (visited on 06/14/2024).
- [Arde] *Arduino Reference – Interrupt*. 2019. URL: <https://www.arduino.cc/reference/de/language/functions/external-interrupts/attachinterrupt/> (visited on 06/26/2024).
- [Ardf] *Arduino Reference – Wire*. 2022. URL: <https://www.arduino.cc/reference/en/language/functions/communication/wire/> (visited on 06/26/2023).
- [Ardg] *Arduino Reference – Wire.setClock()*. 2022. URL: <https://www.arduino.cc/reference/en/language/functions/communication/wire/setclock/> (visited on 06/26/2023).
- [Ardh] *Arduino Reference – loop()*. 2019. URL: <https://www.arduino.cc/reference/en/language/structure/sketch/loop/> (visited on 06/26/2023).
- [Ardi] *Arduino Reference – setup()*. 2019. URL: <https://www.arduino.cc/reference/en/language/structure/sketch/setup/> (visited on 06/26/2023).
- [Ardj] *Arduino Referenz – pinMode()*. 2019. URL: <https://reference.arduino.cc/reference/de/language/functions/digital-io/pinmode/> (visited on 06/26/2023).
- [Ardk] *Arduino Tiny Machine Learning Kit*. [pdf]. 2022. URL: <https://store.arduino.cc/products/arduino-tiny-machine-learning-kit> (visited on 06/23/2023).
- [Ard19] Arduino, ed. *Arduino Library – Kalman*. 2019. URL: <https://www.arduino.cc/reference/en/libraries/kalman/> (visited on 07/09/2023).

- [Ard21] Arduino, ed. *Arduino Nano 33 BLE Sense Rev2 with headers*. 2021. URL: <https://store.arduino.cc/products/nano-33-ble-sense-rev2-with-headers>.
- [Ard21] Arduino, ed. *Check out Arduino Docs!* 2021. URL: <https://www.arduino.cc/en/Guide>.
- [Ard23a] Arduino, ed. *Arduino Nano 33 BLE Sense Rev1 - Product Reference Manual*. [pdf]. 2023. URL: <https://docs.arduino.cc/resources/datasheets/ABX00031-datasheet.pdf>.
- [Ard23b] Arduino, ed. *Arduino Nano 33 BLE Sense Rev2 - Product Reference Manual*. [pdf]. 2023. URL: <https://docs.arduino.cc/resources/datasheets/ABX00069-datasheet.pdf>.
- [Ard24a] Arduino Documentation. *Getting Started with Arduino IDE 2*. 2024. URL: <https://docs.arduino.cc/software/ide-v2/tutorials/getting-started-ide-v2/>.
- [Ard24b] Arduino, ed. *Getting started with the Arduino Nano 33 BLE Sense*. 2024. URL: <https://wiki-content.arduino.cc/en/Guide/NANO33BLESense>.
- [Ard24c] Arduino, ed. *Language Reference*. 2024. URL: <https://docs.arduino.cc/language-reference/>.
- [Ari21] D. Aristi. *LCD_I2C library on GitHub*. 2021. URL: https://github.com/blackhack/LCD_I2C (visited on 07/09/2023).
- [Az] 0,96 Zoll OLED Display - Datenblatt. [pdf]. AZ-Delivery, 2023. URL: <https://www.az-delivery.de/products/0-96zolldisplay>.
- [BN11] H. Babovsky and W. Neundorf. *Numerische Approximation von Funktionen*. Tech. rep. TU Ilmenau, 2011. URL: <https://www.tu-ilmenau.de/fileadmin/media/num/neundorf/Dokumente/Preprints/NumAppl.pdf> (visited on 01/13/2017).
- [Bab+23] N. R. Babu et al. “Case Study on Ni-MH Battery”. In: *2023 2nd International Conference on Applied Artificial Intelligence and Computing (ICAAIC)* (2023), pp. 1559–1564.
- [Bas16] S. Basler. *Encoder und Motor-Feedback-Systeme*. Wiesbaden: Springer Fachmedien Wiesbaden, 2016. ISBN: 978-3-658-12843-2. DOI: 10.1007/978-3-658-12844-9. URL: <https://link.springer.com/book/10.1007/978-3-658-12844-9>.
- [Ben17] J. Beningo. “Documenting Firmware with Doxygen”. In: (2017), pp. 121–148. DOI: 10.1007/978-1-4842-3297-2_5.
- [Ber18] H. Bernstein. *Elektrotechnik/Elektronik für Maschinenbauer - Einfach und praxisgerecht*. 3rd ed. Berlin Heidelberg New York: Springer-Verlag, 2018, pp. 235–236. ISBN: 978-3-658-20838-7.
- [Box21] J. Boxall. *Arduino Workshop - A Hands-On Introduction with 65 Projects*. 2. No Starch Press, 2021. ISBN: 9781593274481.
- [Chi+06] H.-H. Chiang et al. “The Human-in-the-loop Design Approach to the Longitudinal Automation System for the Intelligent Vehicle, TAIWAN iTS-i”. In: *2006 IEEE International Conference on Systems, Man and Cybernetics*. [pdf]. IEEE. 2006, pp. 2839–2844. DOI: 10.1109/ICSMC.2006.384384. URL: <https://ieeexplore.ieee.org/abstract/document/4273859>.
- [DIN66025-2] DIN Deutsches Institut für Normung e.V. *DIN 66025-2:1988-09: Programmaufbau für numerisch gesteuerte Arbeitsmaschinen: Wegbedingungen und Zusatzfunktionen*. Norm. Berlin, Sept. 1988.

- [Dev24] S. Developers. *Sphinx*. 2024. URL: <https://www.sphinx-doc.org/en/master/> (visited on 12/09/2024).
- [Din] DIN EN ISO 13850: Sicherheit von Maschinen - Not-Halt-Funktion - Gestaltungsleitsätze (ISO 13850:2015). 2016. URL: <https://www.din.de/de/mitwirken/normenausschuesse/nam/veroeffentlichungen/wdc-beuth:din21:233572513>.
- [FAD18] M. Fezari and A. Al Dahoud. “Integrated Development Environment “IDE” For Arduino”. In: (Oct. 2018).
- [FD22] P. Filipi and Dozie. *A Difference between Arduino Nano 33 BLE Sense vs. Arduino Nano 33 BLE Sense Lite*. [pdf]. 2022. URL: <https://forum.arduino.cc/t/a-difference-between-a-n-33-ble-sense-vs-sense-lite/1030305>.
- [FH14] R. Faragher and R. Harle. “An Analysis of the Accuracy of Bluetooth Low Energy for Indoor Positioning Applications”. In: *Proceedings of the 27th International Technical Meeting of The Satellite Division of the Institute of Navigation (ION GNSS+ 2014)*. 2014, pp. 2018–2027.
- [FS17] R. Farouki and J. Srinathu. “A real-time CNC interpolator algorithm for trimming and filling planar offset curves”. In: *Computer-Aided Design* 86 (Jan. 2017). DOI: 10.1016/j.cad.2017.01.001.
- [Far02] G. Farin. *Curves and Surfaces for CAGD*. 5. [pdf]. San Diego, CA: Academic Press, 2002.
- [Fet21] R. J. Fetick. *Kalman*. 2021.
- [Funa] BME280 Luftdruck-, Luftfeuchtigkeits- und Temperatursensor. 2023. URL: <http://funduino.de/nr-23-bme280-luftdruck-luftfeuchtigkeits-und-temperatursensor>.
- [Funb] OLED Display SSD1306 128 × 64 / 128 × 32. 2023. URL: <https://funduino.de/nr-42-oled-display-ssd1306-128x64-128x32>.
- [GW22] W. Gehrke and M. Winzker. *Digitaltechnik – Grundlagen, VHDL, FPGAs, Mikrocontroller*. Wiesbaden: Springer Vieweg, 2022. ISBN: 978-3-662-63953-5.
- [Gan24] T. Gan. “Capacitive Flexible Pressure Sensors and Their Application”. In: *E3S Web of Conferences* 553 (July 2024). [pdf]. DOI: 10.1051/e3sconf/202455305038.
- [Gua21] A. Guadalupi. *Machine LEarning Carrier V1.0*. [pdf]. 2021.
- [HEG21] E. Hering, J. Endres, and J. Gutekunst. *Elektronik für Ingenieure und Naturwissenschaftler*. 8. [pdf]. Springer Vieweg, 2021. ISBN: 978-3-662-62697-9. DOI: 10.1007/978-3-662-62698-6.
- [Hee24a] D. van Heesch. *doxygen – Manual for version 1.12.0*. Version 1.12.00. [pdf]. 2024. URL: <https://www.doxygen.nl/> (visited on 12/09/2024).
- [Hee24b] D. van Heesch. *doxygen*. 2024. URL: <https://www.doxygen.nl/> (visited on 12/09/2024).
- [Hil22] G. Hiller. *Color measurement - the CIE color space*. [pdf]. Datacolor, 2022.
- [Jak+10] G. Jaklic et al. “On Interpolation by Planar Cubic G^2 Pythagorean-Hodograph Spline Curves”. In: *Mathematics of Computation* (2010). [pdf].
- [KKV14] K. Karvinen, T. Karvinen, and V. Valtokari. *Sensoren – messen und experimentieren mit Arduino und Raspberry Pi*. dpunkt, 2014. ISBN: 97833864901607.

- [Küh24] C. Kühnel. *Arduino - Das umfassende Handbuch*. 3rd ed. [pdf]. Rheinwerk Verlag GmbH, 2024. ISBN: 978-3-367-10279-2.
- [Kur21] A. Kurniawan. *IoT Projects with Arduino Nano BLE Sense: Step-By-Step Projects for Beginners*. [pdf]. Berkeley, CA: Apress, 2021. ISBN: 978-1-4842-6457-7. DOI: 10.1007/978-1-4842-6458-4. URL: <https://doi.org/10.1007/978-1-4842-6458-4>.
- [LAH22] C. Liu, M. A. Alif, and G. He. “Shoulder Motion Detection Algorithm Based on MPU6050 Sensor and XGBoost Model”. In: *2022 International Conference on Computing, Communication, Perception and Quantum Technology (CCPQT)*. [pdf]. IEEE. 2022, pp. 1–5. DOI: 10.1109/CCPQT54534.2022.9939285. URL: <https://ieeexplore.ieee.org/document/9939285>.
- [LBSK05] X. Lin, Y Bar-Shalom, and T Kirubarajan. “Multisensor-multitarget bias estimation for general asynchronous sensors”. In: *IEEE Transactions on Aerospace and Electronic Systems* 41.1 (2005). [pdf], pp. 24–45. DOI: 10.1109/TAES.2005.1419586.
- [LP18] R. Lukac and K. N. Plataniotis. *Color Image Processing: Methods and Applications*. Image Processing Series. CRC Press, 2018. ISBN: 9781420009781. URL: <https://books.google.de/books?id=oD8qBgAAQBAJ>.
- [Lib21] A. Libraries, ed. *Arduino_LSM6DSOX Library for Arduino*. 2021. URL: https://github.com/arduino-libraries/Arduino_LSM6DSOX (visited on 07/09/2023).
- [MAB22] J. Martínez, D. Asiain, and J. R. Beltrán. “Self-Calibration Technique with Lightweight Algorithm for Thermal Drift Compensation in MEMS Accelerometers”. In: *Micromachines* 13.4 (2022). [pdf], p. 584. DOI: 10.3390/mi13040584. URL: <https://www.mdpi.com/2072-666X/13/4/584>.
- [Mal15] Mallon, Edward and Beddows, Patricia. *How to calibrate a compass (and accelerometer) with Arduino*. accessed date 19.05.2022. 2015. URL: <https://thecavepearlproject.org/2015/05/22/calibrating-any-compass-or-accelerometer-for-arduino/>.
- [NKG13] A. Noureldin, T. B. Karamat, and J. Georgy. *Fundamentals of Inertial Navigation, Satellite-based Positioning and their Integration*. Springer Science and Business Media LLC, 2013. DOI: 10.1007/978-3-642-30466-8.
- [Ous18] J. Ousterhout. *A Philosophy of Software Design*. [pdf]. Yaknyam Press, 2018. ISBN: 978-1-7321022-0-0.
- [RS17] J. Rehder and R. Siegwart. “Camera/IMU calibration revisited”. In: *IEEE Sensors Journal* 17.11 (2017). [pdf], pp. 3257–3268. DOI: 10.1109/JSEN.2017.2674307.
- [Raj19] A. Raj. *Arduino Nano 33 BLE Sense Review - What’s New and How to Get Started?* 2019. URL: <https://circuitdigest.com/microcontroller-projects/arduino-nano-33-ble-sense-board-review-and-getting-started-guide>.
- [Rei] *Batterieclip für 9-Volt-Block*. 11445. Das Datenblatt liefert allgemeine Informationen zum Batterieclip. Die Höhe des Batterieclips ist nicht aufgeführt. Reichelt Elektronik GmbH. July 2011.

- [Rei24] Reichelt Elektronik GmbH, ed. *Batterieclip für 9-Volt-Block, vertikal*. Online; accessed 17.04.2024. 2024. URL: <https://www.reichelt.de/batterieclip-fuer-9-volt-block-vertikal-clip-9v-p6665.html>.
- [Rus+07] D. Russell et al. *Apparatus and Methods for 3D Printing*. United States Patent, Patent N0.: US 7,291,002 B2. 2007.
- [ŠDS17] T. Štefanička, R. Ďuračiová, and C. Seres. “Development of a Web-Based Indoor Navigation System Using an Accelerometer and Gyroscope: A Case Study at The Faculty of Natural Sciences of Comenius University”. In: *Slovak Journal of Civil Engineering* 25.2 (2017). [pdf], pp. 30–38. DOI: 10.1515/sjce-2017-0005.
- [SS14] B. Sencer and E. Shamoto. “Curvature-continuous sharp corner smoothing scheme for Cartesian motion systems”. In: *2014 IEEE 13th International Workshop on Advanced Motion Control (AMC)*. [pdf] und [Version 2 - pdf]. Piscataway, NJ: IEEE, 2014, pp. 374–379. ISBN: 978-1-4799-2323-6. DOI: \url{10.1109/AMC.2014.6823311}.
- [Sab11] A. M. Sabatini. “Estimating three-dimensional orientation of human body parts by inertial/magnetic sensing”. In: *Sensors* 11.2 (2011), pp. 1489–1525.
- [Sch05] P. Scholz. *Softwareentwicklung eingebetteter Systeme*. 1st ed. Springer, 2005.
- [Sch07] J. Schanda. *Colorimetry: Understanding the CIE System*. Wiley, 2007. ISBN: 9780470175620. URL: <https://books.google.de/books?id=uZadszSGe9MC>.
- [Sch22] T. Scherer. “Batteriemanagement”. In: *Elektor special: Stromversorgung und Batterien* (2022), pp. 6–8.
- [She] *Voltage Sensor / 170640 - Data Sheet*. 170640. [pdf]. Shenzhen Global Tech Co. 2015.
- [Sim] *SBC-OLED01 - Datenblatt*. [pdf]. SIMAC Electronics GmbH, 2019. URL: https://cdn-reichelt.de/documents/datenblatt/A300/DEBO_OLED_0-96_DB-DE.pdf.
- [Sim19] Simac Electronics GmbH. *COM-KY040RE-Datenblatt: Drehencoder mit Tasterfunktion*. [pdf]. 2019. URL: www.joy-it.net.
- [Smy21a] R. J. Smythe. *Advanced Arduino Techniques in Science - Refine Your Skills and Projects with PCs or Python-Tkinter*. [pdf]. Berkeley, CA: Apress, 2021. ISBN: 978-1-4842-6786-8. DOI: 10.1007/978-1-4842-6784-4. URL: <https://doi.org/10.1007/978-1-4842-6784-4>.
- [Smy21b] R. J. Smythe. *Arduino in Science - Collecting, Displaying, and Manipulation Sensor Data*. [pdf]. Berkeley, CA: Apress, 2021. ISBN: 978-1-4842-6777-6. DOI: 10.1007/978-1-4842-6777-6.
- [Stma] *LSM6DSOX Datasheet*. [pdf]. 2018. (Visited on 06/23/2023).
- [Stmb] *LSM9DS1 Data Sheets*. 2015. URL: <https://www.st.com/resource/en/datasheet/lsm9ds1.pdf> (visited on 06/11/2022).
- [Stmc] *MP34DT06J – MEMS audio sensor omnidirectional digital microphone*. [pdf]. 2021. URL: <https://www.st.com/resource/en/datasheet/mp34dt06j.pdf> (visited on 06/23/2023).
- [Sto24] P. Stoffregen. *Encoder Library*. Ed. by PJRC. [pdf]. 2024. URL: https://www.pjrc.com/teensy/td_libs_Encoder.html.

- [TPM14] D. Tedaldi, A. Pretto, and E. Menegatti. “A Robust and Easy to Implement Method for IMU Calibration without External Equipment”. In: *Proceedings of the IEEE International Conference on Robotics and Automation*. [pdf]. IEEE. 2014, pp. 3040–3045. DOI: 10.1109/ICRA.2014.6907275.
- [Tri+22] H. K. Tripathy et al. “Smart COVID-shield: An IoT driven reliable and automated prototype model for COVID-19 symptoms tracking”. In: *Computing* (2022). [pdf], pp. 1–22. DOI: 10.1007/s00607-022-00975-7.
- [Vec] *Inertial Navigation Primer*. <https://www.vectornav.com/resources/inertial-navigation-primer/specifications--and--error-budgets/specs-imuspecs>. [pdf]. 2021.
- [Voš24] A. Voš. “Volumio mit Drehgebern erweitern”. In: *Make Magazin* (2024). [pdf].
- [W3c] *Wire.h (I²C)*. 2023. URL: <https://html.szaktilla.de/arduino/6.html>.
- [Wah+11] W. Wahyudi et al. “Inertial Measurement Unit using multigain accelerometer sensor and gyroscope sensor”. In: *2011 International Conference on Electrical Engineering and Informatics*. [pdf]. IEEE. 2011, pp. 1–6. DOI: 10.1109/ICEEI.2011.6021711.
- [Wan+22] Y. Wang et al. “Multi-position wearable human activity recognition dataset”. In: (2022). DOI: 10.21227/z8bc-pt92. URL: <https://dx.doi.org/10.21227/z8bc-pt92>.
- [Wat17a] Waterloo Maple Inc. 2017. *Description*. [letzter Zugriff 14.09.2017](#). 2017. URL: <https://de.maplesoft.com/support/help/Maple/view.aspx?path=module/description>.
- [Wat17b] Waterloo Maple Inc. 2017. *Export*. [letzter Zugriff 14.09.2017](#). 2017. URL: <https://de.maplesoft.com/support/help/Maple/view.aspx?path=module/export>.
- [Wat17c] Waterloo Maple Inc. 2017. *Module*. [letzter Zugriff 14.09.2017](#). 2017. URL: <https://de.maplesoft.com/support/help/maple/view.aspx?path=module>.
- [Wat17d] Waterloo Maple Inc. 2017. *ModuleLoad*. [letzter Zugriff 14.09.2017](#). 2017. URL: <https://de.maplesoft.com/support/help/Maple/view.aspx?path=ModuleLoad>.
- [Wat17e] Waterloo Maple Inc. 2017. *Option*. [letzter Zugriff 14.09.2017](#). 2017. URL: <https://de.maplesoft.com/support/help/Maple/view.aspx?path=module/option>.
- [Wat17f] Waterloo Maple Inc. 2017. *Procedures*. [letzter Zugriff 14.09.2017](#). 2017. URL: <https://de.maplesoft.com/support/help/Maple/view.aspx?path=procedure>.
- [Zaf+20] A. Zafeiropoulos et al. “Benchmarking and Profiling 5G Verticals’ Applications: An Industrial IoT Use Case”. In: *IEEE Conference on Network Softwarization, NetSoft 2020*. 2020. DOI: 10.1109/NetSoft48620.2020.9165393.

Index

File

- ../images/, 65
- .doxyfile, 60
- .ino, 61
- Arduino, 30
- blink.ino, 45, 46
- blnik.ino, 41
- doxygen-1.12.0-setup.exe, 50
- doxygen.exe, 54
- Fade, 46
- File/Examples/01.Basics, 46
- graphviz-12.2.1 (64-bit) EXE installer, 52
- images, 65
- index.html, 63
- libraries, 32–34
- MySketch, 30
- MySketch.ino, 30
- Nano33BLESenseLE, 32
- Nano33BLESenseLED, 33, 34
- Inertial Measurement Unit
 - see* IMU, 13, 69
- AAR, 13, 72
- ADC, 13, 72
- Advanced Encryption Standard
 - see* AES, 13, 72
- AES, 13, 72
- Analog to Digital Converter
 - see* ADC, 13, 72
- Automatic Address Recognition
 - see* AAR, 13, 72
- BLE, 13, 69, 71
- Bluetooth Low Energy
 - see* BLE, 13, 69
- CCM, 13, 72
- Counter with CBC-MAC
 - see* CCM, 13, 72
- Direkt Memory Access
 - see* DMA, 13, 72
- DMA, 13, 72
- I²C, 13, 69–71
- IC, 13, 70, 71
- IDE, 13, 46

- IMU, 13, 69
- Integrated Development Environment
 - see* IDE, 13, 46
- Inter Circuit
 - see* IC, 13, 70
- Inter-Integrated Circuit
 - see* I²C, 13, 69
- LED, 13, 70
- Light Emitting Diode
 - see* LED, 13, 70
- Mini Universal Serial Bus
 - see* MSB, 13, 72
- MUSB, 13, 72
- Near Field Communication
 - see* NFC, 13, 72
- NFC, 13, 72
- OLED, 13, 72
- Organic Light Emitting Diode
 - see* OLED, 13, 72
- PDM, 13, 71
- Pulse Density Modulation
 - see* PDM, 13, 71
- SCL, 13, 72
- SDA, 13, 71, 72
- Serial Clock
 - see* SCL, 13, 72
- Serial Data
 - see* SDA, 13, 71
- Serial Peripheral Interface
 - see* SPI, 13, 70
- SMD, 13, 71
- SoC, 13, 69
- SPI, 13, 70, 72
- Surface-Mounted Device
 - see* SM, 13, 71
- System on Chip
 - see* SoC, 13, 69
- Ultraviolettstrahlung
 - see* UV, 13, 70
- UV, 13, 70