

Place & time.

For Pages 5-8: open Page 4.
Hold FN + press VOL+ to step forward.

Page 6 - stereo placement

Fader N moves track N.
Down = left. Up = right.
Center = original balance. Tap TN to center.

Page 7 - grid / length

F1 = downbeat offset.
F2 = OFF / 1 / 2 / 4 / 8.

Variable: bars with a grid. Fixed: base loops after the first take.

Record a preset take

Close the page. Arm a track.
Release; the take stops itself.
Tap the recording track to finish earlier.

Page 7 - nudge

Hold TN + move its own fader.
Up = later. Down = earlier. Tap TN to center its nudge.

FN + T1 + T4 resets the open PLACE or TIMING page. Centered T1/T2 on page 7 reset offset/length. Full details: sheet 4.

Route & reset.

Routing affects all four FX pages.
Set it before a beat repeat.

FX on the input

PLAY + VOL-
Recorded into ordinary takes. 1 flash.

FX on the tracks

PLAY + VOL+
Live input stays dry. 2 flashes.

FX on the whole mix

PLAY + double-click either VOL
Ordinary takes stay dry. 3 flashes.

Reset all effects

On an FX page: FN + T1 + T4
Defaults restored; EQ flat; routing BOTH.


Mute the input monitor

PLAY + both VOL
Downward sweep = muted; upward = live.

Echo + reverb run together. FX details: sheet 3.

Your first loop.

USB-C audio in. Four tracks out.

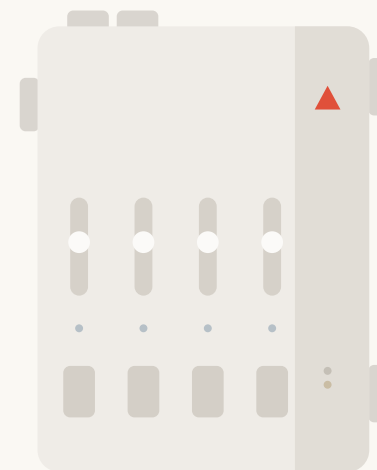

- 1 **Press an empty track.**
Release when it blinks.
- 2 **Send audio.**
Capture starts on the sound.
- 3 **Tap again to stop.**
Raise the fader. Add another track.

Hold FN ~1.5 s to wake.
PLAY = start / stop.

Play & record.

Pages closed. FN = FUNCTION.
TN = track button.

Play / stop

Tap PLAY.

Hold ~0.4 s and release to restart.

Mute / restore

Tap a loaded track.

Faders set track levels. VOL sets master.

Replace a take

Hold a loaded track ~0.18 s.

Tap again to end the recording.

Delete a take

Tap, press again within 0.6 s.
Hold the second press ~0.4 s.

The take is removed.

Choose a song

Hold FN + tap T1-T4.

Selects a bank. Repeat to step through its four songs.

Stop, then hold FN ~2.5 s to power off. USB power keeps the charging gauge active.

Bend & bounce.

Hold the prefix before the next control.

Tape speed

Rocker: click / double / hold
= step / semitone / sweep.

0.25x-1.5x. FN + double-tap PLAY = 1x.

One window, four faders

FN + F1 / F2 / F3 / F4
= start / end / position / size.

F4 down zooms; top restores. FN + rocker chops inside your region.

Beat repeat

Hold PLAY + click the rocker.

UP = beat; DOWN = 2 on an even grid. Release holds the tape to the nearest bar. Exceptions / layers: sheet 5.

Bounce: hold PLAY first

Tap TN = tape copy; tap again to stop.
Hold TN = sampler print; release to stop.

Speed moves print. Sampler prints play at 1x.
Loaded destinations are replaced.

Reset outside a repeat: FN + PLAY + VOL- = whole loop, forwards. Per-track reverse stays.
Full controls: sheets 2 and 5.

Find an effect.

Each row is a page. Faders run left to right.

Open / close

FN + hold T1-T4 ~0.4 s.

Tap FN to close.

For Pages 5-8: open Page 4. Hold FN; VOL+ steps forward, VOL- steps back.

- 1 Filter · chorus · drive · gate
- 2 Crush · ring mod · wah · echo
- 3 Phaser · sweep · tremolo · reverb
- 4 Drive · tone · noise · wobble
- 5 Four-band EQ
- 6 Stereo track placement
- 7 Grid · take length · nudge
- 8 Next take: mono (solid) / stereo (blink).
Tap TN to switch.

Move through the stored value. The fader picks up, then changes the effect. A nonzero move wakes an OFF lane.

Noise: center = off, up = hiss, down = vinyl crackle.
FX taps and secondary controls: sheet 3.