

eCAM

ELECTRONIC COMBINATION LOCK

General

The lock operates with a 6-digit number or word code of 6 characters. Ability to add a second User combination. Each entry is confirmed by a blink signal.



A valid code is followed by a light signal, an invalid code by a triple blink signal. After an interval of more than 10 seconds, the already entered part of the code is deleted and the entire sequence has to be re-entered.

To open the lock

The factory codes:

Manager code: 2-2-2-2-2-2

User code: 1-2-3-4-5-6.


Enter the code and (after a light signal) the lock is open, turn the grip or knob clockwise. If the lock is not opened within 2 seconds, it will be locked automatically.

To close the lock

Close the door and turn the grip or knob counter-clockwise. The lock will close automatically. Check if it is really closed by turning the grip or knob.

Safety advice

Change the factory code immediately. Do not use personal data (birthday) as a code. Keep the code from unauthorized personal.

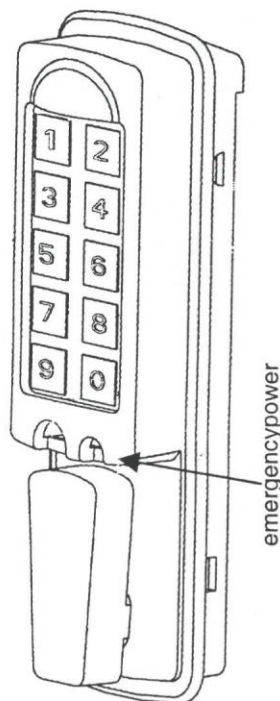

Instructions "e CAM" (4700)

Lighting the entry-pad

If you press first number "9" the entry-pad will be lighted. After that you still have to enter the 6-digit code. The LED stays on during the code entry.

To change the user or manager codes: (by open door)

1. Enter 6x "0" (double signal)
2. Enter valid code (double signal)
3. Enter new code (double signal)
4. Confirm new code (double signal)

If mistakes are made while changing the code (triple signal) the old code remains.

Changing the user code with the manager code: (by open door)

1. Enter manager code and keep last digit pressed until the lock signals twice.
2. Enter user combination twice. (Double signal)
3. User code is installed.

If mistakes are made while changing the code (triple signal) the old user code remains.

When the second code is not accepted (3x signal), it is to equal to the first code. Select a new code.

Wrong try penalty:

After four invalid codes the entry is blocked for about 5 minutes.

During this period the lock signals every 10-second.

If after this time penalty, 2 wrong codes are entered, a 5-minute time delay start again.

Power supply / Battery change:

When the batteries are running low, the lock will signal for about 5 seconds while opening. The batteries have to be changed. Use **ALKALINE** batteries only! The battery compartment is at the rear of the entry in the inside of the door. Press battery clip carefully at the battery. If the batteries have not been changed in time and the tension does not suffice to cancel the lock's blocking feature, a new 9V ALKALINE battery can be pressed onto the contacts on the entry, until the code has been entered and the entry is rotated.

