IGNITE Desktop Simulator

User manual · Community release v0.3.3-desktop.10 · 29 October 2026

IGNITE is a MIDI sequencer with an internal SoundFont synthesizer. This Windows edition combines the released firmware application with Hardware, Compact and Touchscreen layouts, plus desktop audio, MIDI, SoundFont and backup controls. All modes run the actual firmware touchscreen.

This is an independent community build of Music Tribe's open-source release. It is not an official Behringer manual or a flashable device image. The firmware application reports version 0.3.3; `desktop.10` identifies this community release.



Contents

1. Install and launch
2. The panel and keyboard
3. Songs, scenes, tracks and patterns
4. Make your first sequence
5. Patterns and note editing
6. Playback and performance
7. SoundFonts and internal instruments
8. Windows audio
9. MIDI connections and routing
10. Step and live recording
11. Save, export and restore
12. Troubleshooting
13. Feature status and limits
14. Developer and release reference

1. Install and launch

Download the Windows x64 ZIP from the GitHub release. Extract the complete folder, then run **Ignite.exe**. Keep its **assets** directory beside the executable. Launch from the extracted folder rather than opening the executable inside the ZIP.

The package is portable and does not require an installer, Visual Studio or a Python installation to run. Development tools are needed only to rebuild it. A working Windows audio output is required to hear internal sound. Supply your own `.sf2` SoundFont; sample banks are not included.

For a shortcut, right-click the extracted `Ignite.exe` and choose **Show more options → Send to → Desktop (create shortcut)**. Moving the extracted folder later requires updating that shortcut. An existing source-checkout shortcut may instead launch `scripts/run-ignite.ps1`.


Open **Desktop settings** in the top toolbar, or press **Ctrl+,**. This is separate from the firmware's own Settings screen in MENU. Desktop Settings contains **Audio**, **MIDI**, **SoundFonts** and **Projects** tabs.

Select **Touchscreen** in the toolbar, or launch `Ignite.exe --touchscreen` from PowerShell or add `--touchscreen` to a shortcut's target arguments. Ctrl+, still opens Desktop Settings.

2. The panel and keyboard

Use **Hardware**, **Compact** or **Touchscreen** in the top toolbar to choose the layout. Compact is the default: most of the window is the touchscreen, with closely spaced controls on the right and a strip of step encoders/pads below. Hardware restores the vector product faceplate. Touchscreen hides every hardware control and expands the live display to the available window area, preserving its aspect ratio. The small mode/settings toolbar remains, and keyboard and mapped MIDI/remote controls continue to work. The layout choice is remembered for the next launch; switching keeps the same screen, song and controls active.

The initial window fits the monitor's usable desktop area. Resize or maximise it to give the screen more room. Compact preserves the touchscreen's aspect ratio and adapts the control spacing to smaller windows, including common laptop desktop sizes. The layout tests cover 960×540, 960×600, 1280×720 and 1366×768 content sizes. On very small or heavily scaled displays, touchscreen text will still be smaller than its native size.

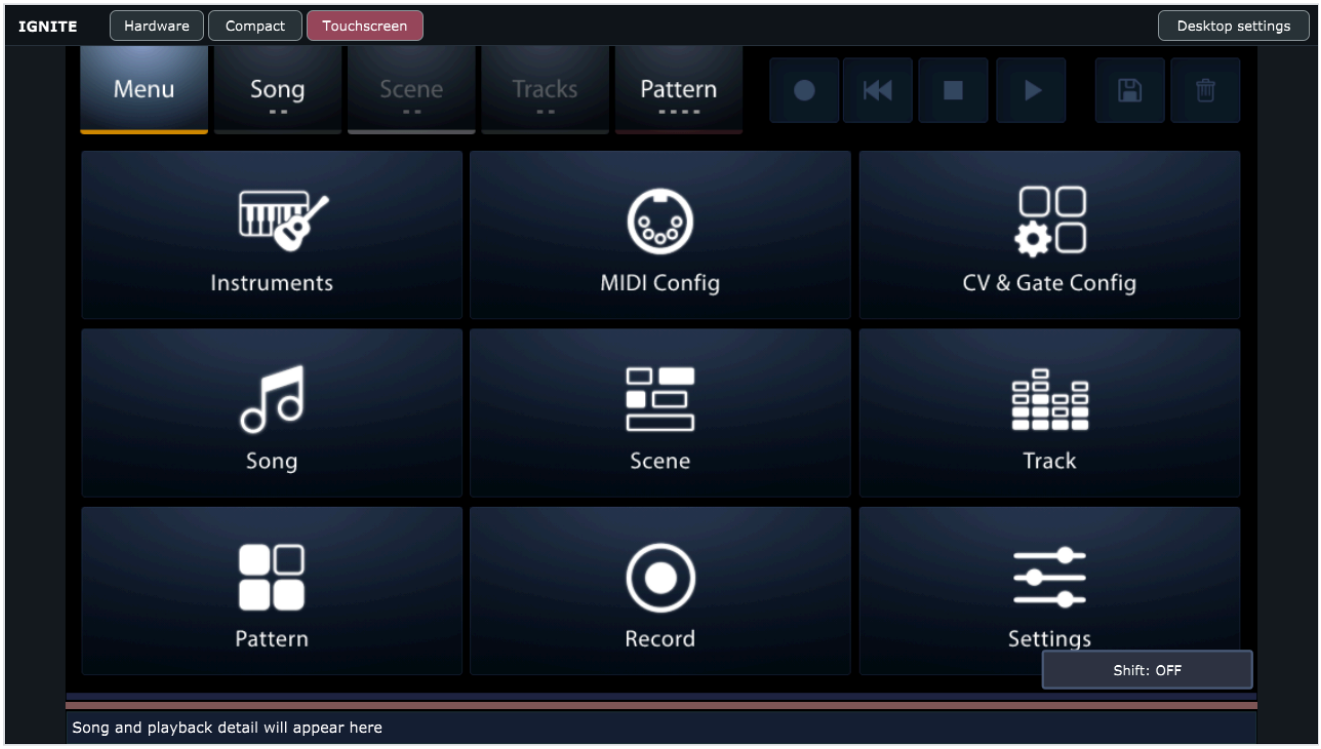



Most panel buttons depend on the current screen and selected object. Start with the mode buttons, then select the song, scene, track or pattern you want to edit.

Control	Mouse operation
Touchscreen	Click a control; drag where the firmware supports dragging.
Buttons and 16 pads	Press and release. Hold the mouse button to send the firmware's hold action.
16 step encoders	Drag vertically or scroll to turn; click without dragging to push.
Knobs A–H	Drag vertically or scroll to turn.
ROW and BAR	Drag or scroll to change the current row/bar as defined by the active screen; click to push.
Jog / Enter	Drag vertically or scroll to navigate; click to select.
SHIFT	Click to toggle the firmware Shift state; click again to release it.
Return, Copy, − and +	Send the corresponding firmware navigation/edit action.

EQ High and EQ Low control the matching high/low shelf. Alternate gain is **-12 to +12 dB**; **0 dB** bypasses that band. Older nonzero saved EQ gains are now interpreted as dB, so review saved EQ settings after upgrading. Release time is independent per synth, with 0 using the preset release. Reverb applies width/dry controls immediately, chorus processes both channels, and stereo filter/EQ histories remain independent.

Keyboard	Action
F1	MENU
F2	SONG

Keyboard	Action
F3	SCENE
F4	TRACK
F5	PATTERN
Space	PLAY
Esc	STOP
Ctrl+S	SAVE
Ctrl+,	Desktop Settings

Hover over a panel control for its tooltip. When typing in a text field, the panel avoids intercepting its normal typing keys. If a mode shortcut seems inactive, leave the text field and click the panel first.

This simulator does not turn the PC keyboard into a MIDI piano. Use a MIDI input for performed notes, or enter events in the pattern editors. The panel pads have screen-specific sequencer functions; do not assume KICK drum-pad behavior.

3. Songs, scenes, tracks and patterns

Object	Role
Song	Holds scenes and song-level sequencing settings.
Scene	Holds an arrangement of tracks and scene-level timing/performance settings.
Track	Connects patterns to instruments; also holds track transforms, mute and recording state.
Pattern	Contains bars, steps, note events and auxiliary events. Patterns have their own library.
Instrument	Describes a MIDI port/channel and/or an internal sound selection. Instruments have their own library.
Receive instrument	Specifies the input port and channel a track listens to.
Output instrument	Specifies where the track sends events and which internal preset it uses.

Creating a song does not create a ready-to-play scene, pattern and sound assignment. An empty pattern or an unassigned output instrument can be perfectly valid and silent.

The source supports up to **64 tracks**, **16 step positions per bar**, **16 bars per pattern**, scene lengths up to **200 bars**, **96 PPQN** timing and a registered tempo range of **20–360 BPM**. These are software limits, not a claim that 64 heavily layered instruments can play without dropouts.

Patterns and instruments can be reused. Editing a reused library object may affect more than one assignment. Copy it before making a variation that should remain independent. Save after the change.

4. Make your first sequence

Play the included First Light demo

1. Open **Desktop Settings > SoundFonts** and browse a General MIDI SF2. Choose **Set as default SF2**. **Preview C4** should make sound before you continue.
2. If preview is silent, select your speakers/headphones in **Audio** and save the audio settings. Check Windows volume and the selected output device.
3. Stop playback and save any current edits. Open **Projects > Create demo song**. Ignite adds, selects and saves **Demo - First Light** with all its patterns and instruments assigned.
4. Close Desktop Settings and press **Space / PLAY**. Press **Esc / STOP** to stop.

The original demo is 16 bars at 112 BPM in A minor. Its four scenes are Intro, Groove, Lift and Outro, with five tracks: drums, finger bass, electric piano, marimba arpeggio and square lead. Explore the assigned patterns in Pattern view, mute individual tracks and edit copies to make variations. Existing songs are retained. Creating another demo adds a separately named copy. The demo uses internal sounds and does not need a MIDI controller or an external MIDI output.

The GM bank must contain bank 0 programs 4, 12, 33 and 80, plus bank 128 program 0 for drums (numbers are zero based). SF2 samples remain external. The bundled original `assets/demo/First Light Demo.mid` contains only notes/controllers and is CC0; it can also be opened in another DAW. A missing/incomplete bank produces setup instructions before any demo song is added.

For source builds, `scripts/install-demo-windows.ps1 -SoundFont 'D:/path/bank.sf2'` creates a separate saved demo project and an **IGNITE Demo** desktop shortcut. The project defaults to Documents/IGNITE Demo; the normal simulator shortcut keeps its original libraries. The shortcut opens the saved demo in Song view; press Space / PLAY. Use `scripts/run-ignite.ps1 -Song` or `Ignite.exe --song` to open any selected song in Song view on launch.

Build your own sequence

This walkthrough uses internal audio and does not require a MIDI controller. The underlying create/edit/save/play workflow is covered by model tests; the test harness does not click every control in these screens.

1. **Choose a default bank.** Open Desktop Settings → SoundFonts → **Browse SF2...** and select an SF2, then press **Set as default SF2**. A complete GM bank makes the original firmware preset names useful; a single-instrument bank also works with the desktop browser.
2. **Create a song.** Press SONG / F2. Use the empty-list creation control or **+ Add New Song**, then select the new song.
3. **Create a scene.** Press SCENE / F3. Use the scene creation control or **+ Add New Scene**, then select it. Tracks belong to this scene.
4. **Create an instrument.** Open MENU / F1 → Instrument and use its creation control. Note the instrument's name.

5. **Choose its sound.** Return to Desktop Settings → SoundFonts. Select that instrument in the lower selector first, browse a different SF2 if desired, select a preset, and press **Assign SF2 + preset**. This enables internal sound and saves the instrument selection.
6. **Create a pattern.** Open PATTERN / F5 and use its creation control or **+ Add New Pattern**. Choose a polyphonic pattern if you want chords; a monophonic pattern is sufficient for a simple melody.
7. **Connect the track.** Open TRACK / F4, select a track, and assign your pattern and output instrument. Ensure the track is not muted. A receive instrument is needed for MIDI recording, but not for entering notes with the mouse.
8. **Enter a few notes.** Open the assigned pattern. Use its step/event editor or grid tools to add notes, with nonzero velocity and duration, and enable the relevant steps. For a short test, use a one-bar sixteenth-note pattern and put notes on positions 1, 5, 9 and 13.
9. **Play.** Press PLAY or Space. If silent, check the track assignments, mute state and audio output before changing more settings.
10. **Save and reopen.** Press SAVE / Ctrl+S, stop playback and close Ignite. Launch again and select the song and scene to confirm your arrangement is there.

Use the larger touchscreen mode if small firmware fields are difficult to read. Loading a SoundFont stops playback; after changing banks, choose presets that actually exist in the new bank.

5. Patterns and note editing

The firmware includes pattern list, bar, step/event and grid views. These are views of the same pattern data. Use the screen's current selection and parameter labels to determine what the pads, encoders, ROW and BAR controls will change.

A note event includes pitch, velocity, length in steps/ticks and a tick offset. Multiple notes can occupy a step in a polyphonic pattern. Velocity zero, a disabled step, a muted track or an unavailable preset can each explain a silent note.

Parameter	Musical effect
Pitch / note	Selects the note played by the output instrument.
Velocity	Controls note strength; how strongly it changes the tone depends on the preset.
Length in steps	Sets the coarse duration.
Length in ticks	Adds finer duration control.
Offset	Moves the event relative to the step boundary.
Time base	Changes the rhythmic spacing of the pattern's step positions.

Bar operations include copying, appending, duplicating, inserting and removing. The desktop regression suite covers independent copies, correct note/step positions, the 16-bar cap and retaining at least one bar. Save a backup before a large rearrangement.

In the Pattern view, **Ctrl+Insert** inserts one blank step before the selected step. Later events shift across bar boundaries; the active length and bar count grow as needed, up to 256 steps. Undo restores the previous pattern. The hardware INSERT button retains its view-specific note/event behavior.

Auxiliary events, triplet time bases and the broader editing tools exist in the source. Coverage varies by operation; see the feature-status table rather than assuming every combination was exercised.

6. Playback and performance

PLAY starts or resumes the current arrangement; STOP ends the current transport action. The firmware decides the precise behavior from its current transport state. Pause/resume, tempo changes and normal stop commands are covered by desktop workflow tests.


The front panel also exposes NEXT/TIE, FILL/X, SOLO/SKIP, GANG and SCULPT. These depend on the active view and track/pattern configuration. The source contains main/fill patterns, grouped operations, scale/transpose transforms and sculpt changes to notes and velocities. Regression coverage includes gang velocity selection, signed relative and absolute Sculpt edits, random relative offsets, pitch moves, MIDI/Sculpt settings undo, fill mute/release rules, scale snapping across octave boundaries, transform priority and MIDI-range clamping. The tests exercise the real engine and selected UI editing paths; every performance combination and external timing behavior has not been qualified.

Start with the internal clock. Source settings also cover MIDI clock, MIDI Machine Control, remote control and sync connections. Timing accuracy against external equipment has not been measured. Selecting an external clock source without providing that clock can leave playback waiting.

Knobs A–H have the front-panel labels **Release, Cutoff, Resonance, Volume, Reverb, Chorus, EQ High and EQ Low**. Their actual response depends on the active firmware context and instrument/effect setup. Effects and transforms can change loudness; use moderate output levels while exploring.

Track effect changes now participate in unsaved-change tracking and Save All. Saved values are restored when the synth is rebuilt and after reopening the song. Songs saved before this support retain their previous effect defaults until you change and save the effects. Notes can continue across bar boundaries within a scene; scene changes still release the previous scene's notes. Transpose changes notes and their polyphonic pressure pitches while retaining controller numbers and pitch-bend data.

7. SoundFonts and internal instruments

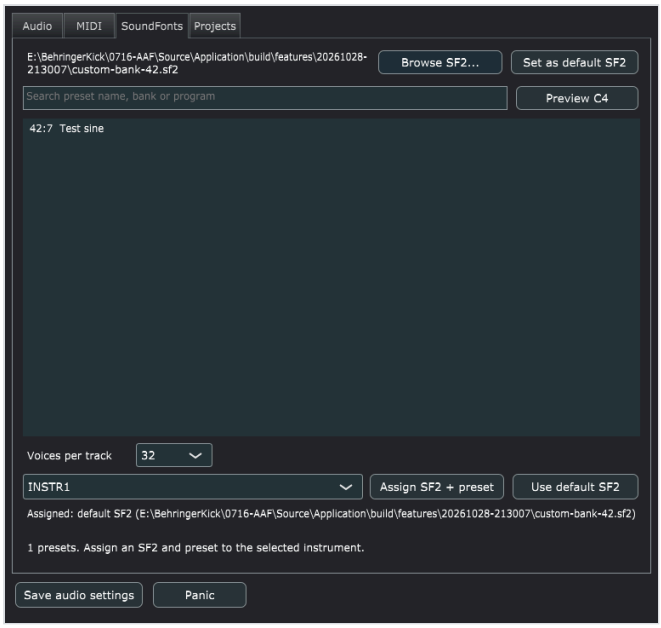

Use **Browse SF2...** to open a bank from your sample collection, including Unicode paths. Browsing and previewing do not change instrument assignments. Different instruments can use different SF2 files simultaneously. Tracks sharing a bank share its sample memory and keep their own voices, MIDI controllers and effects.

The preset list shows **bank:program** followed by the preset name. Both numbers start at zero. Search by name or number. This lists the actual presets in the loaded file, so banks with custom numbering are usable without remapping their samples.

Select a row and press **Preview C4**, or double-click the row, to hear a short note while stopped. Preview does not require a track assignment. A drum preset may have no sample on that particular note; silence on C4 alone does not establish that the bank is invalid.

To choose a sound for a sequence, select an existing instrument below the list first, browse the desired SF2, select a preset, then press **Assign SF2 + preset**. Ignite saves the file path and preset with that instrument and stops playback for the change. Assign the instrument to the track's output. The **Assigned** line shows its bank.

Set as default SF2 saves the browsed bank as the startup default. Explicit instrument assignments retain their own banks. **Use default SF2** clears the selected instrument's explicit path; it keeps a matching preset where available, otherwise selects the first preset in the default bank. The original firmware GM picker remains available for conventional GM banks.

The default bank path is remembered in Windows preferences. Explicit instrument paths and bank/program assignments survive saved arrangements and project backups; SF2 samples remain external. If an assigned file is missing, that instrument stays silent while instruments with available banks continue playing. Browse an available file and reassign its preset to repair the path. A missing default bank does not prevent explicit instrument banks from playing.

Engine property	Current behavior
Bank format	SF2. SF3 compressed fonts are not enabled.
Bank assignment	One default SF2 plus optional per-instrument SF2 paths; sample data is cached and shared by path.
Voices	32 per track by default. Choose 8, 16, 32, 64 or 128 in the SoundFonts tab. Layered/stereo presets can consume several voices per note. The setting applies to every track and changing it stops playback.
Synthesis	Stereo, 48 kHz, including MIDI pan and stereo effects. Resampled to the Windows device rate; a mono device receives a downmix.
Missing preset	Silent instead of reusing a previous valid preset.
Failed replacement load	Retains the previously loaded bank.

No commercial SoundFonts are bundled. Use files whose license permits your intended use. This release also does not expose the entire separate AudIO/Airwindows effect collection through the firmware UI.

Windows SF2 synthesis now uses **FluidSynth 2.6.1**. Instrument and preset modulators include source curves, amount-source controllers, global/local precedence and replacement of standard default modulators. Bank-specified reverb/chorus sends run inside the SF2 engine before the panel effects. Linked stereo and 24-bit SF2 sample data are supported. Tracks sharing a bank keep independent voices and MIDI controllers. Native SF2 defaults can change levels or timbre relative to earlier releases; check saved mixes after upgrading. Unsupported or structurally invalid banks report a load failure and leave the prior assignment intact.

8. Windows audio


Open Desktop Settings → **Audio**, choose the output device, sample rate and buffer size, then press **Save audio settings**. Windows may negotiate 44.1 kHz even when the engine requests 48 kHz; the desktop output adapter converts between the engine and device rates.

Play, input monitoring and preset preview can open the audio device. Stop, pause or the end of a preview can close it, so seeing a closed device while idle is expected. If an output becomes unavailable, reconnect it and retry playback. The public build has ASIO disabled.

Panic clears sounding internal notes. It is useful after interrupted input or when testing a preset with a long release. It does not promise to reset every external MIDI instrument.

The audio path uses a 960-sample internal render block, then adapts to the driver's callback size. Smaller Windows buffers do not remove all engine or device latency. Editing or saving can briefly interrupt audio because the desktop protects model changes with a shared lock. Bluetooth devices can add substantial delay.

9. MIDI connections and routing

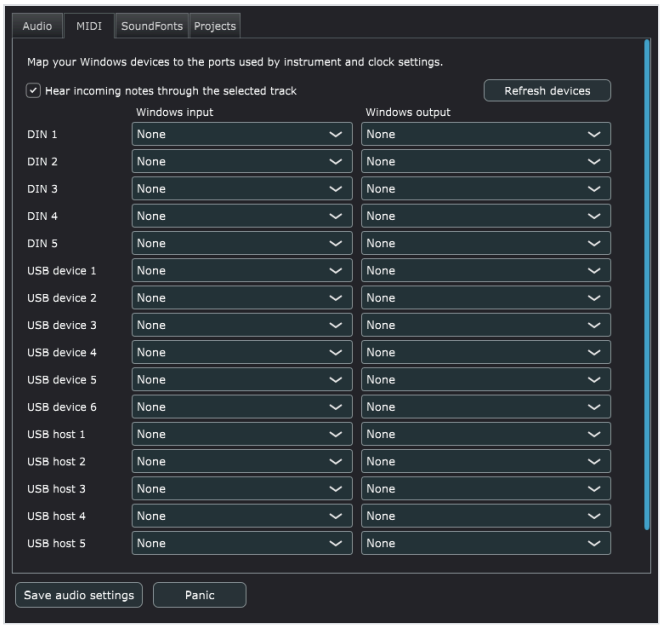

The MIDI tab maps Windows MIDI device names to the firmware's **five DIN, six USB-device and five USB-host logical ports**. These are software routes: mapping a controller to DIN 1 does not create a physical DIN jack on the PC.

1. Connect your controller or install an appropriate virtual MIDI port outside Ignite.
2. Open Desktop Settings → MIDI and press **Refresh devices**.
3. Choose its Windows input on a logical port row, such as USB device 1.
4. Set the track's receive instrument to that same logical port and MIDI channel in the firmware UI.
5. Assign an output instrument with internal sound enabled if you want Ignite to make the sound.
6. Leave **Hear incoming notes through the selected track** enabled for monitoring.

Input and output choices are independent. Outputs initially use **None**, preventing unexpected duplication through the Windows software synth. To drive an external device, select its Windows MIDI output on the logical row used by the track's output instrument.

The interface uses channels 1–16; internal data stores them as 0–15. A channel mismatch can prevent both monitoring and recording. Multiple logical rows can use the same device, which may duplicate messages; map only the rows you need.

Routes and the monitoring option save automatically. If startup reports a missing device, reconnect it, refresh and select the route again. Avoid routing an output back to its own input unless you deliberately want that loop and have configured filtering.

The internal synth handles sustain (CC64), channel volume (CC7), expression (CC11), bank select (CC0/32) plus program change, pitch bend and RPN bend range, modulation wheel, channel pressure and polyphonic pressure. Modulation and pressure follow the SF2 defaults and the bank's own modulators. Controllers are scoped to the routed track. CC121 resets expression, sustain, bend position, modulation

and pressure while retaining volume, pan and the chosen bank/program. CC123 releases notes subject to sustain; CC120 stops sound immediately and clears the track effects. Panic clears notes and leaves the synth playable.

No MIDI input devices were connected for release testing. Internal messages exercised the same router entry point and all 16 logical port IDs; physical controllers, driver behavior, external output and external-clock timing remain unverified.

10. Step and live recording

Both methods need a selected song, scene and track, an assigned pattern, a matching receive instrument and enabled note recording in the firmware record settings. Enable internal monitoring if you want to hear the performed notes.

Step entry while stopped

1. Stop playback and select the pattern/track you want to record.
2. Set the input port/channel and note-event recording filter.
3. Press REC to enter step recording.
4. Play and release notes on the matching input. Notes on other channels should be ignored.
5. Stop recording, then inspect the pattern's events and save.

The internal test records two accepted notes, rejects another channel, saves and reopens them in a fresh process. Step recording is MIDI note entry; it is not an audio recorder.

Live recording during playback

1. Assign the track's receive instrument and pattern, then enable the track's recording state.
2. Start playback and press REC to enter live recording.
3. Play the notes, including note releases.
4. Stop recording before closing or changing the arrangement, then save.
5. Inspect note velocity and duration in the pattern editor.

The test checks an armed track, captured velocity/duration, stopping immediately after note-off and reopening the saved result. Unarmed tracks should not record. This verifies the internal event path, not the latency or timing of a physical controller.

11. Save, export and restore

Press **SAVE / Ctrl+S** to save the active song, all loaded patterns and instruments, and the firmware settings at their selected global or song location. This includes library items edited before switching to another item.


Closing a window or quitting with pending edits offers **Save**, **Discard**, or **Cancel**. Save closes only after all required writes succeed. A failed save keeps Ignite open with the pending changes available for retry; fix the file permissions or storage problem and save again. Discard leaves the saved files as they are; Cancel keeps the session open. Writes already completed by automatic or individual saves remain on disk. Undo may conservatively leave a pending-change indication even after returning to an earlier value.

Settings files use temporary-file replacement. Save All spans several files and is not one transaction: a failure can leave some items saved while others still need a retry. Backup export stops if the preceding save fails.

Windows data is stored separately from the extracted application:

Location	Contents
`%APPDATA%\BehringerIgnite\Ignite_folder`	Songs, patterns, instruments and firmware settings.
`%APPDATA%\BehringerIgnite\desktop.json`	Windows audio settings, MIDI routes, monitoring preference and SoundFont path.
Your chosen SF2 location	The sample bank; it remains outside project storage.

Upgrading the extracted app does not require copying the data into its folder. Export a backup before upgrading. Run only one Ignite process against a given data directory.

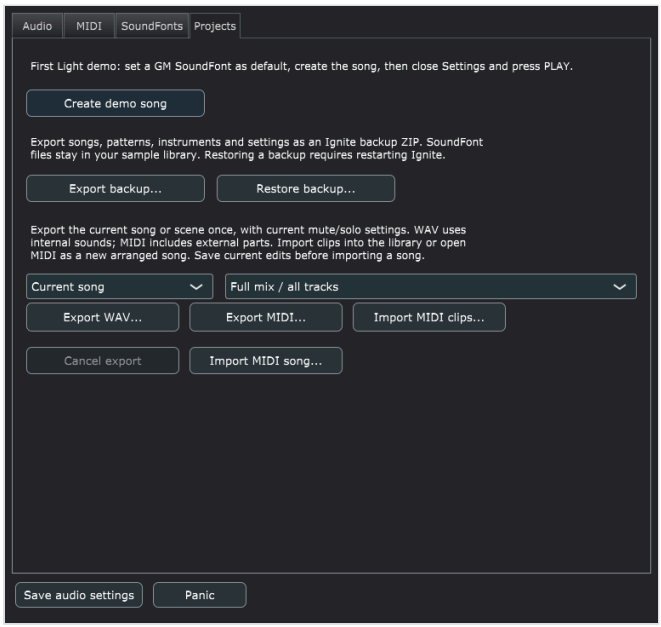

Export backup… saves the libraries and writes an Ignite ZIP containing songs, patterns, instruments, firmware settings and the library index. **Restore backup…** validates and stages a compatible backup before replacing the saved collection. After a successful restore, close Ignite using the completion message, then launch it again.

Restoring replaces the collection rather than merging it. Export the current collection first if you need to retain it. The archive does **not** contain SF2 sample files or Windows device preferences, so keep the bank available and review audio/MIDI selections on another PC.

Song, scene, pattern and desktop restore replacements retain recovery directories. A missing library from an interrupted directory swap is recovered at startup. Recovery copies are not a substitute for an exported backup, and Save All is not one transaction across all possible settings files.

Export WAV audio or MIDI

1. Stop playback and recording, then open **Desktop Settings** → **Projects**.
2. Choose **Current song** for every scene in order, or **Current scene** for the selected scene once.
3. Choose **Full mix** or a specific track. A track selection exports that track across the chosen range; repeat for additional stems.
4. Press **Export WAV…** or **Export MIDI…**, choose a filename and wait for completion.

WAV output is stereo **48 kHz, 32-bit floating point**, with a two-second release/effect tail after the final scene. It includes internal instruments, mute/solo selection, effects and master level. External MIDI instruments contribute no audio. Required SF2 files and presets must be available. There is a 30-minute arrangement limit. Floating-point files can retain peaks above 0 dBFS; adjust the level in your audio editor before converting to an integer format.

MIDI output is a **type 1 Standard MIDI File, 960 PPQ**, with scene tempo changes, time signatures and markers, track names, note durations, supported controller/pressure/pitch-bend events and instrument bank/program initialization. Logical output-port metadata is included for internal and external parts, including external parts without program initialization; your DAW may require routing the tracks again. Unrouted internal instruments use USB device 1 port metadata. MIDI contains no audio, SF2 samples or Ignite effect processing. Shared channels on a destination can still interact, so choose distinct channel/port assignments when needed.

Export uses a snapshot of the current in-memory edits, including unsaved changes, in an isolated background process. You can continue editing while it renders. **Cancel export** or closing Desktop Settings cancels the job. A cancelled or failed job keeps an existing destination file; a completed export replaces it. Progress appears in Projects. Neither export requires physical MIDI devices or a live audio output.

Exports render assigned **main patterns** once through the selected scene range. Live fills, Sculpt gestures, incoming MIDI and other performance actions are not captured. Random directions produce a fresh pass rather than a recording of an earlier performance. Scene boundaries release notes; only the final WAV scene receives the extra two-second tail.

Import MIDI clips

Press **Import MIDI clips…** in Projects and choose a PPQ-timed `.mid` or `.midi` file. Ignite separates each source track/channel into new library patterns, splitting long material into chunks of at most **16 bars** on a **4/4 sixteenth-note grid**, with timing rounded to **48 ticks per quarter note**. Names include the source track, channel and chunk number. Empty chunks are omitted; notes crossing chunk boundaries are clipped and retriggered in the next chunk. Exact pitch/start duplicates merge, and unmatched note edges are repaired; the completion message reports these adjustments.

Import adds patterns without replacing the current song, scene, existing patterns, tempo or assignments. The reported source tempo is informational. Assign an imported pattern and an output instrument to a track, set the scene's tempo and length as needed, then play it. Imported channel numbers are retained in names; playback uses the assigned instrument's routing. Press **SAVE** to keep the new patterns.

This imports clips rather than a complete song arrangement: tempo maps, time signatures, SysEx and other metadata are not reconstructed. Limits are 32 MB, 200,000 channel events, 64 track/channel groups, a 4,096-bar source span and 512 resulting patterns. SMPTE timing and malformed files are rejected before adding patterns.

Import a complete MIDI song

1. Stop playback/recording and **SAVE** your current work. Song import refuses pending edits so switching songs cannot discard them.
2. In **Desktop Settings ? Projects**, press **Import MIDI song…** and choose a type 0 or type 1 PPQ-timed MIDI file.
3. Ignite opens a new song with named tracks, patterns and internal instruments already assigned. Existing songs and library items remain available.
4. Use a GM-compatible default SF2 or assign appropriate presets in SoundFonts, then play the song. Channel 10 defaults to percussion bank 128. Imported logical port metadata is retained where available; otherwise parts use USB device 1. Review external MIDI routes before sending to equipment.
5. **SAVE** to retain the song, its new patterns and instruments. Save failure leaves the imported work open for retry.

Tempo changes, time signatures and markers divide the arrangement into scenes. Longer passages split into patterns of at most 256 sixteenth positions; silent parts and trailing duration stay aligned. Note/event timing rounds to 48 ticks per quarter. Tempo/meter/marker boundaries round to the nearest sixteenth; the completion message reports boundary rounding. Fractional BPM values survive Save and reopening. MIDI export includes the saved meter metadata; scenes without imported meter metadata default to 4/4.

Common meters that fit 1?16 sixteenths per global bar, including 3/4 and 6/8, use that global bar length. Longer or finer meters retain their original MIDI signature but use a normalised global bar grid in Ignite. A partial passage can also use shortened global bars to express its exact duration. These bar labels do not change the absolute timing of imported events.

Program/bank changes select internal sounds. Controllers, pitch bend and pressure remain pattern events, with prior controller/bend state restored at subsequent scenes. RPN/NRPN selection and data-entry sequences retain their order, including Reset Controllers behavior. Instruments use the default SF2; the import does not identify or supply the original samples. Key-held and pedal-held notes are recreated at subsequent scene boundaries because Ignite changes scene voices there. A pedal-held replacement lasts until pedal release, Reset Controllers or All Sound Off. Envelopes retrigger and release/effect tails remain discontinuous at scene changes. All Notes Off and channel-mode note releases obey the sustain state; All Sound Off ends affected voices immediately. Later physical note-offs do not revive a terminated note. Duplicate pitch/start events merge and unmatched note edges are repaired; the completion message reports adjustments. SysEx is omitted. This converts an arrangement into Ignite's scene model; it does not preserve a live performance's original synth state.

Re-import MIDI sources converted by an earlier release to apply the new pedal and channel-mode note handling. Explicit MIDI port numbers outside Ignite's MIDI ranges (0-4 and 13-23) are rejected with a remapping message. IDs 5-12 are CV destinations. Zero tempo and malformed port metadata are rejected by both song and clip import. Clip import preserves overlapping same-pitch note-off pairing.

Song limits are 32 MB, 200,000 total MIDI events, 64 track/port/channel parts, a 4,096-bar source span, 128 scenes, 512 new patterns and 500,000 generated scene events. The instrument library has a 255-item limit, and the song library has a 1,000-item limit. Tempos outside 20?360 BPM, SMPTE timing, type 2 independent sequences, malformed metadata and excessive imports are rejected before creating song entries.

12. Troubleshooting

Symptom	Checks
App opens with missing artwork	Extract the whole ZIP and keep `assets` beside `Ignite.exe`.
Preview works, sequence is silent	Select a song and scene; check the track's pattern, output instrument, mute state, enabled steps and note velocity.
Nothing makes sound	Load a valid SF2, select an existing preset, check the Windows output and retry Play or Preview.
A custom bank is silent with GM names	Use the desktop SoundFont browser's actual bank/program list and assign that preset to the instrument.
Preview is silent only on a drum preset	C4 may be unmapped; test appropriate drum notes in a pattern.
No MIDI devices appear	Connect the device, close other apps that may own it, then Refresh. Ignite does not create virtual drivers.
MIDI arrives but is not heard/recorded	Match the logical port and channel, assign a receive instrument, enable monitoring/note filters, and arm the track for live recording.
Play is greyed out or Space does nothing	Close Desktop Settings and open Song view (F2). Select a scene with an assigned pattern and instrument. Upgrade to desktop.10 or later for the fix for songs with fewer than 16 tracks.
Playback waits or does not advance	Check the selected clock source; use internal clock for the first test.
Audio crackles or feels delayed	Try a wired output and another buffer size; reduce active voices/effects and avoid large edits during playback.
Old notes keep sounding	Use Desktop Settings → Panic and check note-off input/routing.
A restored project looks unchanged	Close and reopen Ignite; restore replaces saved files, then startup reloads the libraries.
WAV export reports a missing sound	Repair the required instrument's SF2 path/preset, or choose a track with available internal sound. MIDI export does not need an SF2.
An export disappears when settings close	Keep Desktop Settings open until completion; closing it cancels an active export.
Imported clips are not on the current track	Assign a new library pattern and output instrument, or use Import MIDI song for an arranged import.
Song import asks for a save	Save your current edits and stop playback/recording, then retry.

Symptom	Checks
Desktop shortcut stops working	Confirm the extracted/source folder has not moved and update the shortcut target.
Debug takes a long time to exit	Use Release for normal operation; inherited UI allocations produce a long Debug CRT leak report.

For a file log, set `IGNITE_LOG` to a writable path before launch. Source-checkout launches through `scripts/run-ignite.ps1` log to `Source/Application/build/win/ignite.log`. Logs can include local paths, so review them before posting publicly.

13. Feature status and limits

Status	Release coverage
Tested on Windows	Build and startup, vector panel navigation, model creation/editing/copying, save/reopen, staged-save recovery, track counts through 64, playback edits, device audio and rate conversion.
Tested with internal MIDI	Logical input/output routing, channel-filtered step recording, live velocity/duration, saved recordings and fresh-process verification.
Tested desktop services	Actual SF2 preset enumeration, non-GM assignment and preview, failed-bank retention, preferences and backup/restore round trips, unsafe/corrupt archive rejection.
Tested file interchange	Song/scene WAV and MIDI export, track stems, tempo/meter changes, complete MIDI song and clip import/save/reopen, unsaved snapshots, failed/cancelled output protection and saved track effects.
Present in source; coverage varies	All editor combinations, auxiliary events, main/fill performance, gang/sculpt, scales/transpose, remote control and external clock options.
Requires physical testing	MIDI controllers and external destinations, DIN/USB hardware endpoints, CV/Gate voltages, sync jacks, calibration, updates and hotplug behavior.
Incomplete device distribution	MCU firmware, Wi-Fi firmware and the proprietary PC transfer service were omitted upstream. A complete flashable image is not supplied.
Known desktop limitation	Debug retains UI allocations and reports them slowly at exit. The shared model lock can cause brief audio gaps during edits/saves.

The Windows synth uses FluidSynth for SF2 modulation, preset effects, linked stereo and 24-bit samples, with a configurable voice limit. SF3 compressed banks are not enabled. This simulator is not an emulation of the MCU, electrical I/O or device storage hardware. The optional VST source is a template, not an Ignite plugin supplied by this release.

14. Developer and release reference

Source: chillbeast/0716-AAF, branch **desktop-build**. Upstream: MusicTribeOpenSource/0716-AAF, base commit `0371a3ea22fc530e23e2321068a0b8835e1e6502`.

To build the simulator, supporting libraries and helpers, run from the repository root:

```
.\scripts\build-windows.ps1 -DebugBuild -Package
```

See Windows build instructions for Visual Studio, CMake, JUCE and Python requirements. Reproduce the expanded desktop feature checks with:

```
.\scripts\features-windows.ps1 -Configuration Release
.\scripts\correctness-windows.ps1 -Configuration Release
.\scripts\sound-windows.ps1 -Configuration Release
.\scripts\media-windows.ps1 -Configuration Release
.\scripts\midi-song-windows.ps1 -Configuration Release
.\scripts\workflow-windows.ps1 -Configuration Release -NodeEdit -AudioDevice -
SimulateInterruptedSave
```

Tests use disposable directories under the ignored build tree. Verification covers **84 native Release/ASan checks**, **85 native Debug checks**, **31 full-SF2 compatibility checks in each build**, **107 arrangement workflow checks**, **123 demo setup/UI transport/export/reopen checks**, **75 desktop feature/setup/reopen checks**, **107 MIDI/save/editor correctness checks**, **111 layout checks**, **99 stereo/effects/multi-bank checks**, **93 media setup/export/import/reopen checks**, **131 MIDI song setup/import/round-trip/reopen checks**, **91 no-font workflow checks under ASan**, and **seven smoke checks per font/no-font case**. The unchanged packet protocol previously passed five checks. These counts describe overlapping suites, not a count of every supported feature. Final sanitizer runs reported no address errors.

The separate AudIO, DAW and Airwindows libraries also build, but the Windows app uses embedded FluidSynth 2.6.1; non-Windows firmware retains TinySoundFont. See third-party notices for the included LGPL license, corresponding engine source and rebuild/relink instructions. Detailed evidence and remaining audit items are in AUDIT_FIXES.md, CAPABILITIES.md and DEVELOPMENT.md.

Application and community code retain the upstream AGPL-3.0-or-later license and third-party notices. Behringer, IGNITE and Music Tribe names remain their owners' trademarks. See the repository LICENSE and upstream trademark policy.