
%12-10 Container I.D.

- Step 1. Press ▼ | ▲ key to change the 1st letter.
- Step 2. Press ► key to move to the 2nd letter and press ▼ A key to change 2nd letter.
- Step 3. Change the next letter and 7 numerals with same procedure. Press | | key to determine container I.D.

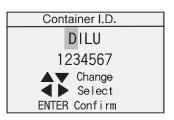


%12-8 Controller Date

- Step 1. Press ▼ | ▲ | key to change YEAR and press | ✔ | key to determine. Step 2. Press ▼ ▲ key to change MONTH and press ✔ key to determine.
- Step 3. Press ▼ | ▲ key to change DAY and press ▶ key to determine.

Controller Date DAY **MONTH** 07 YEAR 2011 Change Select

%12-9 Controller Time


Step 1. Press ▼ ▲ key to change TIME and press ✔ key to determine. Step 2.Press ▼ ▲ key to change MINUTE and press ▶ key to determine.



※13 Optional Function Mode

Notice!!

- 1. Optional function setting is done at factory. Normally, setting change at site is not necessary. (In some cases the function may not operate even after it has been set.)
- 2. Ensure the circuit breaker is switched OFF after Configuration Set change.





- **%13-1** Bulb mode function
- (%13-2 Rail mode function)
- *13-3 AST, Automatic change function of set temperature (for details, refer to paragraph 1.5.1)
- ¾13-4 ACT, Automatic cold treatment function (for details, refer) to paragraph 1.5.3)

%13-1 Bulb Mode Function

%13-2 Rail Mode Function

%13-3 ASC Function

%13-4 ACT Function

Title display	Setting	▼ ▲ Change ⇒ ✔ Enter
Bulb Mode Function	ON: With bulb mode function	
	OFF: Without bulb mode function	
Rail Mode Function	ON: With rail mode function	
	OFF: Without rail mode function	
ASC Function	ON: With ASC function	
	OFF: Without ASC function	
ACT Function	ON: With ACT function	
	OFF: Without ACT function	

2-15