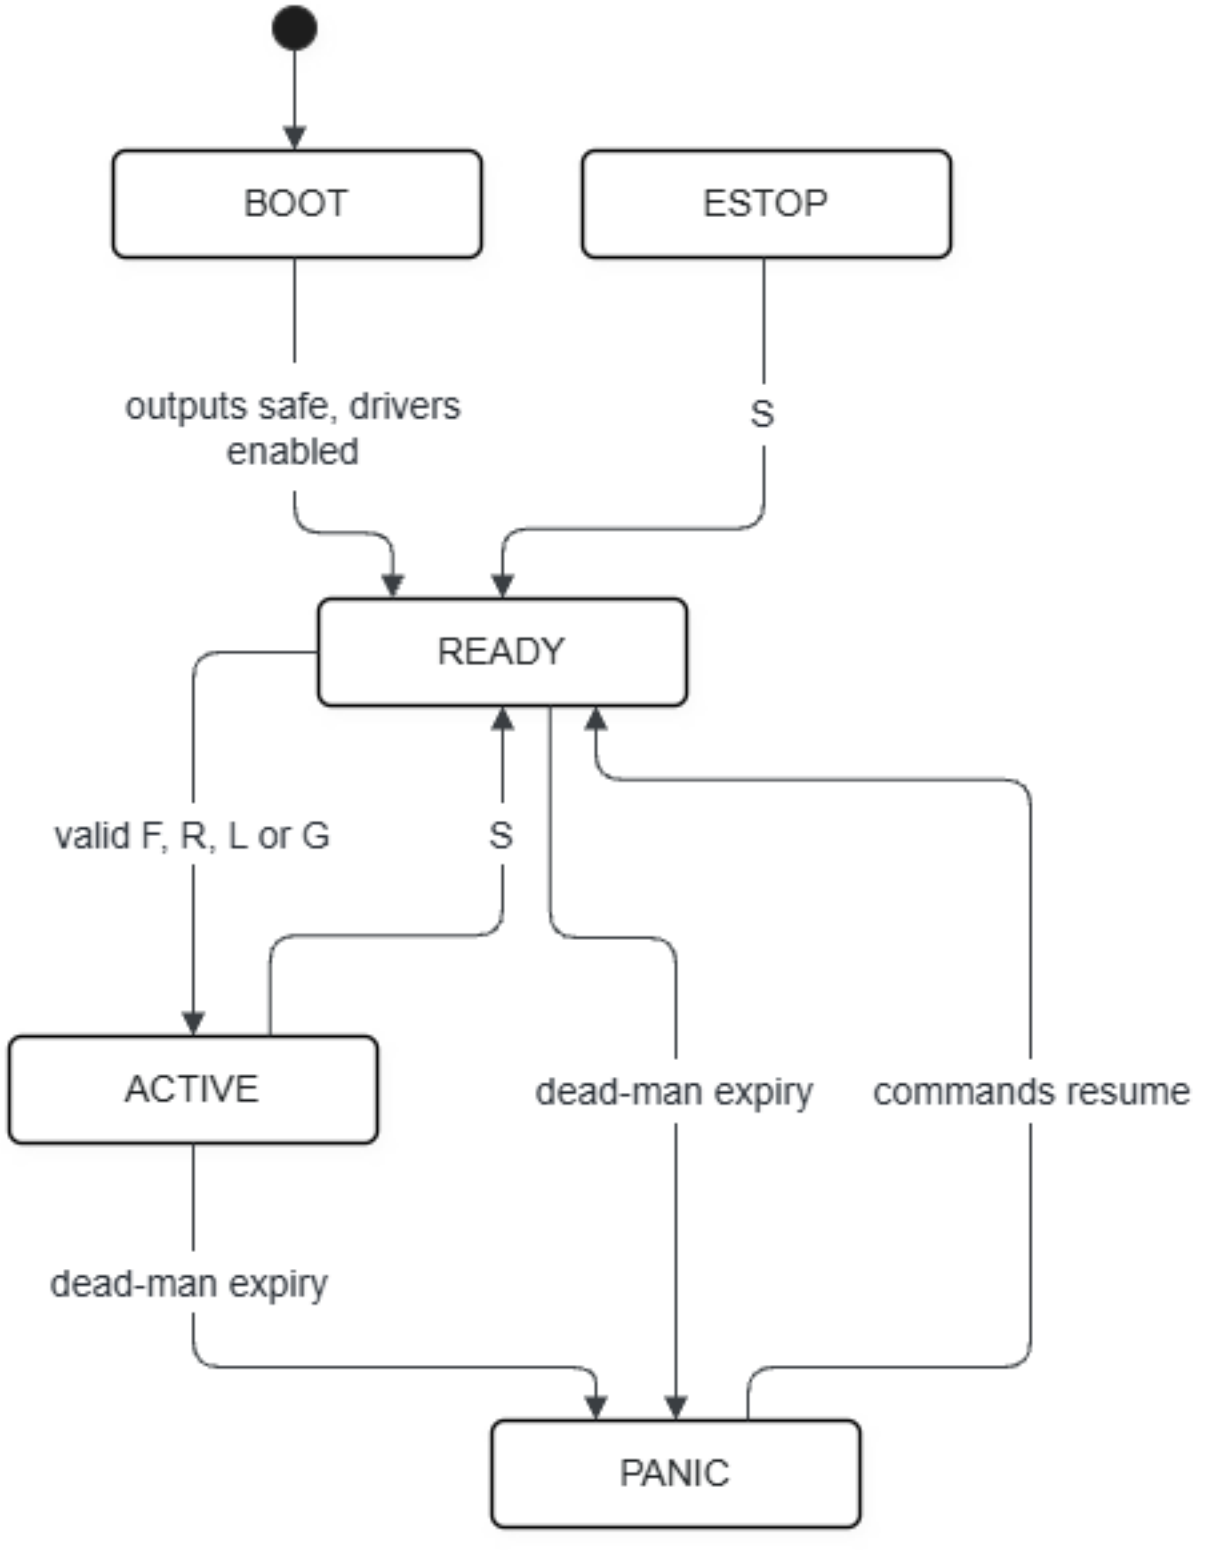
BOOT
ESTOP
outputs safe, drivers enabled
S
READY
valid F, R, L or G
S
ACTIVE
dead-man expiry
commands resume
dead-man expiry
PANIC