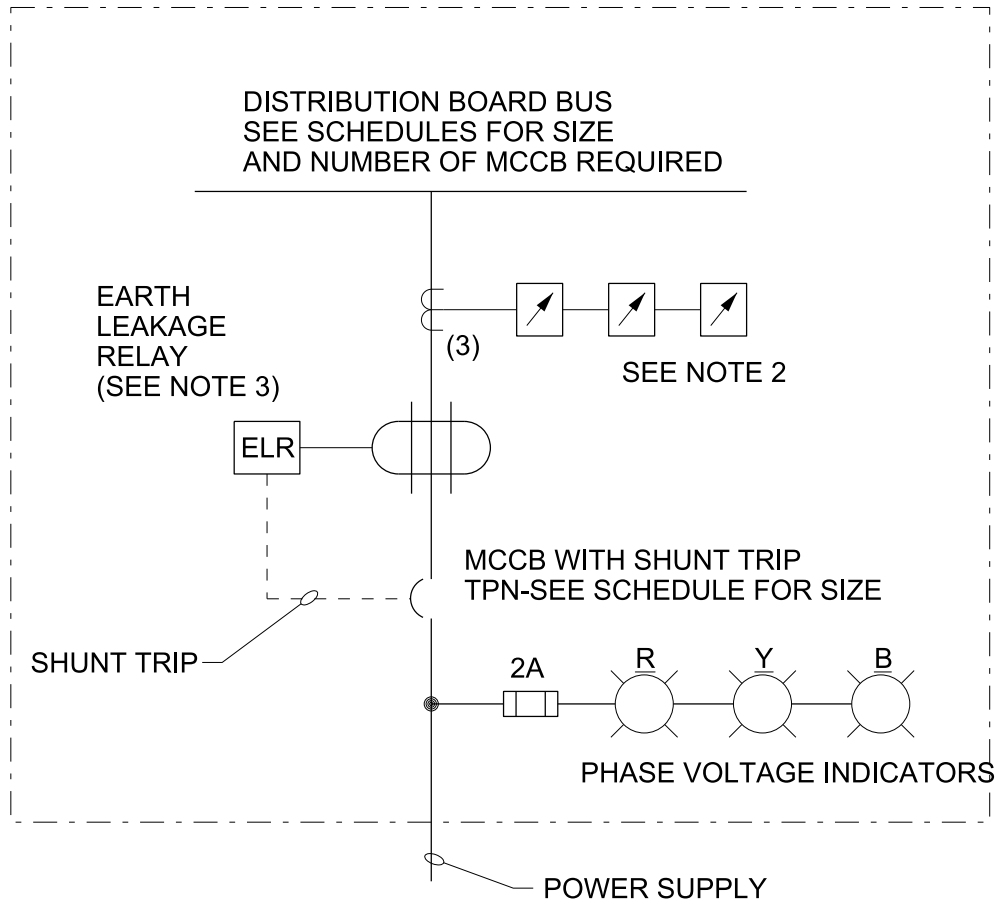


**NOTES:**

1. ALL DIMENSIONS IN MILLIMETERS, UNLESS OTHERWISE NOTED.
2. FURNISH AND INSTALL AMMETERS ON DISTRIBUTION BOARD FED DIRECTLY FROM A TRANSFORMER.
3. ELR SHALL BE ADJUSTED BETWEEN 10 AND 40 % OF RATED CURRENT WITH TIME DELAY NOT MORE THAN 1 SECOND. PROVIDE ON ALL DISTRIBUTION BOARDS.

DISTRIBUTION BOARD SCHEMATIC DIAGRAM

NTS

STANDARD DETAIL

16040

JACOBS