NES30 and FC30

8Bitdo®

Instruction Manual

L1

R1

X

A

B

Y

Dpad

SELECT (PAIR)   START
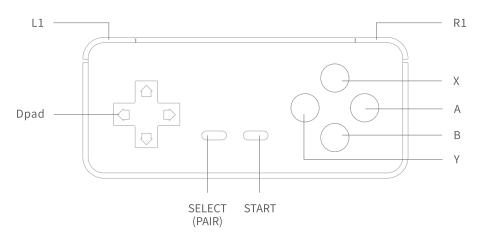
Ⓑ Bluetooth Connection

• Controllers will auto reconnect to your devices once they have been paired.

Android (D-Input)

1. Press and hold **START** for 1 second to power on the controller, LED will blink once per cycle.
2. Press and hold **SELECT** for 2 seconds to enter pairing mode. Blue LED will rapidly blink.
3. Go to your Android device's Bluetooth setting, pair with [8Bitdo NES30 GamePad] or [8Bitdo FC30 GamePad].
4. LED will be solid blue when connection is successful.
• USB Connection: connect your 8Bitdo controller to your Android device via USB Cable after step 1.

Windows (X-Input)

1. Press and hold **START + X** for 1 second to power on the controller, LED will blink twice per cycle.
2. Press and hold **SELECT** for 2 seconds to enter pairing mode. Blue LED will rapidly blink.
3. Go to your Windows device's Bluetooth setting, pair with [8Bitdo NES30 GamePad(x)] or [8Bitdo FC30 GamePad(x)].
4. LED will be solid blue when connection is successful.
• USB Connection: connect your 8Bitdo controller to your Windows device via USB Cable after step 1.

macOS

1. Press and hold **START + A** for 1 second to power on the controller, LED will blink three times per cycle.
2. Press and hold **SELECT** for 2 seconds to enter pairing mode. Blue LED will rapidly blink.
3. Go to your macOS device's Bluetooth setting, pair with [Wireless Controller].
4. LED will be solid blue when connection is successful.
• USB Connection: connect your 8Bitdo controller to your Windows device via USB Cable after step 1.

Switch (by default)

1. Press and hold **START + Y** for 1 second to power on the controller, LED will blink four times per cycle.
2. Go to your Switch Home Page to click on Controllers, then click on Change Grip/Order.
3. Press and hold **SELECT** for 2 seconds to enter pairing mode. Blue LED will rapidly blink.
4. LED will be solid blue when connection is successful.
• When connecting a NES30 or FC30 to your Switch in Switch Mode, DOWN+SELECT = Switch HOME button.

⚡ Battery

Status	LED Indicator
Low battery mode	LED blinks in red
Battery charging	LED blinks in green
Battery fully charged	LED stops blinking in green

♡ Support

Please visit support.8bitdo.com for further information and additional support.