
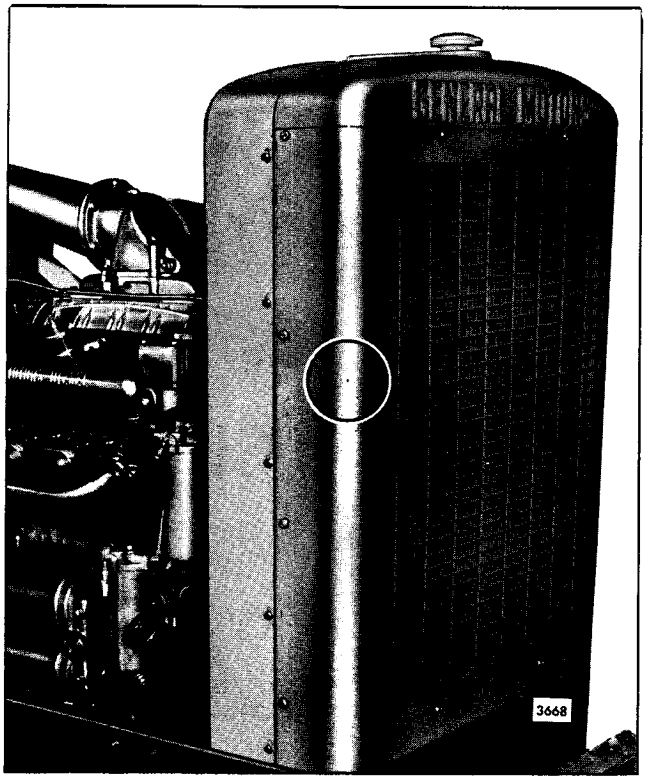


Item 5

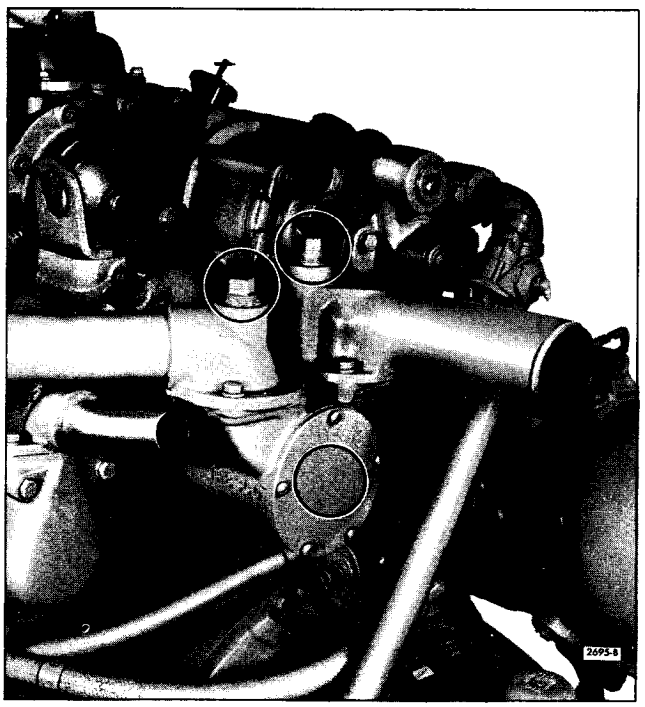

Items 6 and 7

Item 4

Inspect all of the cooling system hoses at least once every 500 hours or 15,000 miles for signs of deterioration. Replace the hoses if necessary.

Item 5

Inspect the exterior of the radiator core every 1,000 hours or 30,000 miles and, if necessary, clean it with a quality grease solvent such as Oleum (never use fuel oil, kerosene, or gasoline) and compressed air. It may be necessary to clean the radiator more frequently if the engine is being operated in dusty or dirty areas.

Item 6

Every 500 hours, drain the water from the heat exchanger raw water inlet and outlet tubes. Then, remove the zinc electrode from the inlet side of the raw water pump and the heat exchanger. Clean the electrodes with a wire brush or, if worn excessively, replace with new electrodes. To determine the condition of a used electrode, strike it sharply against a hard surface; a weakened electrode will break.

Drain the cooling system, disconnect the raw water pipes at the outlet side of the heat exchanger and remove the retaining cover every 1,000 hours and inspect the heat exchanger core. If a considerable amount of scale or deposits are present, clean the core as outlined in Section 5.5.

Item 7

Check the prime on the raw water pump; the engine should not be operated with a dry pump. Prime the raw water pump, if necessary, by removing the pipe plug provided in the pump inlet elbow and adding water.

Item 8

Keep the fuel tank filled to reduce condensation to a minimum. Select the proper grade of fuel in accordance with the "Fuel Oil Specifications" in Section 13.3. Open the drain at the bottom of the fuel tank every 500 hours or 15,000 miles to drain off any water or sediment.