BLOWER

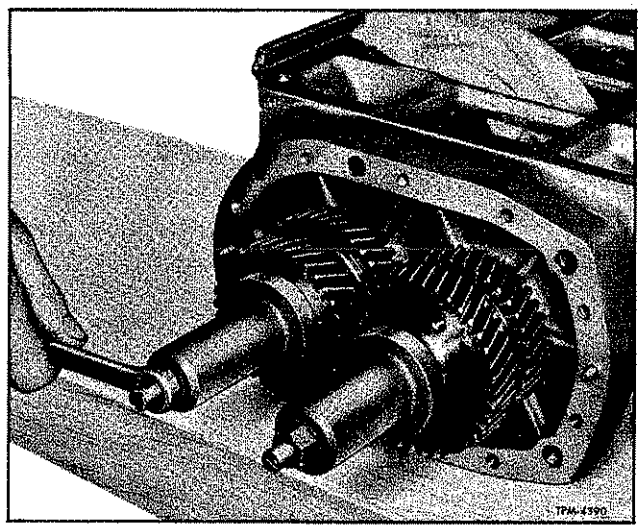


Figure 30—Installing Blower Reduction Gears (Reduced Speed Blowers)

COMPLETE THE ASSEMBLY

Install Reduction Gears

The following information is applicable only to reduced ratio blowers, shown in figure 3.

1. Position lower reduction gear on splined rotor shaft, making sure that wide serration on gear matches missing serration on shaft.

2. Use J-6270-7 installer and J-6270-8 screw to force lower reduction gear (fig. 30) solidly against inner drive gear.

3. Install double row ball bearing in upper reduction gear. Use J-6270-7 installer and J-6270-8 screw to force upper reduction gear bearing against upper drive gear.

Secure Gears

Secure gears in place by installing special locking washer and retaining washer with washer lugs engaging slots in gear hub and lock washer ears engaging washer and cap screws.

Install Fuel Pump Coupling

Install locking plate and fuel pump coupling disc on retaining bolt with tangs of disc engaging slot in gear hub and locking plate ear engaging slot in coupling disc. Tighten retaining bolt to recommended torque.

Install Drive Hub

Assemble plate to hub using special cap screw, lock washer and flat washer between plate and lock washer. Attach plate to gear using spacer between gear and plate also flat washer between plate and lock washer.

Install Water Pump Coupling

Insert splined end of water pump intermediate shaft and coupling into front end of lower rotor shaft and hold coupling tight against end of shaft while tightening Allen screw securely with $\frac{3}{16}$" wrench.

Install End Plate Covers

Install a new gasket to each blower end plate cover. Attach both end plate covers using cap screws and washers.

NOTE: Foreign matter inside the blower will ruin the unit. After blower has been assembled, temporarily attach the gasket and cover over the air openings of the blower housing to prevent foreign matter entering blower.

INSTALL ACCESSORIES

Time may be saved and operations simplified if the various accessories are assembled to blower before the unit is attached to engine.

1. Install a new gasket to bolting flange of the governor weight housing, and slip governor shaft straight into serrations at front end of blower upper rotor shaft. Secure finger tight only to front cover with lock washers and cap screws.

2. Install new gasket to water pump bolt flange, and with intake for pump pointing toward bottom of blower, slide water pump into position at front of blower lower rotor shaft, with driving lugs on pump shaft registering with driving lugs on rotor shaft. Lock securely to cover with lock washers and cap screws.

3. Using new gasket and lock washers with cap screws, attach blower drive shaft cover to blower rear cover at upper rotor shaft.

4. The fuel pump is driven by a "U"-coupling from the squared-end of the pump shaft. The pump cover is marked at the pump intake. The markings shown should always be set next to the cylinder block.

CAUTION: Be sure driving fork is fully on fuel pump shaft.

5. Install a new gasket to pump bolting flange. With pump drive coupling on pump shaft so that arms are directed away from pump, and intake and discharge openings at bottom and markings on pump cover toward cylinder block, attach pump to lower rear cover at lower rotor shaft, using lock washers