## FUEL INJECTORS

plunger by follower which bears against plunger spring. Follower is positioned in body by a follower stop pin. In addition to up and down motion, the plunger can be rotated, in operation, around its axis by gear, which is in mesh with control rack. The fuel is metered by an upper helix and lower helix which are machined into lower end of plunger. The relation of these helixes to the two ports changes with the rotation of the plunger. As plunger moves downward, fuel oil in high-pressure cylinder or bushing is first displaced through the ports back into supply chamber until lower edge of plunger closes the lower port. Remaining oil is then forced upward through center passage in plunger into recess be-

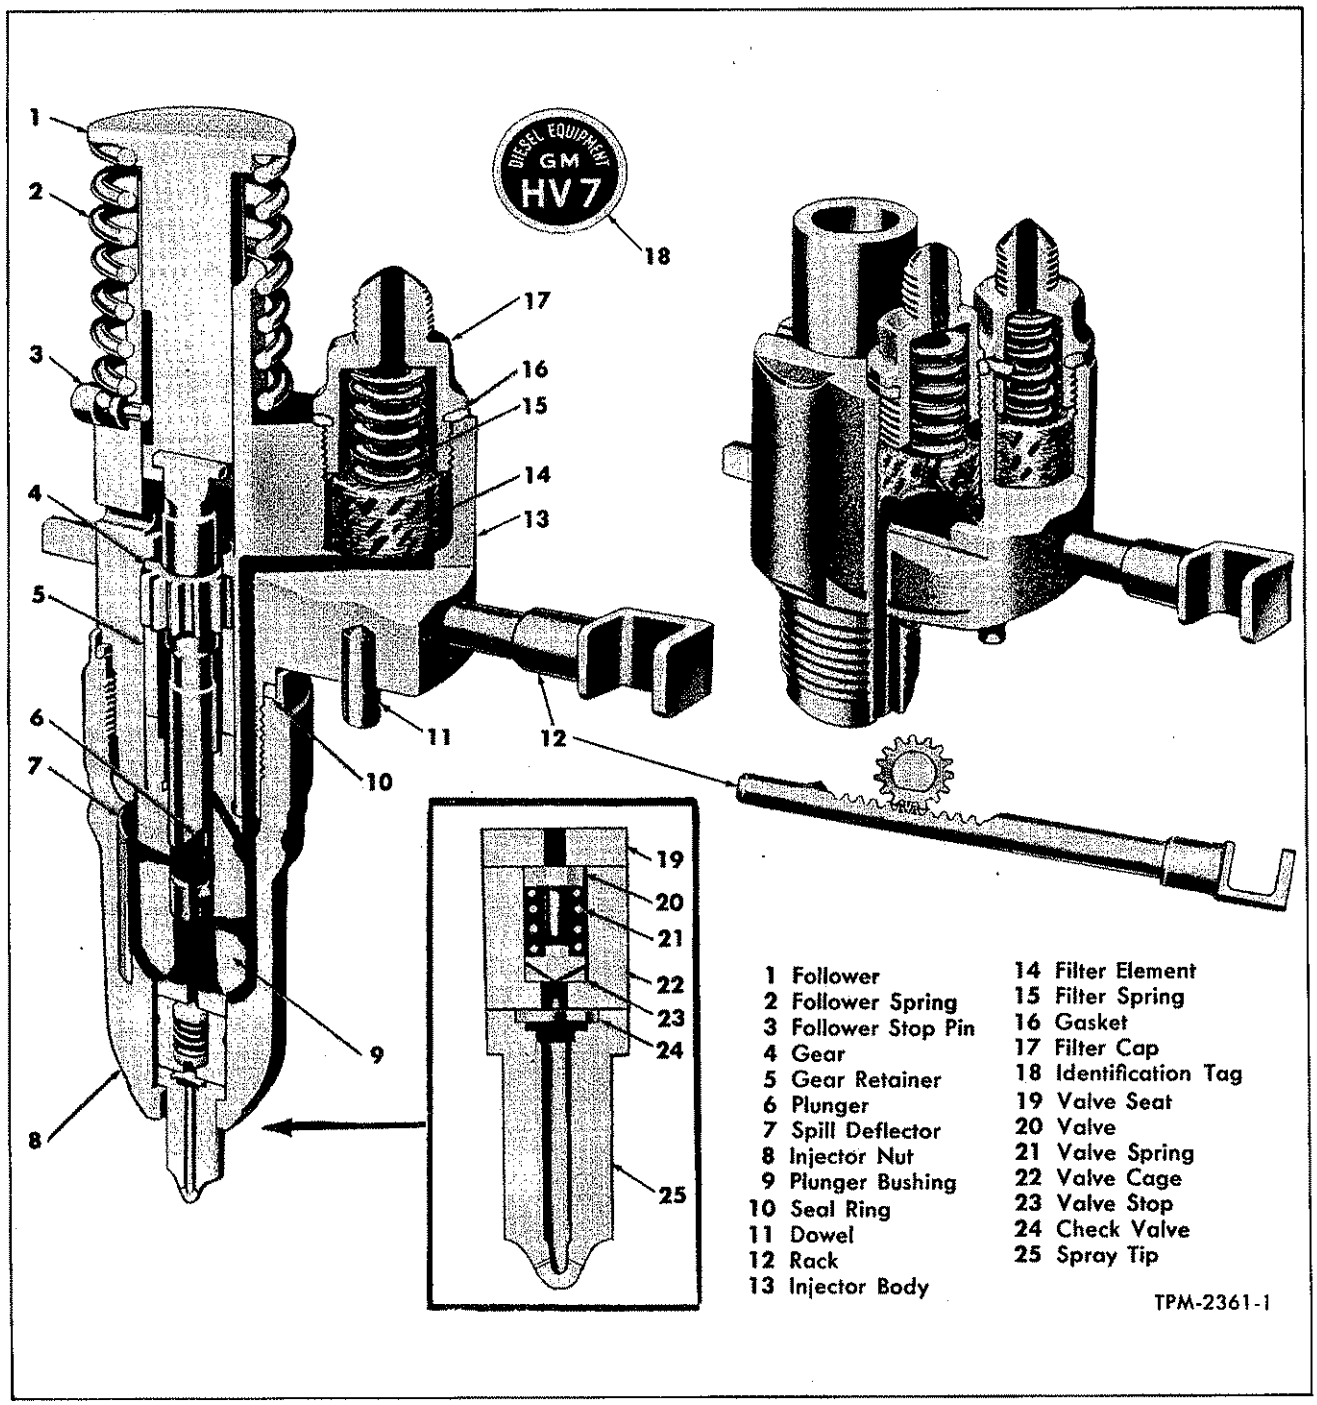



*Figure 5—Fuel Injector Assembly Shows Fuel Flow (in Red)*