FUEL OIL PUMP

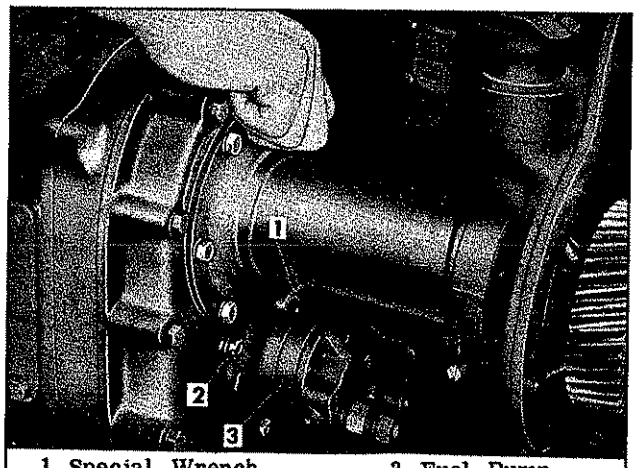


Figure 27—Fuel Pump Mounting and Use of Special Wrench

by hand to see if parts rotate freely. If pump is binding or sticking, it should be replaced.

INSTALLATION

The fuel oil pump is attached to the engine at the rear of the blower as follows:

1. Select the correct type pump for the engine on which it is to be installed. "A" and "B" model engines use a pump stamped "LH" on pump cover, while "C" and "D" model engines use a "RH" stamped pump.

2. Install pump drive coupling fork (arms out) on square outer end of pump rotor shaft and a new gasket on pump flange.

NOTE: Pump is installed with relief valve retainer screw toward cylinder block.

3. Set the pump assembly up against blower end plate cover so that lugs of coupling fork register with slots in coupling disc which is attached to end of lower blower rotor shaft. When lugs of fork are correctly engaged, pump will slide readily into place tight against the end plate cover.

4. Recheck to ascertain markings on pump cover, and relief valve as described above, are nearest the cylinder block; then attach pump securely to cover with capscrews.

5. Connect fuel inlet and outlet lines to pump.

DISASSEMBLY

Refer to figures 24 and 28, then proceed as follows:

1. Remove eight screws retaining cover to body. Tap cover lightly with soft hammer to loosen from dowels, then lift cover from body.

2. Remove idler gear and shaft from pump body. Do not remove gear from shaft unless either part is to be replaced.

NOTE: The drive shaft must not be pulled from seals in pump unless special tool is available for guiding drive shaft back into seals. If tool is not used to guide shaft through seals, end of shaft will

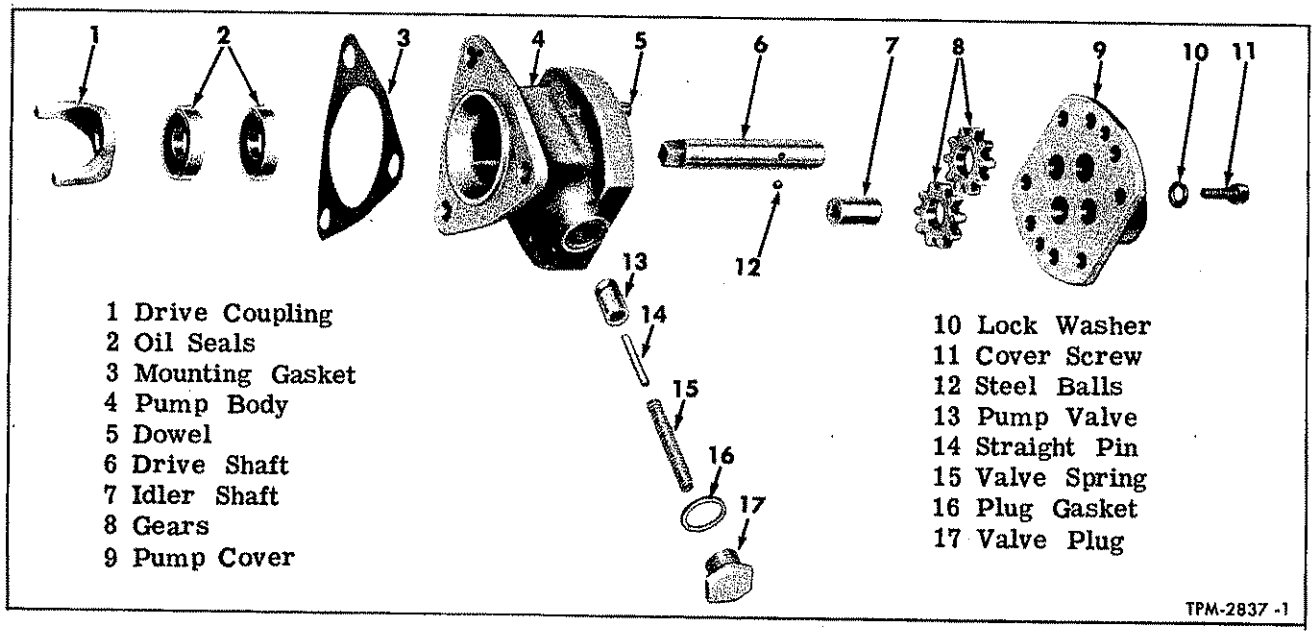


Figure 28—Fuel Oil Pump Details