OIL COOLER

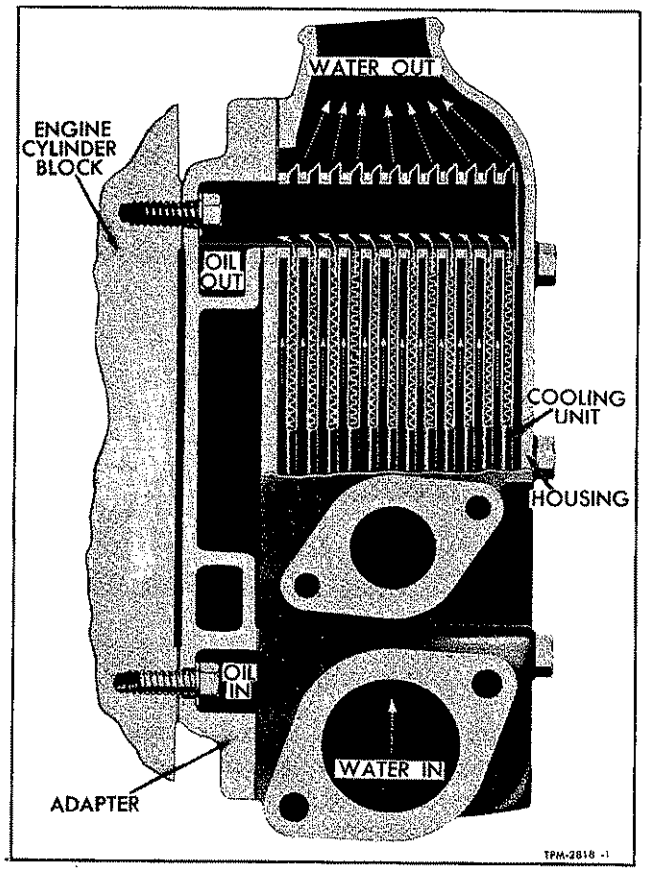


Figure 7—Oil Cooler Assembly

Should the cooler element become clogged, a by-pass valve located in the cooler adapter, by-passes oil around the cooler and directly to the oil gallery in the cylinder block. Refer to figure 8 for method of mounting cooler, filter, and strainer adapter, and by-pass valve for coach engines.

If occasion requires, the cooling unit may be removed from the cooler housing or the entire cooler assembly may be removed from the cylinder block. Since the element through which the oil passes, while being cooled, is surrounded by water inside a housing, the cooling element must be well sealed against water getting into the oil or oil getting into the cooling water. Therefore, special care must be taken at assembly to have the proper gaskets in place and the retaining cap screws tight.

CHECKING COOLER

A definite check for a clogged cooler may be accomplished on engines equipped with an oil strainer by attaching a pressure gauge to the oil strainer

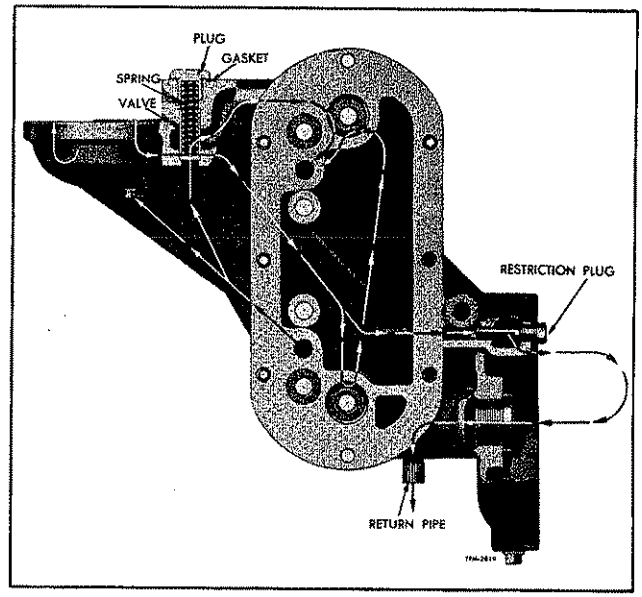


Figure 8—Oil Cooler, Filter, Strainer, ana By-Pass Valve Mounting Bracket

drain plug. This gauge will indicate the oil pump pressure. When this pressure is compared with the gallery pressure, the difference should not exceed 25 psi. A pressure drop in excess of 25 psi indicates either a clogged strainer or cooler, both of which should be removed and cleaned.

The same test with a gauge to check for pressure drop can be made on engines with full-flow lubricating system which do not have the oil strainer. A ¼" tapped hole with plug is provided in the side of oil cooler adapter for installation of gauge. On engines without oil strainer, and without the ¼" plug in adapter, gauge can be connected in cylinder block into passage from oil pump to cooler adapter. A tapped hole and ⅛" plug are provided for this purpose.

REMOVAL

COACH ENGINE

1. Drain cooling system and oil strainer.
2. Disconnect water connection from radiator at lower end of oil cooler.
3. Break hose clamp connections between the water pump and oil cooler.
4. Remove cap screws which attach oil cooler casting to combination adapter; then remove cover and cooler element as an assembly. Be careful when withdrawing assembly not to drop and damage cooling element.